


INSTALLATION INSTRUCTIONS

1

Measure the distance between the bottom of the mirror and point a.

CENTERLINE

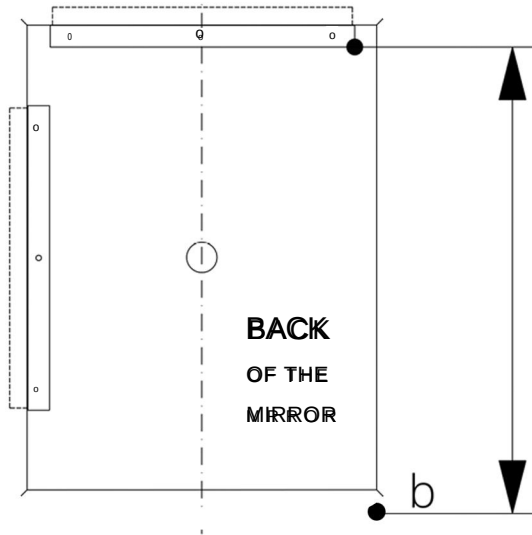

BACK
OF THE
MIRROR


b

WARNING:

Mounting bracket
must be attached to
furring strip/channel
or wall stud.

2

Draw a horizontal line from the point a using a level.

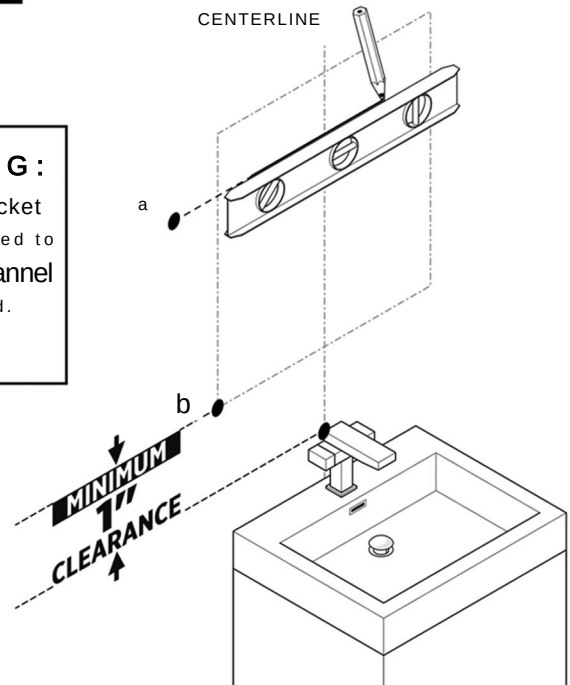


*HORIZONTAL & VERTICAL MOUNT OPTION AVAILABLE.


3

Attach the mounting bracket to the wall.

Accessories




CENTERLINE

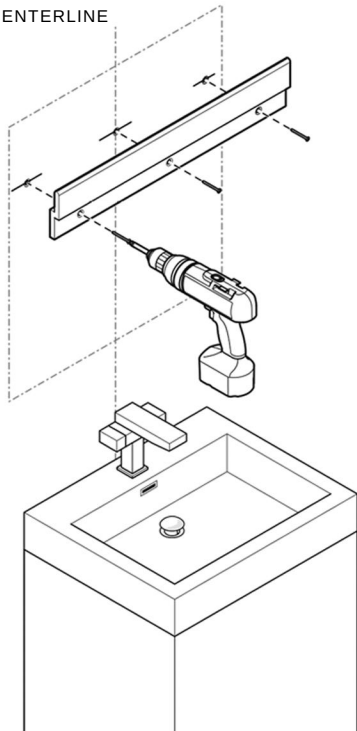

4

Hang the mirror on the mounting bracket.

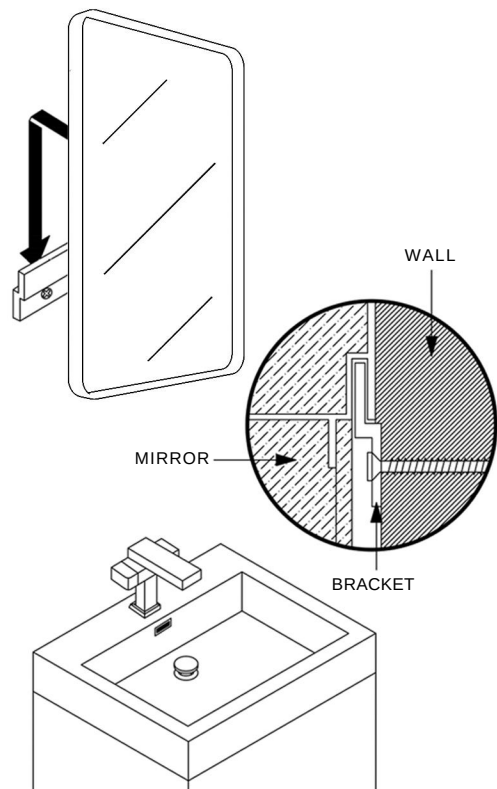

Customer Service



info@waterpar.com



+1 (909) 929-2220