


PREFERRED INSTALLATION METHOD USING PUNCH & PRESS™ MOUNTING BRACKET

SET INCLUDES:

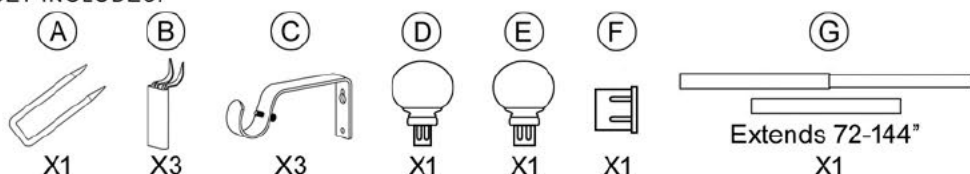

Note: Finial (D w/ smaller post) fits to the smaller diam. rod - Finial (E w/ larger post) fits to the larger diam. rod. Adaptor (F) is used with finial (D) to fit to second larger diam. rod.


YOU WILL NEED:




**FOR DRYWALL ONLY
NO DRILL NEEDED**

1" DRAPERY ROD INSTALLATION INSTRUCTIONS - 72-144" ROD SET


Care Instructions: Clean with a soft cloth. Do not use abrasive cleaning agents, solvents or polishes.

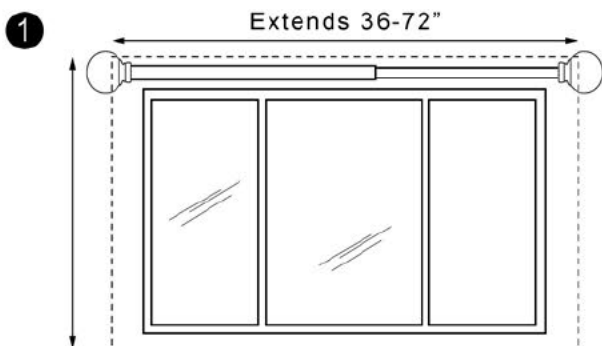


Before installation, measure windows to determine appropriate drapery rod length.

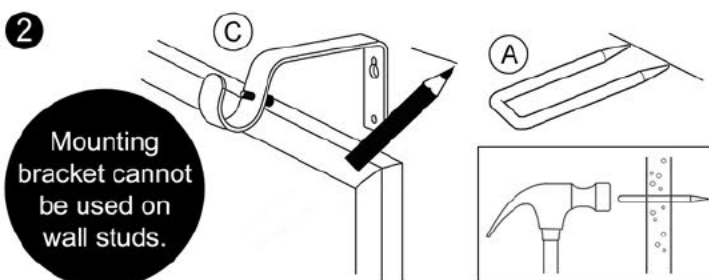


Use bracket (C) as a guide to mark location for mounting bracket (B). Use hammer to tap pilot hole tool (A) into wall. If you feel that the tool has contacted a stud, gently remove tool from the wall using pliers or a screwdriver if needed.

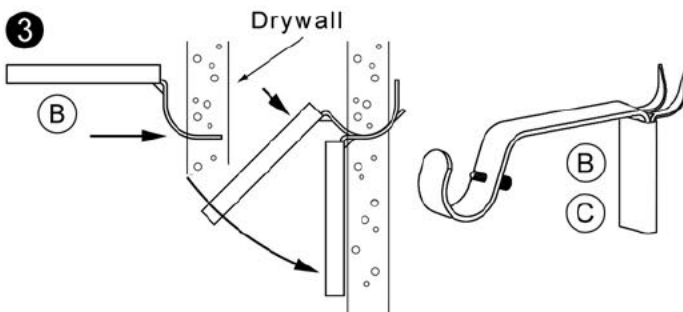

Insert prongs of mounting bracket (B) into pilot holes. Press into wall until it is flush. Add rod bracket (C).

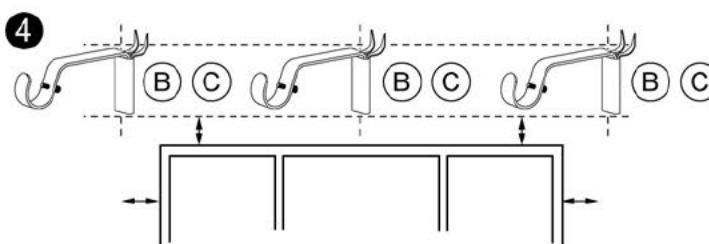


Repeat steps 2-3 for additional bracket(s). It is recommended to use a center bracket for expansions over 48". Use level if necessary. Note: Center bracket location may fall on a stud - for installing into studs, see other side.

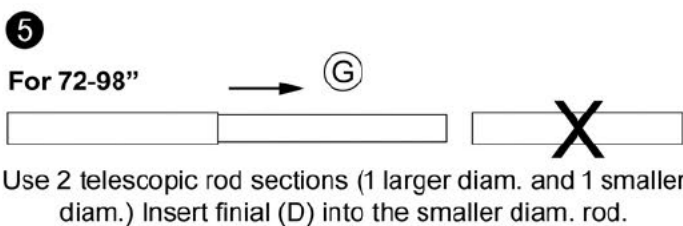


For 72-98"

Use 2 telescopic rod sections (1 larger diam. and 1 smaller diam.) Insert finial (D) into the smaller diam. rod.

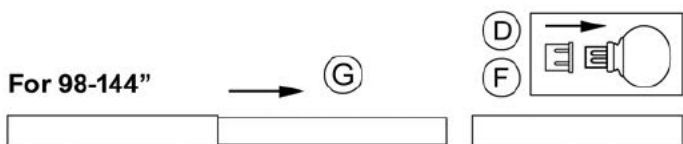

For 98-144"

Use 3 telescopic rod sections. Extend the smaller diam. rod that is nestled in the larger diam. rod. Then insert the smaller diam. into the second larger diam. rod section. Attach adaptor (F) to finial (D) and insert into either of the larger diam. rods.

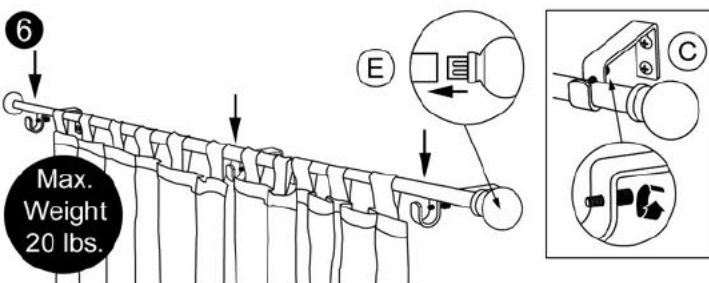

Place drapery panels (not included) onto drapery rod and extend to desired length. Hang rod on brackets. Insert finial (E) into the end of the rod and tighten the set screws on the brackets (C).