



After opening the packaging, you can first distinguish according to the accessory list and then install according to the steps

A
c
c
e
s
s
o
r
i
e
s

L
i
s
t

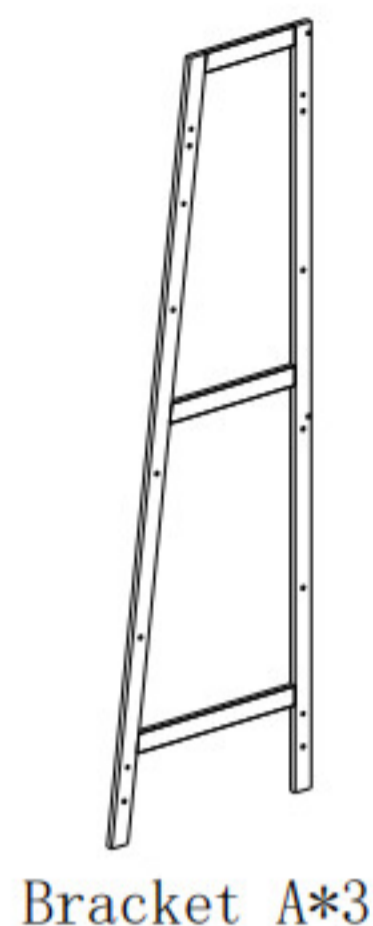

Bracket A*3

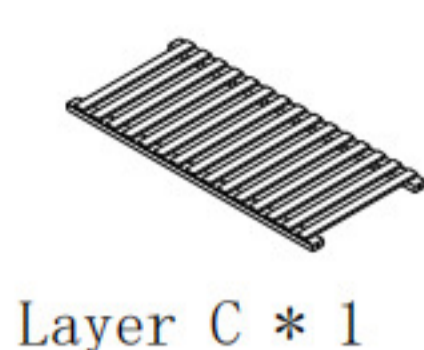

Layer C * 1



Layer board D * 1



Horizontal bar * 2



Round rod * 1



Hook * 2



Screw



Layer board G * 1



Layer board H * 1



Layer board J * 1




Layer board K * 1



Layer board M * 1


The width of laminated board G/laminated board H/laminated board J/laminated board K/laminated board M is different, one piece is larger than the other

1

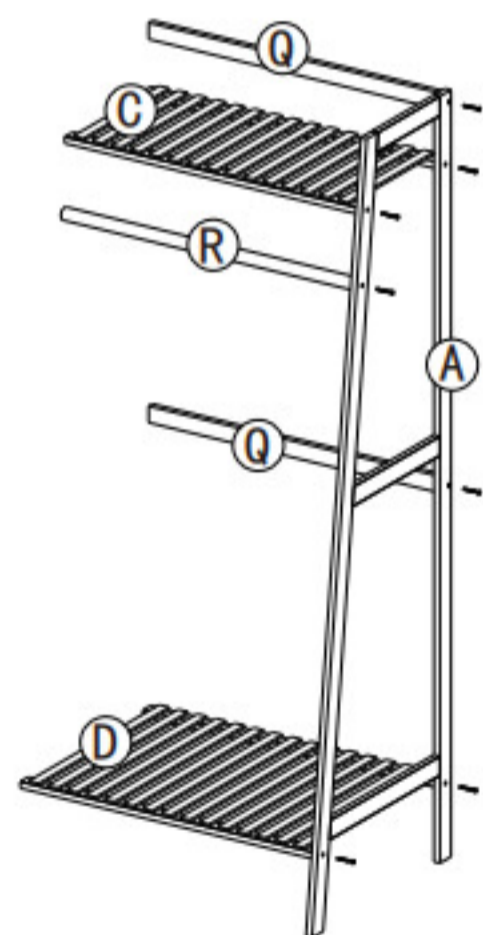


Use screws to install the laminated board D/laminated board C/round rod R and stopper Q on bracket A

2

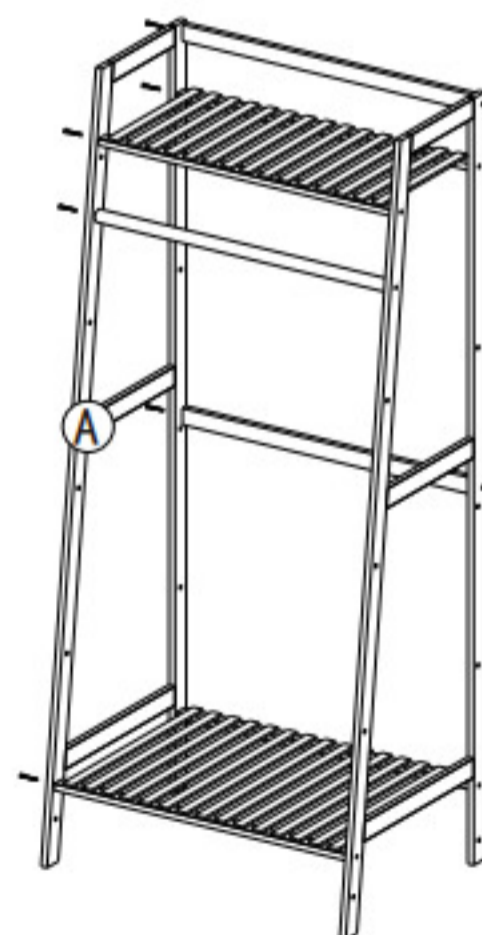


Install bracket A with screws

3

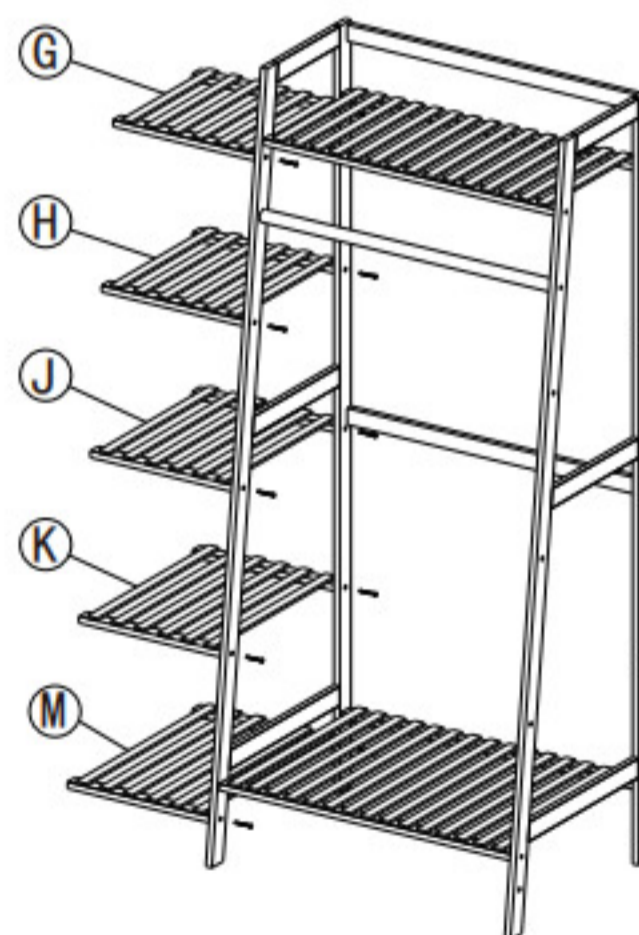

Install the laminated board G/H/J/K/M onto bracket A with screws

4

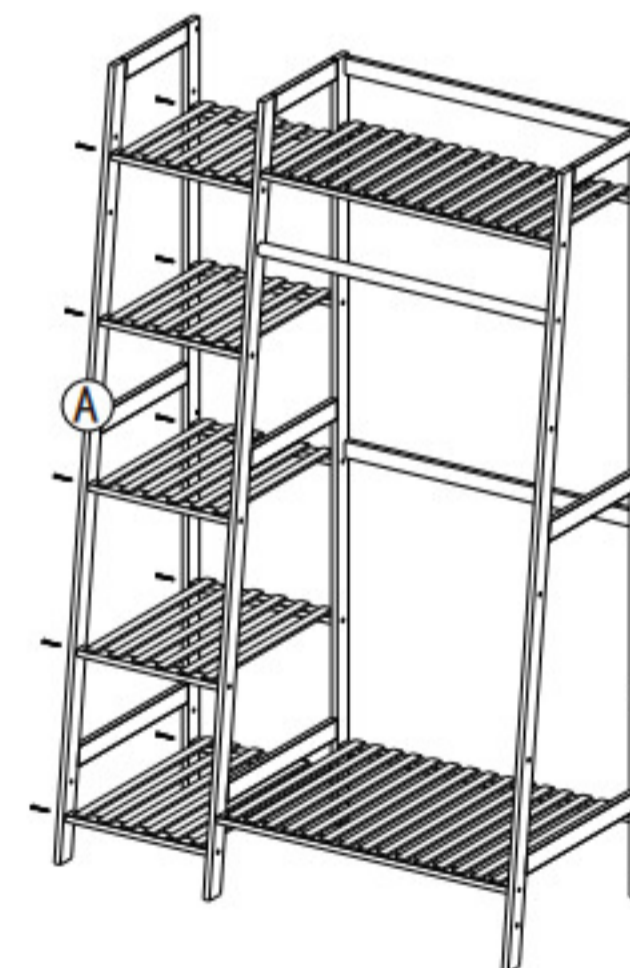

Install bracket A with screws

5



Install hook N onto the bracket with screws to complete the installation

i
n
s
t
a
l
l
a
t
i
o
n

d
i
a
g
r
a
m