



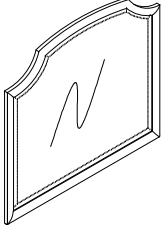

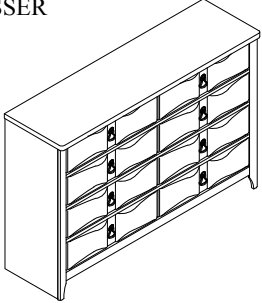


ASSEMBLY INSTRUCTIONS

DESCRIPTION : MIRROR / DRESSER

			STEP 1 : ATTACH MIRROR SUPPORT (C) TO THE DRESSER BACK (B) AS STEP 1, THEN TIGHTEN WITH JCBC (D), Spring Washer (E) & FLAT WASHER (F) BY USING L KEY (G).	
NO	PARTS & HARDWARE	QTY.		
A	MIRROR 	1PC		
B	DRESSER 	1PC		
C	MIRROR SUPPORT 	2PCS		
D	JCBC M6 x 35mm 	8PCS		
E	SPRING WASHER 1/4"mm 	8PCS		
F	FLAT WASHER 1/4" x 20mm 	8PCS		
G	L KEY M4 	1PC		

STEP 2 : PLACE THE MIRROR (A) ON THE TOP OF DRESSER (B). THEN ALIGN CENTER. AS SHOWN AND TIGHTEN WITH JCBC (D), SPRING WASHER (E) & FLAT WASHER (F) BY USING L KEY (G). MAKE SURE MARKING LINE OF SUPPORT MUST SAME LEVEL AS BOTTOM OF MIRROR BASE.

ETAPE : 2

ETAPE : 1

COMPLETED!