


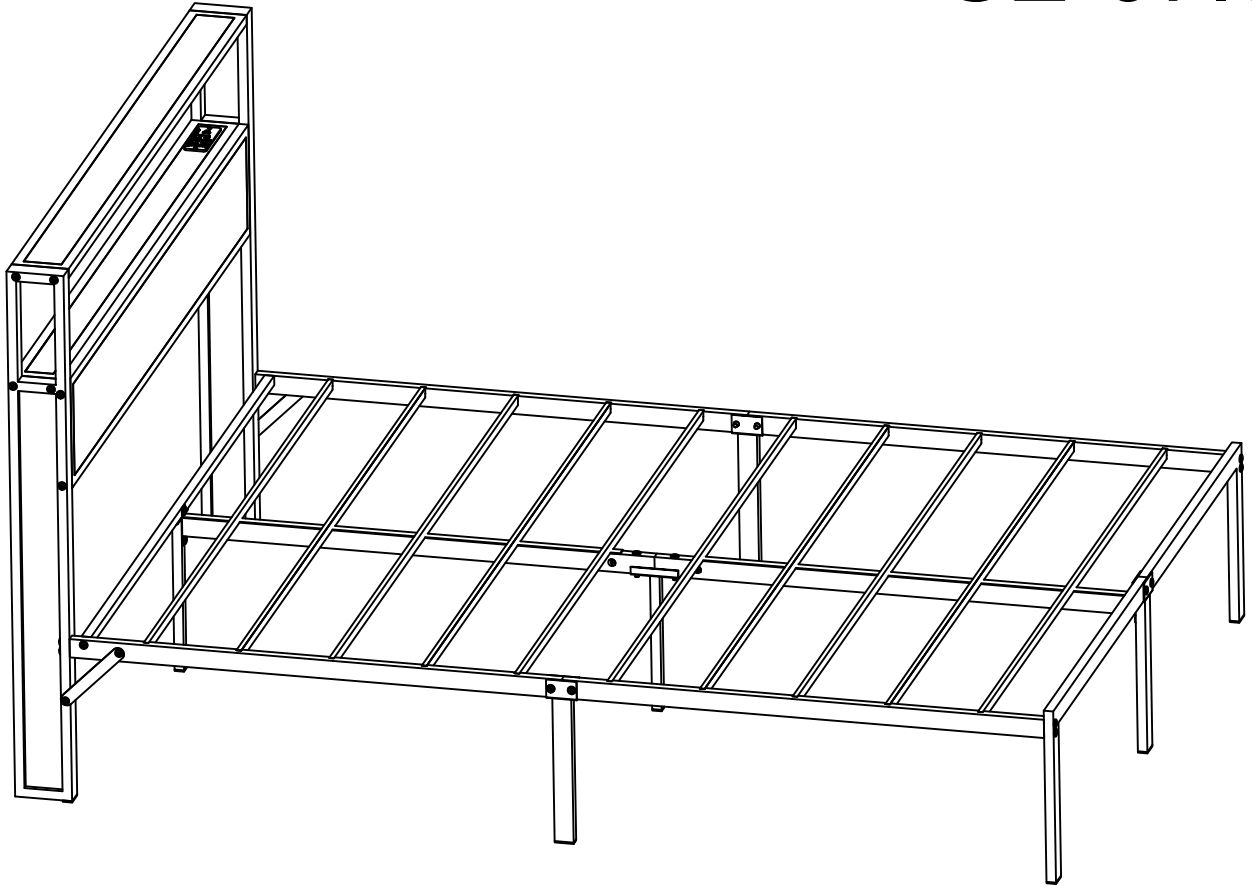


Model: T3963P483958

---

Please Scan the QR code to watch the tutorial video






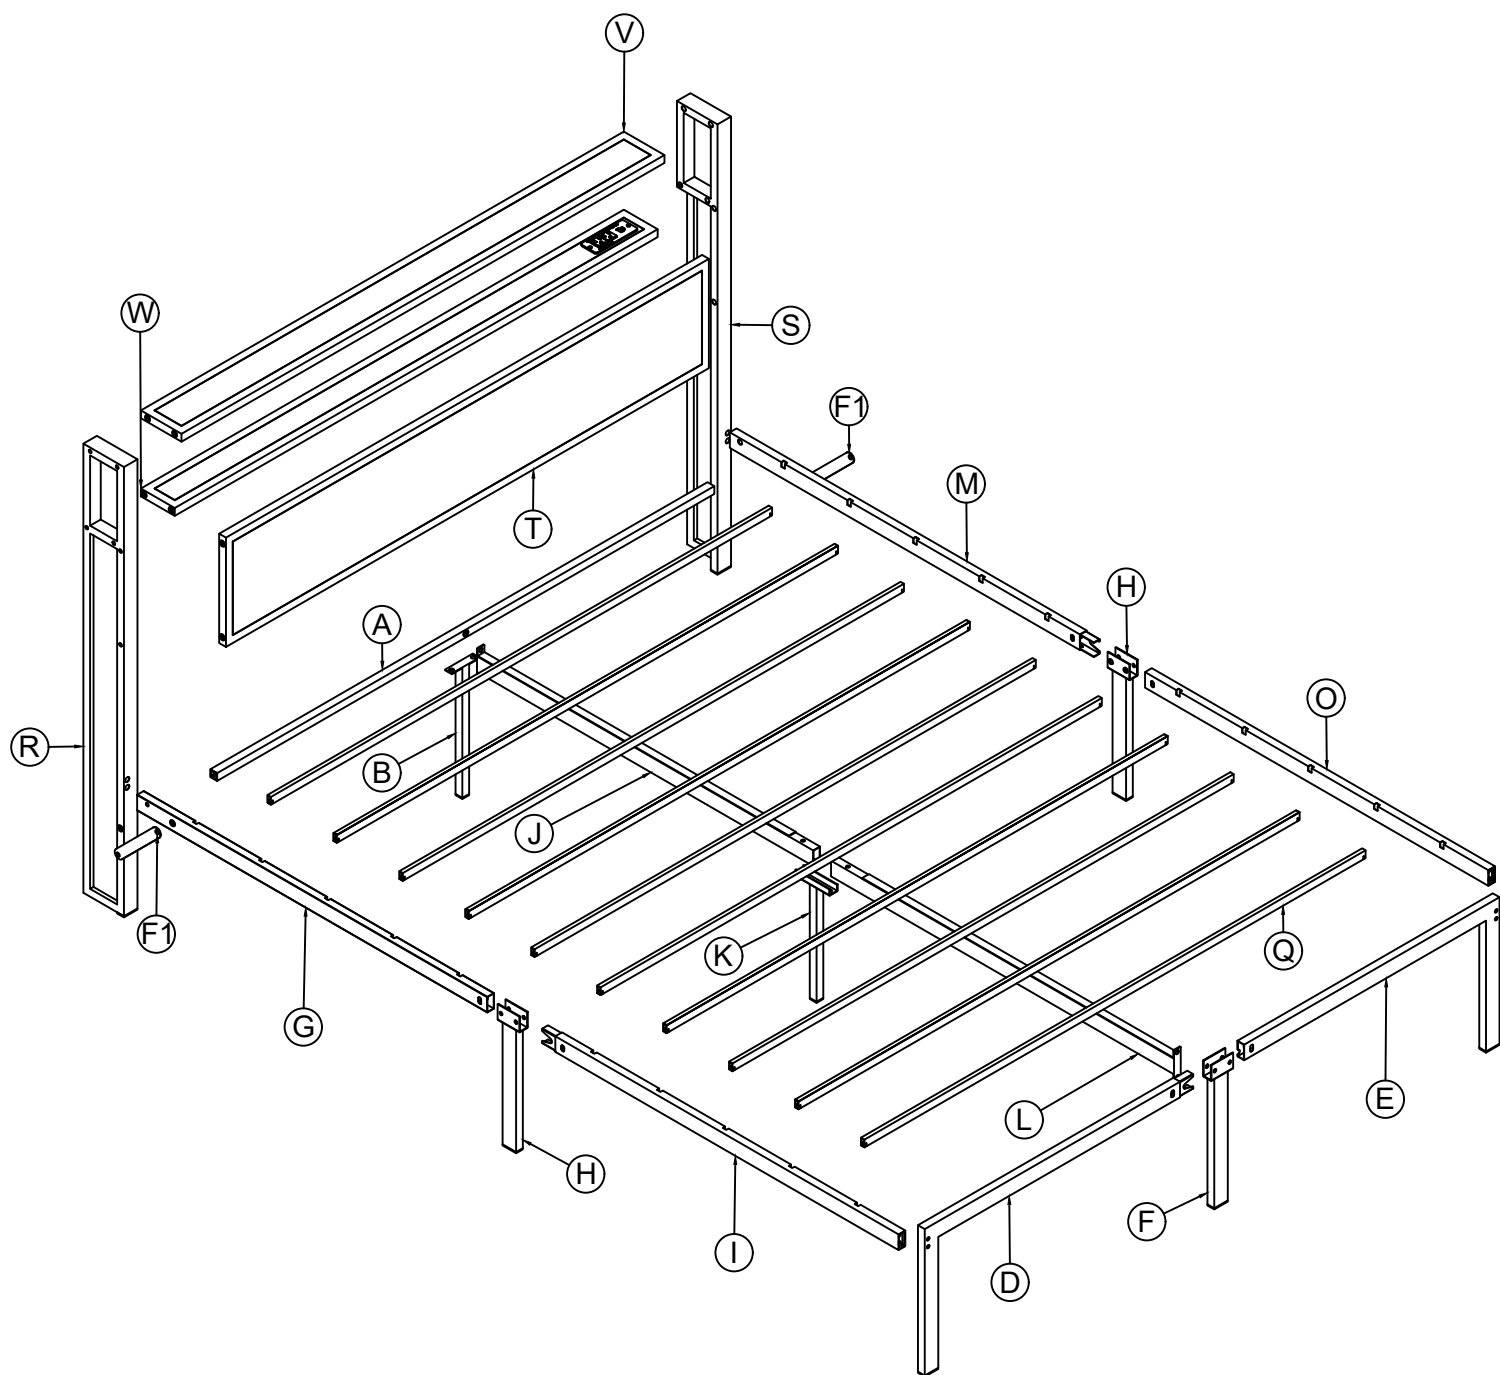


# Parts List:




Ⓐ  
1pcs




Ⓑ  
1pcs

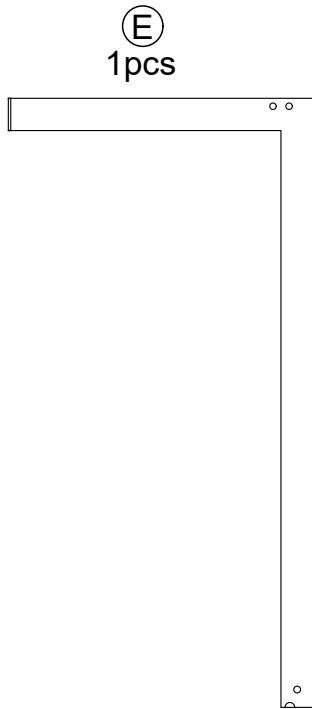


Ⓔ  
1pcs



Ⓕ  
1pcs

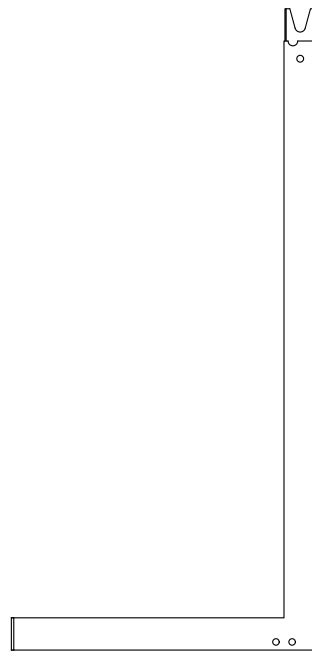


Ⓖ  
1pcs



Ⓖ  
1pcs



Ⓘ  
1pcs



Ⓜ  
1pcs




ⓓ  
2pcs




Ⓞ  
1pcs



Ⓙ  
1pcs



Ⓚ  
1pcs





Ⓛ  
1pcs


EVA

EVA


# Parts List:

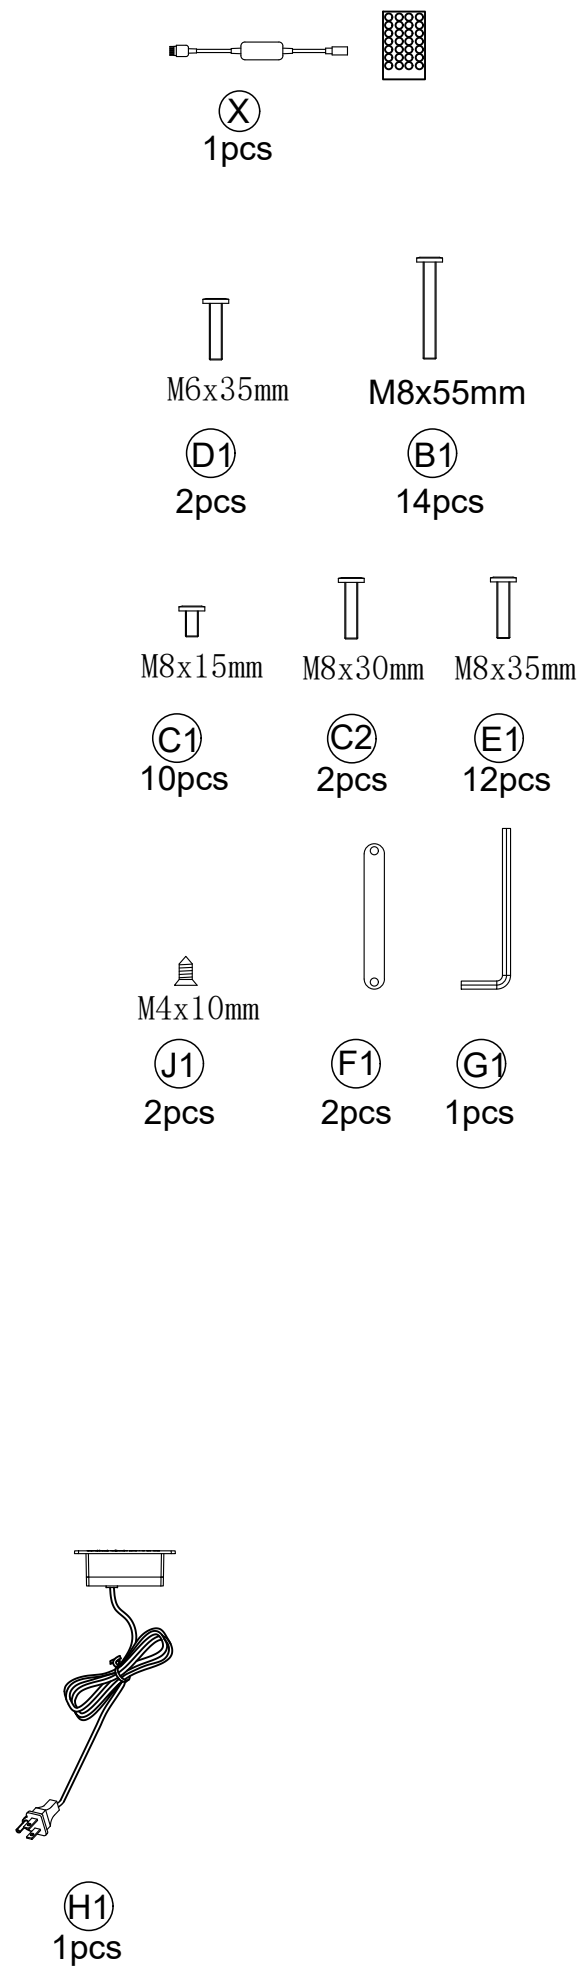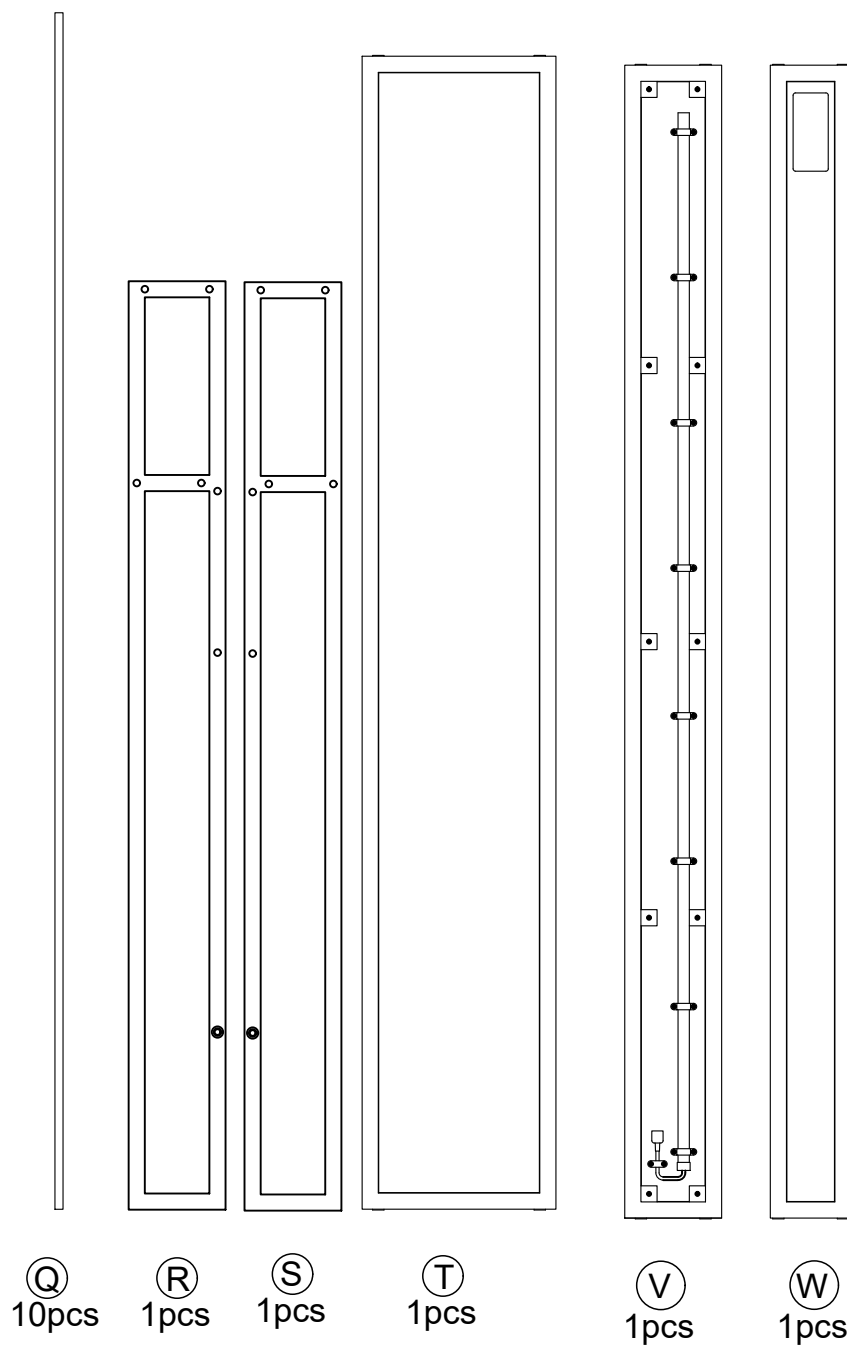


## STEP 1

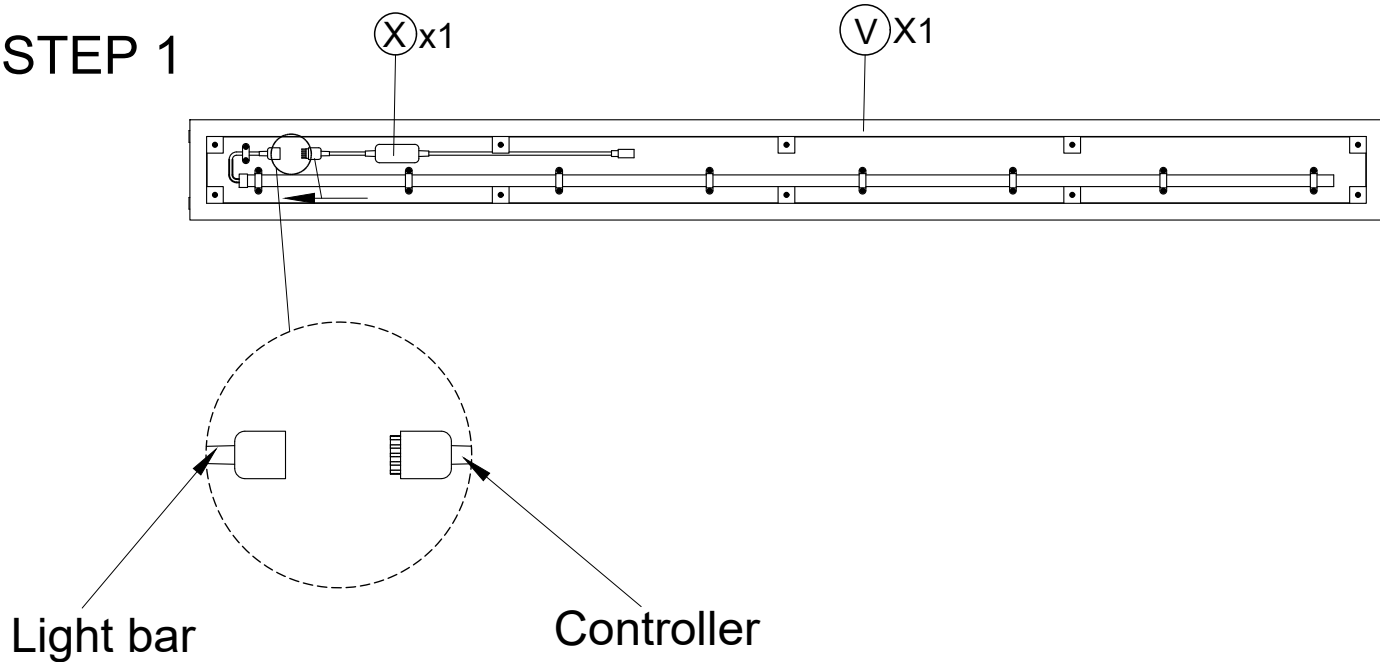

## STEP 2

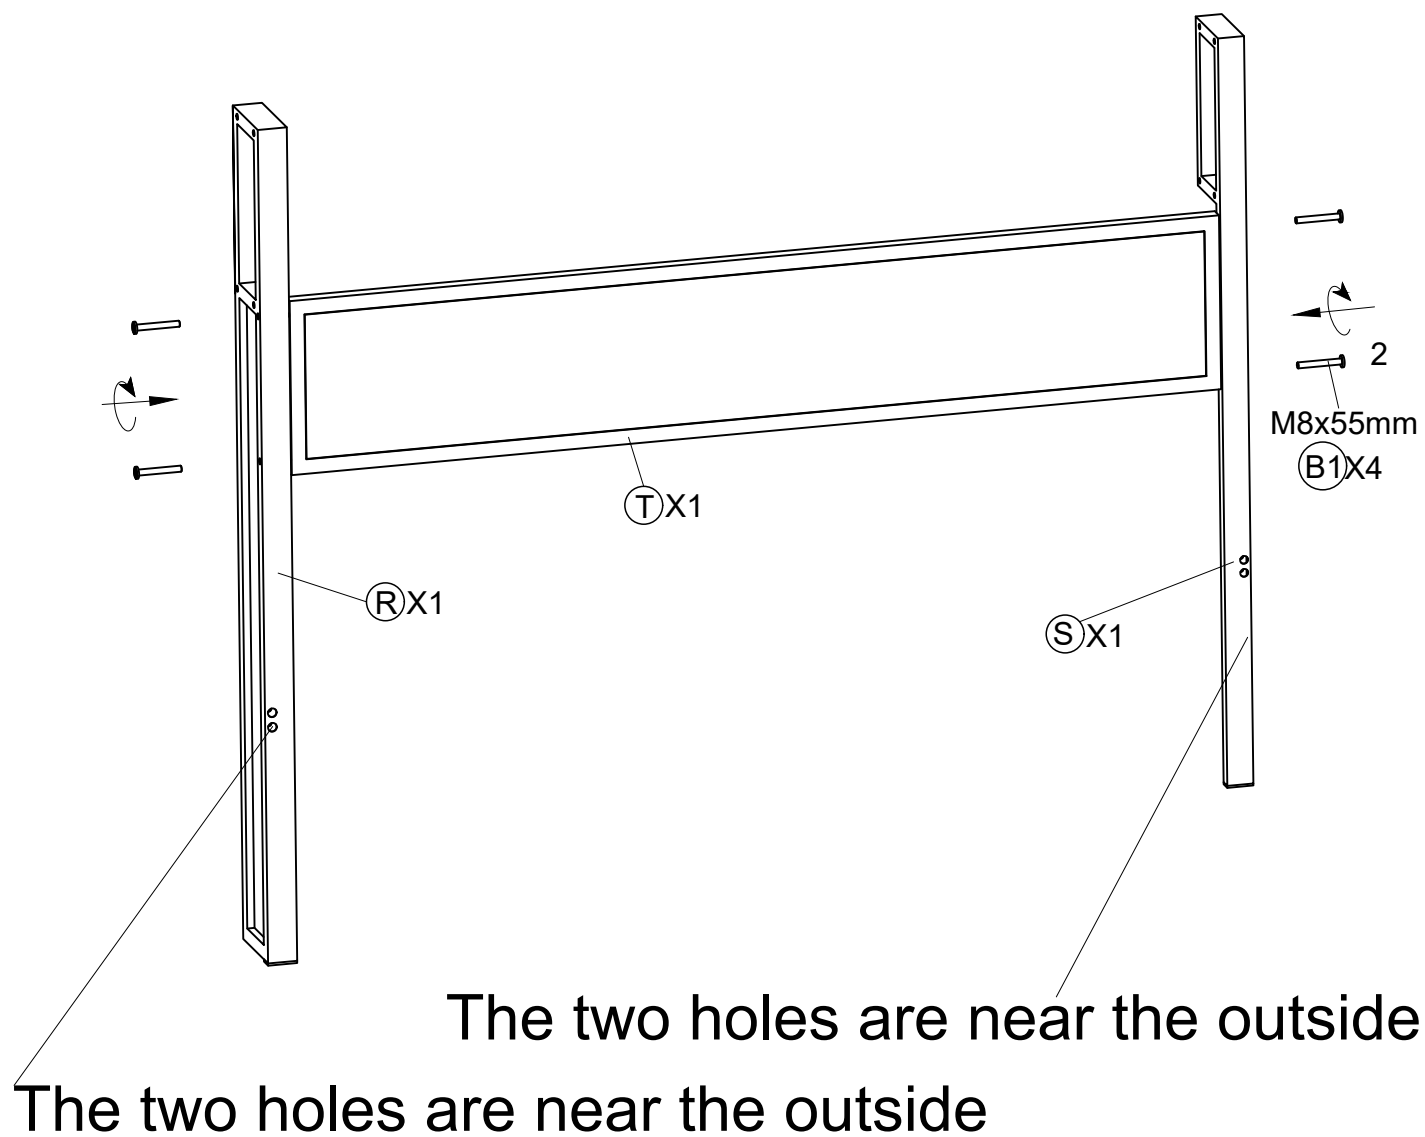


## STEP3

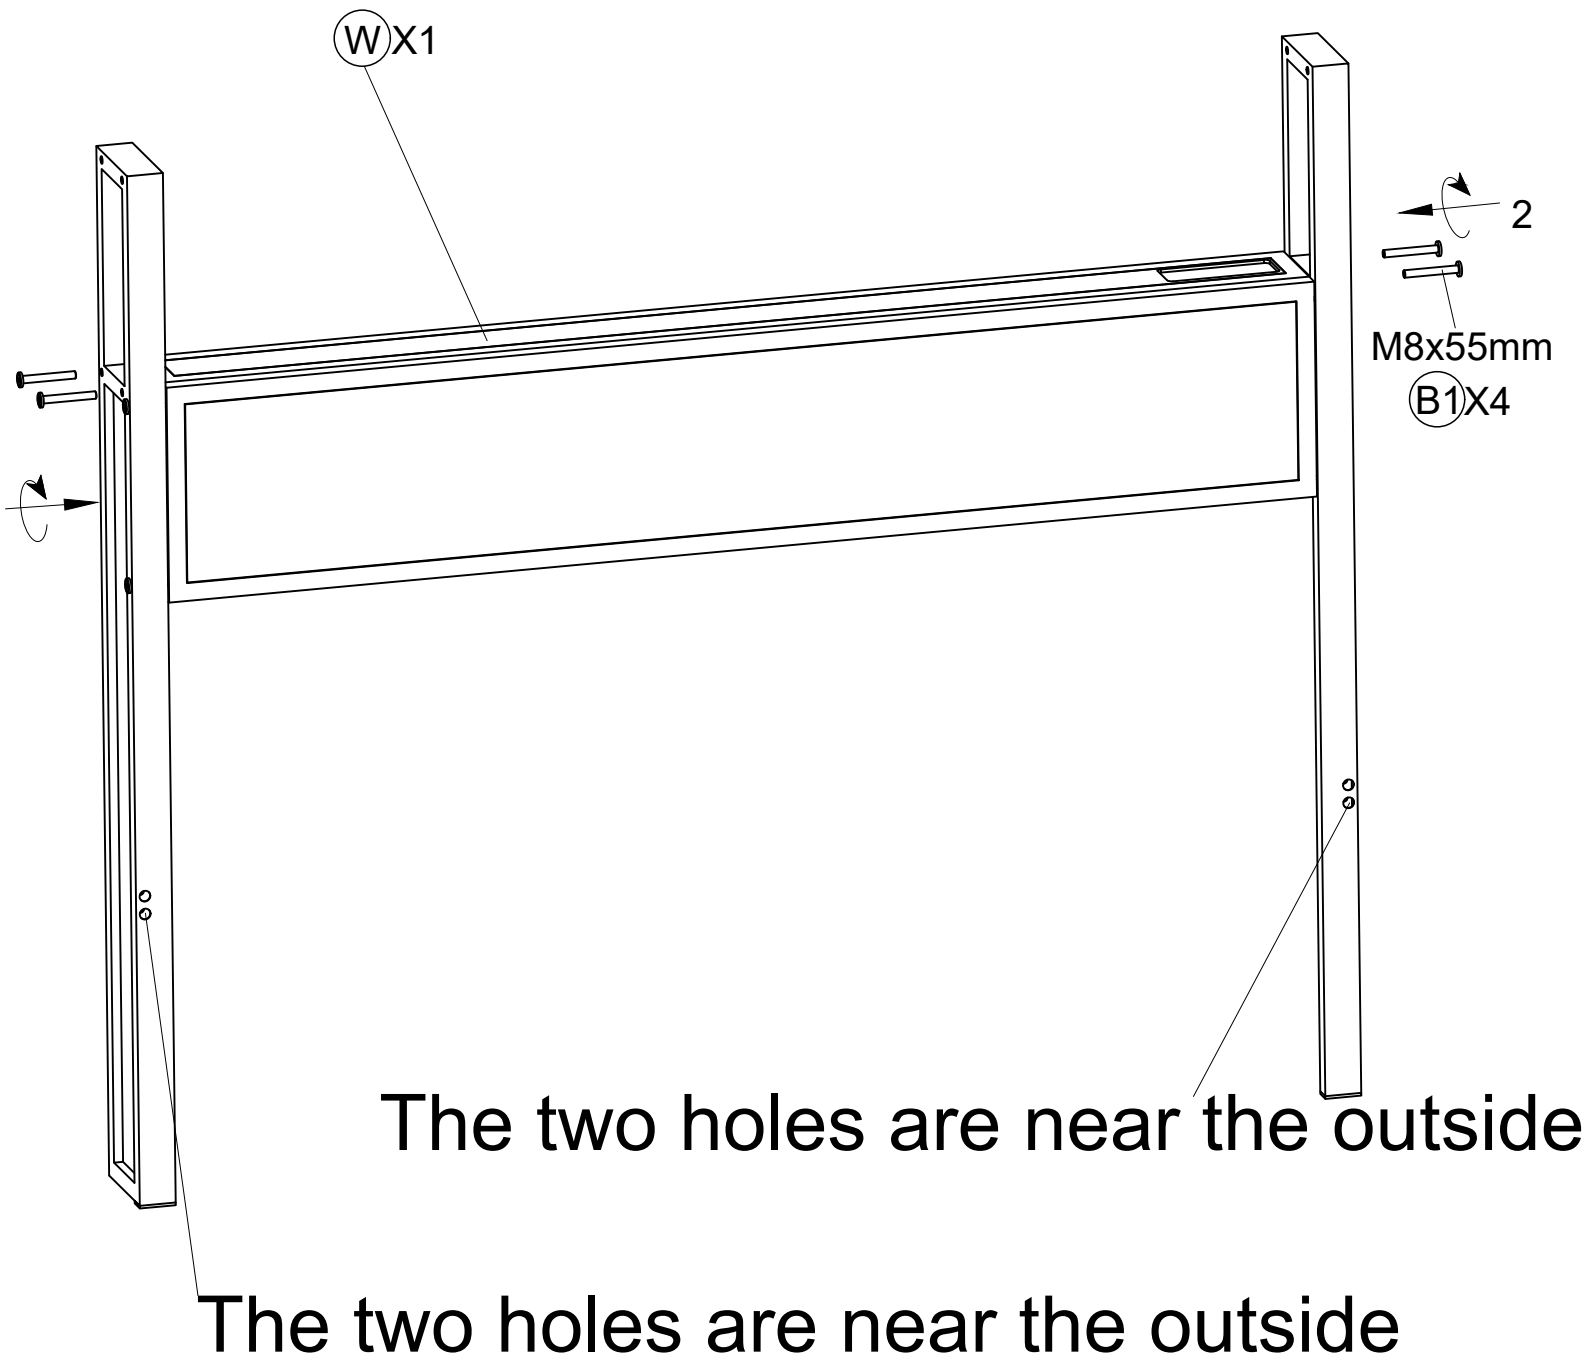

## STEP 4


We suggest using drill machine to install "J1" screws

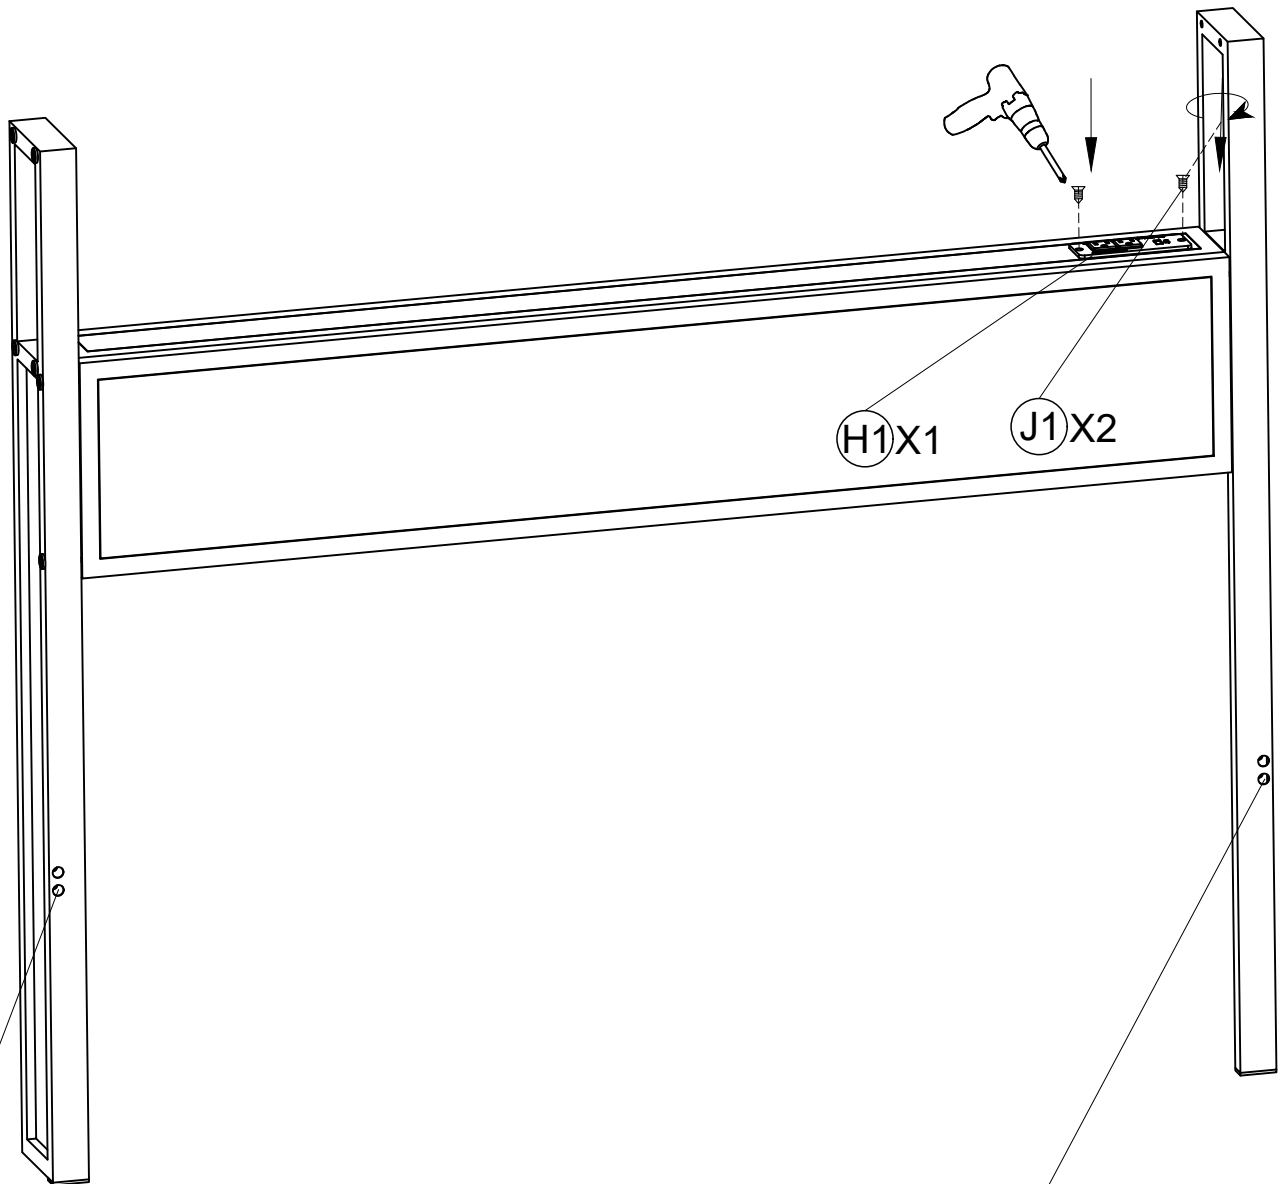


The two holes are near the outside

The two holes are near the outside


## STEP 5

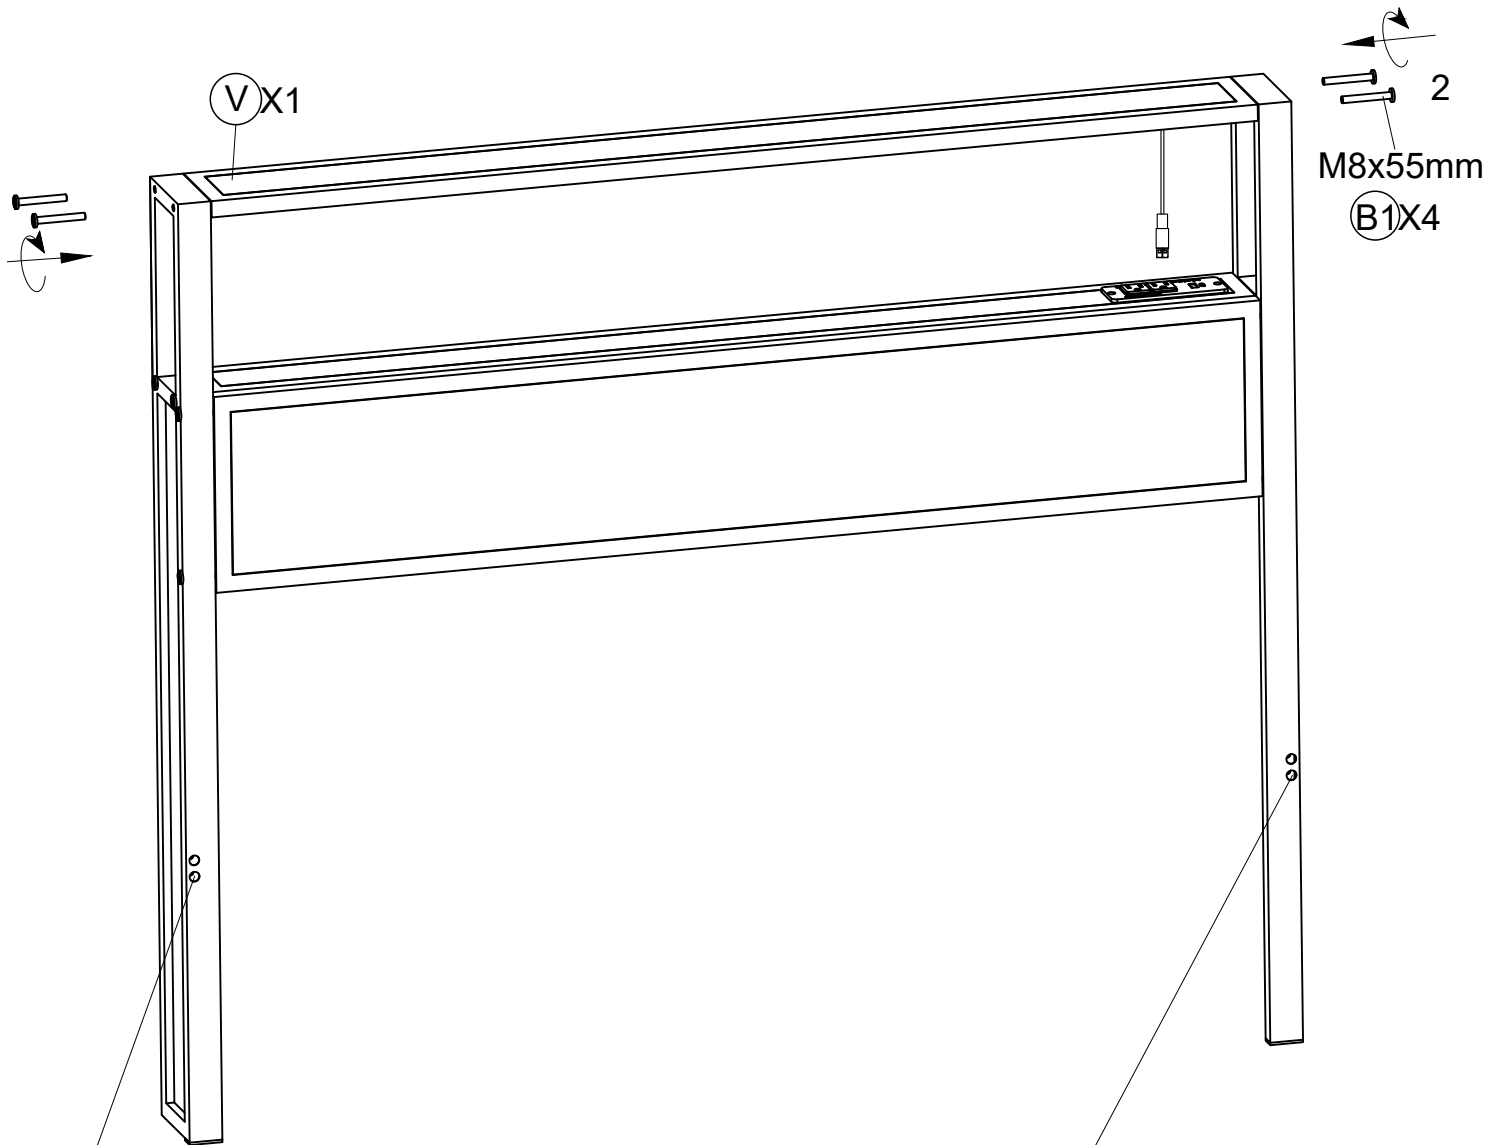


STEP 6

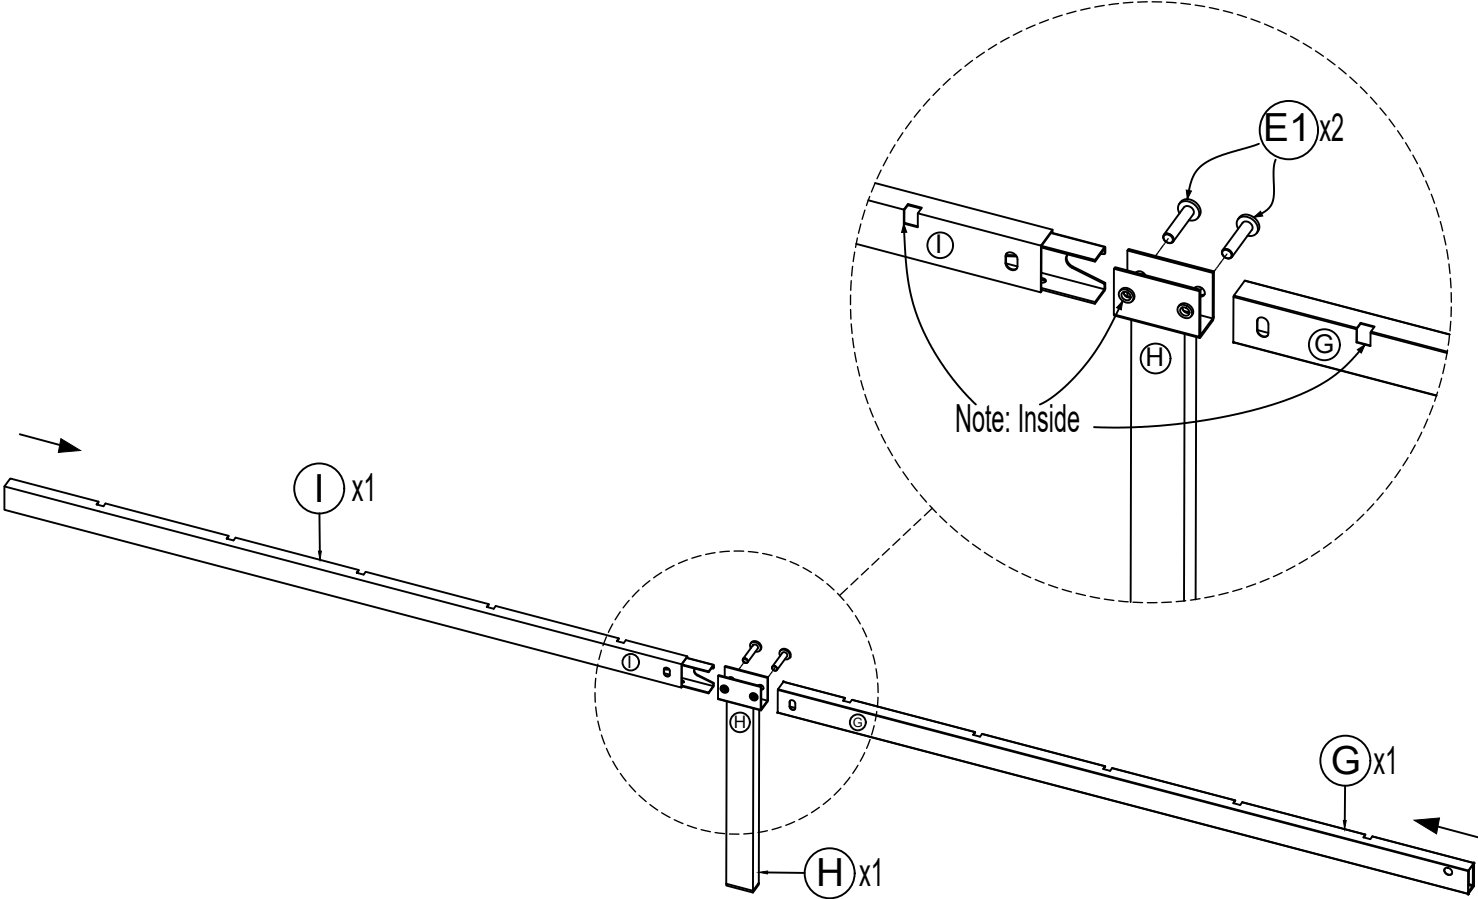


STEP 7

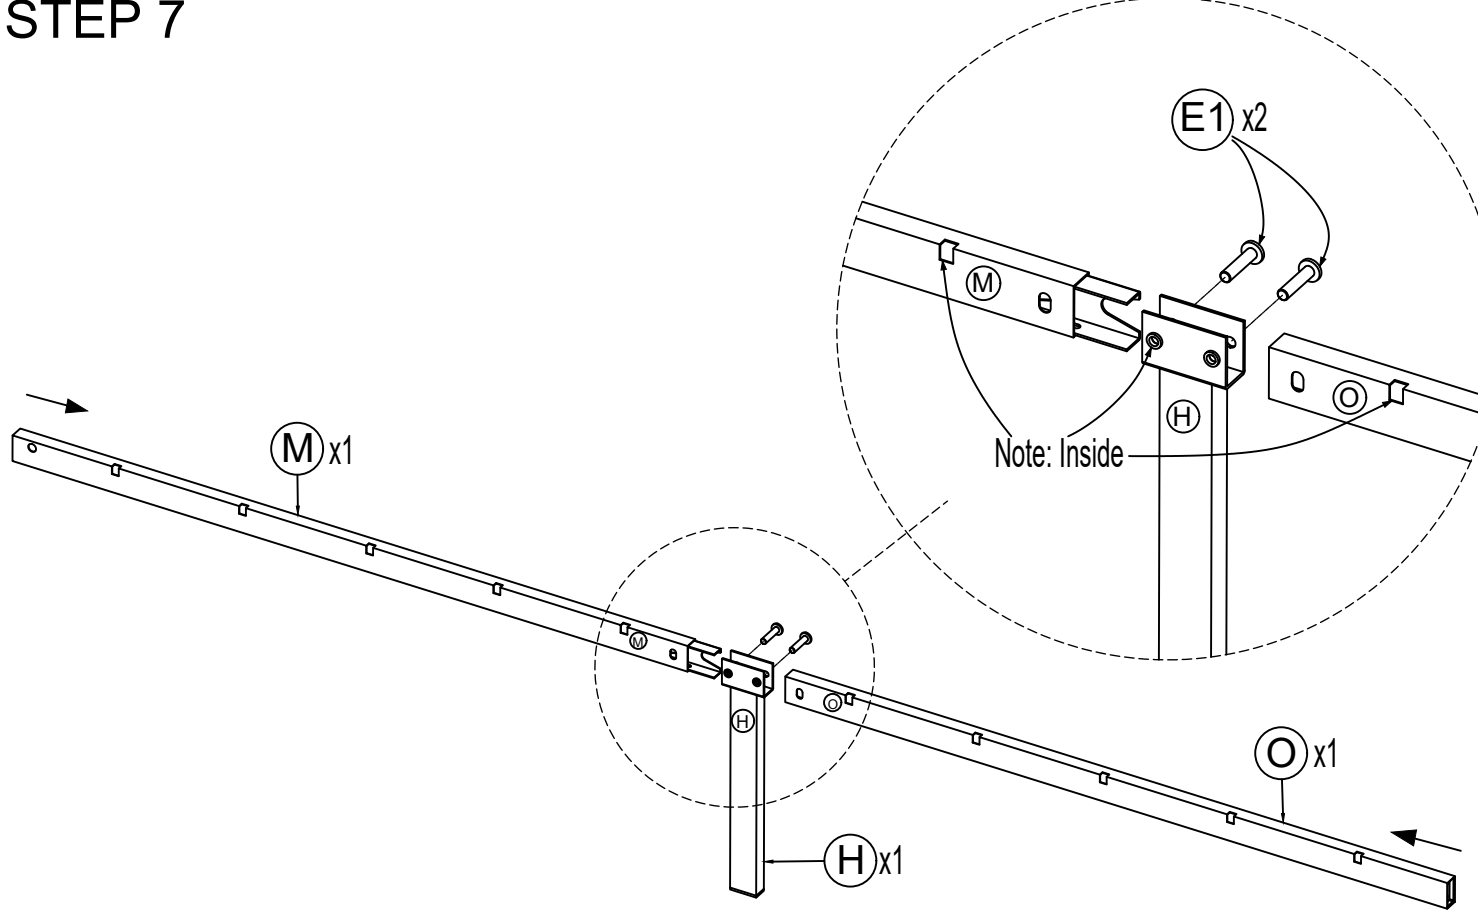


## STEP 8

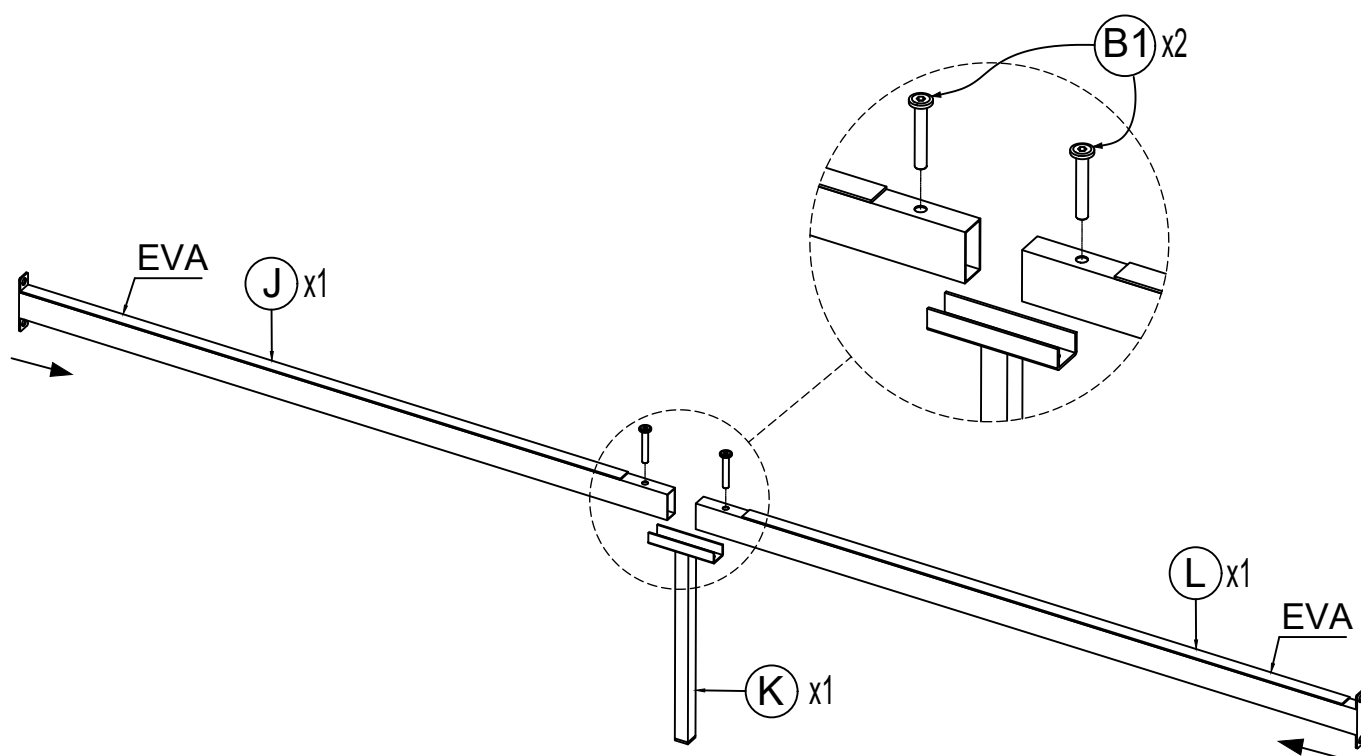


## STEP 9

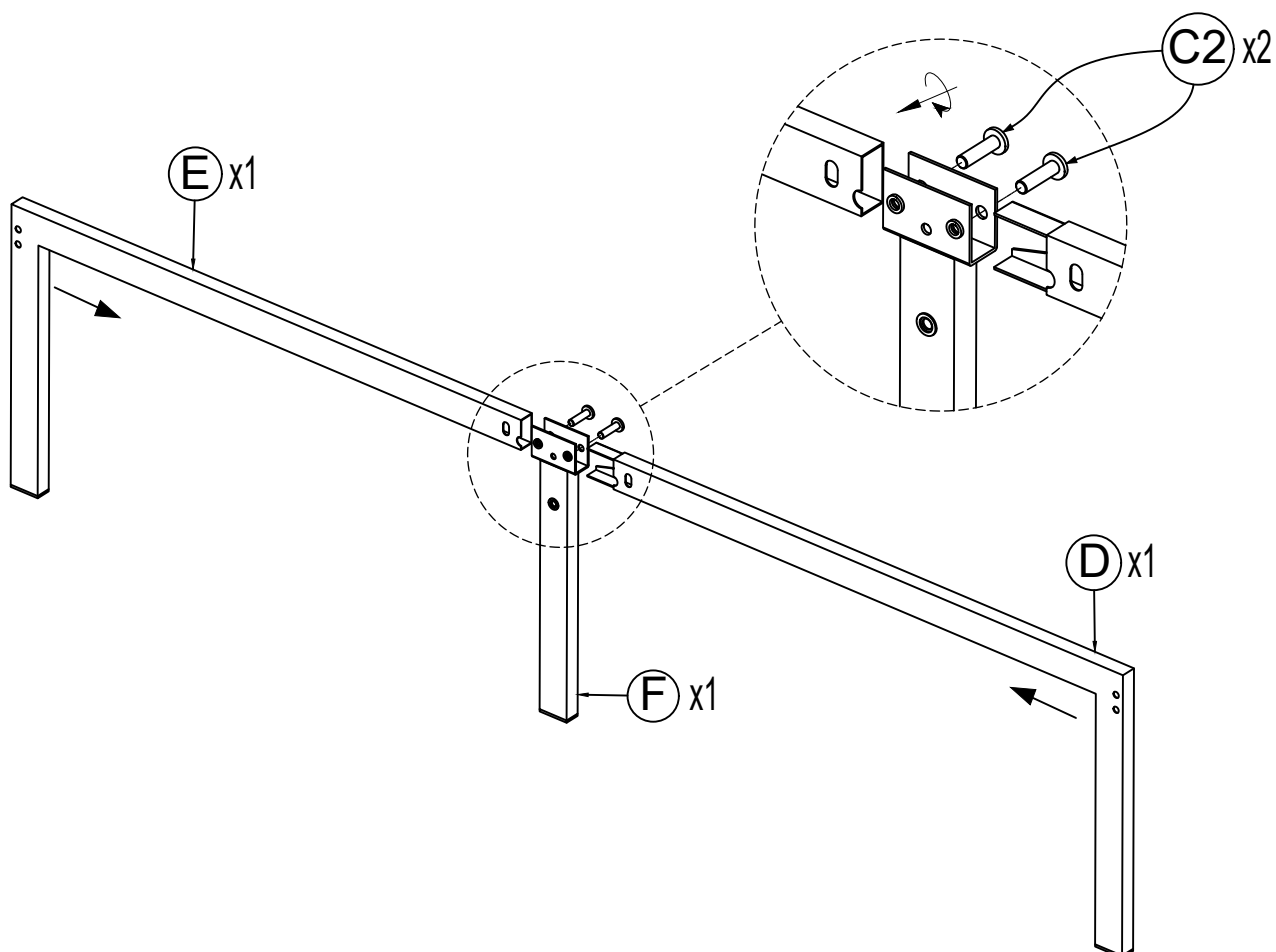


## STEP 10

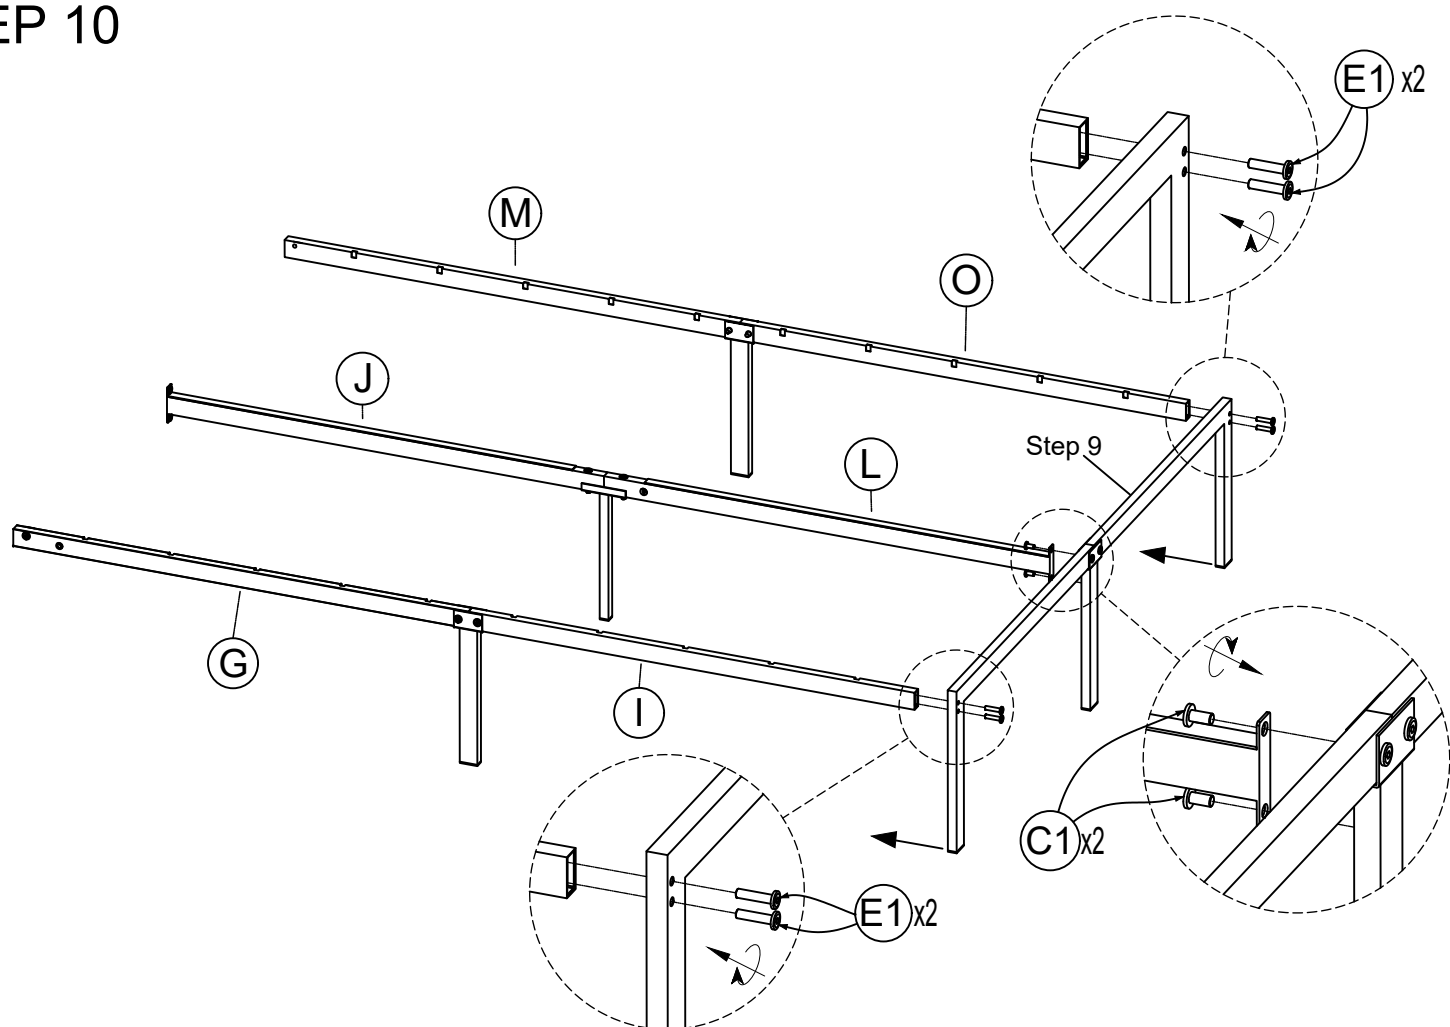


## STEP 11

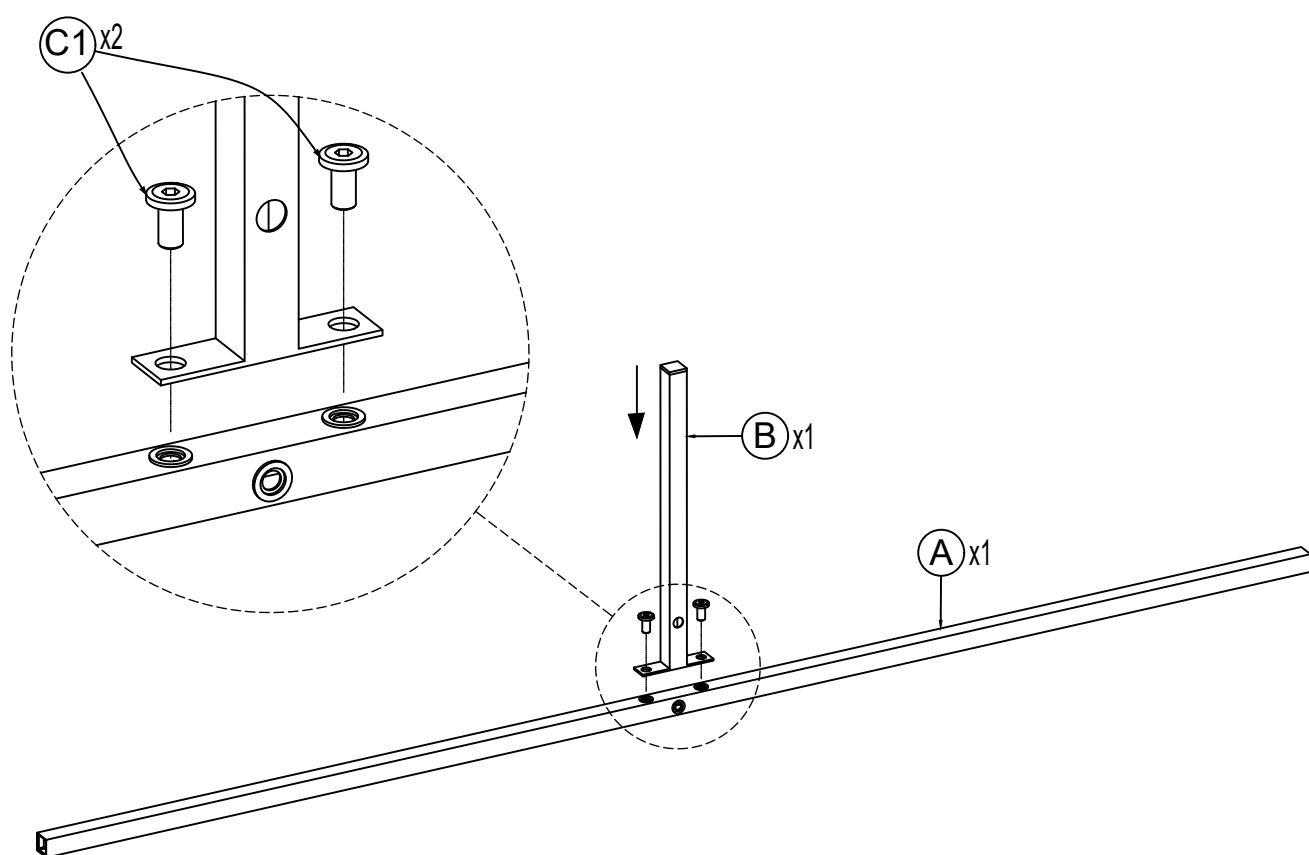

STEP 12

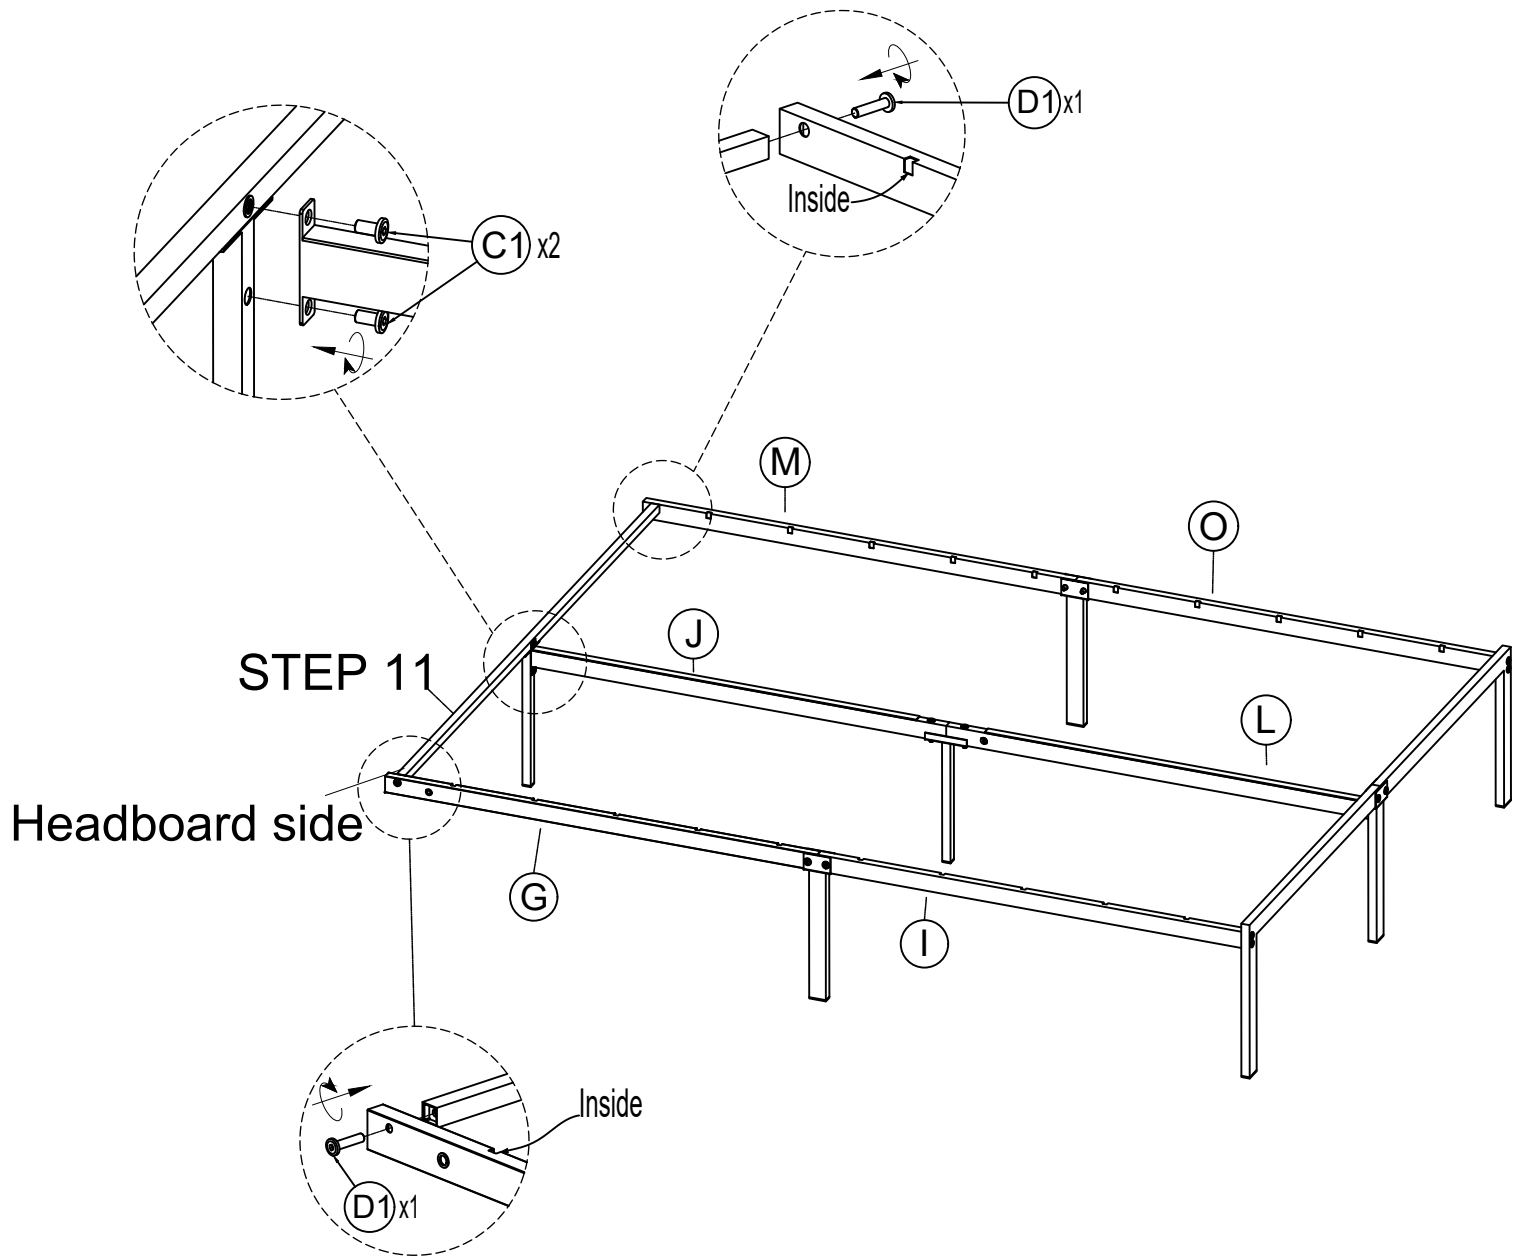

## STEP 13

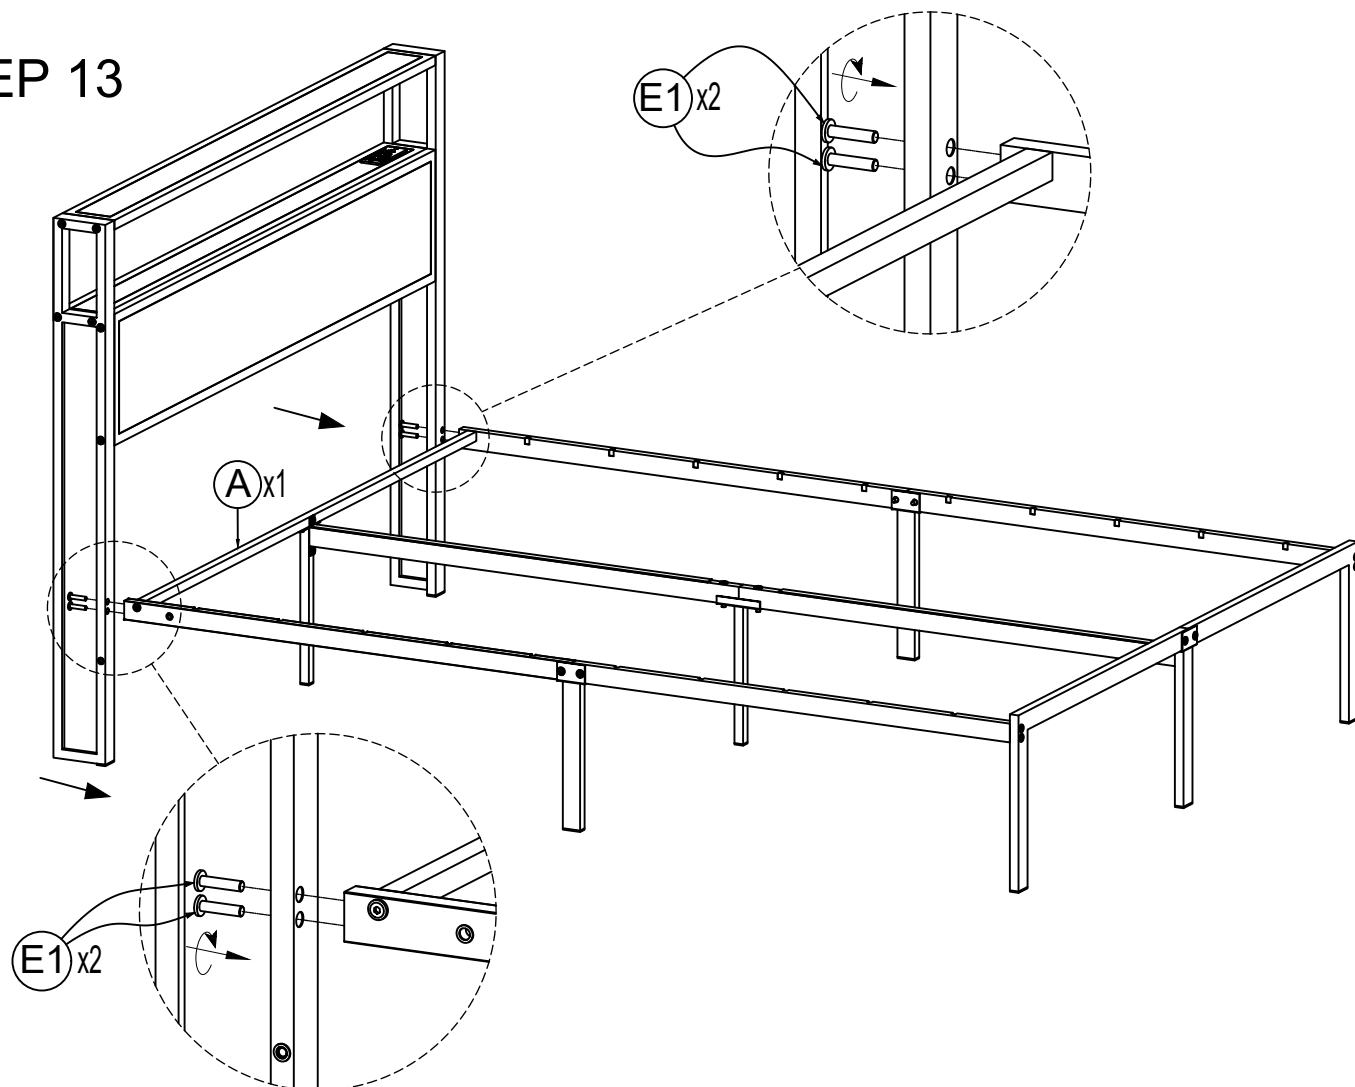

## STEP 14

