
Outdoor Folding

Adirondack Chair

Instruction Manual

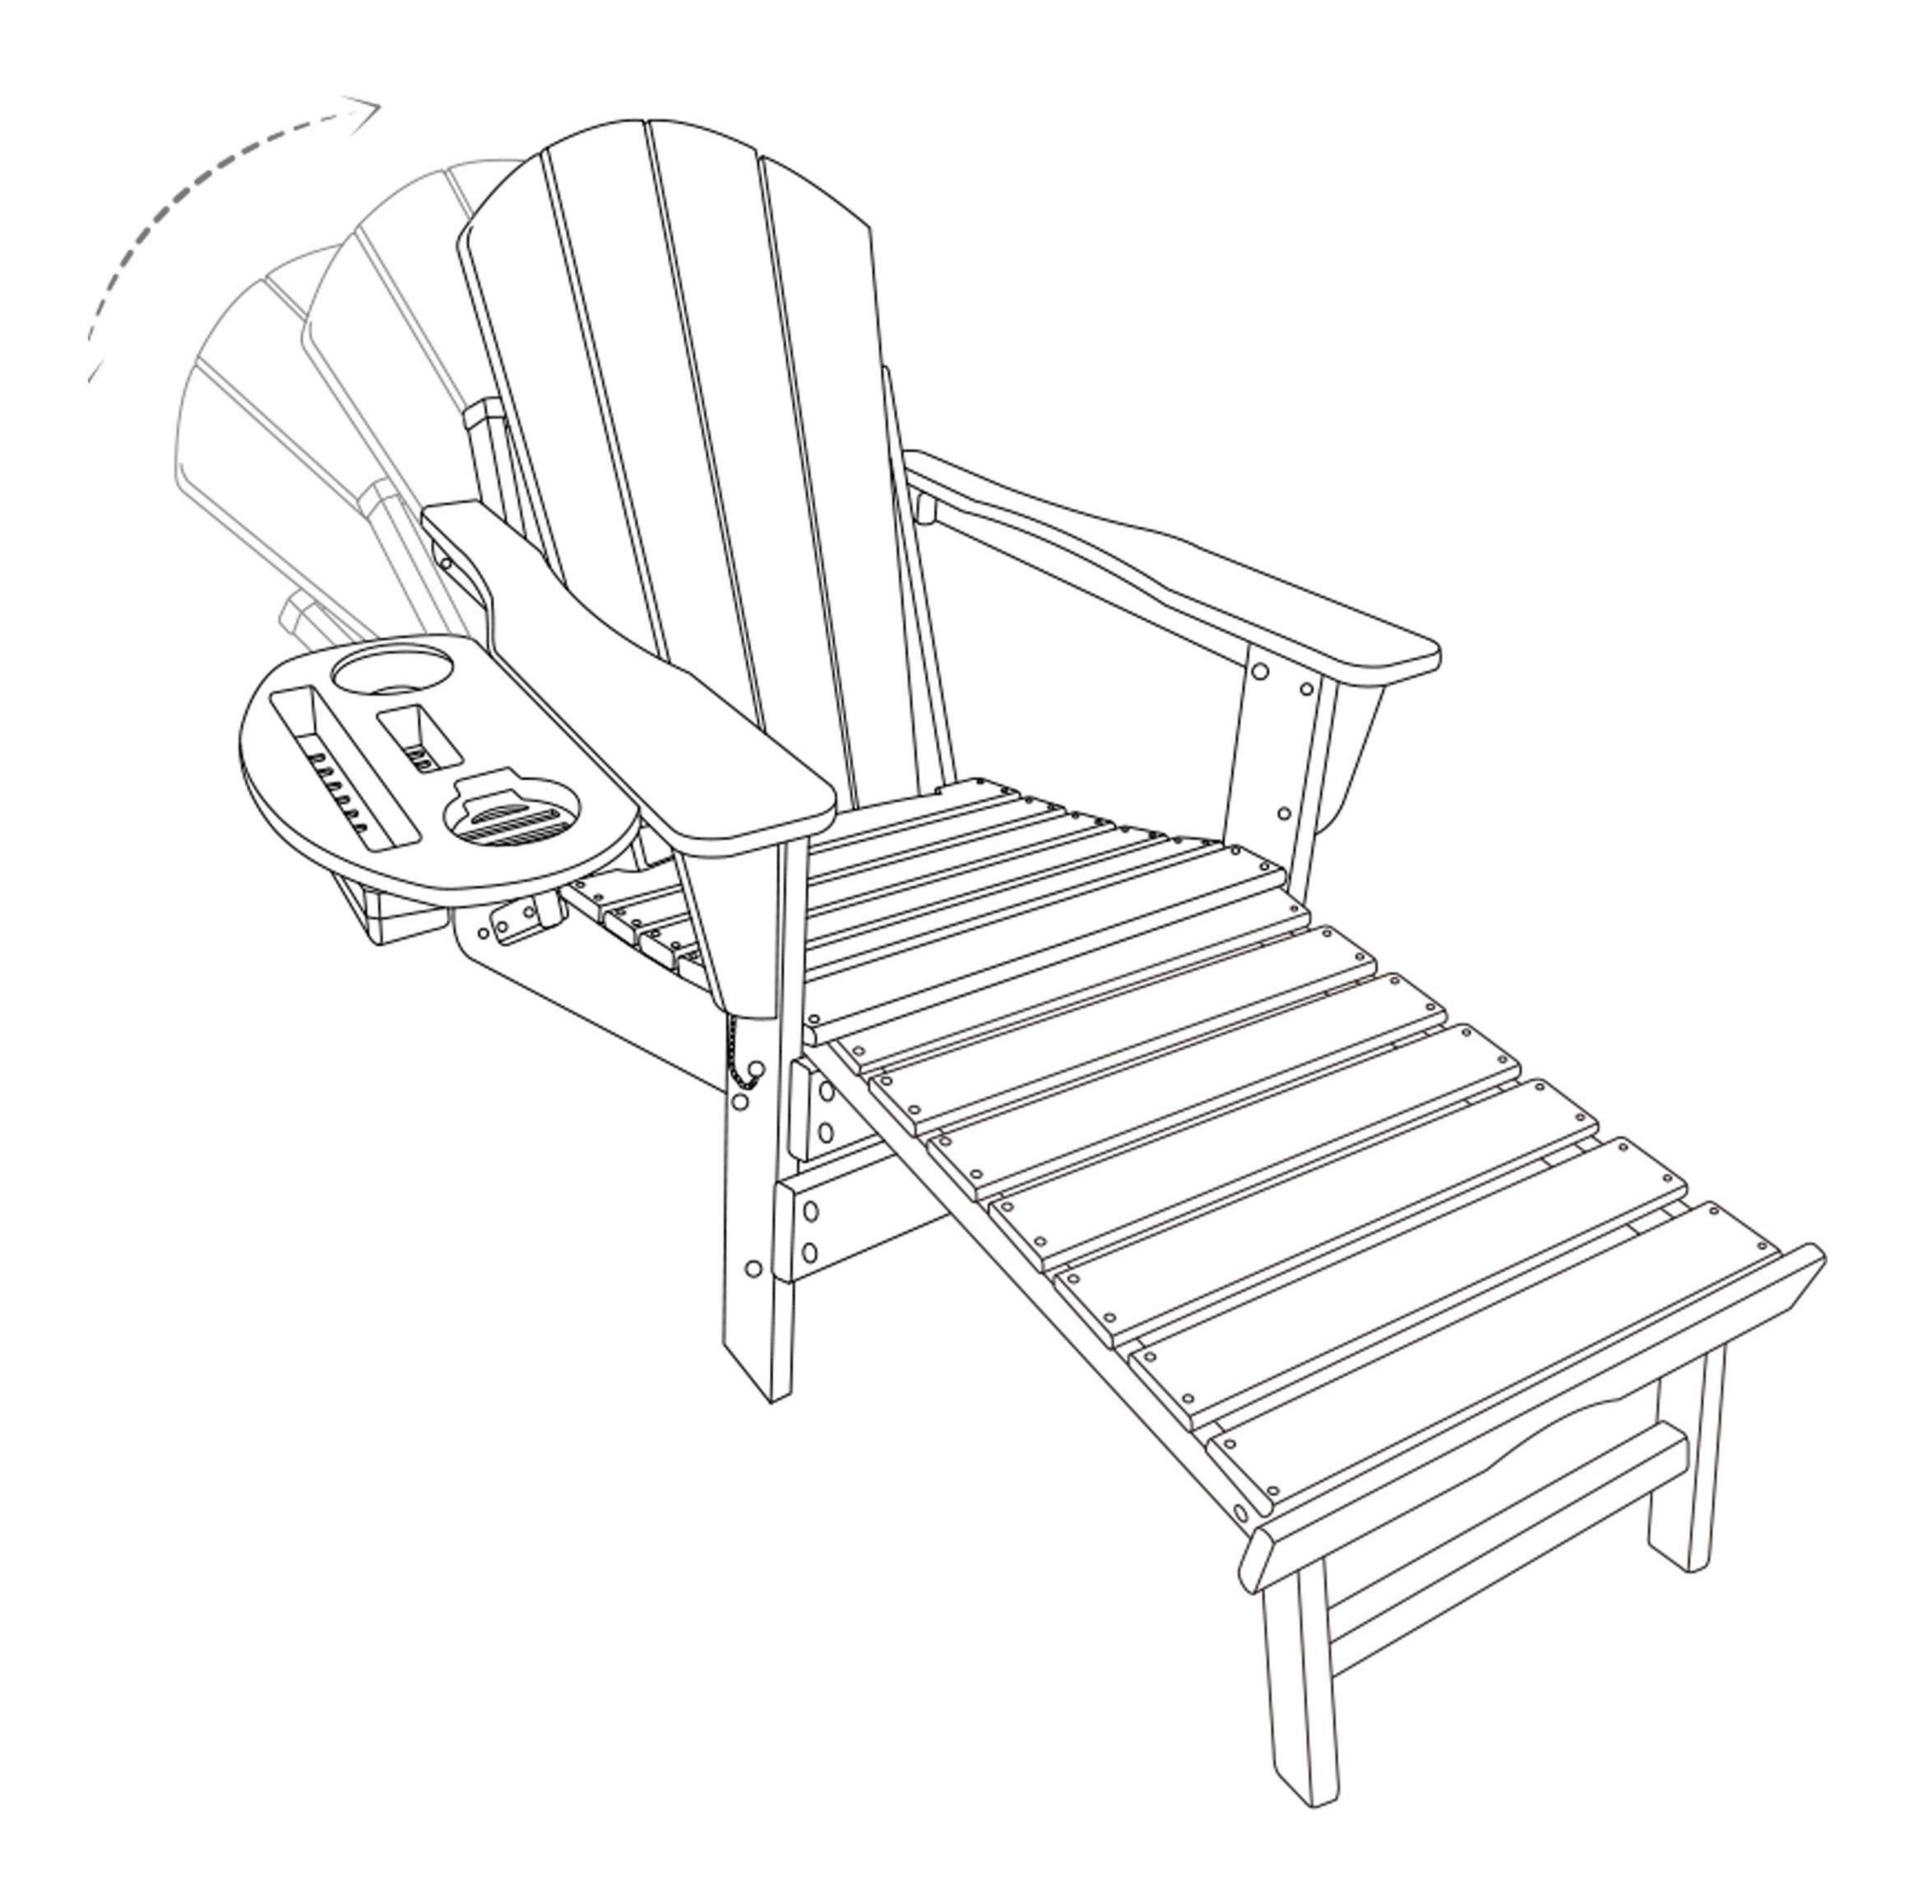





for you and your loved ones to enjoy for many years to come!

Before You Start

- Please read all instructions carefully.
- Retain instructions for future reference.
- Seperate and count all parts and hardware.
- Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid
- moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- Keep all small parts and packaging materials for this product away from babies and children.
- risti in ini ana in addit this and in this will be stated in 192, is and i
- 비해위상 비행의 그 배축 [배양감이다]의 그 그는 비장의 공격을 하기 할 것은 가장 영약감독이라 정 법정.
- Alvoiga photes the product on a field standy and shake surface.
 Marga all state l performant production methods for this product.

PRODUCT ASSEMBLY

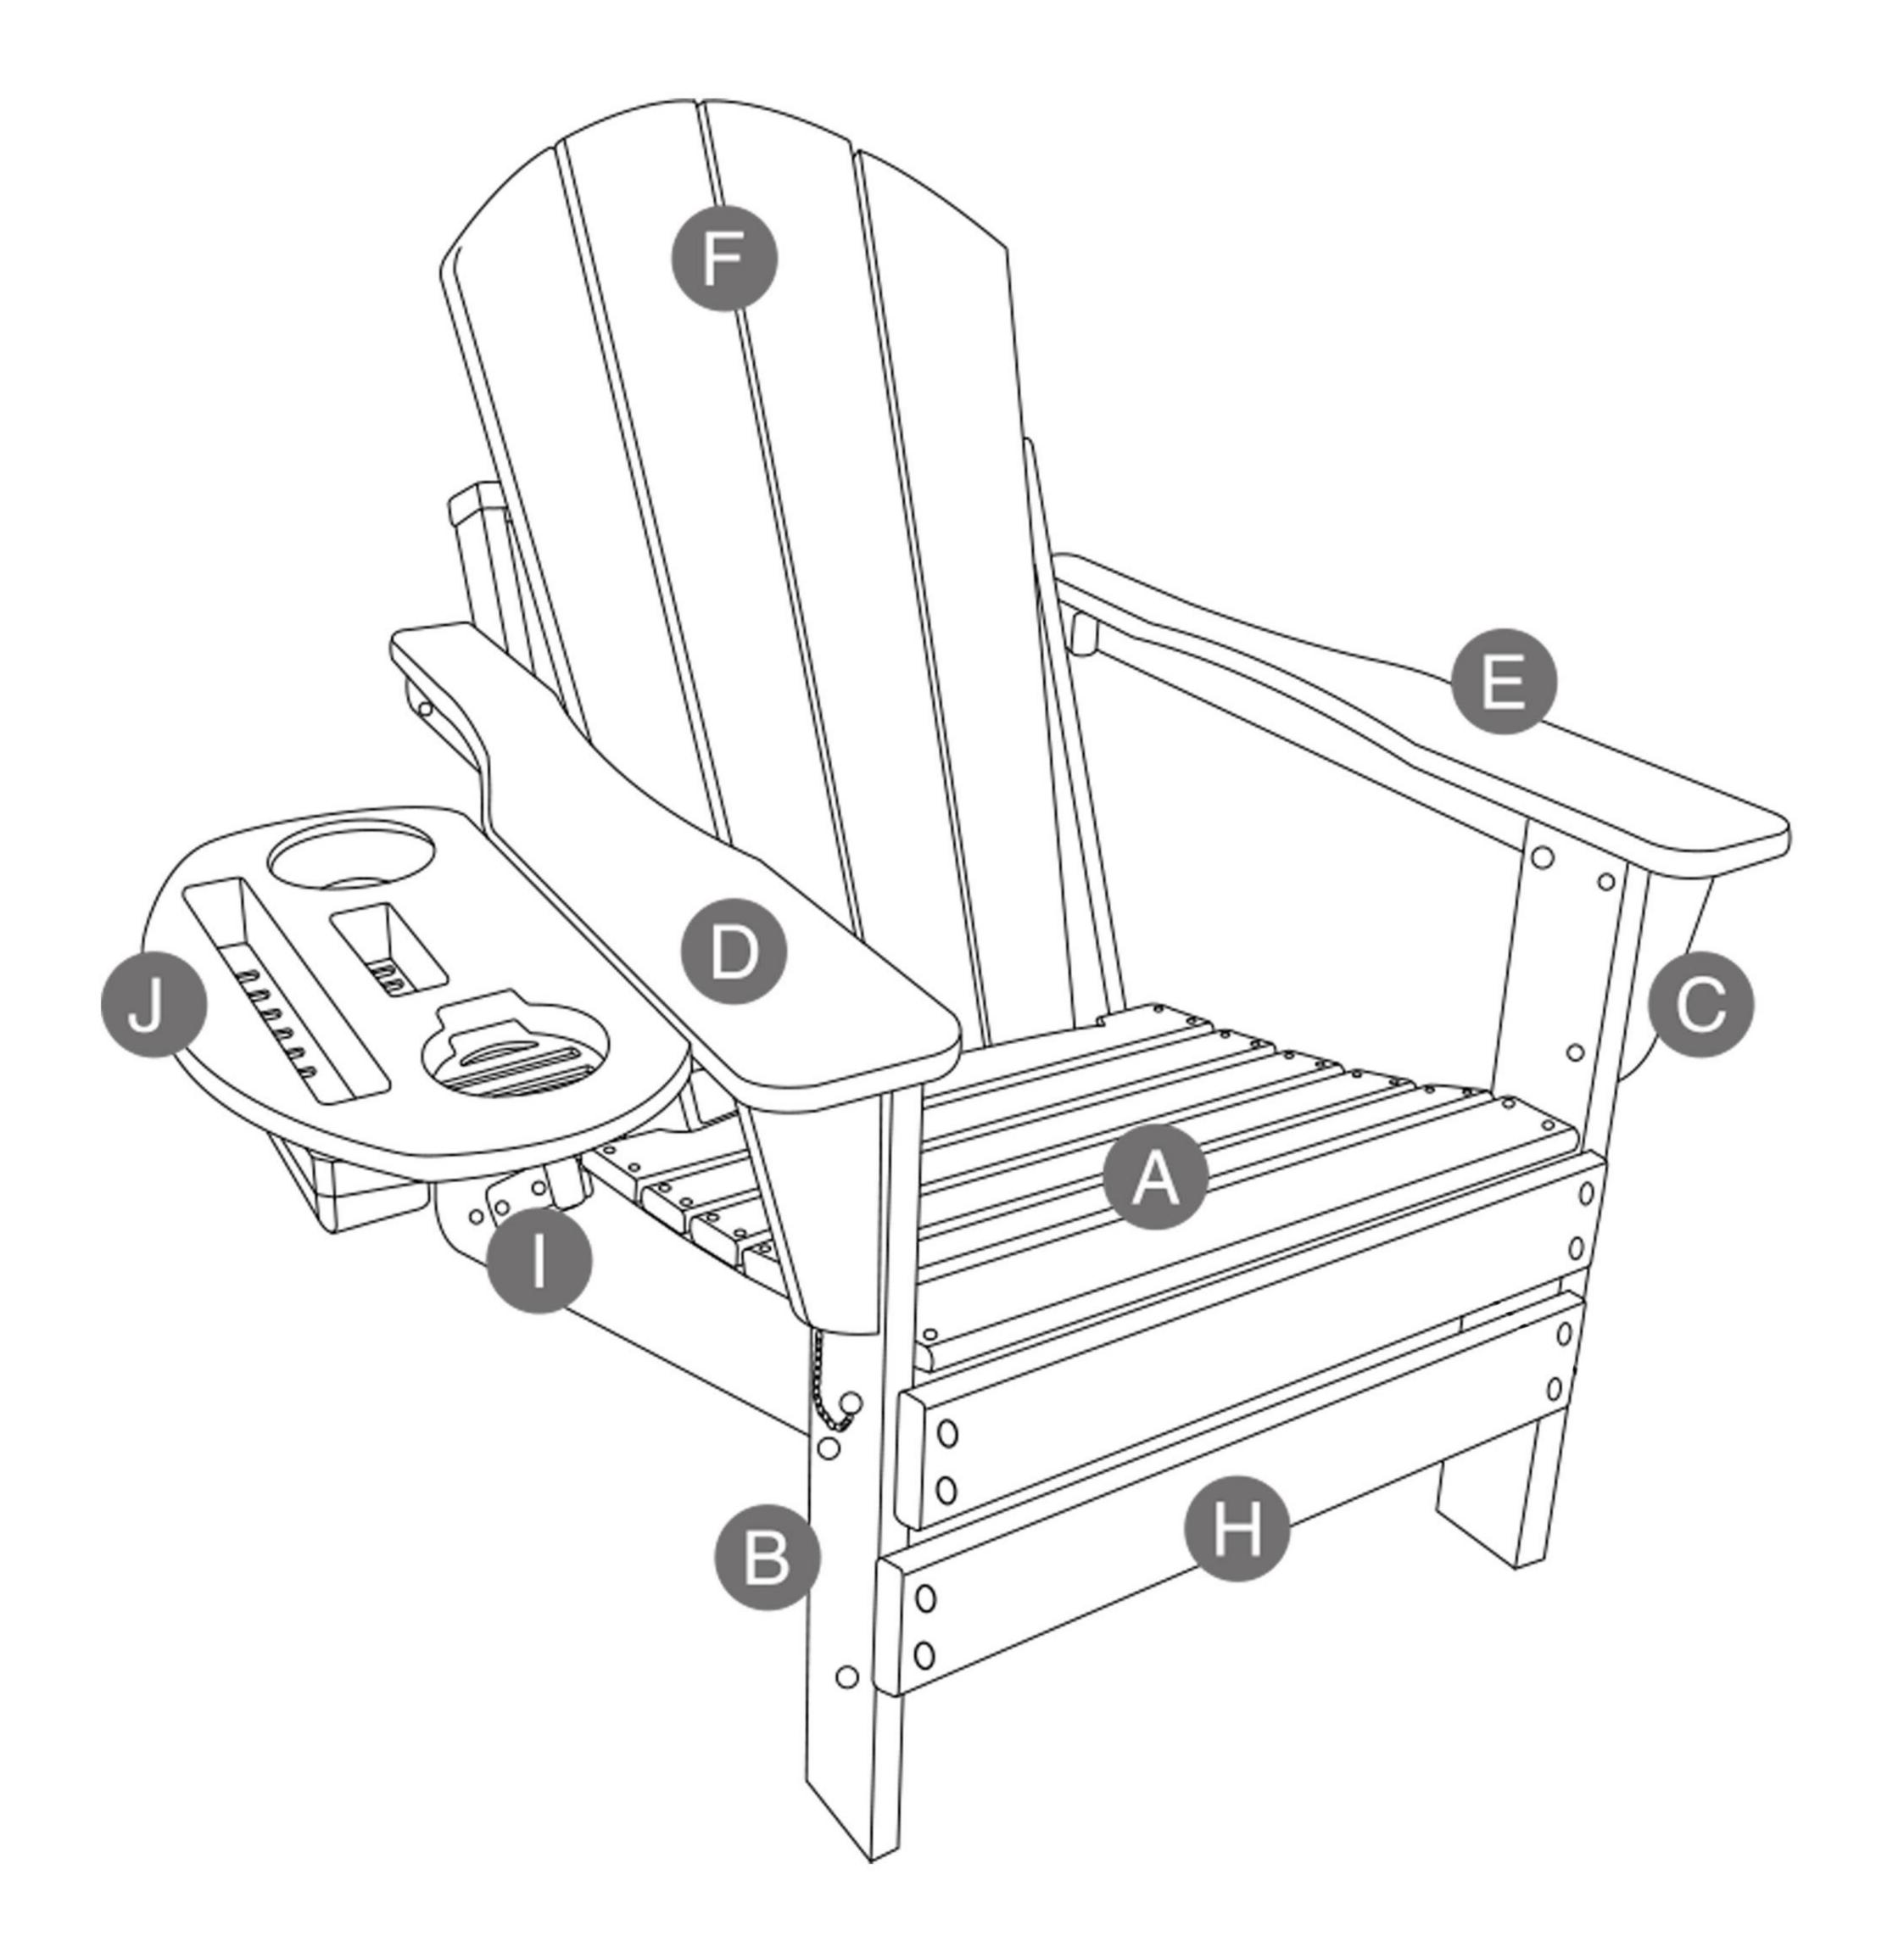


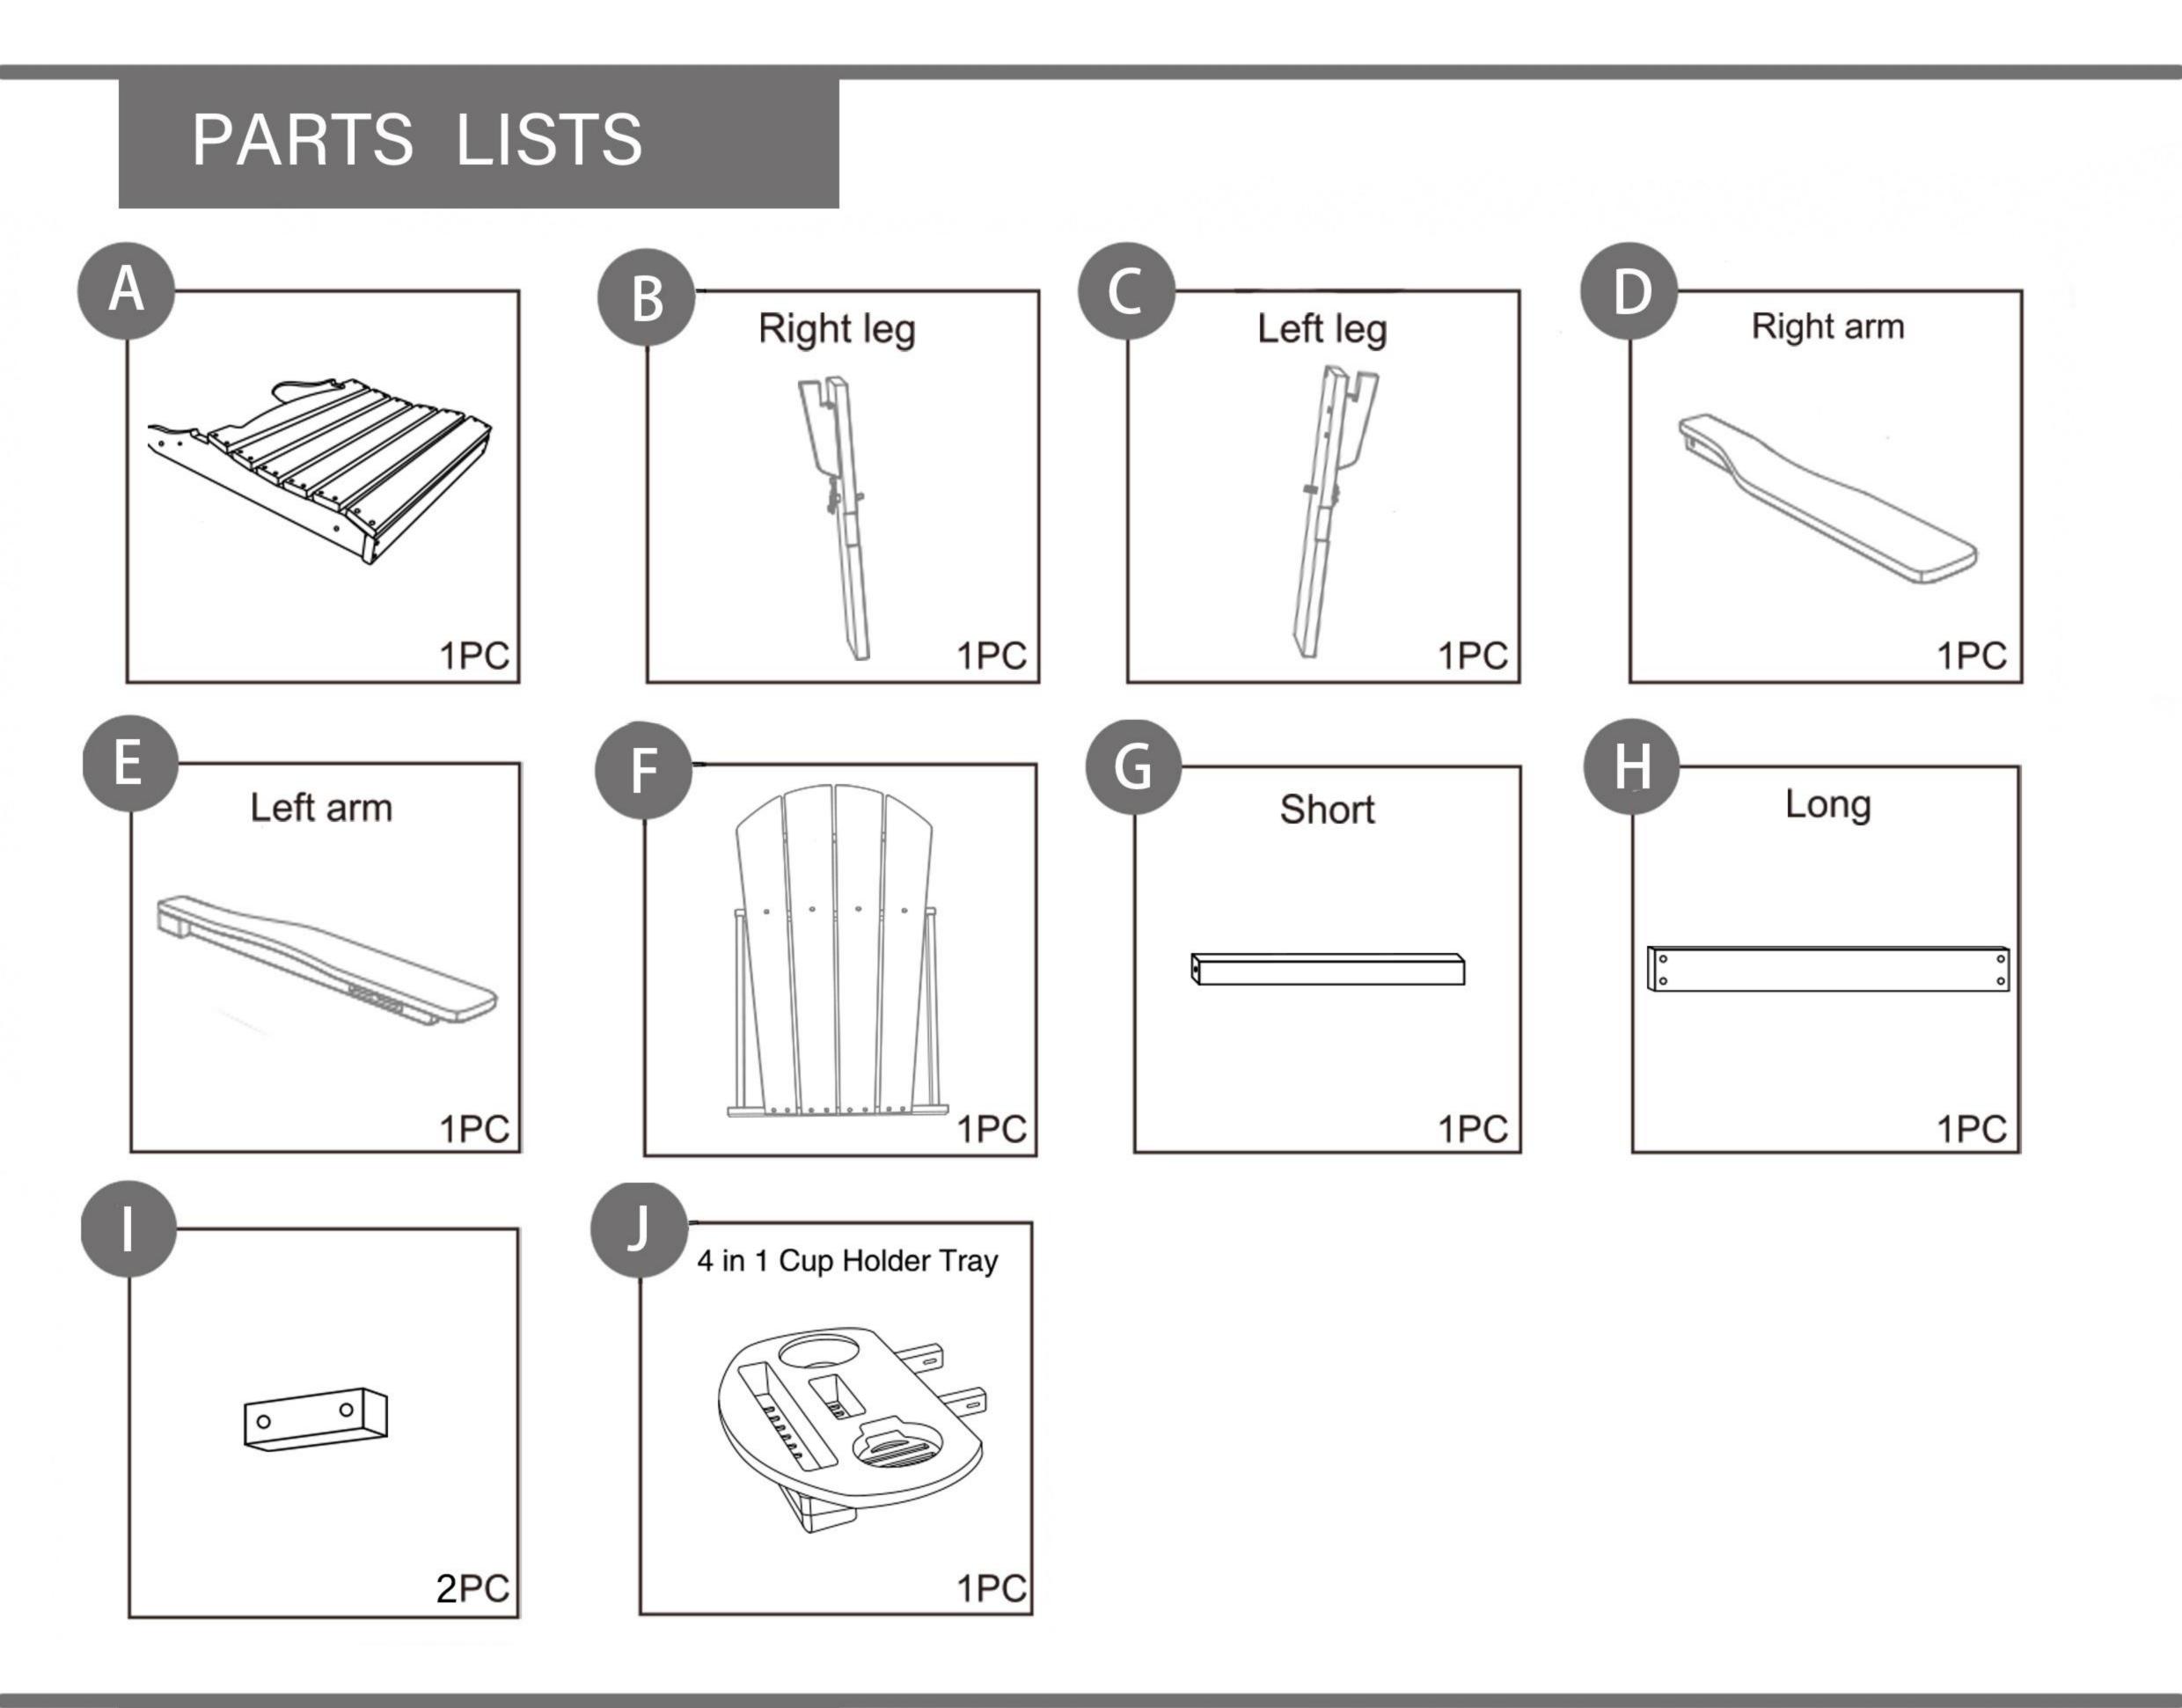

HARDWARE LIST

#1 BOLT	#2 M6 x 60 mm BOLT	#3 BOLT	#4 BOLT	#5 M6 x 60 mm Screw
2PCS	2PCS	4PCS	2PCS	2PCS
#6 M6 x 50 mm Screw	#7 M6 WASHER	#8 M6 NUT	#9 SPANNER	#10 ALLEN KEY 4S
	\bigcirc		5	
6PCS	10PCS	8PCS	1PC	2PCS


Step 1

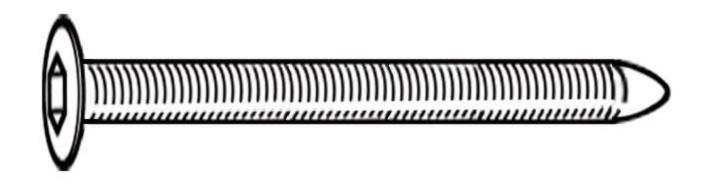

M6 x 50mm Screw

Assemble Part H to the Part B & C

by using Hardware#6

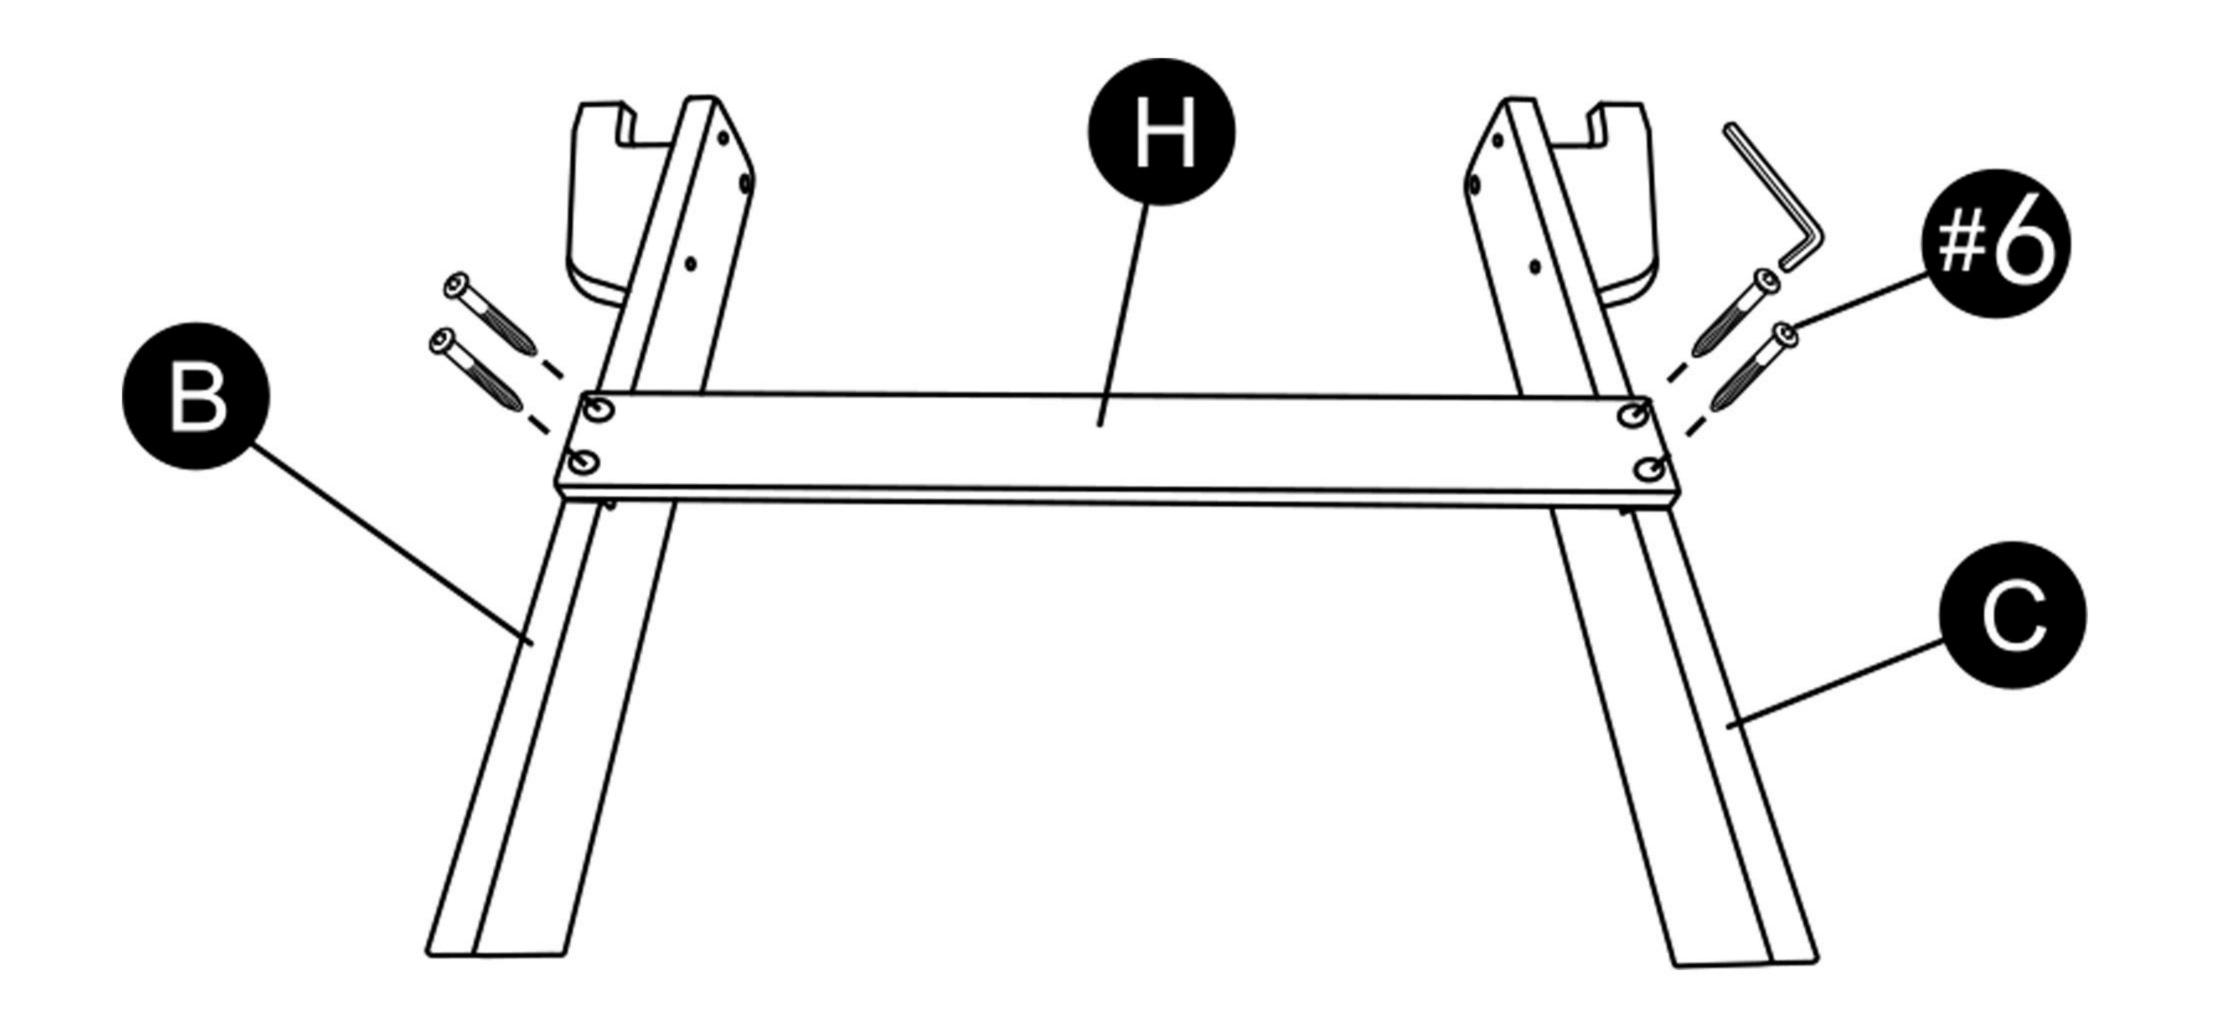


Step 2

M6 x 60mm BOLT


Assembly PartA (Seat Panel)to the finished Part in Step 1,

by using Hardware#2,Washer#7,Nuts#8

Meanwhile, Tighten the Chain Bolts On Both Legs

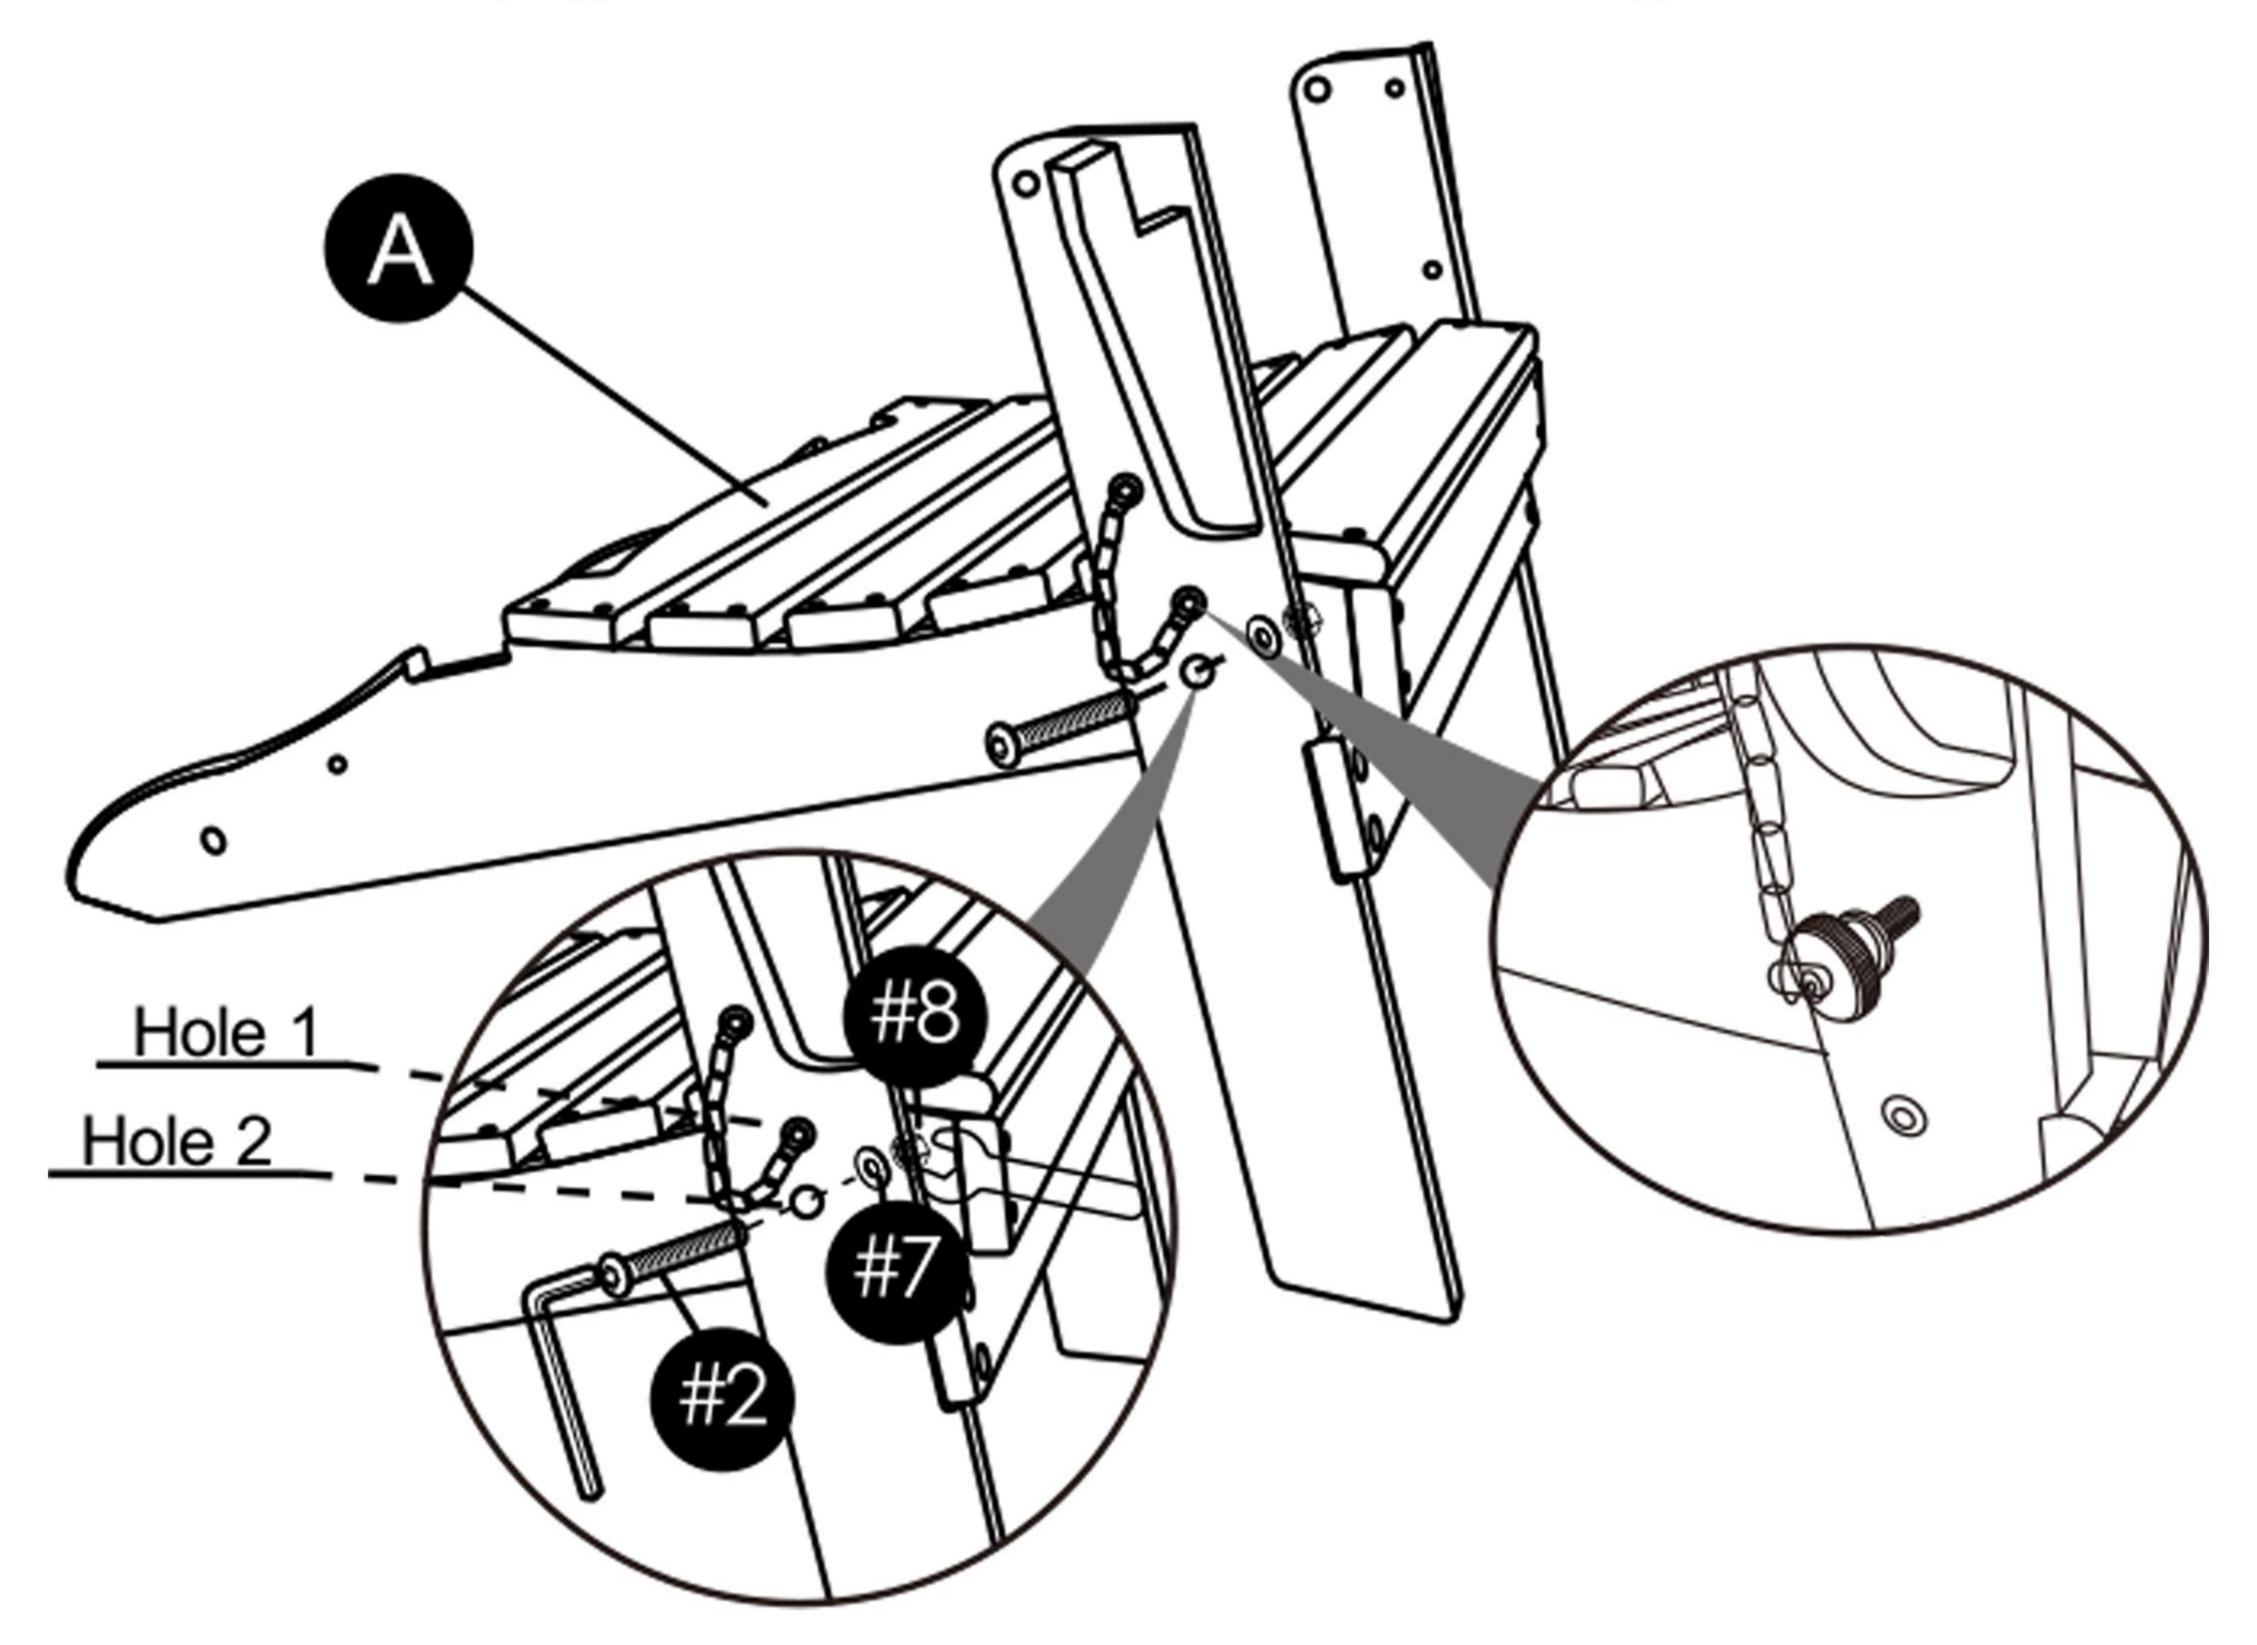



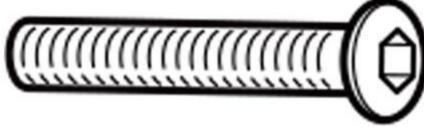





Assembly Part D(Right Arm) to the Right Leg

Assembly Part E(Left Arm) to the Left Leg

by using Hardware#4,Washer#7

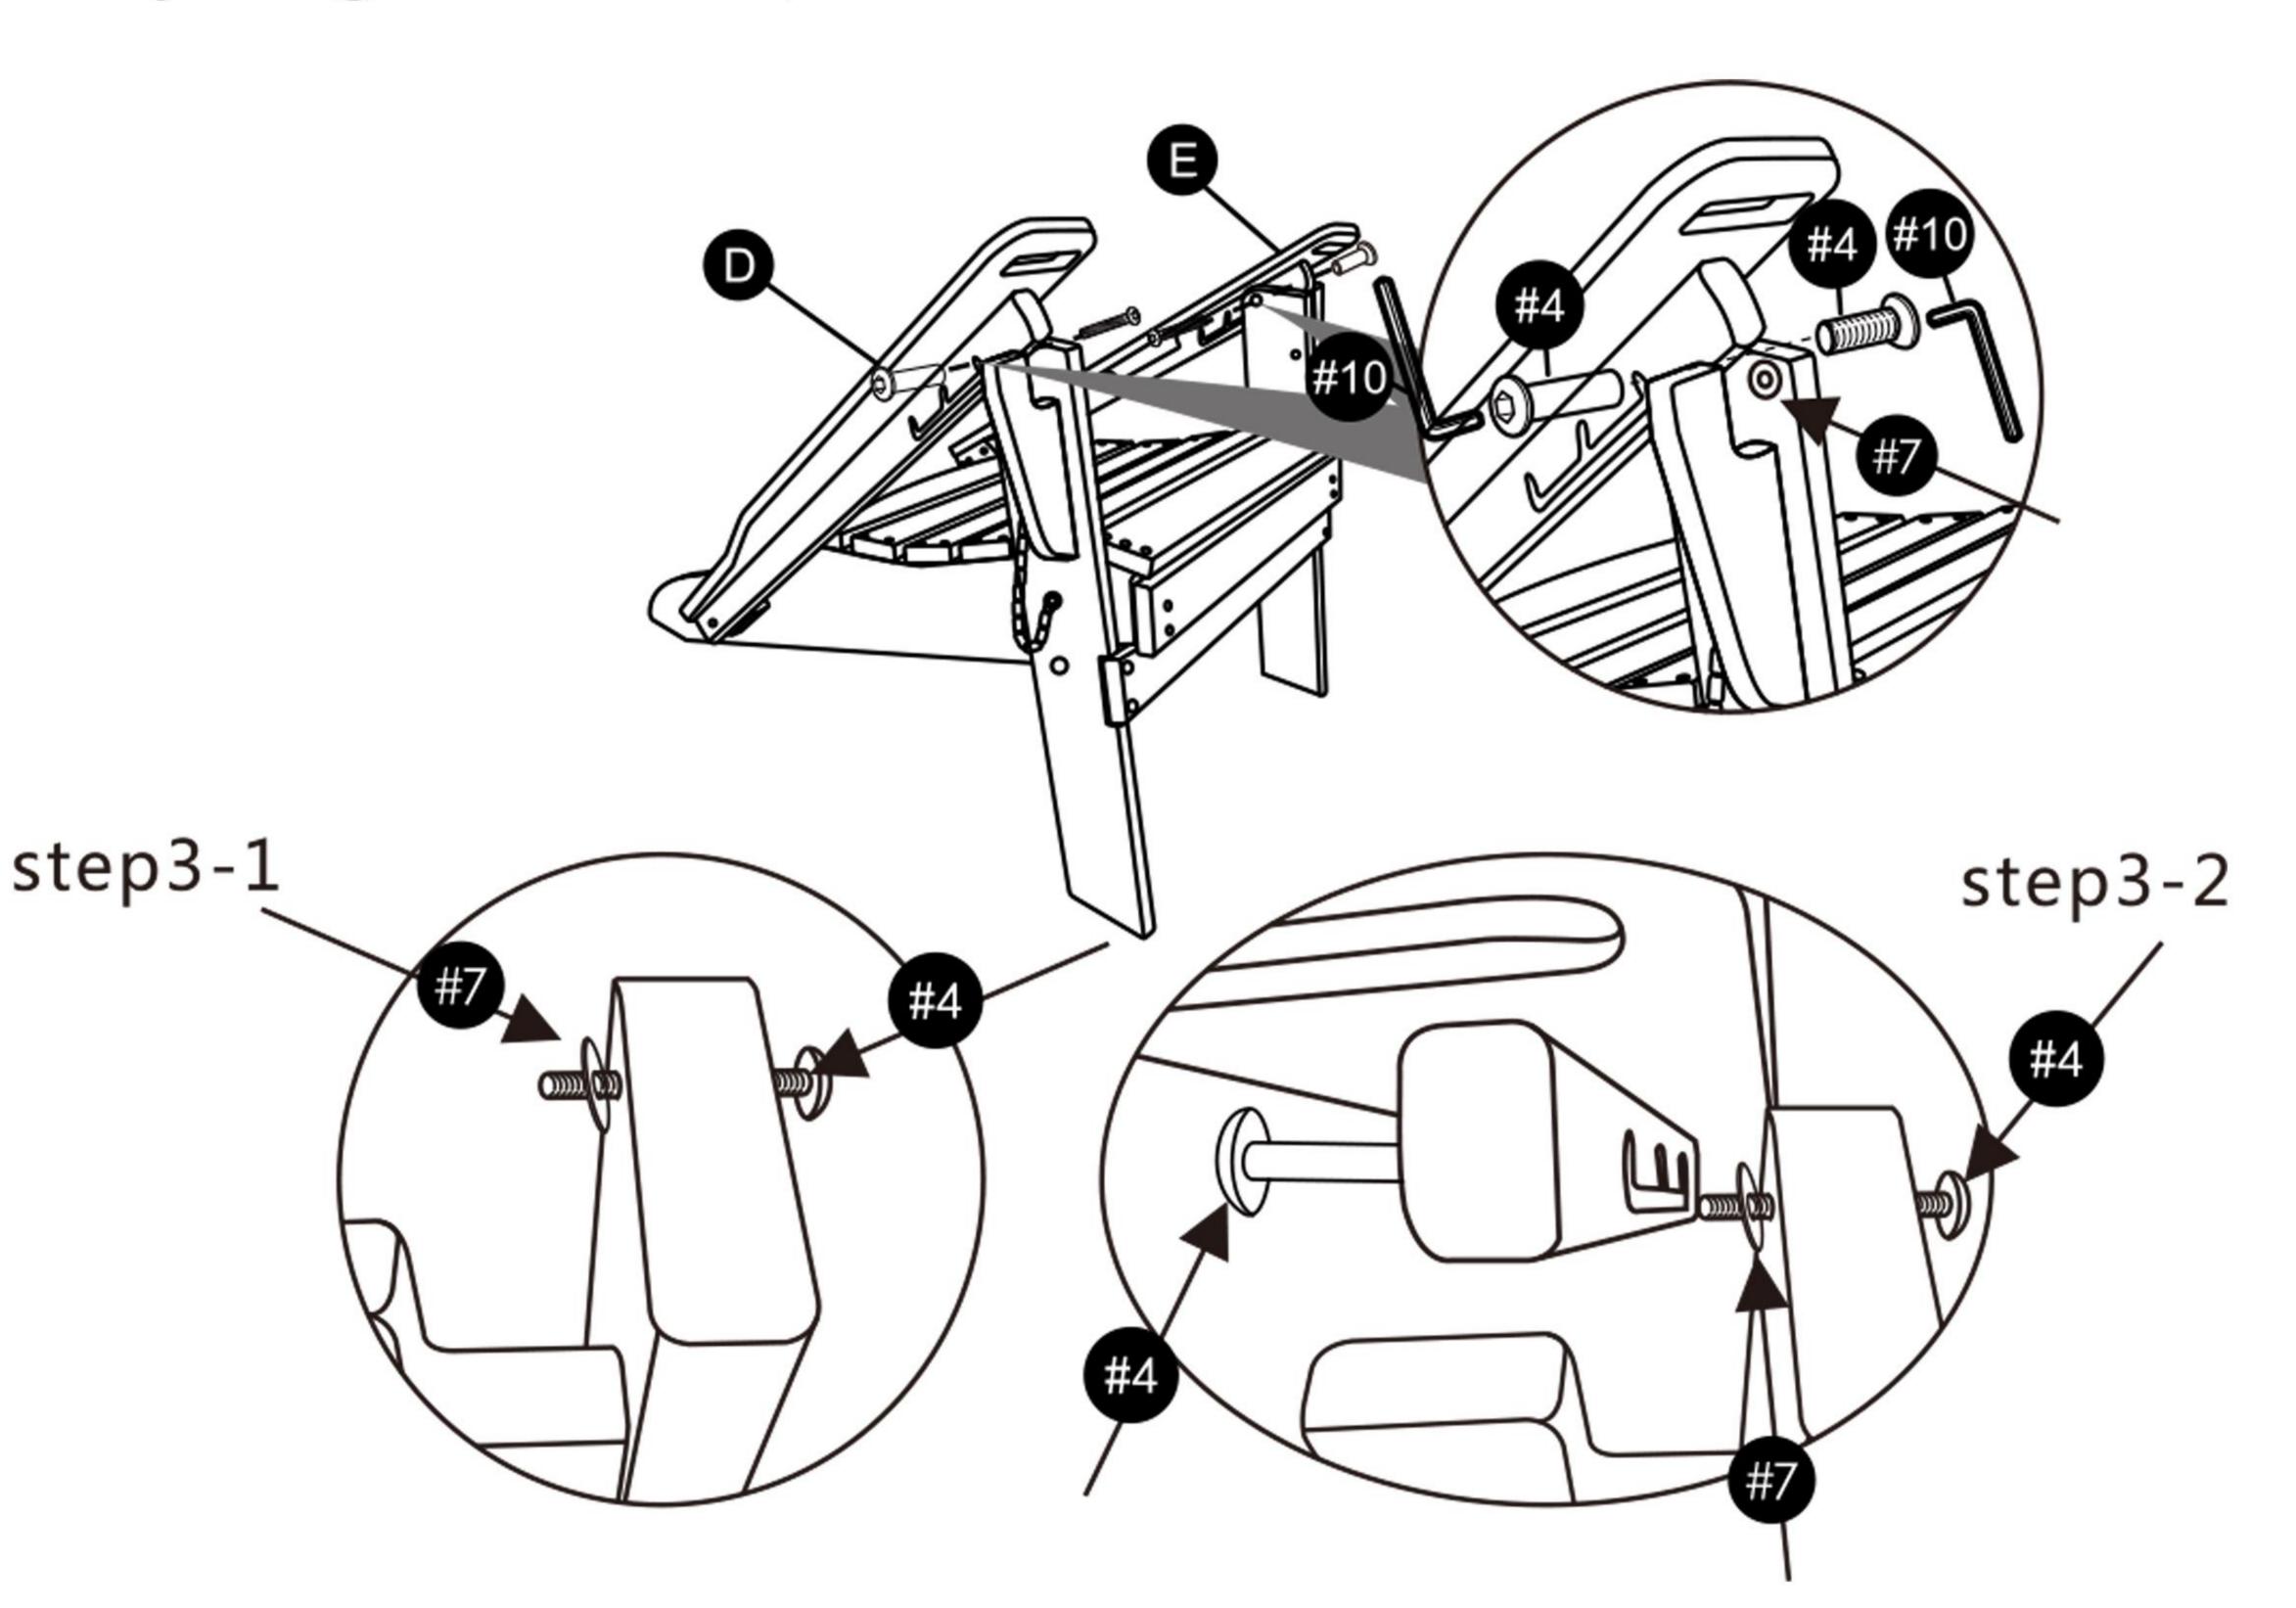


Step 4

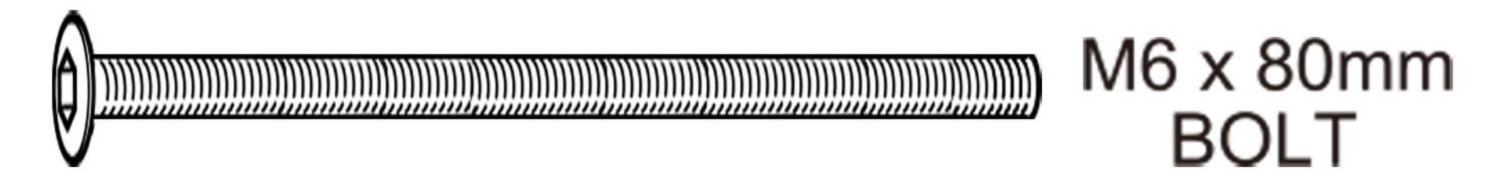

Assembly Part F(Back Panel) to the Arm rests

by using Hardware#1,Washer#7,Nuts#8

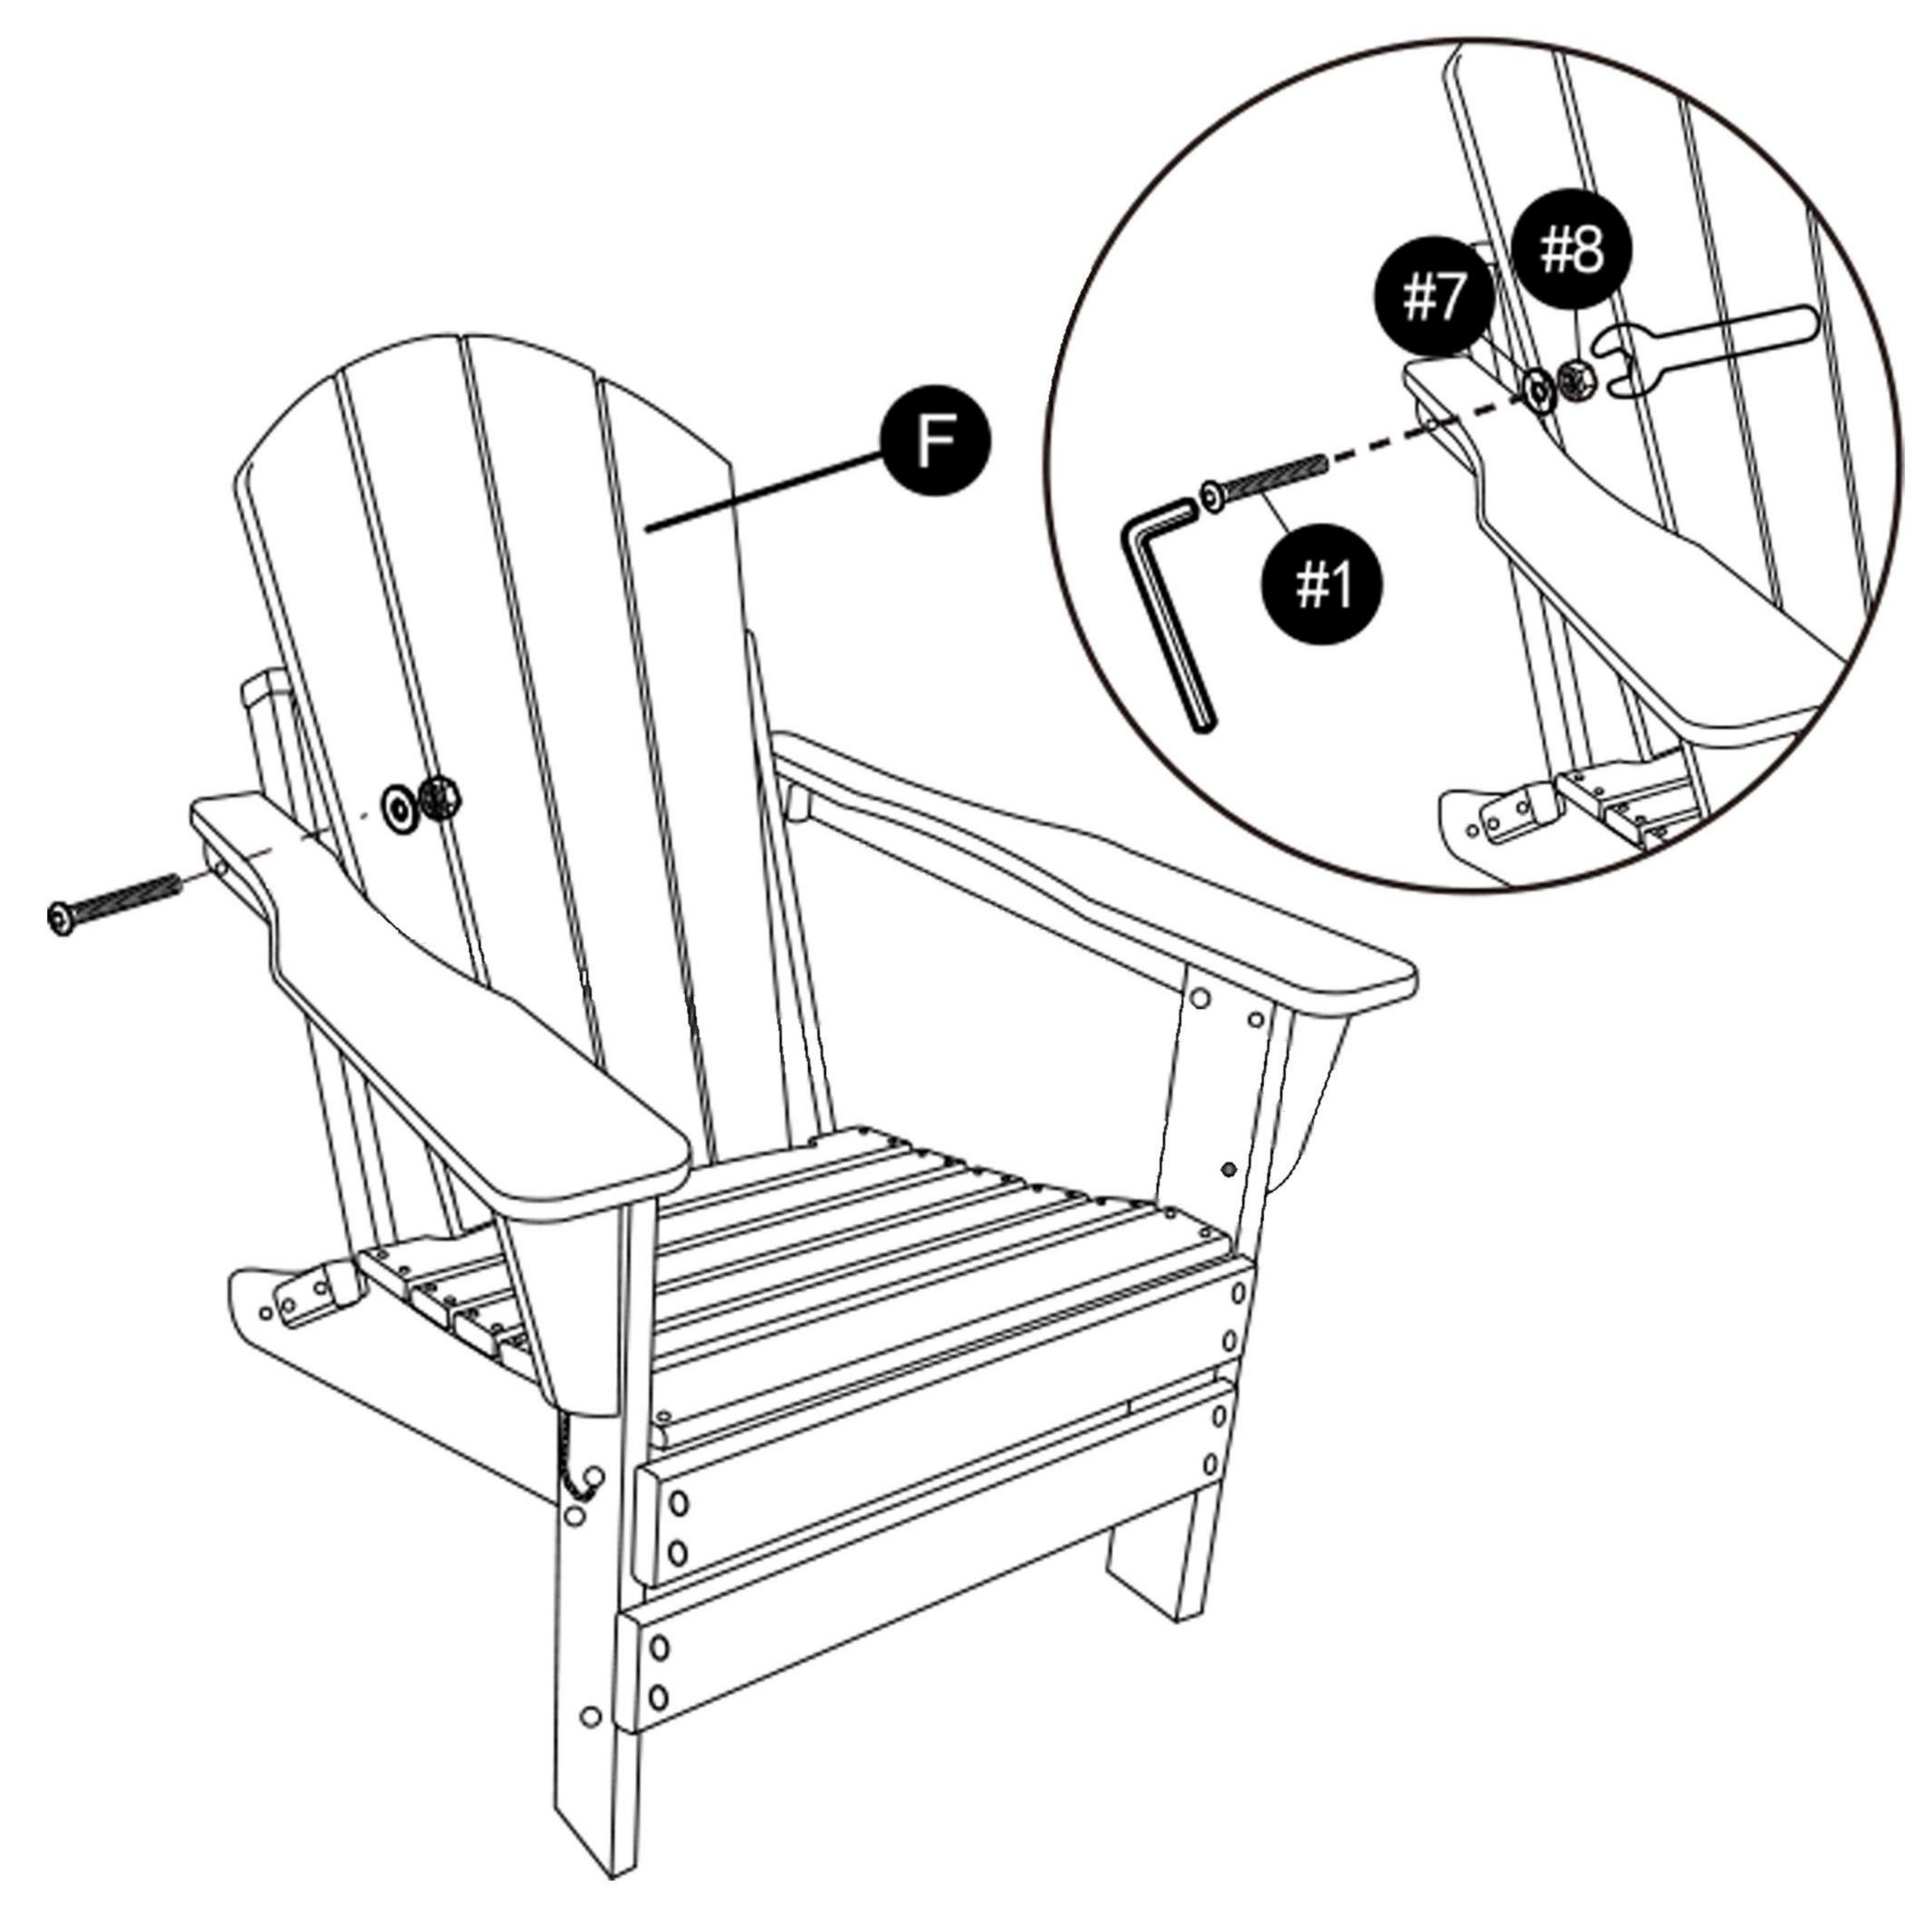

Step 5

M6 x 50mm Screw

Connet Part G to the Seatpanel using Hardware#6

D M6 x 60 mm Screw


M6 x 50 mm



BOLT

Secure the Upper-hole of Part I to the backpanel Using Hardware#5

Secure the Lower-hole of Part I to the seatpanel Using

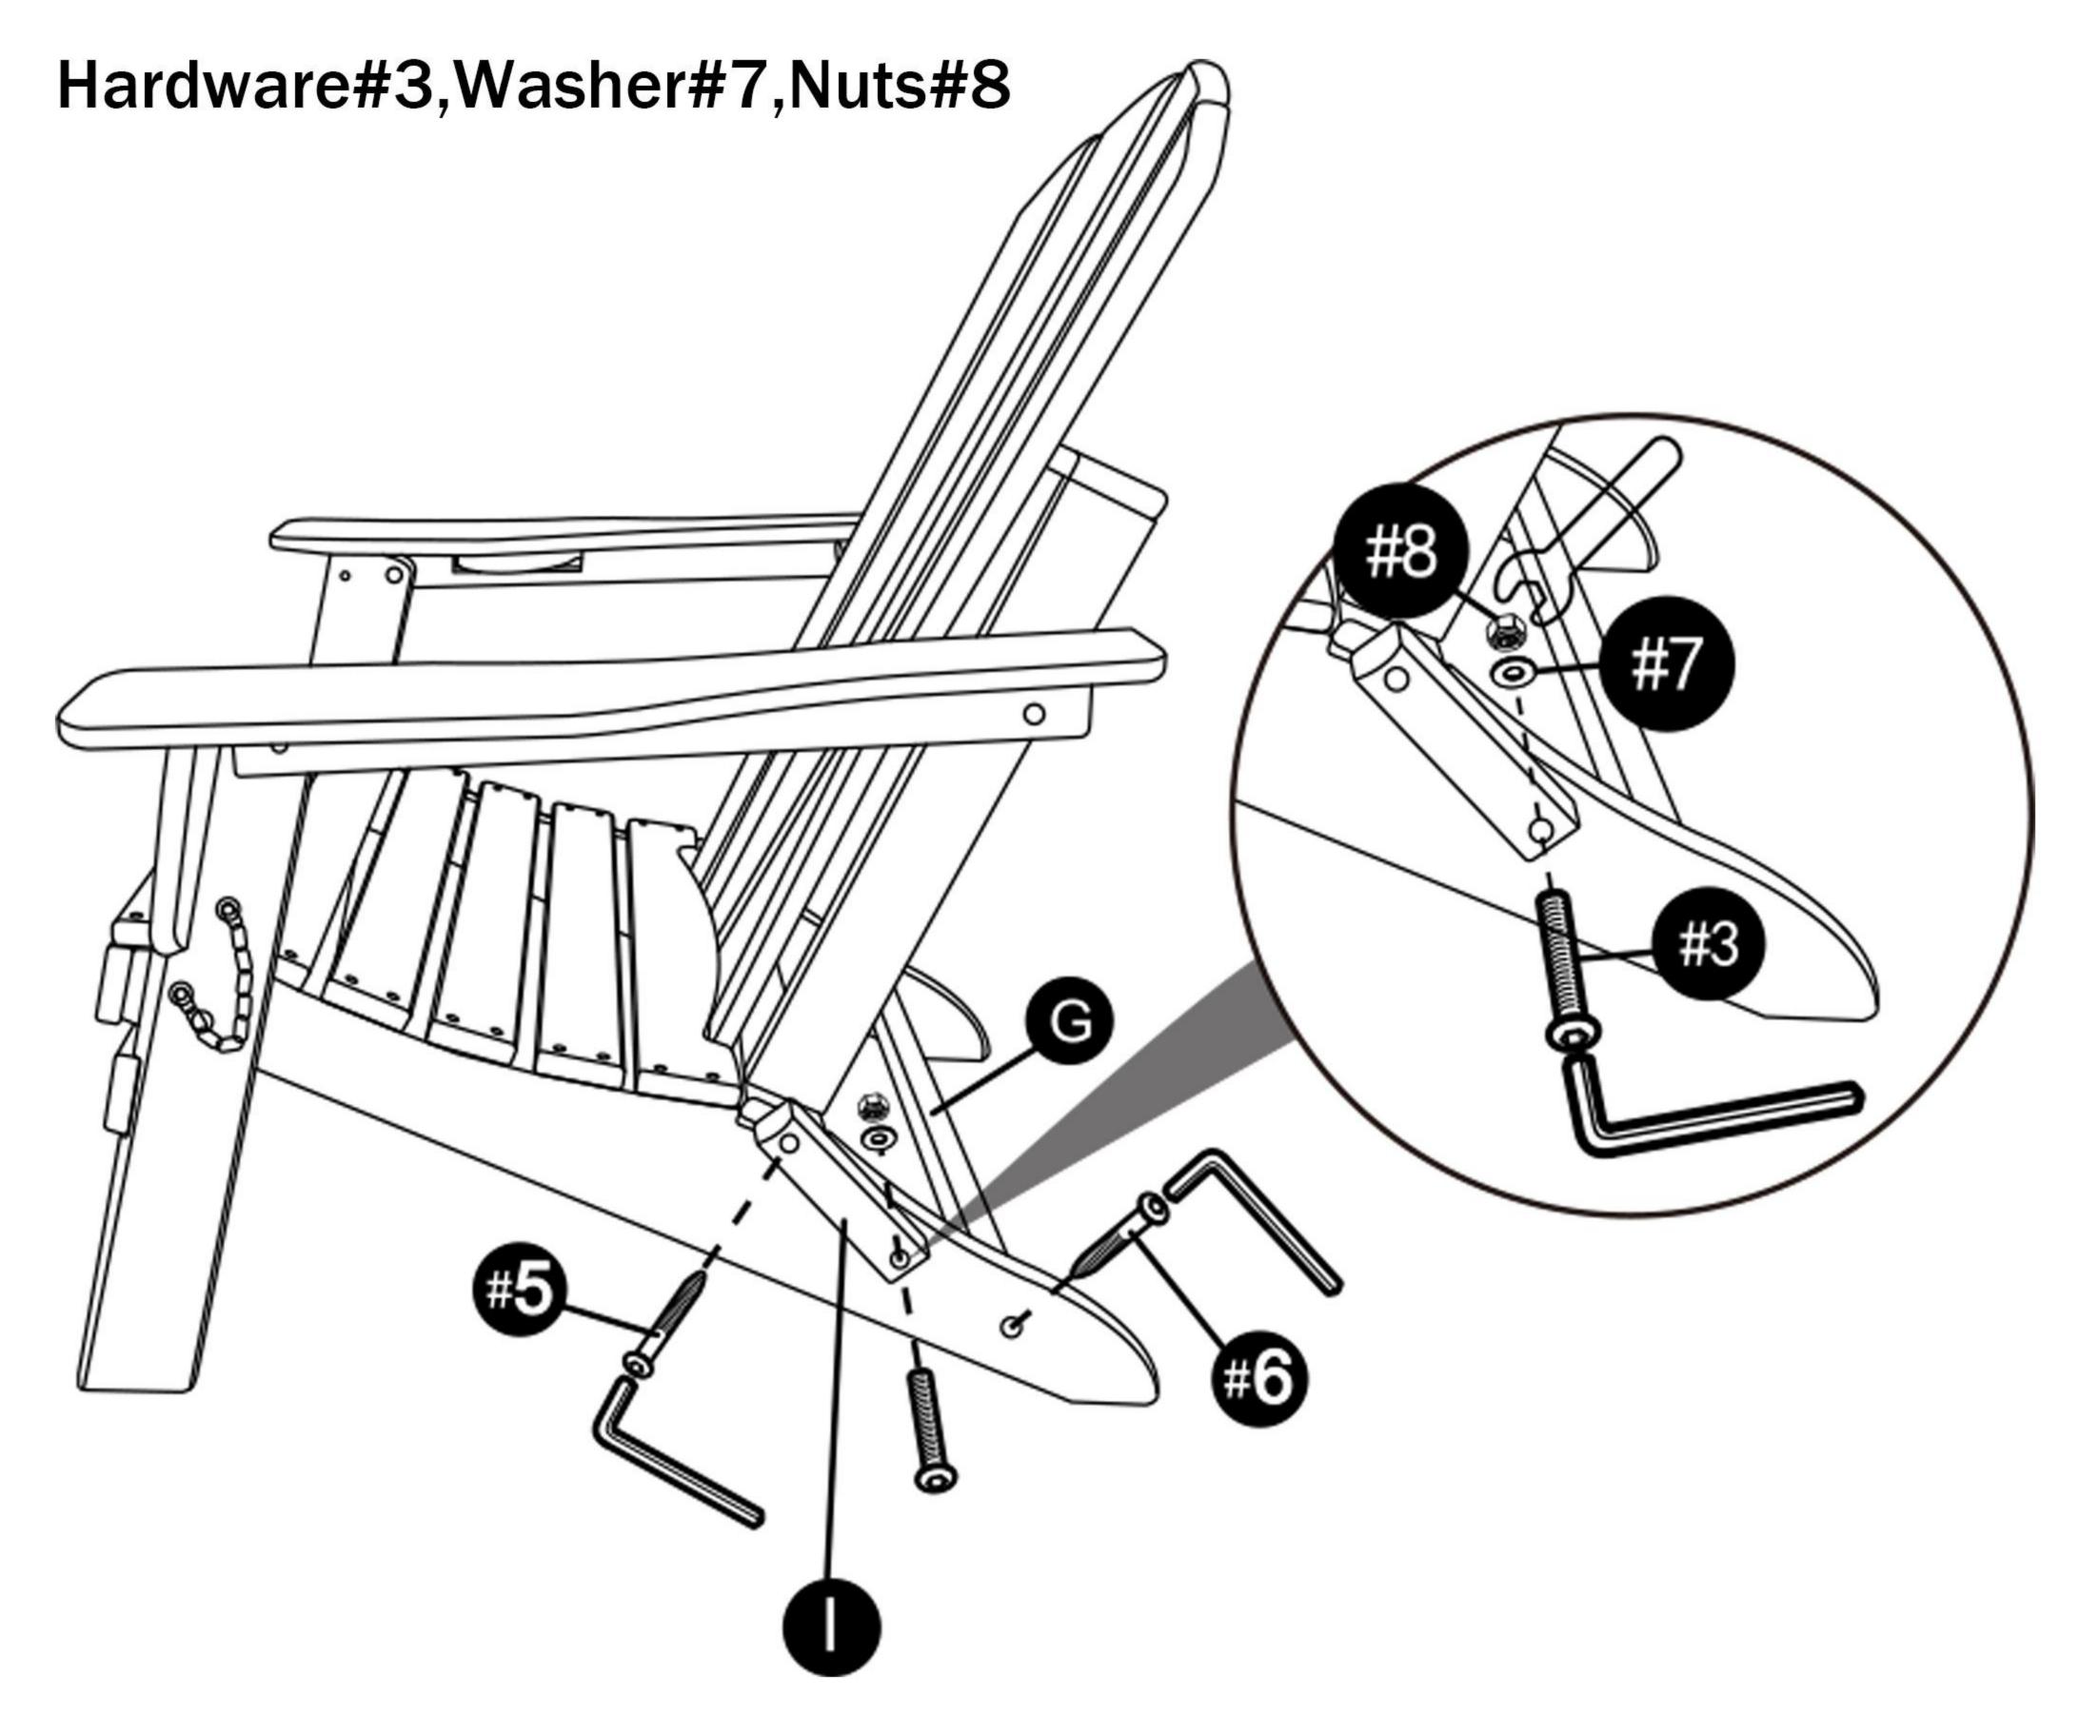


Step 6


M6 x 50mm BOLT

Secure Part J (4 in 1 Cup HolderTray) to the Right Armrest,

by using Hardware#3,Washer#7,Nuts#8

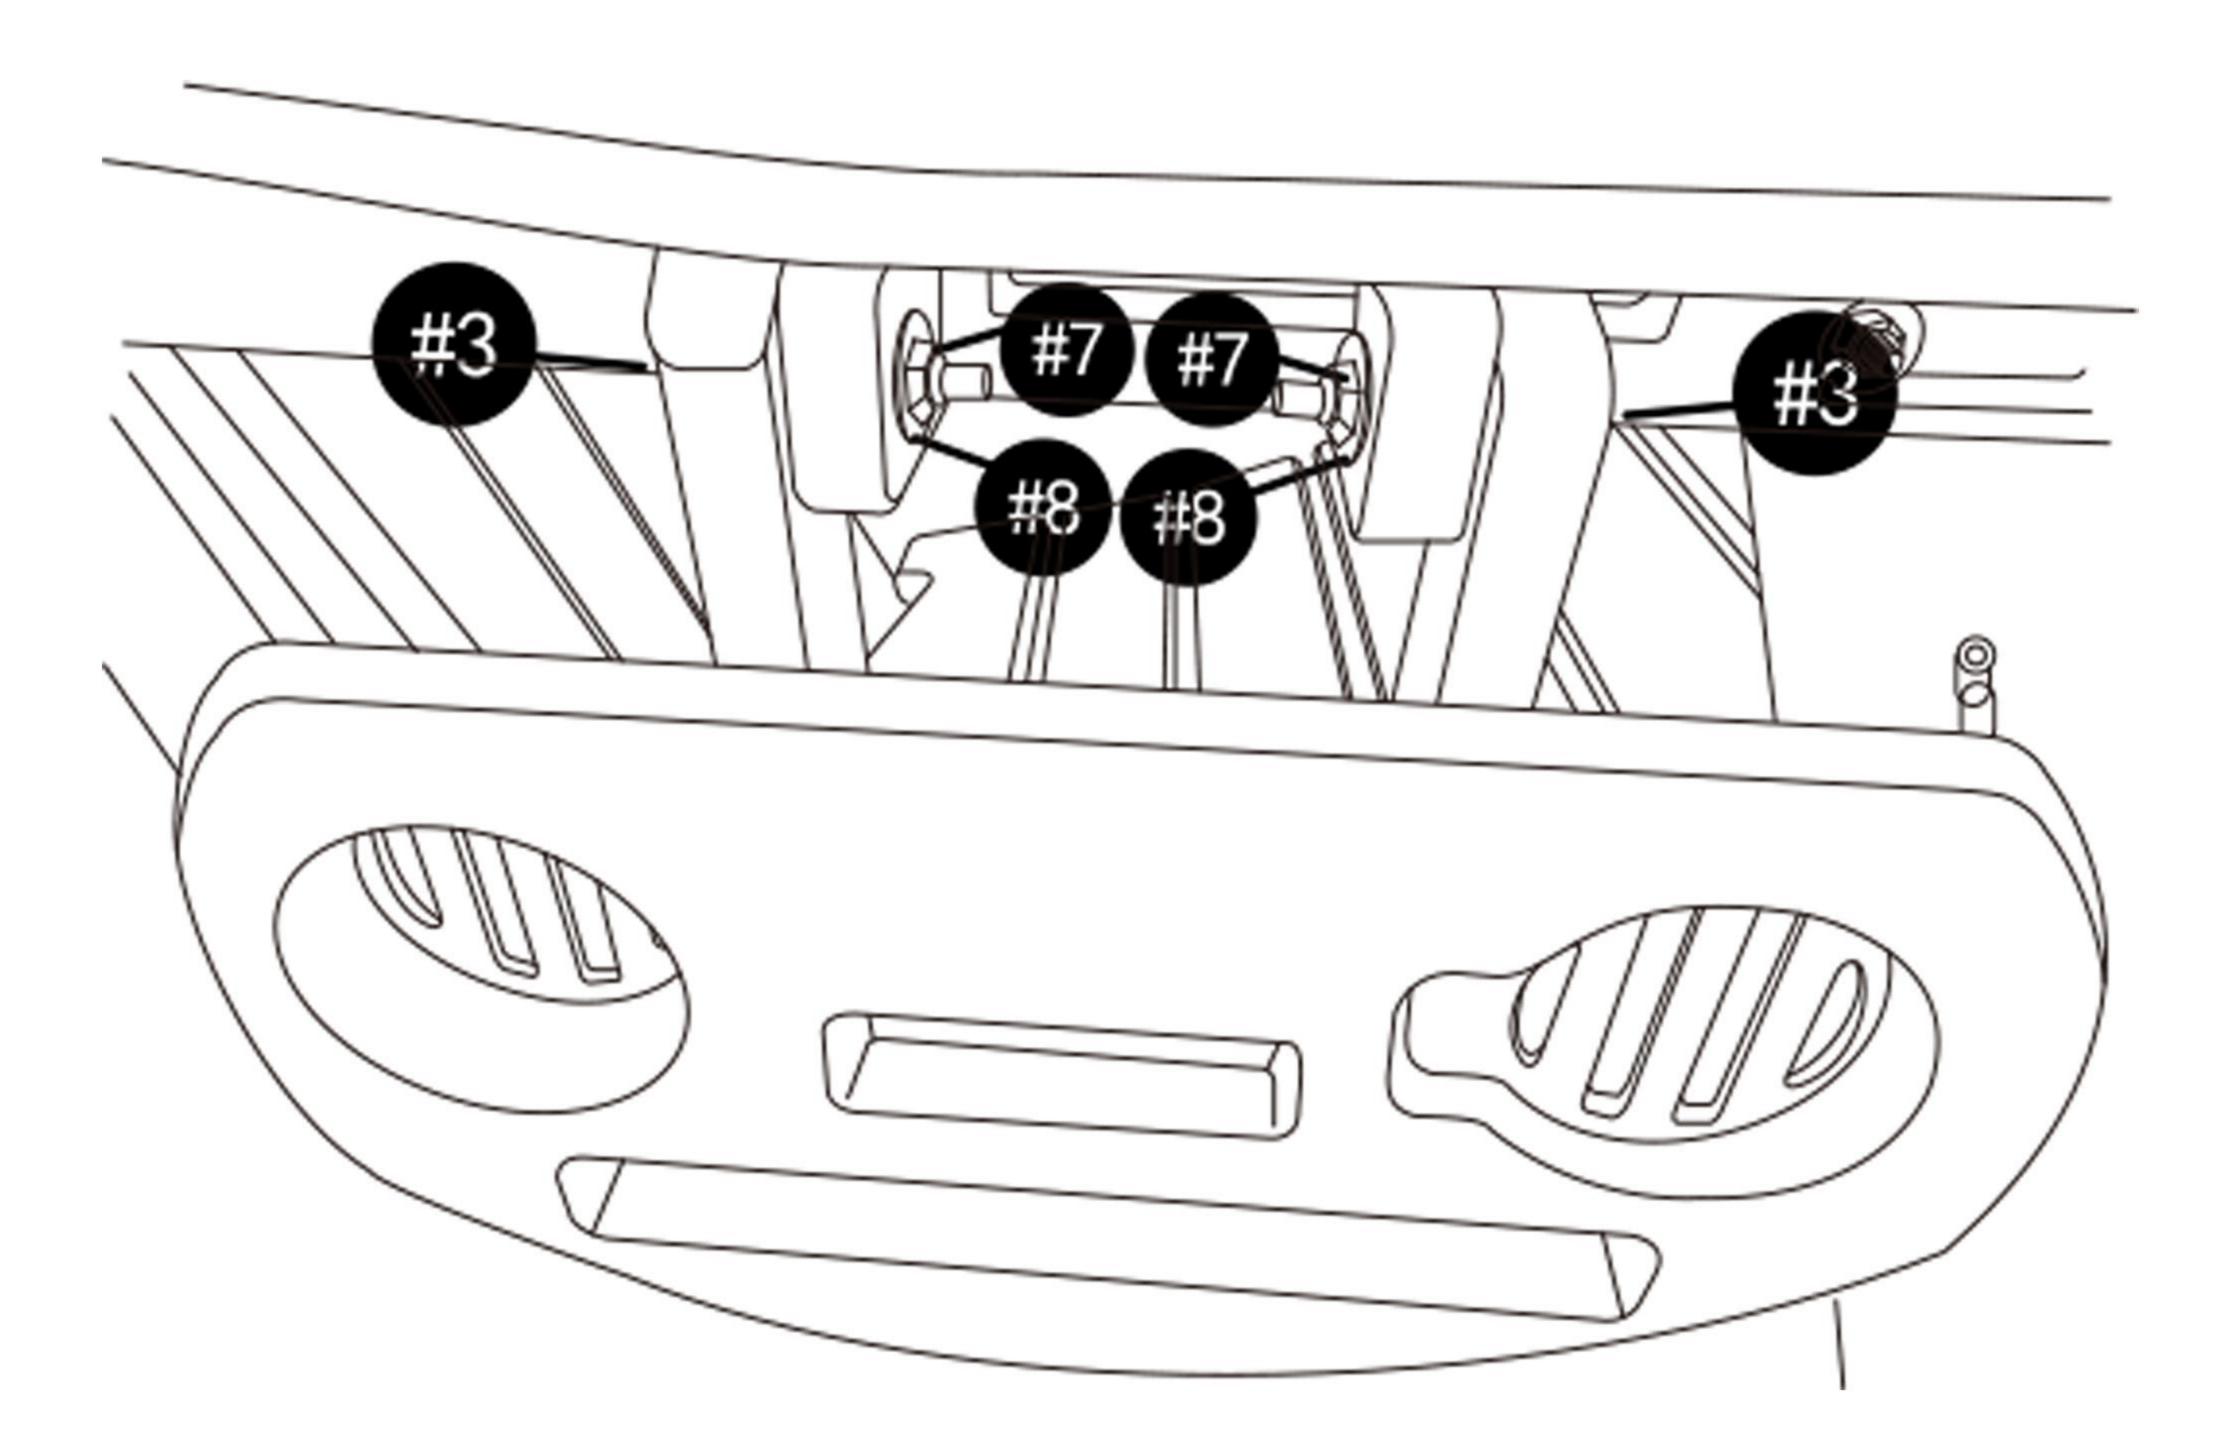

Step 7 Adjust this Reclining Chair.

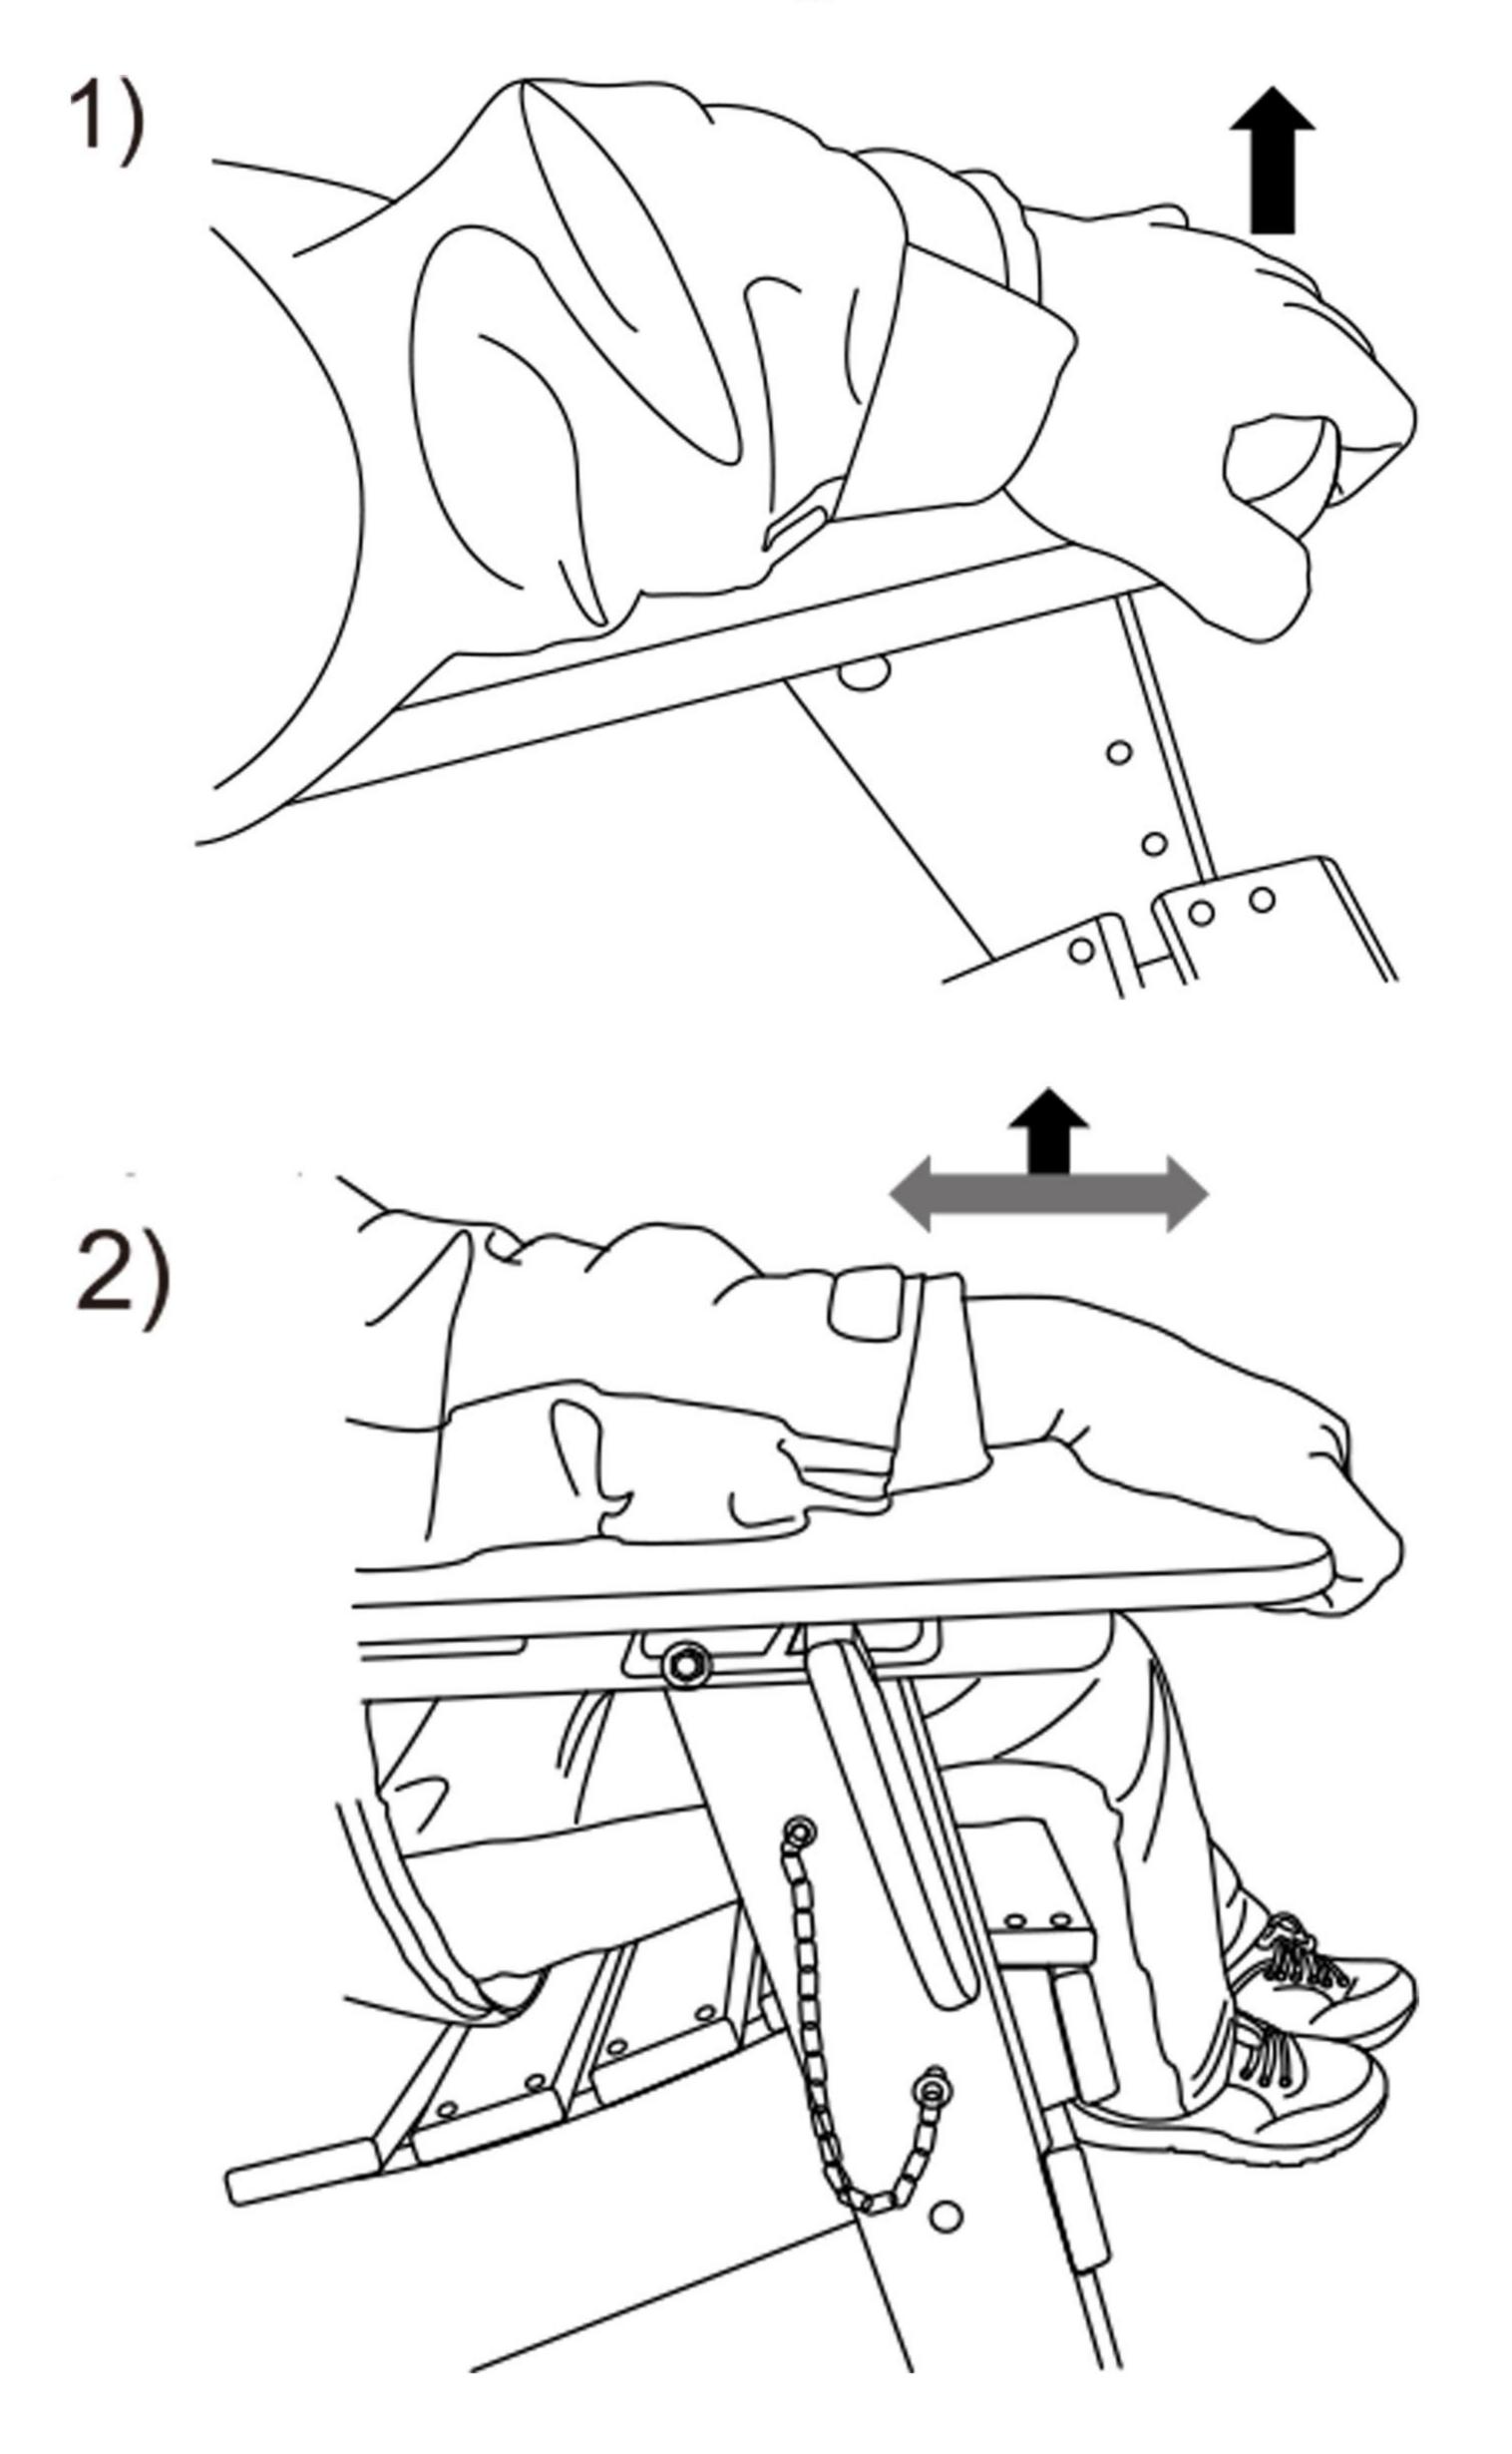

Step 8 Fold and Unfold This Reclining Chair

Push Back the Stool first, Loosen and Take off the Chain Bolts on

Both Legs then fFold Inwards The Chair Back and Seat Gently.

