


AI-BEC66TC

Assembly Instructions

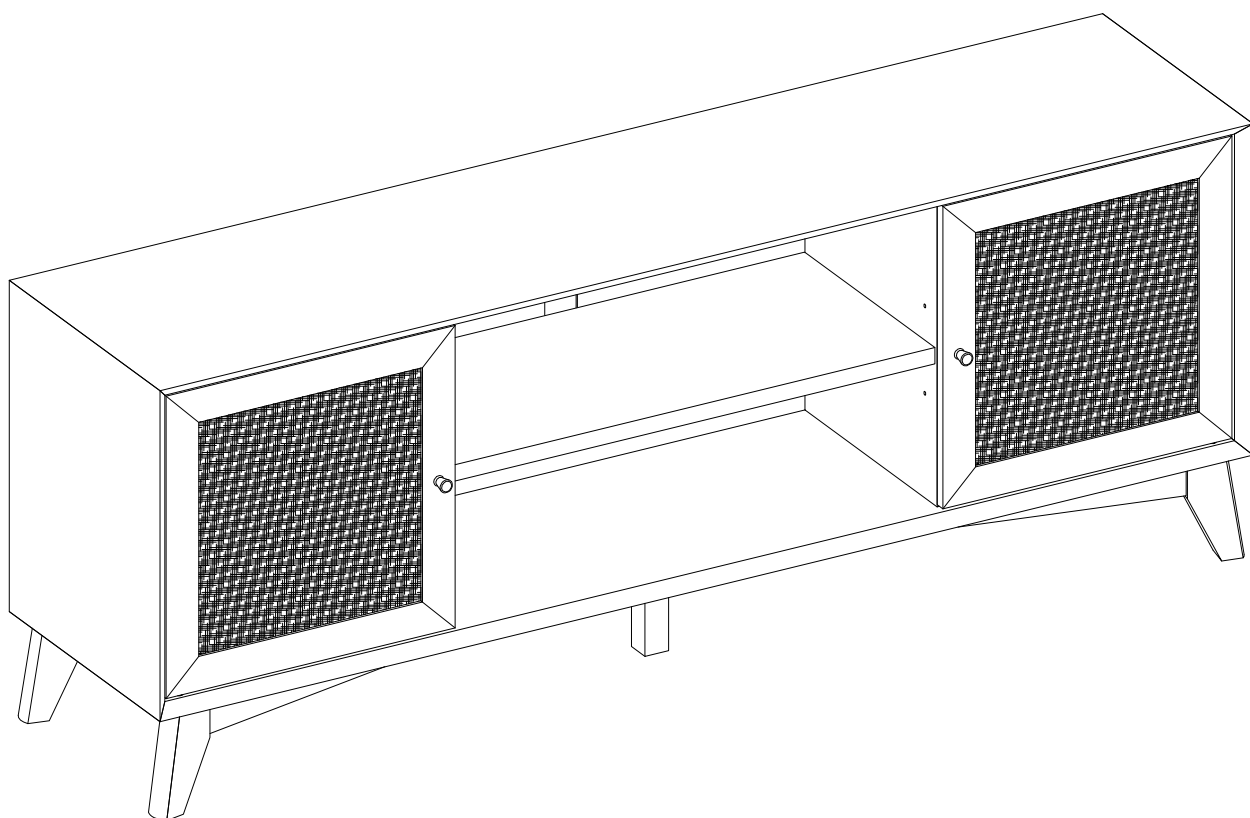

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.




- VI. A Phillips head screwdriver is required for the assembly of this product .

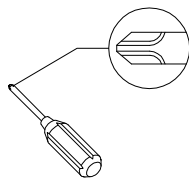



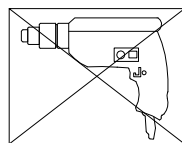






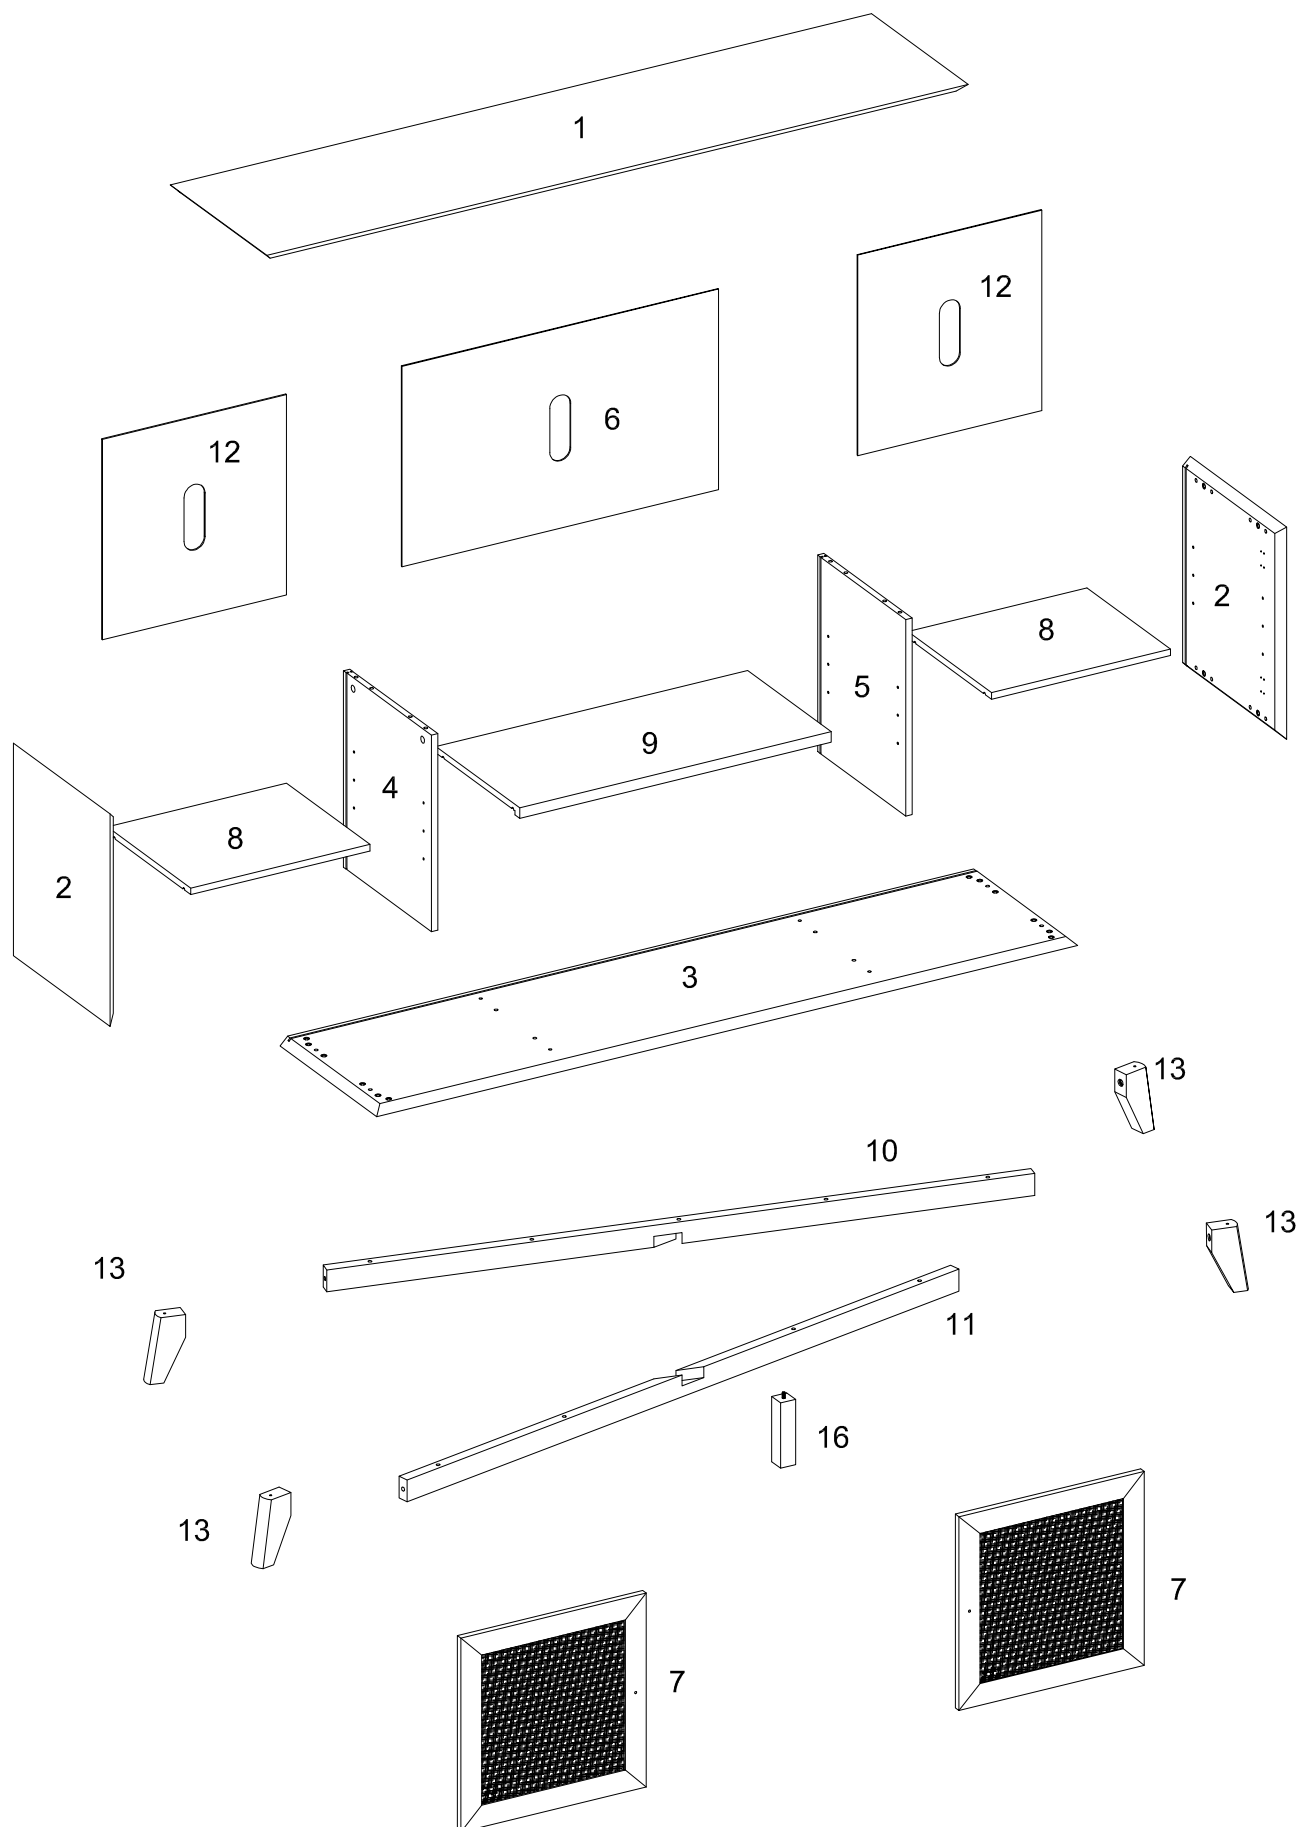








- VII. Power tools should not be used to assemble this product .




Parts List




Hardware List

A		Ø8x30mm	Wooden dowel	12 pcs
B		Ø6x35mm	Cam bolt	4 pcs
C		Ø15x11mm	Cam lock	4 pcs
D		Ø30mm	Sticker	8 pcs
E			Glue tube	1 pc
F			Plastic wedge	14 pcs
G		Ø3x17mm	Flat-head screw	14 pcs
H		Ø4x22mm	Handle bolt	2 pcs
J			Handle	2 pcs
K		Ø6x13mm	Bolt	24 pcs
L		Ø5x16mm	Shelf support pin	12 pcs
M			Europe hinge	4 pcs
N		Ø3.5x14mm	Screw	24 pcs
P		Ø6x50mm	Screw	8 pcs
Q		Ø6x55mm	Bolt	5 pcs
R			Connector	8 pcs
S		M 4	Hex key	1 pc
T		Ø38mm	Sticker	4 pcs


Hardware List

U		Ø8x60mm	Bolt	4 pcs
V			Washer	4 pcs
W		Ø5/16mm	Nut	4 pcs
X		Ø5/16mm	Wrench	1 pc
Y			Tipping Restraint Hardware	2 set

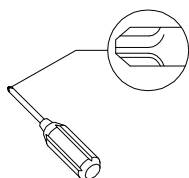


Philips head screwdriver required for assembly
(not included)


Step 1

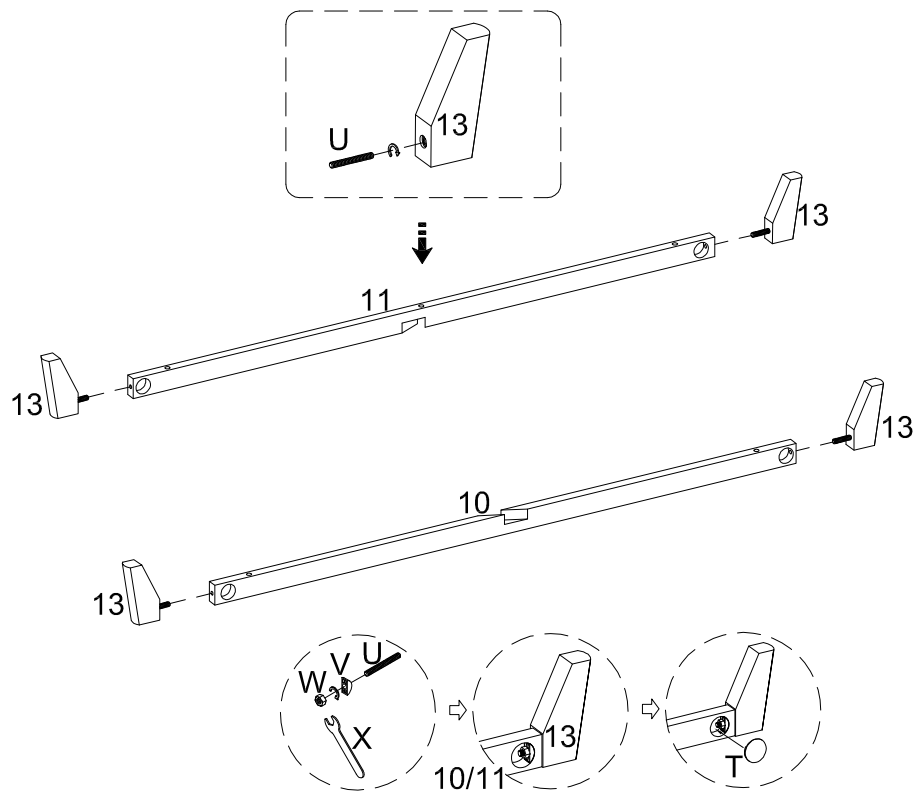


Step 2

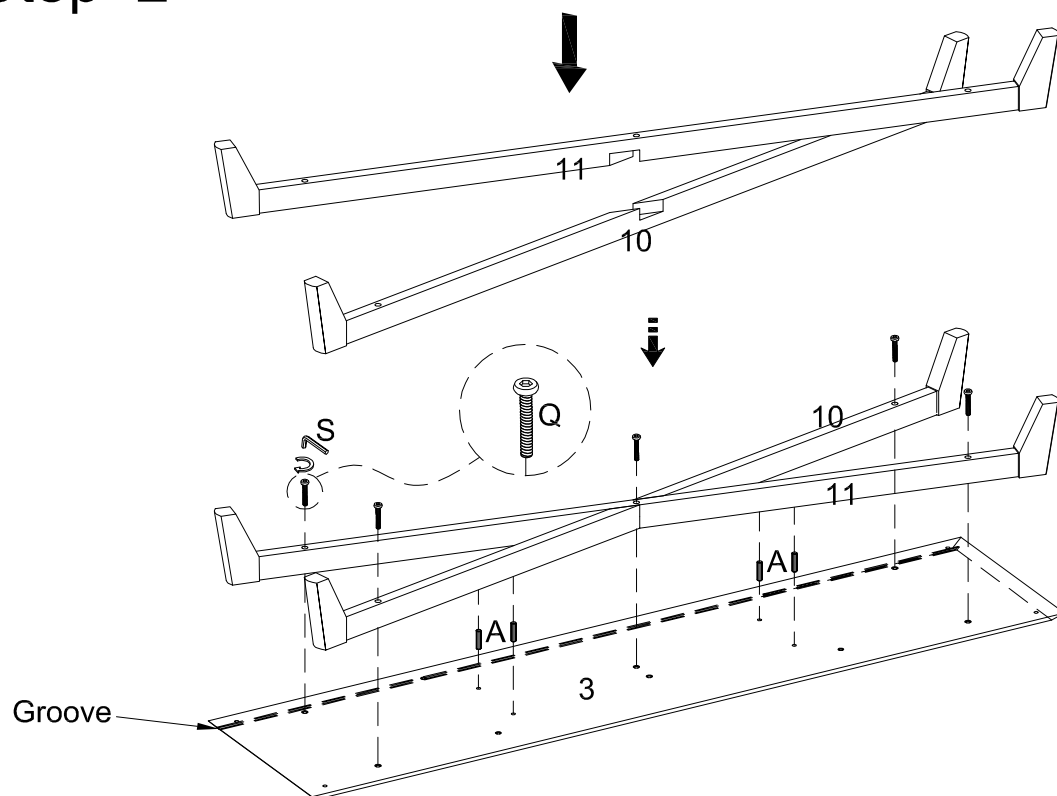


Step 3

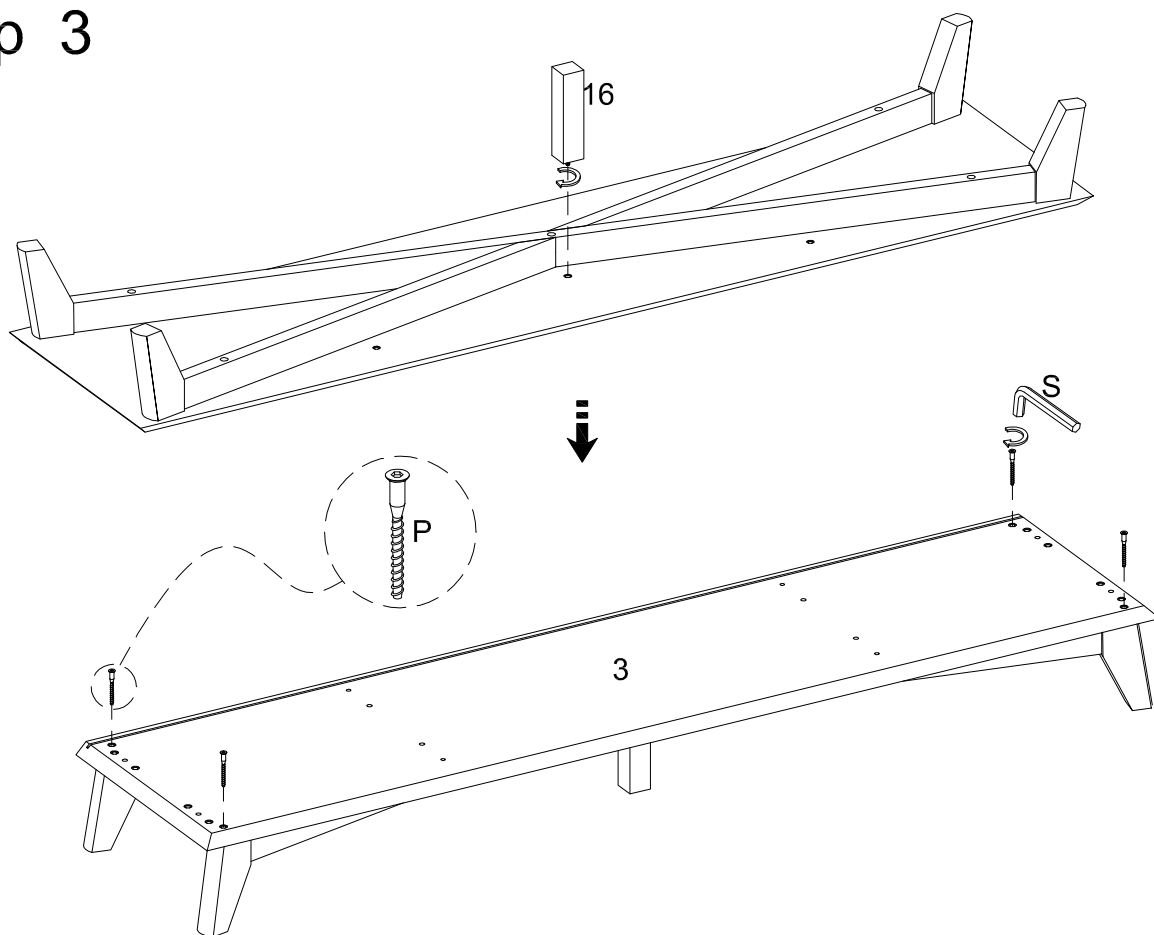


Step 4

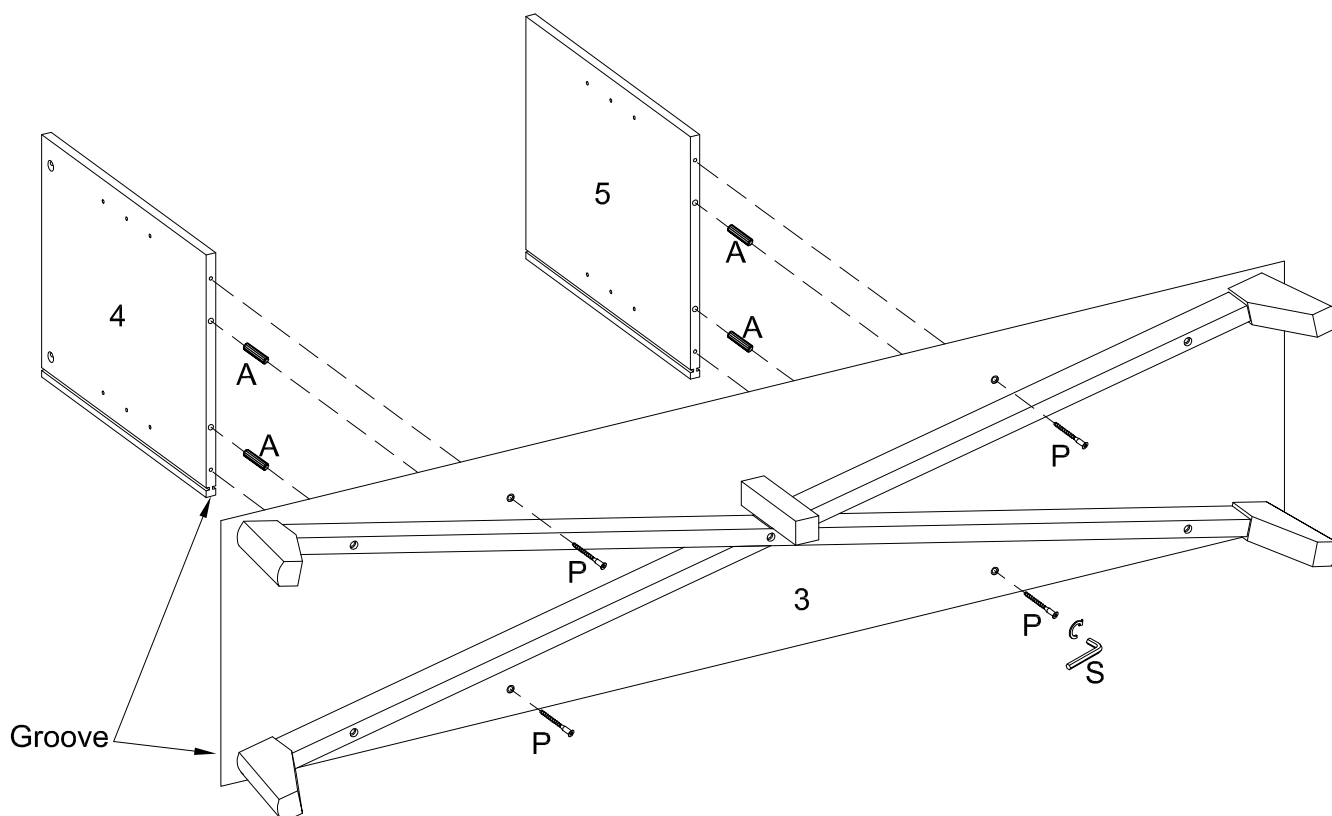


Step 5

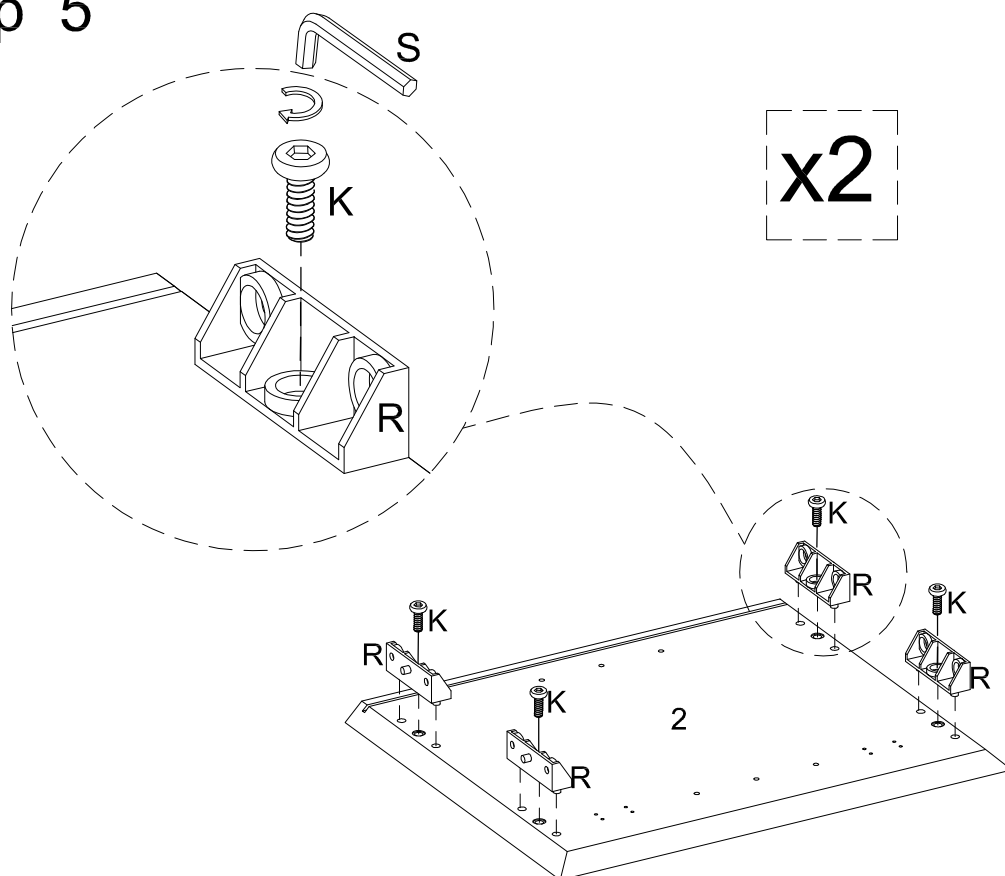


Step 6

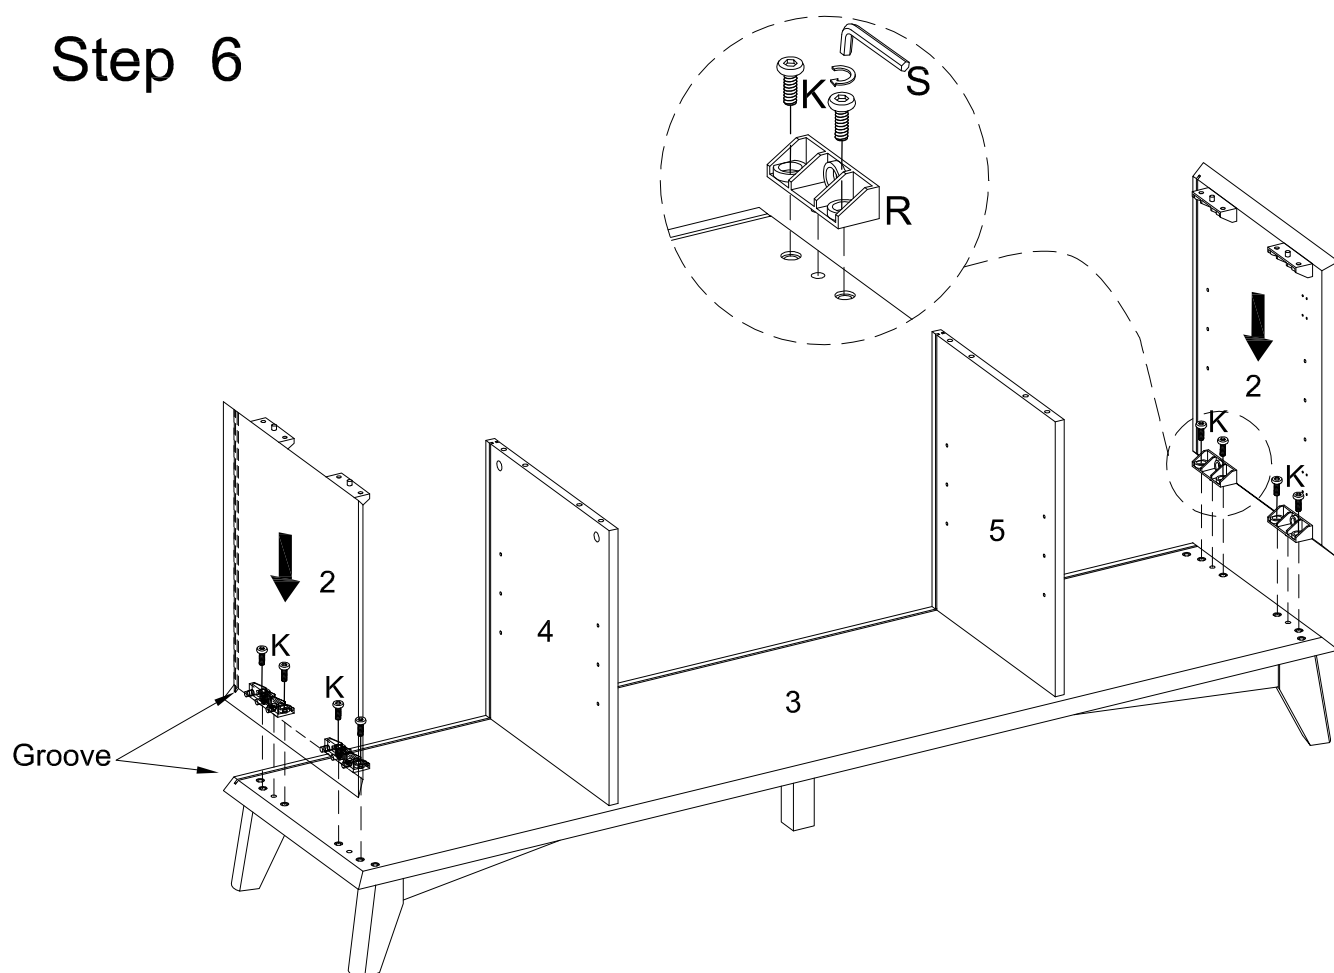



Step 7

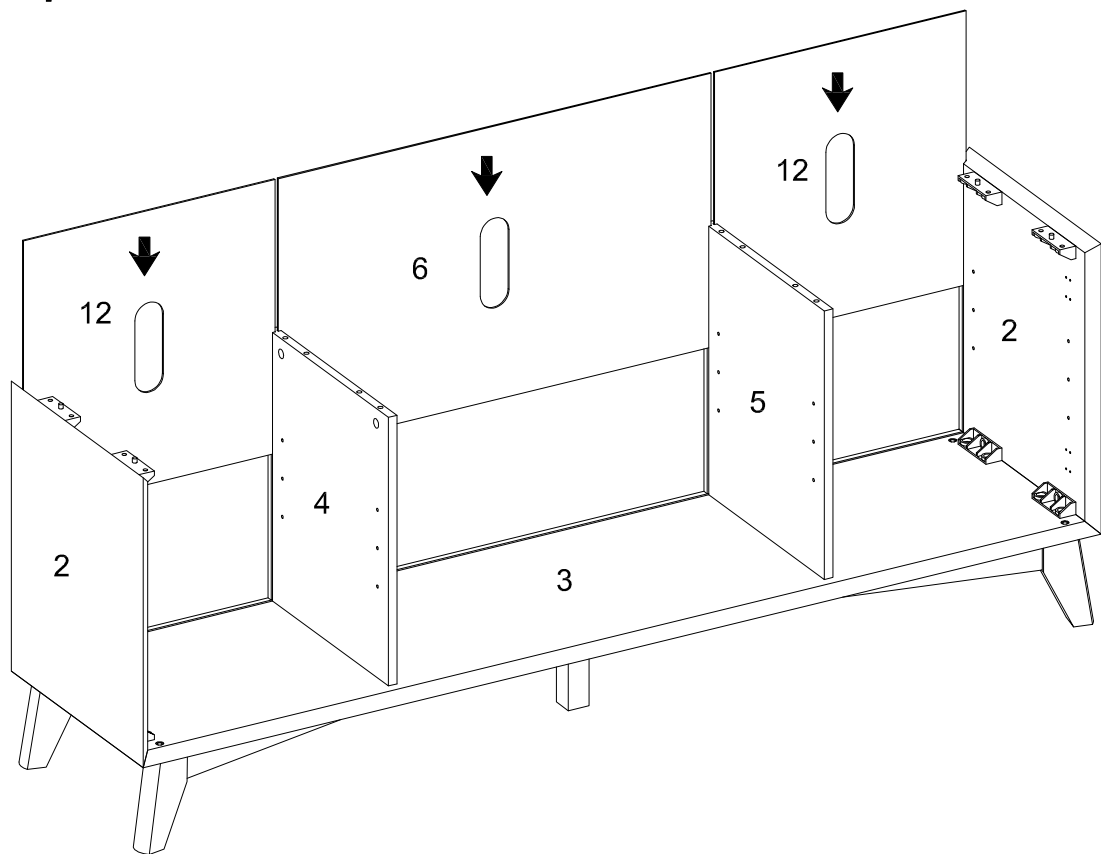


Step 8

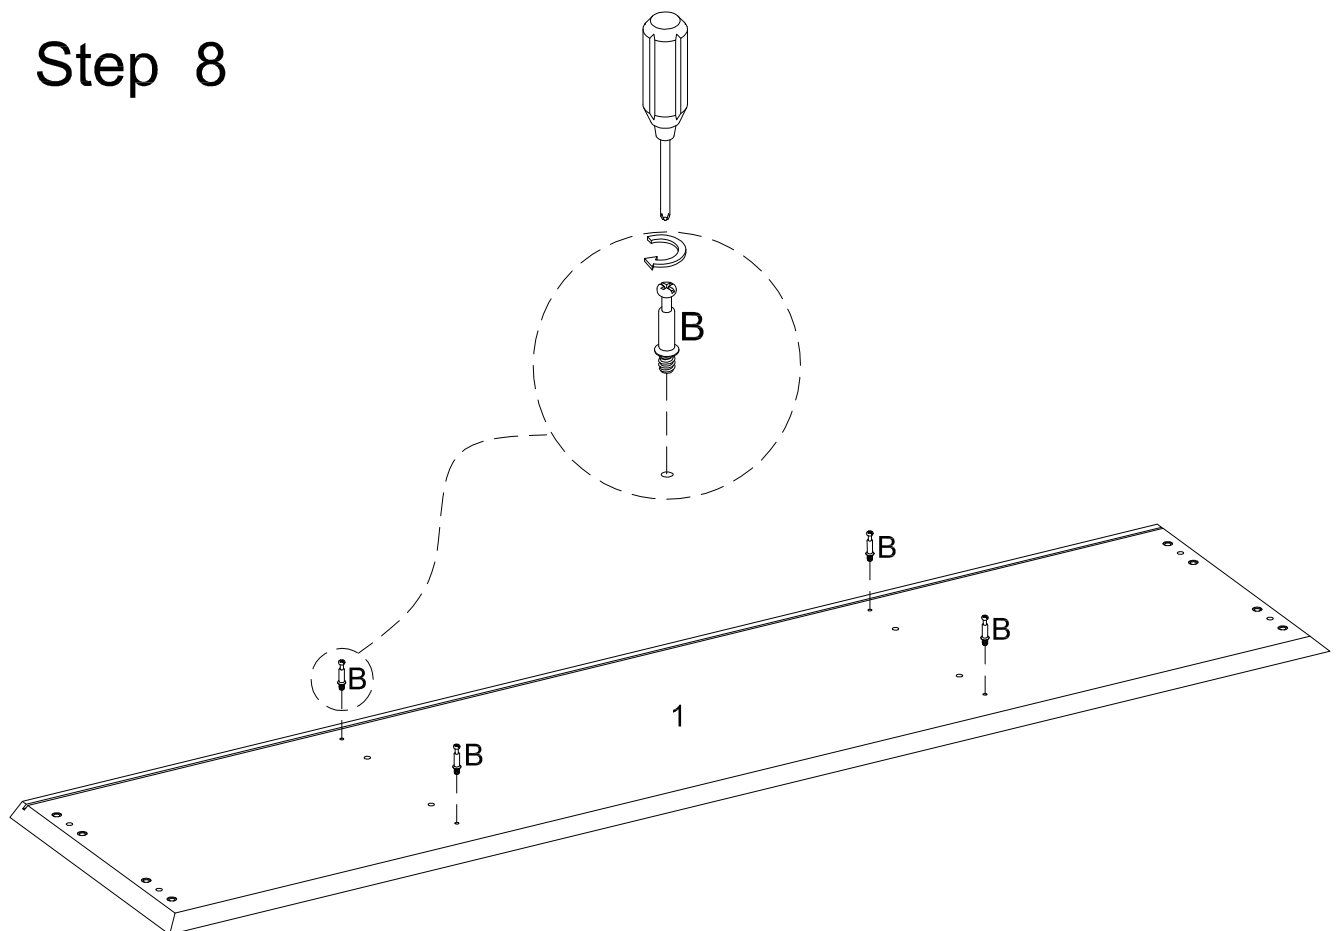


Step 9

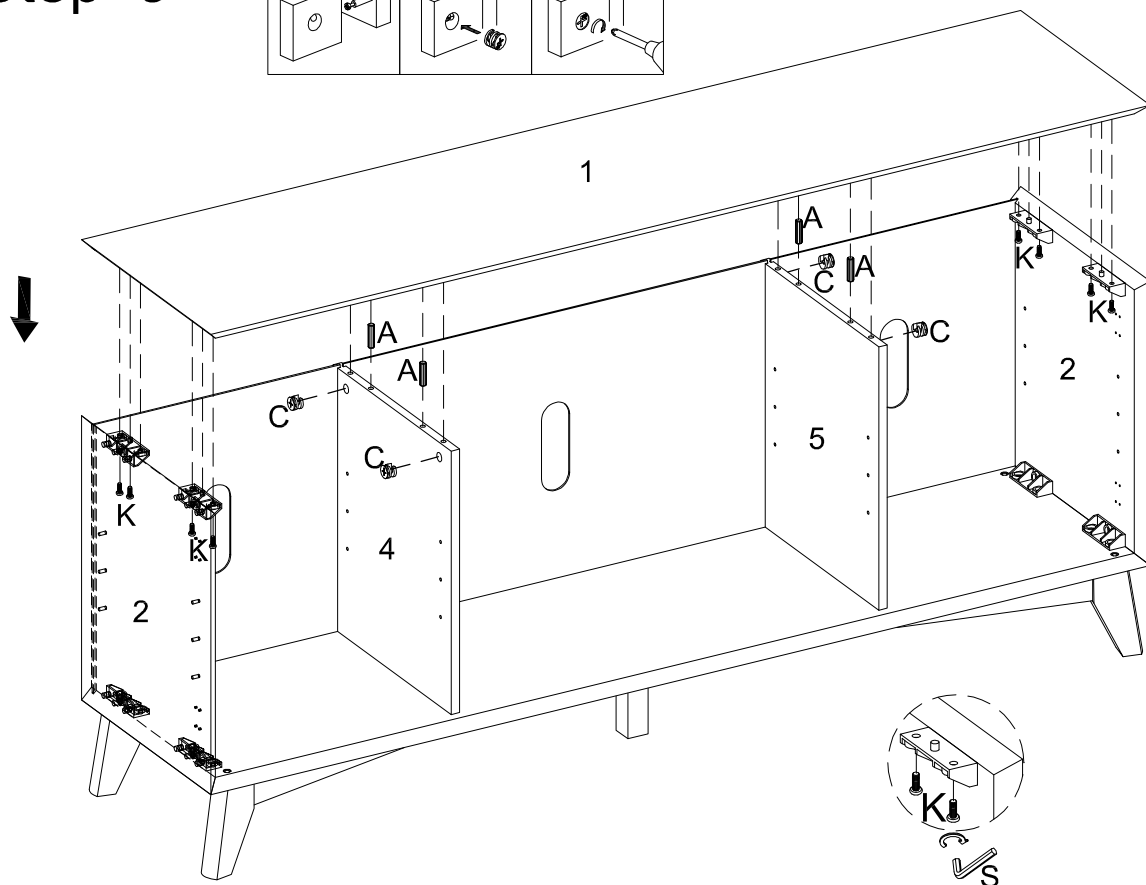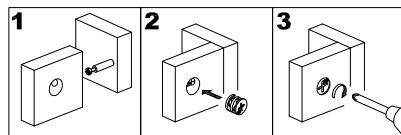


Step 10

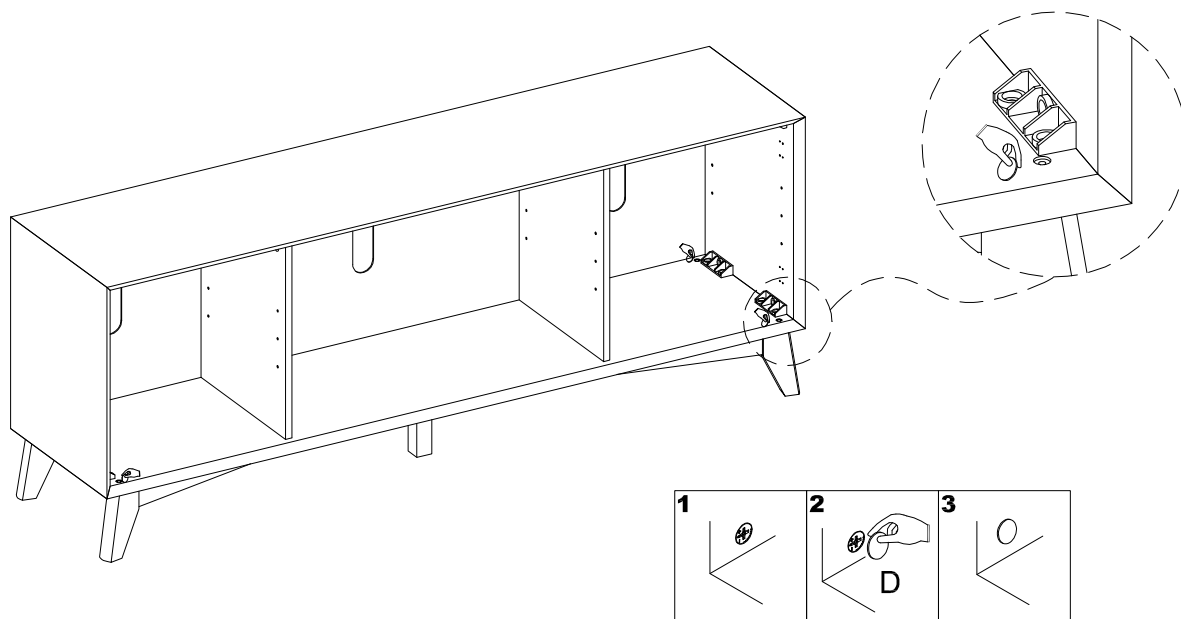


Step 11

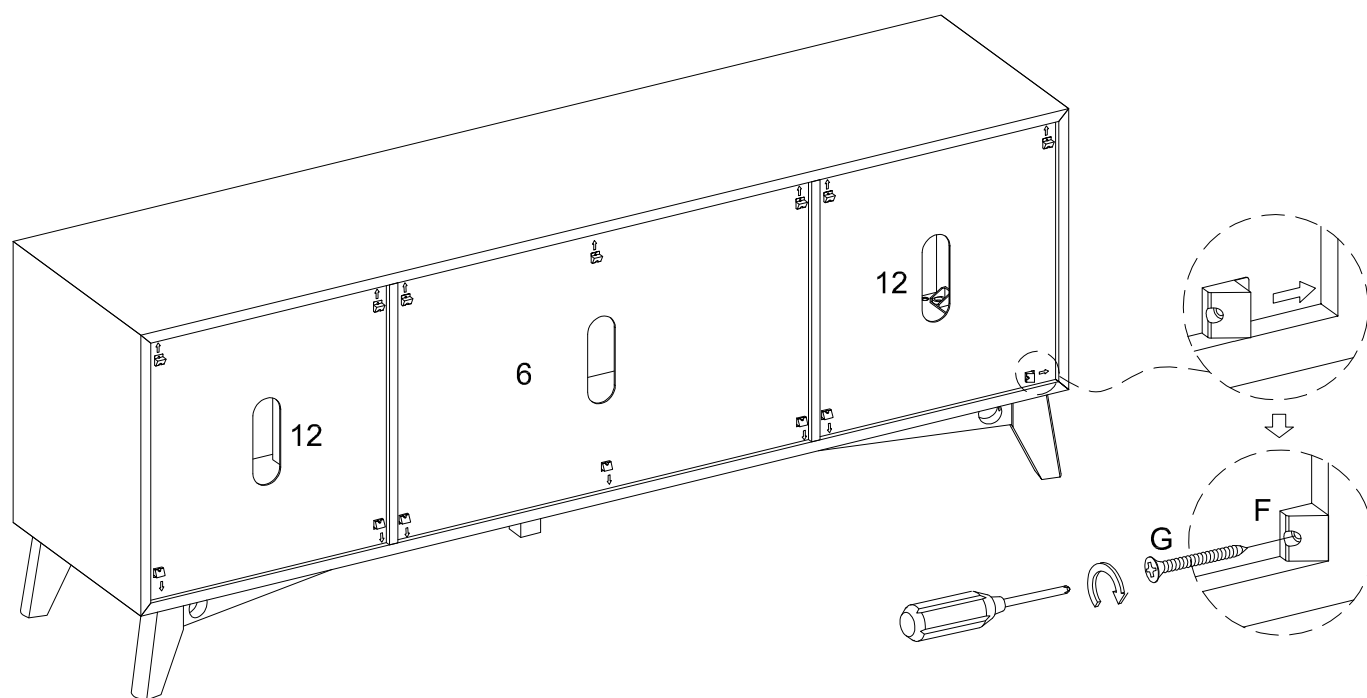


Step 12

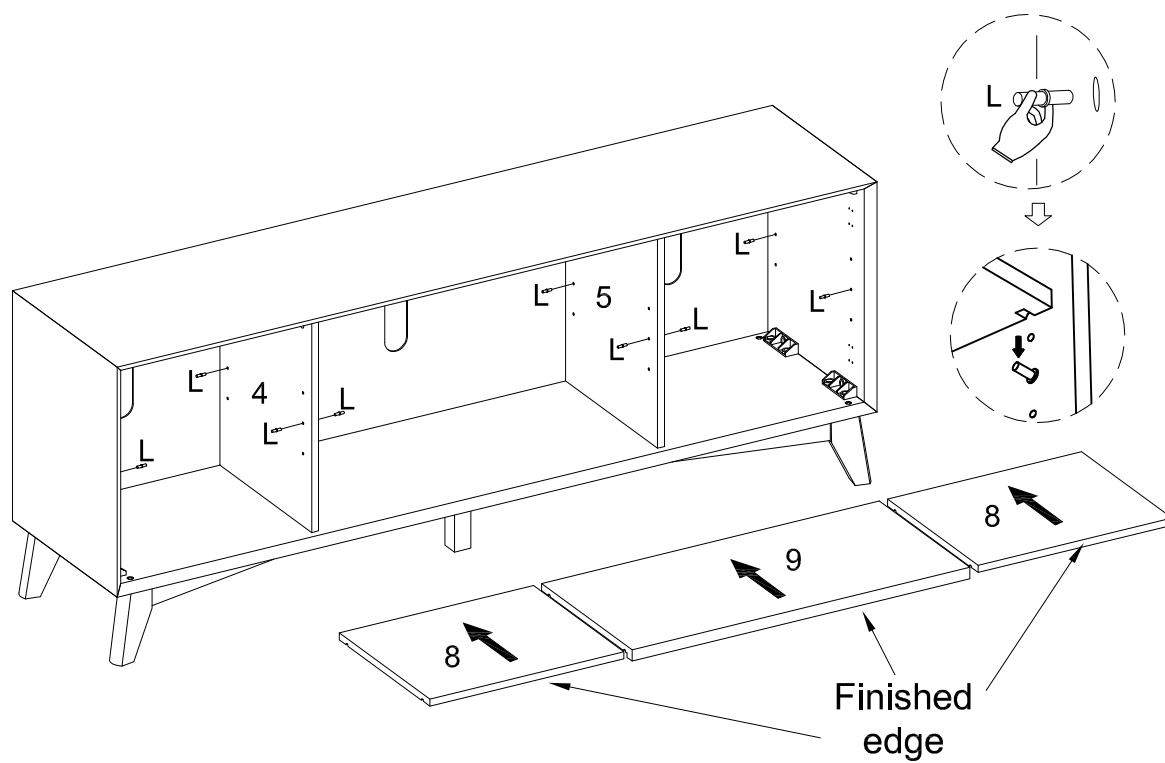


Step 13

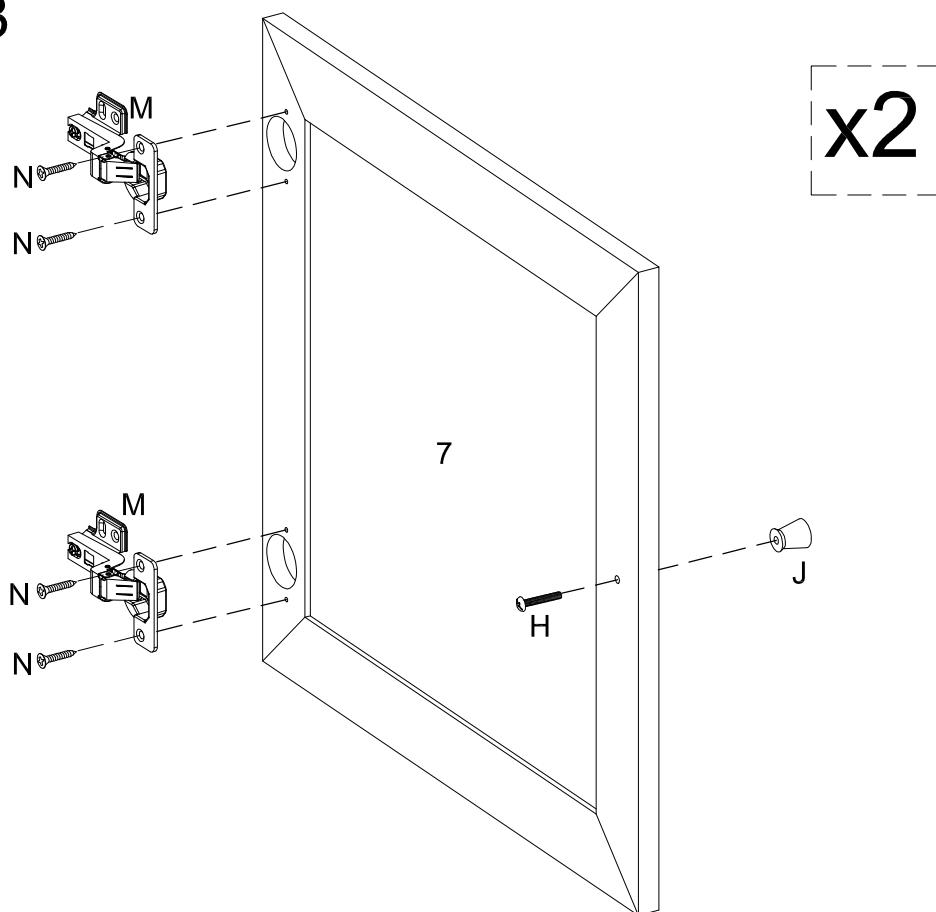


Step 14

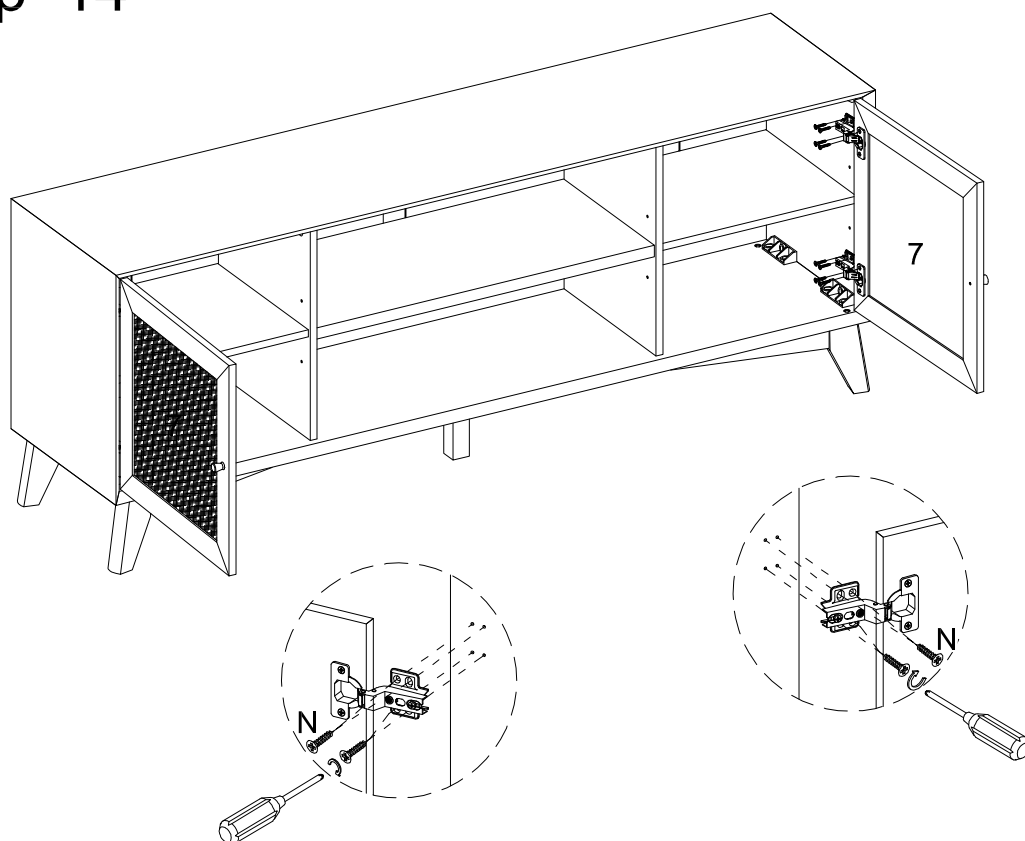

Step 15

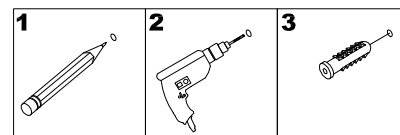

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

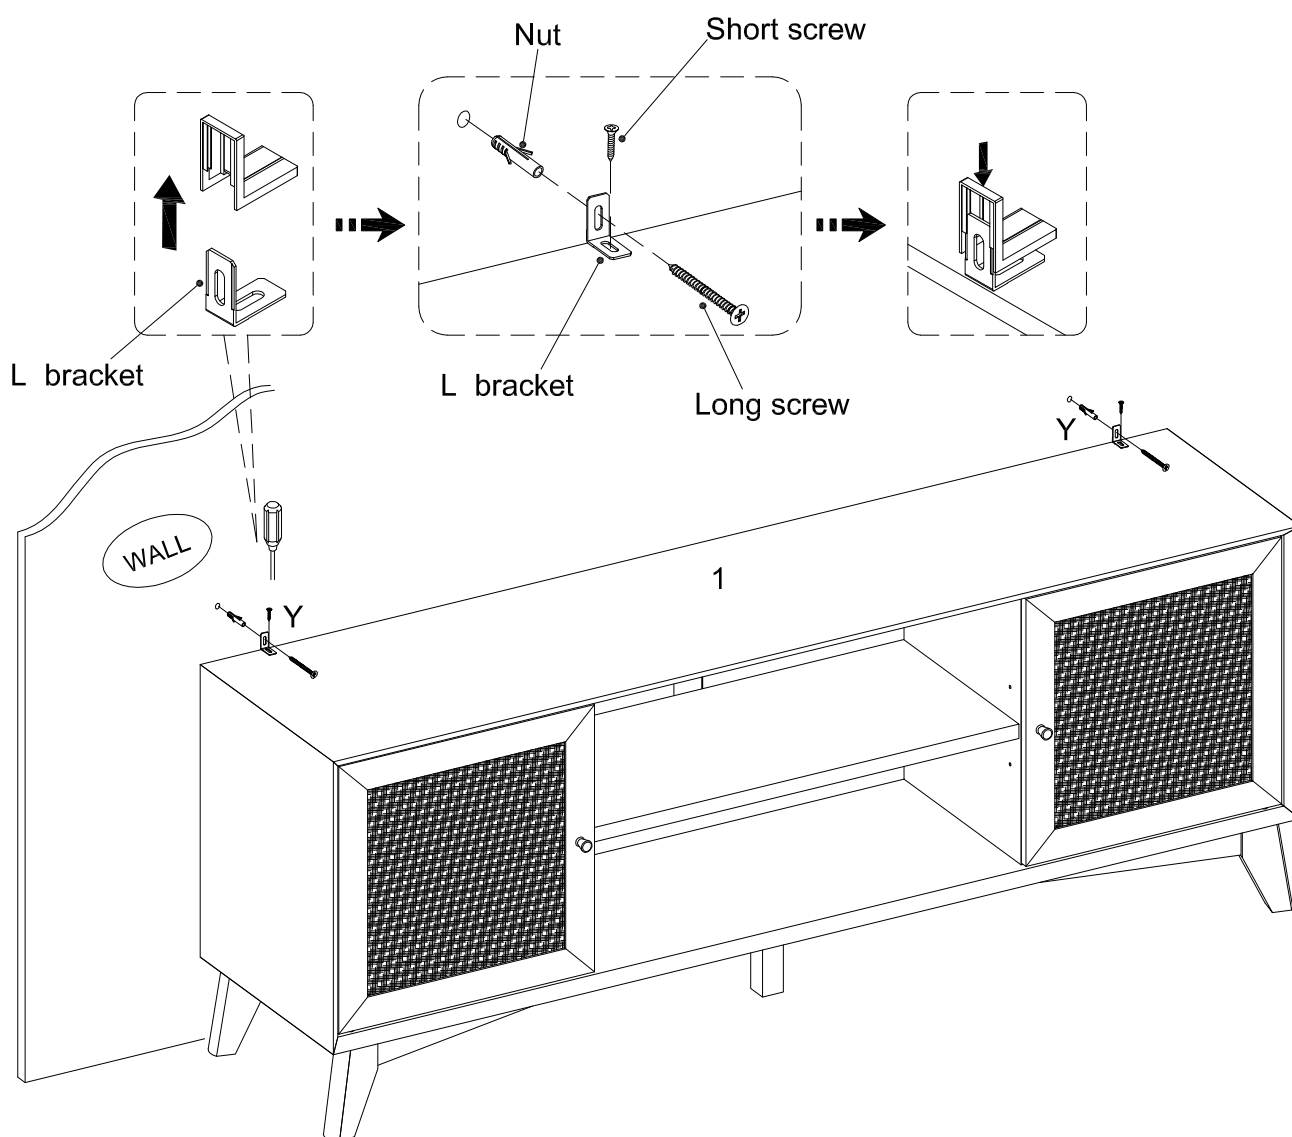

Final Assembly