


Installation Guide

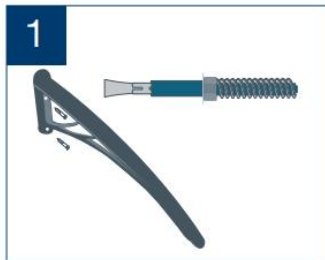

Attach one of the brackets to the wall in the desired location, using the anchor bolts.



Snap the start and finish trim into the foam polycarbonate sheet.



Attach the iron to the already installed support, using the corresponding dowels and screws.



Attach the other end of the iron to the second bracket, use the corresponding dowels and screws.



Finally attach the second bracket to the wall, using the anchor bolts included in the Kit.