








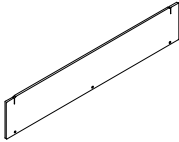


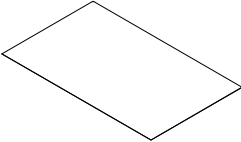

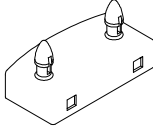
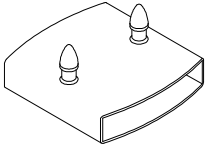








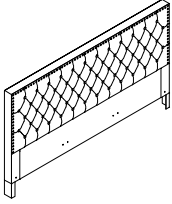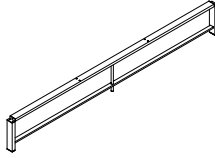













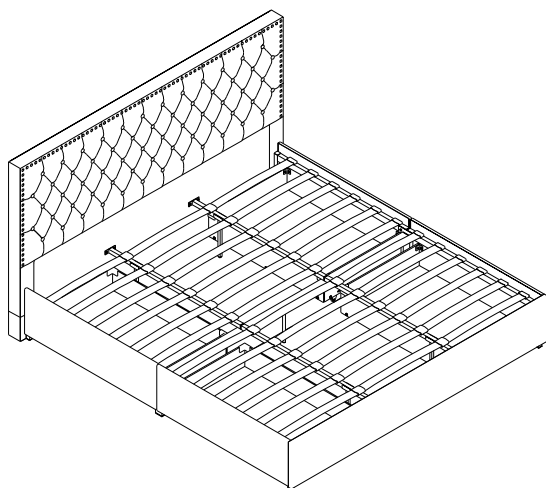


# ASSEMBLY INSTRUCTION

## UPHOLSTERED STORAGE PLATFORM EASTERN KING BED

<b>A</b> Headboard	<b>B</b> Footboard	<b>C</b> Center Support Bar	<b>D</b> Rail Section - Front
			
1PC	1PC	1PC	2PCS
<b>E</b> Rail Section - Rear	<b>F</b> Center Rail - Front / Rear	<b>G</b> Center Support Leg	<b>H</b> Drawer Front Board
			
2PCS	4PCS	4PCS	4PCS
<b>I</b> Drawer Side Board	<b>J</b> Drawer Back Board	<b>K</b> Drawer Bottom Frame	<b>L</b> Drawer Bottom Board
			
8PCS	4PCS	4PCS	4PCS
<b>M</b> Fabric Cover	<b>N</b> Slat	<b>O</b> Side Slat Connector	<b>P</b> Center Slat Connector
			
1PC	36PCS	24PCS	24PCS
<b>Q</b> Drawer Board Connector	<b>R</b> Wheel	<b>S</b> Left Leg	<b>T</b> Right Leg
			
8PCS	20PCS	1PC	1PC
<b>U</b> Bracket 120*42*27*2mm	<b>V</b> Bracket 27*27*30*2mm	<b>W</b> Bolt 5/16"*72mm	<b>X</b> Bolt 1/4"*19mm
			
2PCS	8PCS	4PCS	6PCS



<b>Y</b> Bolt 1/4"*17.5mm	<b>Z</b> Bolt 1/4"*40mm	<b>AA</b> Bolt 3/16"*19mm	<b>AB</b> Bolt 3/16"*8mm
			
<b>AC</b> 24PCS Bolt 1/4"*13mm	<b>AD</b> 12PCS Bolt 1/4"*19mm	<b>AE</b> 36PCS Bolt 1/4"*34mm	<b>AF</b> 48PCS Nut 3/16"*6.5mm
			
<b>AG</b> 8PCS Washer Ø16mm	<b>AH</b> 4PCS Washer Ø19mm	<b>AI</b> 16PCS L-Allen Key 4mm	<b>AJ</b> 8PCS Ratchet Tool 4mm
			
<b>AK</b> 48PCS Nut 5/16"	<b>AL</b> 4PCS Wrench 1/4" - 5/16"	1PC	1PC
			
4PCS	1PC		



These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


# How to Use the Ratchet Tool (AJ)

1. Before assembling the furniture, please adjust the lock as needed.

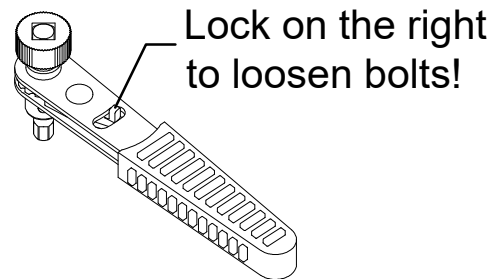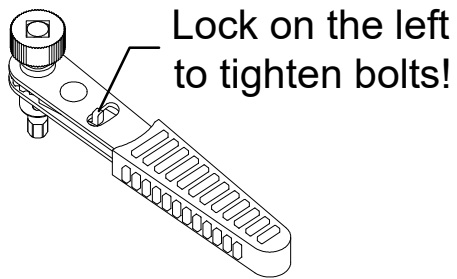


2. Tighten or loosen bolts.

- **Tighten bolts:** Locate the turncap and rotate it clockwise to screw the bolt quickly until it cannot be rotated any more. Then start rotating the handle clockwise to finalize tightening the bolt.

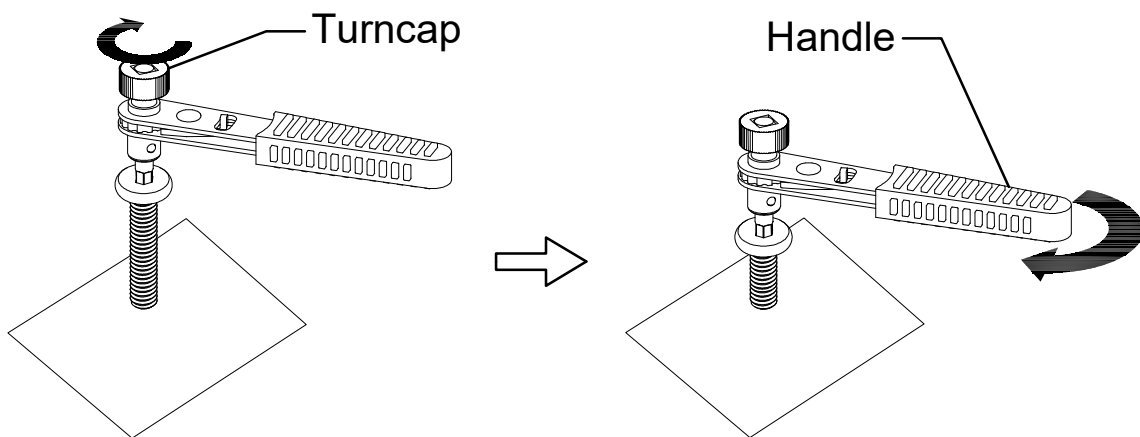


- **Loosen bolts:** Rotate the handle counterclockwise to loosen the bolt. Then continue rotating the turncap in the same direction to remove the bolt completely.

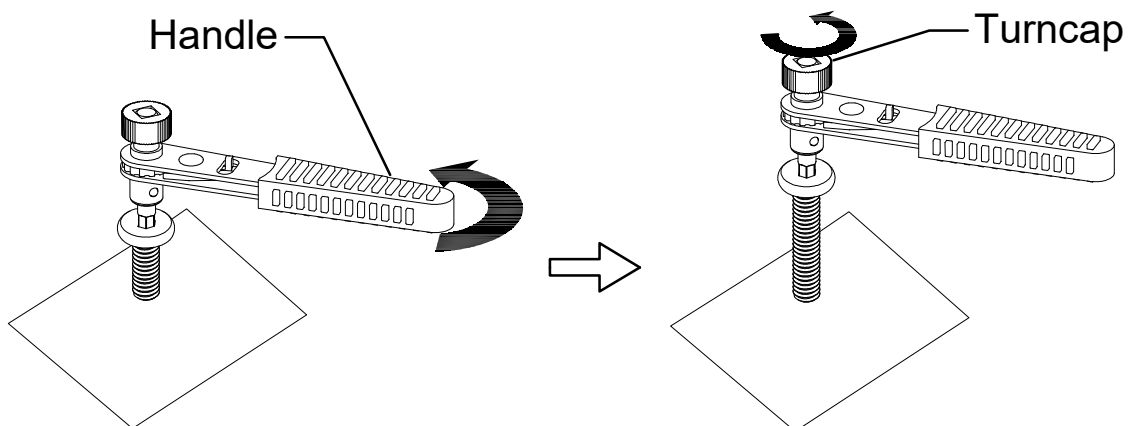


1

Attach the Bracket (U) to Center Support Bar (C), insert the Bolt (X), turn the Ratchet Tool (AJ) to tighten them.

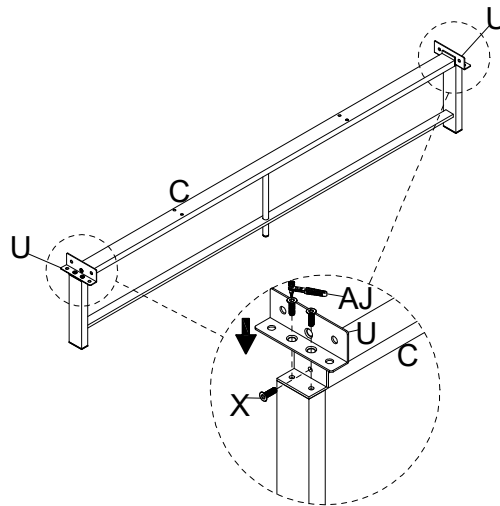


2

Attach the Bracket (U) to the Rail Section - Front (D) and Rail Section - Rear (E), insert the Bolt (Y), turn the Ratchet Tool (AJ) to tighten them.

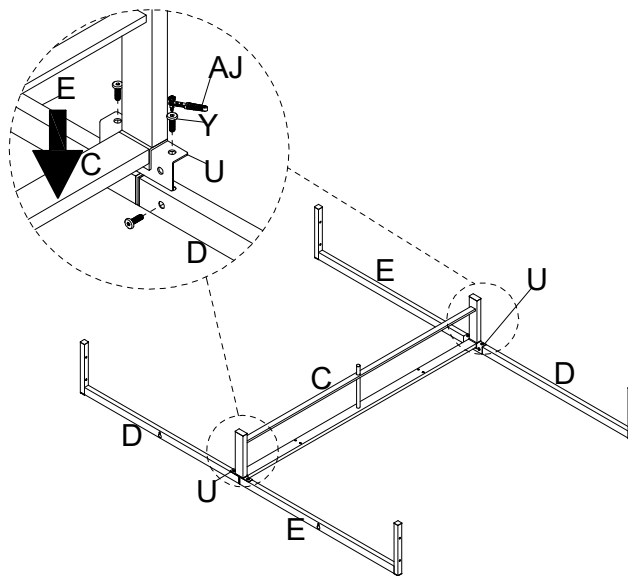


3

Insert and tighten the Bolt (W) to the Left Leg (S) and Right Leg (T). Then attach the Left Leg (S) and Right Leg (T) to the Headboard (A) by Bolt (W), insert the Washer (AH) and Nut (AK), turn the Wrench (AL) to tighten them.

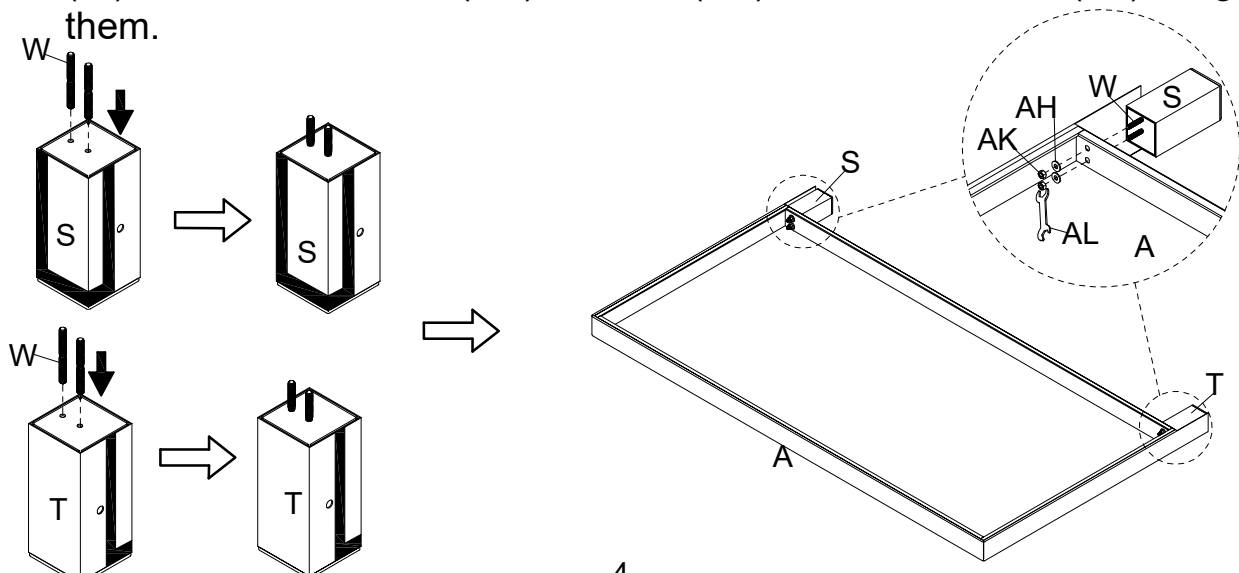


4

Cover the Fabric Cover (M) to the Headboard (A). Attach the Headboard (A), Footboard (B), and Legs (S) & (T) to the Rail Sections (D) & (E), insert the Bolt (Z), turn the Ratchet Tool (AJ) to tighten them.

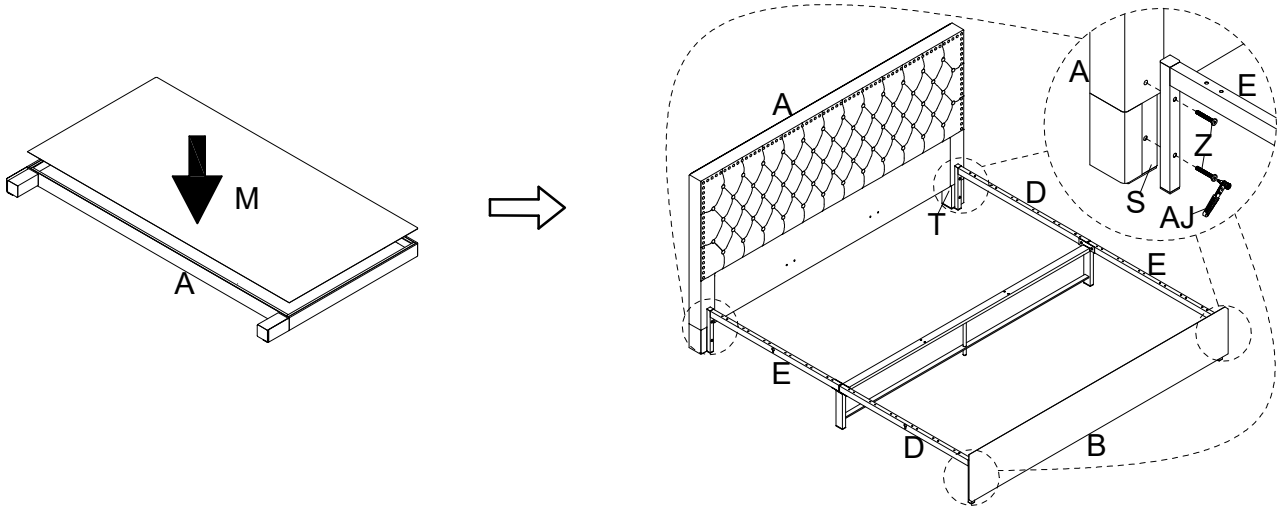


5

Attach the Center Support Leg (G) to the Center Rail - Front / Rear (F), insert the Bolt (Y), turn the Ratchet Tool (AJ) to tighten them.

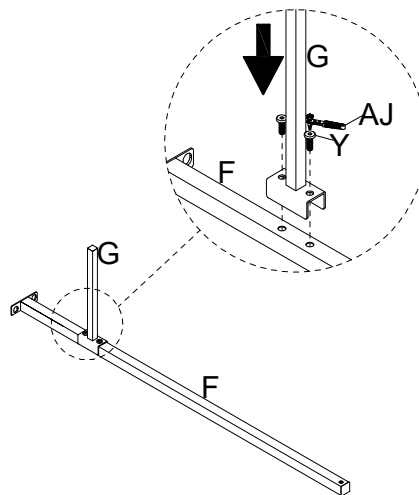


6

Attach the Center Rail - Front / Rear (F) to the Headboard (A) and the Footboard (B), insert the Bolt (Y), turn the Ratchet Tool (AJ) to tighten them. Then attach the Center Rail - Front / Rear (F) to the Center Support Bar (C), insert the Bolt (Z), turn the Ratchet Tool (AJ) to tighten them.

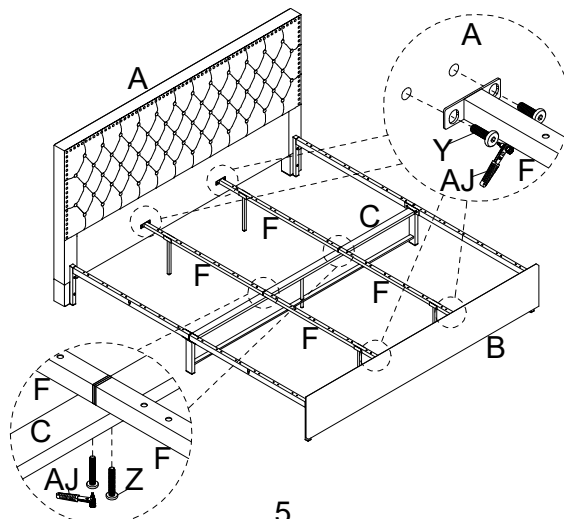


7

Insert the Side Slat Connector (O) to the Slat (N). Press the Side Slat Connector (O) to the holes of Rail Sections (D) & (E). Insert another side of Slat (N) to the Center Slat Connector (P), press the Center Slat Connector (P) to the holes of Center Rail - Front / Rear (F).

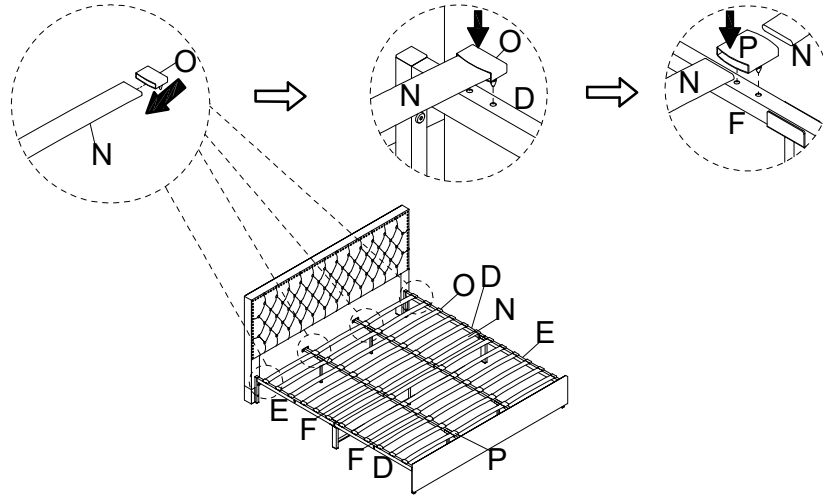


8

Attach the Wheel (R) to the Drawer Bottom Frame (K), insert the Bolt (AB), turn the Ratchet Tool (AJ) to tighten them.

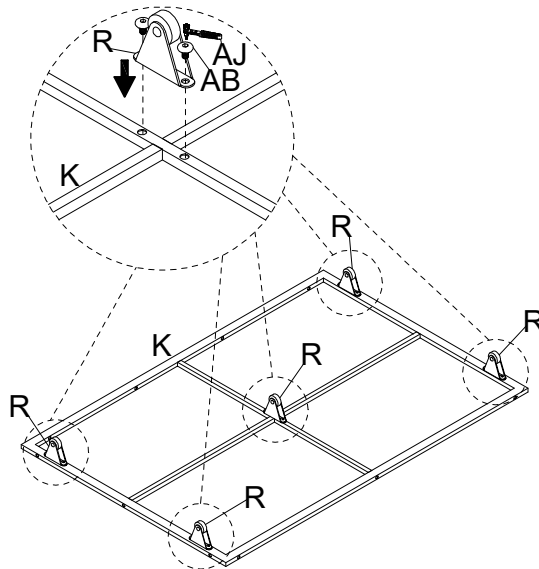


9

Attach the Drawer Front Board (H) to the Drawer Bottom Frame (K), insert the Bolt (AE), turn the Ratchet Tool (AJ) to tighten them.

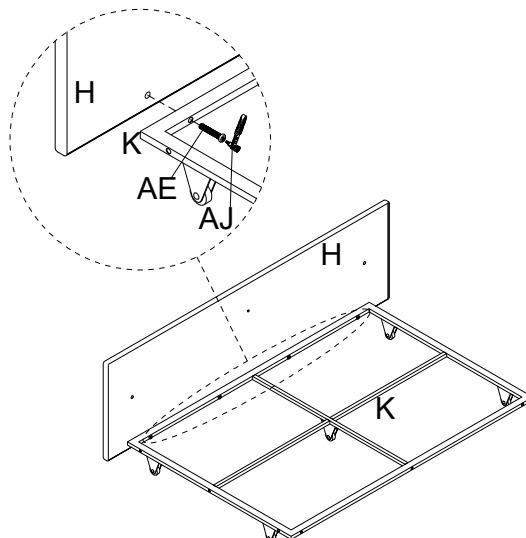


10

Attach one Drawer Side Board (I) to the Drawer Bottom Frame (K), insert the Bolt (AA) and Washer (AG), turn the Ratchet Tool (AJ) to tighten them.

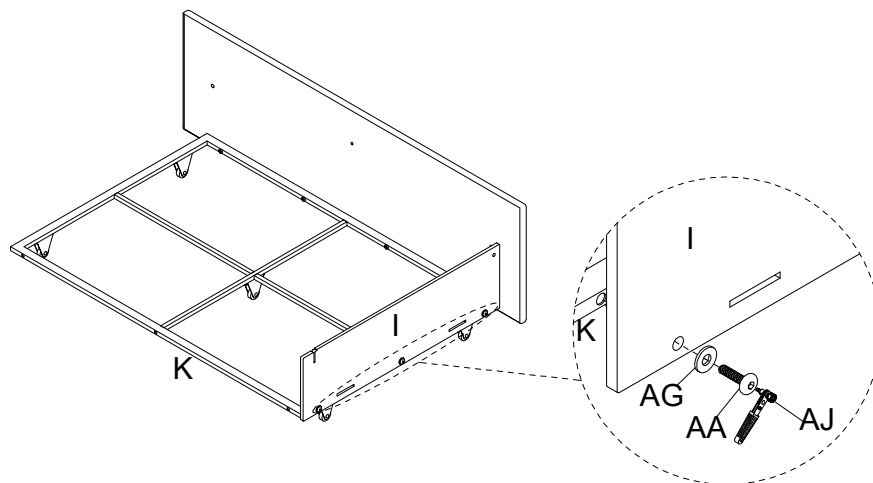


11

Insert the Drawer Bottom Board (L) to the Drawer Side Board (I).

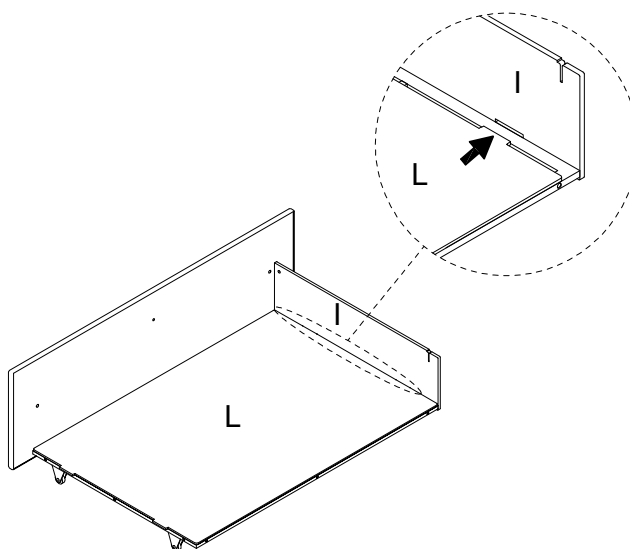


12

Insert another Drawer Side Board (I) to the Drawer Bottom Board (L) first, and attach the Drawer Side Board (I) to the Drawer Bottom Frame (K), then insert the Bolt (AA) and Washer (AG), turn the Ratchet Tool (AJ) to tighten them.

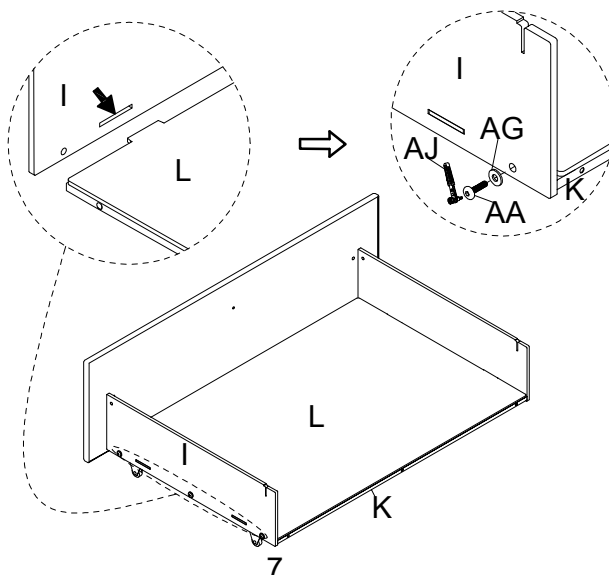


**13**


Attach the Drawer Back Board (J) to the Drawer Bottom Frame (K), insert the Bolt (AA) and Washer (AG), turn the Ratchet Tool (AJ) to tighten them. Attach the Drawer Board Connector (Q) to the assembled drawer, insert them into correct places.

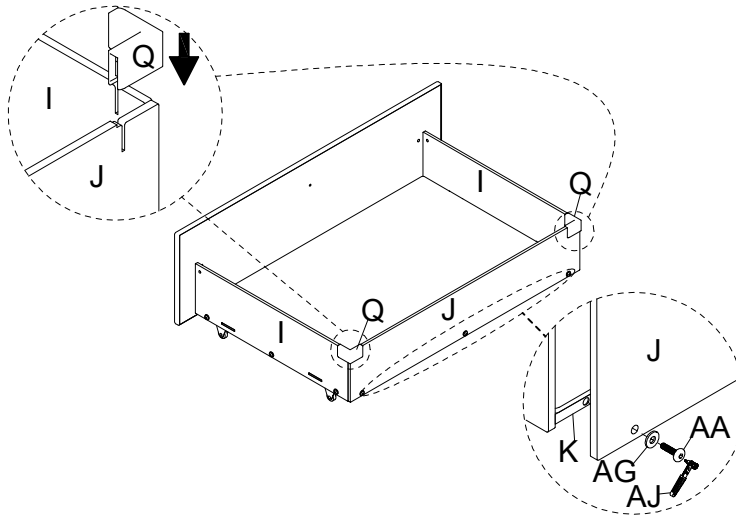**14**

Attach the Bracket (V) to the assembled drawer, insert the Bolt (AC), turn the Ratchet Tool (AJ) to tighten them. Then insert the Bolt (AB), Washer (AG) and Nut (AF), turn the L-Allen Key (AI) and Ratchet Tool (AJ) to tighten them.

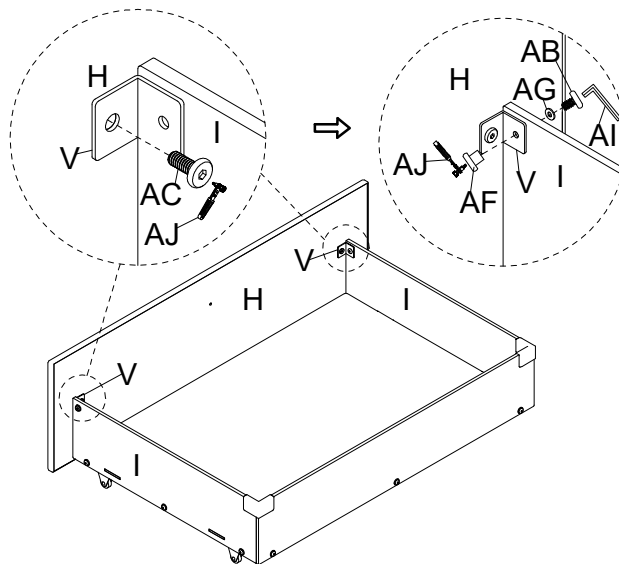**15**


Insert the Bolt (AD) and Washer (AG) to the back of Drawer Front Board (H), turn the Ratchet Tool (AJ) to tighten them.

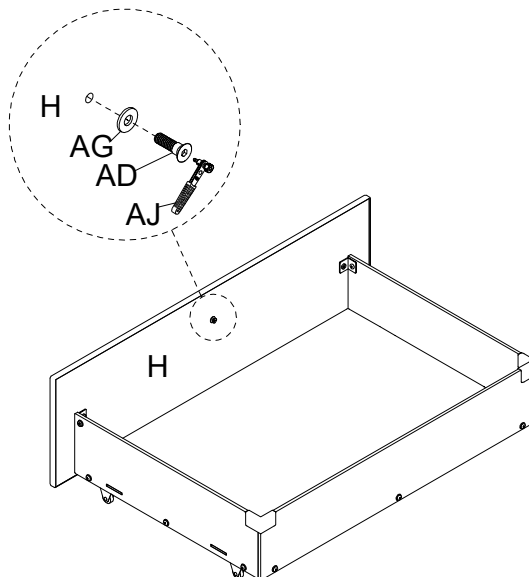




**16**

Align drawers with the bed frame and push them into the bed. Lock drawers by slightly lifting drawers and inserting the Pins that the heads of Bolts (AD) into the Slots.

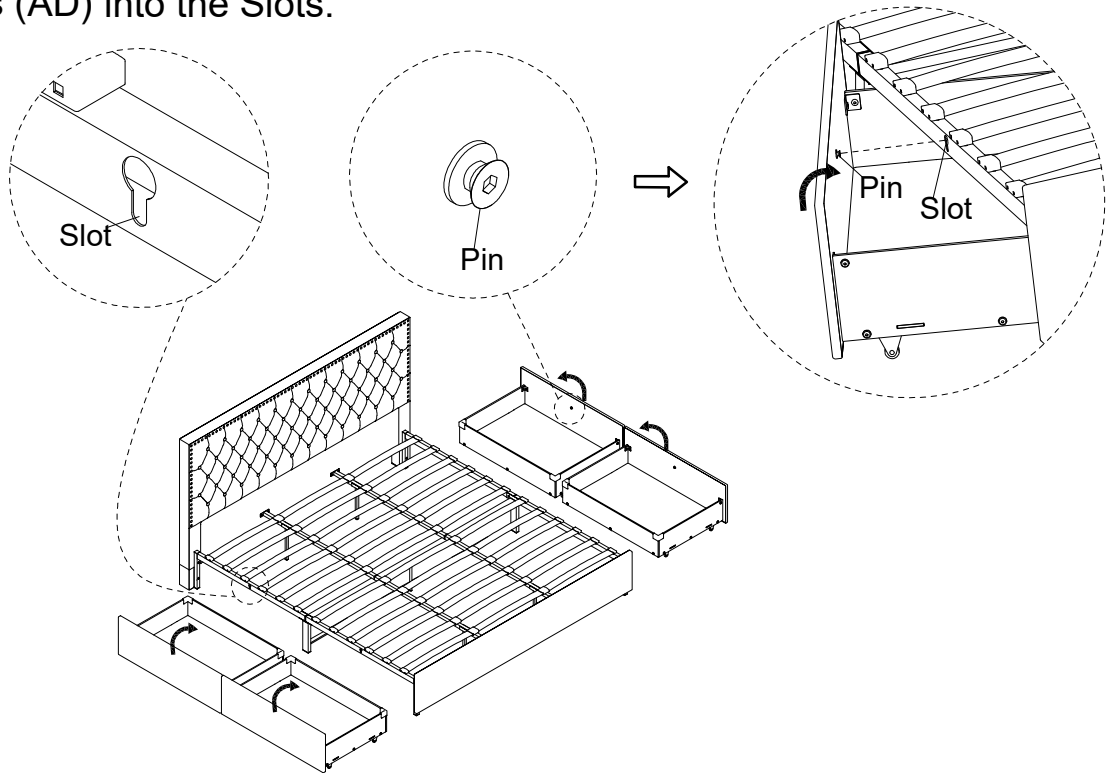**17**

When pull out the drawers, lift the drawers first in order to make the Pins released from the Slots freely, then pull the drawers toward outside. **DO NOT PULL OUT THE DRAWERS DIRECTLY.**

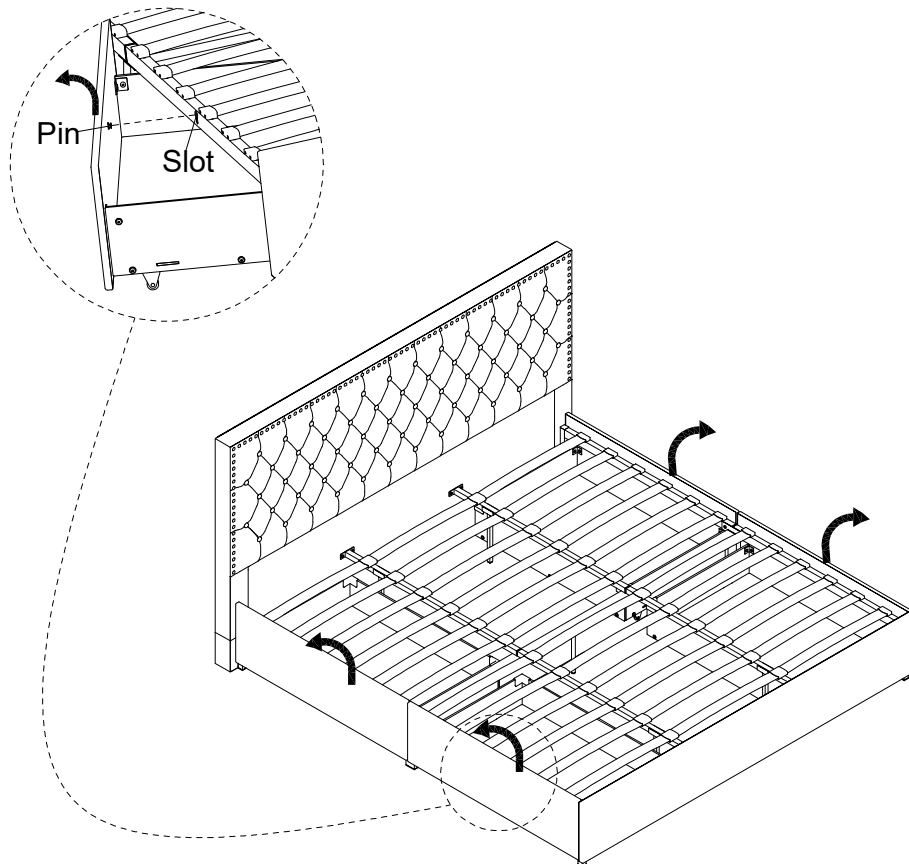

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.