








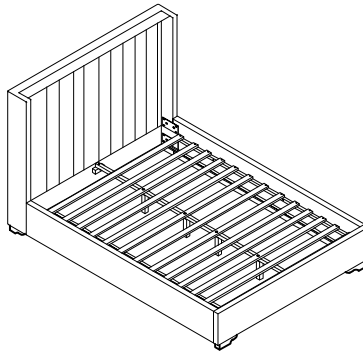

# ASSEMBLY INSTRUCTION

QUEEN BED










FULL BED




## Part list

No.	Parts	Description	QTY
A		Headboard	1
B		Footboard	1
C		Side Rail	2
D		Wood strip for Side rail	2
E		Slats	13
F		Center support rails	1
G		Wood Block on Headboard & Footboard	2
H		Center leg	4

## Hardware

No.	Parts	Description	QTY
1		Bolt 5/16\"	30
2		Flat Washer 5/16\"	30
3		Lock washer 5/16\"	48
4		Bolt 1/4\"	18
5		Flat Washer 1/4\"	18
6		Screw #8*30mm	28
7		Large L metal connector	2
8		Metal bracket	4
9		Allen Wrench	1


ASSEMBLY TOOLS REQUIRED(NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!


### STEP 1:

Attach Large L metal connector (7) to Side rail (C),  
Footboard (B) with Bolt (1),  
Lock washer (3) and Flat washer (2) .  
Tighten with Allen Wrench (9).

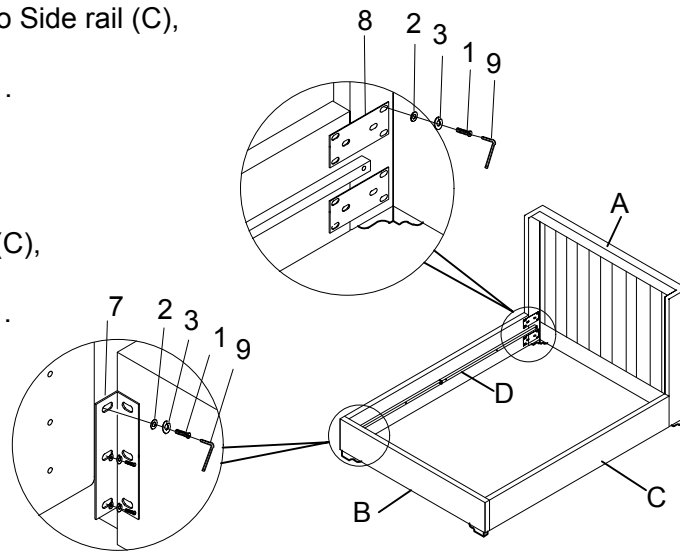


### STEP 2:

Attach Wood strip for Side rail (D) to Side rail (C)  
with Bolt (4), Lock washer (3) and  
Flat washer (5) .Tighten with Allen Wrench (9).

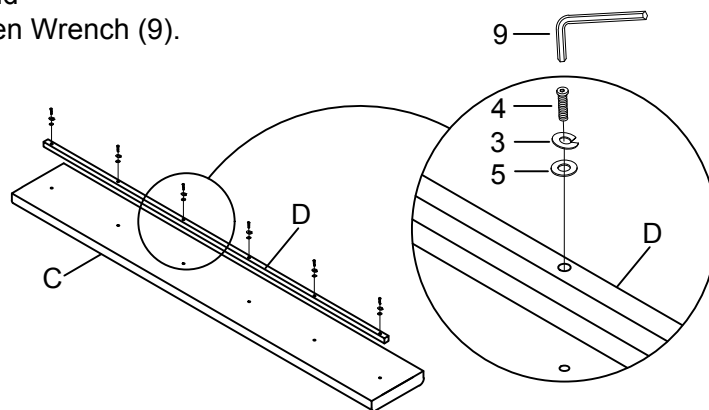


### STEP 3:

Attach Wood Block on Headboard & Footboard (G)  
to Headboard (A) and Footboard (B) with Bolt (4),  
Lock washer (3) and Flat washer (5)  
Tighten with Allen Wrench (9).

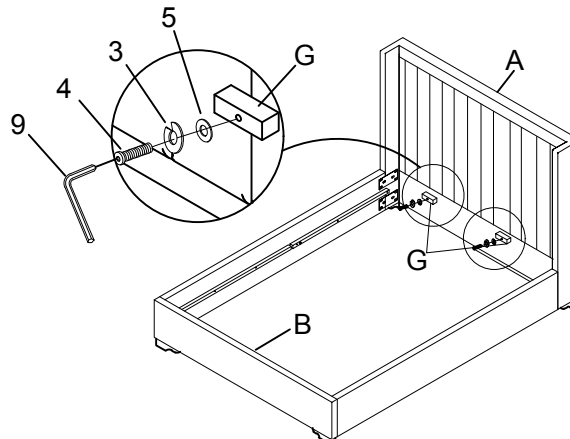


#### STEP 4:

Attach Center support rails (F) to Headboard (A) and Footboard (B) with Screw (6).

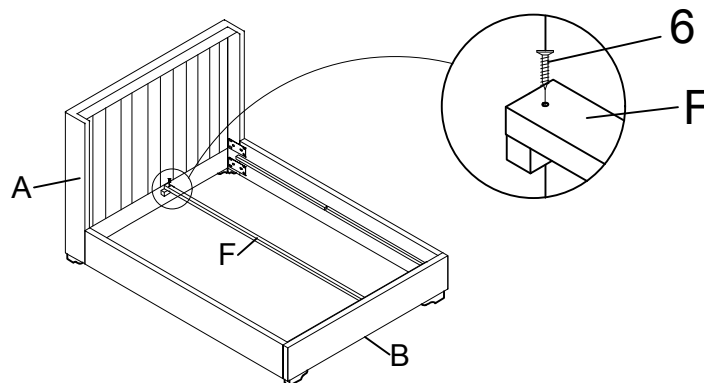

#### STEP 5:

Attach Center leg (H) to Center support rails (F) and Slats (E) with Bolt (4), Lock washer (3) and Flat washer (5). Tighten with Allen Wrench (9).

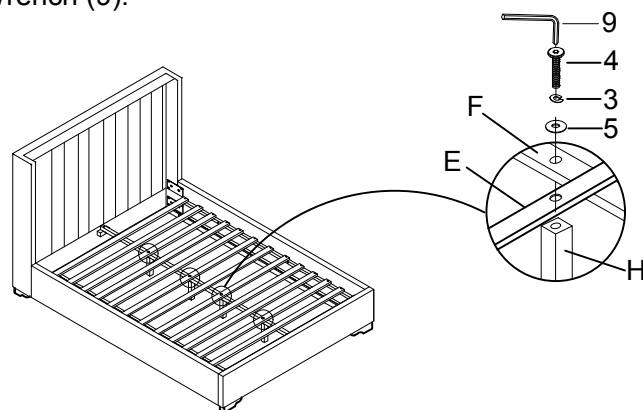

#### STEP 6:

Attach Slats (E) to Side rail (C) with Allen Screw (6).

