


ASSEMBLY INSTRUCTIONS


2631Q



Weight Capacity Max to 500LBS



Mattress Size :
80"L x 60"W x (10"-12")H




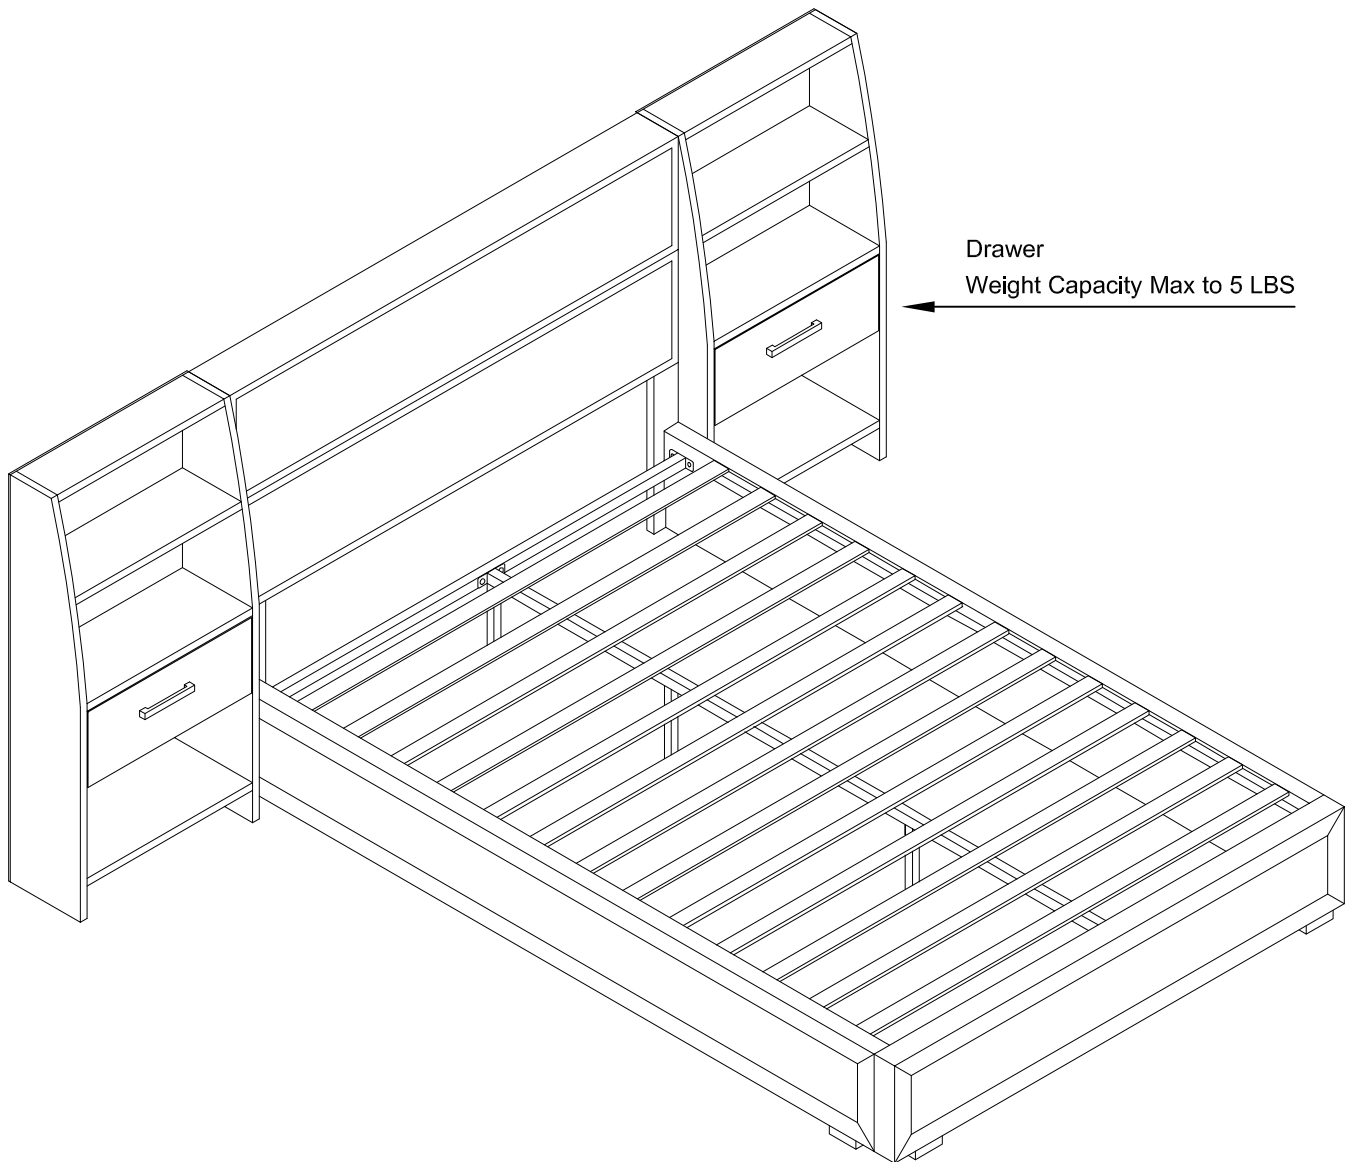








Drawer





Weight Capacity Max to 5 LBS

Install all screws according to the instructions, and then tighten them completely.







PACKING DETAILS:TOTAL 2 BOXES

2631Q-A	
	1-(1pc)
	2-(1pc)
	3-(1pc)
	4-(1pc)
	10-(3pcs)
	11-(6pcs)

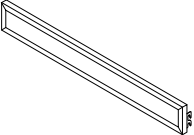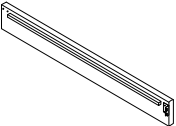2631Q-B	
	5-(1pc)
	6-(1pc)
	7-(1pc)
	8-(1pc)
	9-(1pc)
	12-(1set)


2631Q-A	
	13-(1pc)
	14-(1pc)
	15-(1pc)
	16-(1pc)
	17-(2pcs)
	18-(2pcs)
	19-(2pcs)
	20-(2pcs)
	21-(2pcs)
	22-(4pcs)
	23-(2pcs)
	24-(2pcs)
	25-(2pcs)
	26-(2pcs)
	27-(2pcs)

PACKING DETAILS:TOTAL 3 BOXES


2631Q-A	
(Hardware Packet)	
	Bolt M8*35 A-(27pcs+1)
	Bolt M8*45 B-(10pcs+1)
	Spring Washer M8 C-(37pcs+2)
	Flat Washer M8*19 D-(37pcs+2)
	Allen Key M8 E-(1pc)
	Screw M4*25 G-(6pcs+1)
	H-(56pcs+4)
	I-(28pcs+4)
	J-(28pcs+4)
	K-(16pcs+1)
	Allen Key M6 L-(1pc)

ASSEMBLY INSTRUCTIONS

STEP 1

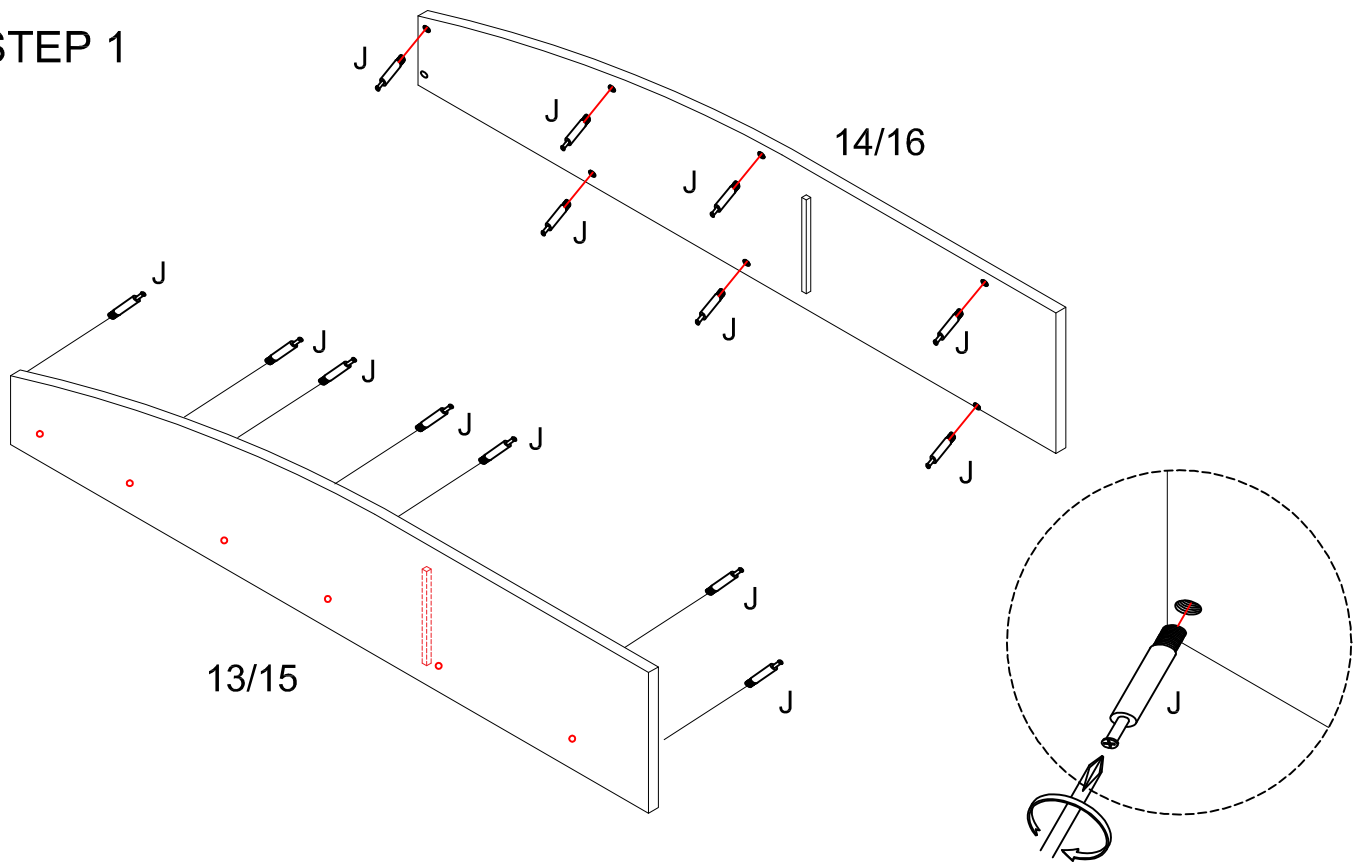


STEP 2

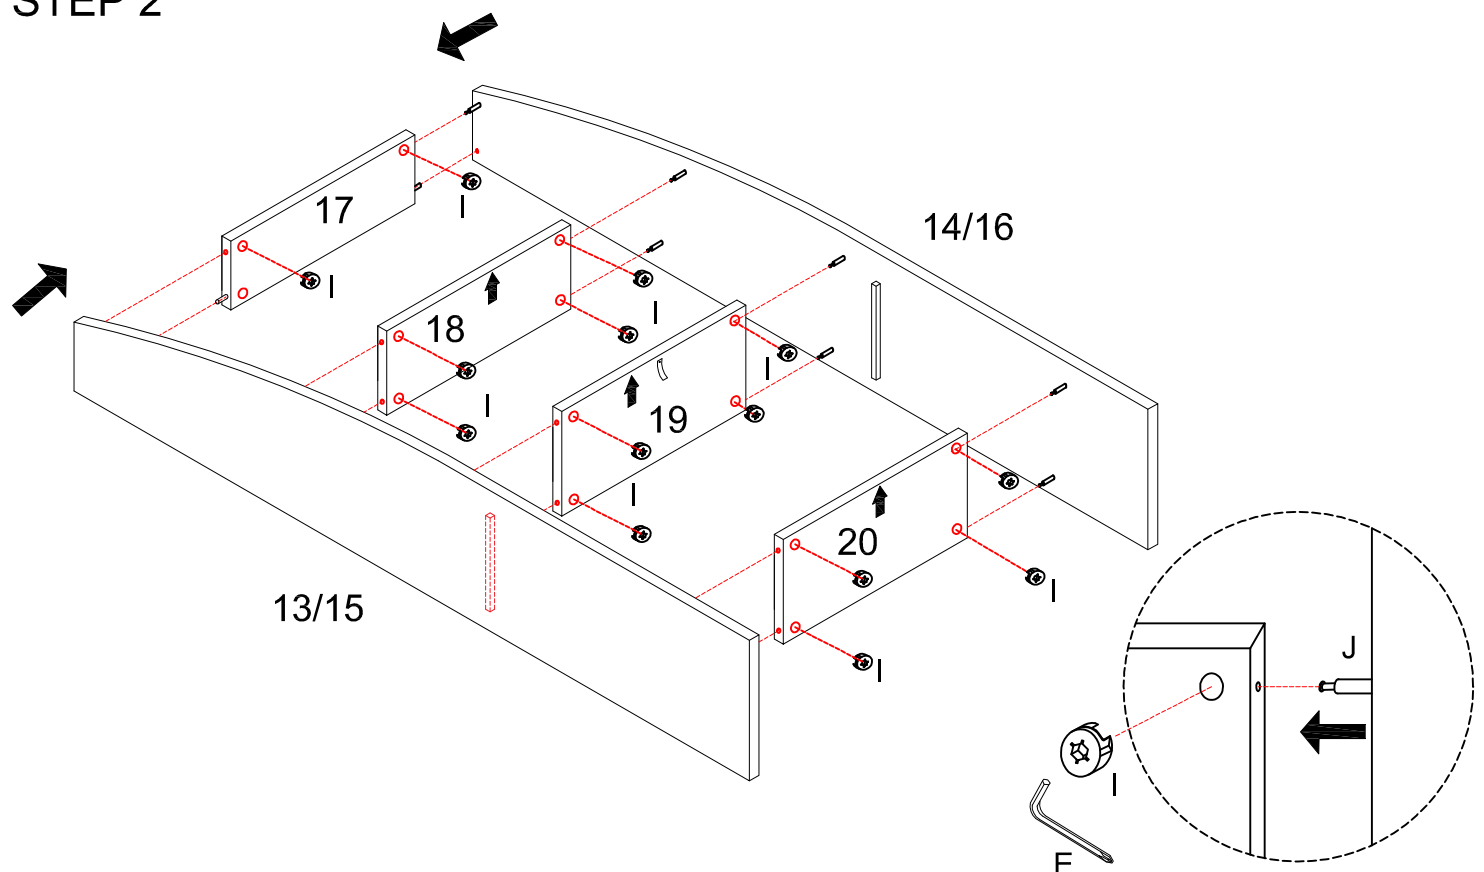


ASSEMBLY INSTRUCTIONS

STEP 3

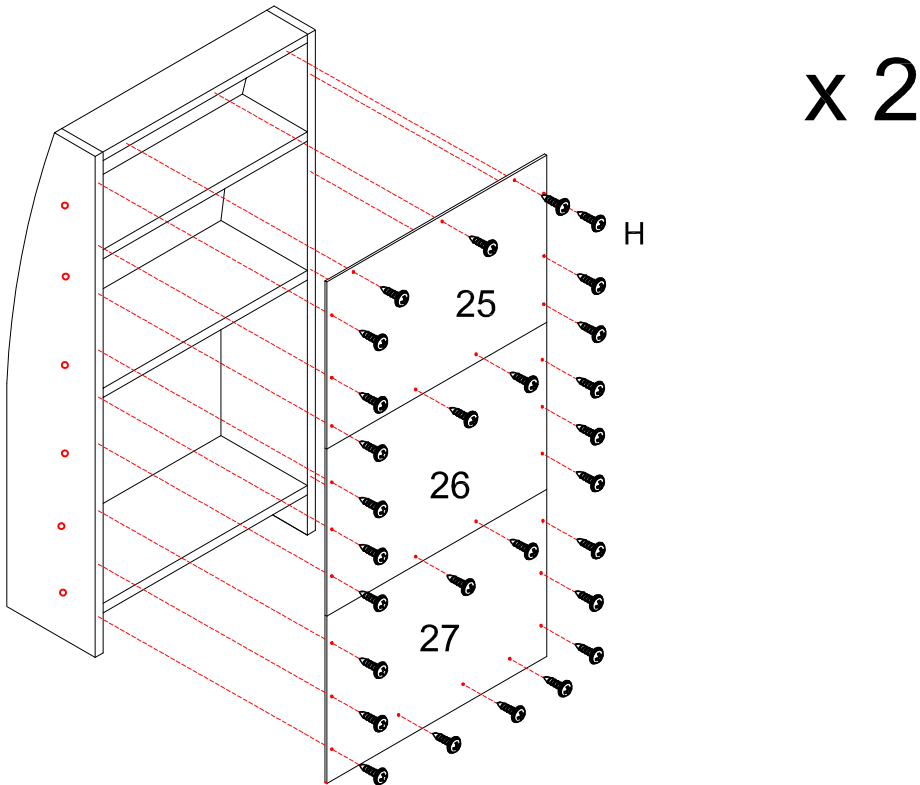


STEP 4

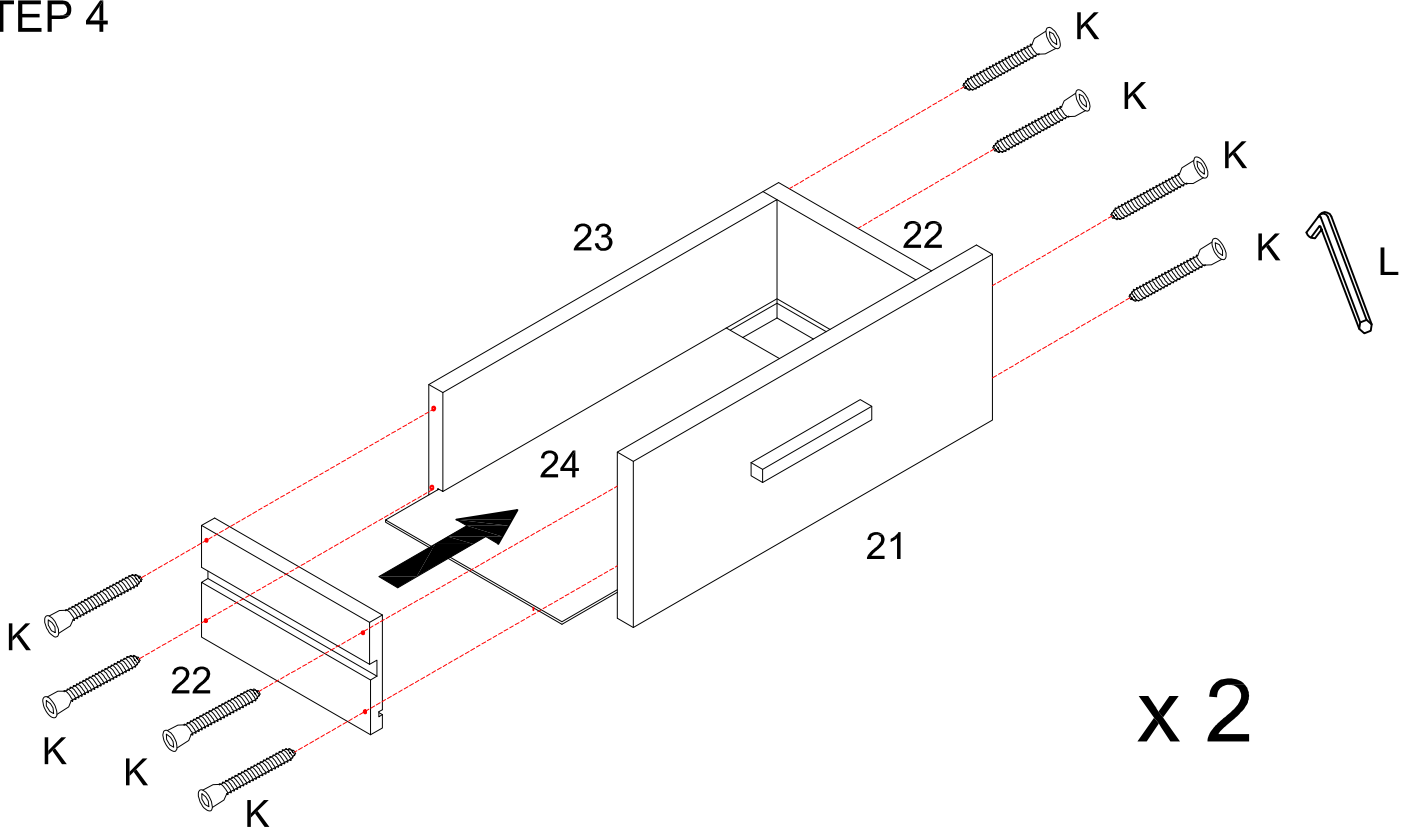


ASSEMBLY INSTRUCTIONS

STEP 5

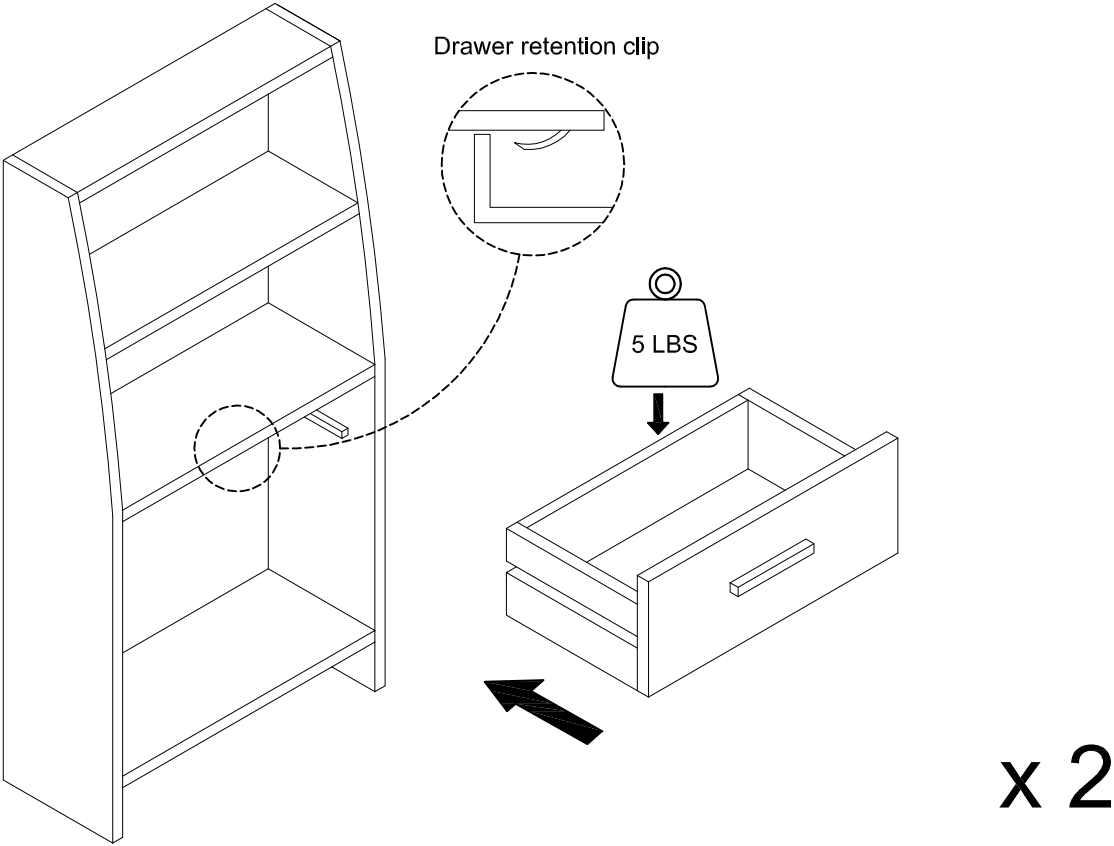


STEP 6

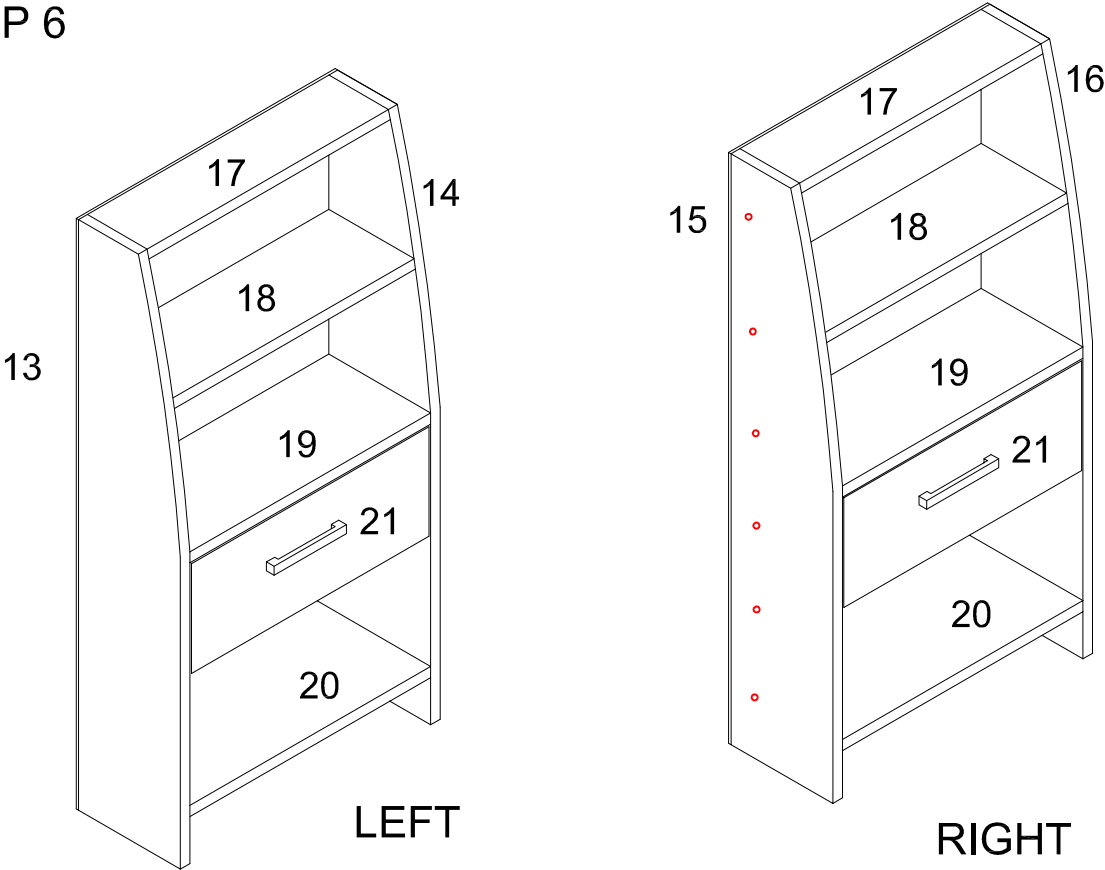


ASSEMBLY INSTRUCTIONS

STEP 7

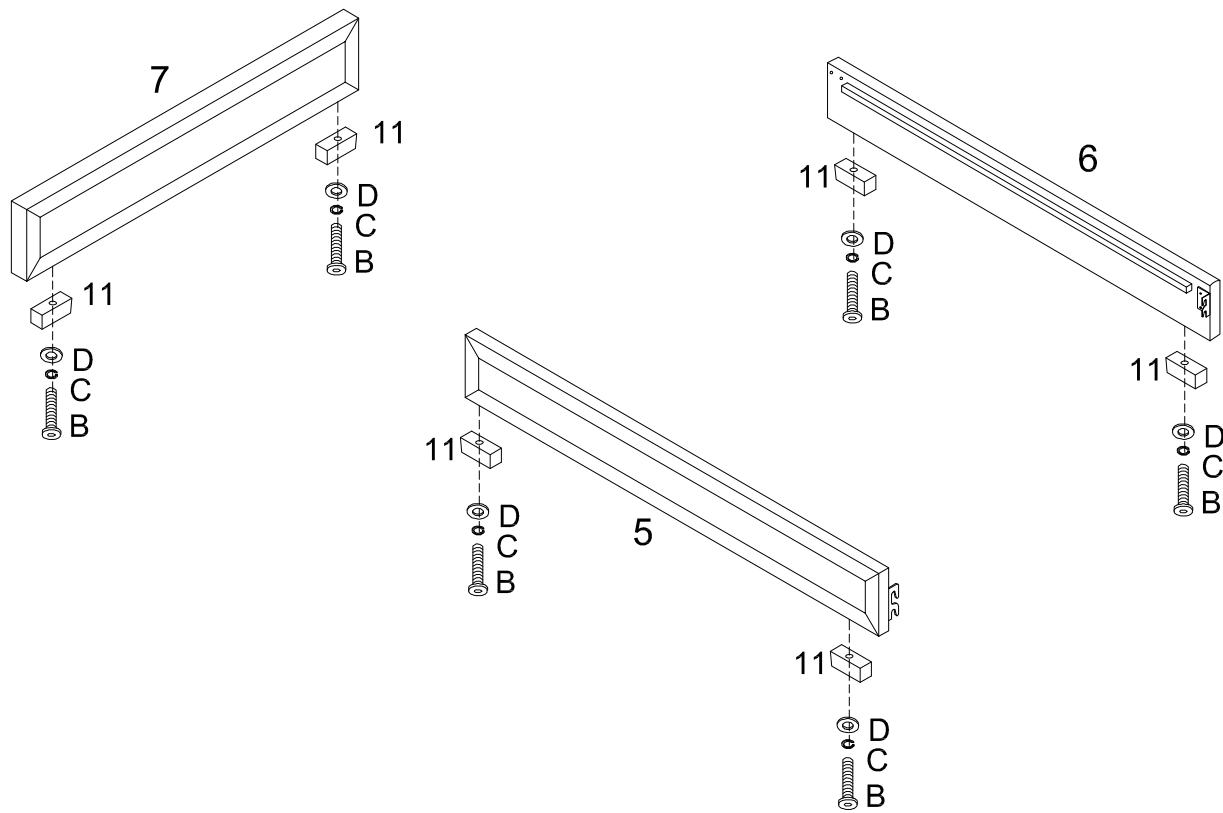


STEP 8

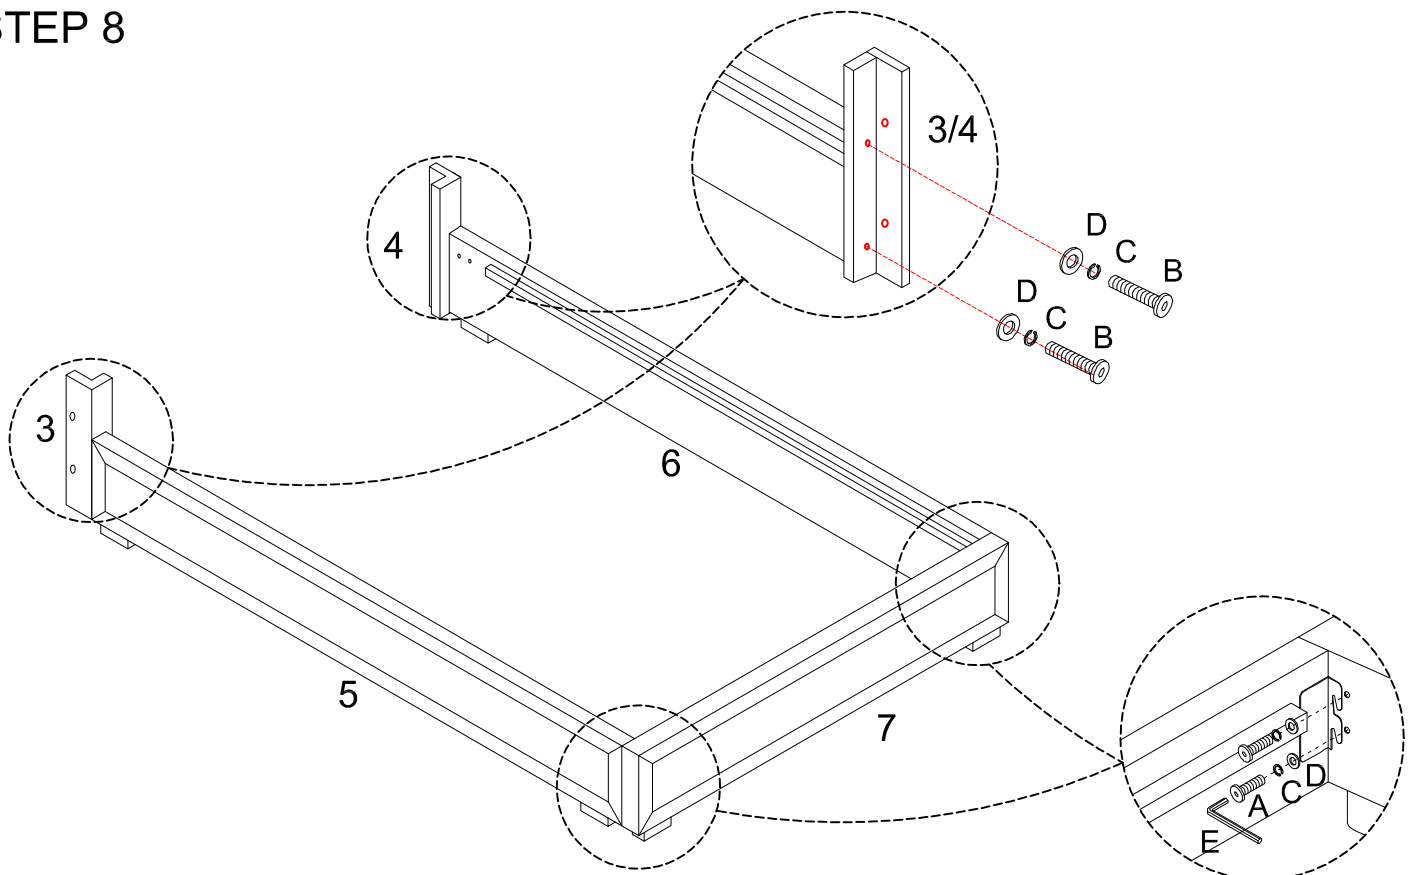


ASSEMBLY INSTRUCTIONS

STEP 9

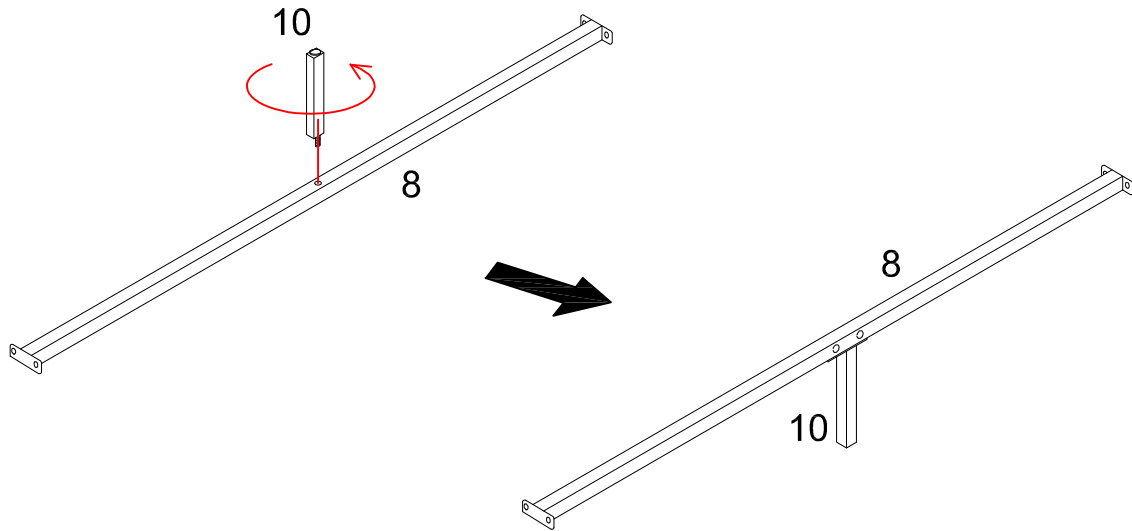


STEP 10

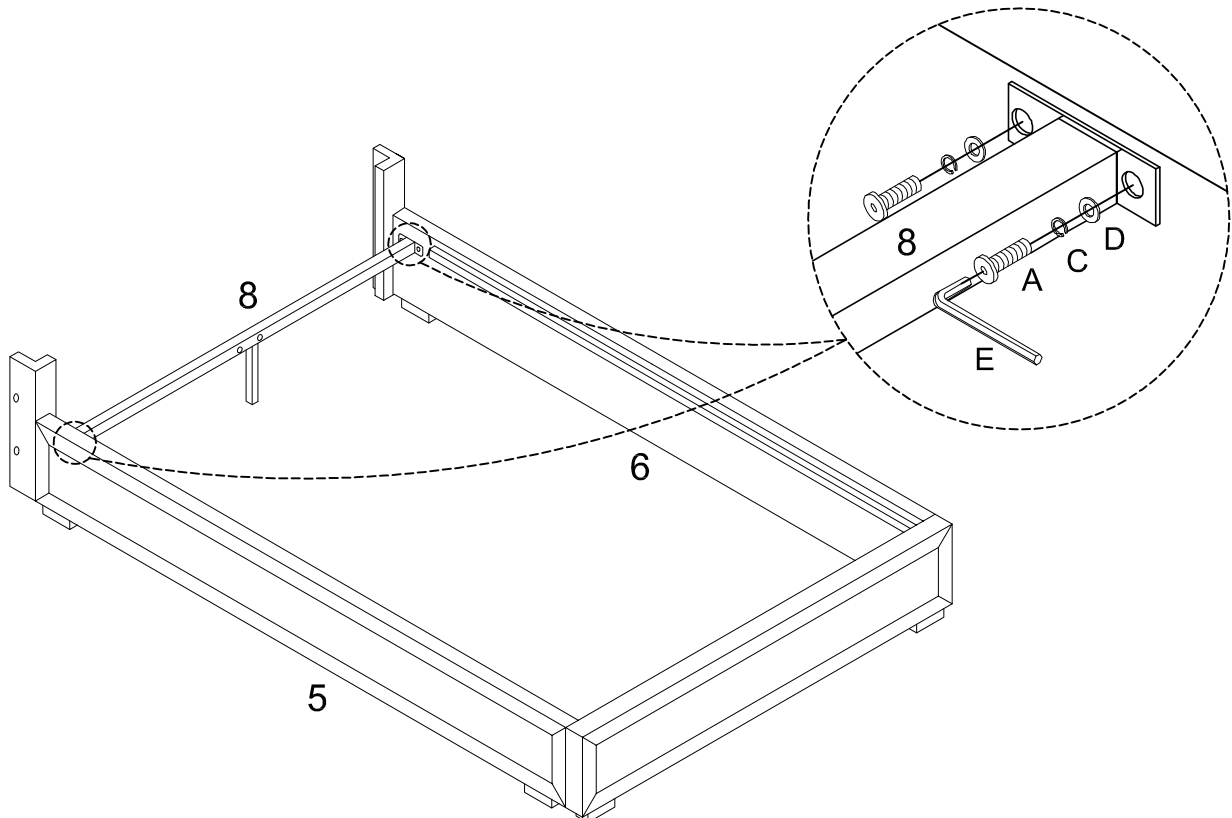


ASSEMBLY INSTRUCTIONS

STEP 11

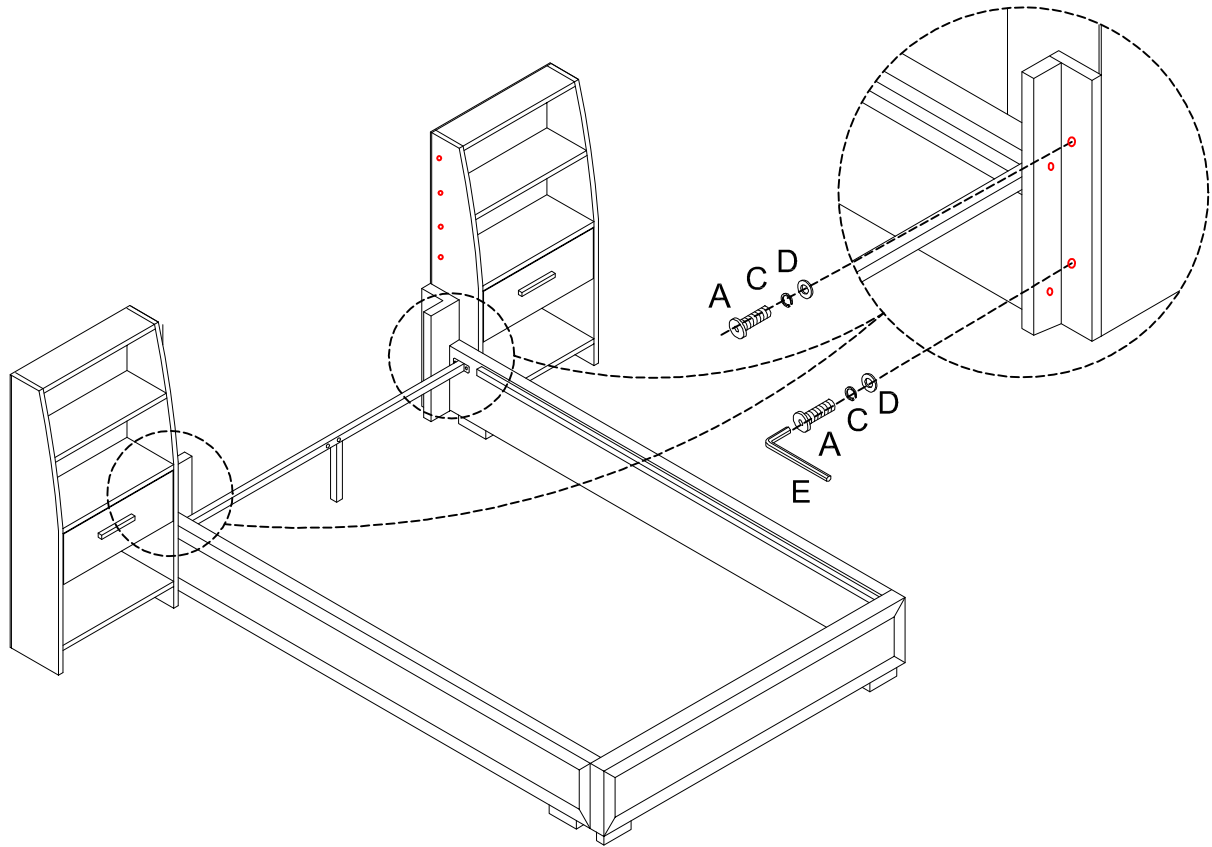


STEP 12

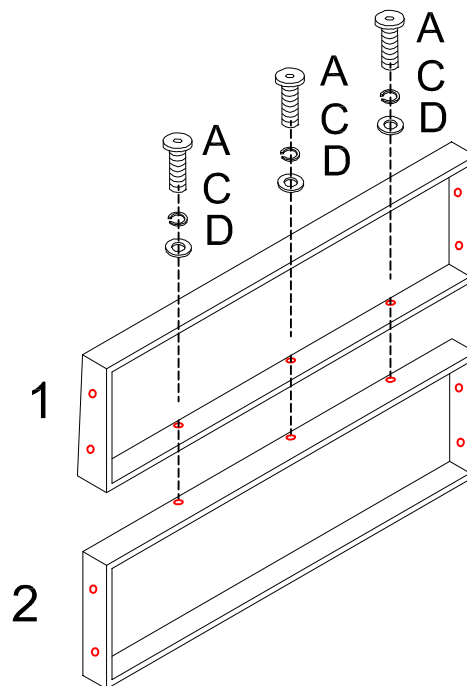


ASSEMBLY INSTRUCTIONS

STEP 13

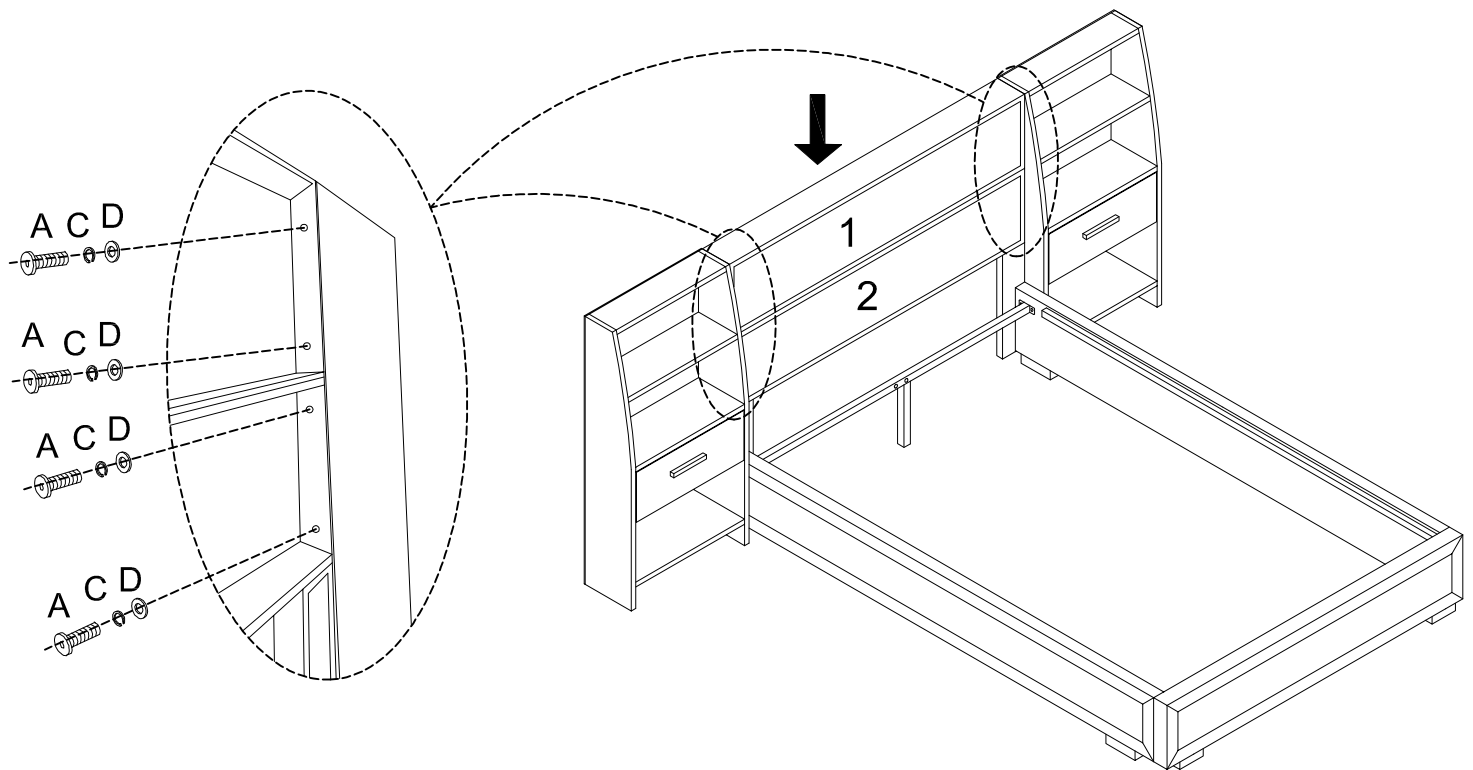


STEP 14

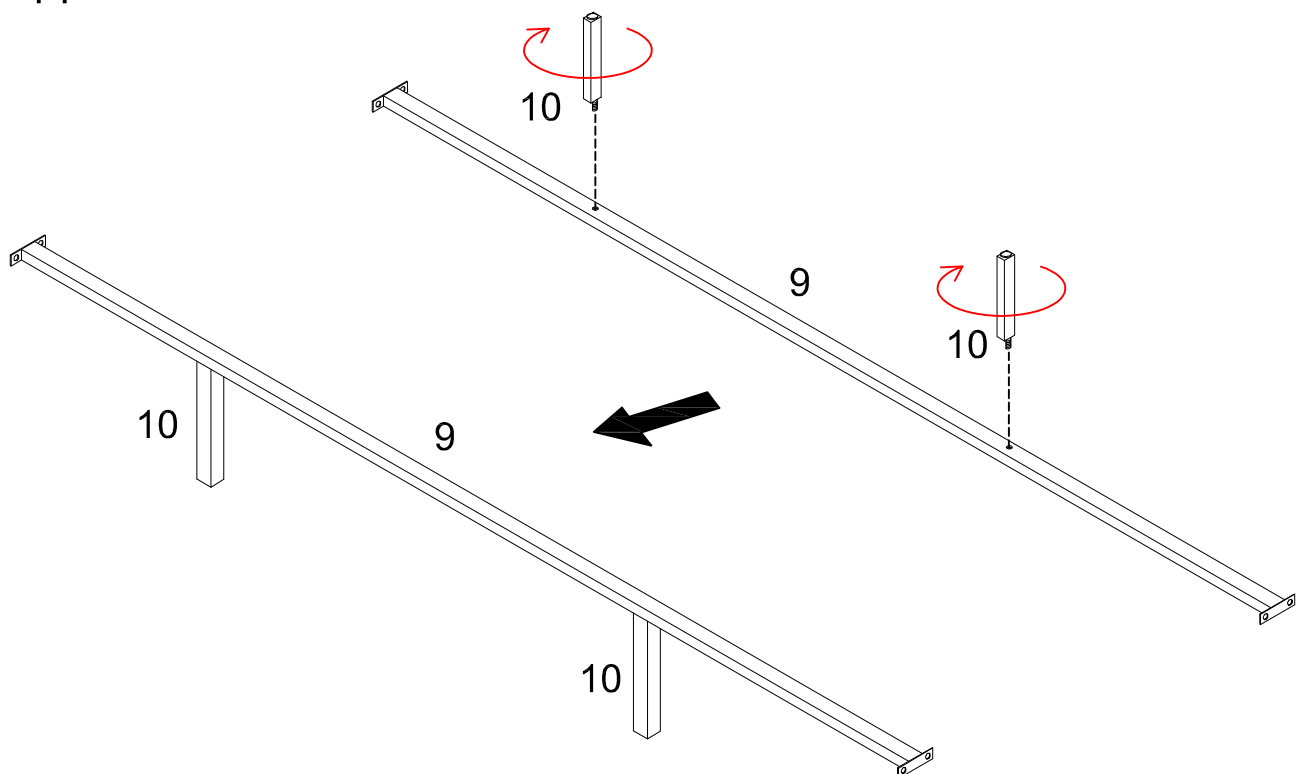


ASSEMBLY INSTRUCTIONS

STEP 15

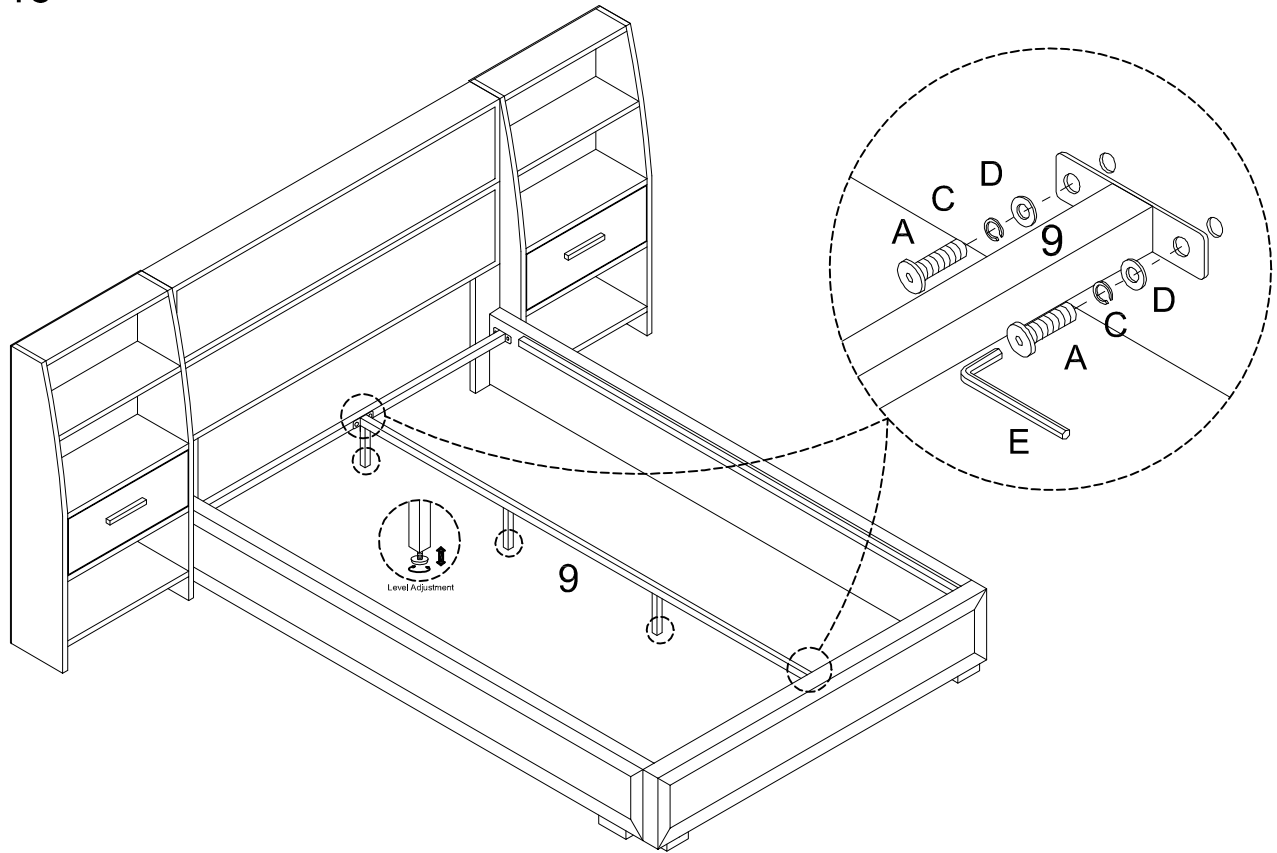


STEP 16

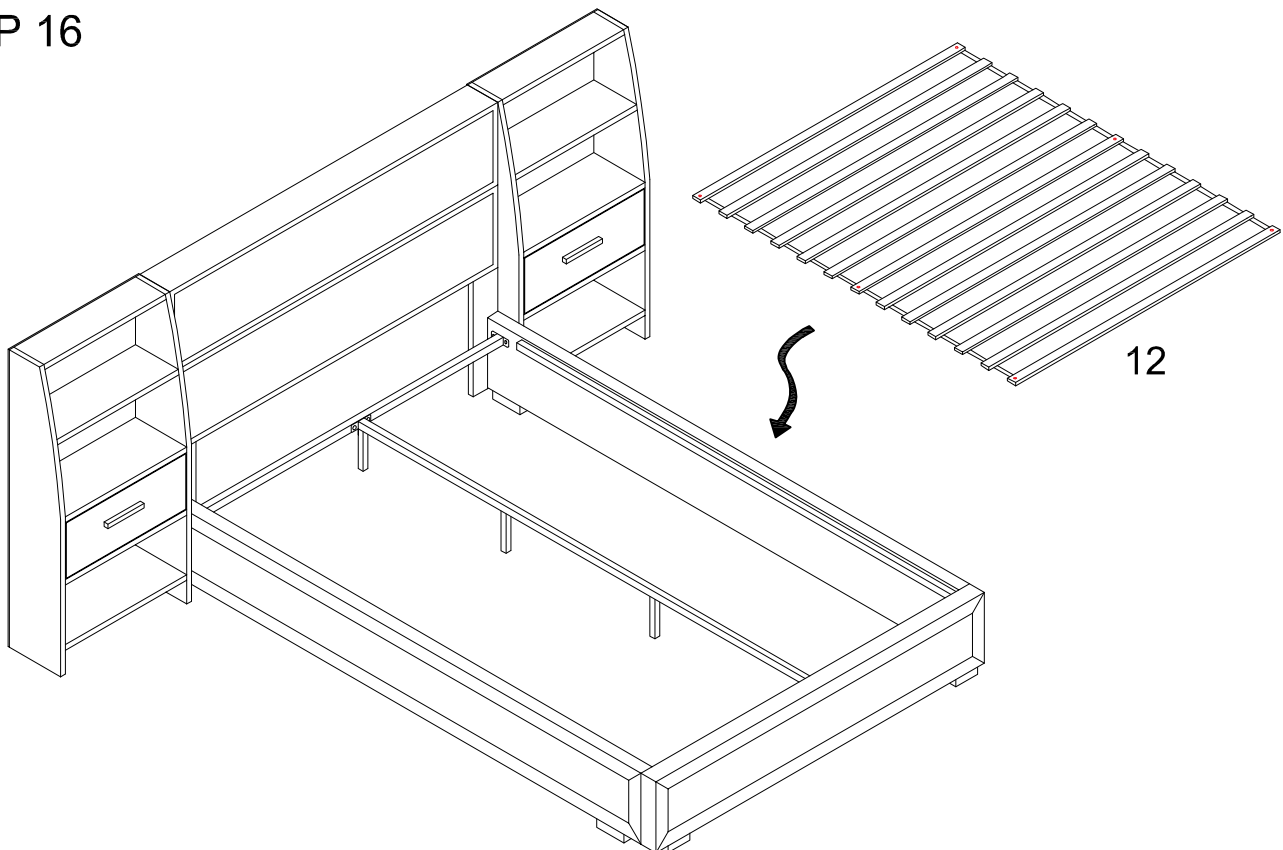


ASSEMBLY INSTRUCTIONS

STEP 17

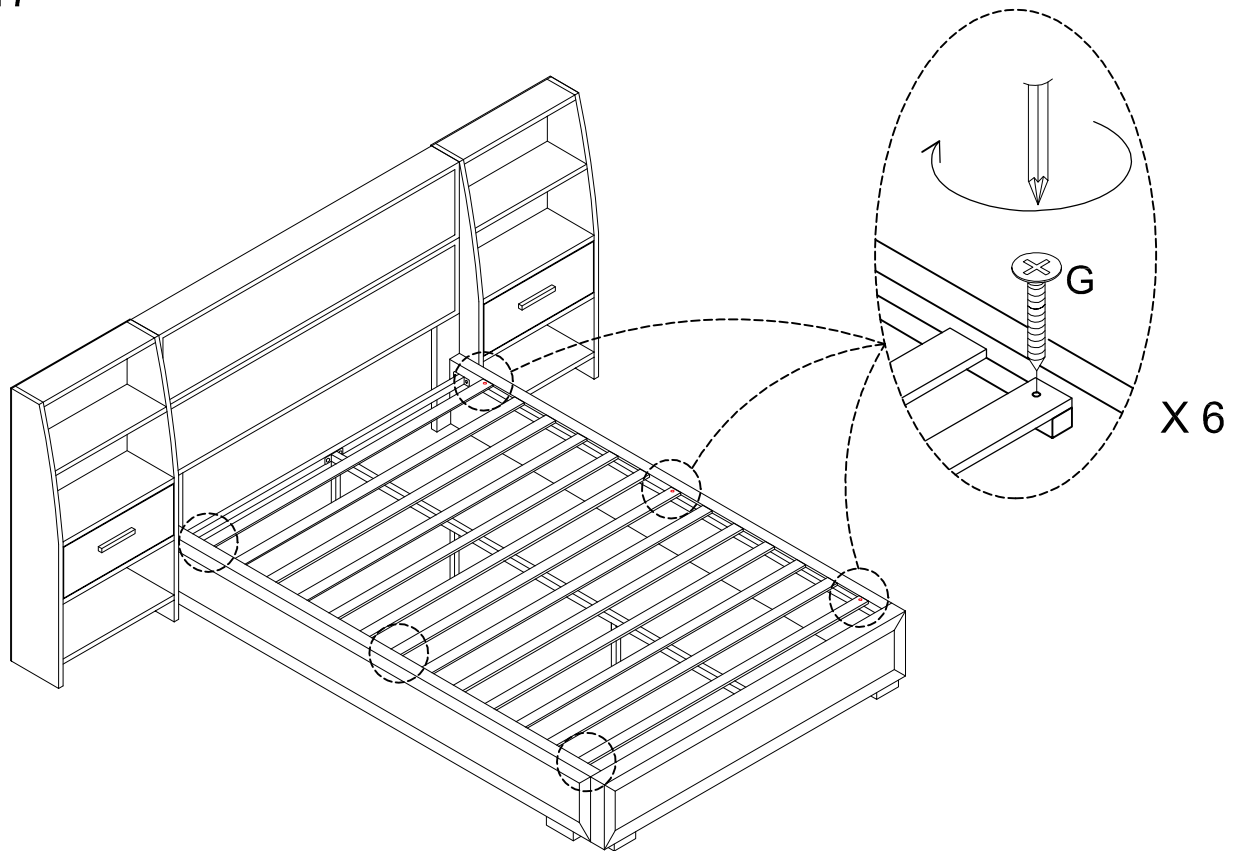

STEP 18

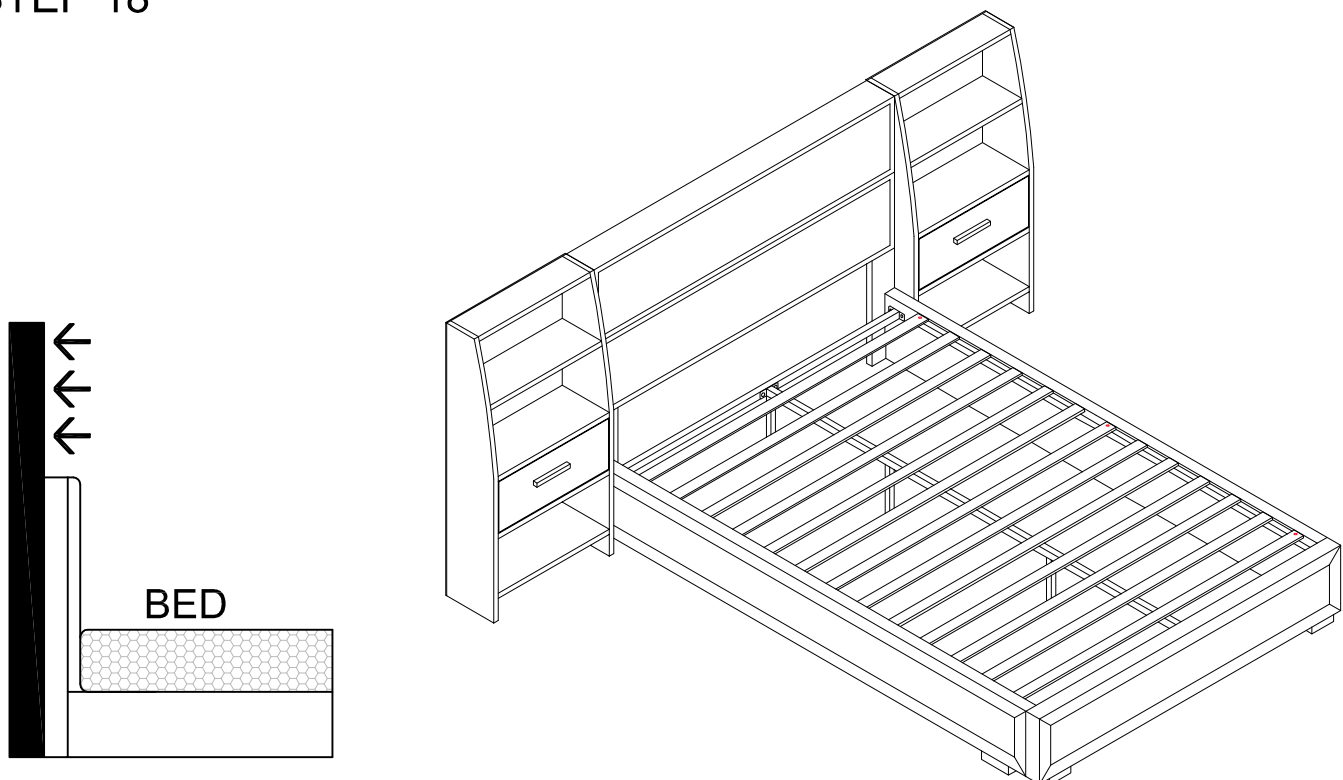

Use Against the Wall