




Assembly Instruction

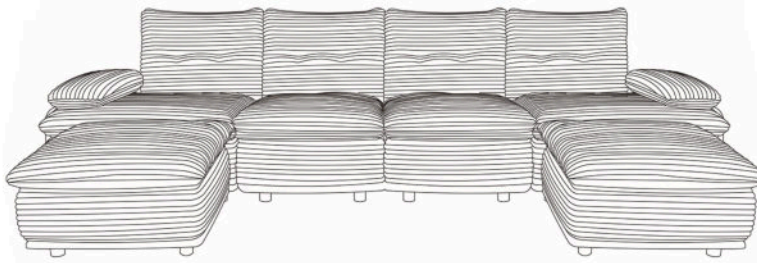


Box 1(S8813BK-A)

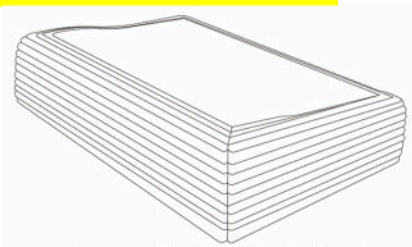


A-1. seat cushion(big)x1pc

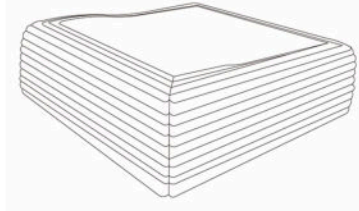


A-2. seat cushion(small)x1pc

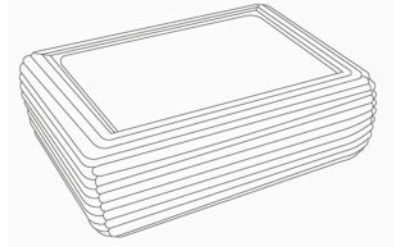


B. seat cushionx1pc

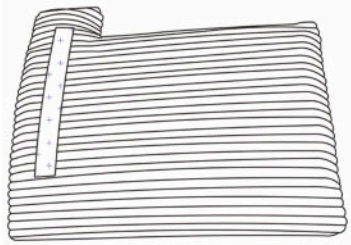

C. seat padx1pc

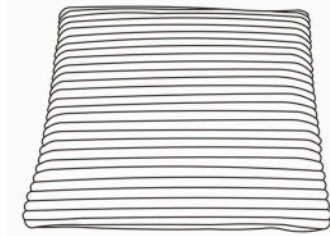

D. seat padx2pcs

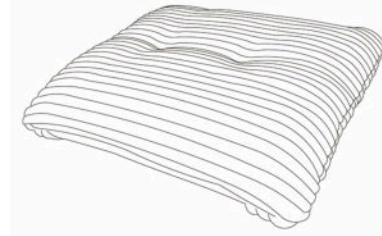


E. back cushionx2pcs




F. arm padx1pc


Box 2(S8813BK-B)

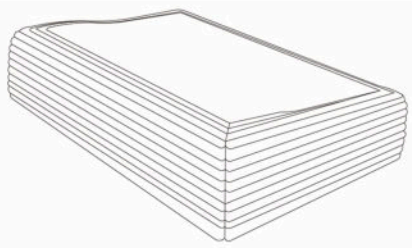


A-1. seat cushion(big)x1pc

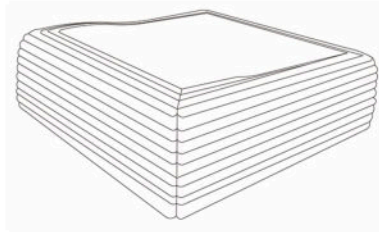

A-2. seat cushion(small)x1pc

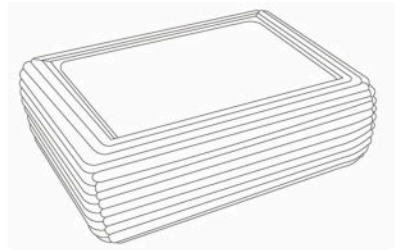


B. seat cushionx1pc

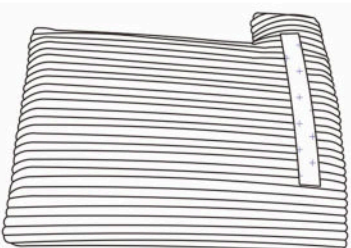

G. seat padx1pc



D. seat padx2pcs

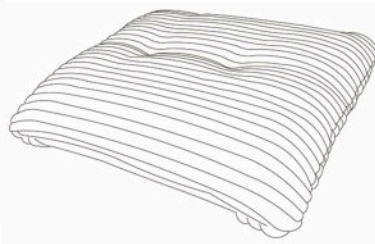


E. back cushionx2pcs




H. arm padx1pc


Box 3(S8813BK-C)

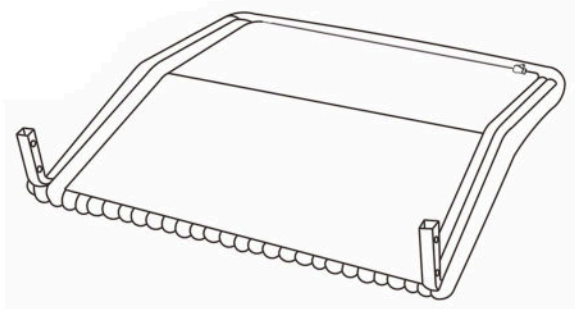


I.back framex4pcs

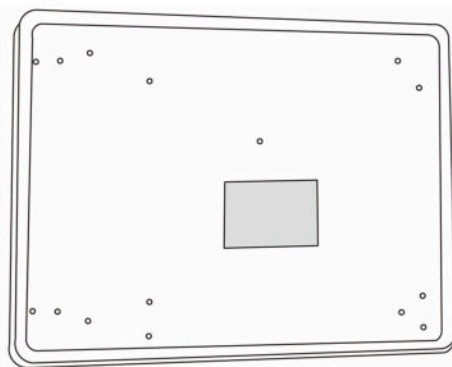


J.seat board(left)x1pc

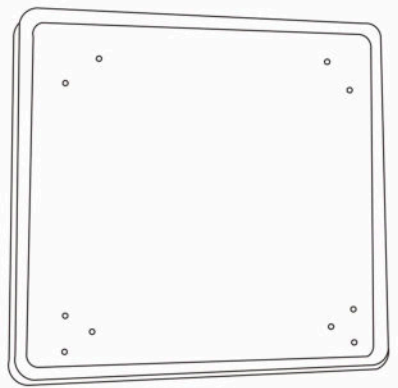

K.seat board(middle)x2pcs

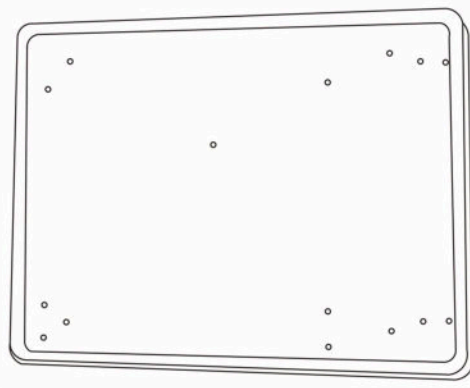


L.seat board(right)x1pc

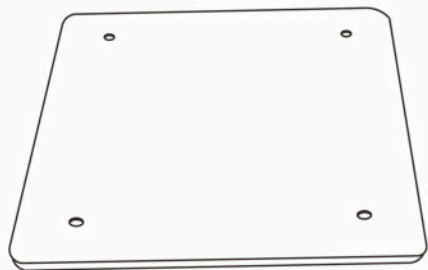

M.seat board(ottoman)x2pcs



N.sofa arm framex2pcs

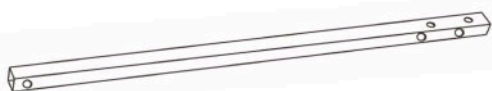

O.connecting barx8pcs




P.connectorx3pcs




Q.legx26pcs




R.velcro x8pcs

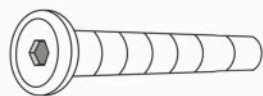


S.M8x45mmx16pcs

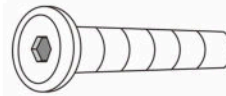

T.M8*35mmx24pcs

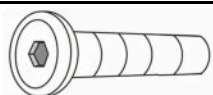

U.M8*25mmx8pcs

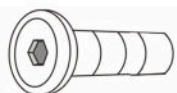


V.M8*20mmx12pcs




W.hex key1pc

Step 1. Install the connecting bar(O) to the back frame(I) as following.

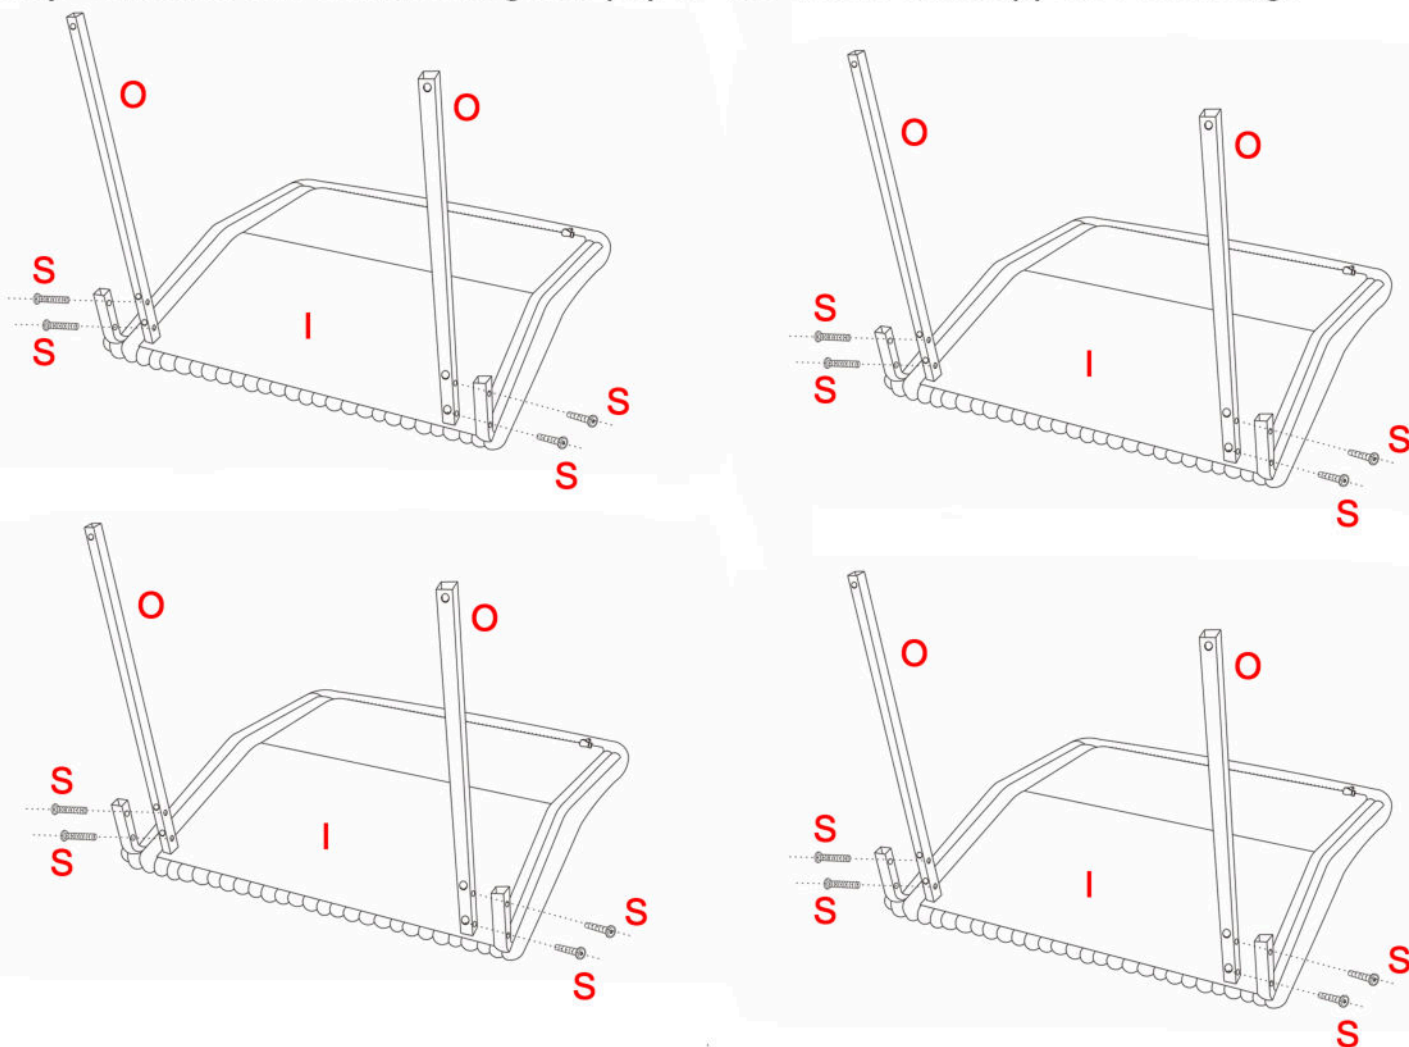


Step 2. Install the connecting bar(O) to the seat board(J) as following.

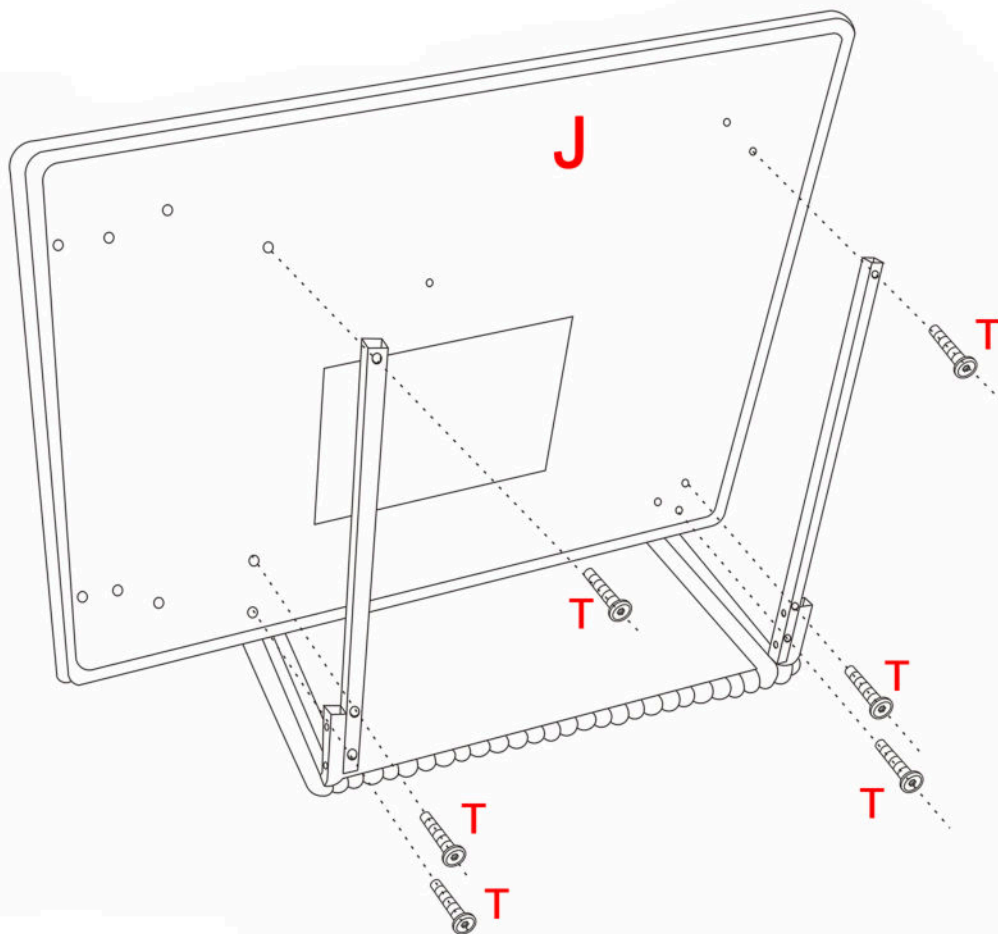


Step 3. Install the sofa arm frame(N) to the seat board(J), then install the legs(Q) under the seat board(J).

①


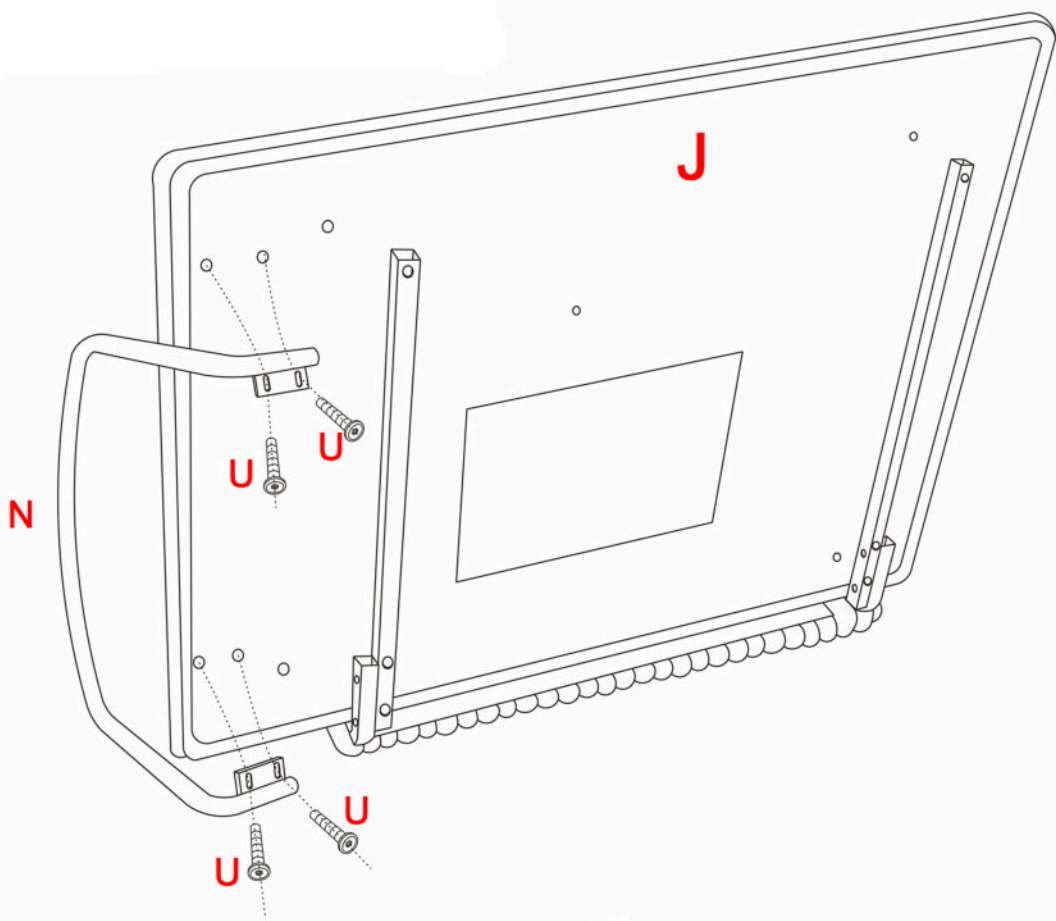


②


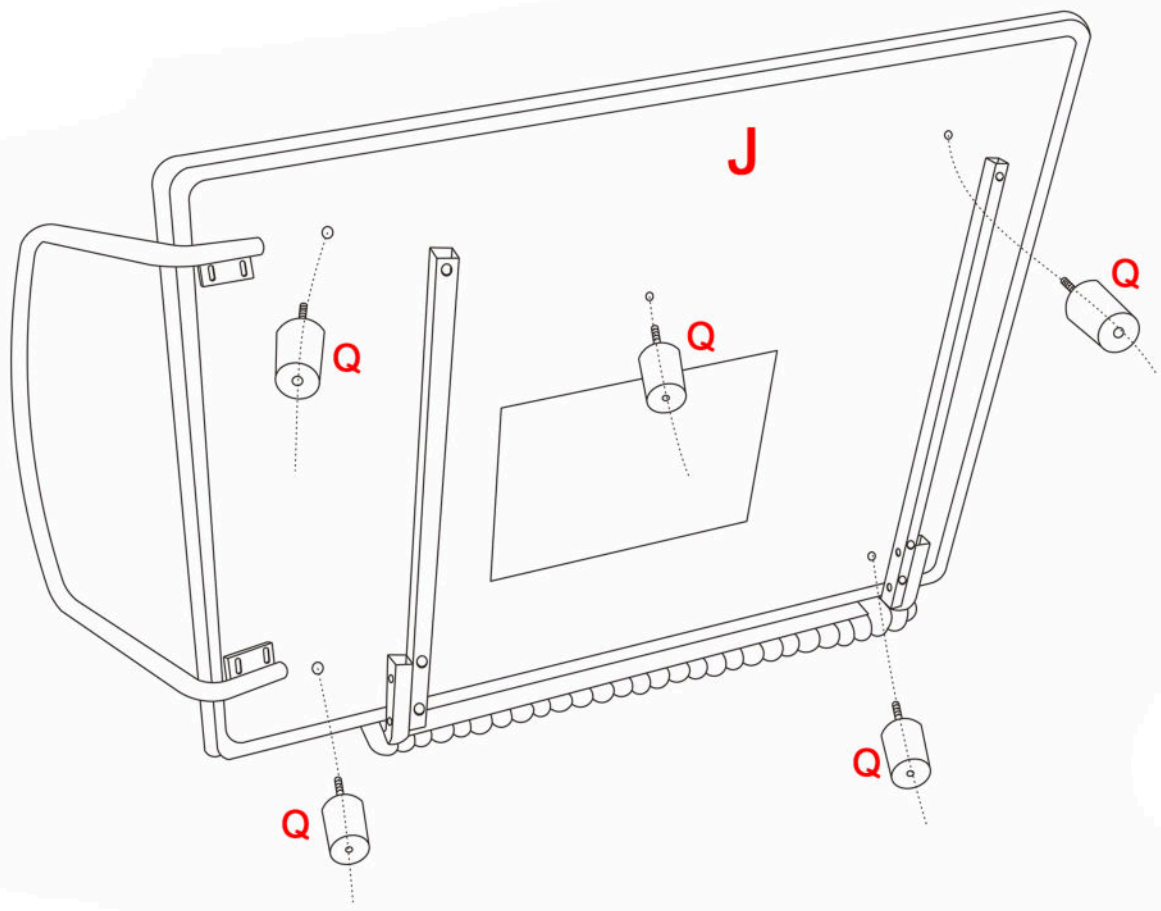


Step 4. Install the connecting bar(O) to the seat board(K); then install the leg(Q) under the seat board.

①

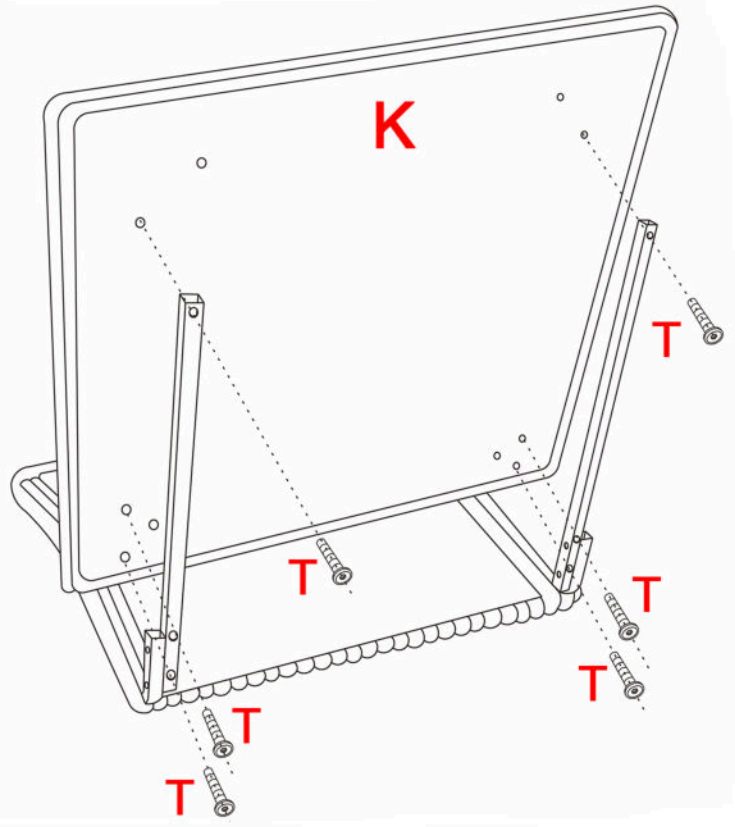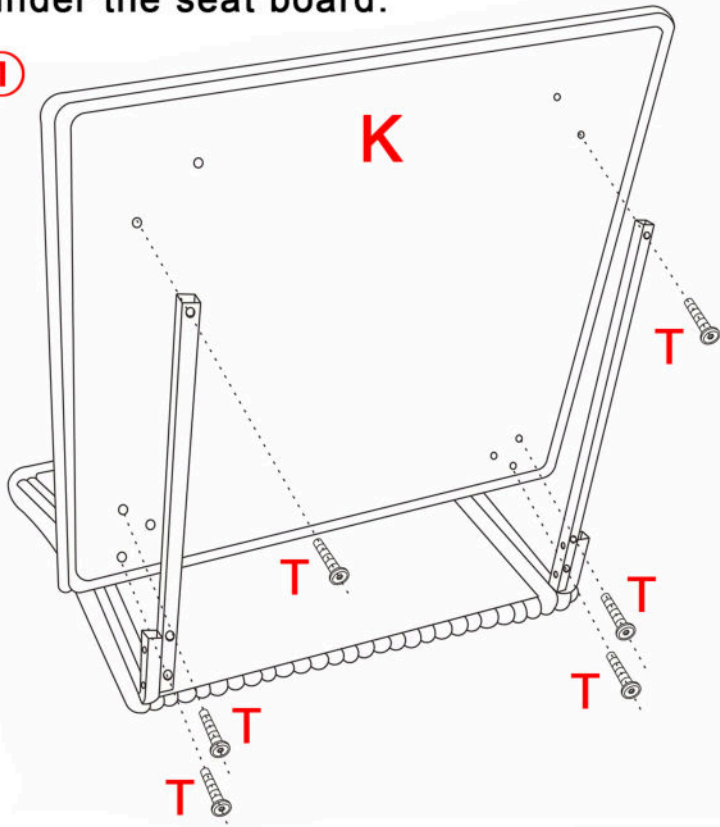


②

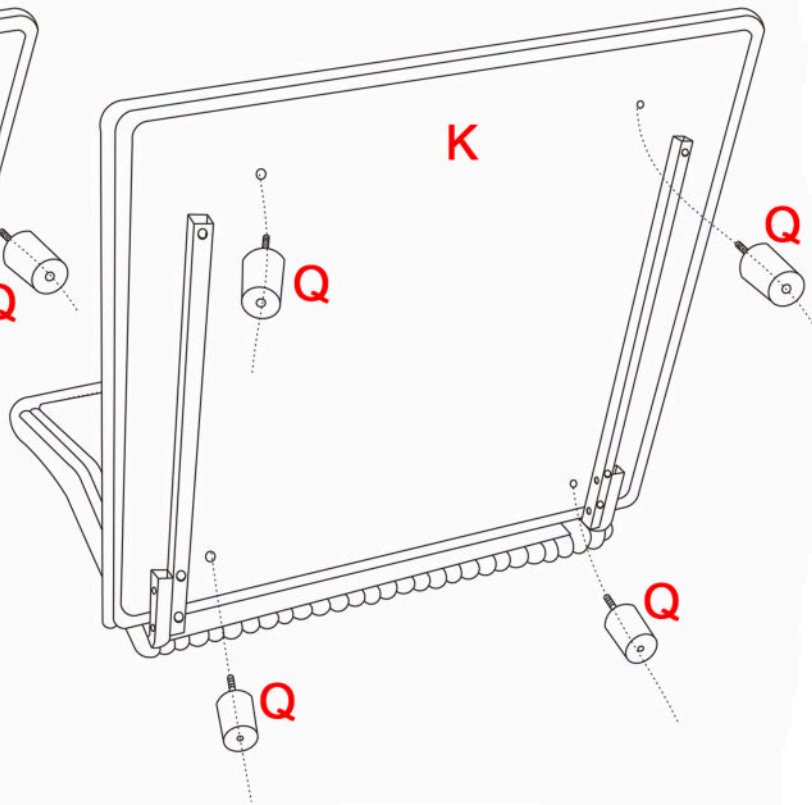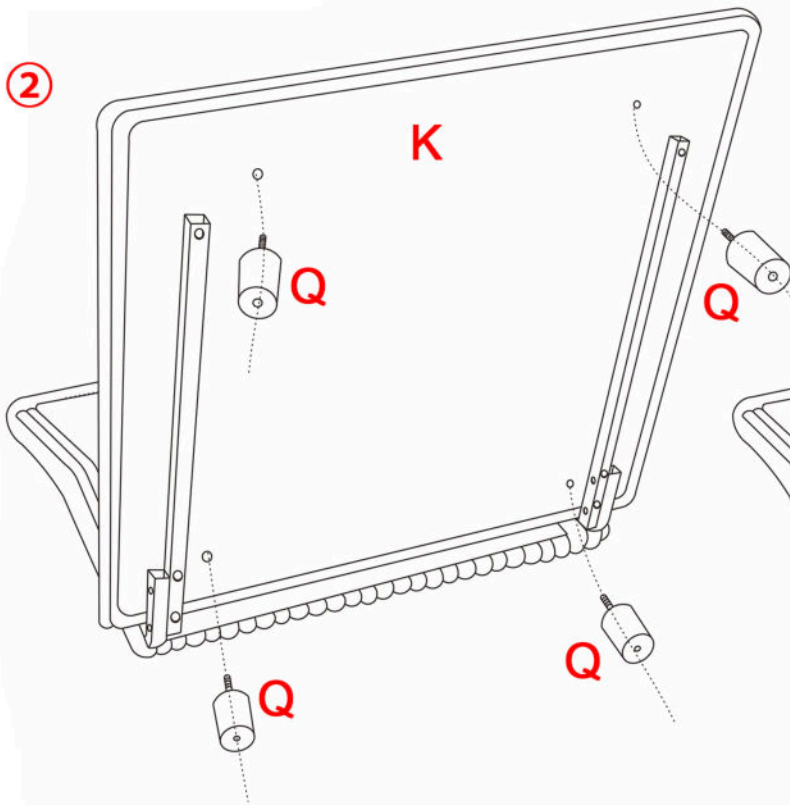


Step 5. Install the connecting bar(O) to the seat board(L); then install the sofa arm frame(N) and legs under the seat board(L).


1

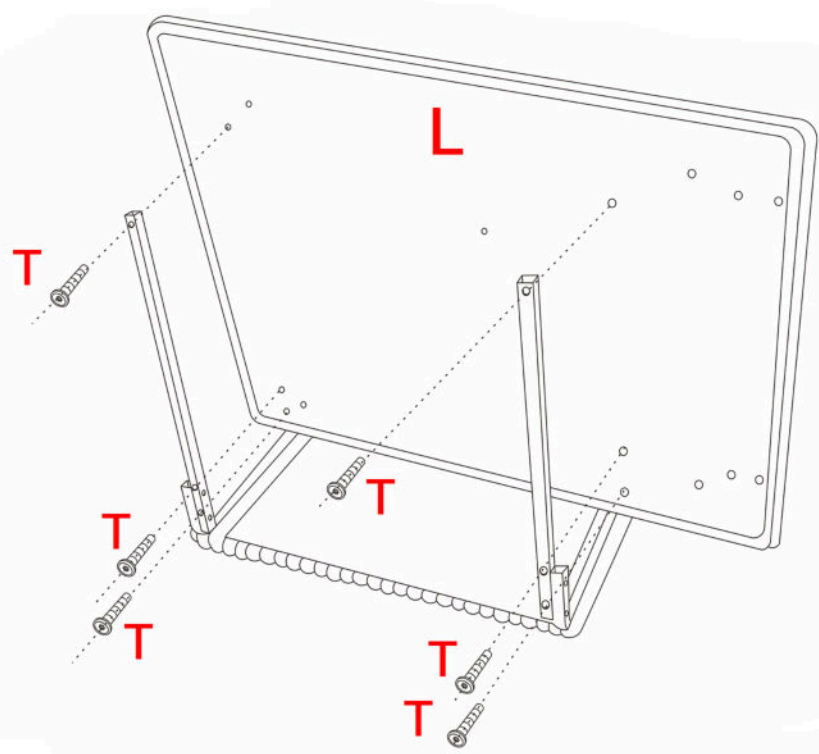


2

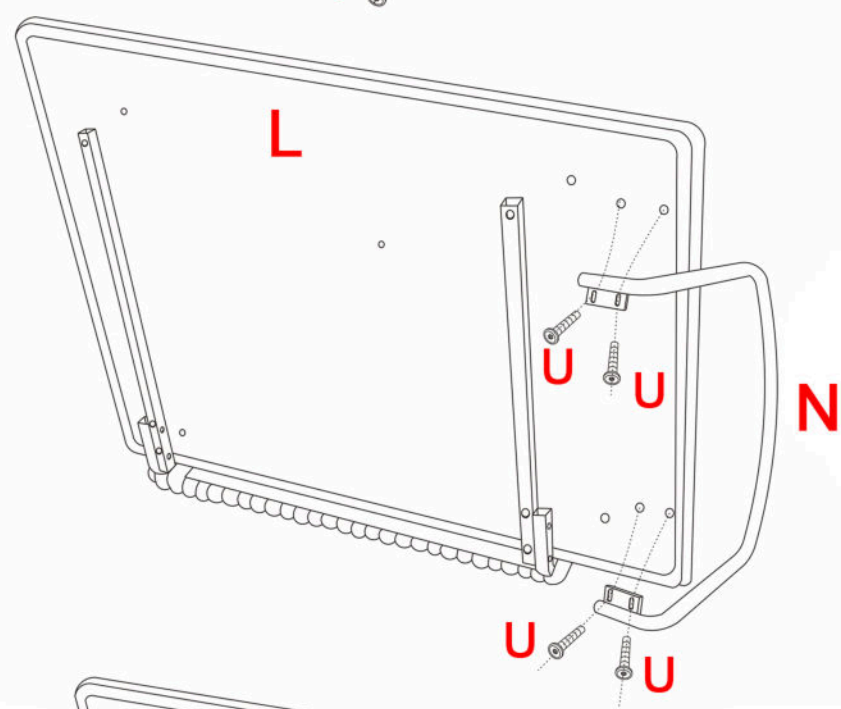


3

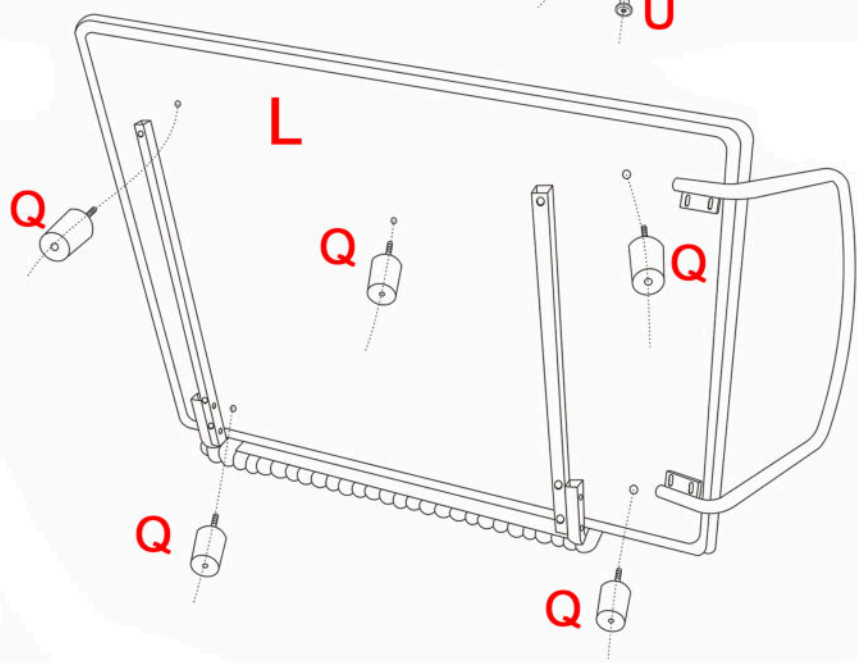


Step 6. Install the connector(P) on the seat board(J+K+L).

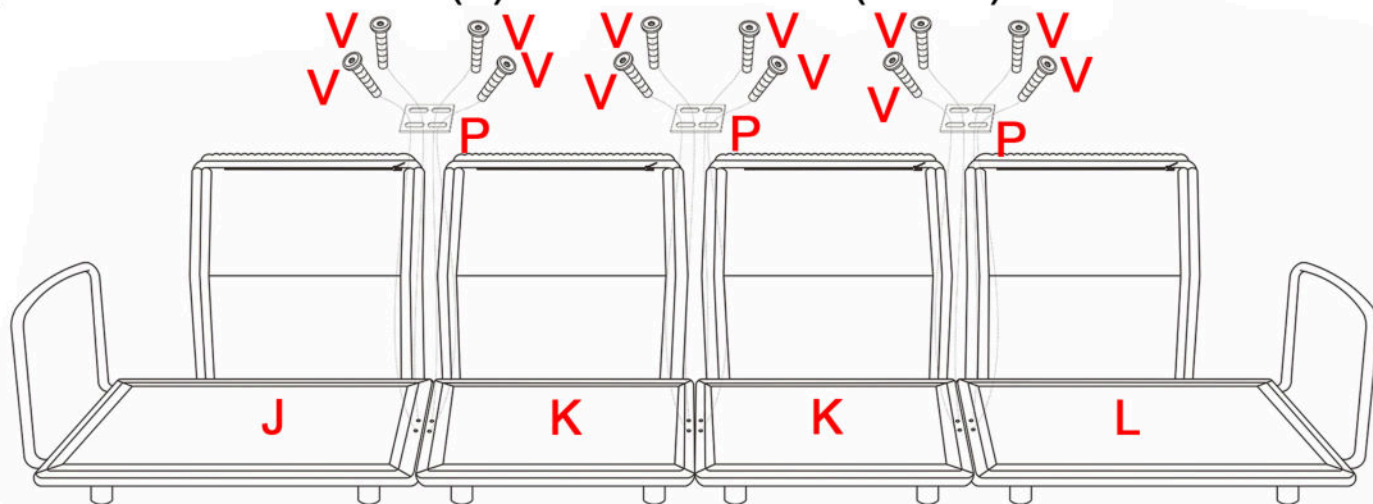


Step 7. Put the seat cushion(A-1,A-2) on the each seat board.

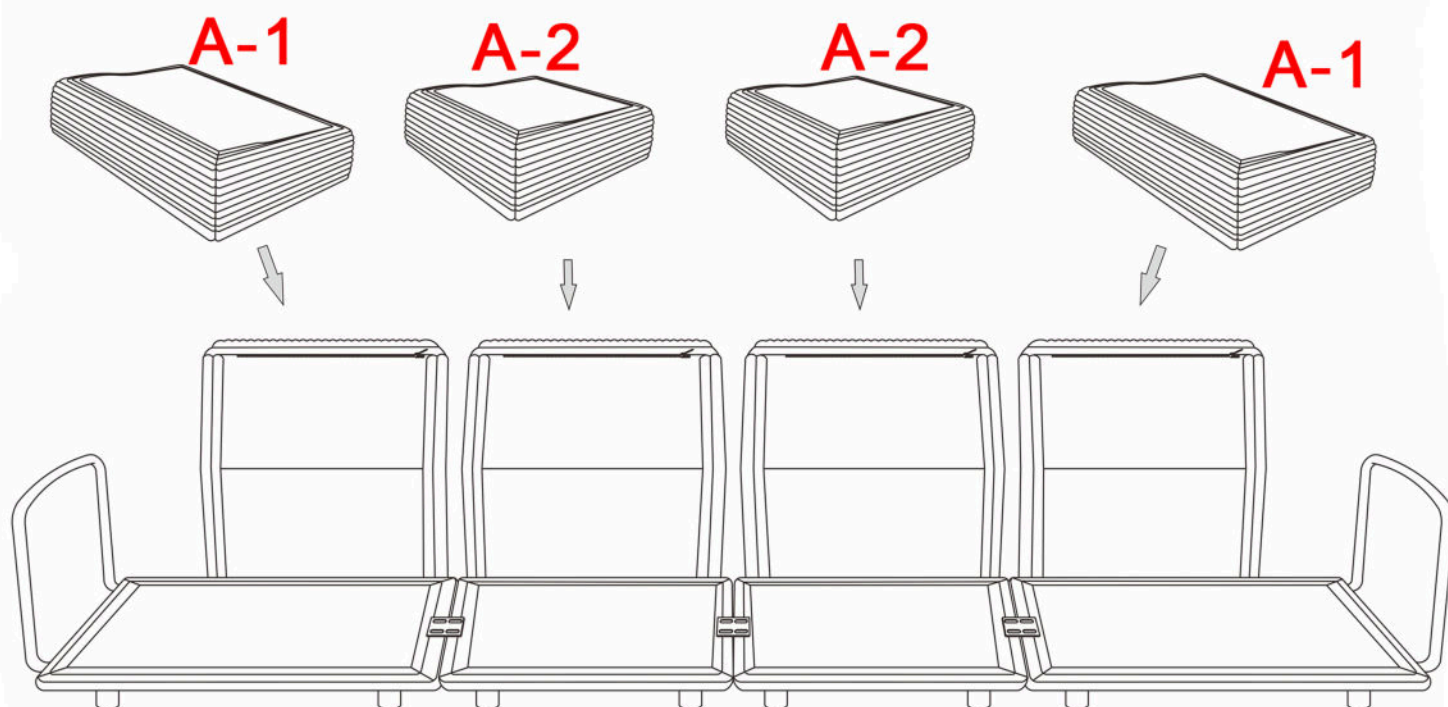


Step 8. Put the velcro(R) on each seat cushions.

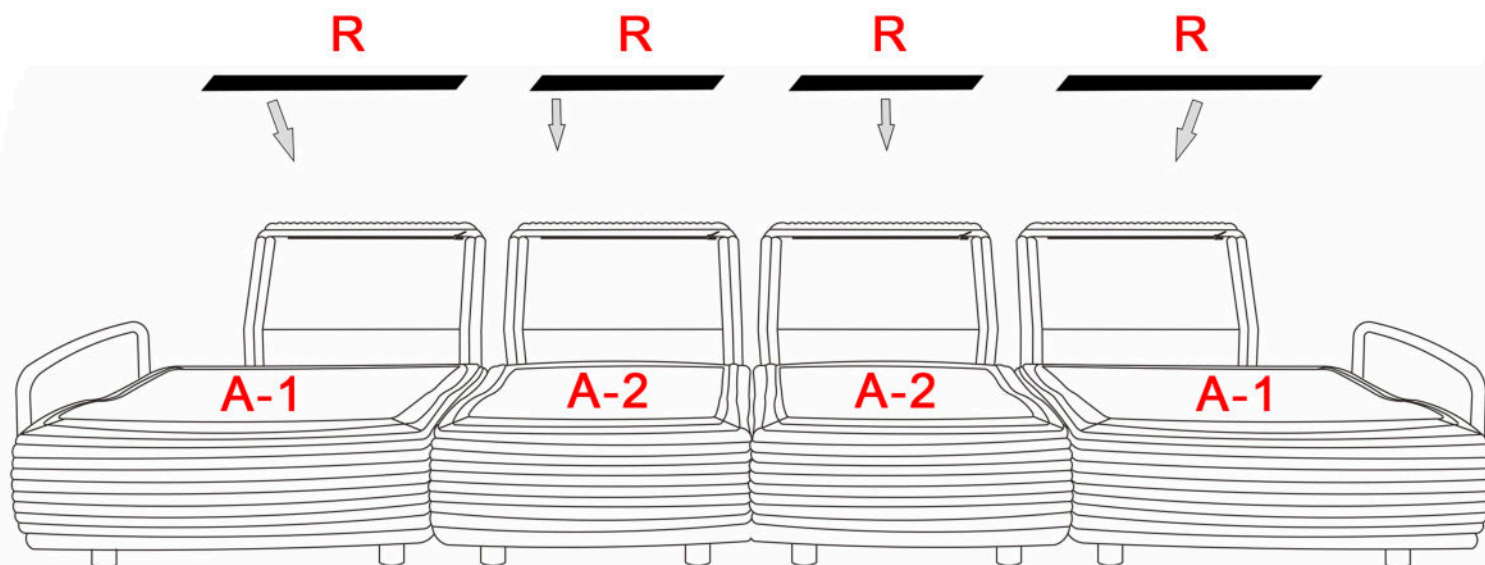


Step 9.Put the seat pad on each seat cushion.

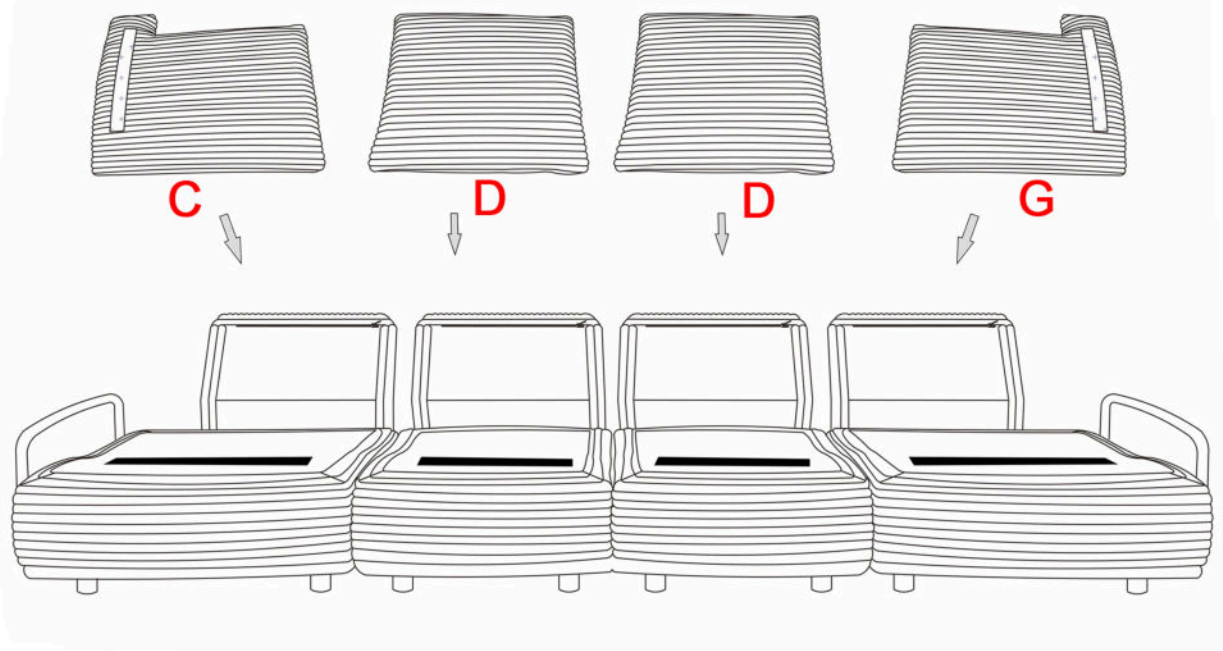


Step 10.Put the arm pad on seat pad C and G

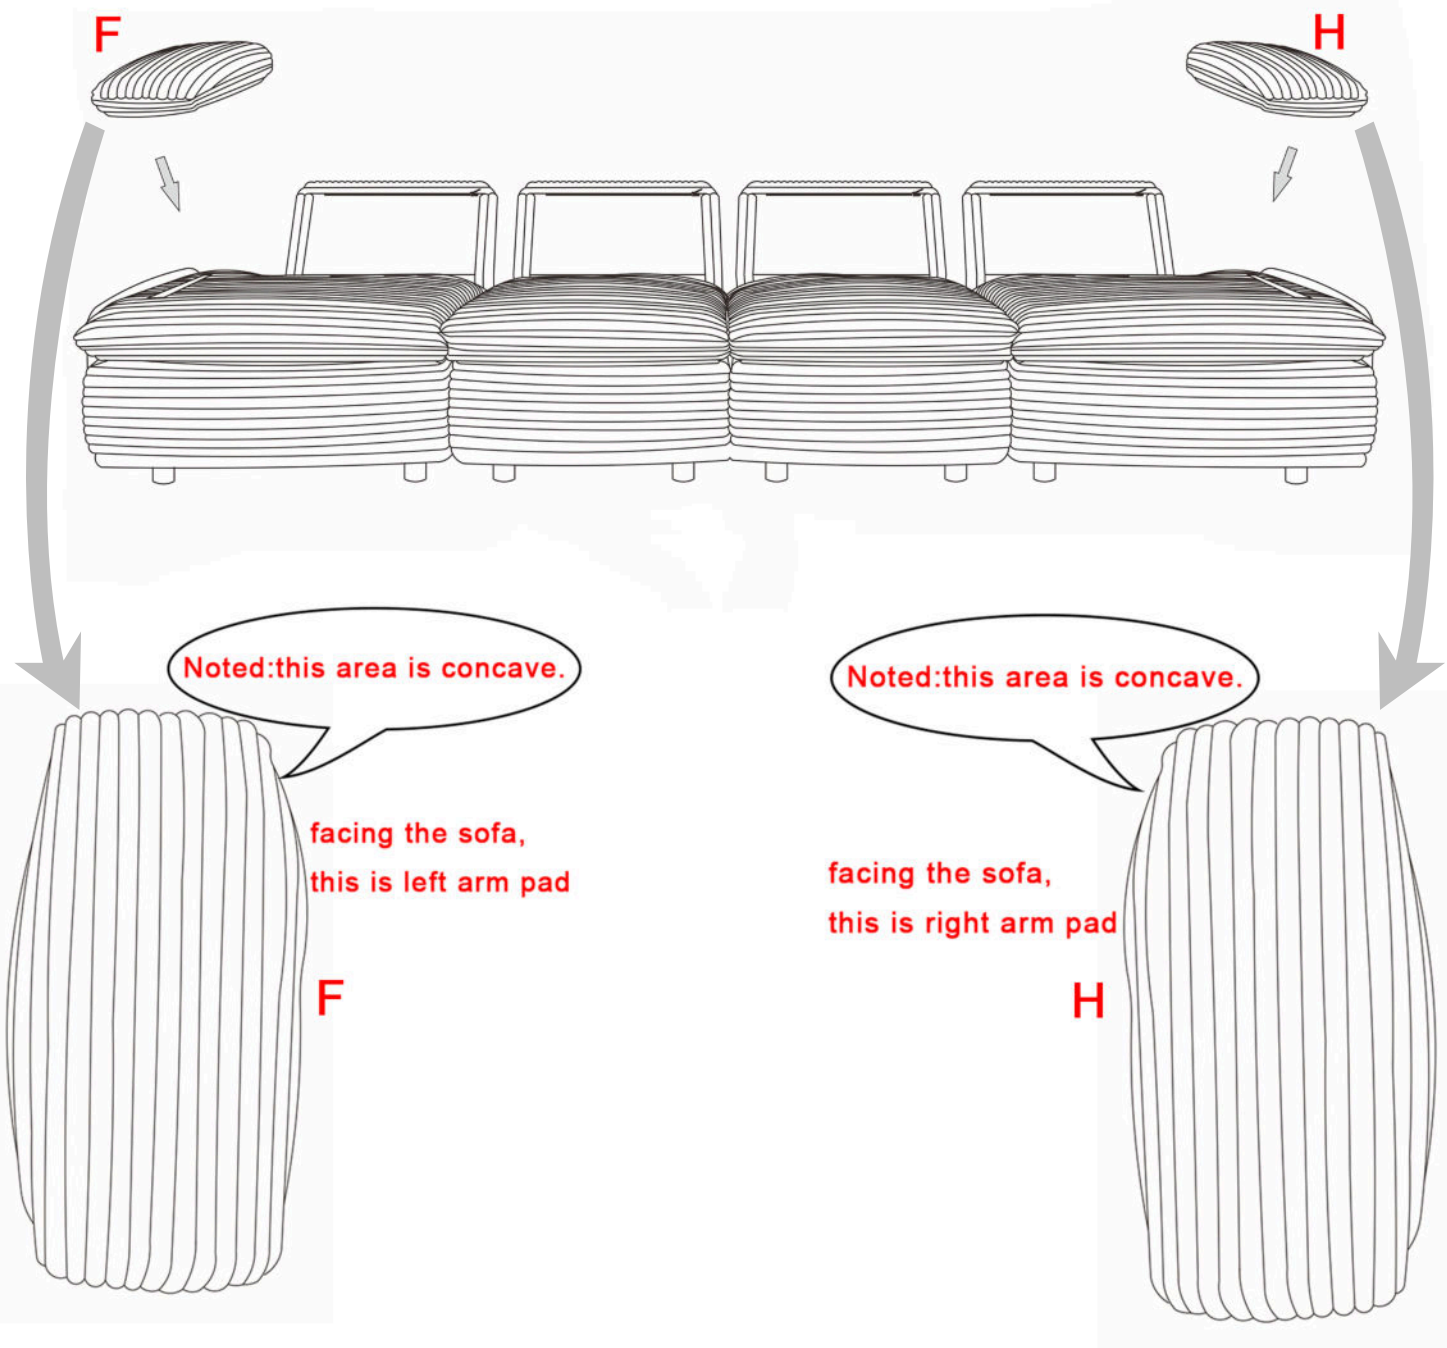



Step 11.Zip on the back cushion to the back frame.

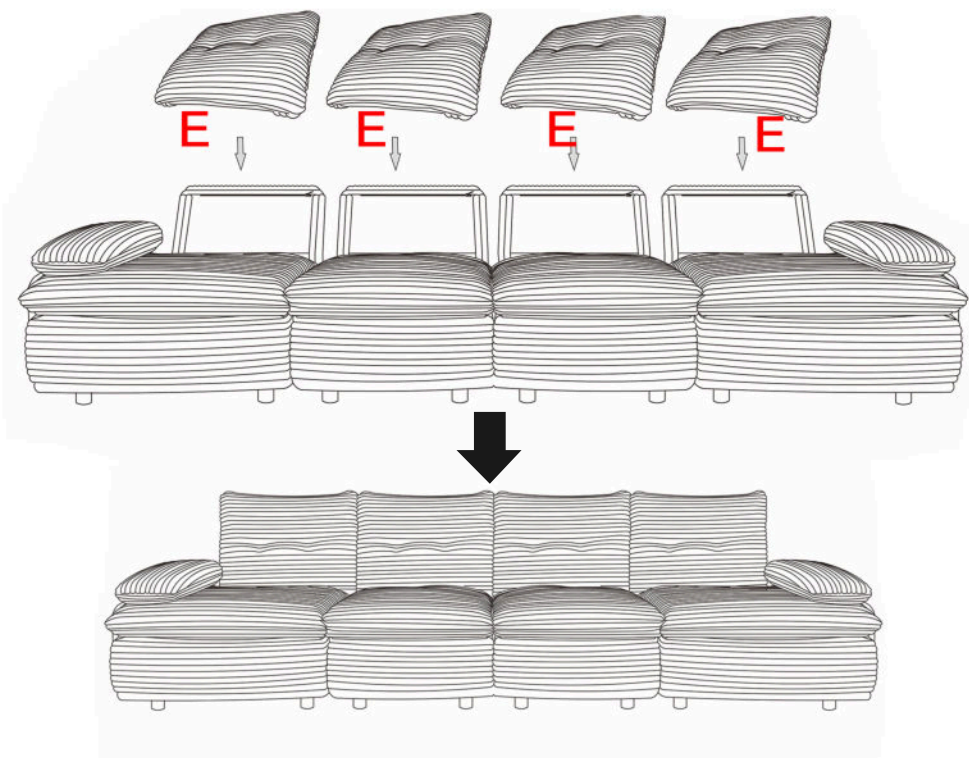

Step 12.Install the leg(Q) under the seat board(M); then put the velcro on the seat board, and then put the seat cushion(B) on the seat board(M) step by step.

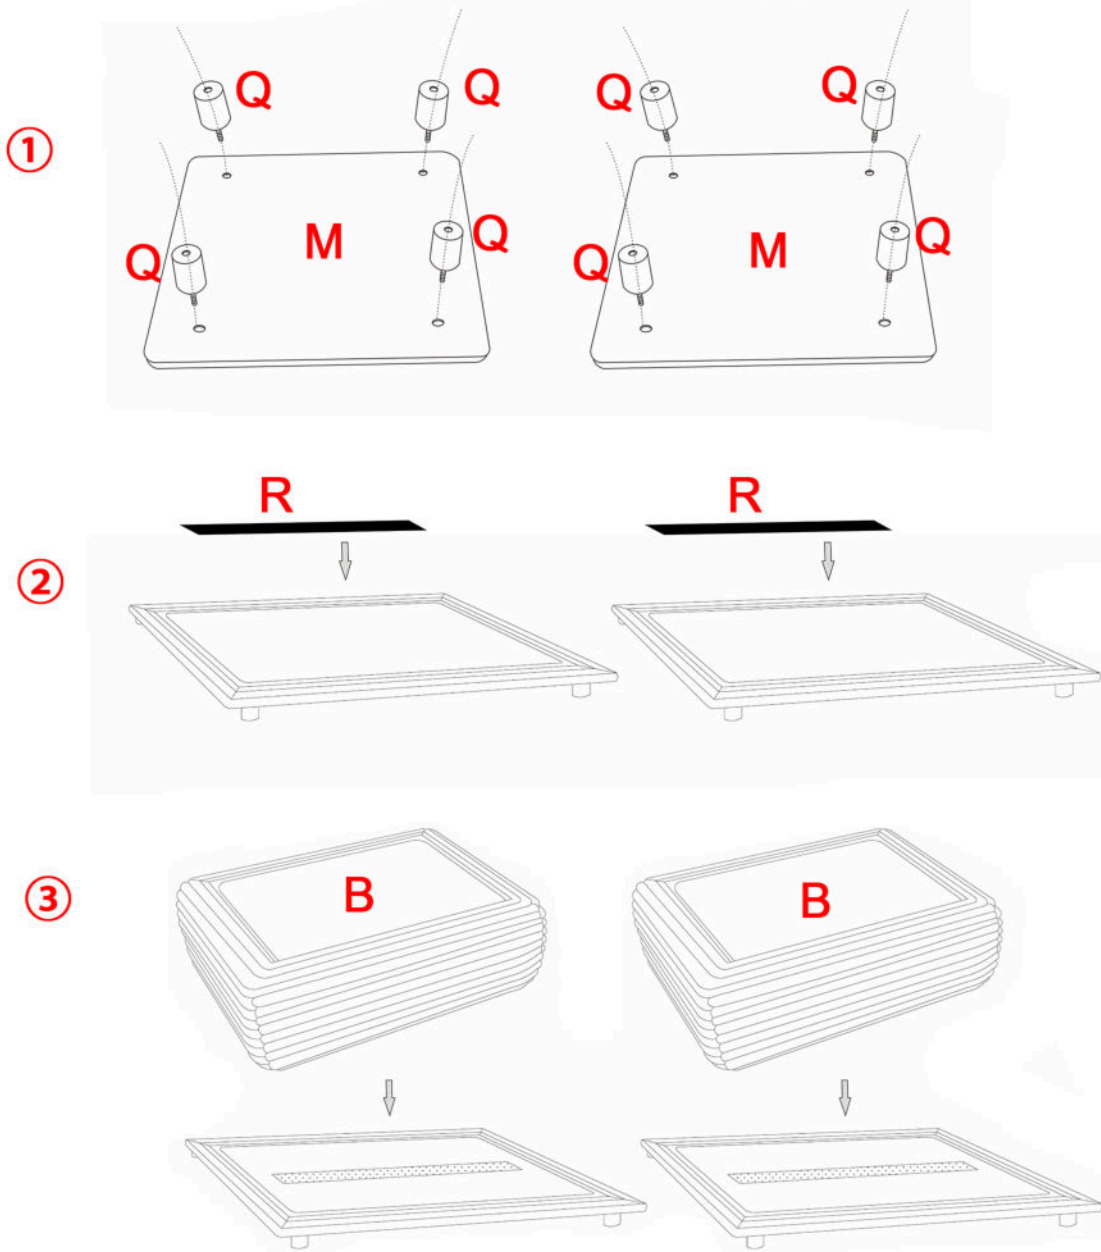

Step 13. Put the velcro on the seat cushion(B),then put the seat pad(D) on the seat cushion(B).

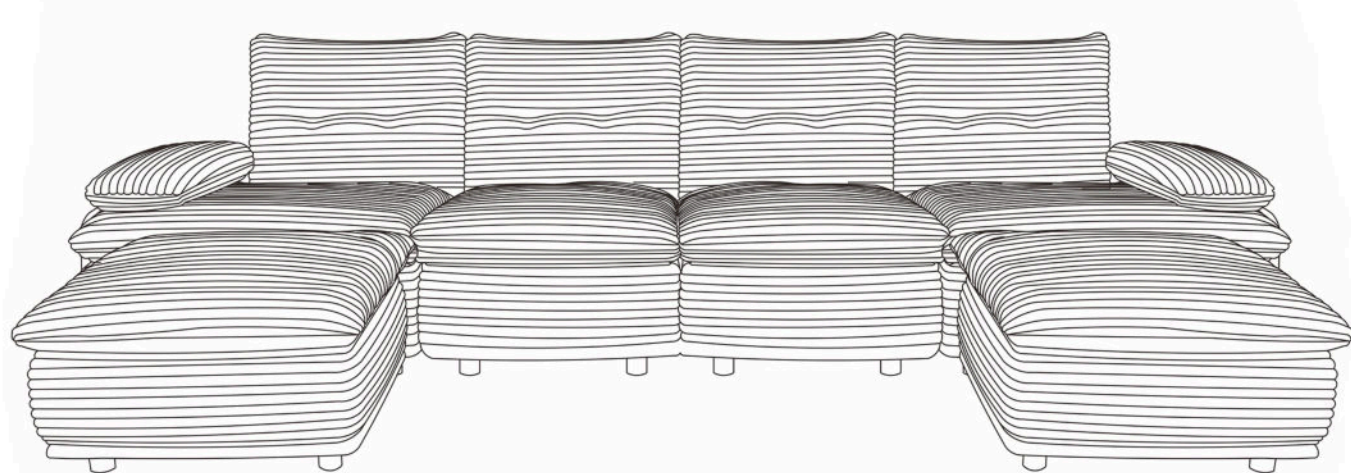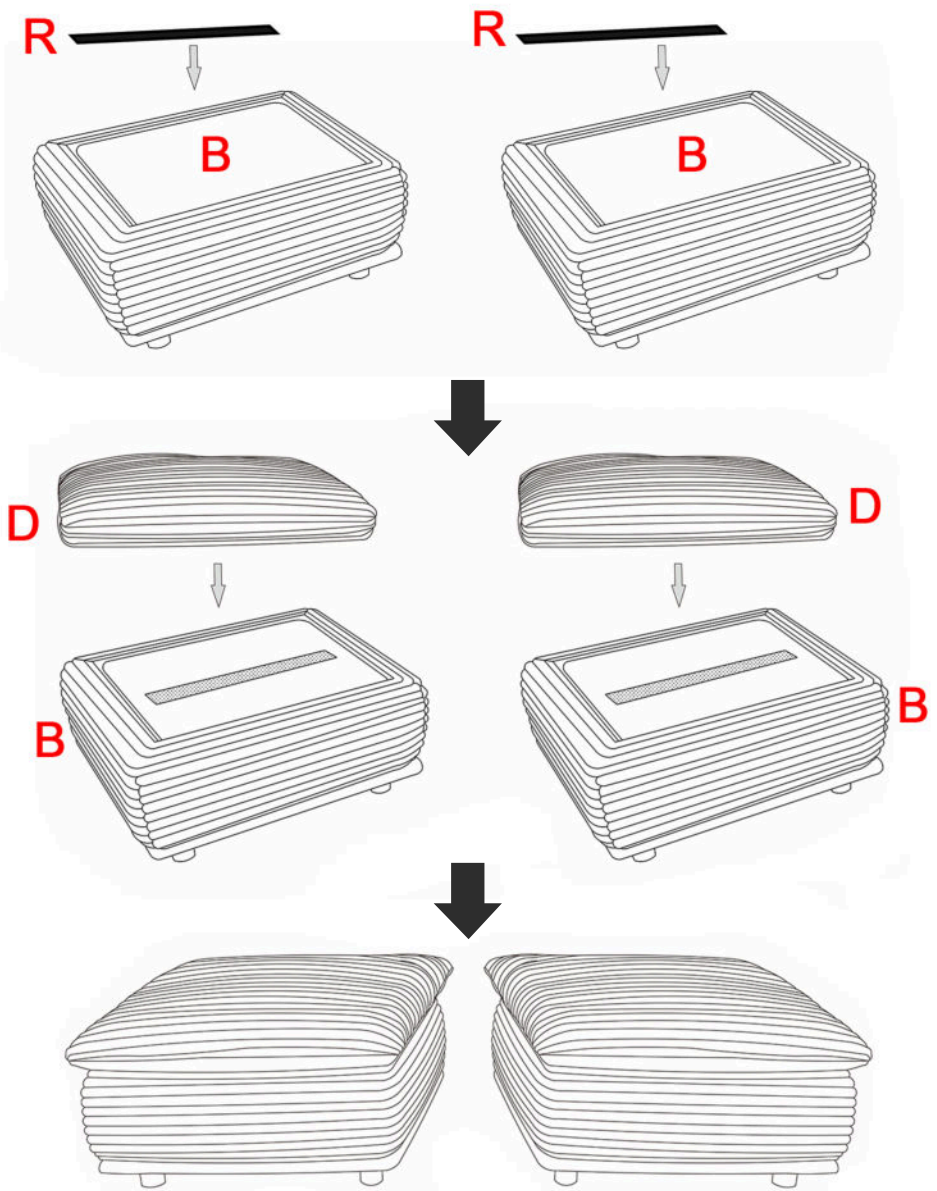



The cushions need 72hours
to recover and fully inflate
before using them.