




WARNING:

CHOKING HAZARD/SHARP POINTS- Assembly hardware contains small parts and components with sharp points. Adult assembly required. Attention: This unit must be attached to a wall to prevent tipping over!!


Instructions for: 7104YT Coat Locker, Wall, 10-Section

Hardware Package **HCJW**

Qty.	Description
(1) XAUS	4mm Hex Wrench
(12) XAUR	2" Decorative Screw
(3) XCPT	#8 X 0-7/8" washerhead Screw
(10) XBTX	#6 X 0-5/8" Trusshead Screw
(3) XAFH	#8 X 3" Drywall Screw
(2) XAEB	#6 X 1-1/4" Drywall Screw
(5) XCLX	Nylon Coat Hook

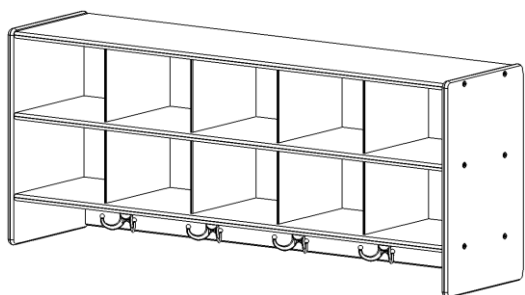


Parts:

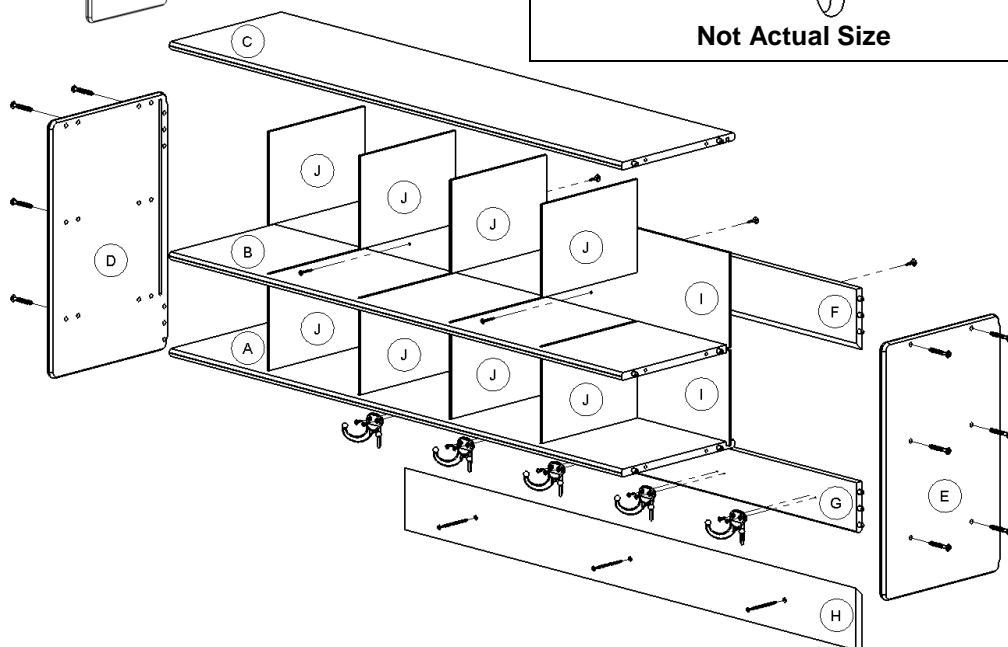

Tools Required:

- 4mm Hex Wrench, (Provided)
- Medium Phillips Screwdriver


Hardware Illustrations

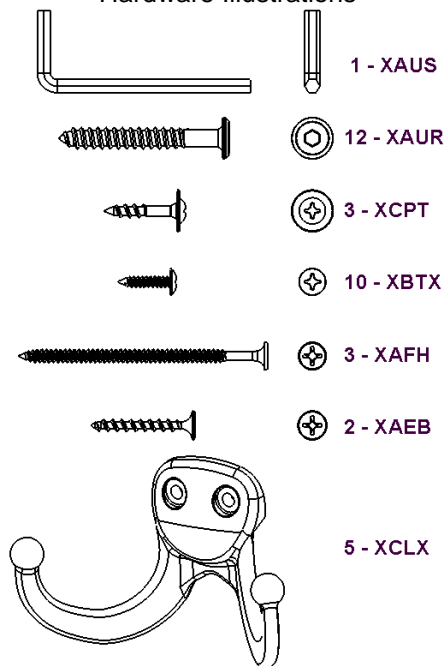


Not Actual Size

Assembly Instructions:


1. Place Hook Rail-G on flat surface and install 5-**XCLX** Coat Hooks with 10-**XBTX** Screws using Phillips Screwdriver. Note location of rounded edge in respect to hook placement. Set aside for installation later.

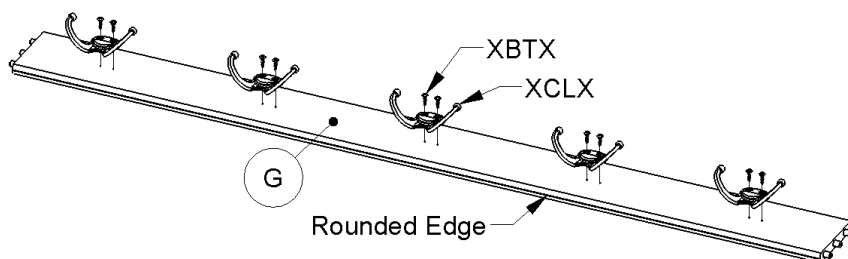


2. Install Top-C, Bottom-A, and Shelf-B to LH Side-D by aligning dowels. Ensure back grooves all align and rounded edge of shelf is down. Secure with 6-**XAUR** Decorative Screws with 4mm Hex Wrench provided.

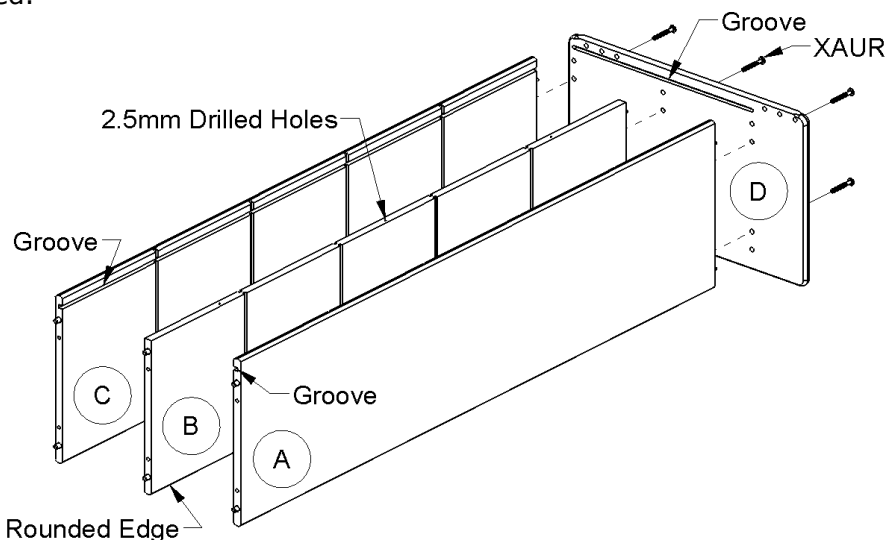


3. Install RH-Side-E by aligning dowels. Ensure back groove is up and aligns with other grooves. Loosely install with 6-**XAUR** Decorative Screws with 4mm Hex Wrench provided.

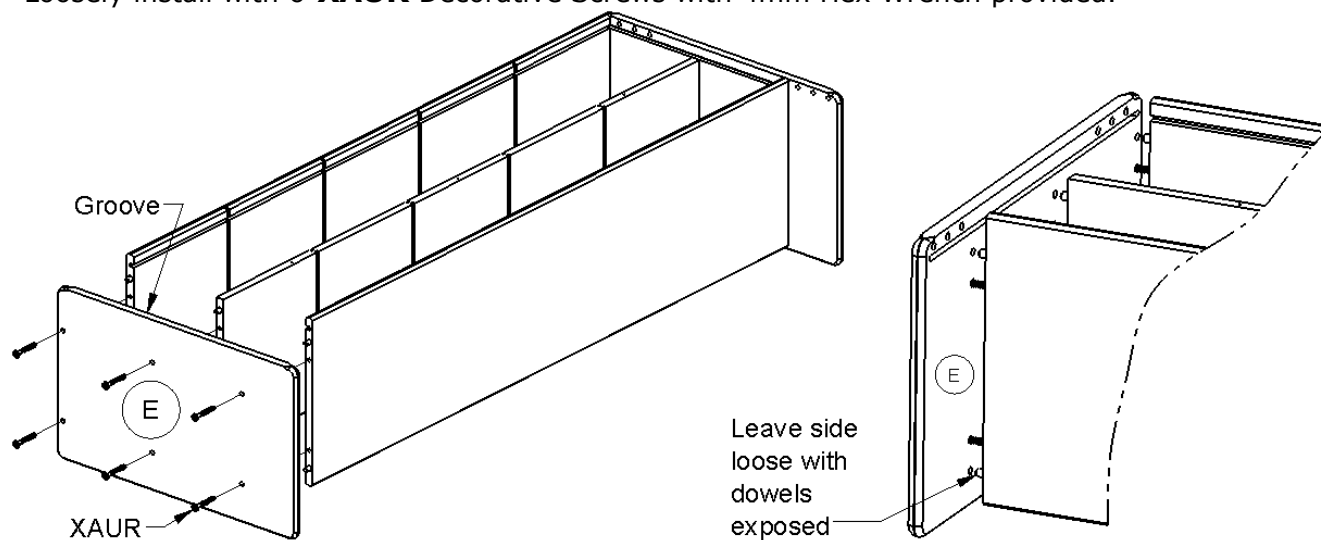


4. Drop in 8-Hardboard Dividers-J into grooves with rounded edge down.

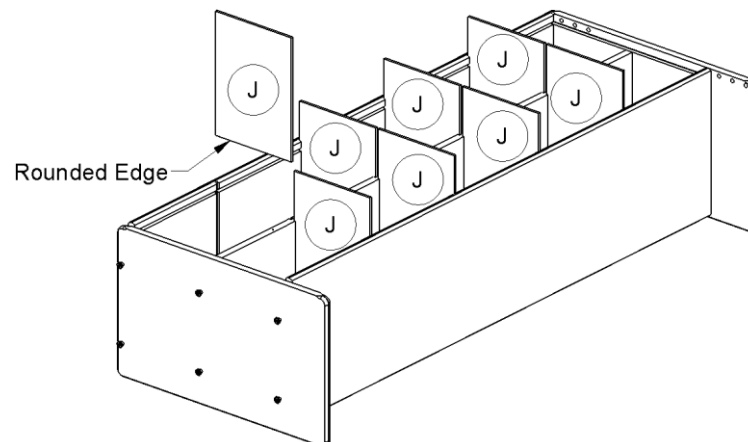


5. Insert 2-Backs-I by inserting into LH Side groove on one end, bowing into other groove on opposite end, and sliding into full length grooves on Top and Bottom.

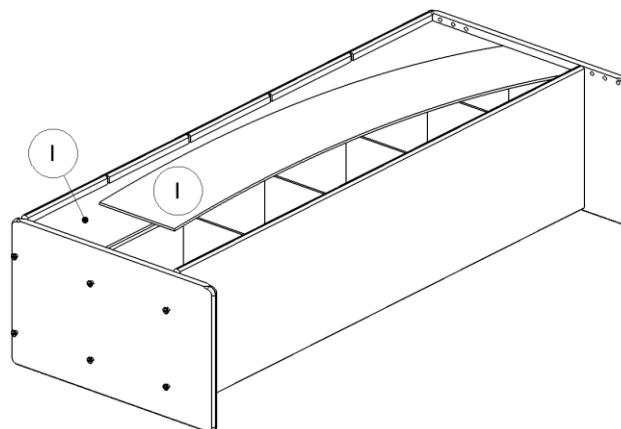

6. Install Hanging Bracket-F and Hook Rail-G by aligning dowels. Ensure Backs (previously installed) are seated into Top, Bottom, and Side grooves. Note location and orientation of mitred edge of Hanging Bracket and hooks on Hook Rail. Tighten 6-**XAUR** Decorative Screws previously installed.

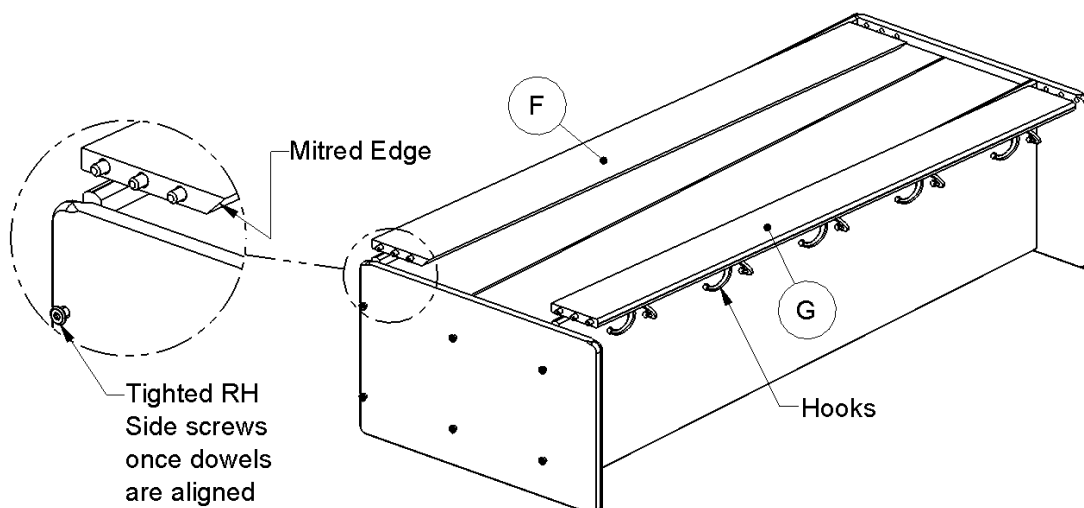

7. Locate predrilled holes in middle shelf and install 3-**XCPT** Washer head Screw with Phillips Driver.

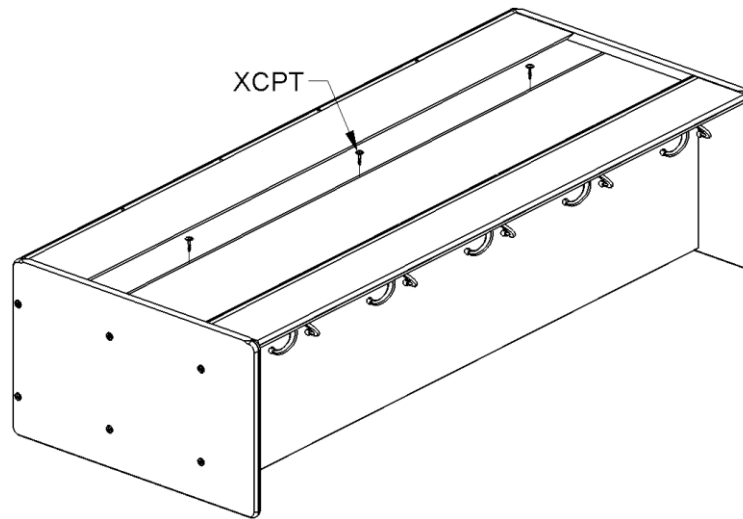


8. Instructions for Wall Mounting:

- a) After selecting the location and mounting height on the wall, determine the positioning of the wall studs and attach the Wall Mounting Bracket-H to the wall studs using included 3-**XAFH** 3" Drywall Screws (note orientation of mitre of wall bracket in diagram below).

NOTE: Wall mounting bracket must be secured to at least two wall studs.

- b) Lift the Wall Locker up into position above the wall mounted bracket and allow the unit to slide down into position on the wall mounted bracket.
- c) Finish securing the unit by inserting 2-**XAEB** 1-1/4" Drywall Screws through the back of the unit and into the wall mounting bracket secured to the wall. This step will ensure that the unit will not lift off the wall mounted bracket.

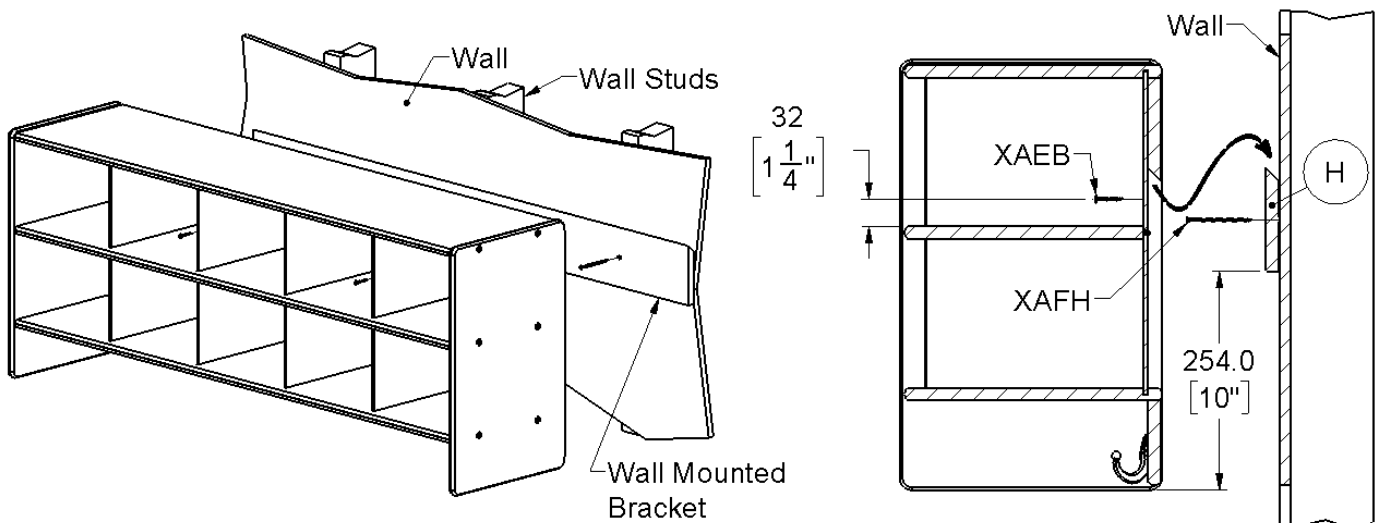

9. If you experience any difficulties when assembling this product, please contact the Jonti-Craft Customer Relations Team at (800) 543-4149 or sales@jonti-craft.com. All other requests for assistance must be directed to your Jonti-Craft Dealer.

General Care & Maintenance Guidelines: www.jonti-craft.com/generalcare