

How To Assemble Your Ottoman Divan Bed

Now it's time to set up your dream bed! Assembling an ottoman bed is an easy process. All you need to do is follow the instructions properly. First, take your time to attentively unpack each and familiarise yourself with all the accessories. Once these steps are complete, let's get started.

- Click in the chrome legs into each base. These lock in with a hard tap. Note: once locked in the legs cannot be removed



- Line up the headboard cutouts with the holes in the back of the base.
Note: Material will need piercing.
Screw in the bolts with the white washer fed into the back of the headboard. 2 bolts are provided for each side



- Push in the 2 U clips, this will secure the 2 bases together.



- Use the plastic headed bolt to secure the lids together
Note: There is a rip in both lids to indicate where the screw will go. Also, the lids will not close if the mattress isn't placed on top. If your bed has a footboard this can be slid on at the end once the lids are closed.



How To Assemble Your Metal Ottoman Bed


Assembling the metal ottoman style base can be a little tricky. The steps outlined below should help you through each part of the process. Ideally, we advise 2 people put this together to help support/align parts whilst the other person screws in bolts etc.

- Assemble the bed frame first. Headboard, siderails and footboard. Slot in the siderails attached to headboard and footboard. Nuts are already attached to the bolts. You will require a size 13'-14' size spanner. It's ideal if you place in the long black bar which goes inside the

storage base. Bolts are already attached inside the side rails.



- Open the metal slatted frame and small rectangular box which contains the 2x small bars, 1x 'U' thin bar and 10x bolts. There are 6x regular bolts and 4x of the allen key style bolts. Once the metal slatted frame is opened, place the small black bars either side of the frame with the allen key bolts. Place the 'U' bar on one of the sides of the metal frame where you have placed the smaller black bar on the side. Note the 'U' bar only goes on one side of the frame.
- Fix the gas lift pistons in place – Note: If the cylinders do not align, then simply twist the hydraulic cylinders slowly until it aligns up.
- Place the metal frame on top of the bed frame. Note: Where the 'U' is that is the head side and frame only go on one way. The remaining 6x bolts go on top of frame. 3x on each side.

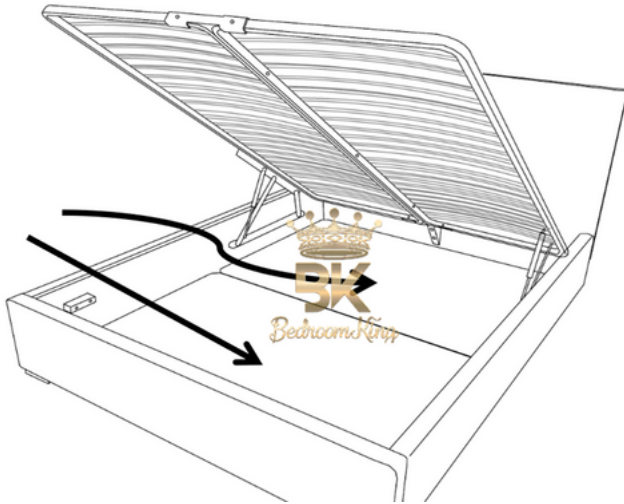

How To Assemble Your Slatted Bed Frame

Assembling the slatted bed frame should take you no longer than 15 minutes. Below we have outlined detailed steps to support you from start to finish! Note all bolts are pre-attached to our bed frames.

- Unscrew all bolts attached to head and foot (Total 8 bolts)

- Click in the sides both left and right on the headboard side first, marked A,B. Tighten the bolts slightly
- Click in the sides both left and right on the footboard, marked C,D. Tighten these bolts slightly.
- Place in the support bar(s) marked E. Now tighten all bolts in all 4 corners (Total 8 bolts).
- Place the slats evenly marked F. These can be screwed in, but this is optional as some customers may want to remove to vacuum.




How To Assemble Your Divan Base Bed

Now it's time to set up your dream bed! Assembling a divan bed is an easy process. All you need to do is follow the instructions properly. First, take your time to attentively unpack each and familiarise yourself with all the accessories. Once these steps are complete, let's get started.

- Fabric drawer retraining straps ensure that your drawers do not slide open during transit. They are stapled on the inside of the divan base. To remove them without damaging your divan base, please follow these instructions: -
 -Cut the fabric strap across its centre to release the drawer.
 -Cut the remaining fabric strap to the desired length so it is not in the way when opening and


closing the drawer.

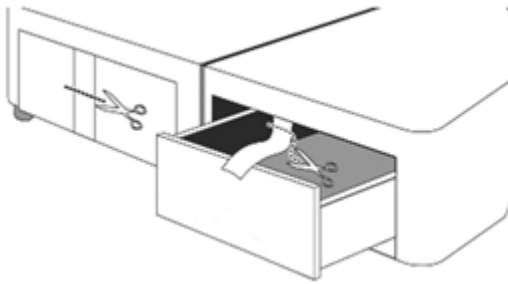

- Click in the chrome legs into each base. These lock in with a hard tap. Note: once locked in the legs cannot be removed



- After fitting the legs, turn both parts of the divan on their side and bring them together so that the two flat ends meet. Where the ends meet, fit the U-CLIPS so that they clamp around the underside timber piercing the mesh fabric.

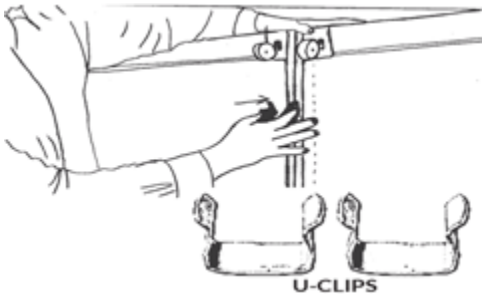

- Line up the headboard cutouts with the holes in the back of the base.
Note: Material will need piercing.
Screw in the bolts with the white washer fed into the back of the headboard. 2 bolts are provided for each side

