


ASSEMBLY INSTRUCTION

PLEASE READ BEFORE ASSEMBLING!


Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Read manual before assembling, it helps!

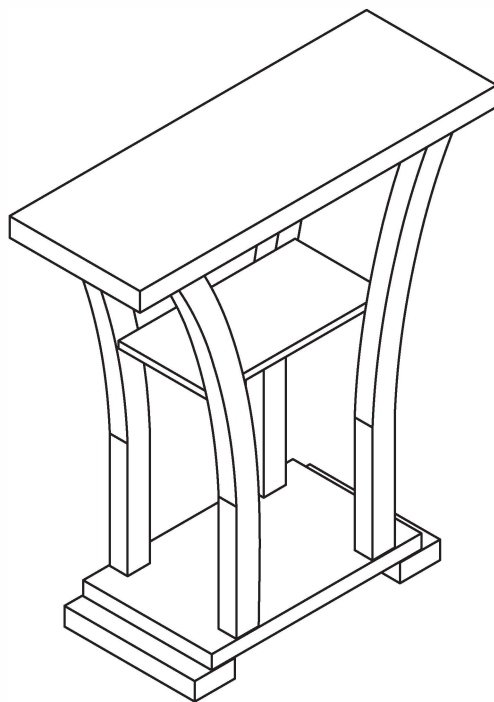



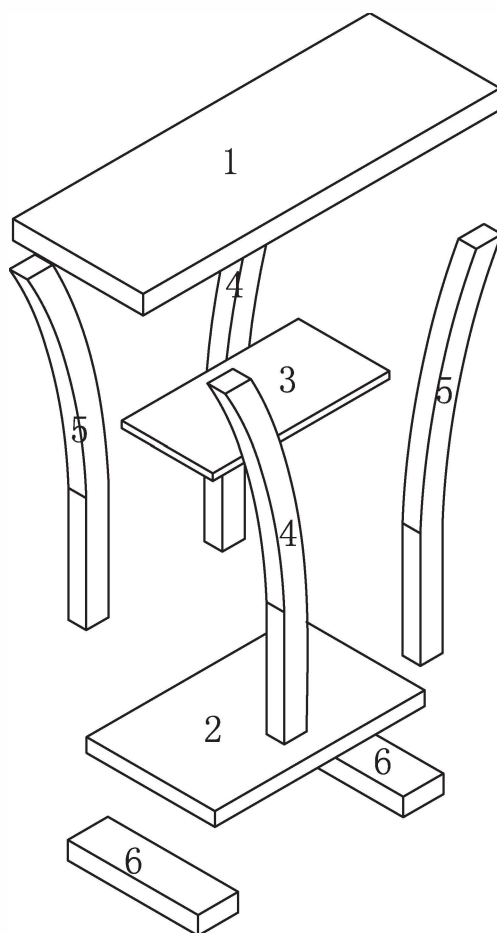








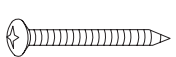
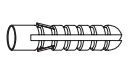



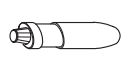


PARTS IDENTIFICATION




(1)	1pc
(2)	1pc
(3)	1pc
(4)	2pcs
(5)	2pcs
(6)	2pcs

HARDWARE IDENTIFICATION

A		$\Phi 8 \times 25$	10pcs
B		$\Phi 8$	4pcs
C		M8x55	4pcs
D		$\Phi 6 \times 65$	4pcs
E		$\Phi 10 \times 15$	4pcs
F		M4	1pc
G		$\Phi 14$	1pc
H		M6x45	4pc
I		$\Phi 45$	4pcs
J		$\Phi 13$	4pcs
K		197×5×1	1pc
S		12×12×1	2pcs
L		$\Phi 4 \times 25$	1pc
M		$\Phi 5 \times 40$	1pc
N		$\Phi 8 \times 40$	1pc
O		ET15	4pcs
P		L29	4pcs
Q		$\Phi 20$	4pcs
R		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ASSEMBLY INSTRUCTION


Begin assembly upside down. Use parts P to attach the legs to the shelf. Push part O with the opening over part P into the shelf, then use a screwdriver to turn each one 90 degrees to lock in place. Cover with sticker Q.

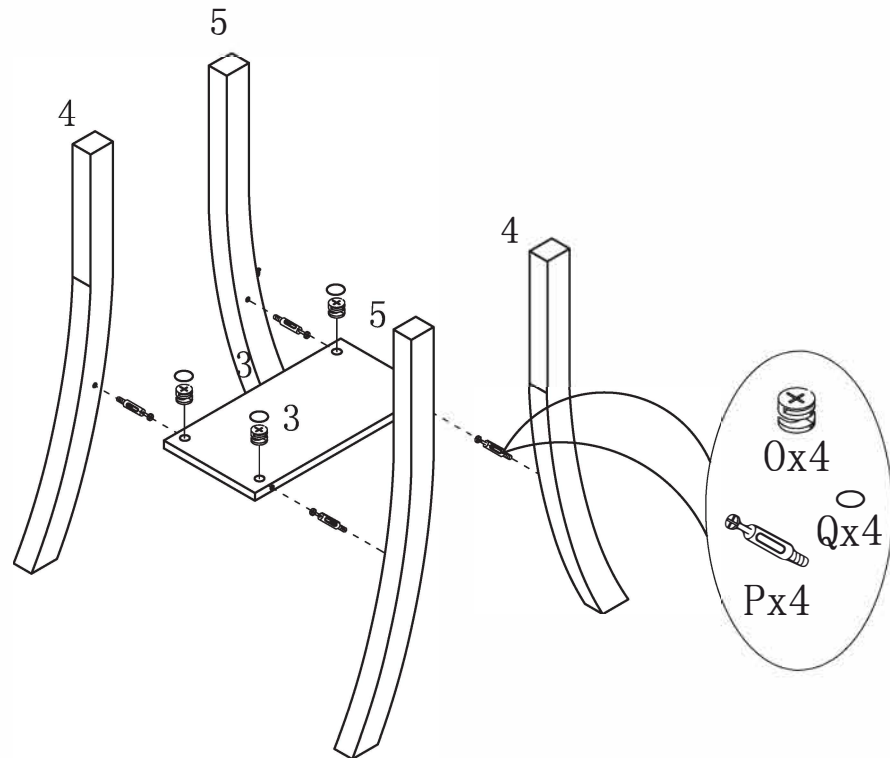

STEP1


STEP2

Use parts A and C to connect the legs to the table top (C will be visible through the hole). Insert part B into the leg with the curve facing the table top, threading over part C along with the washer and nut. Tighten the nut with part G. Cover the holes with stickers I.

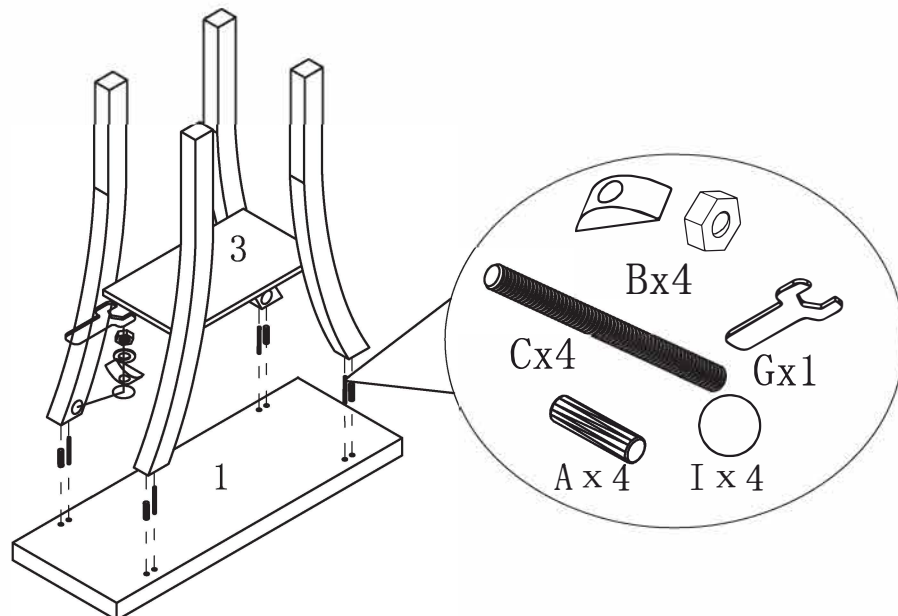

ASSEMBLY INSTRUCTION


Insert part E into the leg with the hole facing the table base. Attach base to legs with A dowels, then use F to screw D through the base into E which is in the leg. Cover the holes with J stickers.

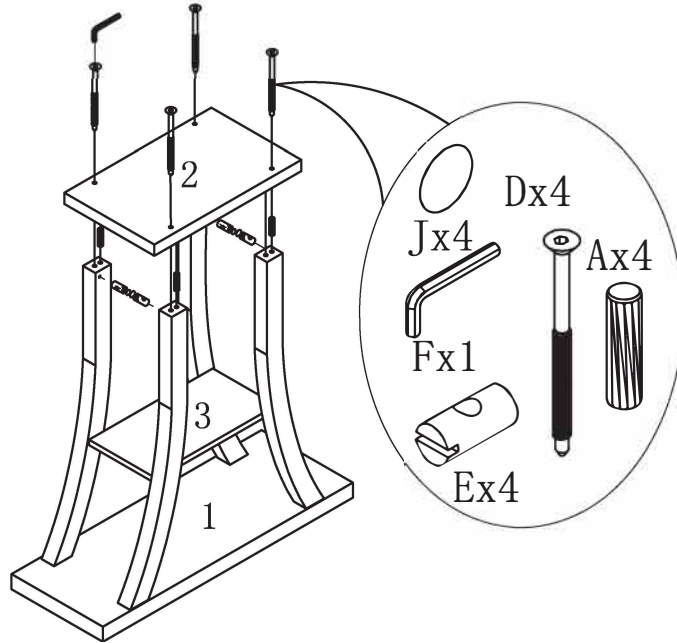

STEP3


STEP4

Align the feet to the base using A (wide edge out). Use a screwdriver to secure with H bolts.

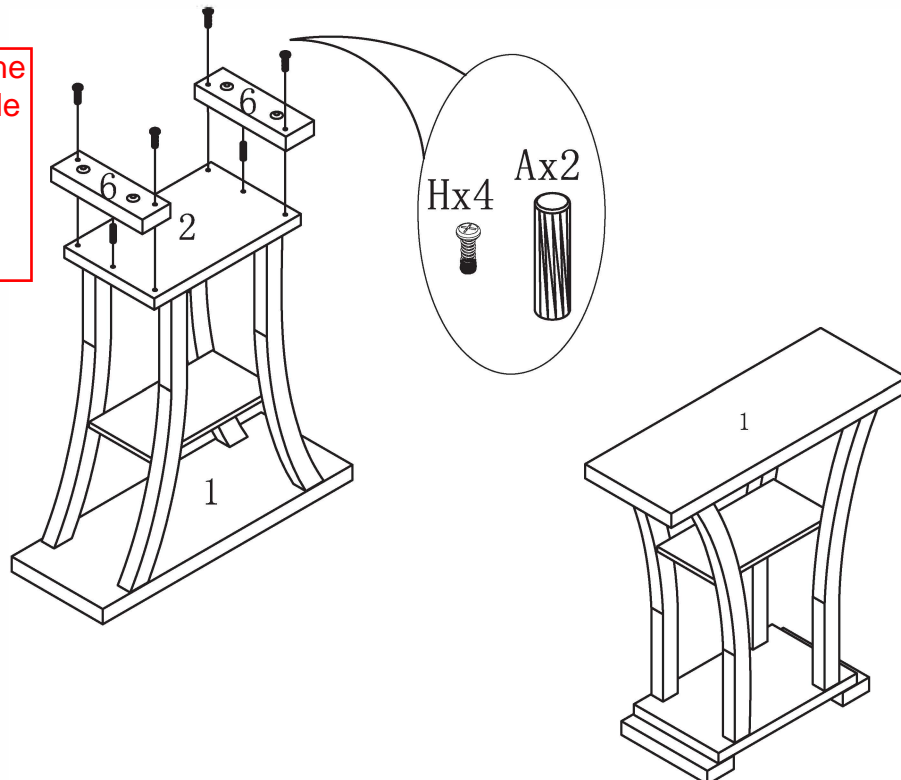


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :

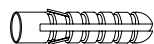

DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC

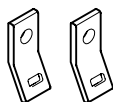

METAL BRACKETS $12 \times 12 \times 1$ X 2PCS

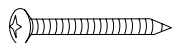

DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED

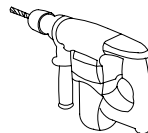


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

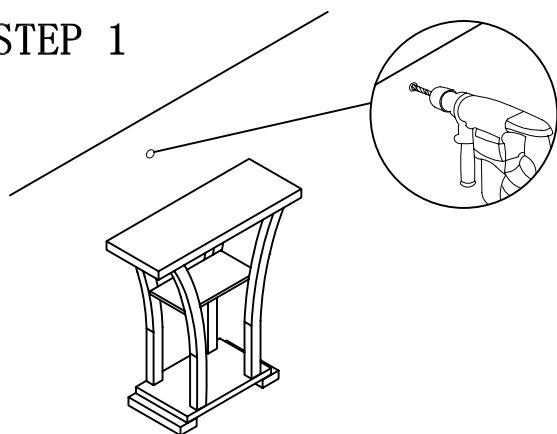


To drill a hole (about 1") on the wall.

STEP 2

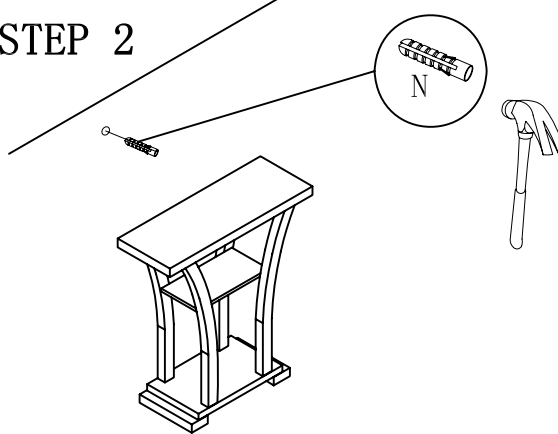


To tap drywall anchor into the hole.

STEP 3

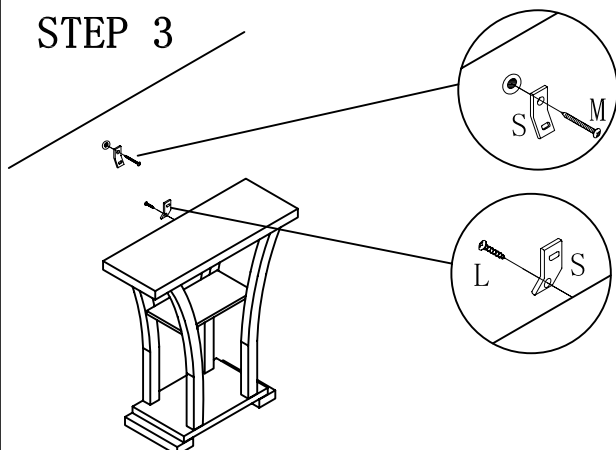

To insert the screw into each bracket and hang one on drywall anchor.

STEP 4

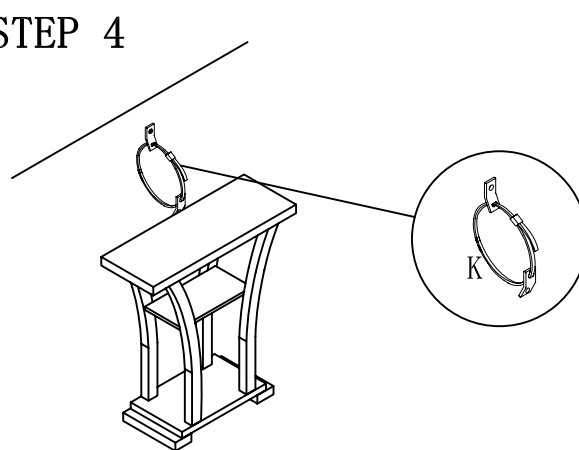

To tie the strap through bracket and pull it lightly till it steady.