


# DNA FOUNTAIN INSTRUCTIONS

( RUST FINISH )



PUT THE FOUNTAIN IN THE BASIN (BASE). BY USING THE BOLT AND NUTS FOR ATTACHMENT.

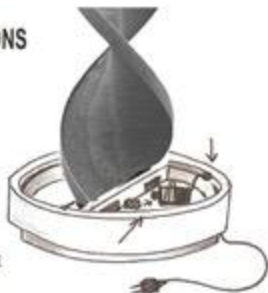

PUT THE MOTOR PUMP INTO THE BASIN AND CONNECT THE HOSE OF THE FOUNTAIN INTO THE MOTOR PUMP'S SPOUT. #BE SURE THAT THE PLUG OF THE MOTOR PUMP INSERTED INTO THE HOLE OF THE BASIN AS A PLUG EXIT.



FILL THE BASIN WITH WATER TO THE DESIGNATED LEVEL.

TURN-ON THE PUMP AND CHECK THE WATER FLOW.

PUT THE COVER PLATELETS UNTO THE BASE OF THE FOUNTAIN.

PUT AND ARRANGE THE RIVER STONES ON TOP OF THE COVER PLATELETS.

THEN TURN-ON AGAIN THE MOTOR PUMP AND SEE HOW IT WORKS THE RUSTIC DNA FOUNTAIN.



ENJOY!

