

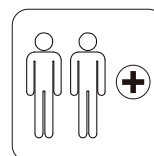
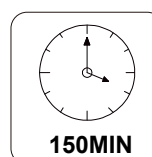
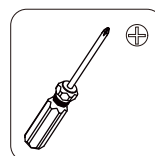
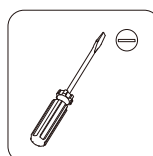


Installation & Assembly


Version:2.2

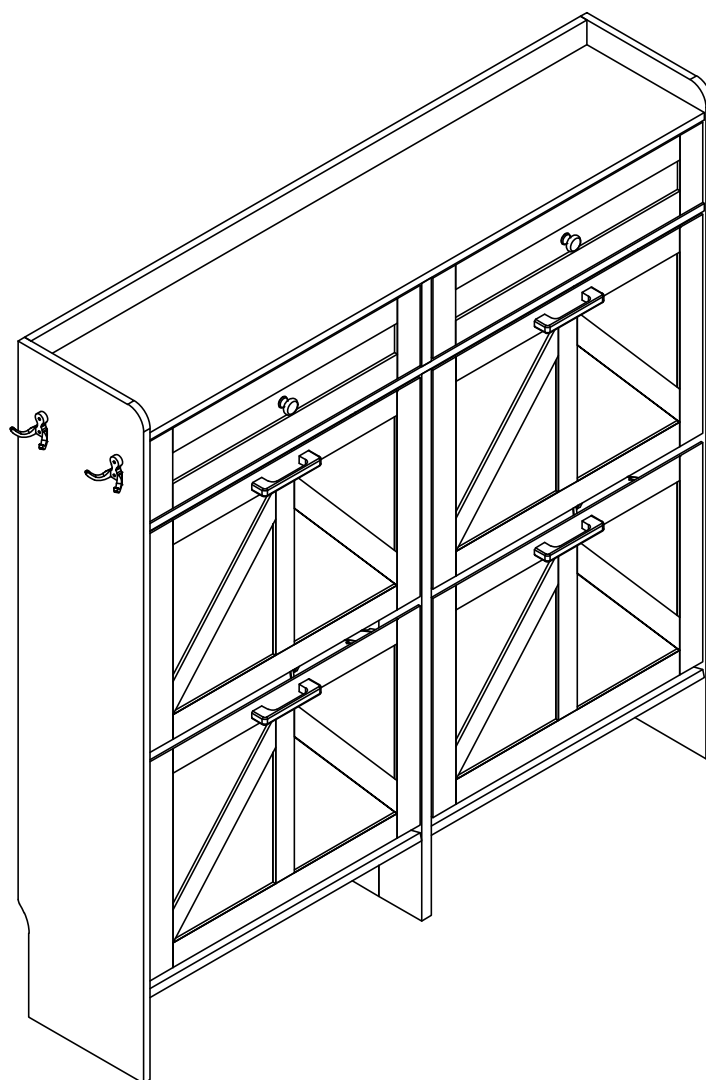


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

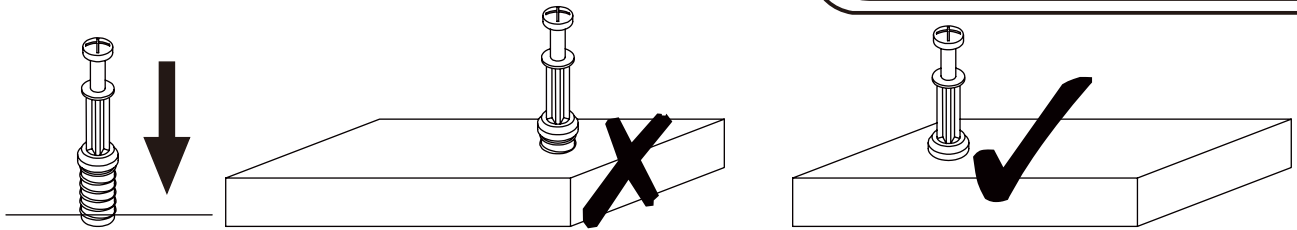


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

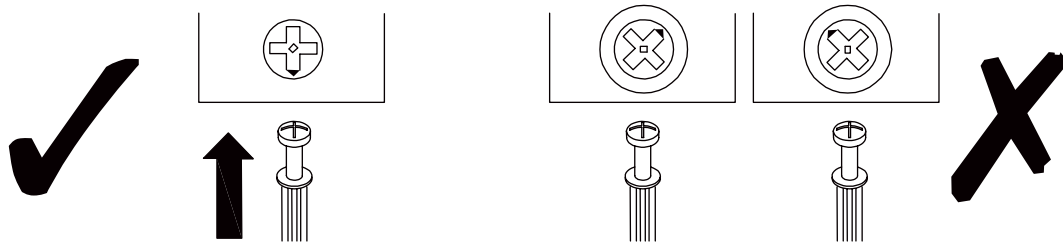

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










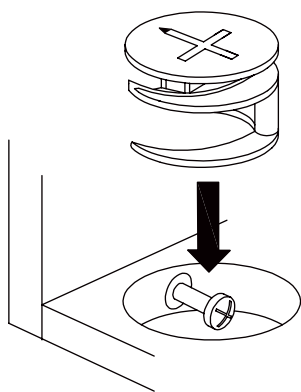











EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

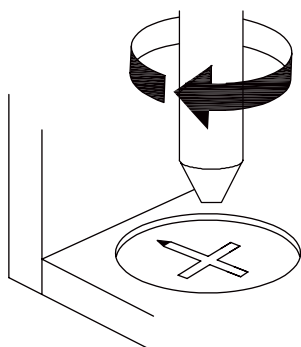

EN_Turn cam lock clockwise to tighten.

PACKING DETAILS

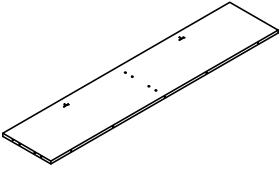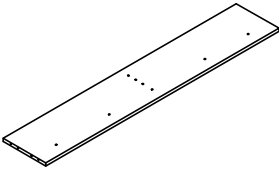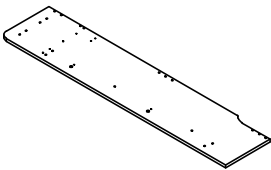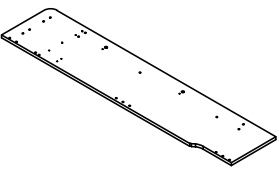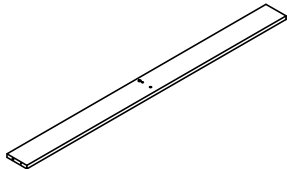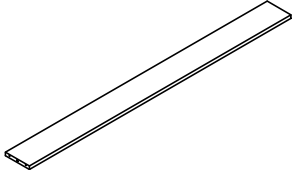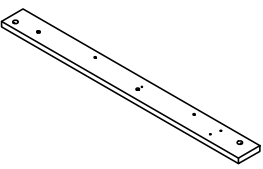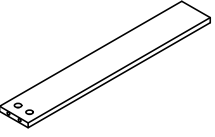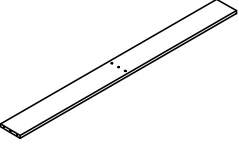
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x2	
⑩		x1	

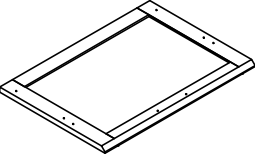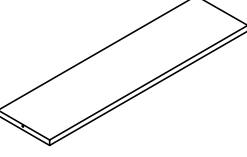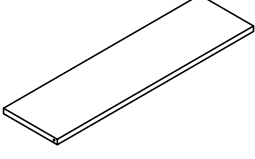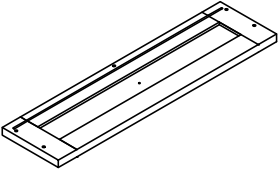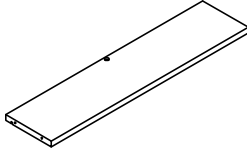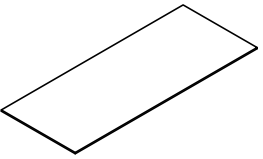NO.	PARTS	QTY	SPARE
⑪		x4	
⑫		x4	
⑬		x8	
⑭		x2	
⑮		x2	
⑯		x2	
⑰		x2	
⑱		x2	
⑲		x2	
⑳		x1	


PACKING DETAILS





NO.	PARTS	QTY	SPARE
	 Hardware Kit	x1	

PARTS

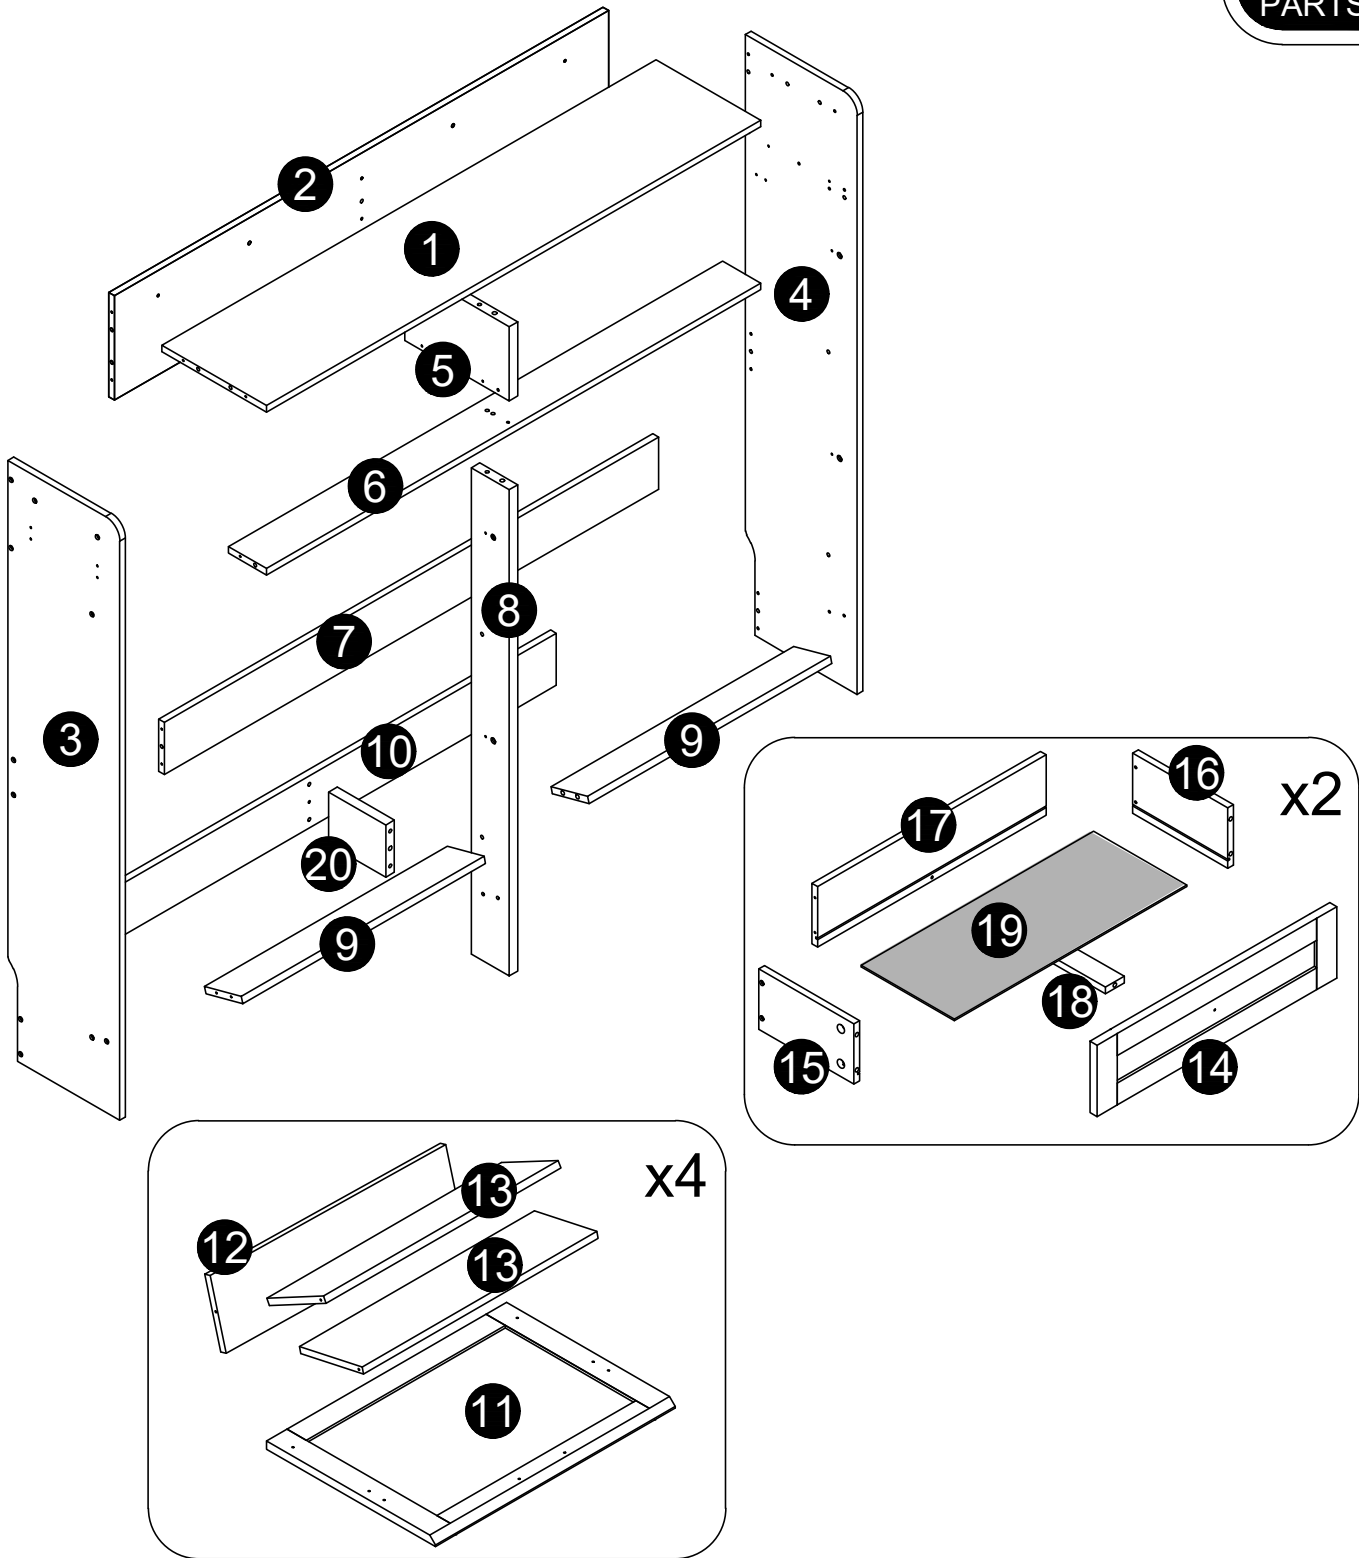

A x17 $\varnothing 6 \times 35 \text{ mm}$ +1(spare)	B x18 $\varnothing 15 \times 10 \text{ mm}$ +1(spare)	C x26 $\varnothing 6 \times 30 \text{ mm}$ +2(spare)	D x38 $\varnothing 4 \times 35 \text{ mm}$ +3(spare)	E x58 $\varnothing 3.5 \times 14 \text{ mm}$ +5(spare)	F x2 F-1 F-2
G x4 G-1 G-2	H x4	I x8 +1(spare)	J x2 $\varnothing 4 \times 12 \text{ mm}$ J-1 J-2	K x2 K-1 K-2	M x26 +4(spare)
N x8 N-1 +1(spare) N-2 +1(spare) N-3	O x2	L x4	R x4	P x2 P-1 P-2	
Q x1 M5	S x1 S-1 S-2				


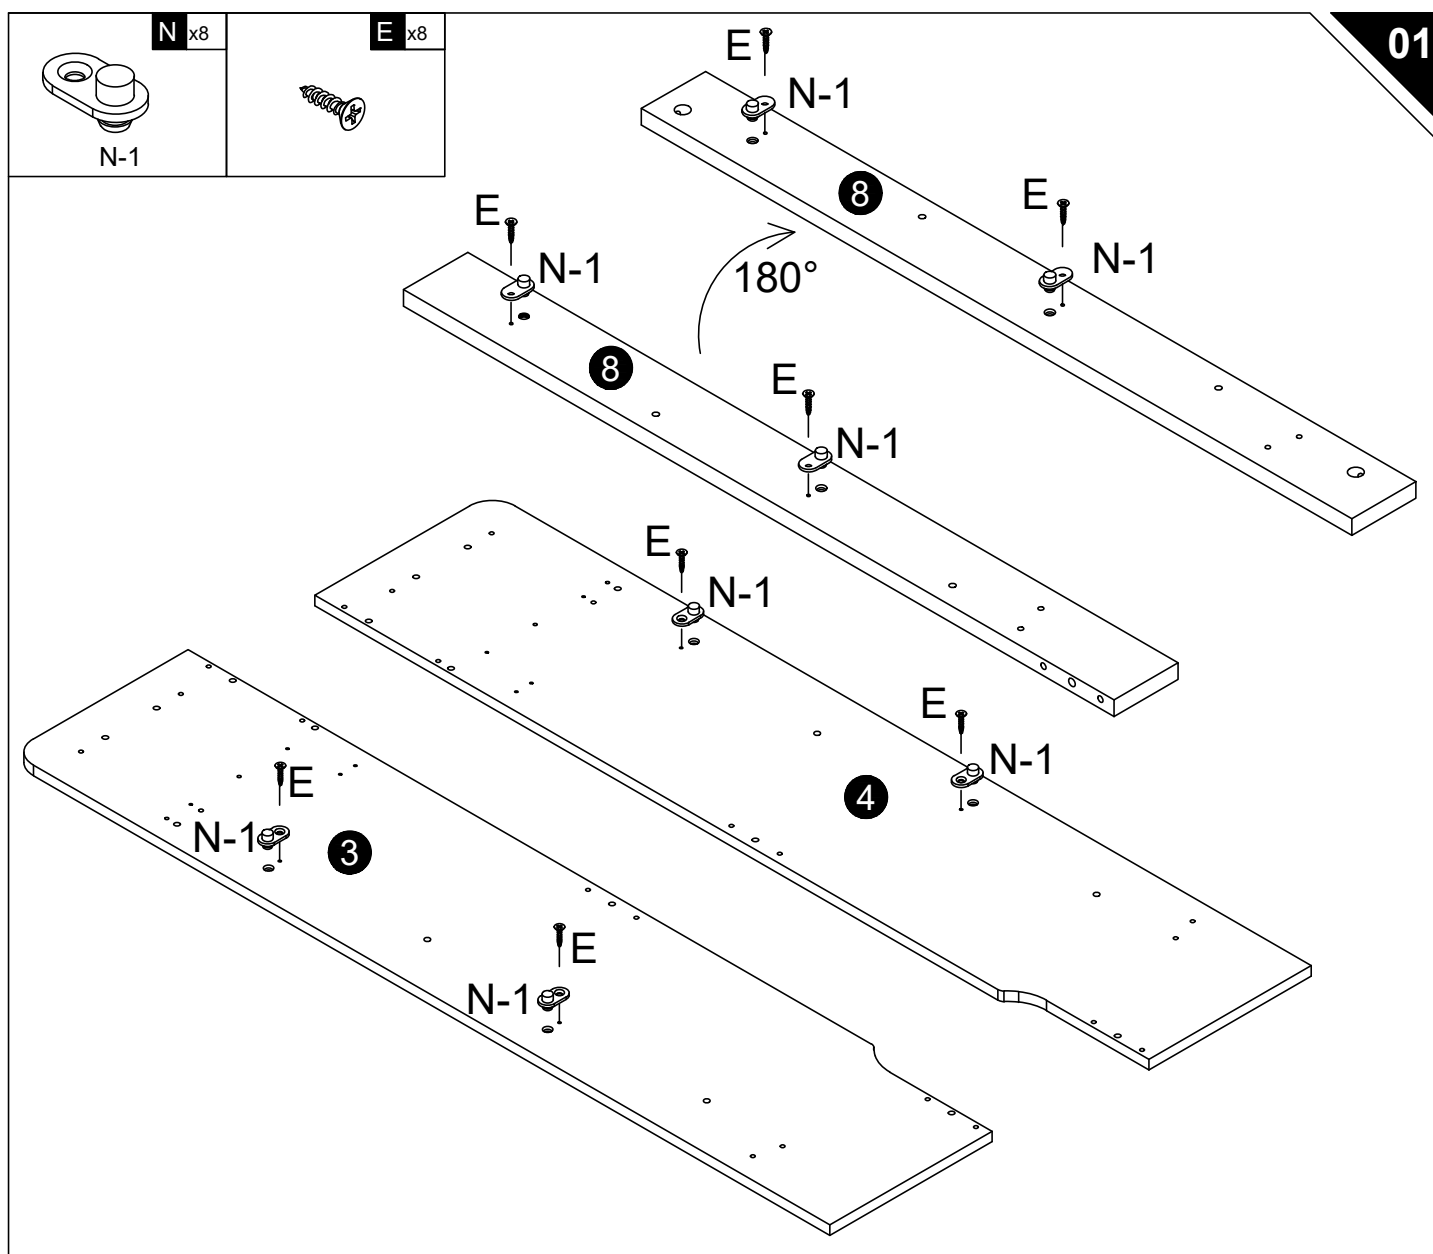


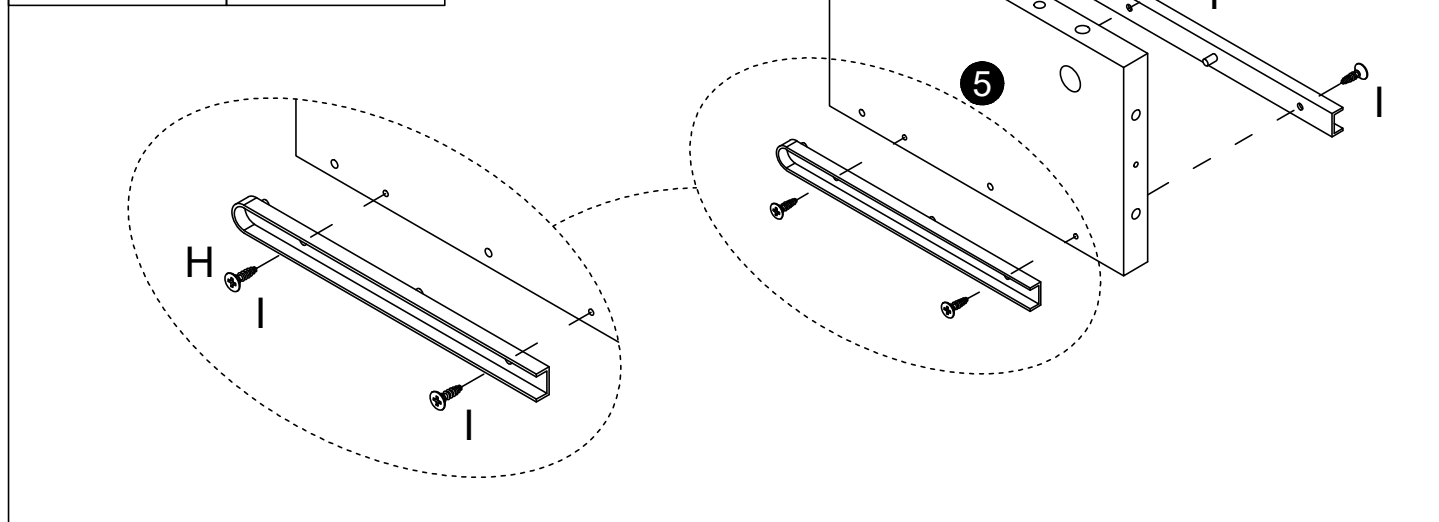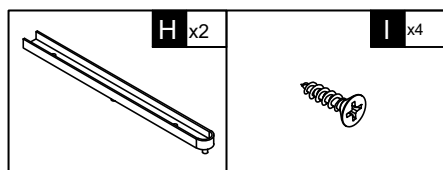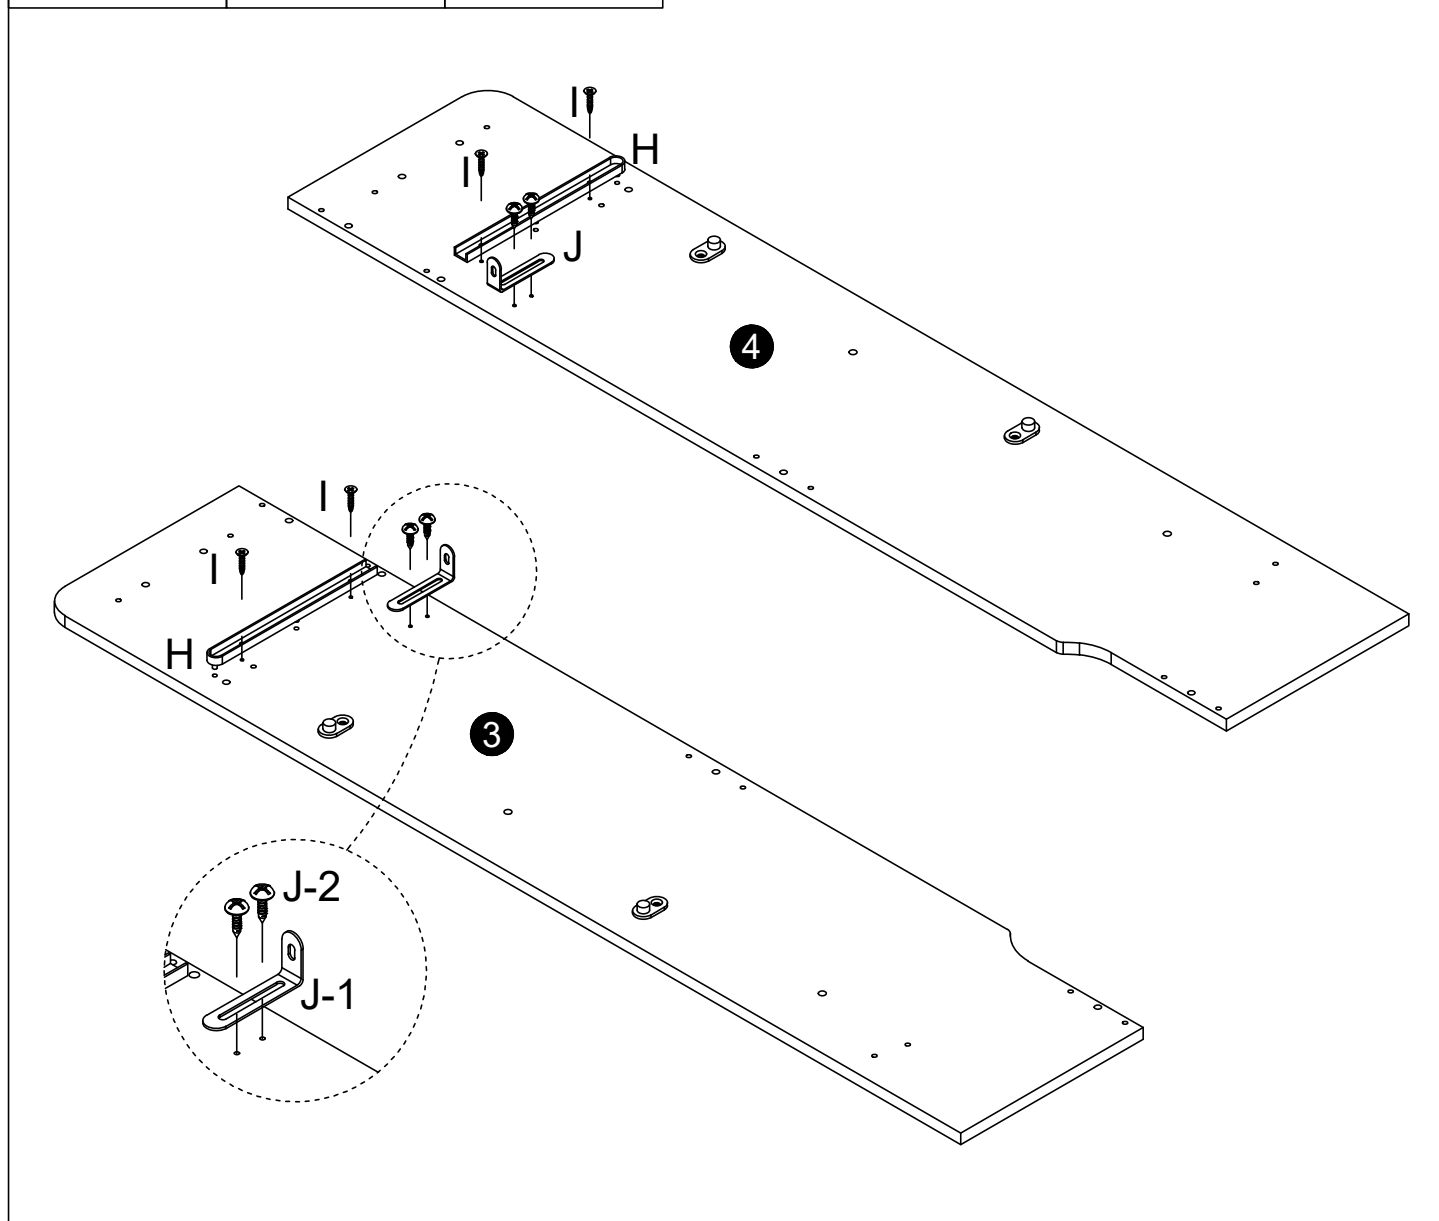
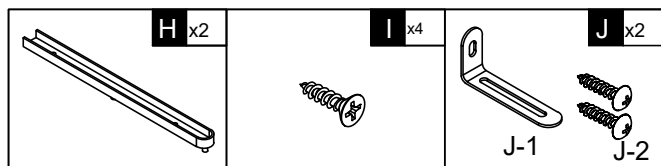


A x7


O x2

E x2

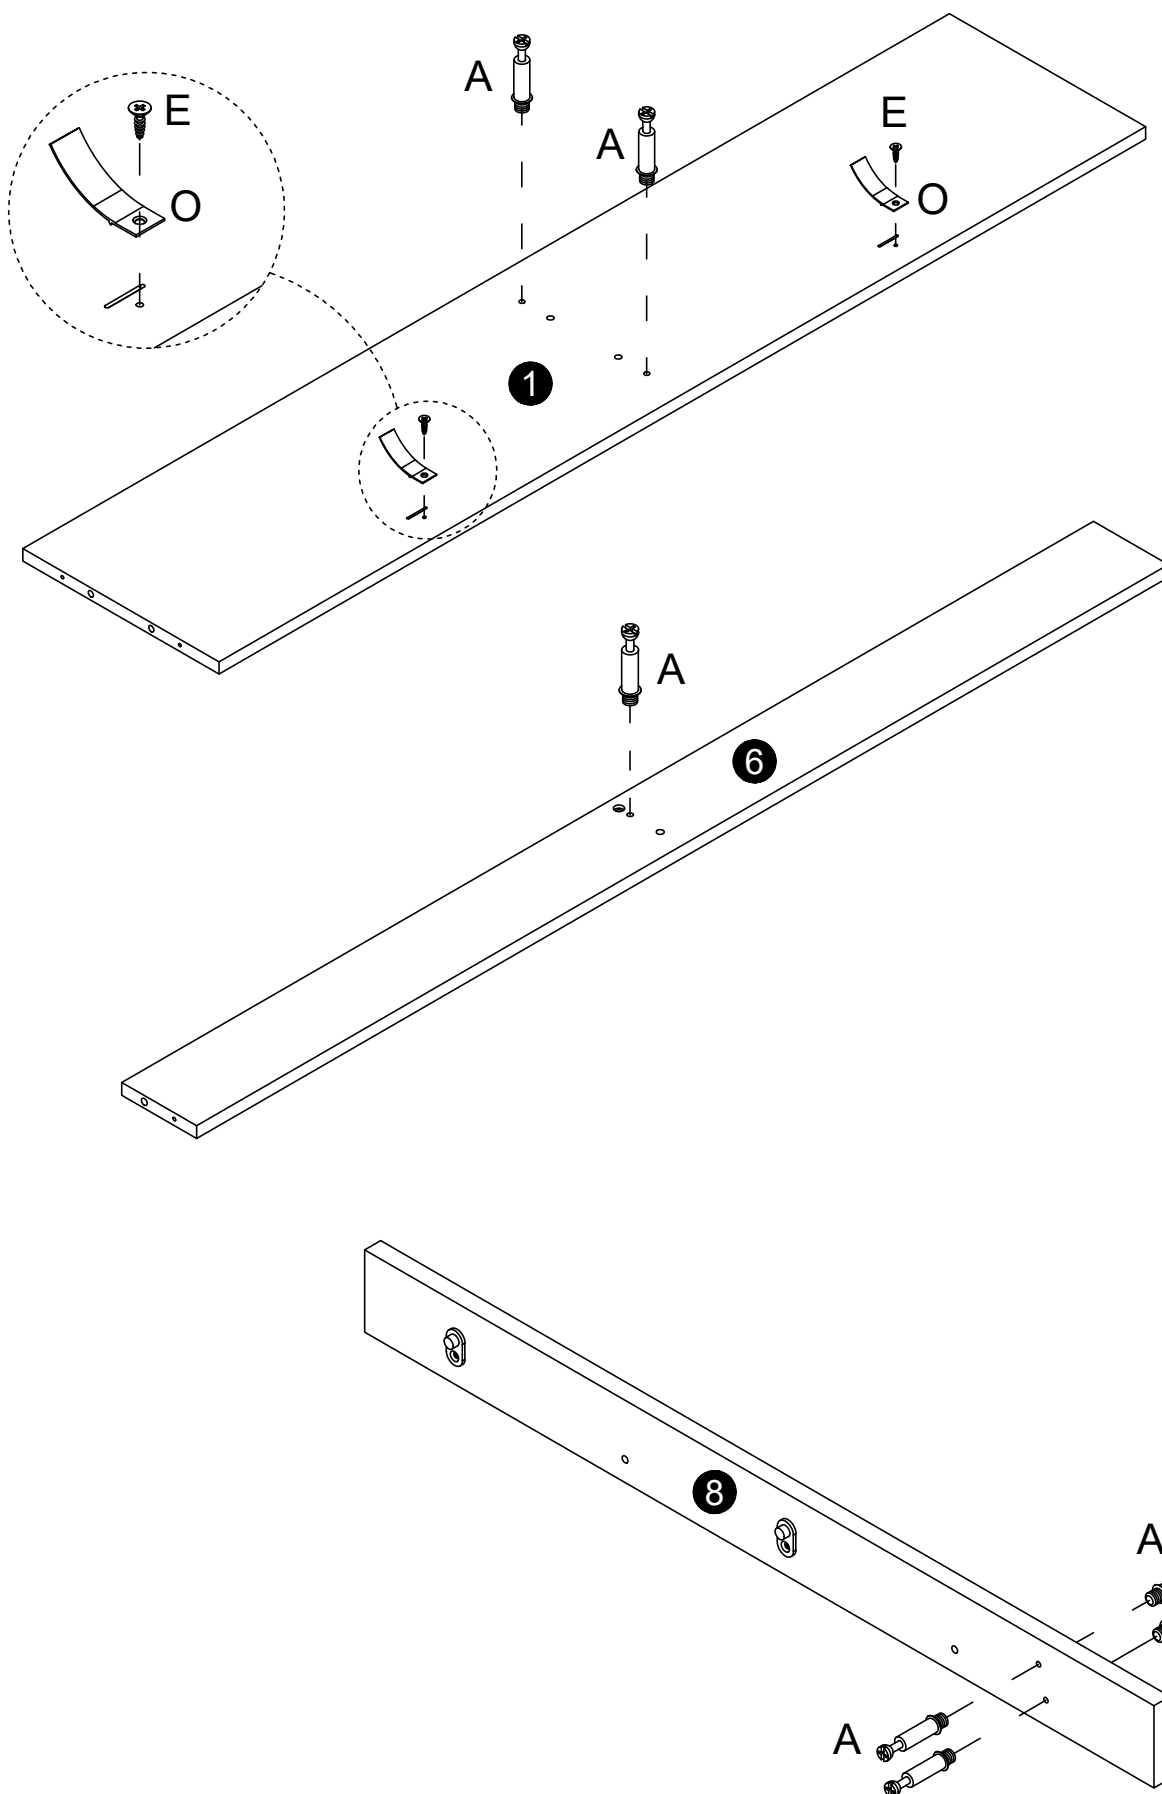


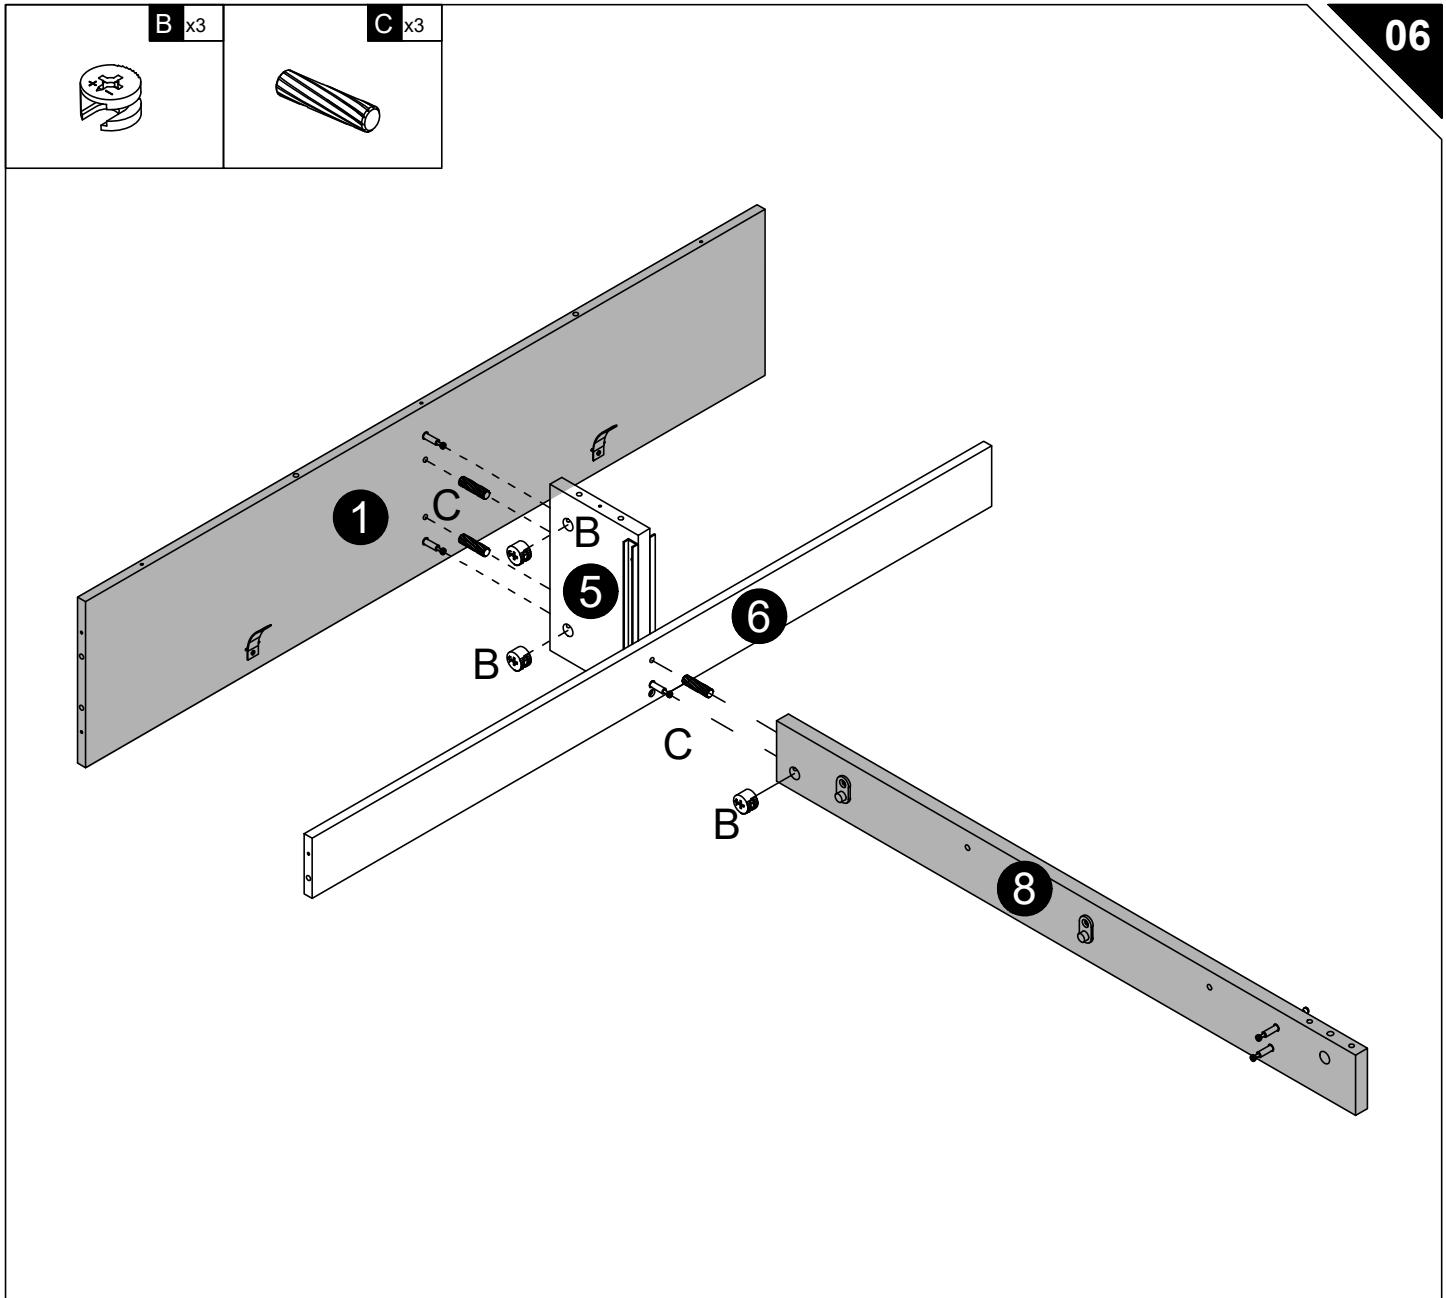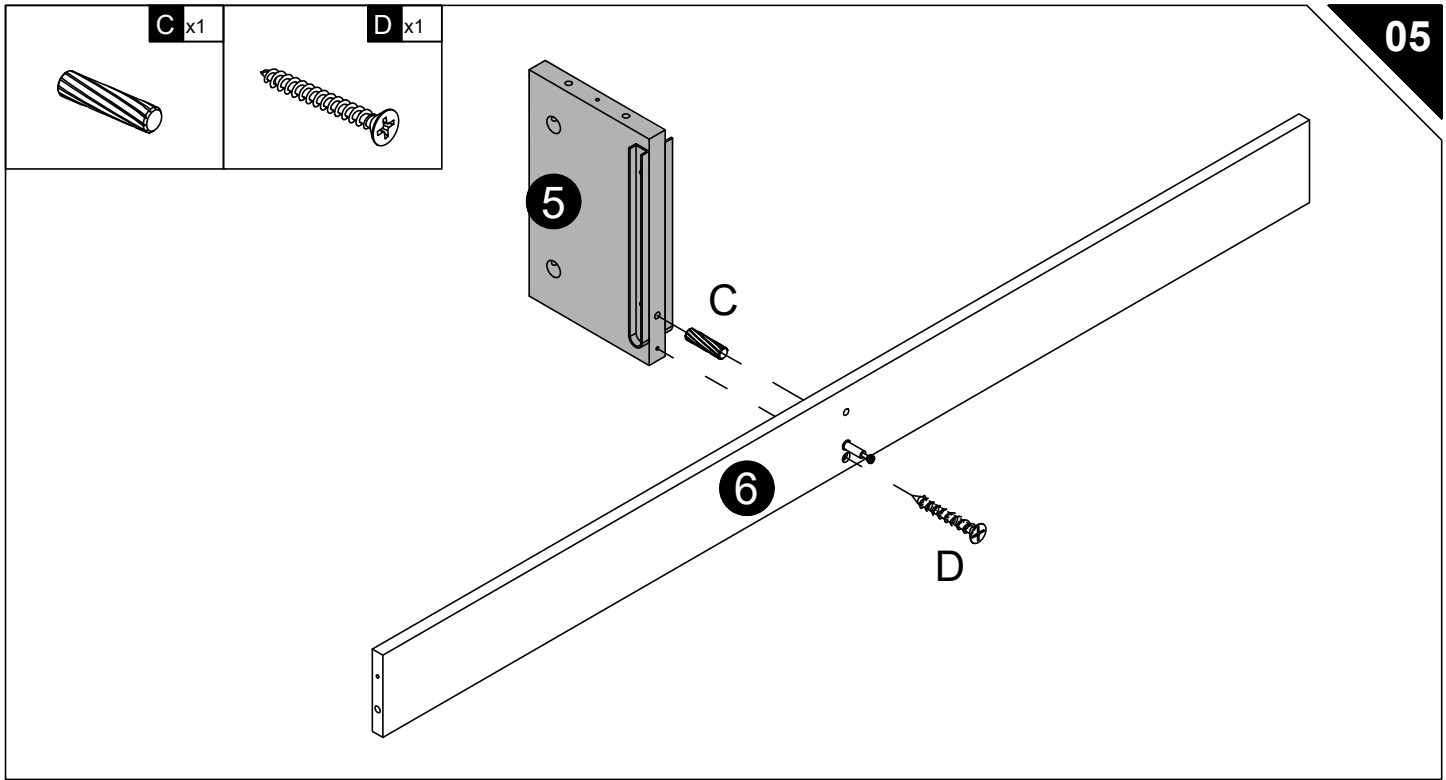

S x1



07

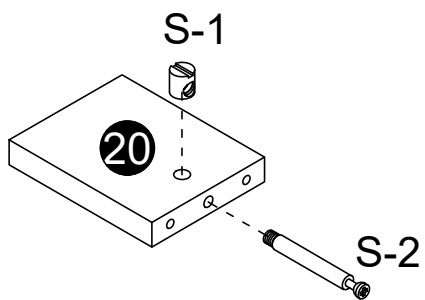


B x5



C x2





08

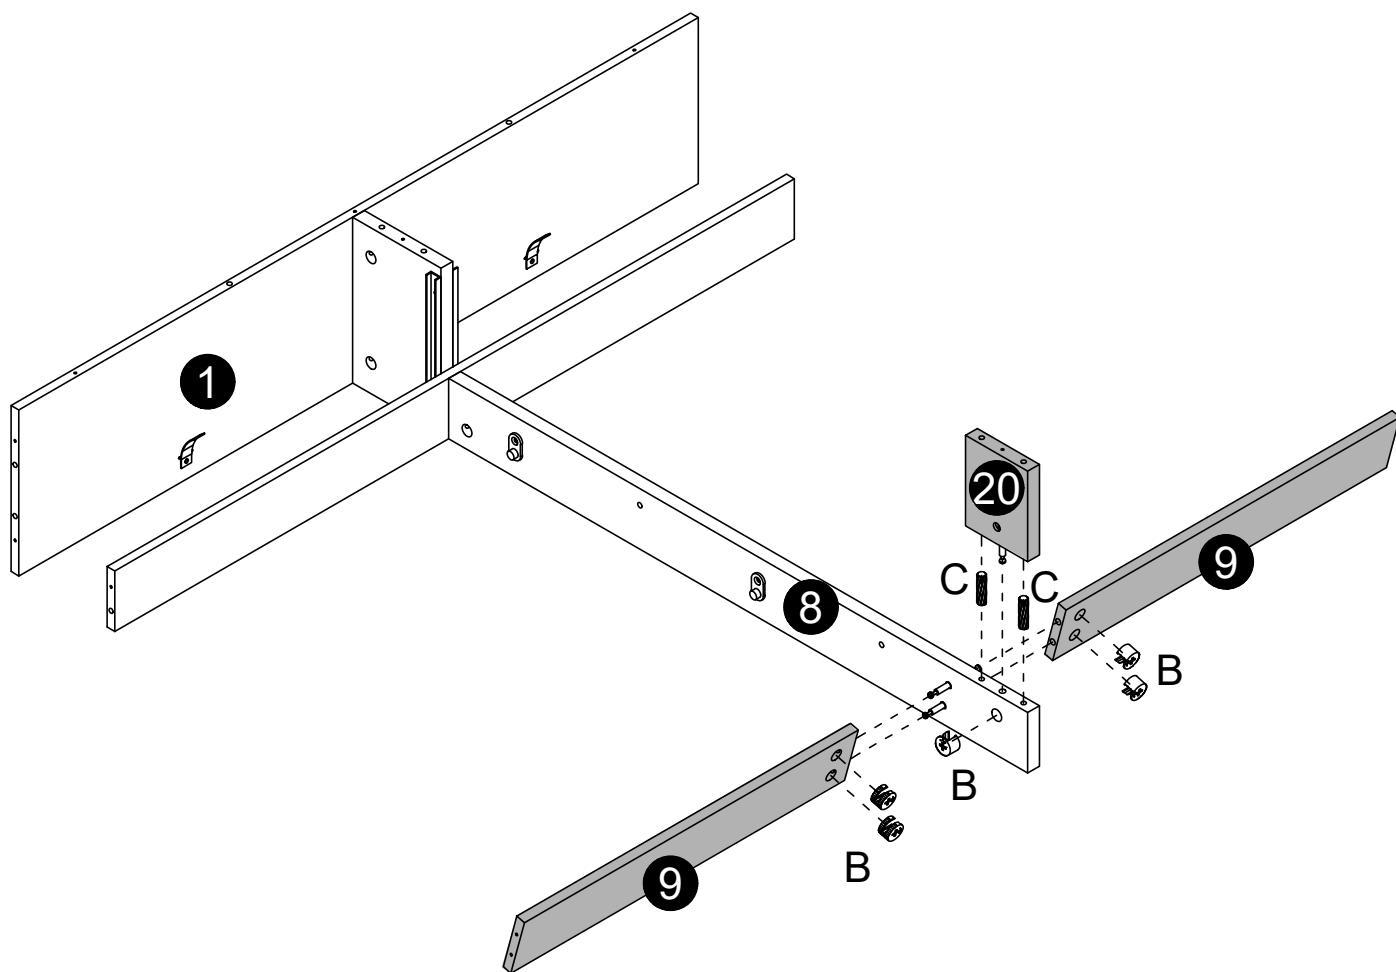


C x6

D x5

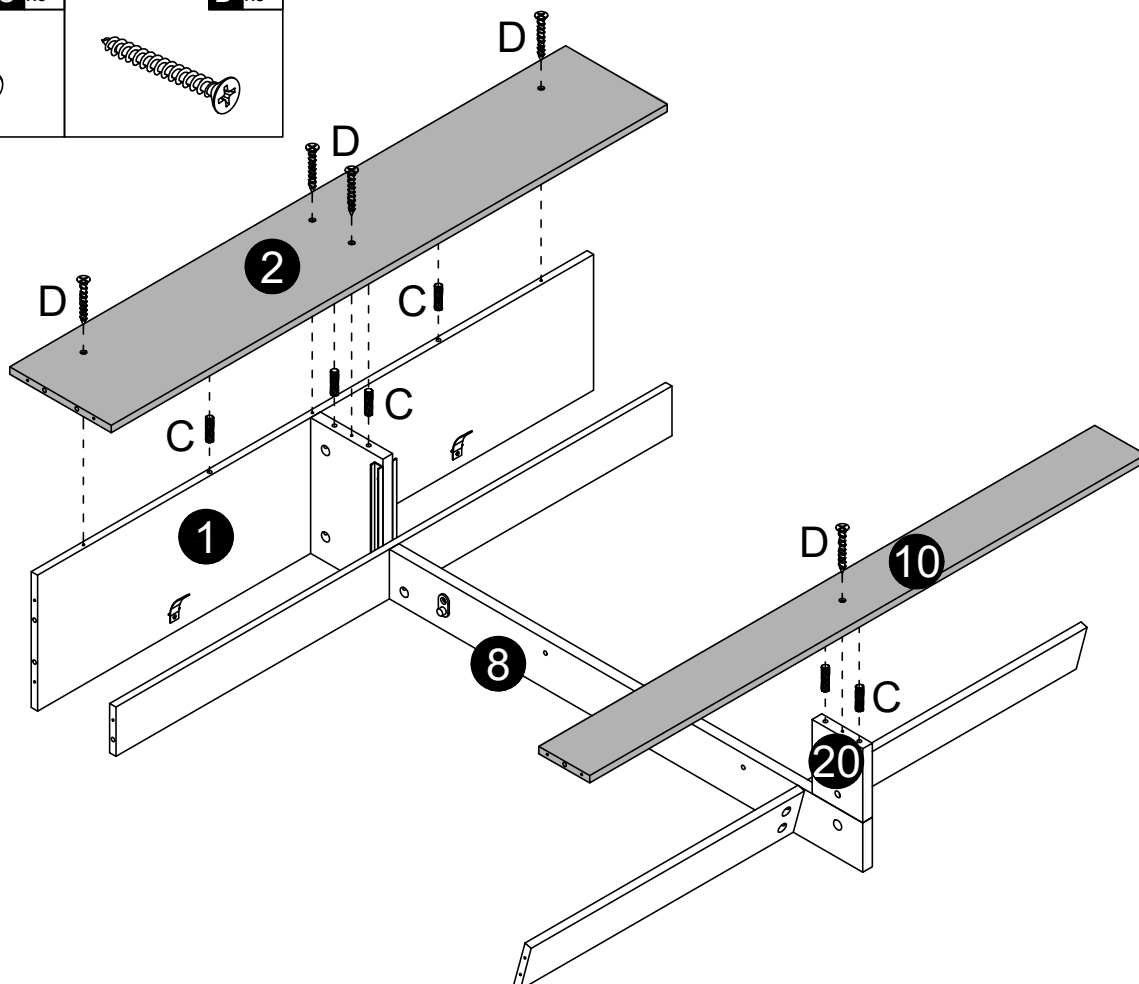




C x7

D x11




During the installation process, you need to keep your balance by hand to avoid damage.

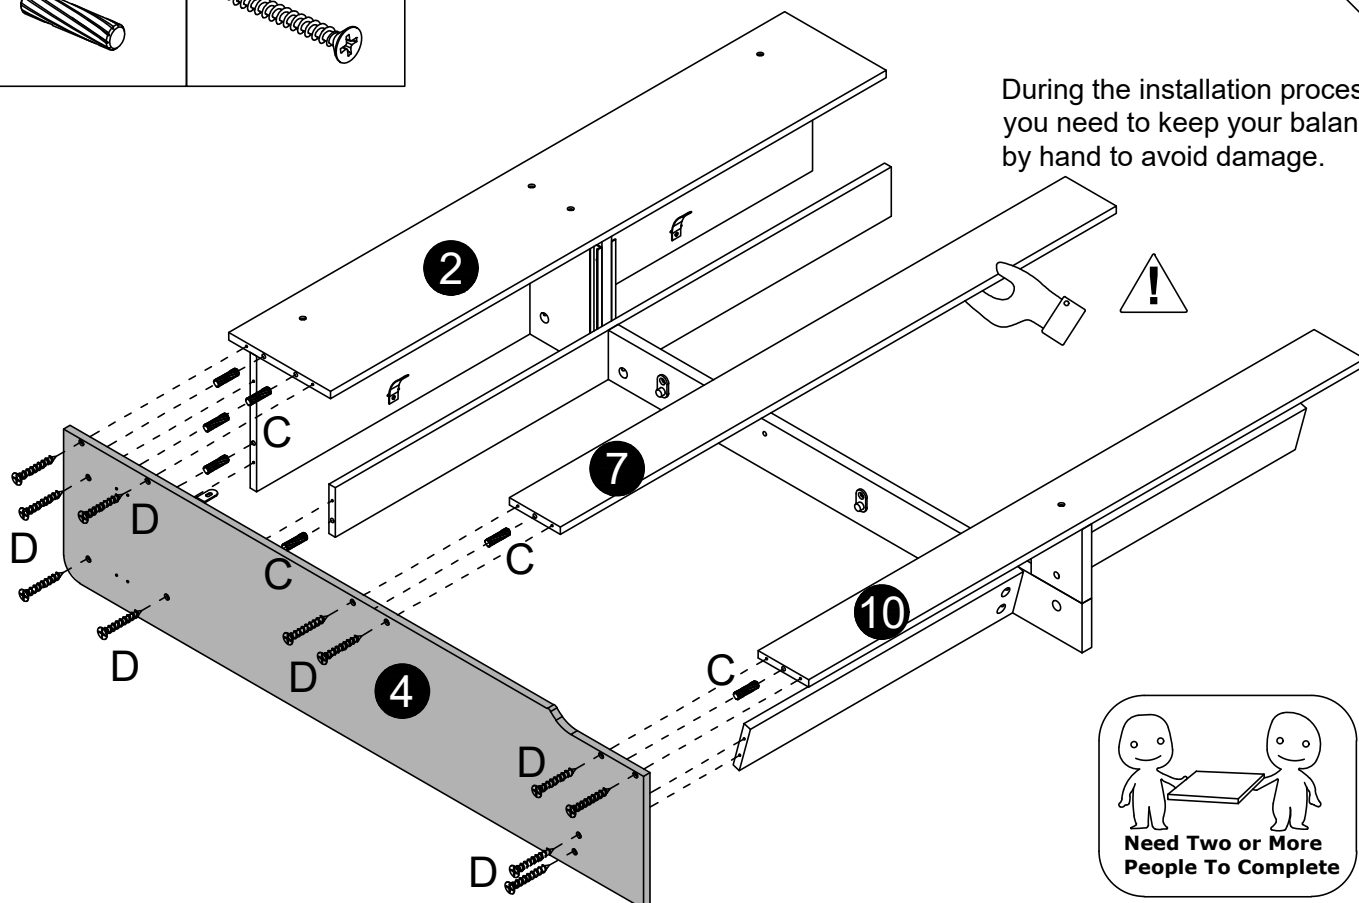

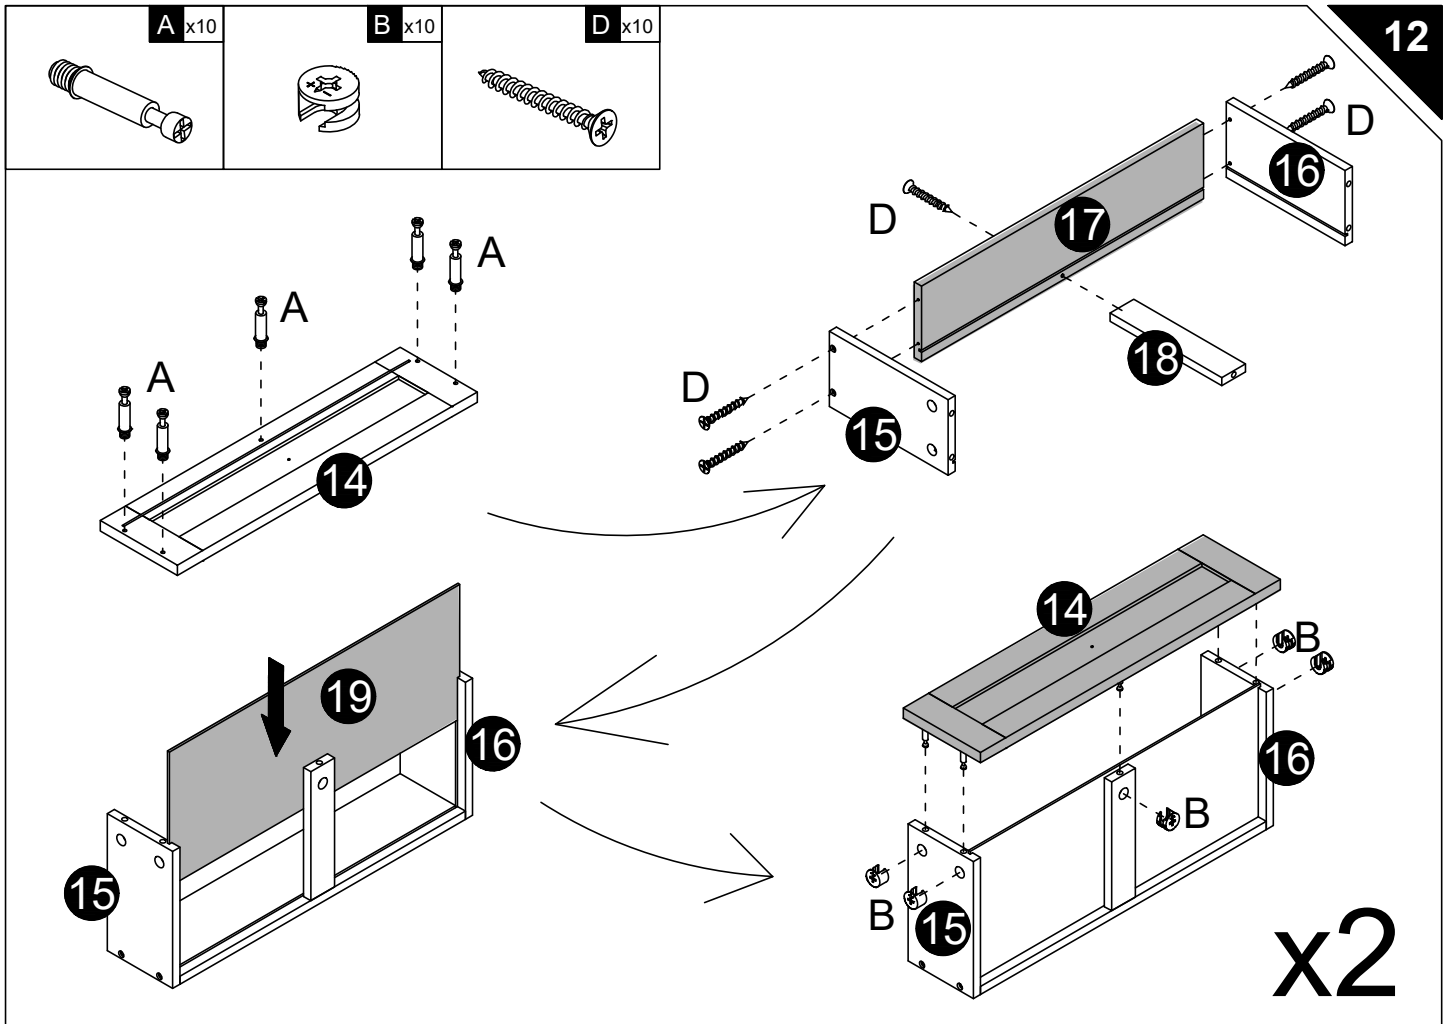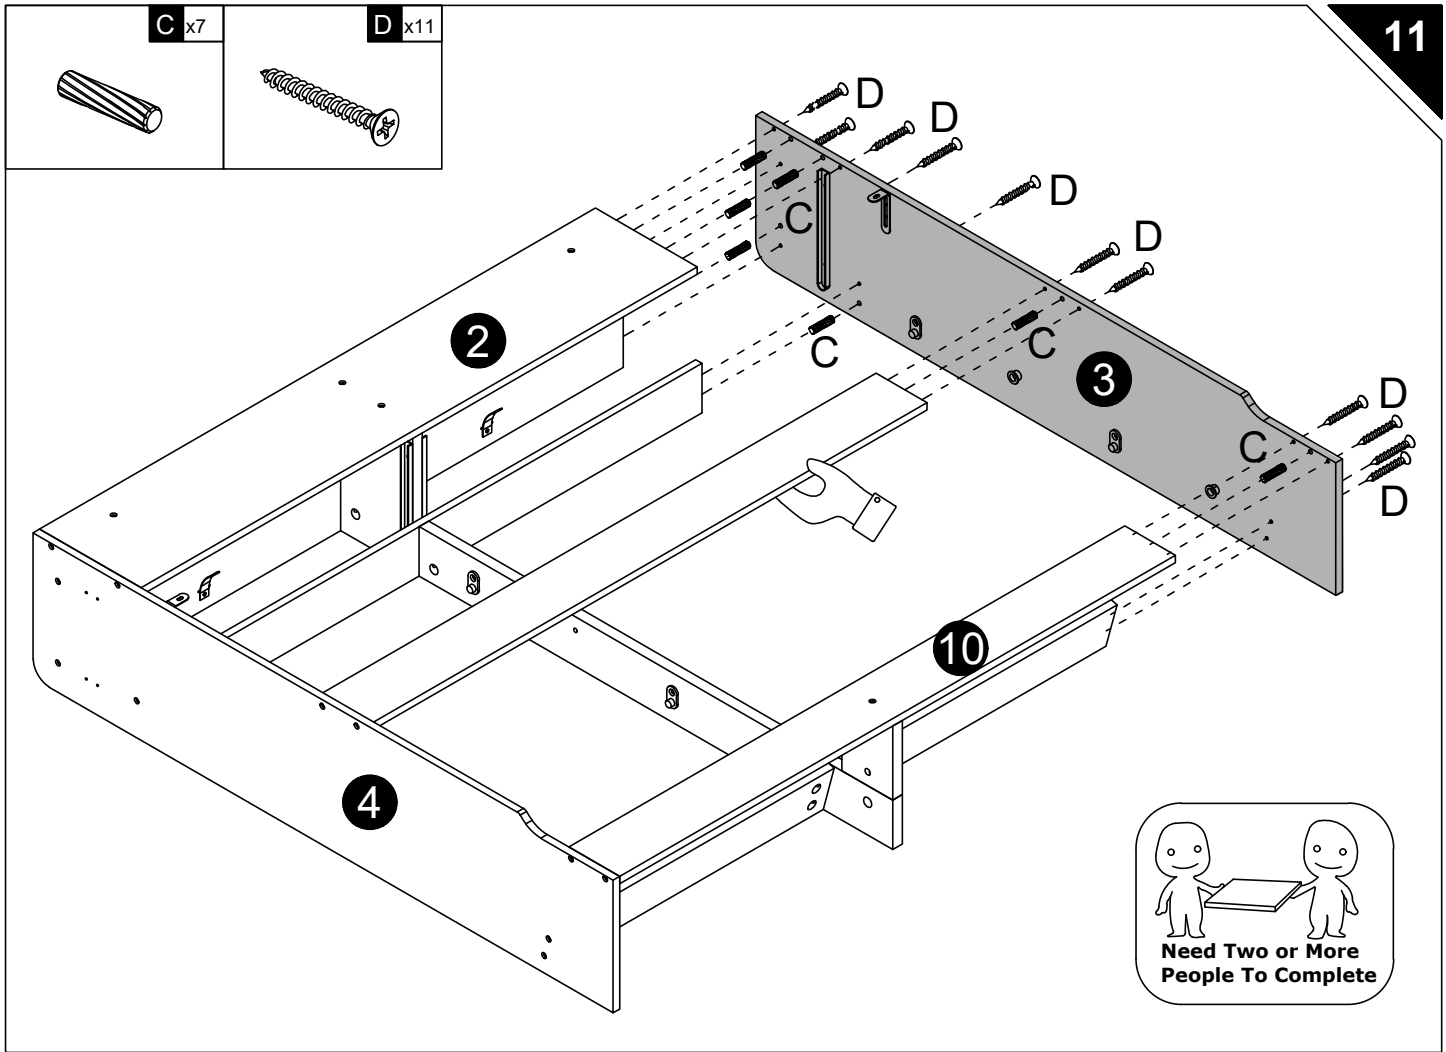




F-2

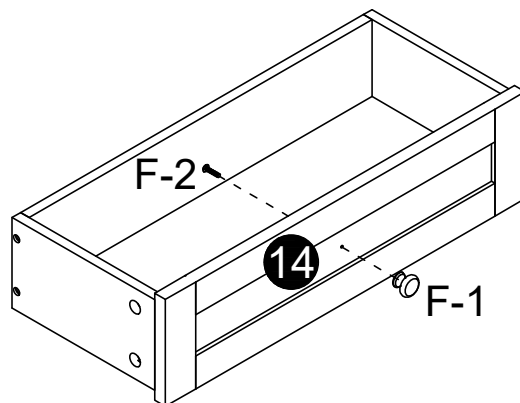

x2




E x40









G-1



G-2




L x4

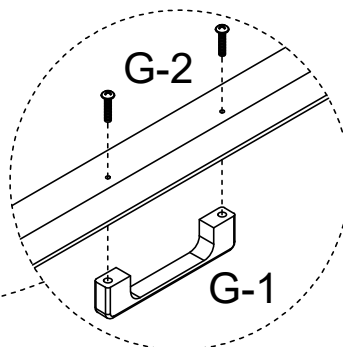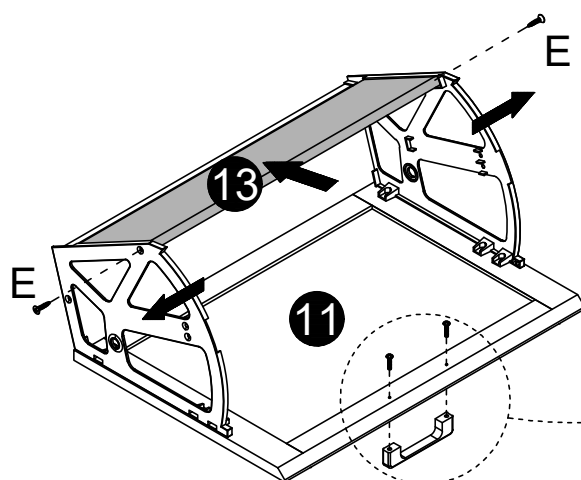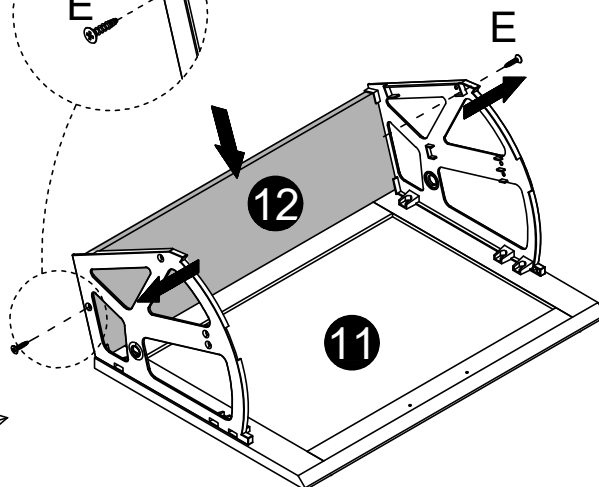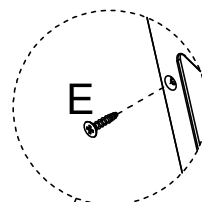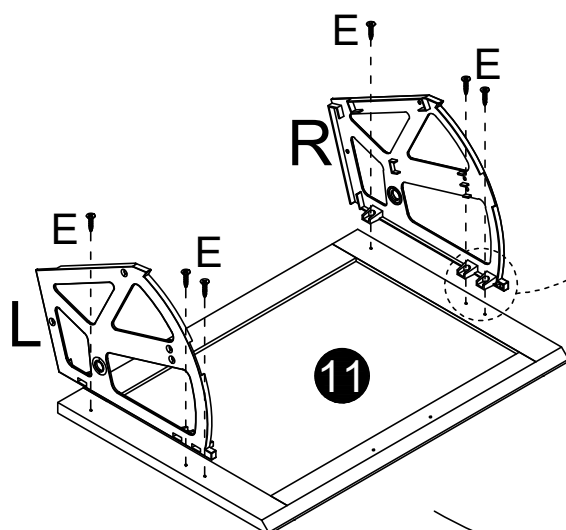R_{x4}


x4




K-2




WALL




WALL



WALL



Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

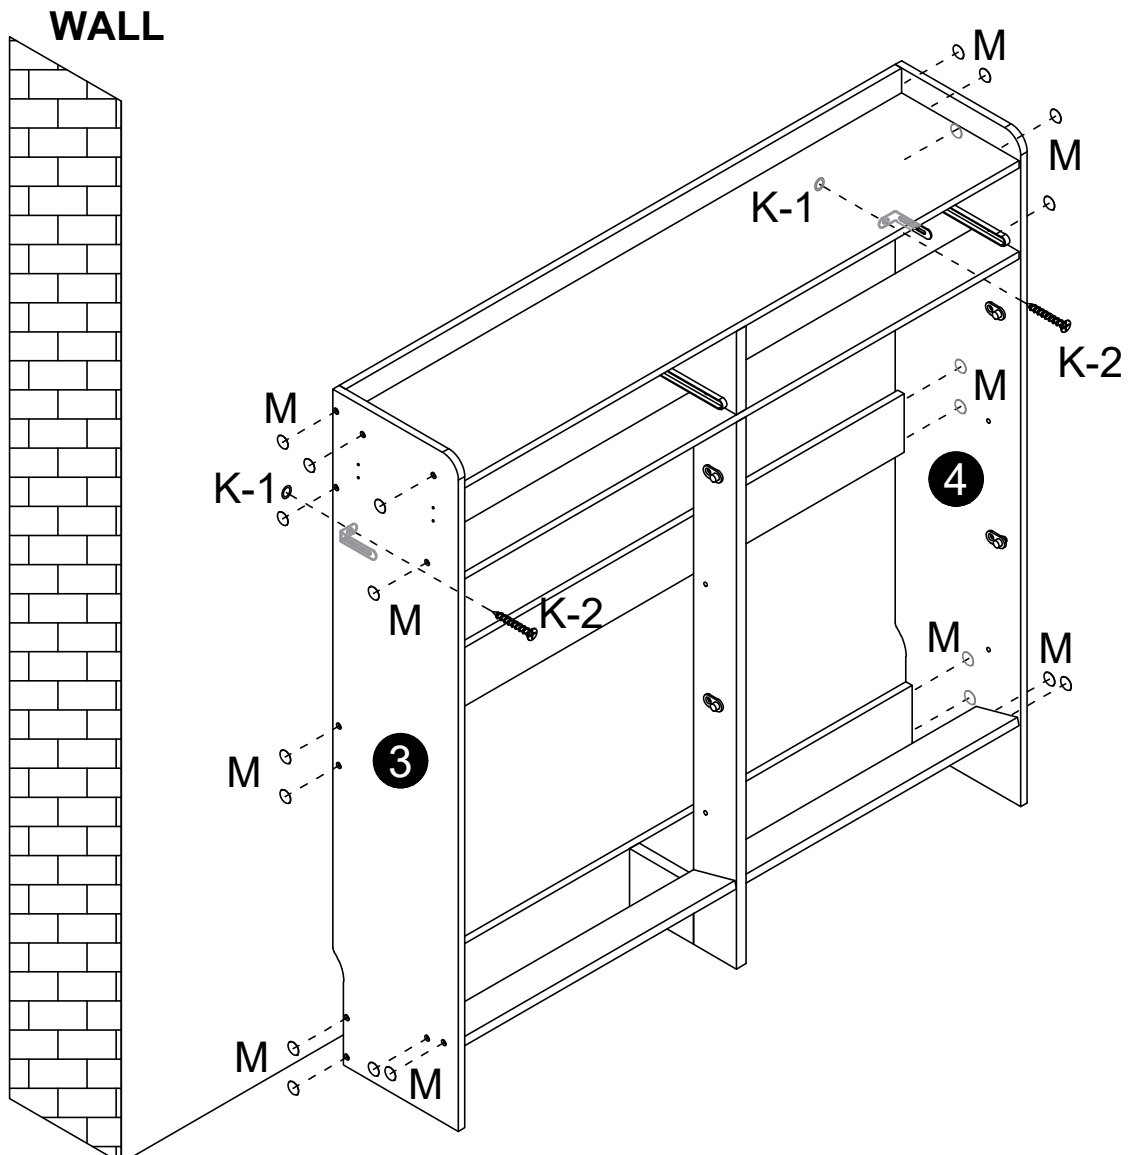




N-2



N-3


N x4



Q x1





If the installation cannot be placed in the correct position, please try operating at other inclined angles.

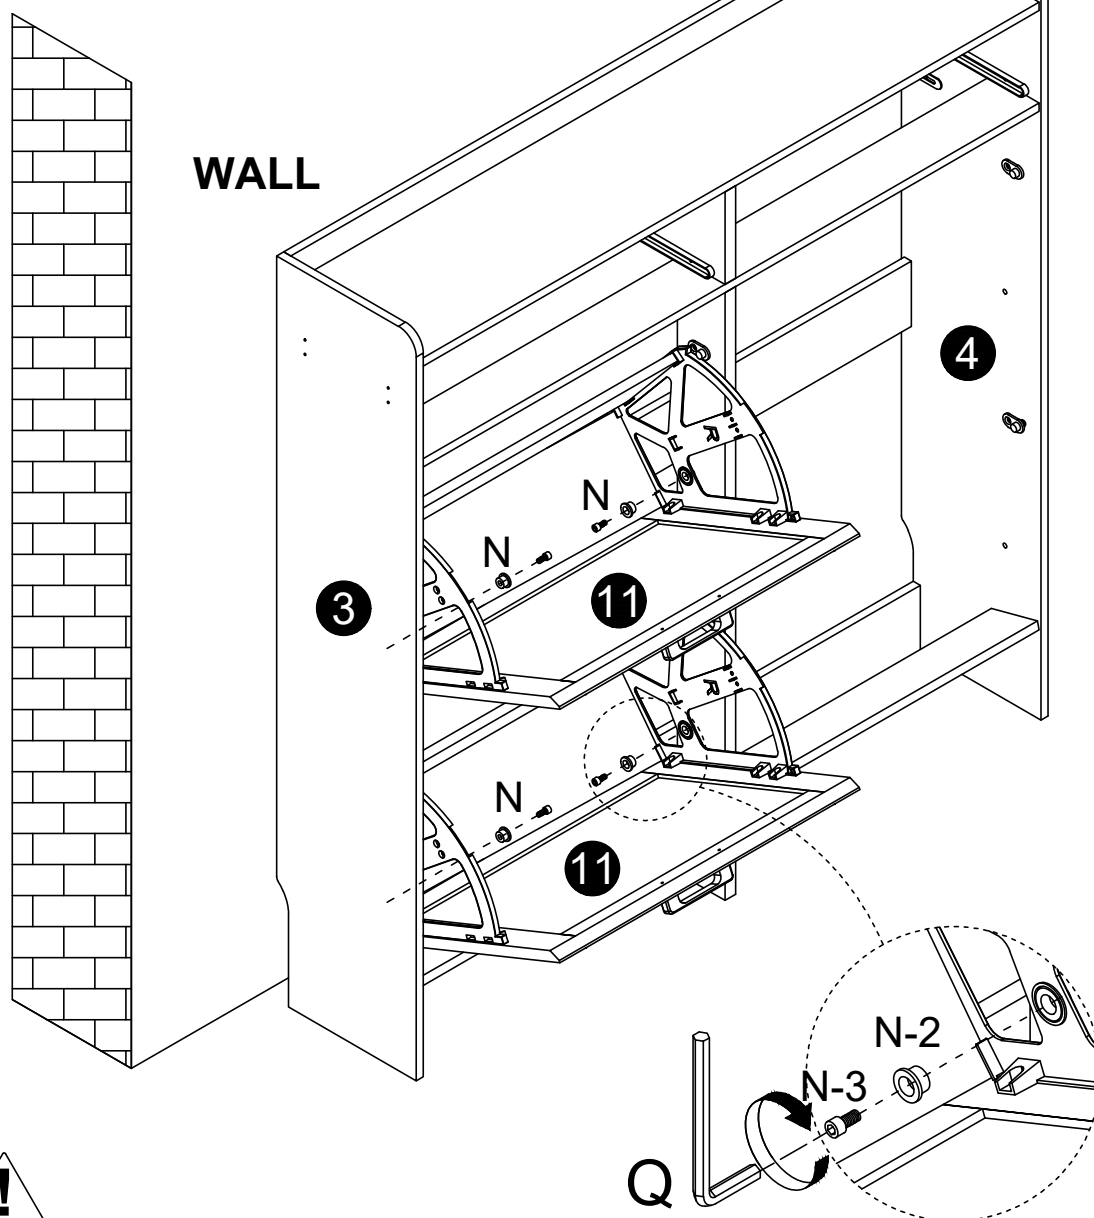


Please do not forcefully lock the installation screws to the maximum limit to avoid damaging the side panel.



WALL

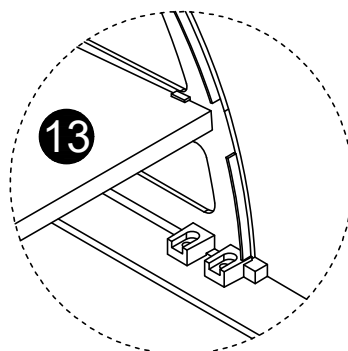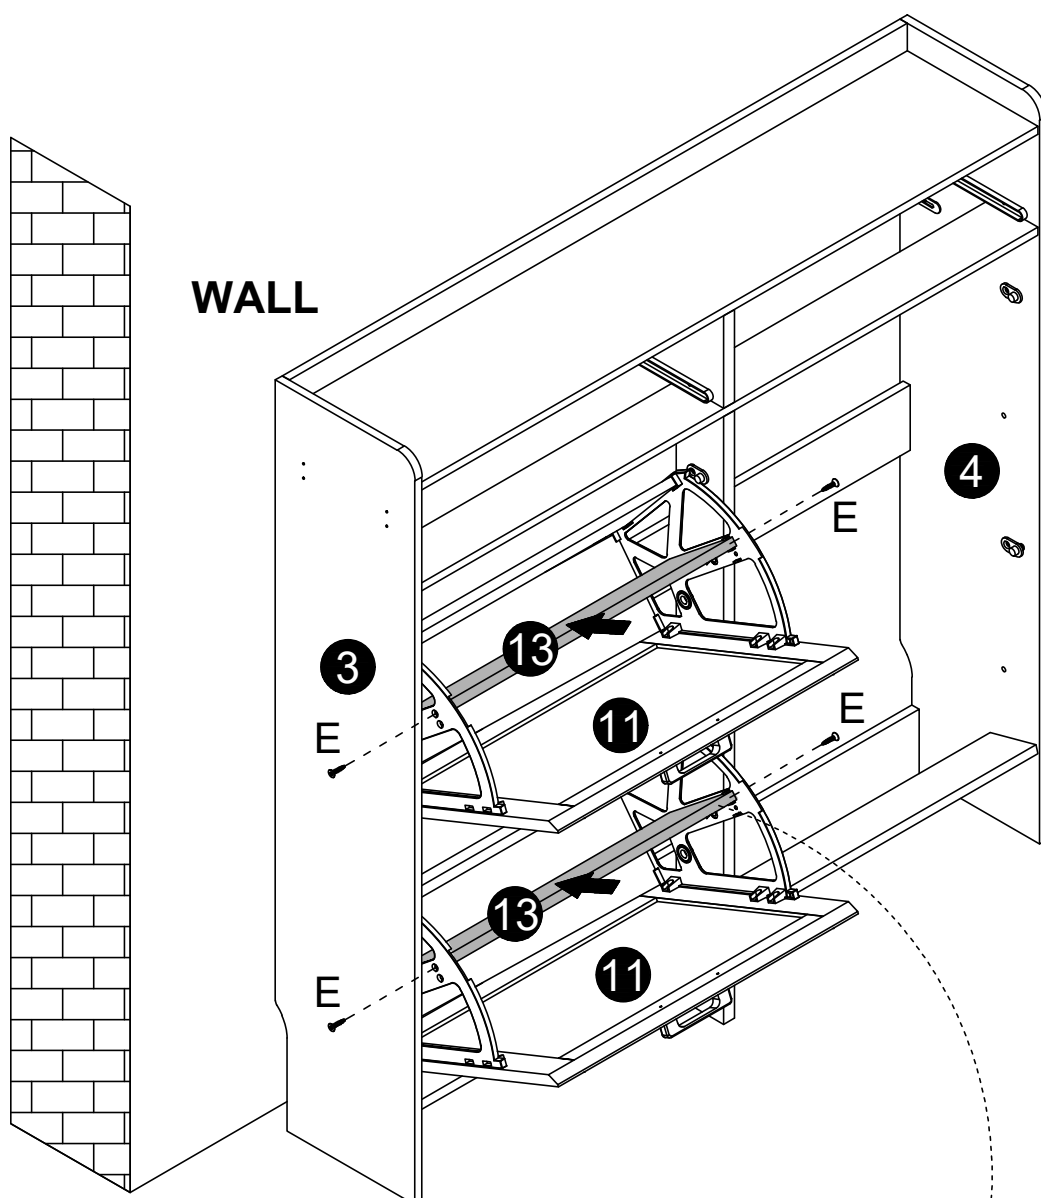

OR

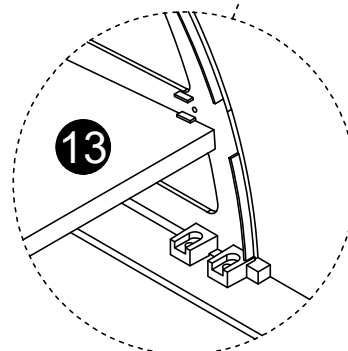




N-2



N-3


N x4





Q x1




If the installation cannot be placed
in the correct position, please try
operating at other inclined angles.

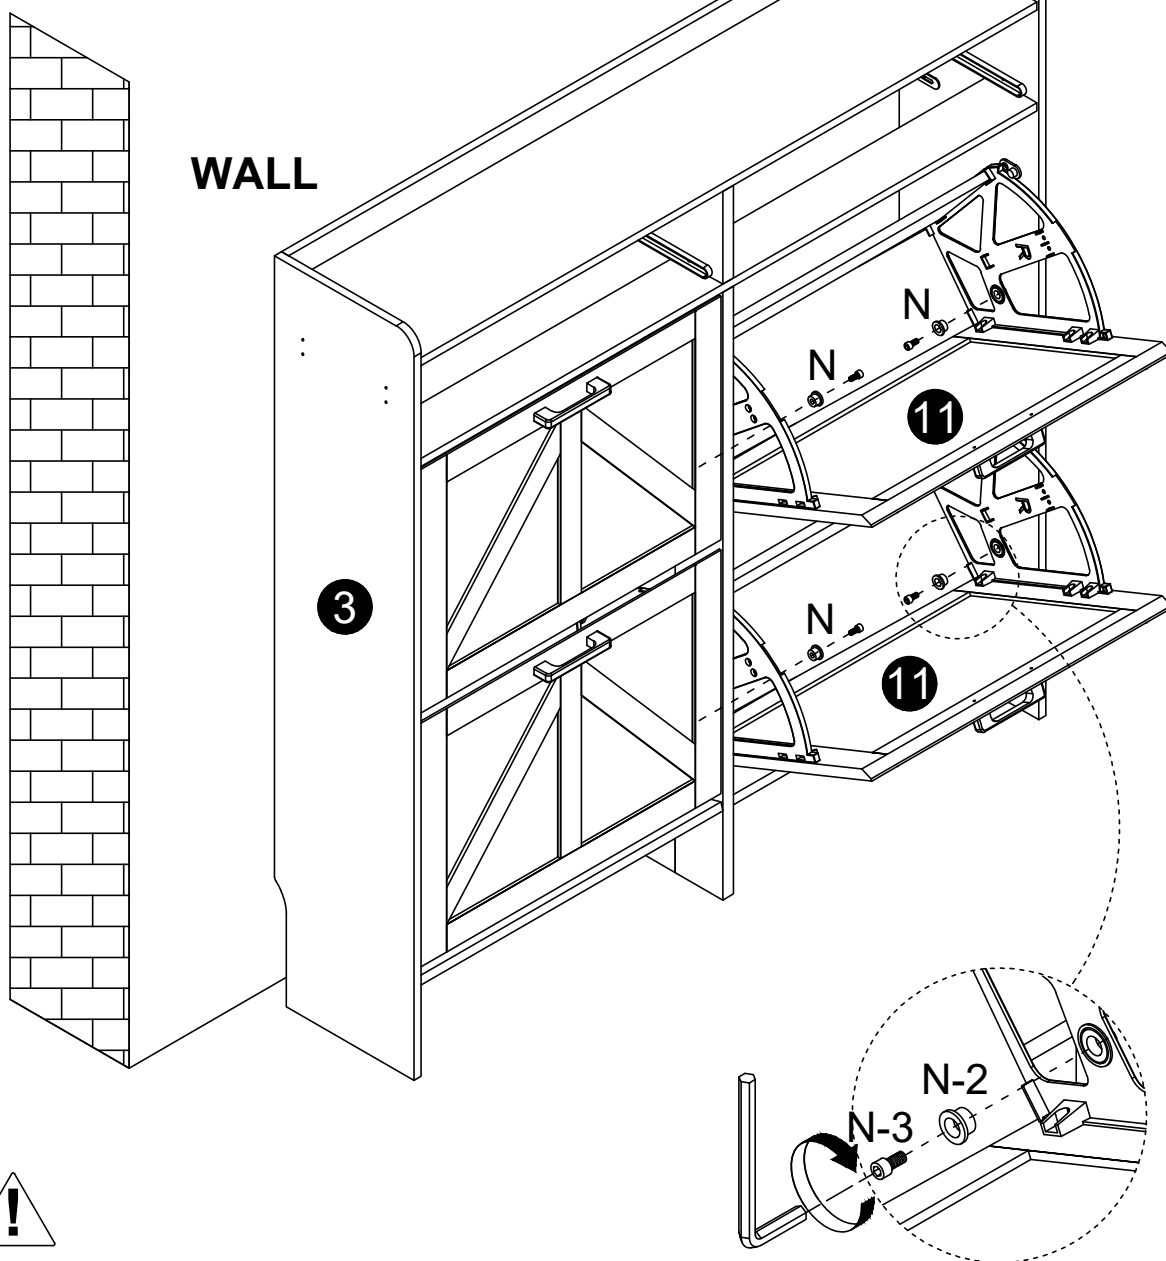


Please do not forcefully
lock the installation screws
to the maximum limit to
avoid damaging the side
panel.

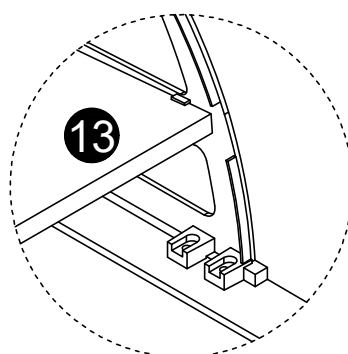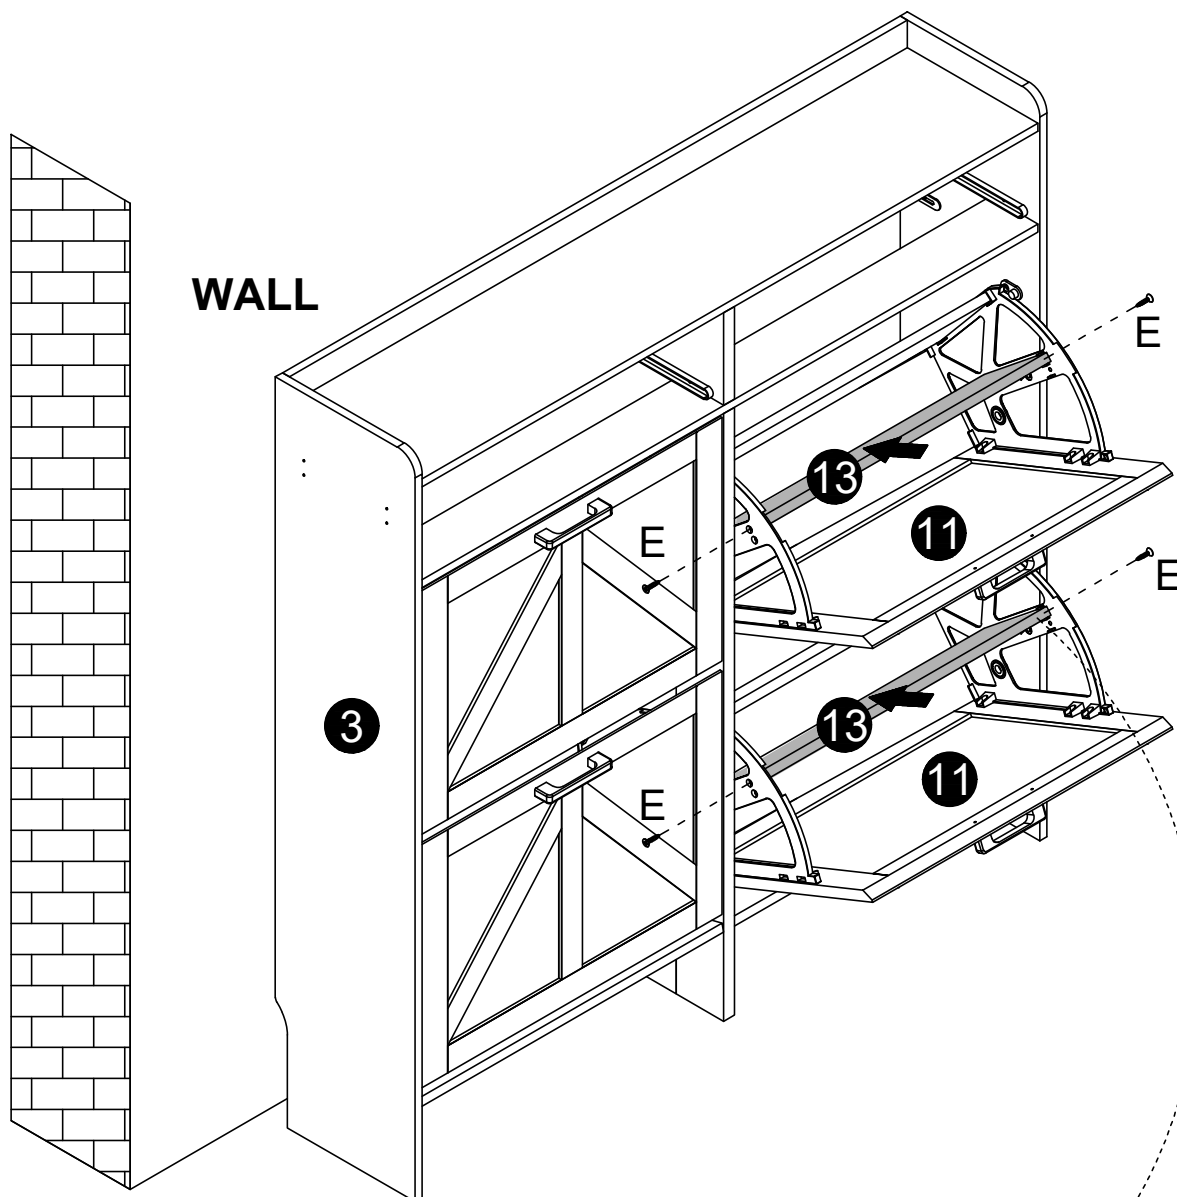



OR

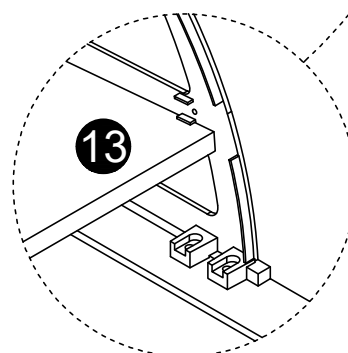



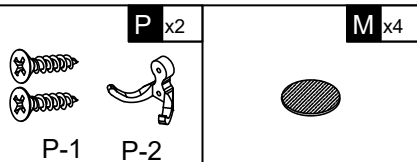



Component P can be freely installed on either panel 3 or panel 4.

The excess holes are allowed to be covered by component M.

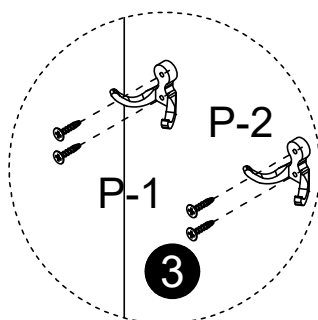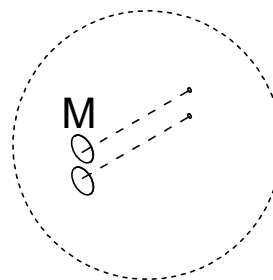

OR

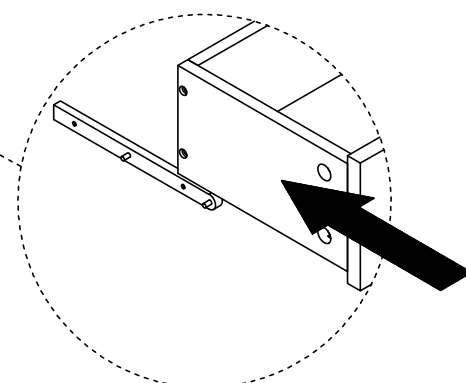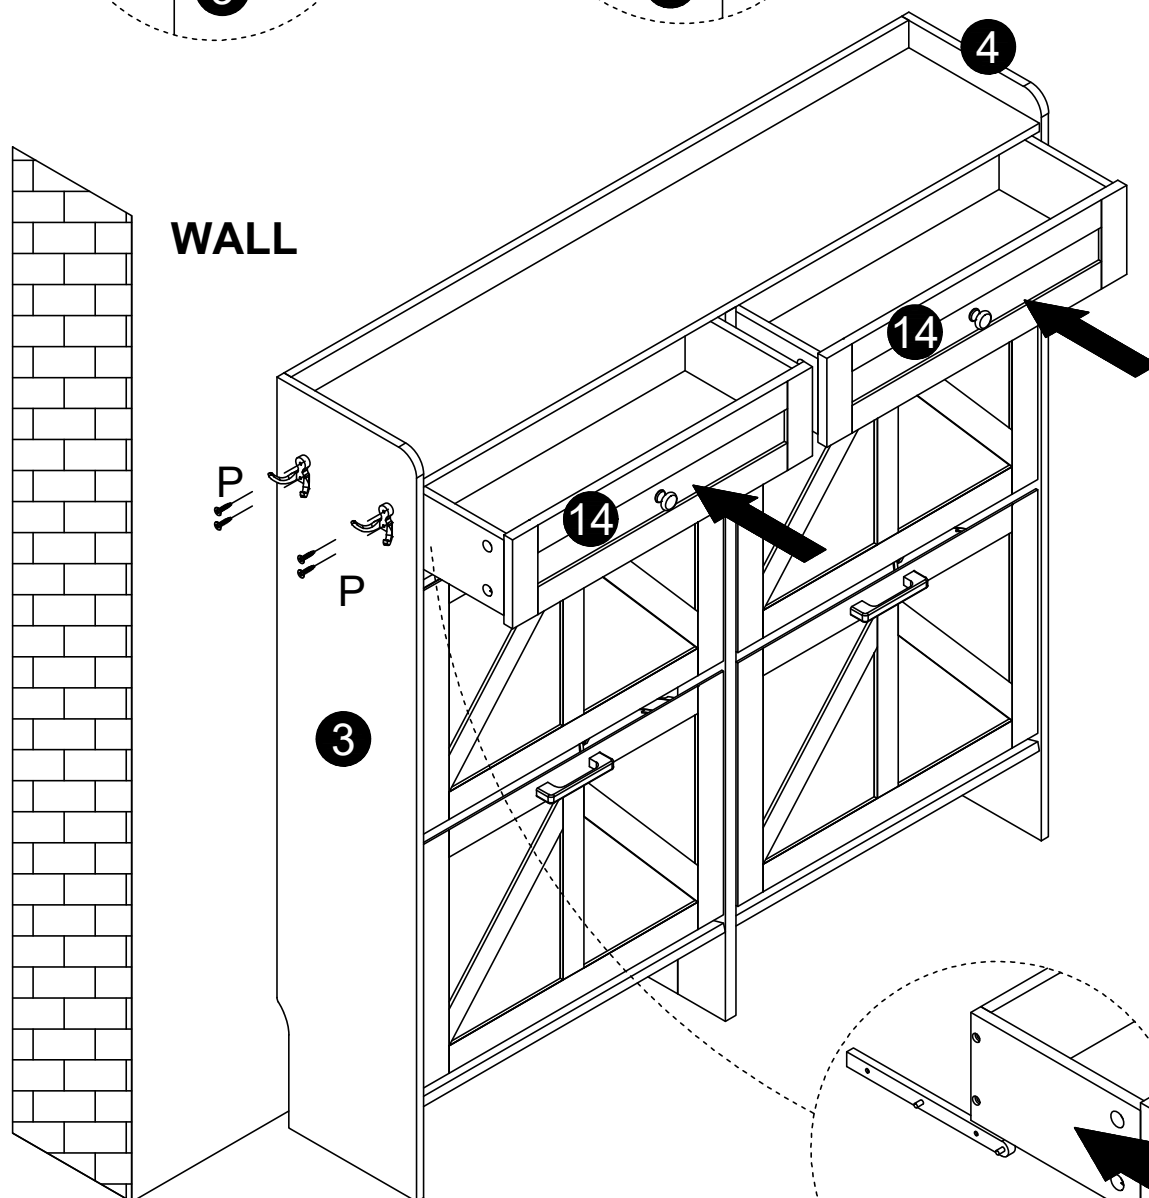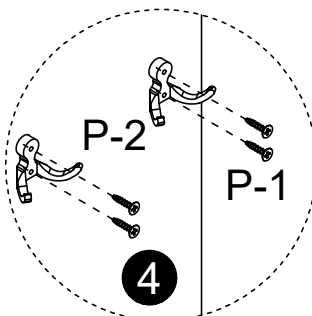

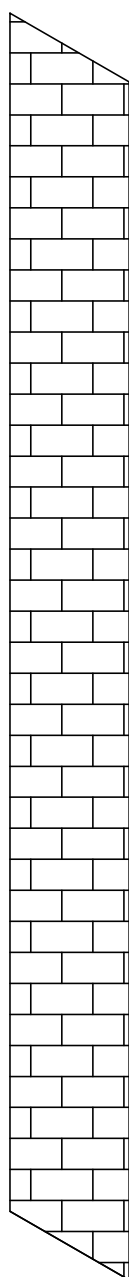

WALL

