


Assembly Instructions

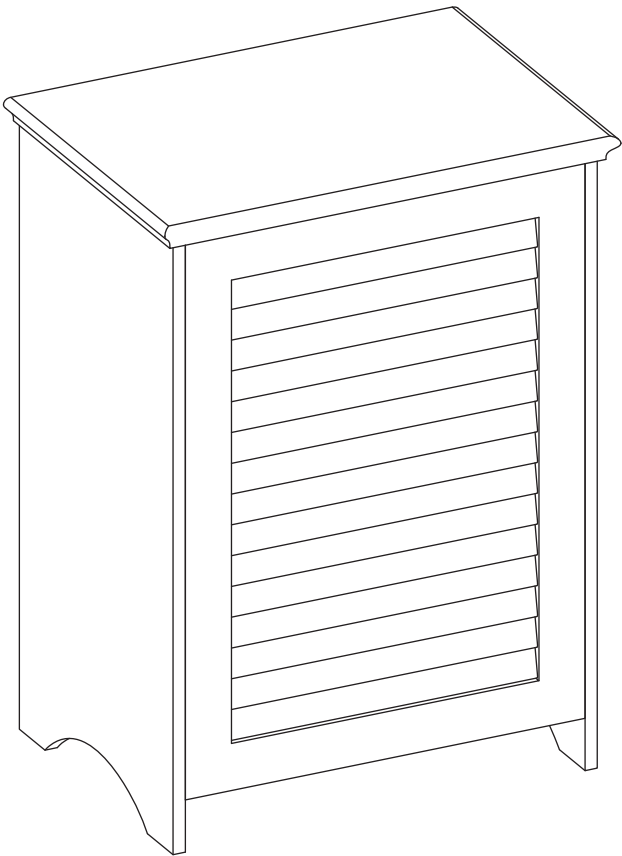

Dimensions

Width-46.5cm
Depth-30cm
Height-61.5cm
Made in China

Note:Each "Cam Insert"(part B) has an arrow stamped on the top of the Cam at the end of one of the cuts to accept the screwdriver.

When you place the eight Cam inserts (B) into the holes on each panel,make sure the arrow is pointing toward the hole in the edge of the panel.This will allow the one inch threaded post (part A) to be inserted into the Cam insert correctly.


Turn each Cam insert clockwise with a screwdriver, normally about $\frac{1}{2}$ turn, to pull the panels together.

1 x 1pc	2 x 1pc	3 x 1pc	4 x 1pc	5 x 1pc	6 x 1pc
A x 8pcs	B x 8pcs	C x 1pc	D x 2pcs	E x 12pcs	F x 2pcs


Assembly Instructions

STEP 1


IMPORTANT: It is very important not to over tighten. The "Cam Insert" only needs to engage and lock on the head of the post. It cannot be tightened and can easily be damaged if force is used.

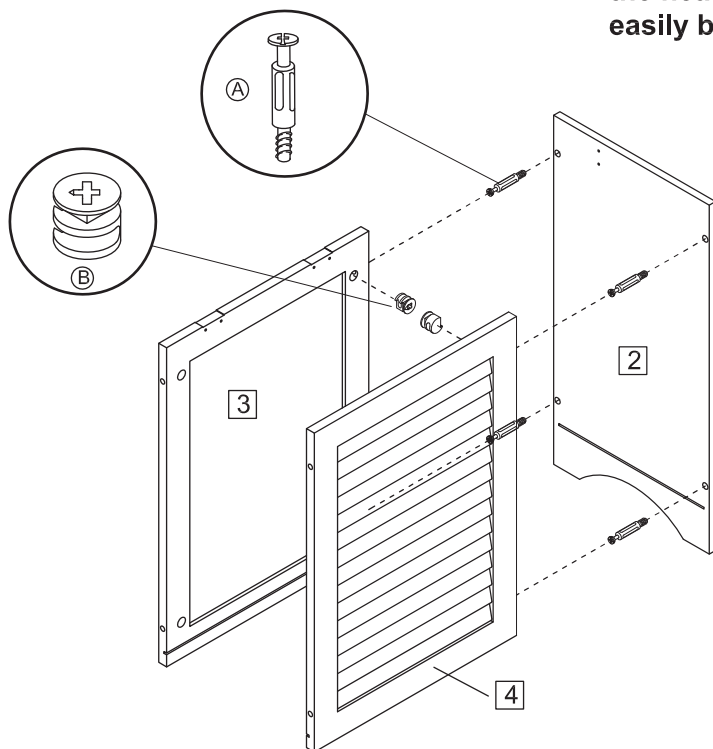

STEP 2

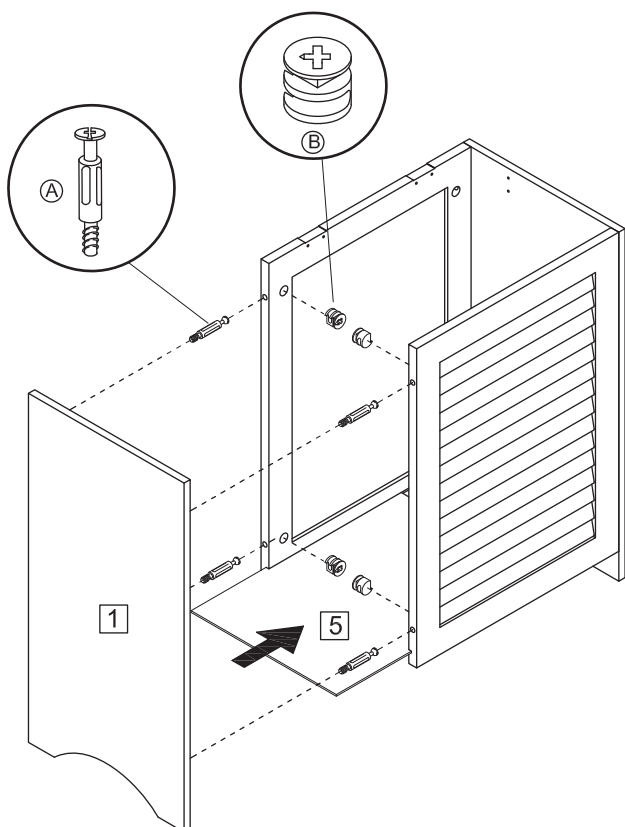


STEP 3

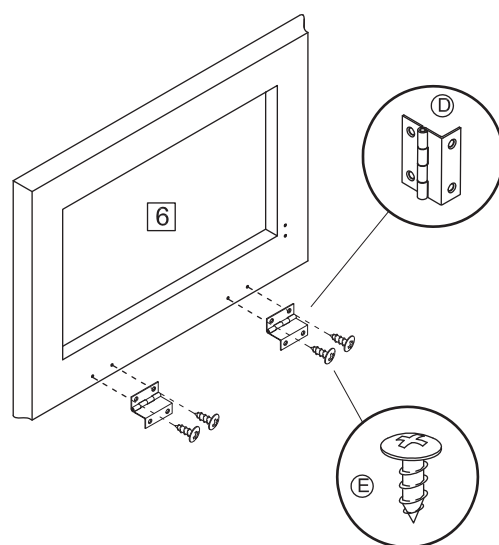


Assembly Instructions

STEP 4

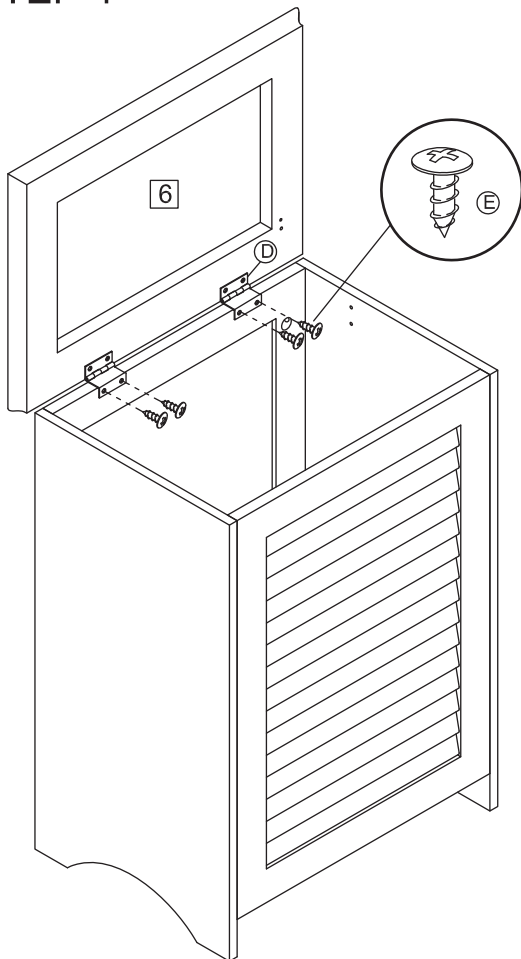

STEP 5

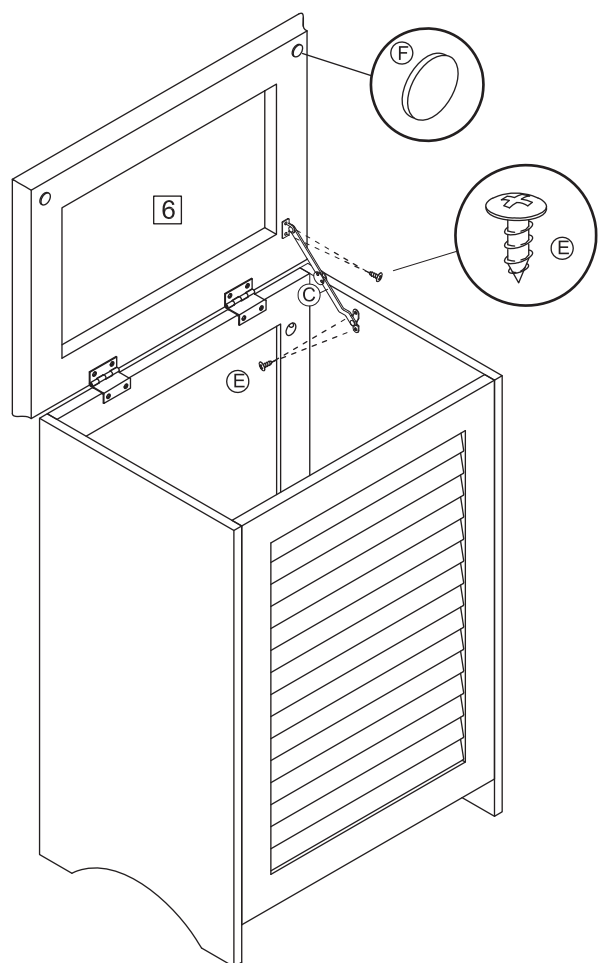

Have a question? Don't worry...we can help. We want your assembly experience to go flawlessly, and we are here to answer questions or to send out any needed parts.

Contact or e-mail us

By the way, thanks for the trust you have placed in our company by purchasing our product, now over 130 years in business serving families around the globe.