



Installation Instruction

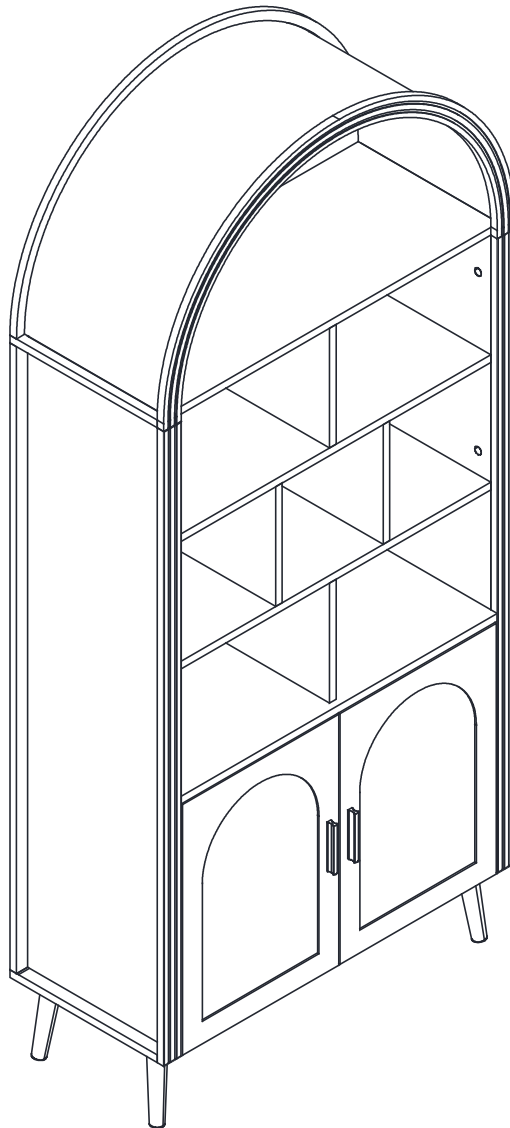

Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver




Weight Limitation



What's included

Code	Description	Qty
A	Cam Bolt M6X35MM	40
B	Cam Lock 15X10MM	40
C	Screw M4X35MM	17
D	Screw M4X14MM	22
E	Screw M3.5X14MM	24
F	Screw M3X14MM	14
G	Hinge	4
H	Bolt M4X18MM	4
I	Handle	2
J	Anchor M6X30MM	2
K	Plastic Corner Support	12
L	Wooden Dowel M8X30MM	42
M	Magnetic Door Catcher	1
N	Metal Plate	2
O	Nylon Strap	2
P	Screw M4X35MM	8
Q	Metal Support	4
R	Metal Pin	4
S	Screw M3X12MM	2
T	Wooden Dowel M6X30MM	4
U	Hole Sticker	26
V	Metal Washer	4

The Hardwares

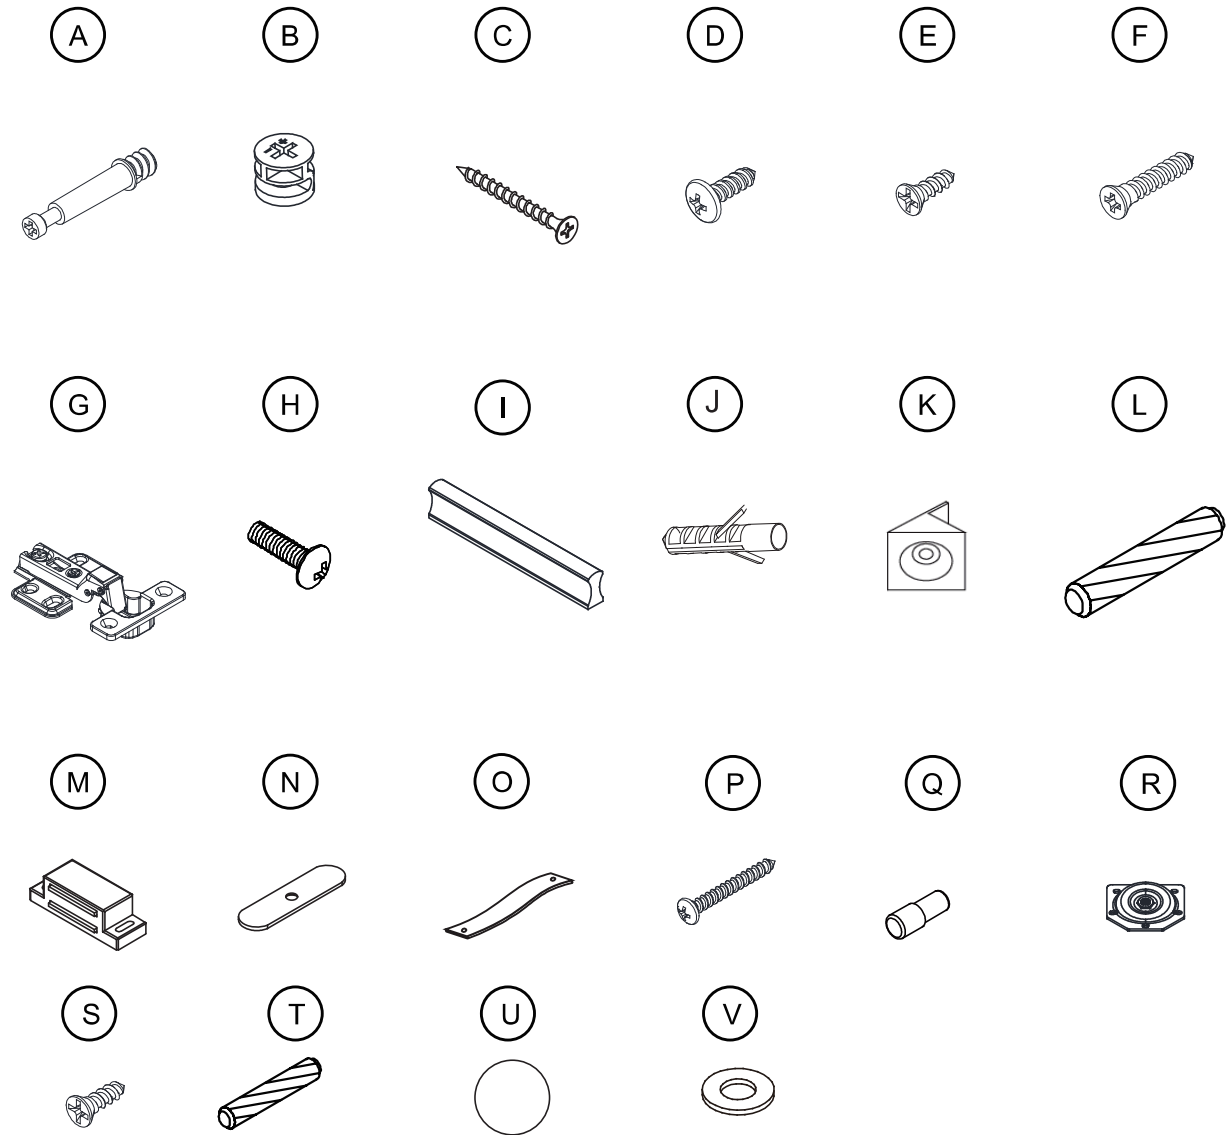

IMPORTANT:


1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product. Do not use power tools.
4. Must need 2 people to assemble this product.





Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Left Side Panel	1
3	Right Side Panel	1
4	Top Support Panel	3
5	Top Bottom Panel	1
6	Top Shelf	1
7	Middle Shelf	1
8	Lower Shelf	1
9	Bottom Panel	1
10	Top Back Panel	1
11	Top Front Frame	1
12	Left Front Vertical Bar	1
13	Back Side Vertical Bar	2
14	Right Front Vertical Bar	1
15	Lower Back Panel	2
16	Middle Back Panel	3
17	Left Door	1
18	Right Door	1
19	Division Panel	4
20	Feet	4
21	Plastic Strip	1
22	Bottom Shelf	1




The Accessories

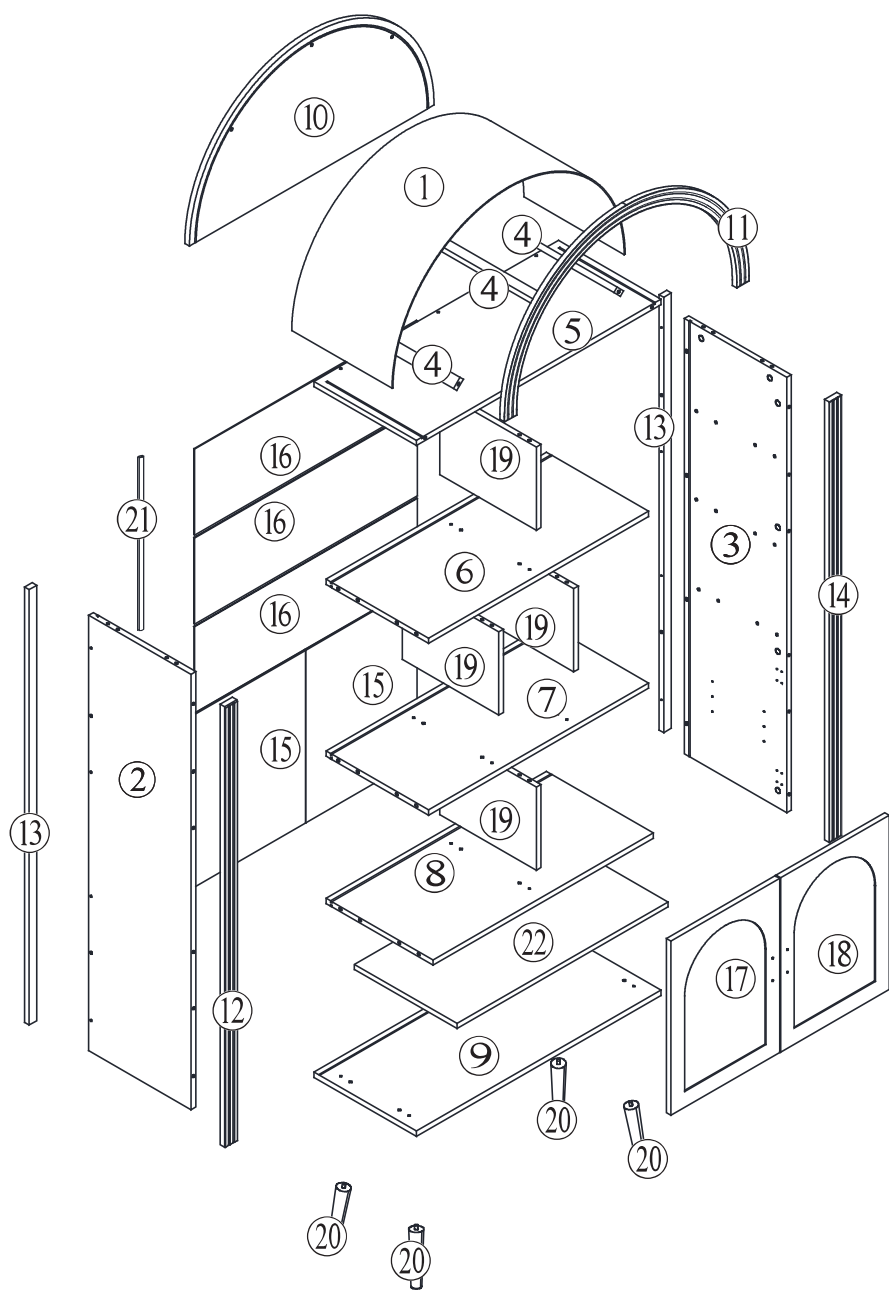

Step 1

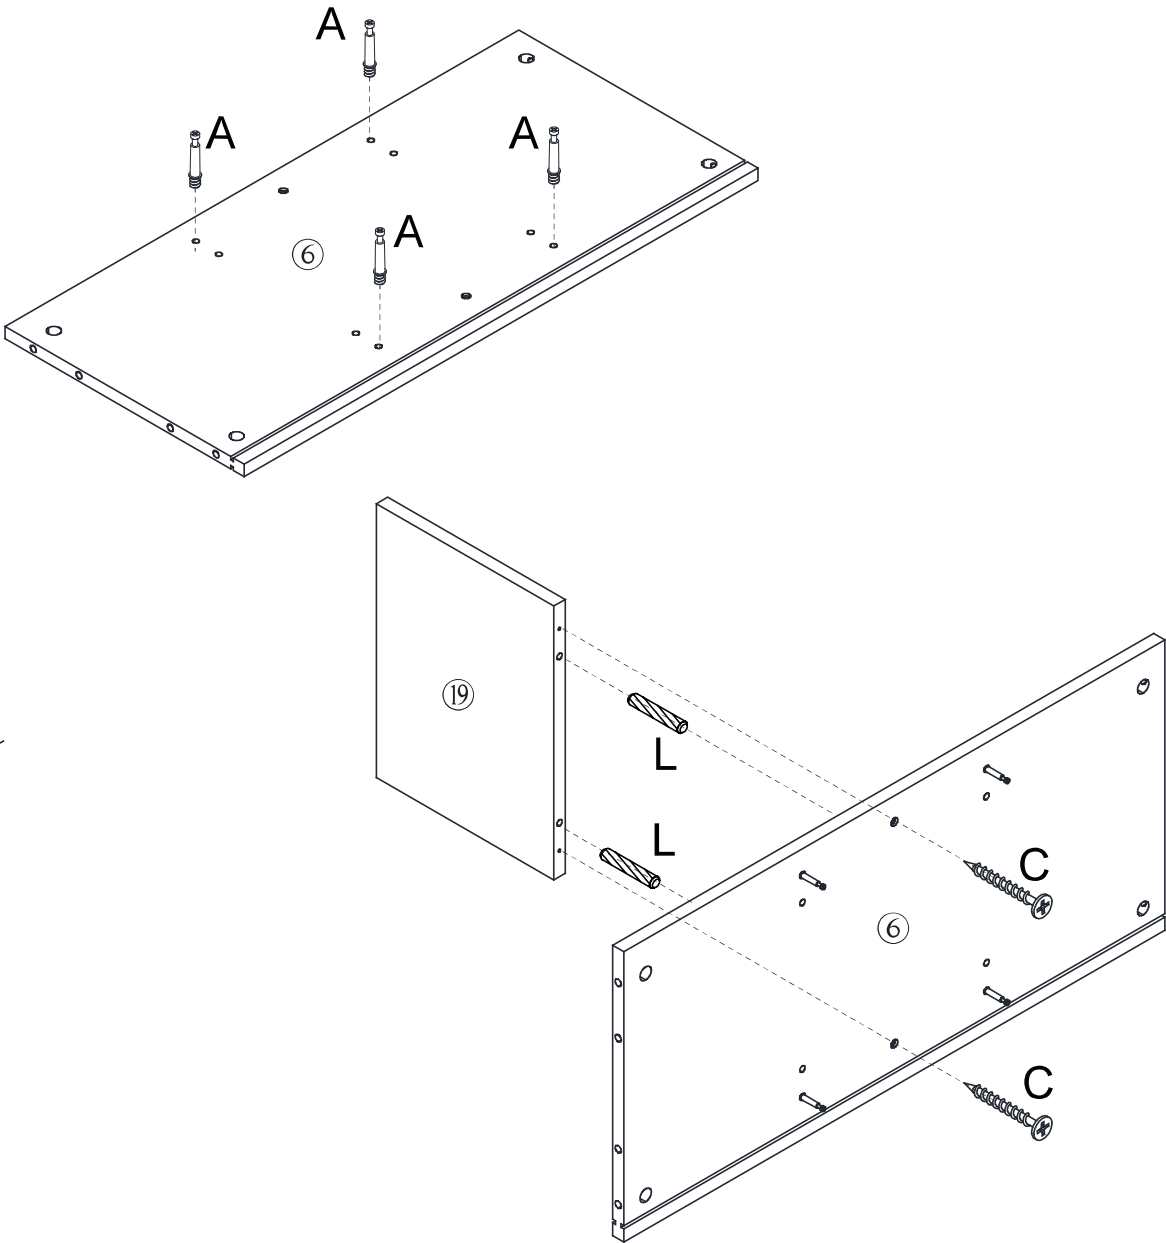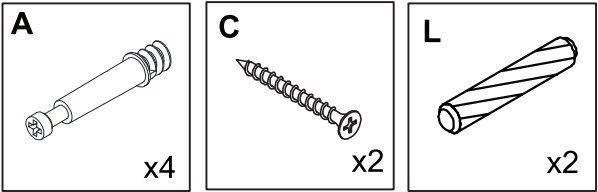

Step 2

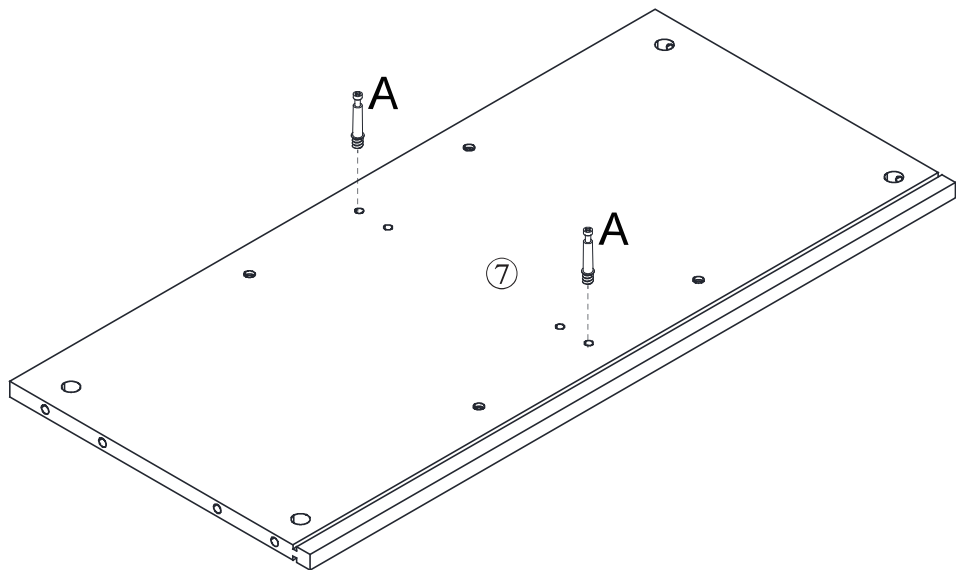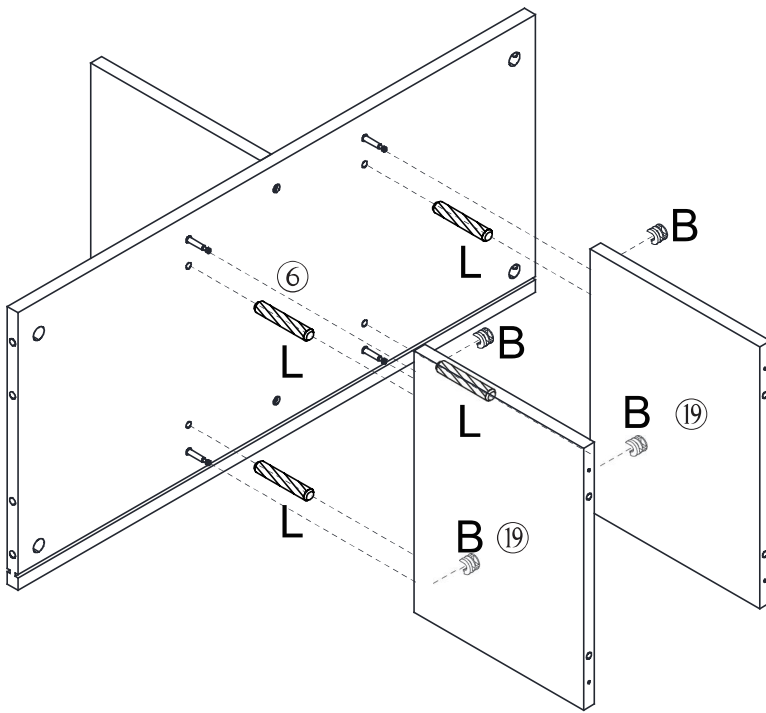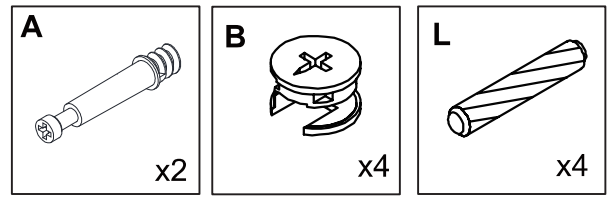

Step 3

B


x2

C




x4

L



x6

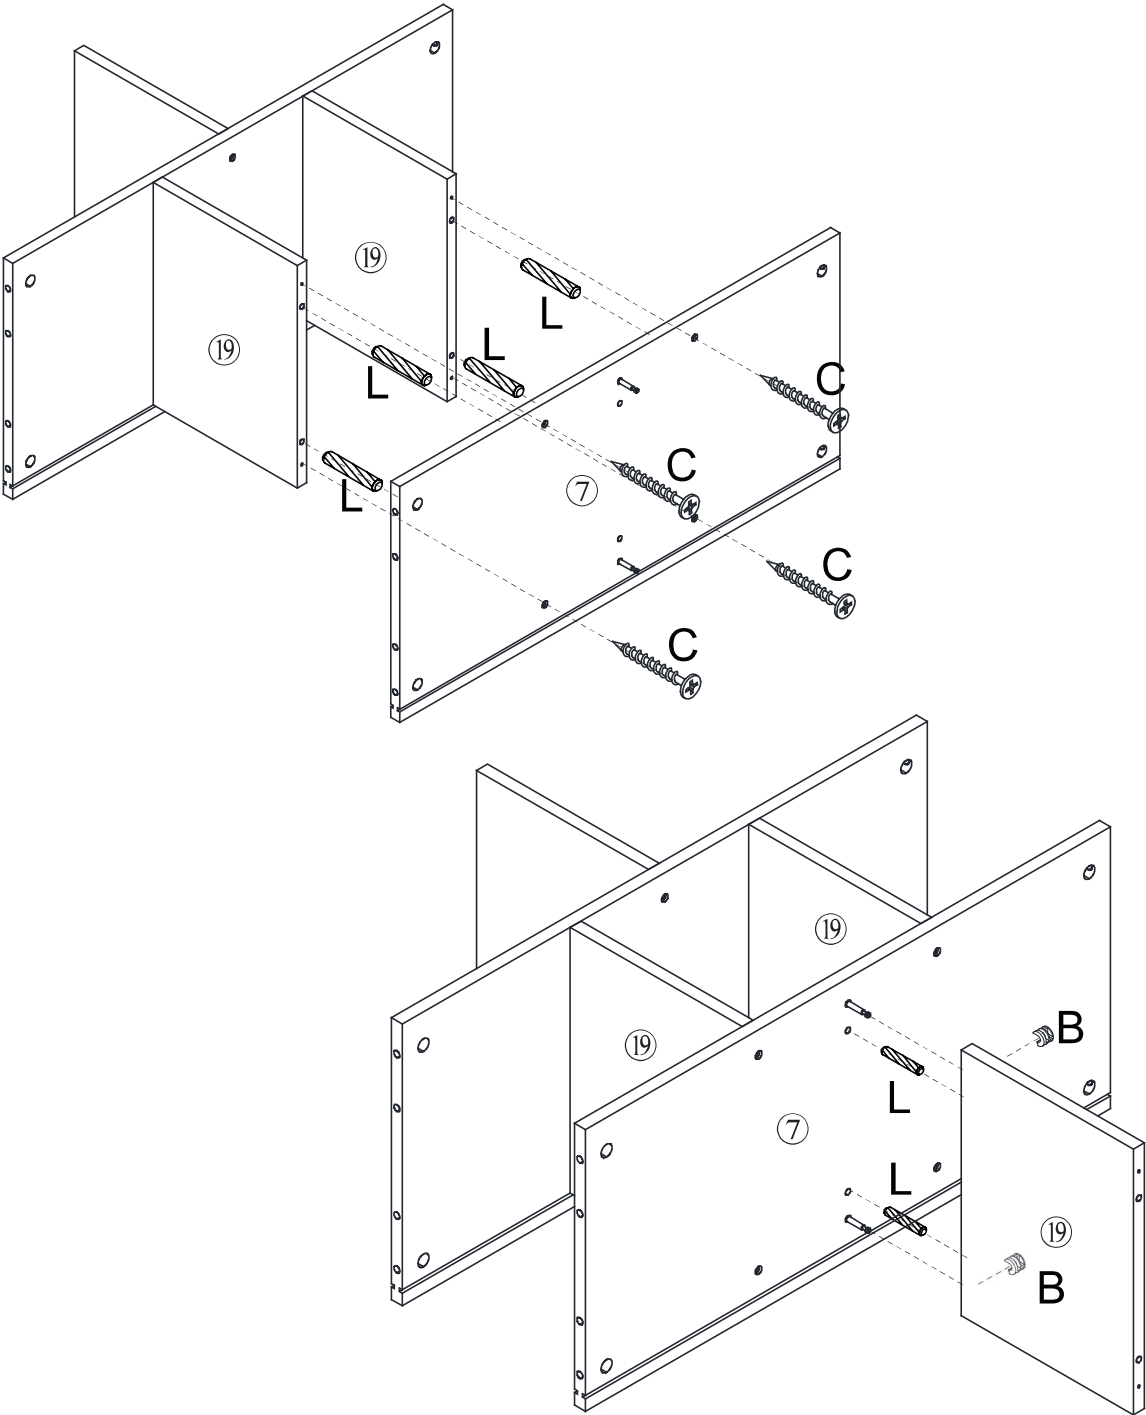



Step 4

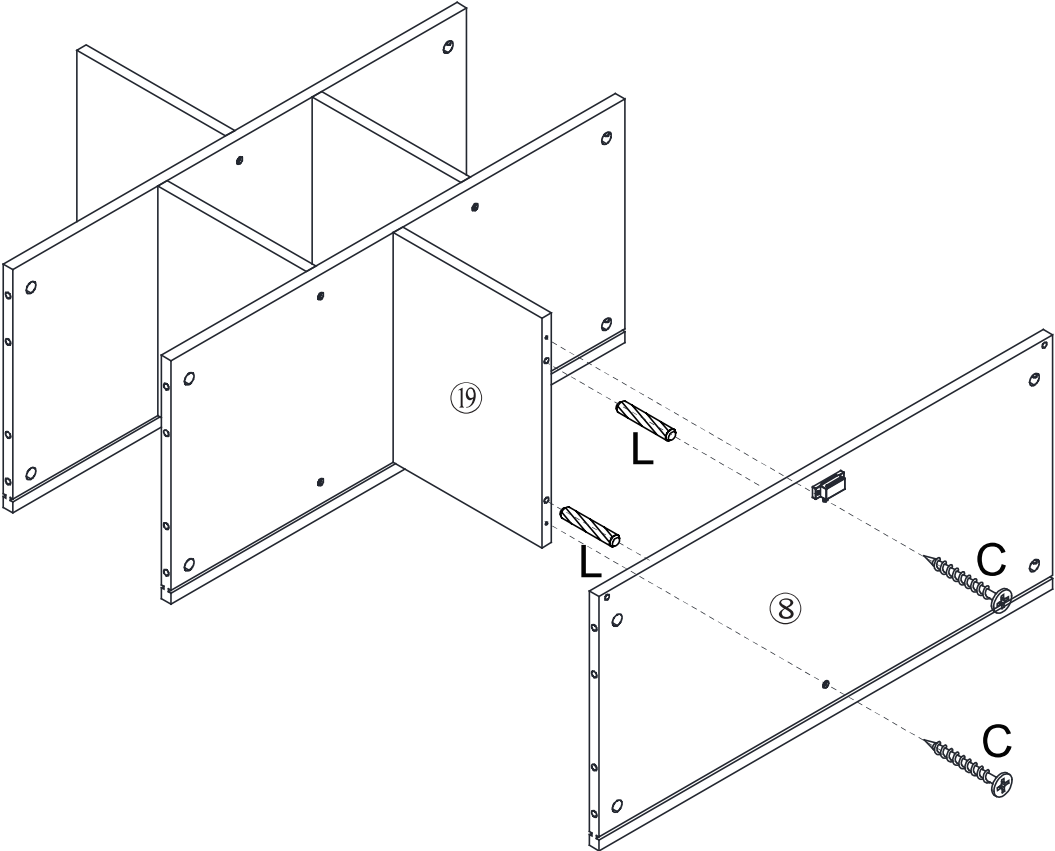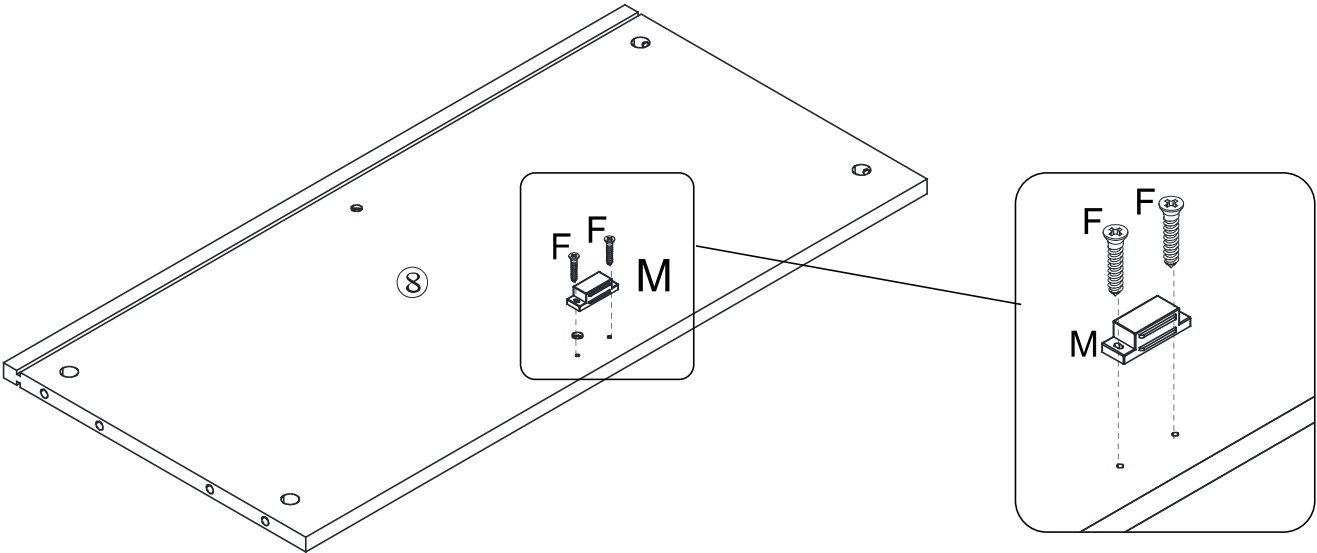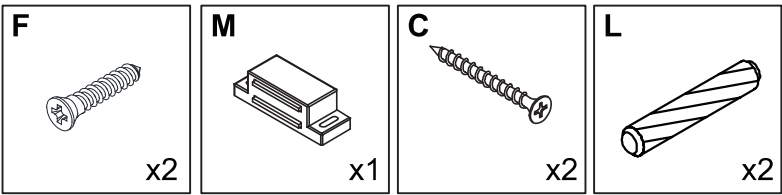




Step 5

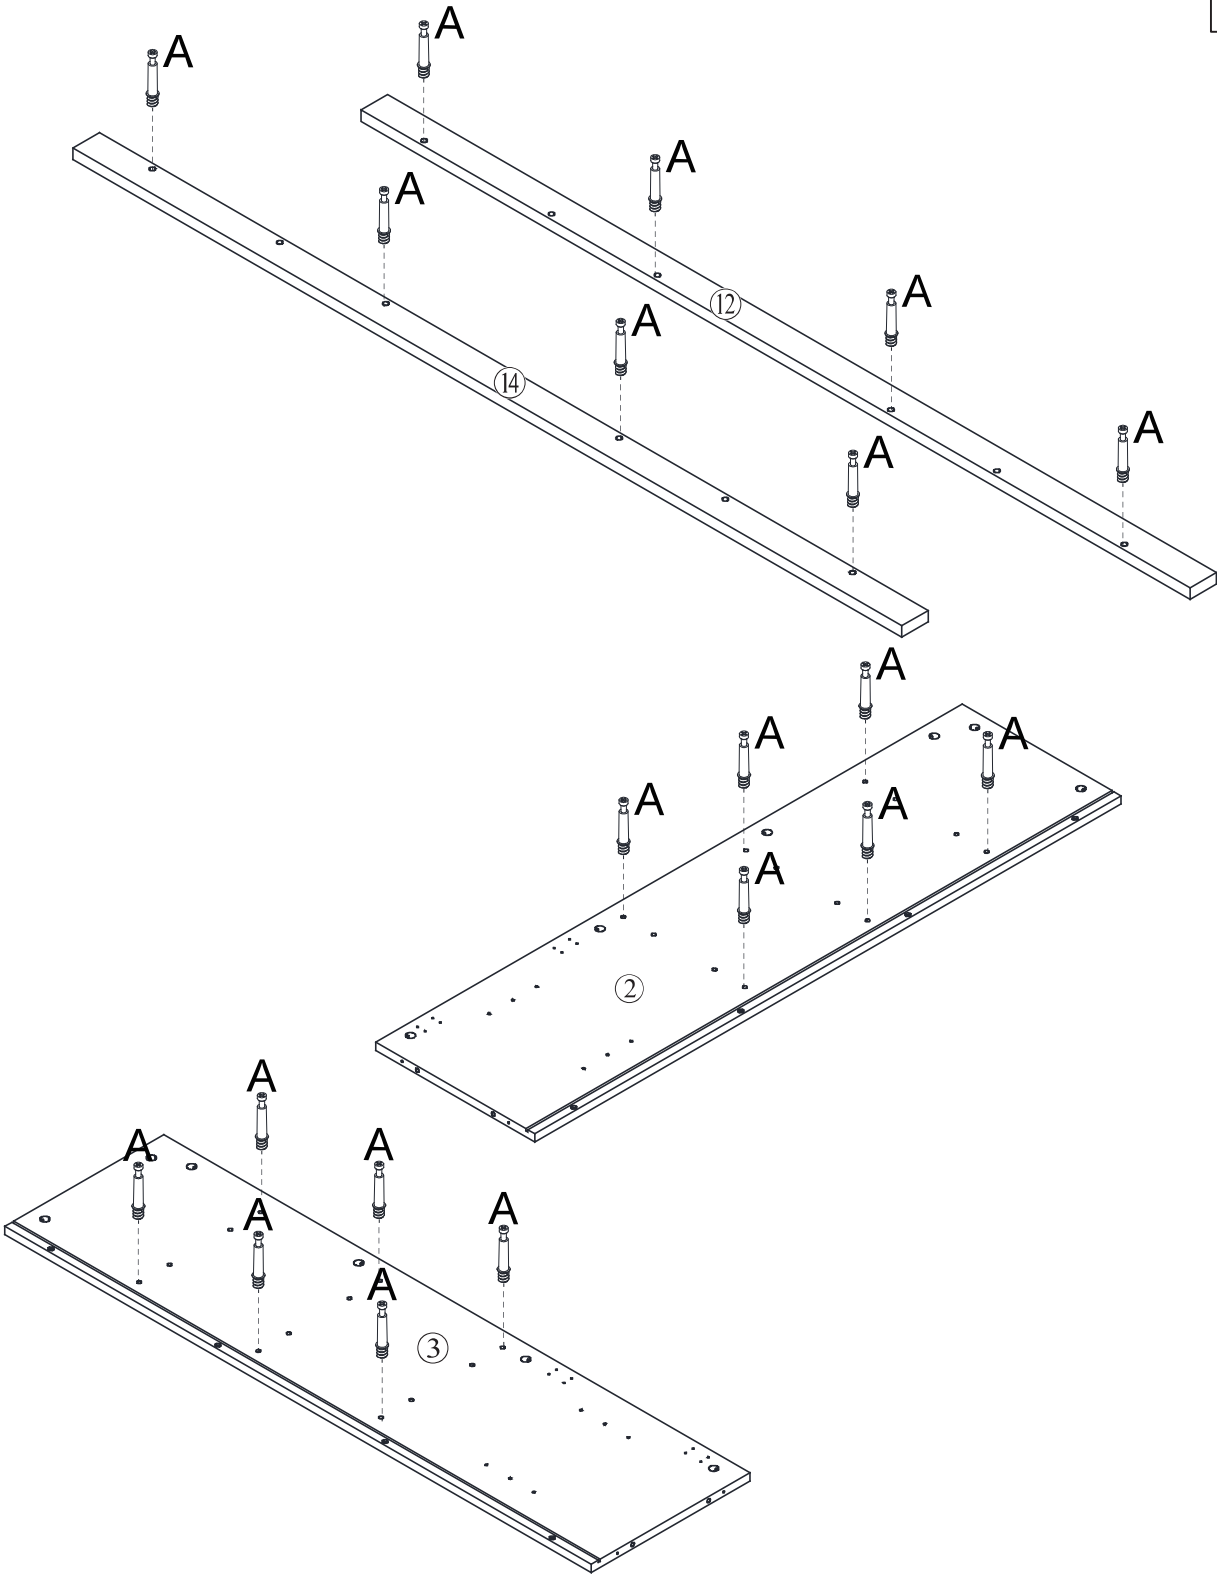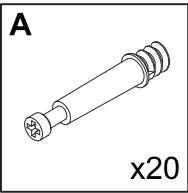

Step 6

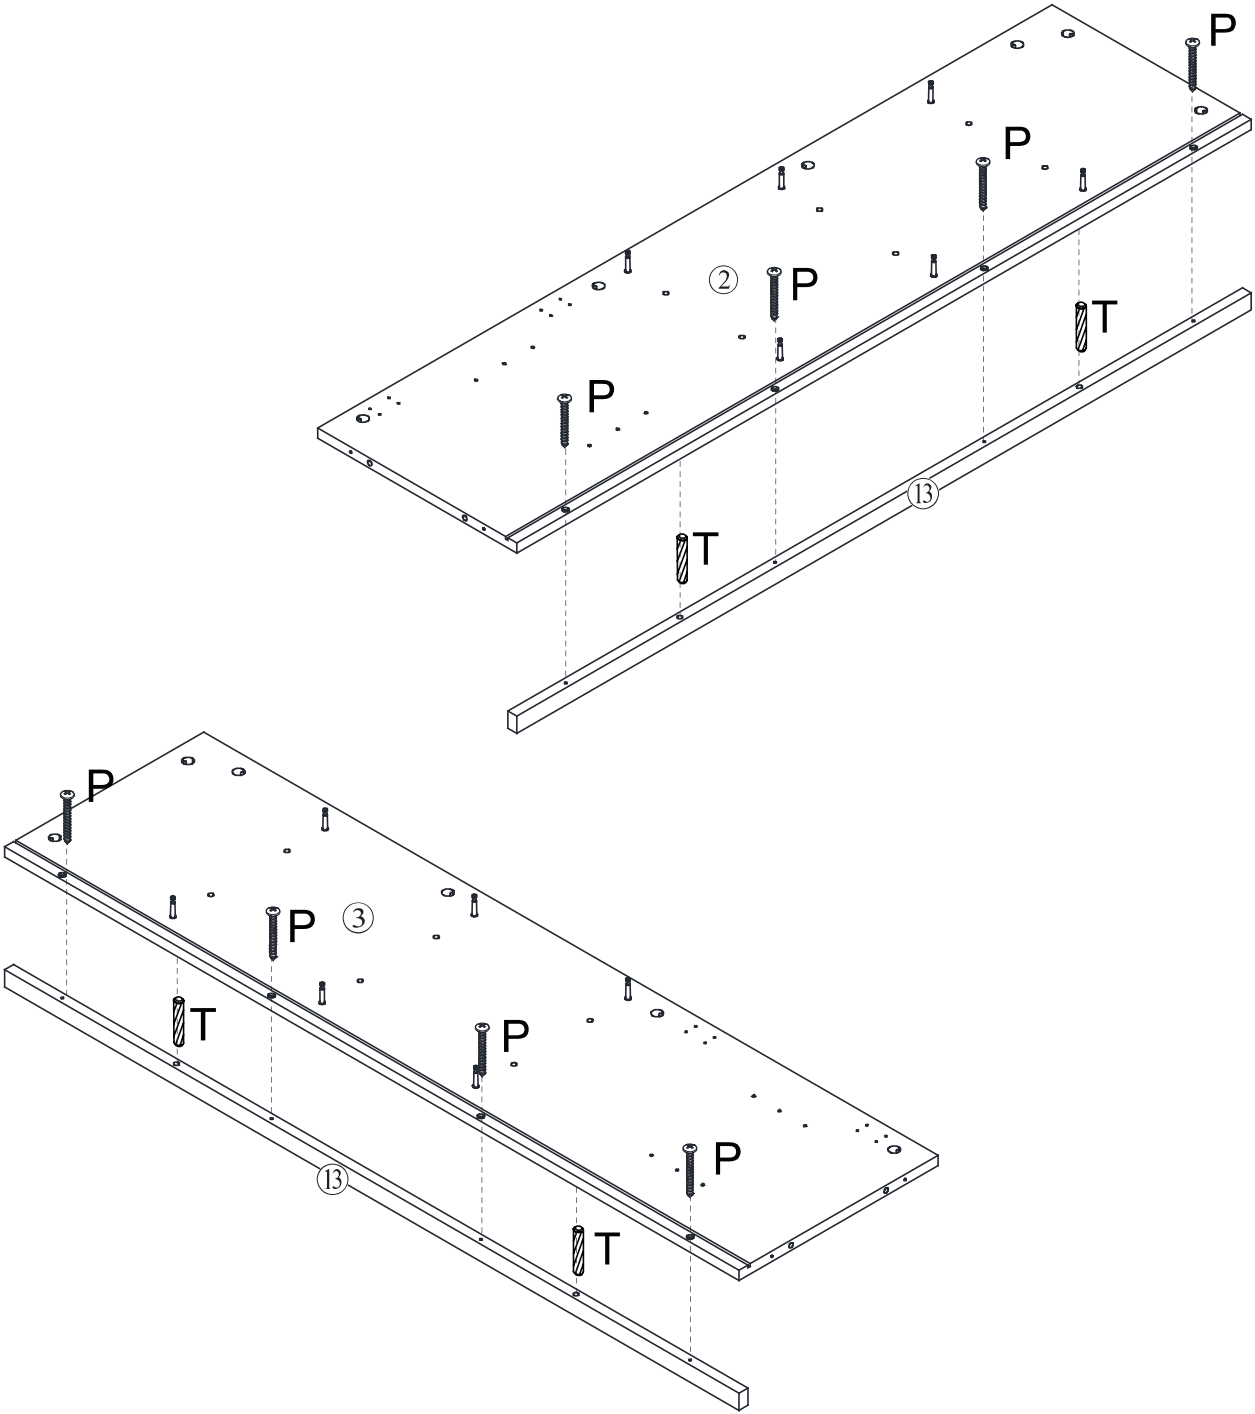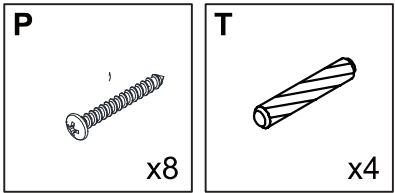

Step 7

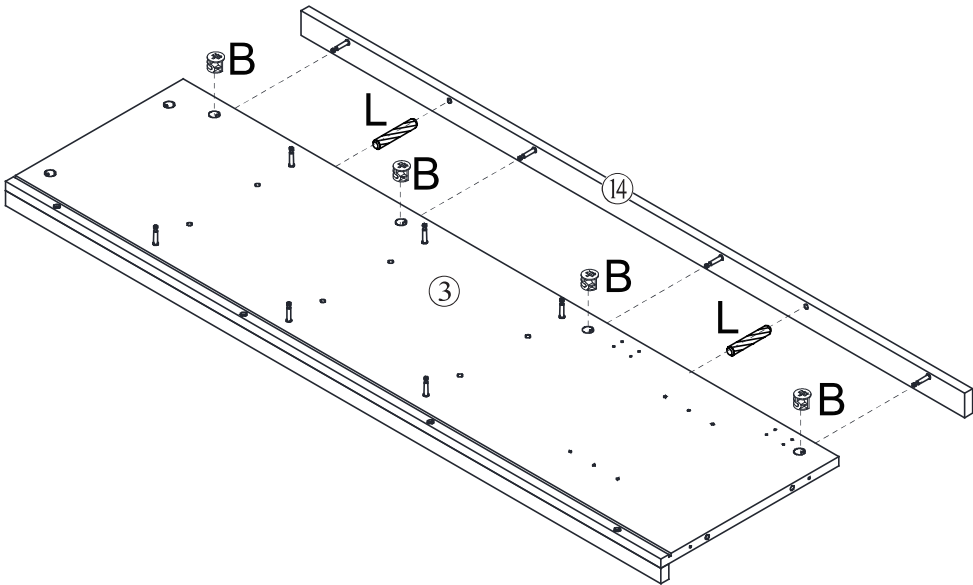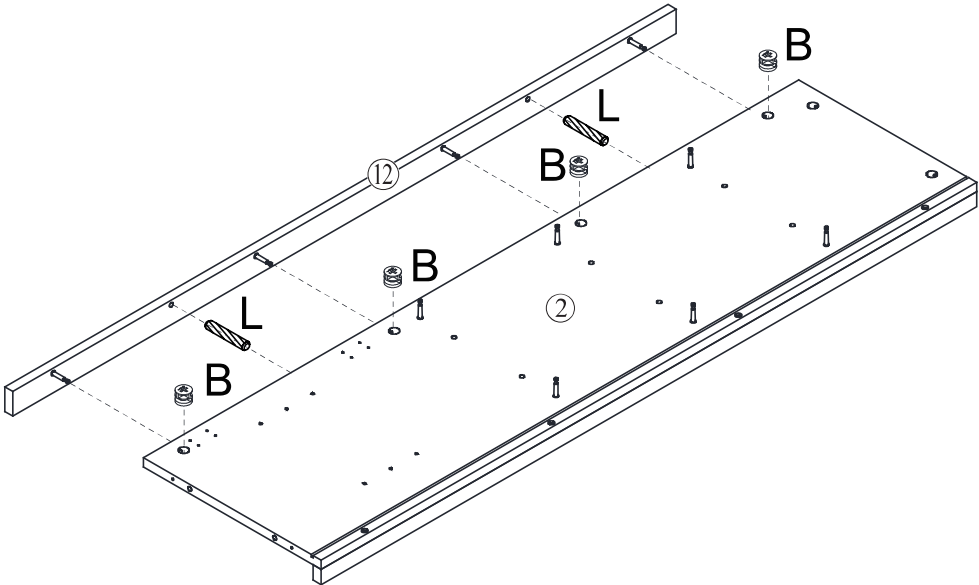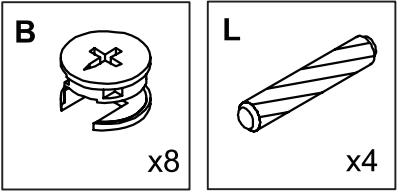


Step 8

B




x6


L






x6

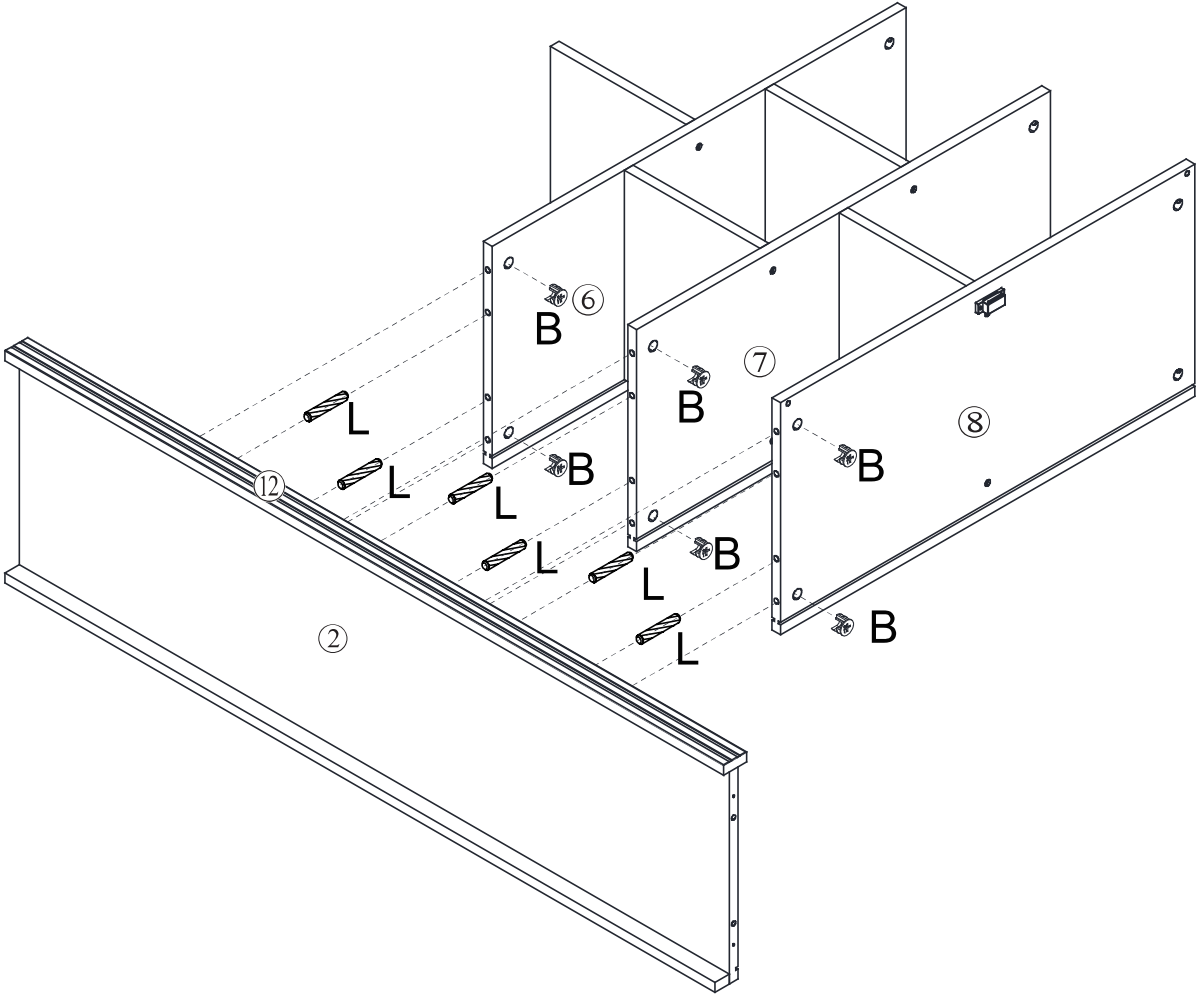


Step 9

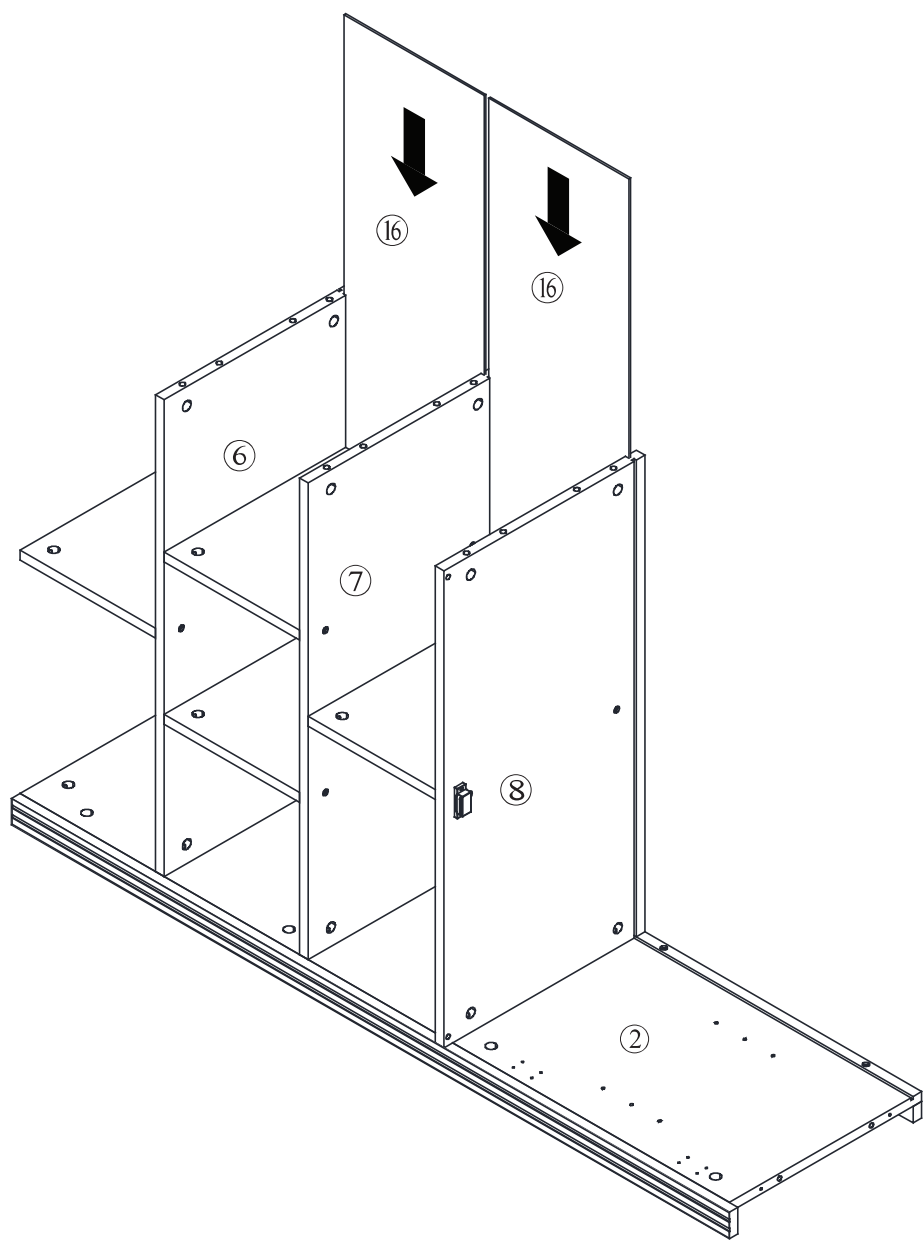




Step 10

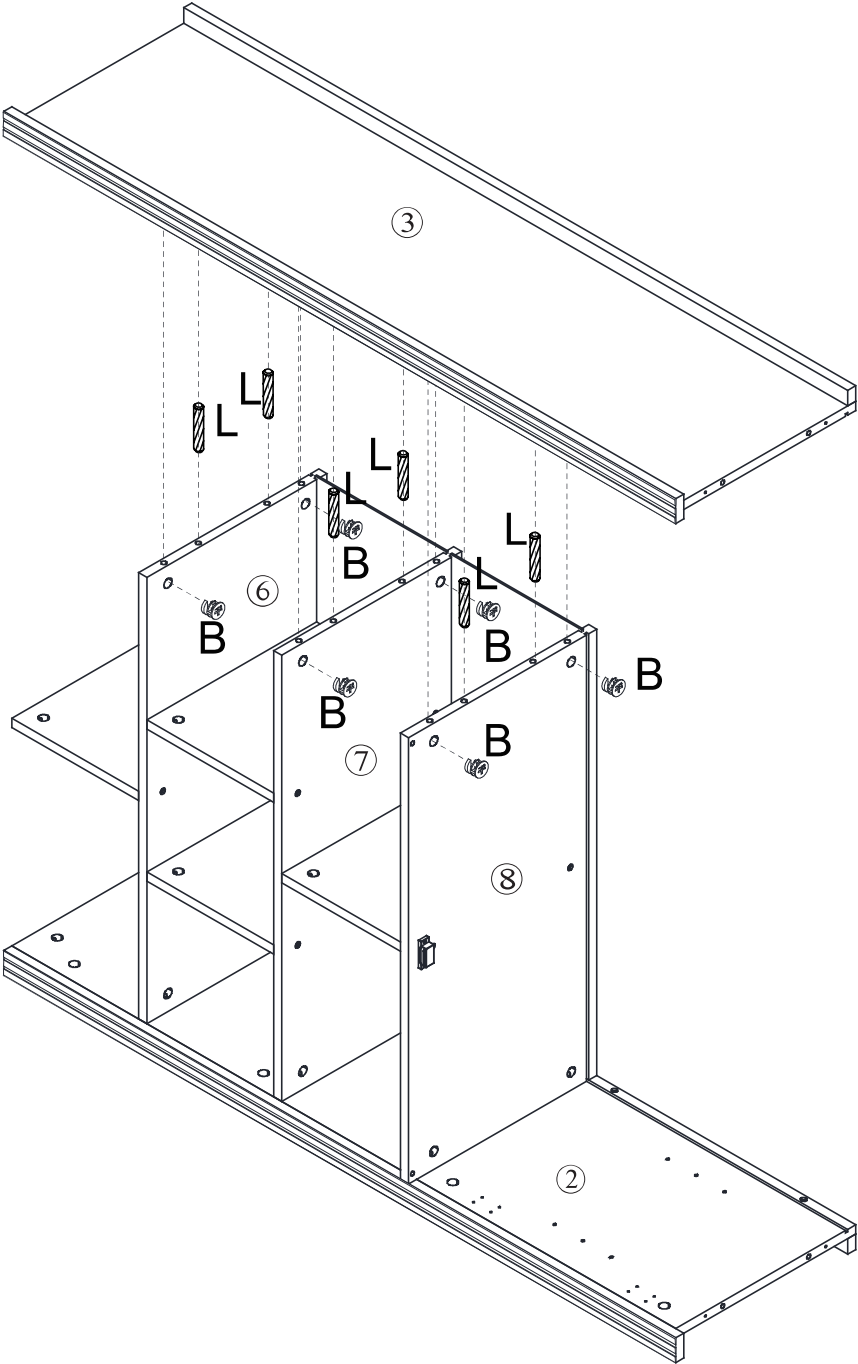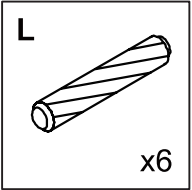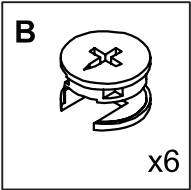






Step 11

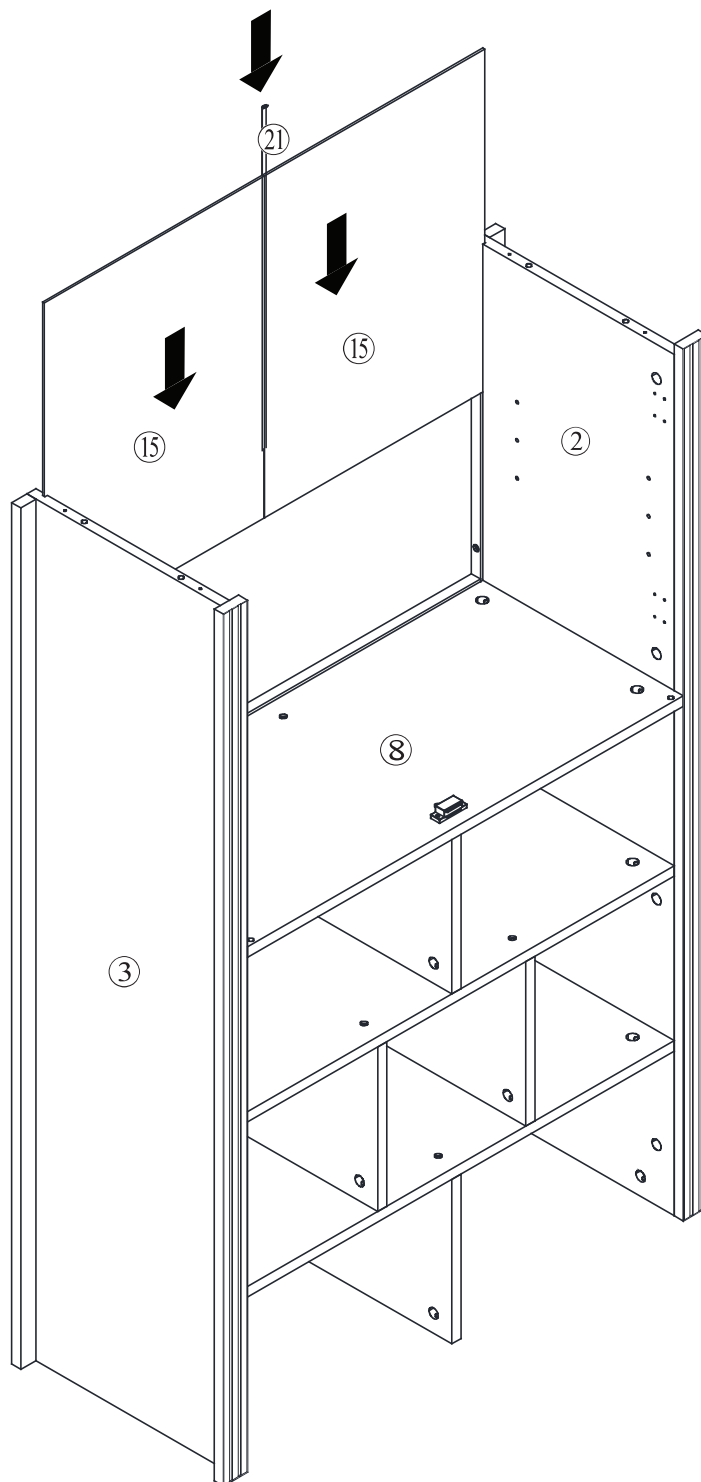


Step 12

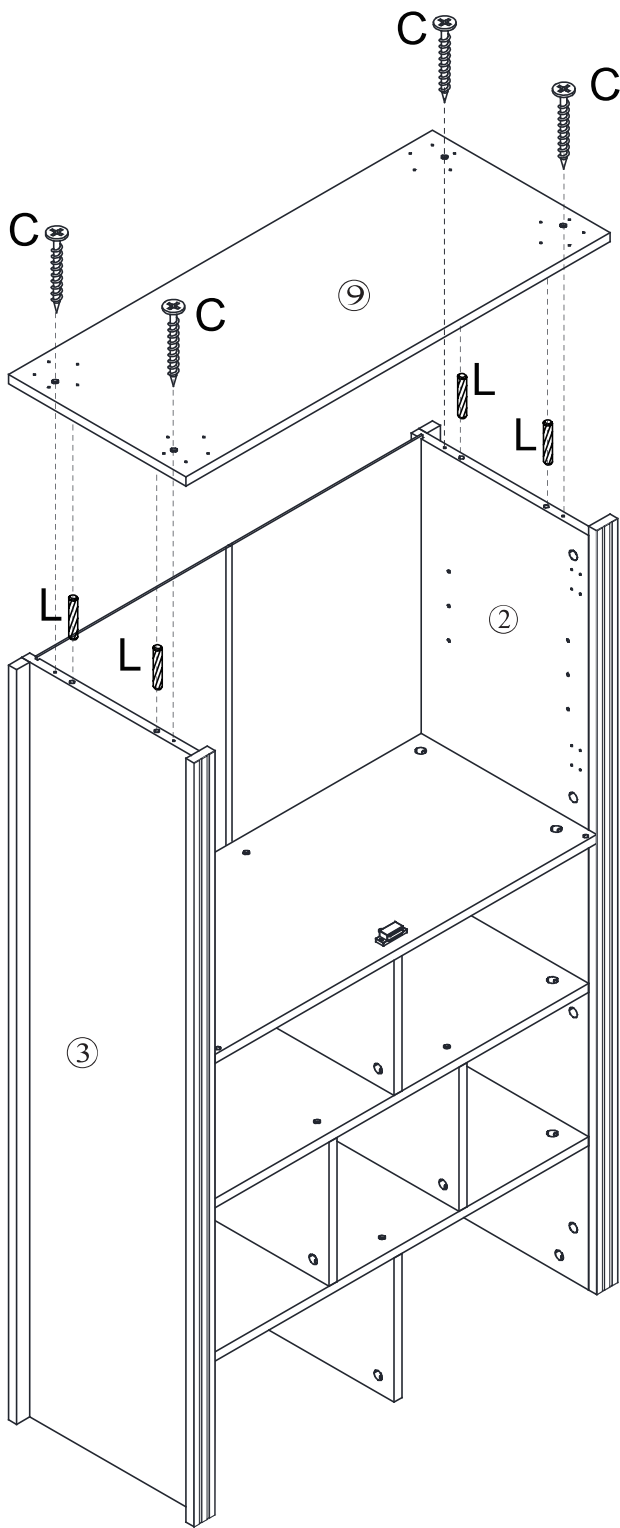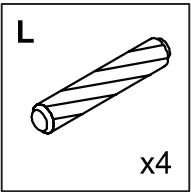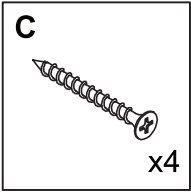




Step 13

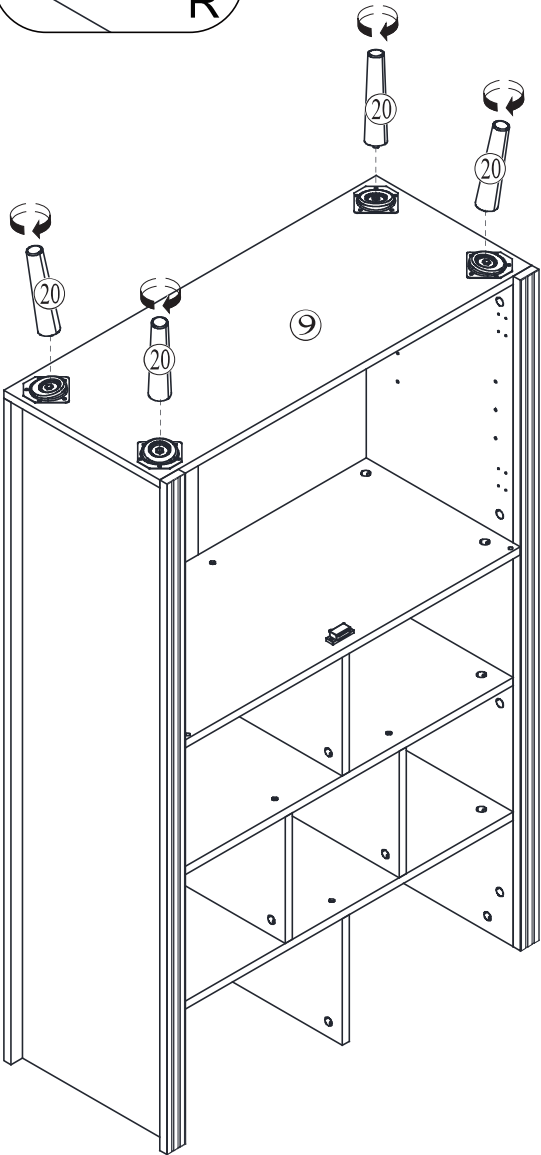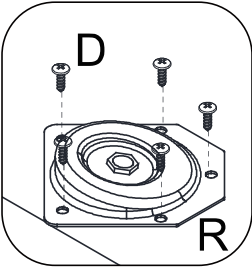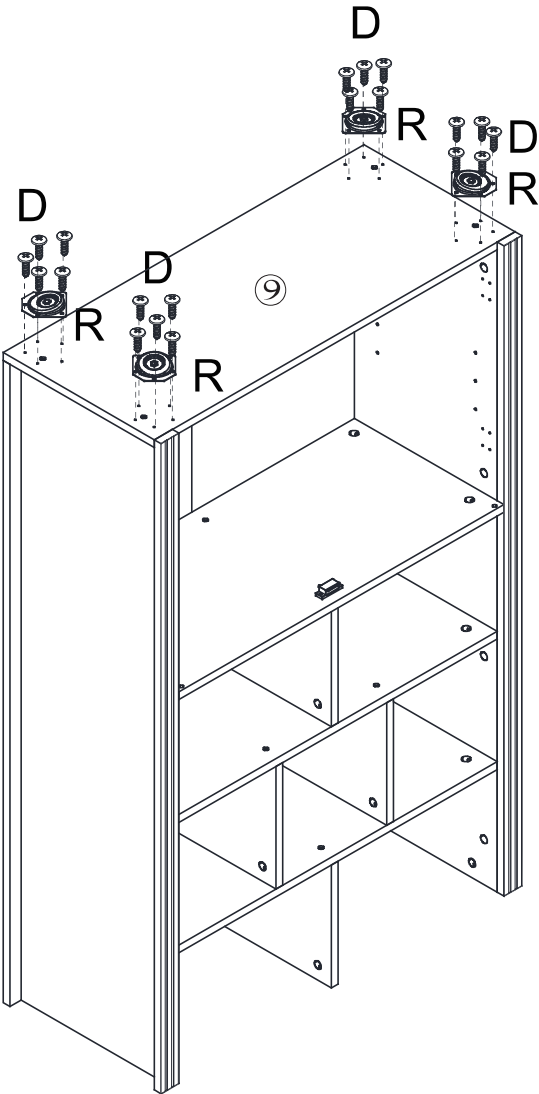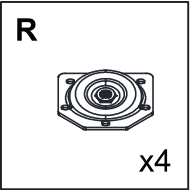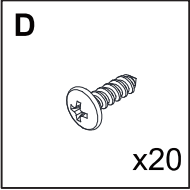





Step 14

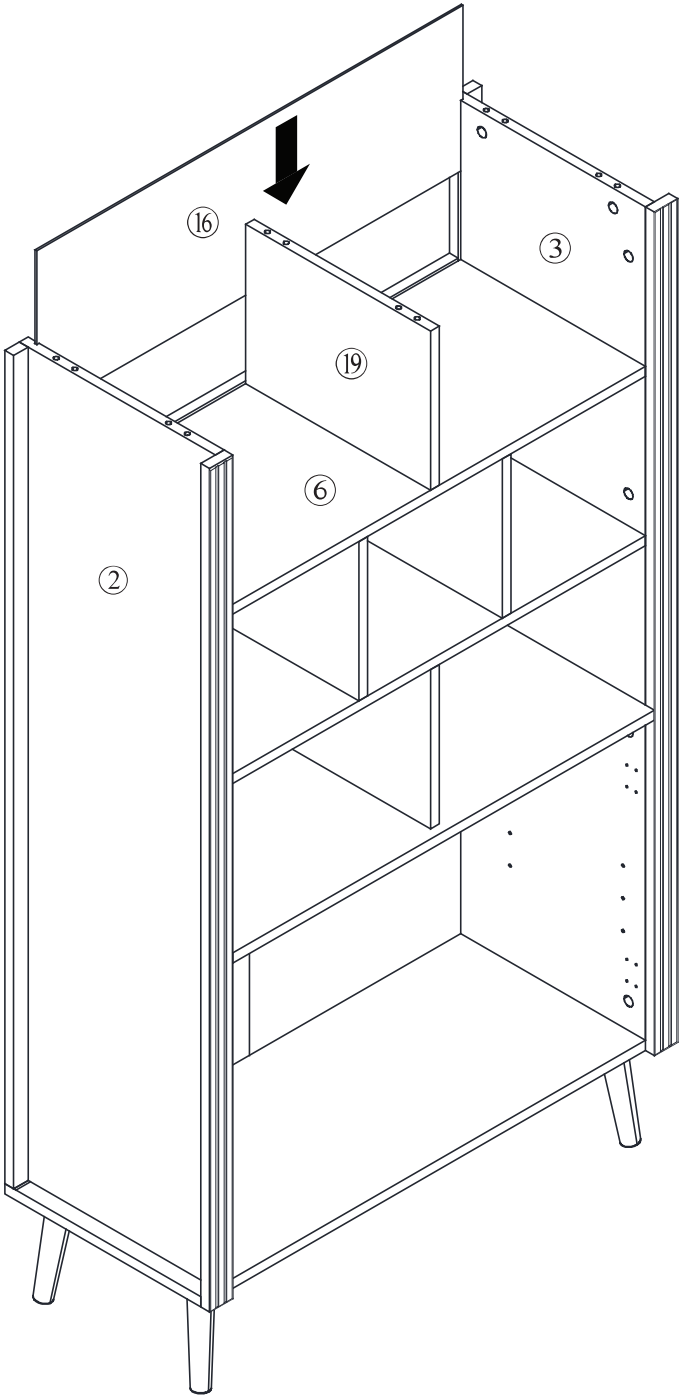



Step 15

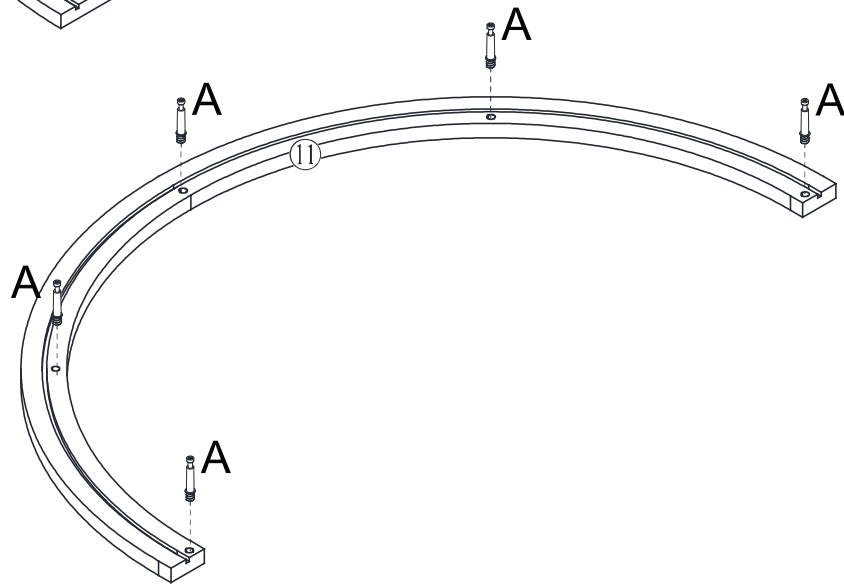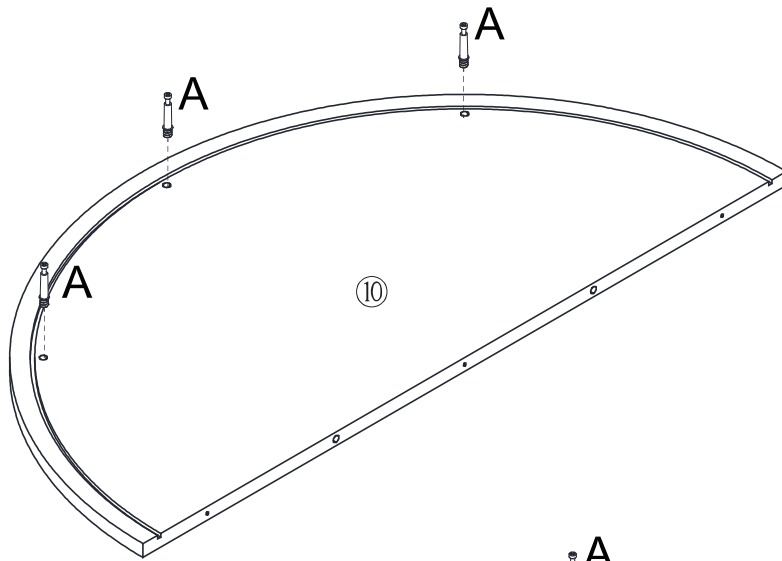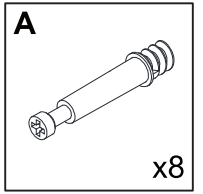



Step 16

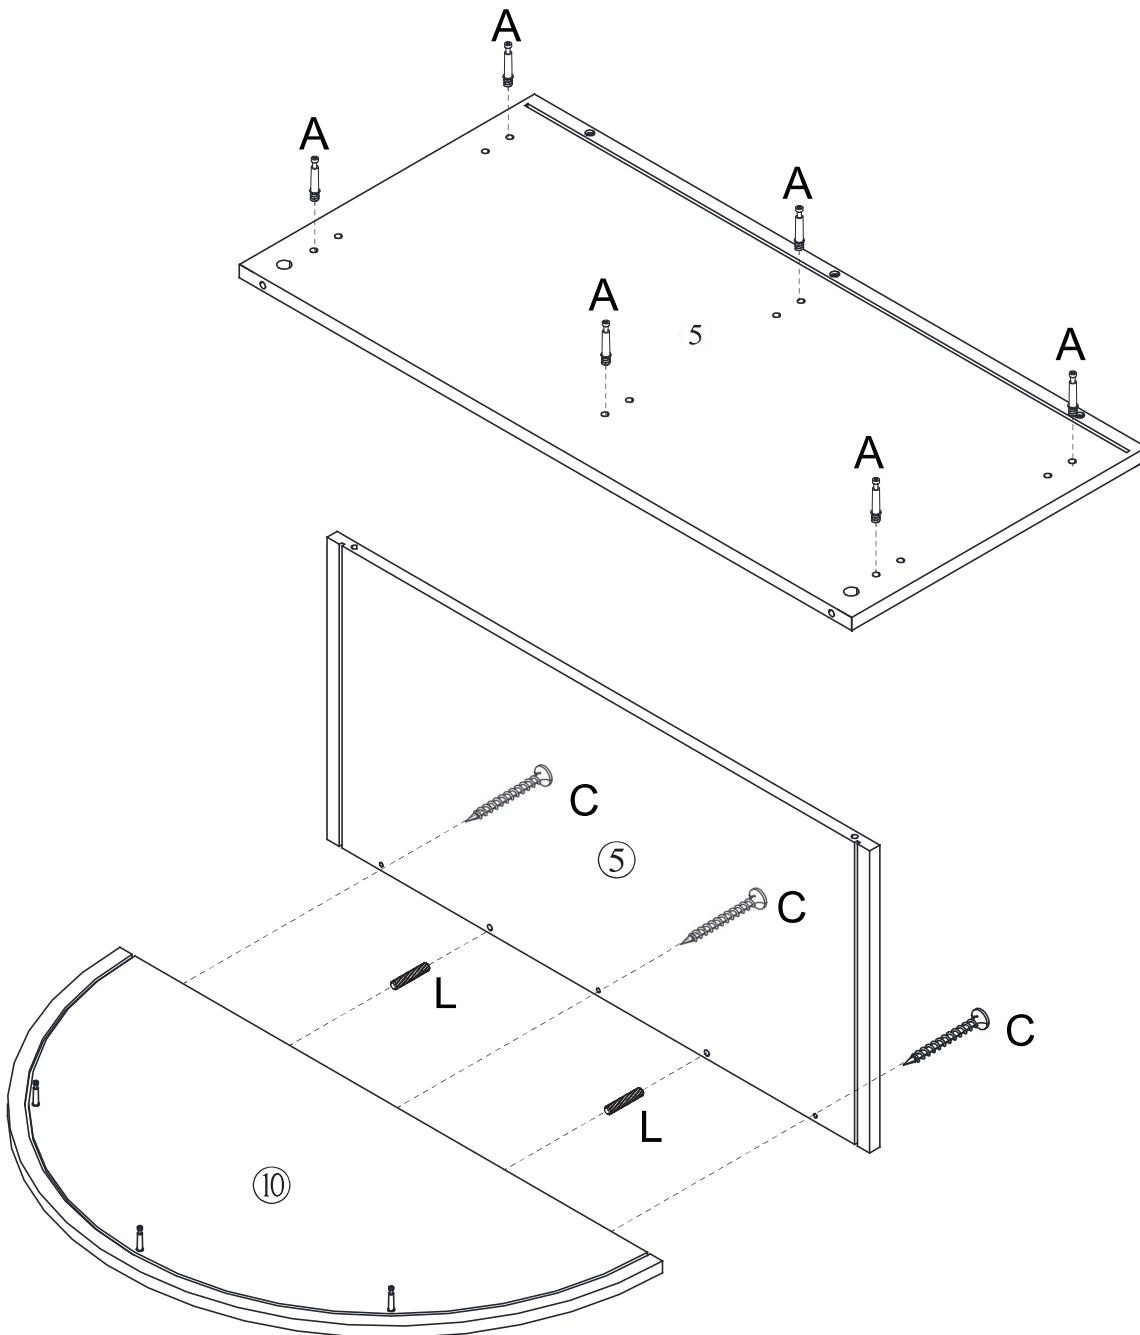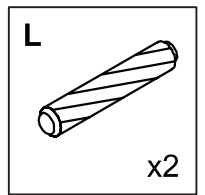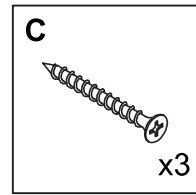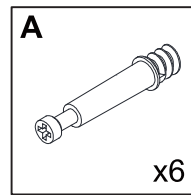



Step 17

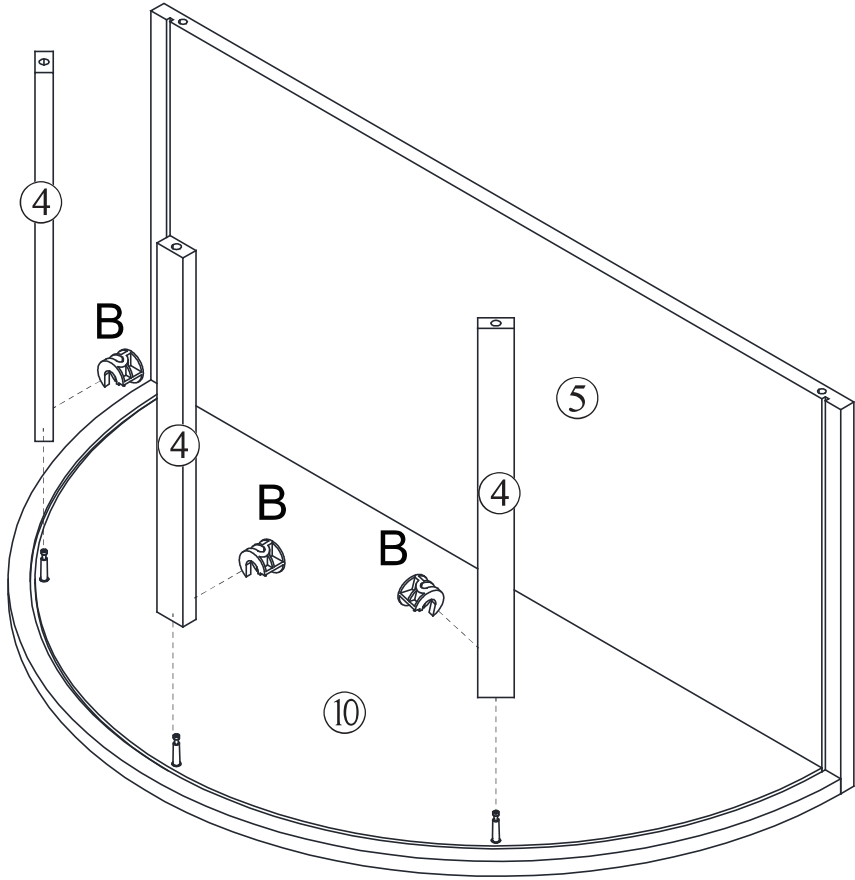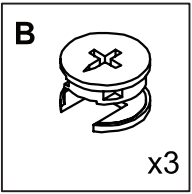




Step 18

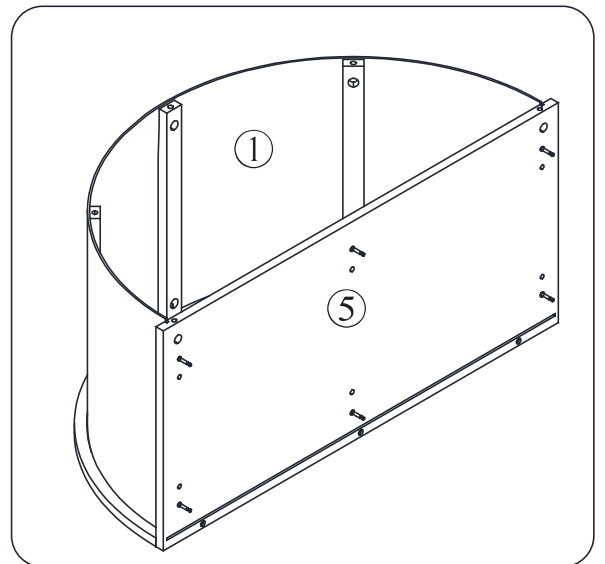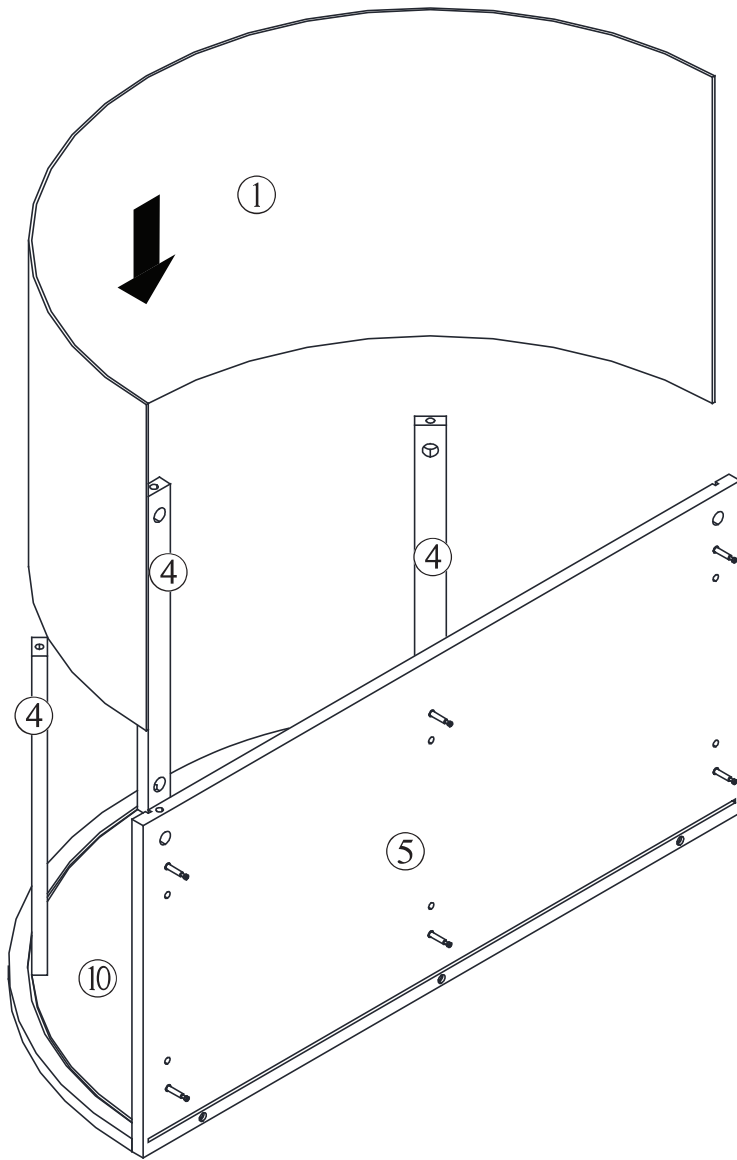






Step 19

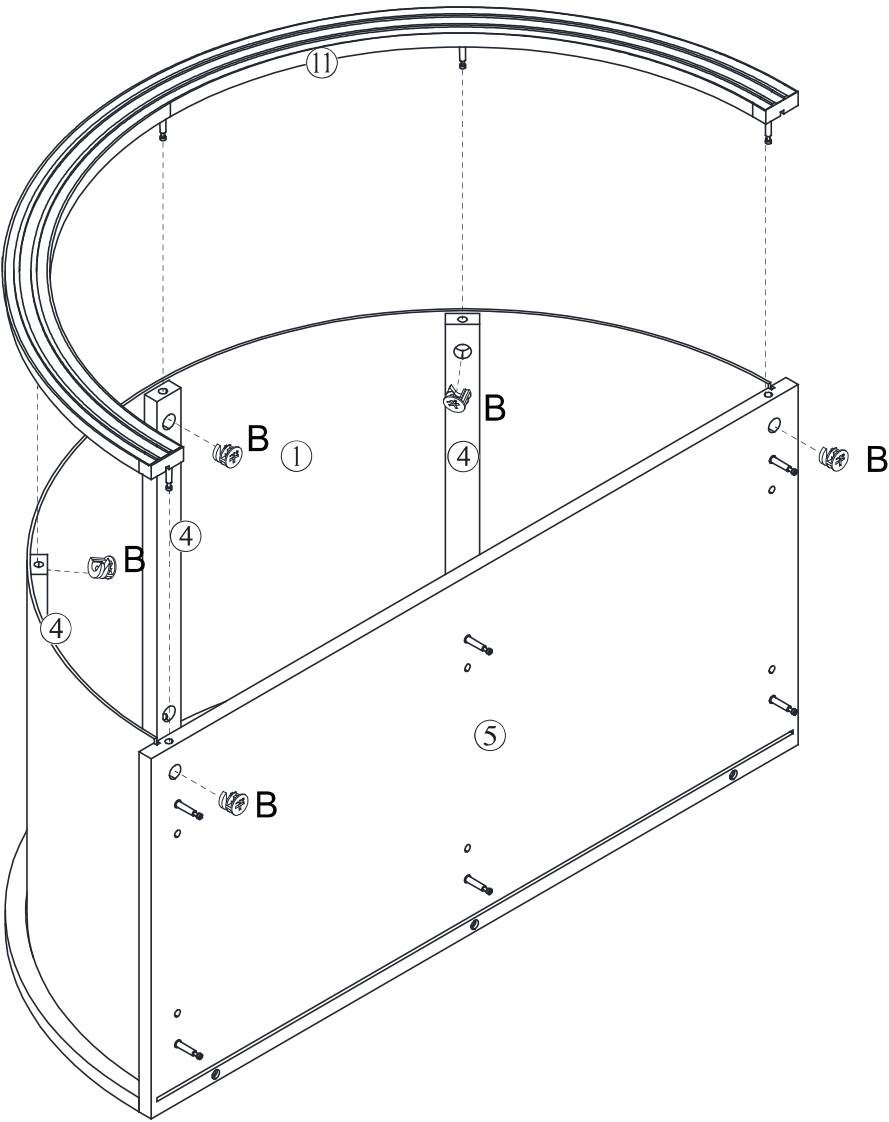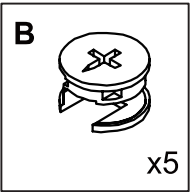





Step 20

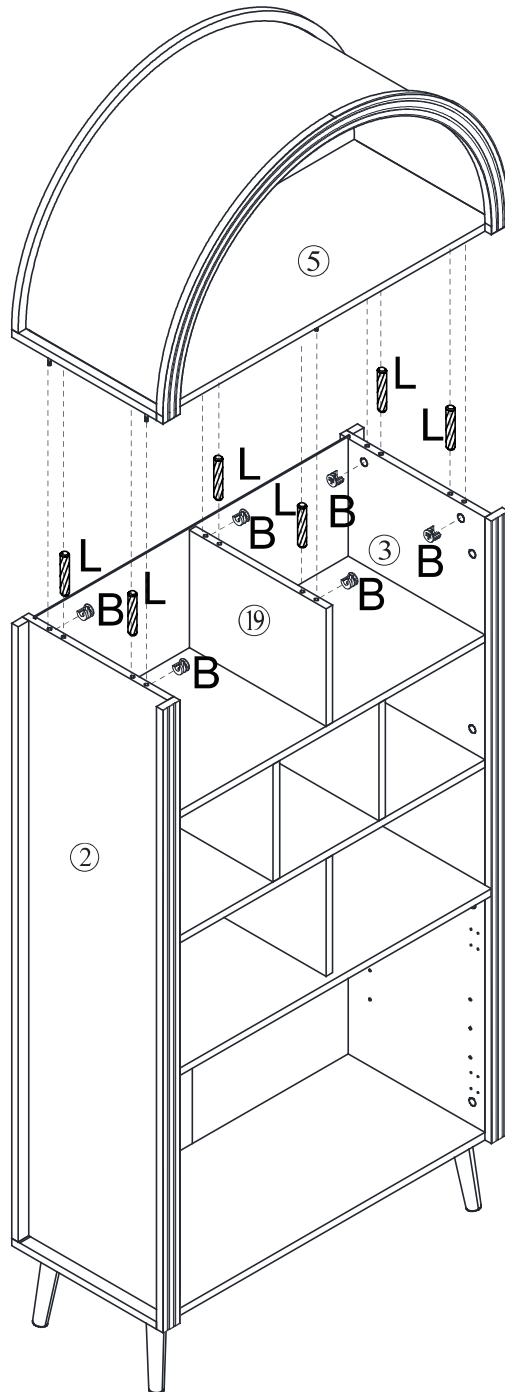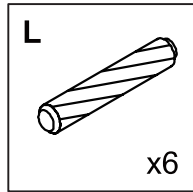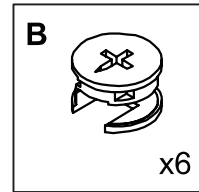







Step 21

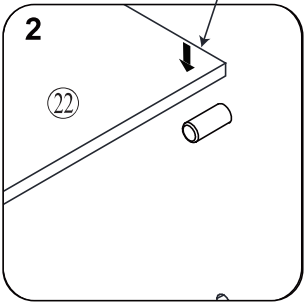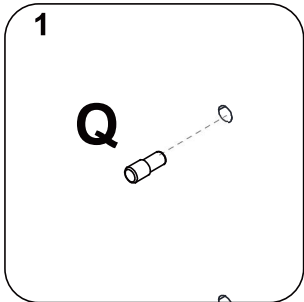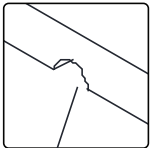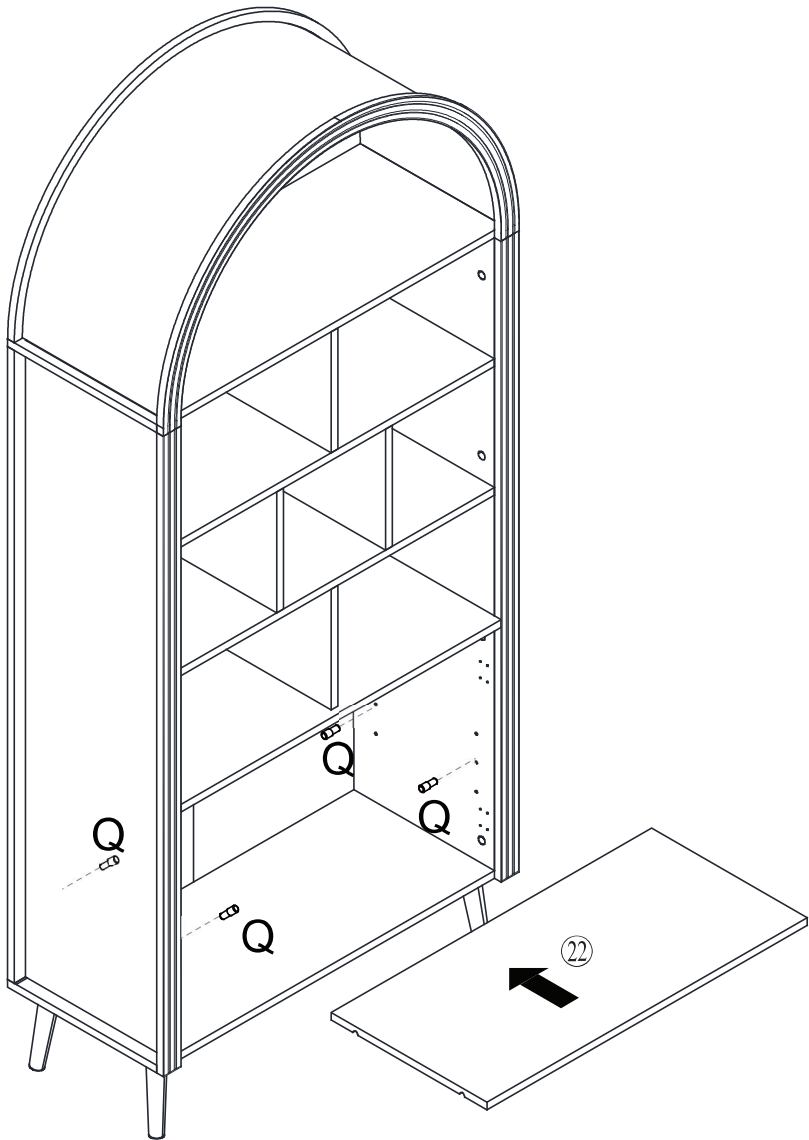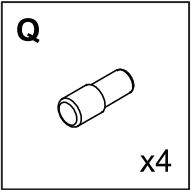

Step 22

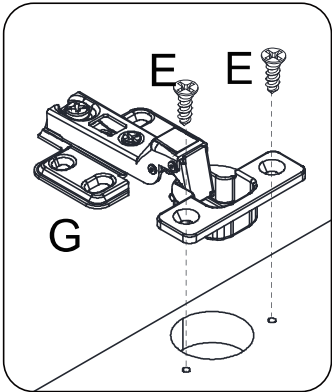
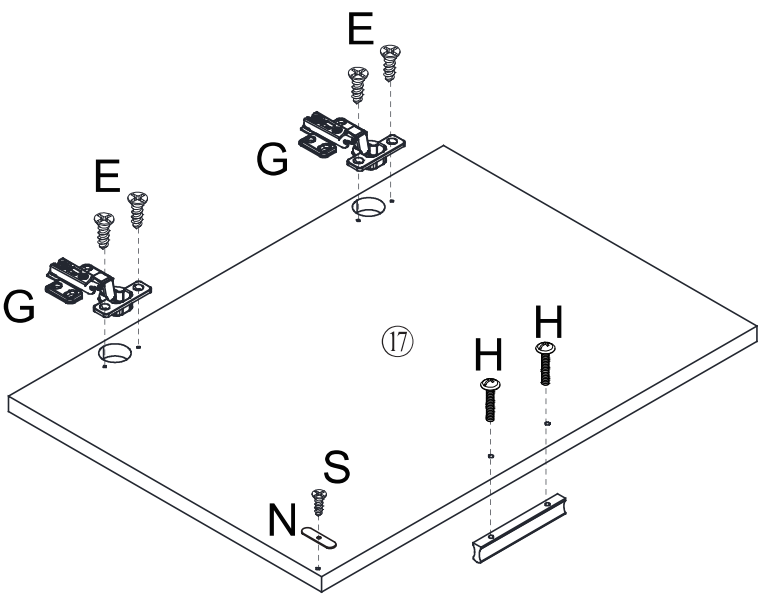
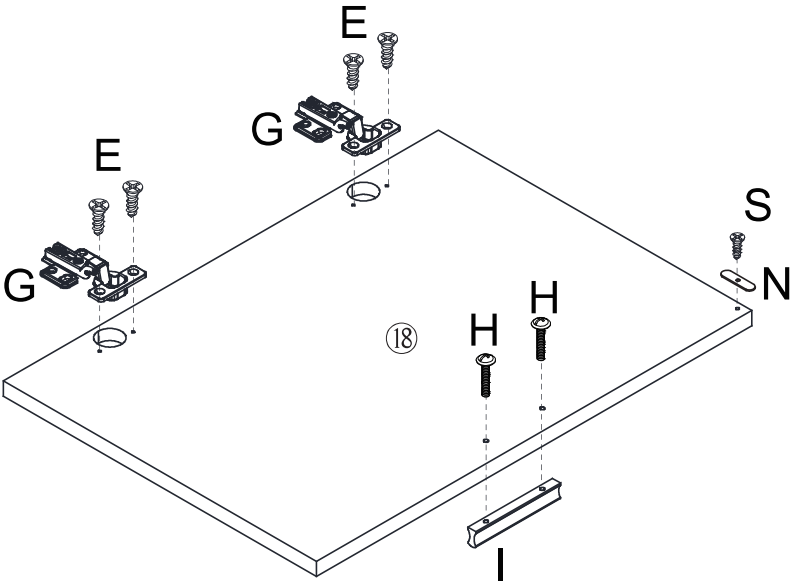
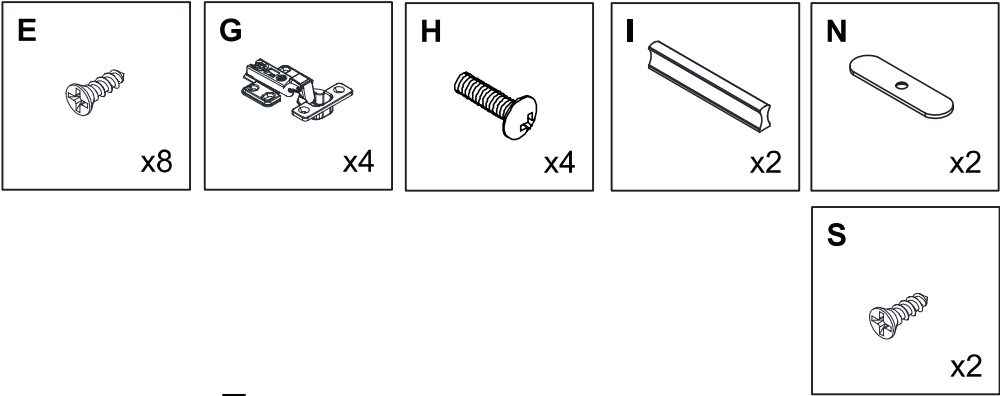


Step 23

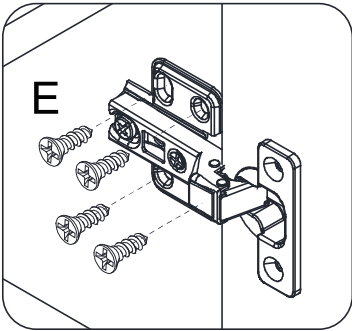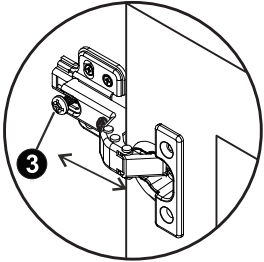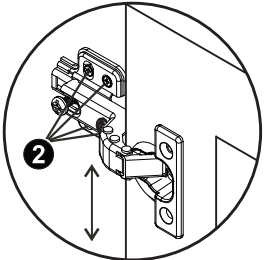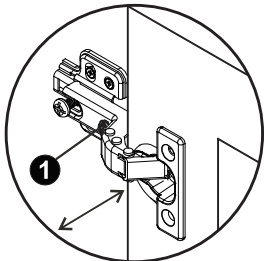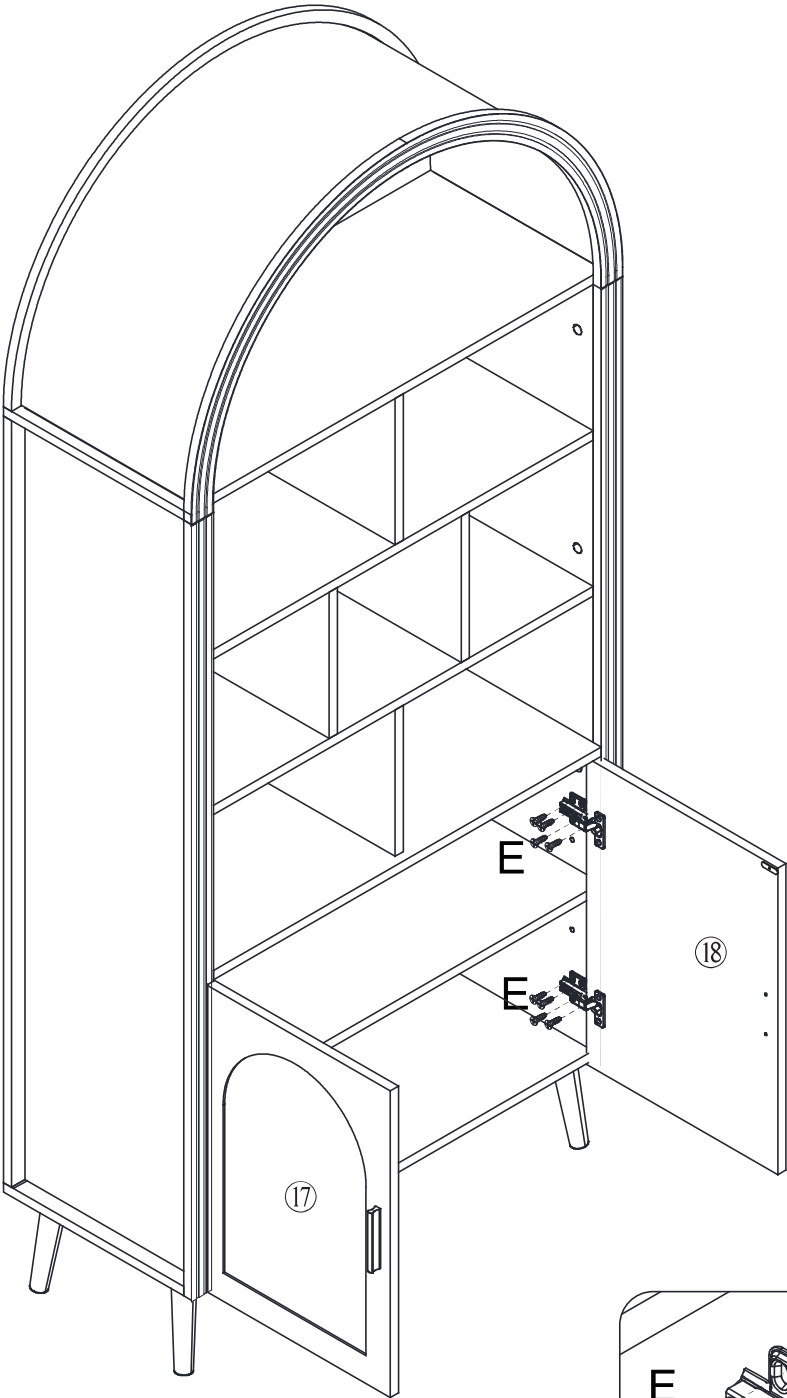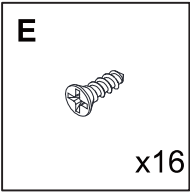

Step 24

V  x2	D  x2	F  x12	K  x12	O  x2
---	---	--	--	---

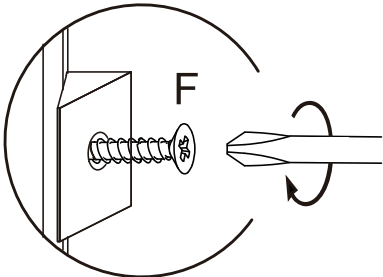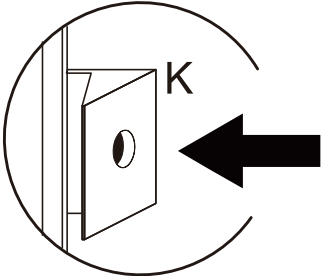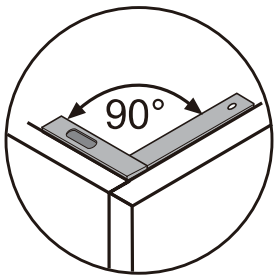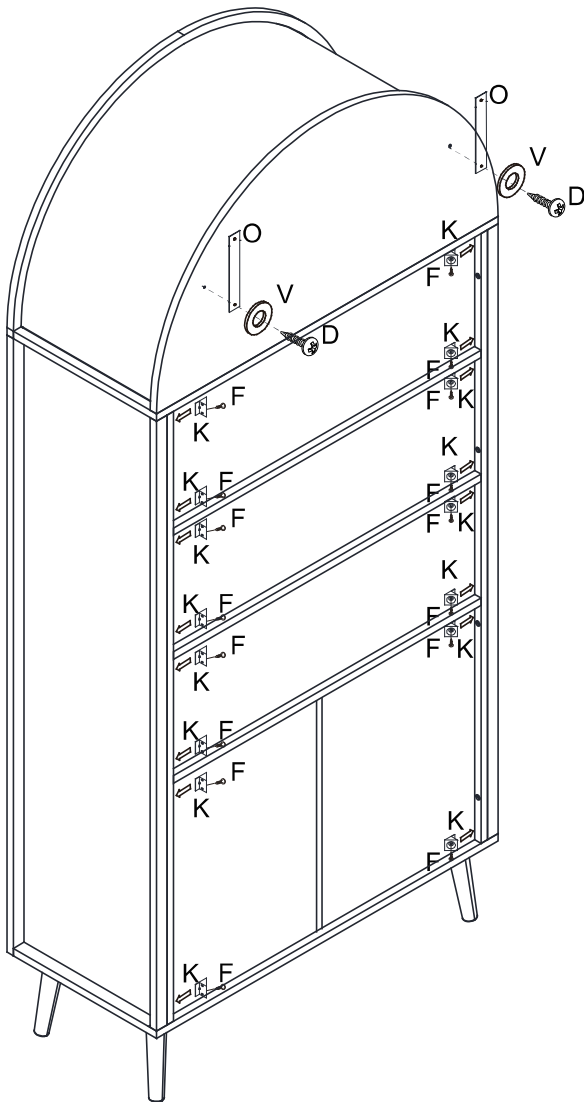

Step 25

