

WP FURNITURE / INSTRUCTIONS

Pine Bed (Full Size / Queen Size)

Need Assistance?-315-7580-751-Text

Email: lori@shopwp.com



①		Thread Rod M8*70	x16
②		Half Moon Nut M8	x16
③		Hex Nut M8	x16
④		Wooden Dowel M10*35	x16
⑤		Screw M6*20	x16
⑥		Screw M6*30	x3
⑦		Gasket M6	x7
⑧		Allen Key	x1
⑨		Flat Open-End Wrench	x1

*** Extra screw for your commitment.**


*** Please assemble flat or nice service.**

"Congratulations on Your Recent Purchase! Here Are Some Tips Before You Begin Assembling:"

"Preparing for your exciting new purchase? Be sure to set yourself up for a smooth assembly process by following these steps:"

- First, we recommend using a rug or any large clean surface as your workspace to provide a sturdy base for assembly.
- Next, it is important to separate all components and identify each part by their designated letters. This will make it easier to follow the assembly instructions and ensure all pieces are placed correctly.
- Additionally, on a clean surface separate and identify all screws lengths and hardware. You can use the assembly instructions as a guide and place the screws on top of the actual size pictured. This will save you time and confusion during the assembly process.
- Finally, we highly encourage you to carefully read through the assembly instructions and start from step one. Follow each step diligently until your new purchase is fully assembled. However, if you have any questions or need further assistance, please do not hesitate to reach out to us via email.

**Thank you again for choosing our product.
We wish you all the best and happy assembling!**

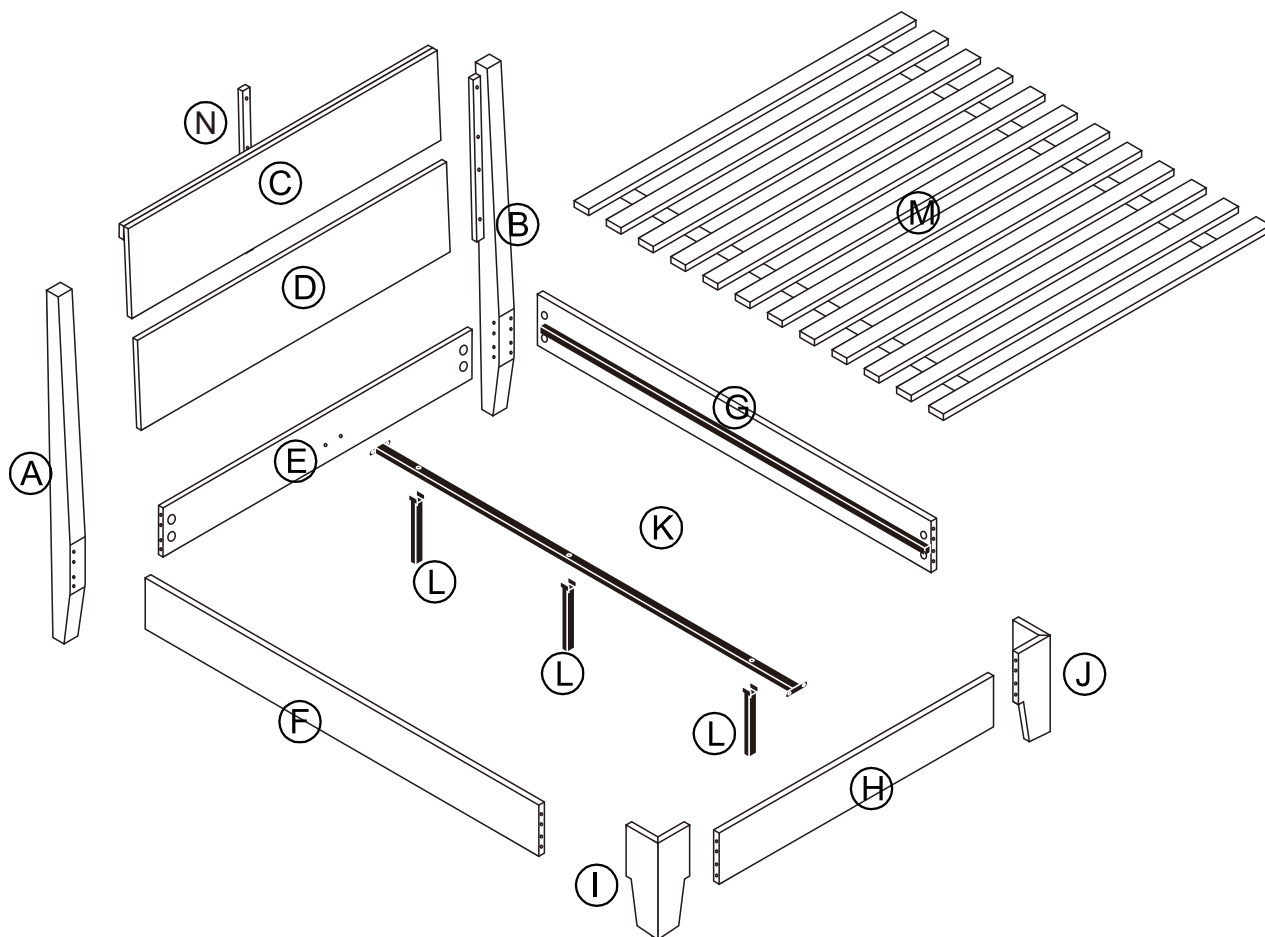


Parts list		
A	Headboard Leg	1 pc
B	Headboard Leg	1 pc
C	Headboard	1 pc
D	Headboard	1 pc
E	Headboard Baffle	1 pc
F	Side Rail	1 pc
G	Side Rail	1 pc
H	Footboard	1 pc
I	Footboard Leg	1 pc
J	Footboard Leg	1 pc
K	Center Support	1 pc
L	Center Support Leg	3 pcs
M	Slats	1 pc
N	Headboard Fixing Strip	1 pc

EACH PART IS LABELLED ACCORDING TO THE PARTS LIST





Before starting assembly
please verify if all parts and
hardware are included

STEP 1

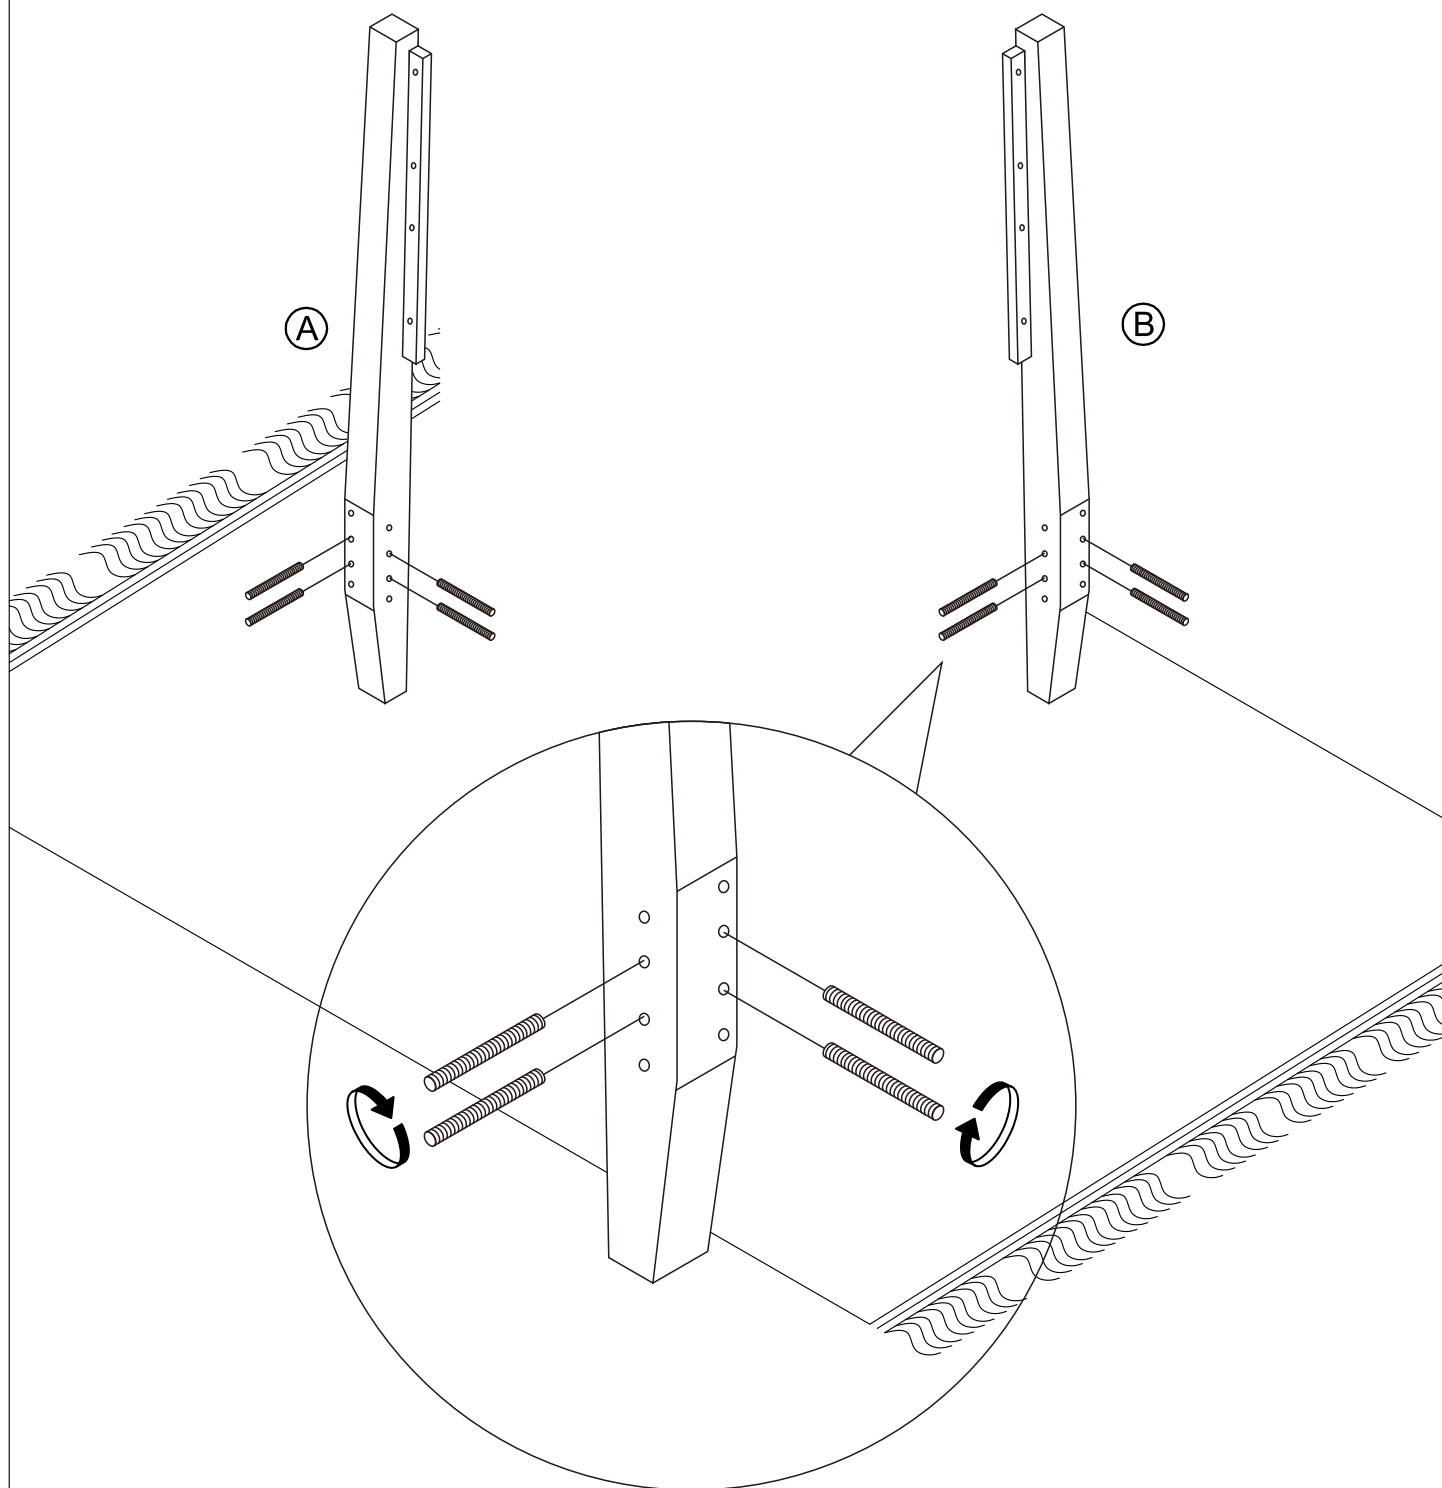


STEP 2

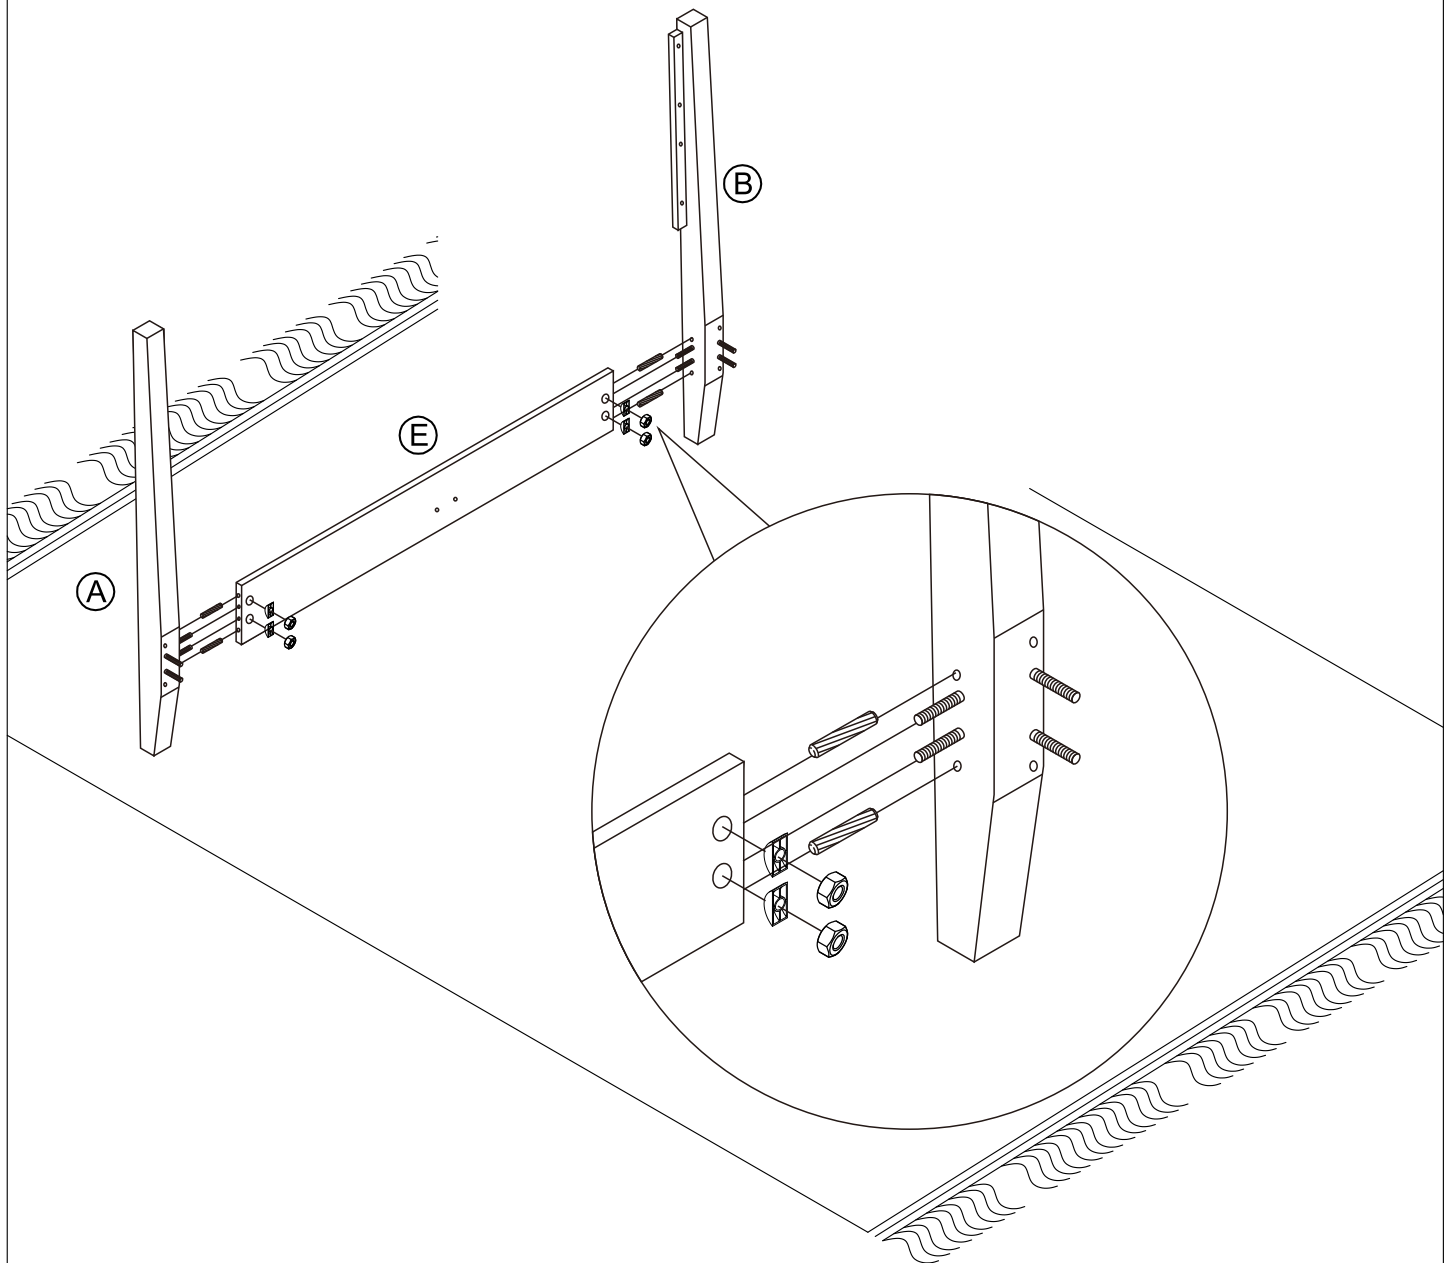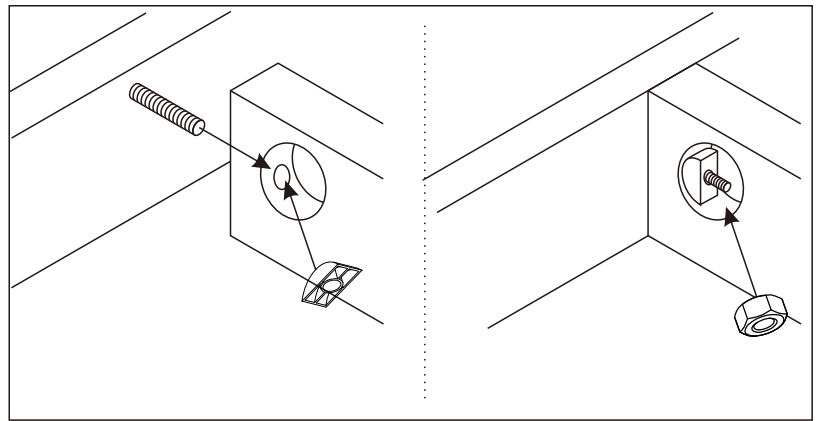


②		Half Moon Nut M8	x4
③		Hex Nut M8	x4
④		Wooden Dowel M10*35	x4
⑨		Flat Open-End Wrench	x1

STEP 3

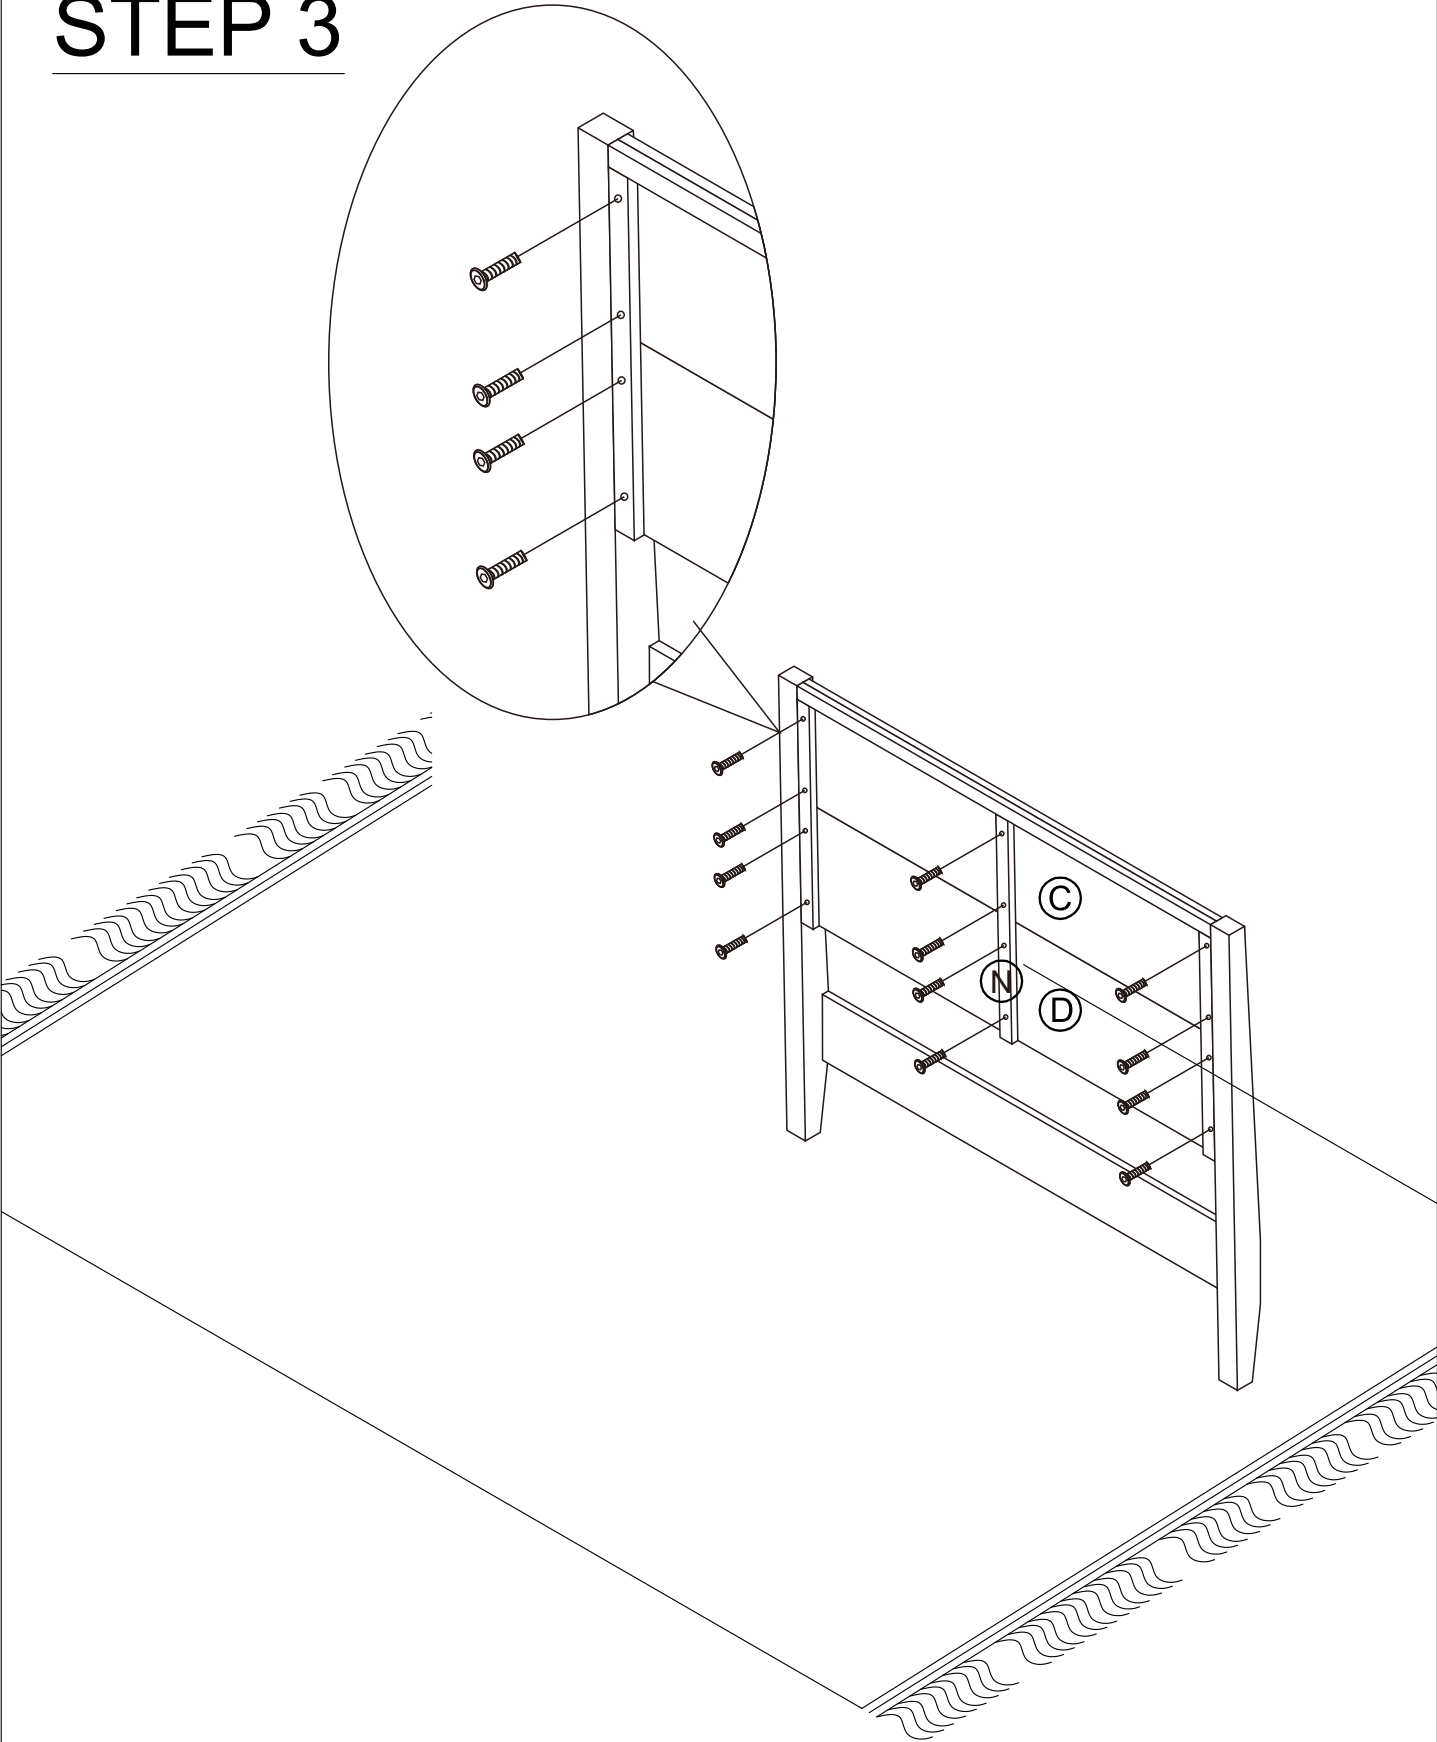





⑤		Screw M6*20	x12
⑧		Allen Key	x1

STEP 4

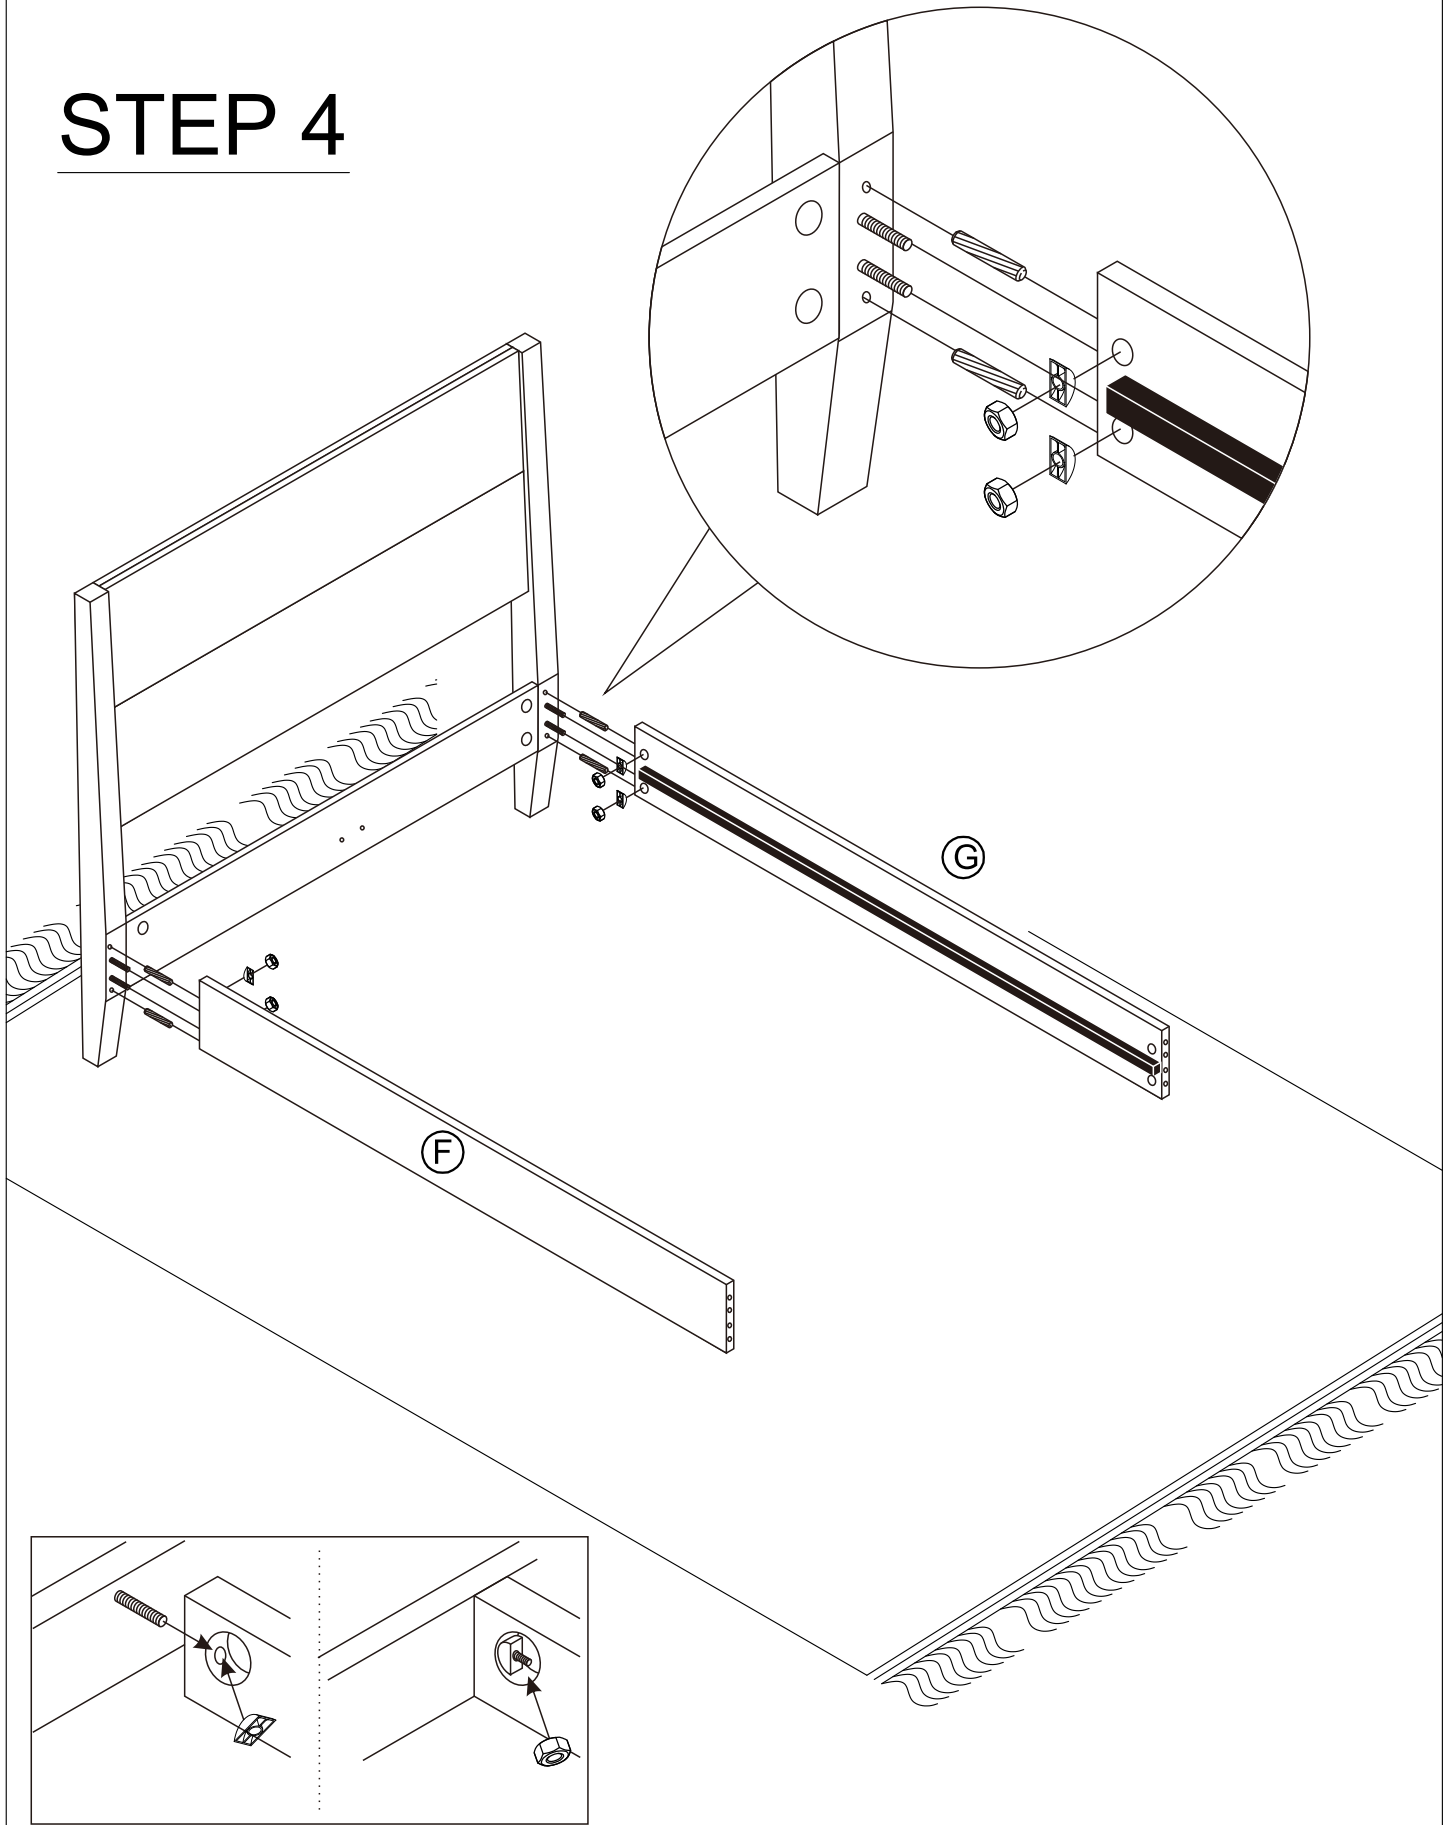



②		Half Moon Nut M8	x4
③		Hex Nut M8	x4
④		Wooden Dowel M10*35	x4
⑨		Flat Open-End Wrench	x1

STEP 5

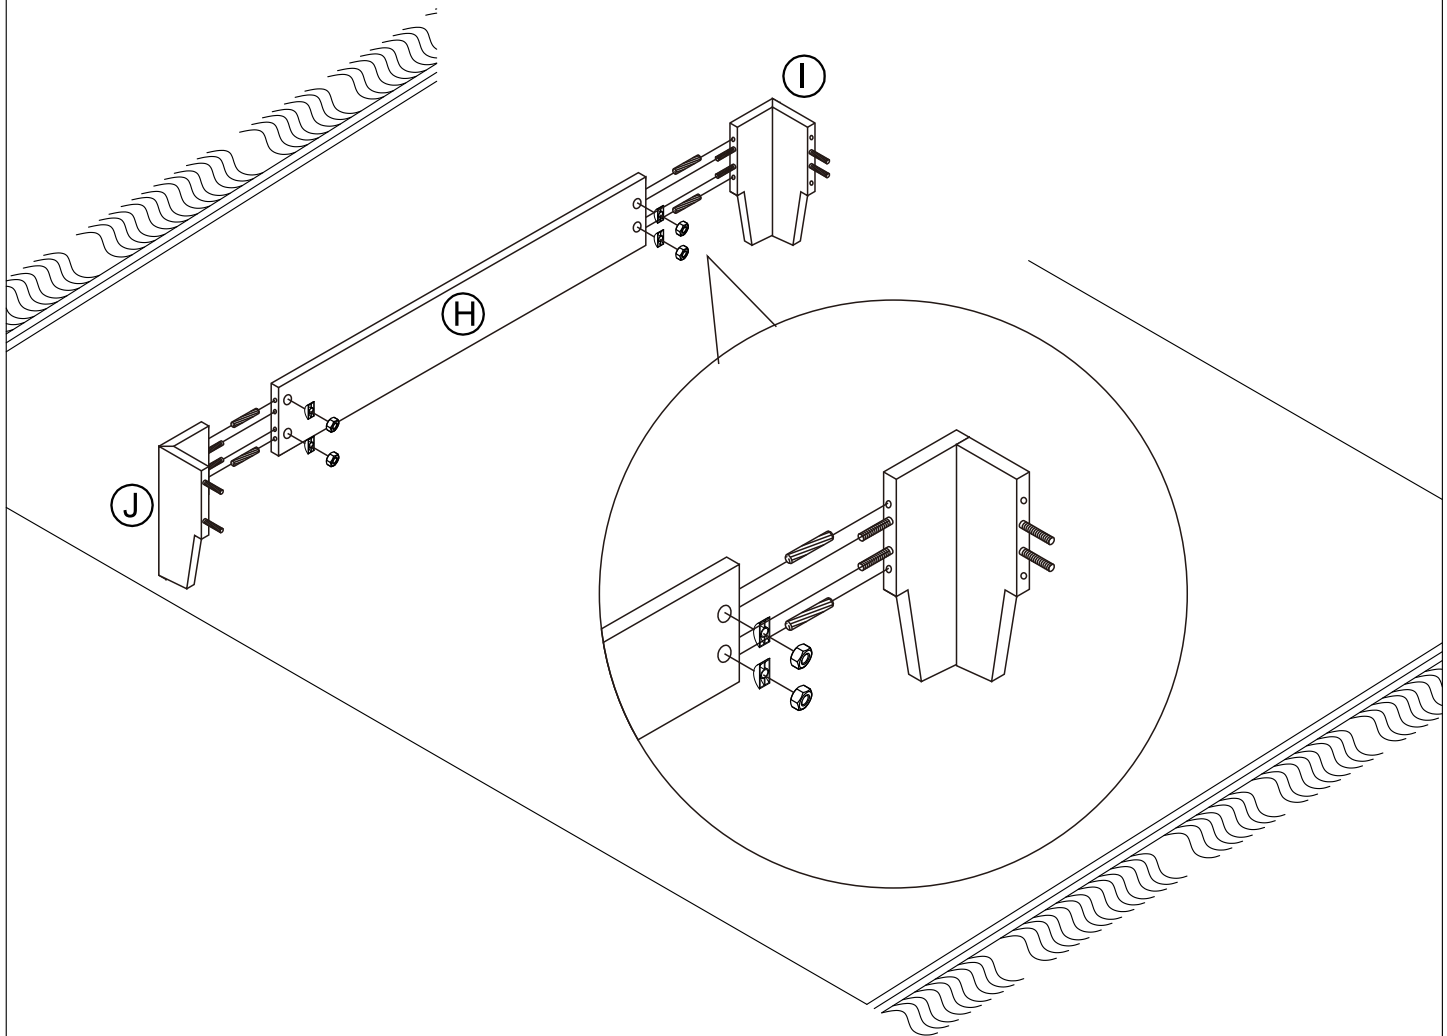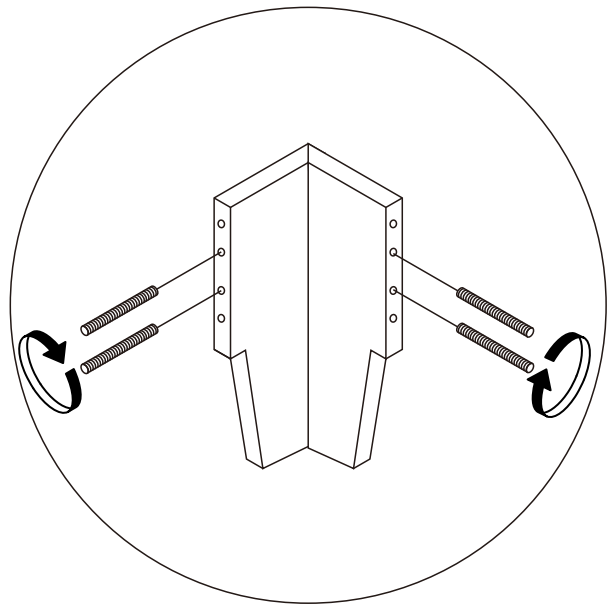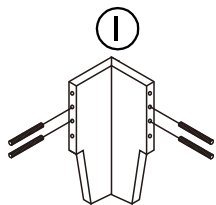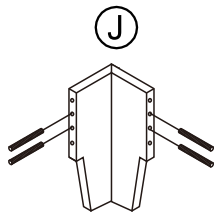


①		Thread Rod M8*70	x8
②		Half Moon Nut M8	x4
③		Hex Nut M8	x4
④		Wooden Dowel M10*35	x4
⑨		Flat Open-End Wrench	x1

STEP 6

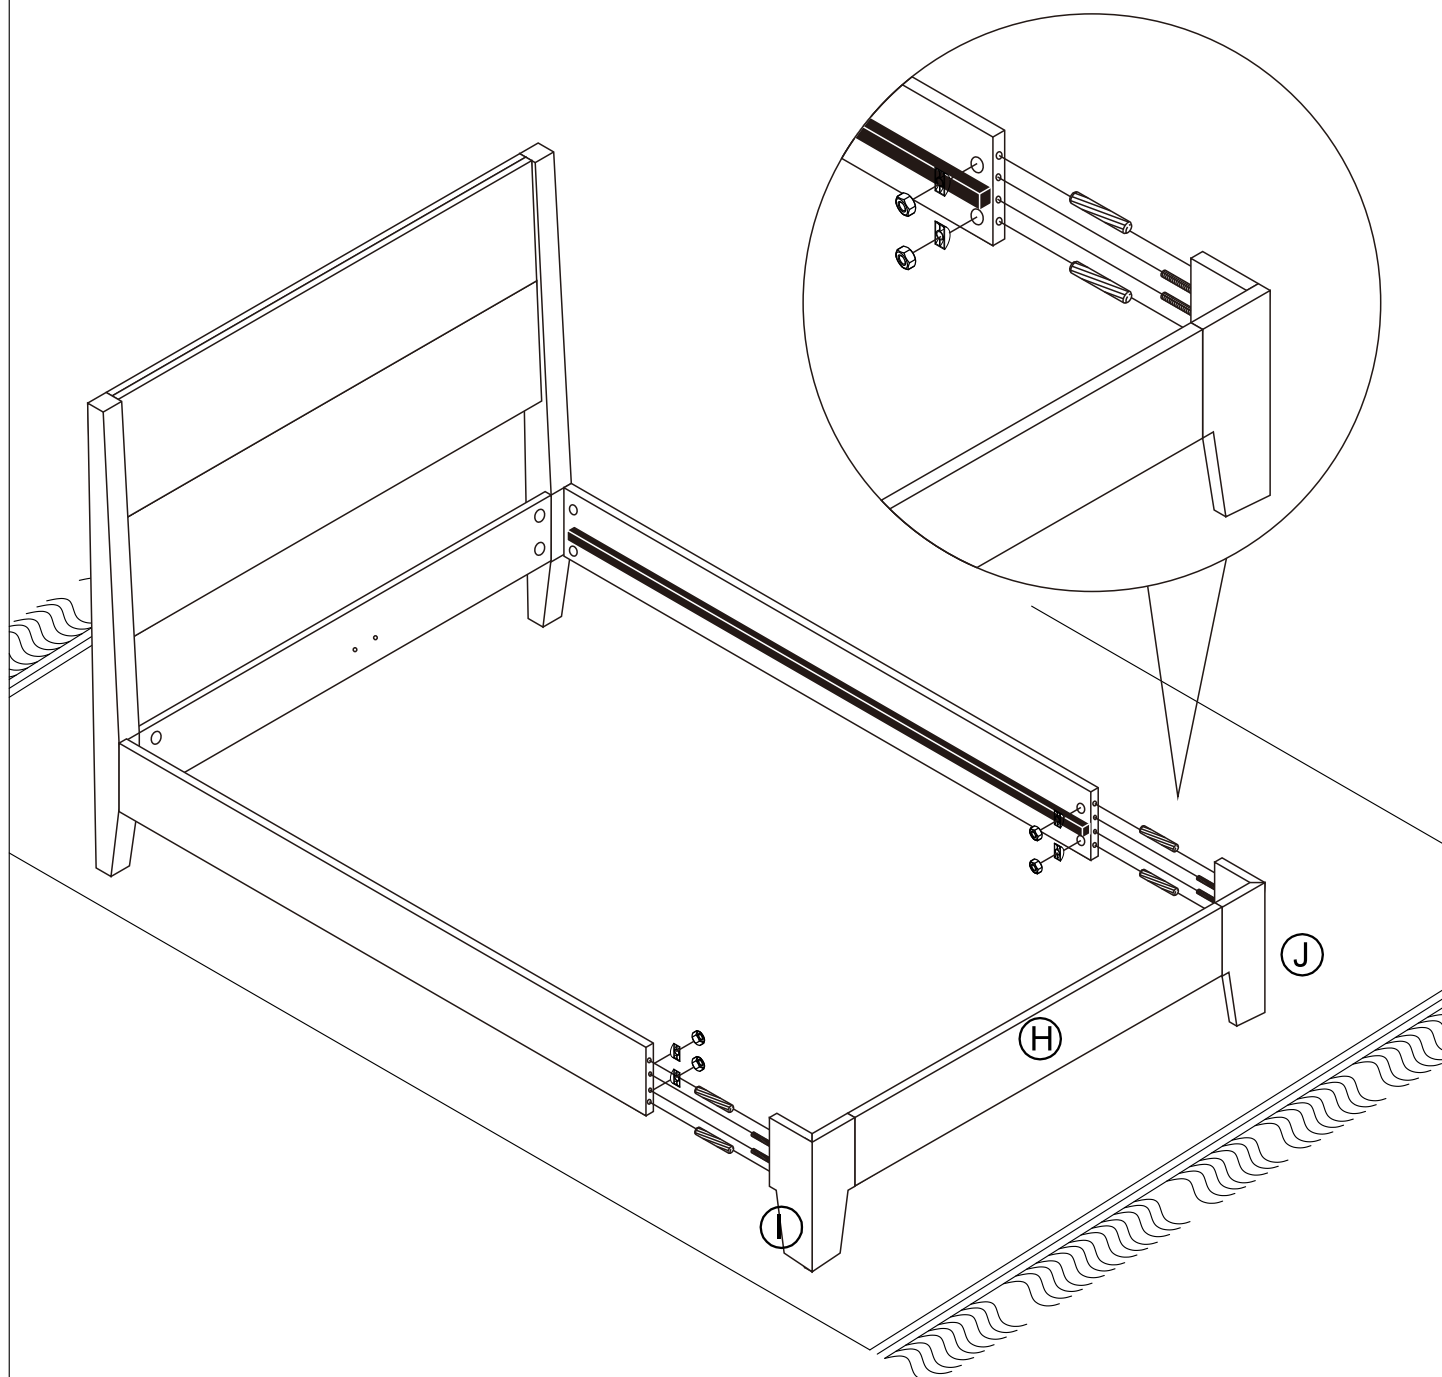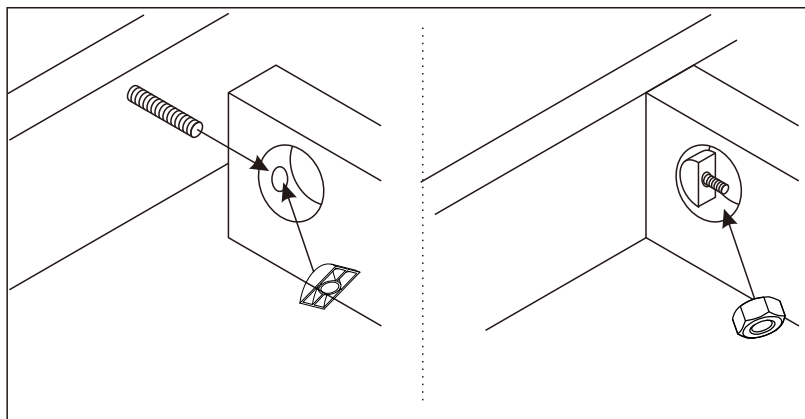


②		Half Moon Nut M8	x4
③		Hex Nut M8	x4
④		Wooden Dowel M10*35	x4
⑨		Flat Open-End Wrench	x1

STEP 7

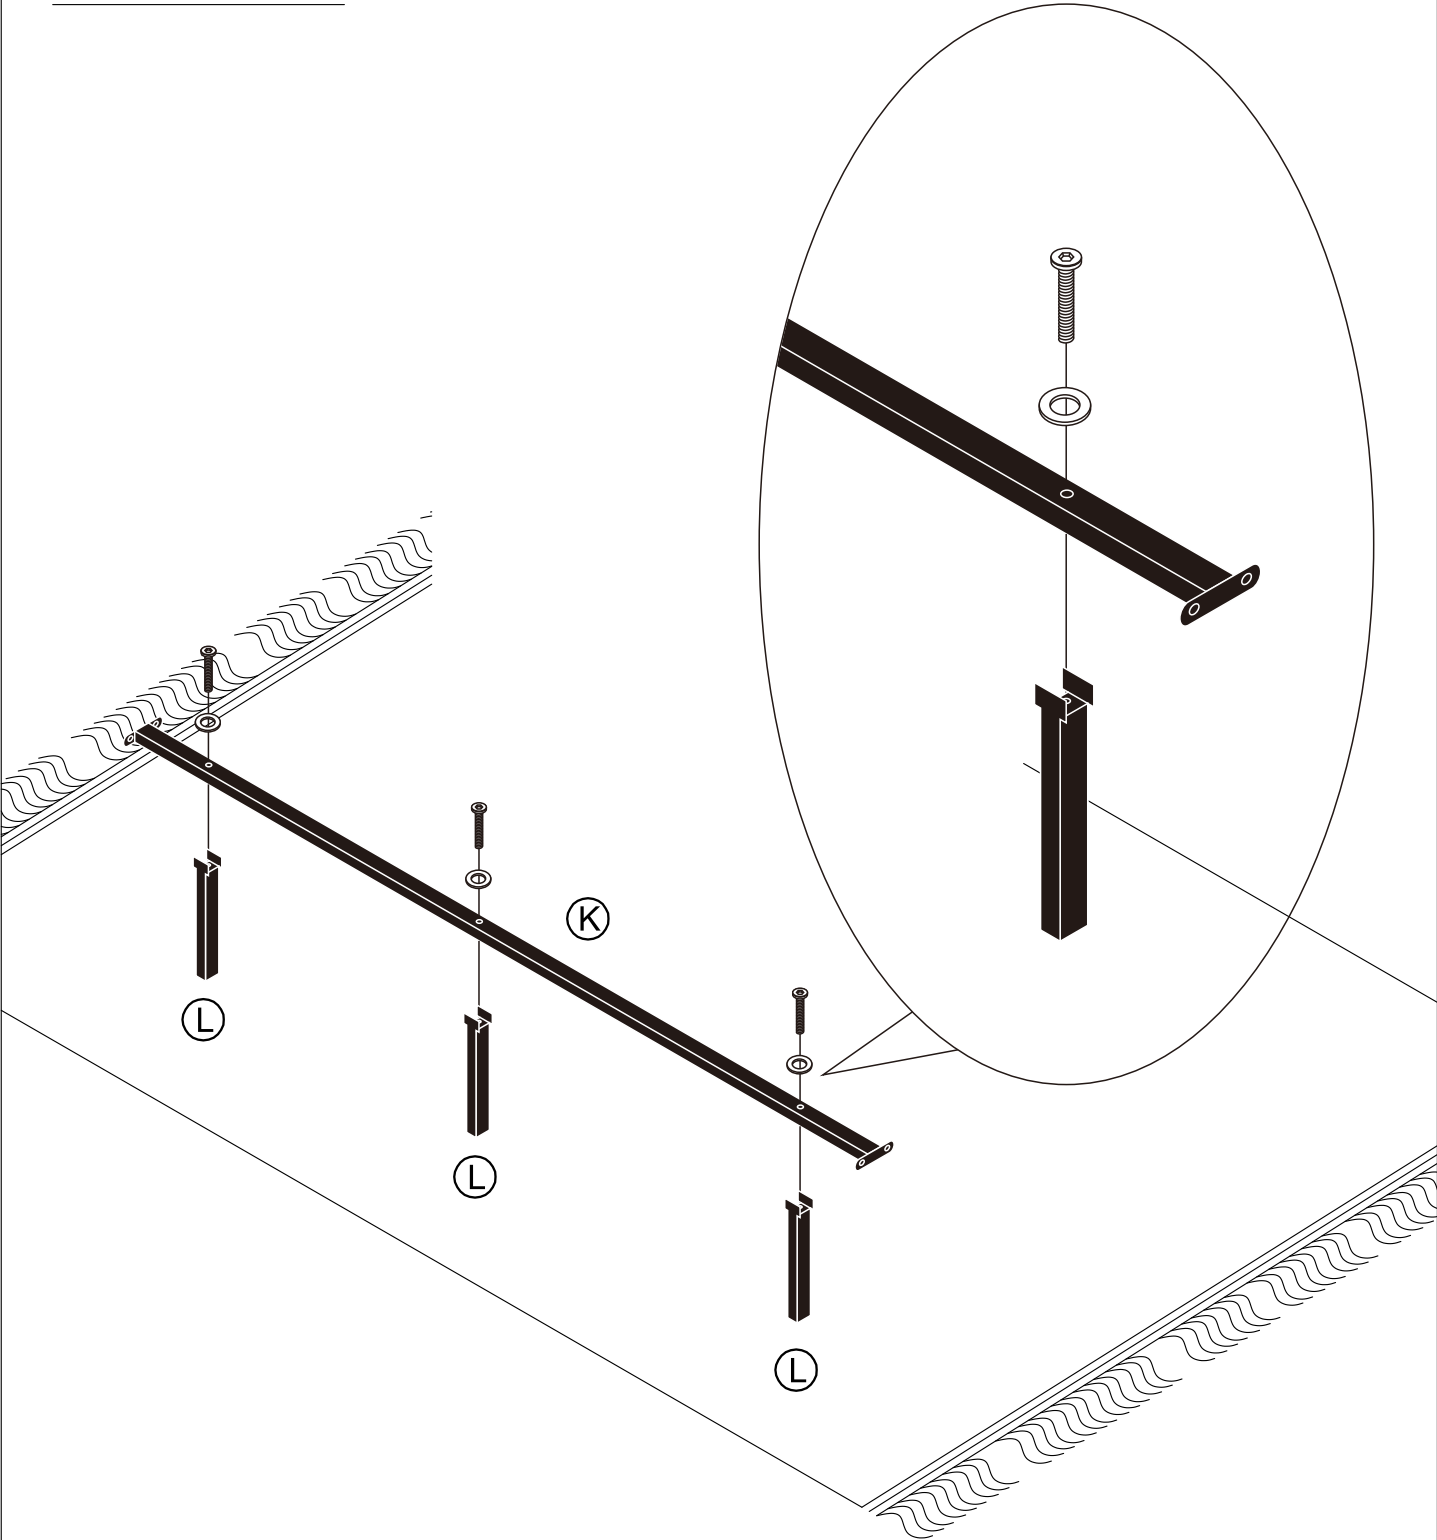


⑥		Screw M6*30	x3
⑦		Gasket M6	x3
⑧		Allen Key	x1

STEP 8

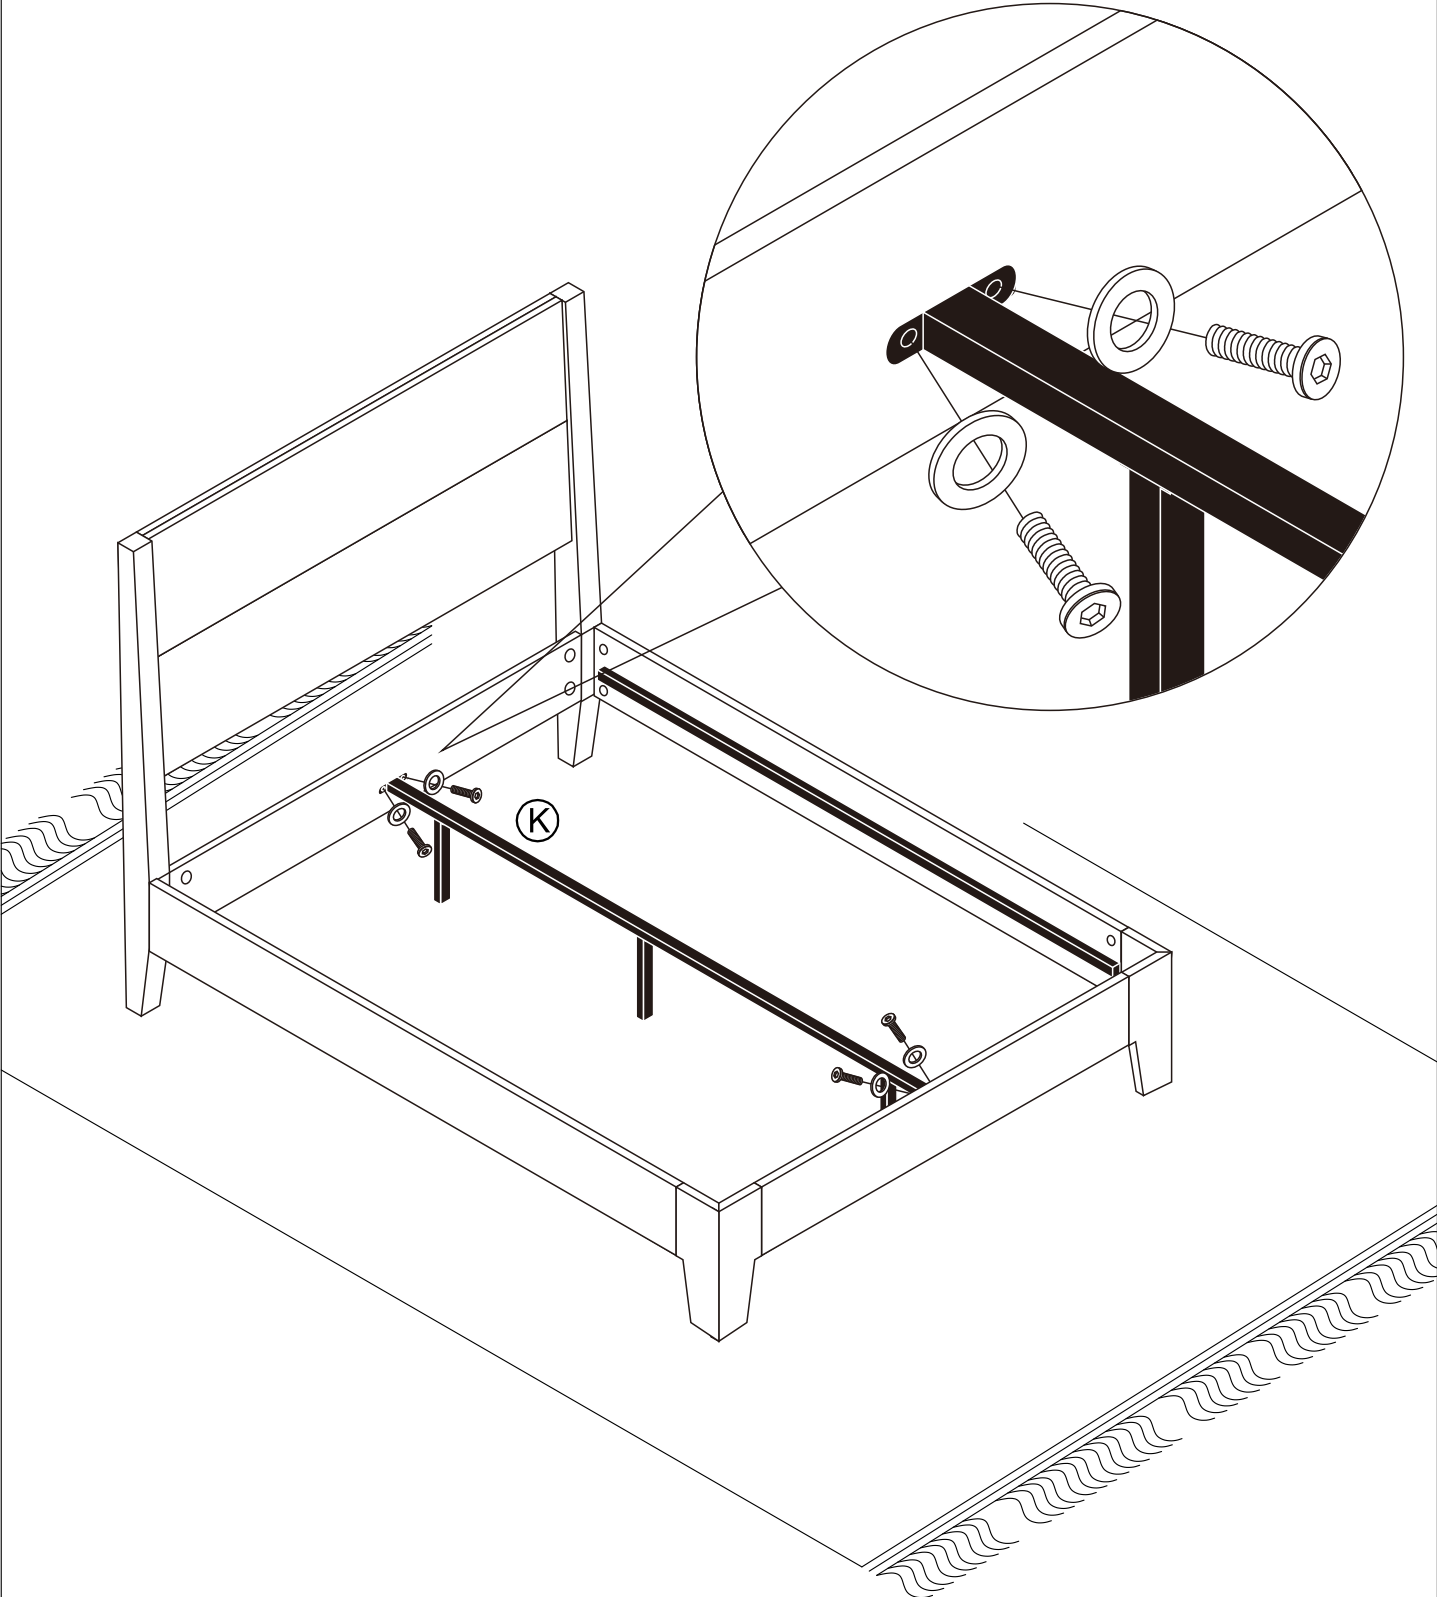


⑤		Screw M6*20	x4
⑦		Gasket M6	x4
⑧		Allen Key	x1

STEP 9

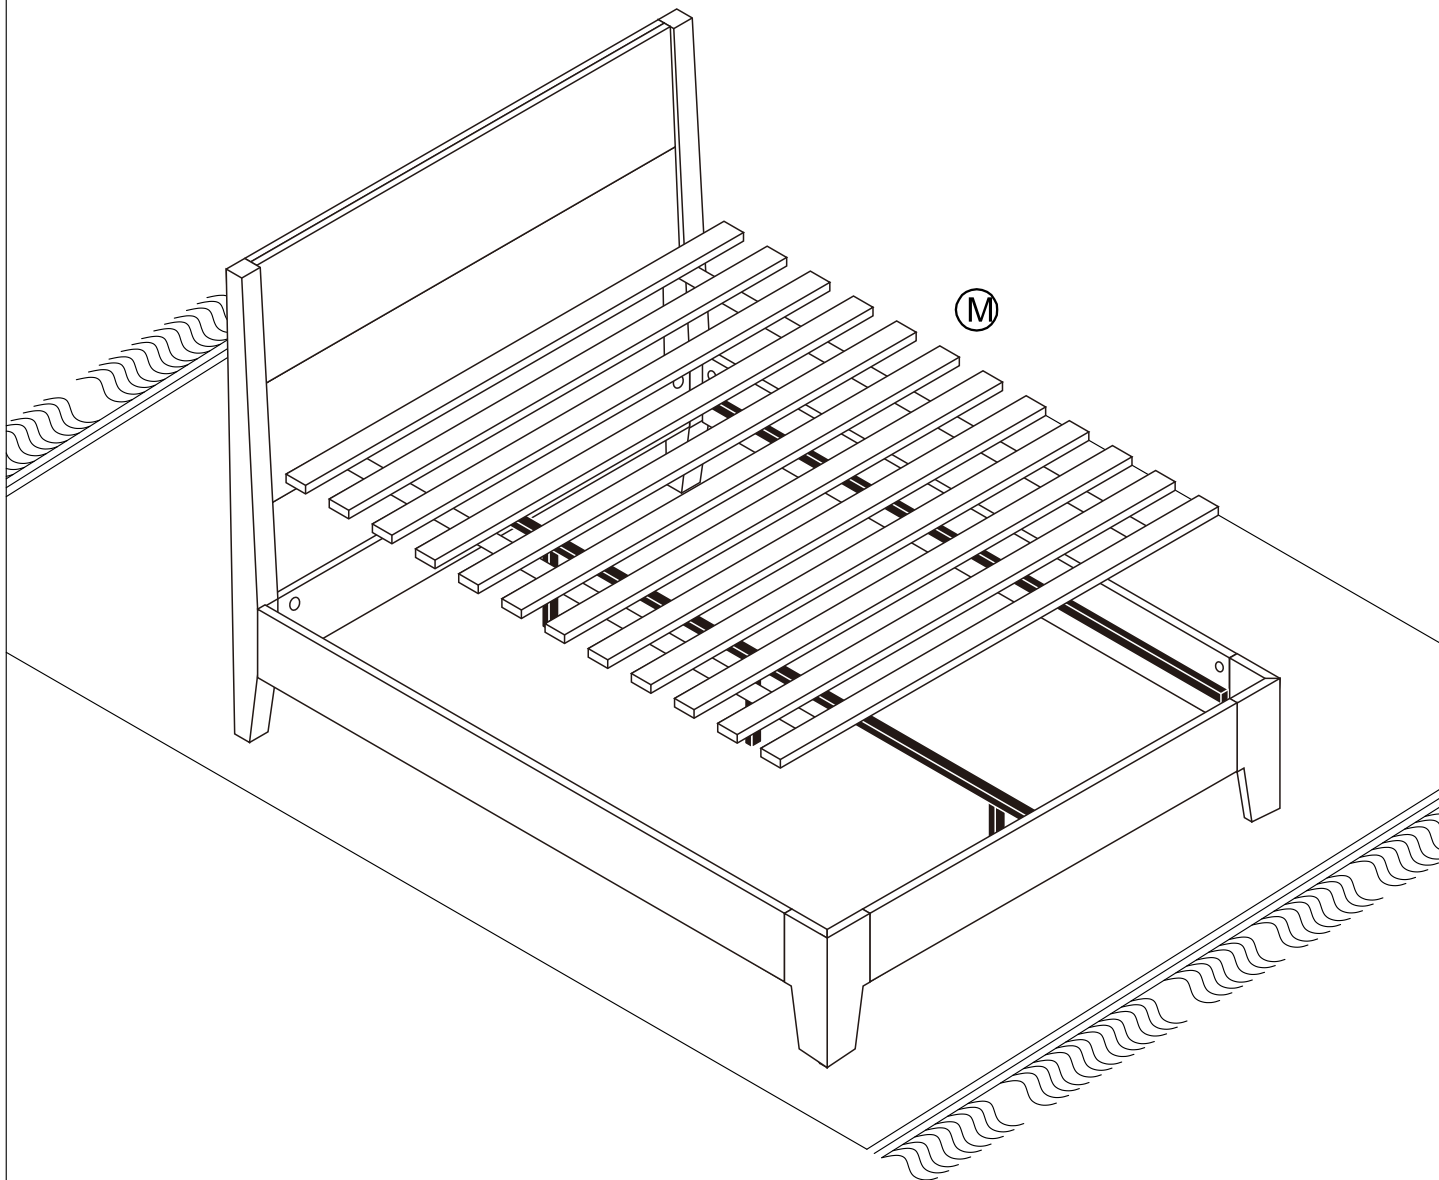

STEP 10

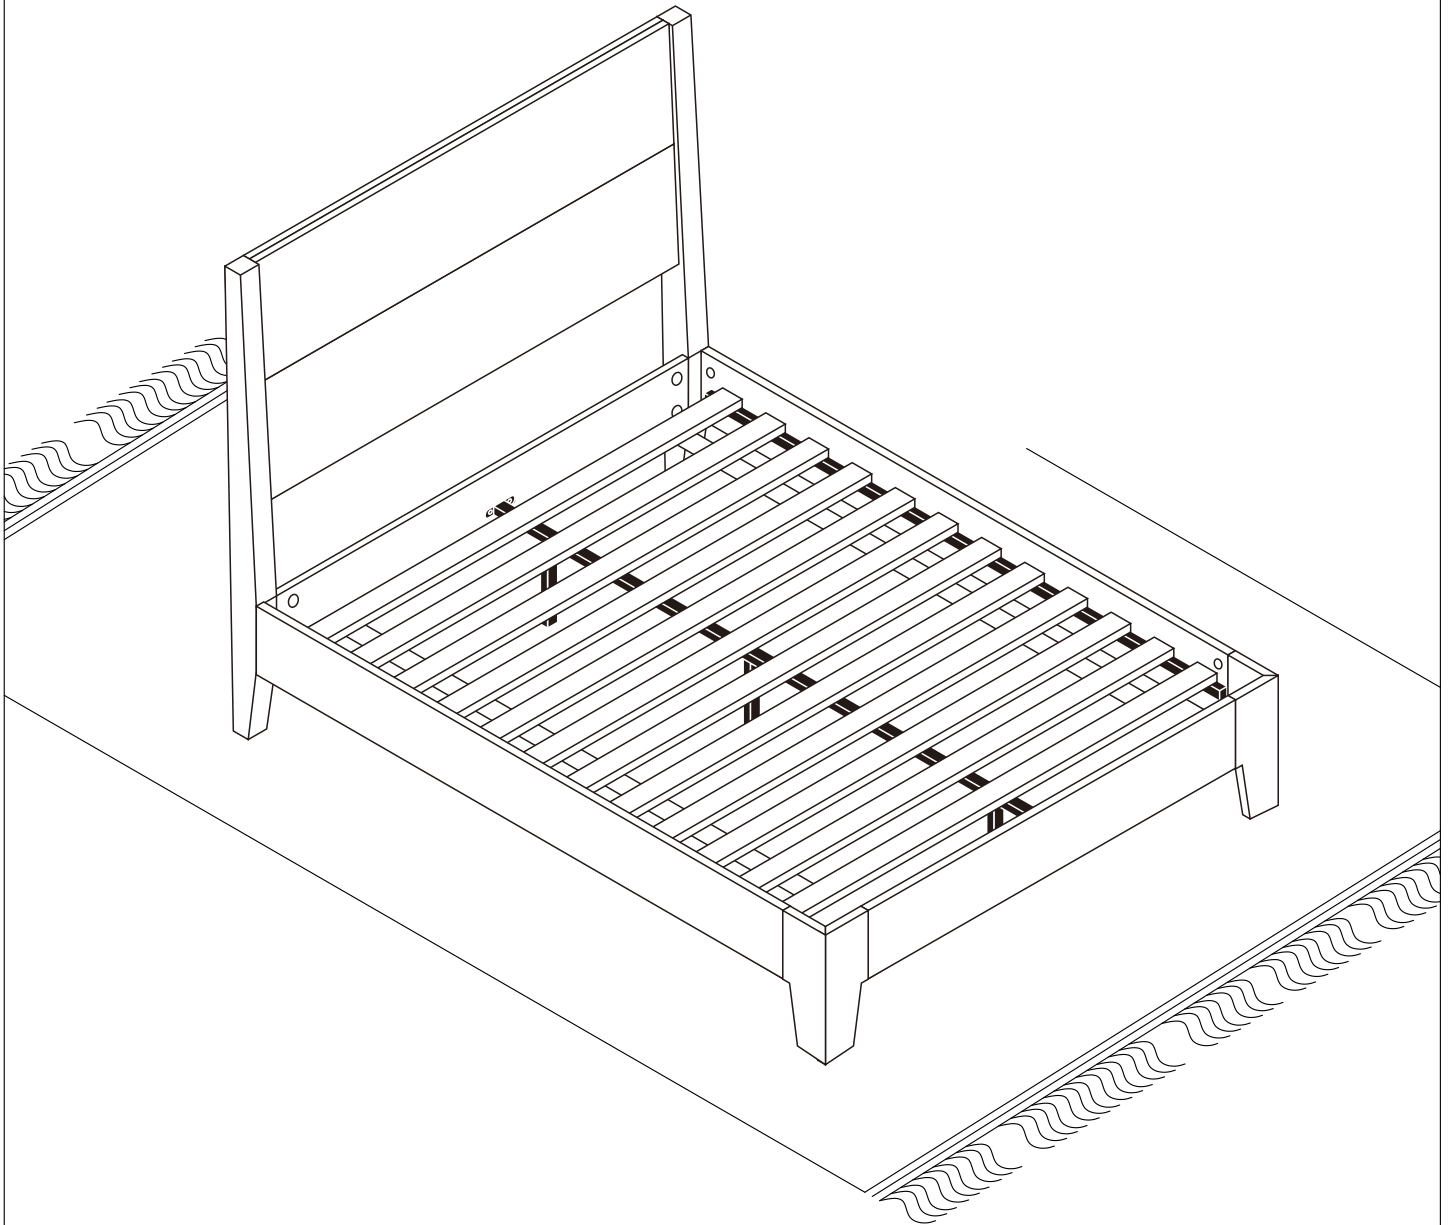

THANK YOU

We hope you enjoy your new purchase.

We have personally inspected this product.

In the event that you need any additional help for any reason,

Please do not hesitate to contact us at: 315-7580-751 / 973-751-7089

Email lori@shopwp.com

See our website wpfurniture.com

**WP FURNITURE
323 Cortland Street
Belleville New Jersey**

Thank you