

ASSEMBLY INSTRUCTION FULL BED


Page : 1 OF 1

Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

ASSEMBLY TIPS:

Remove hardware from box and sort by size.

Please check to see that all hardware and part are present prior start of assembly.

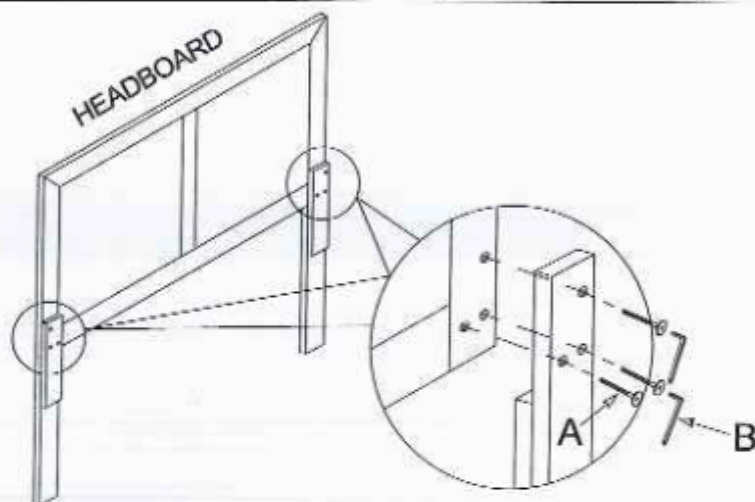

NO	HARDWARE DESCRIPTION	QTY
A.	Bolt M6 x 35mm 	6PCS
B.	Allen Key 	1PC

Screw Driver Not Provide !!!

TIPS:

Attach & tighten the Headboard Leg (R&L) to the Headboard. Use JCBC Bolt M6 x 35mm & Allen Key to fix.


ASSEMBLY INSTRUCTION

FULL BED 54" X 75"


Page : 1 OF 1

Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

STEP 1.

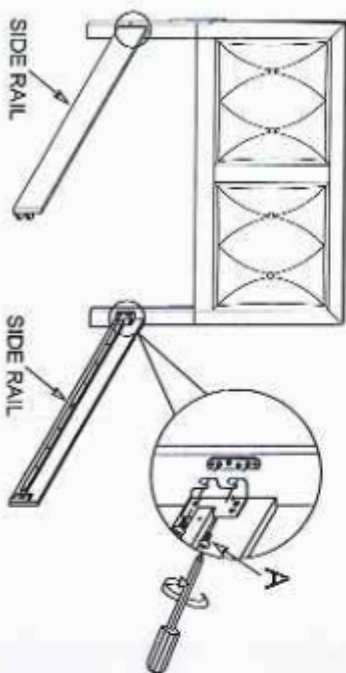


STEP 2.

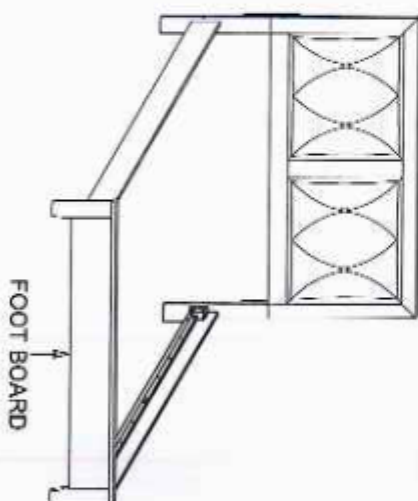


TIPS: REPEAT STEP 1 TO JOINT FOOT BOARD.

STEP 3.

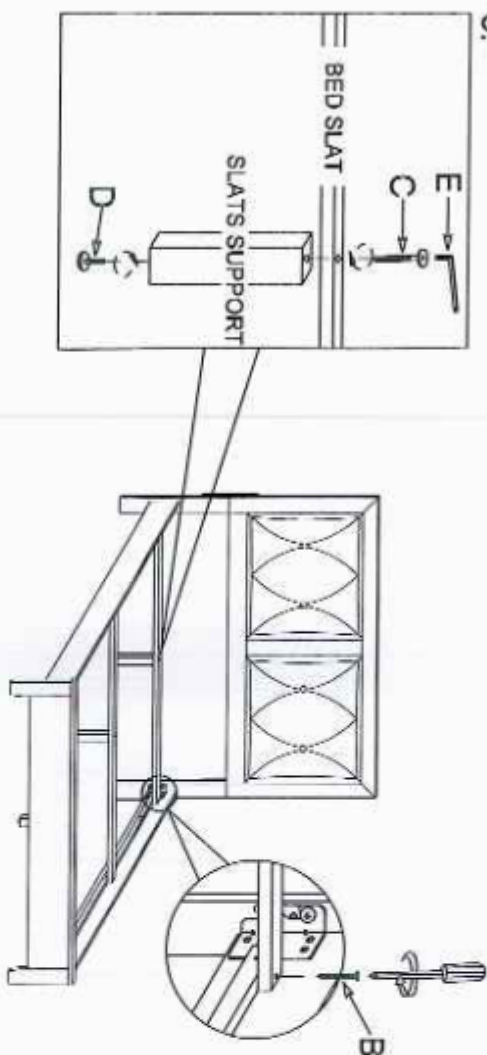

COMPLETE SET

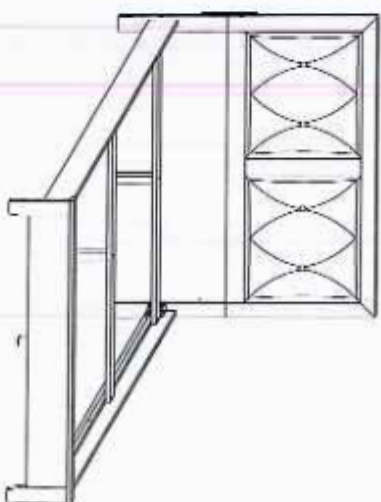

HARDWARE PART 2

NO	HARDWARE DESCRIPTION	QTY
A.	Screw M8	8PCS
B.	Chipboard Screw M4 x 32mm	6PCS
C.	JCBC Bolt M6 x 40mm	3PCS
D.	Adjuster Screw M6 x 24mm	3PCS
E.	Allen Key	1PC

Screw Driver Not Provided !!!

* TOTAL SLAT : 3PCS (WITH JCBC HOLE) + 3PCS (SLATS SUPPORT)