


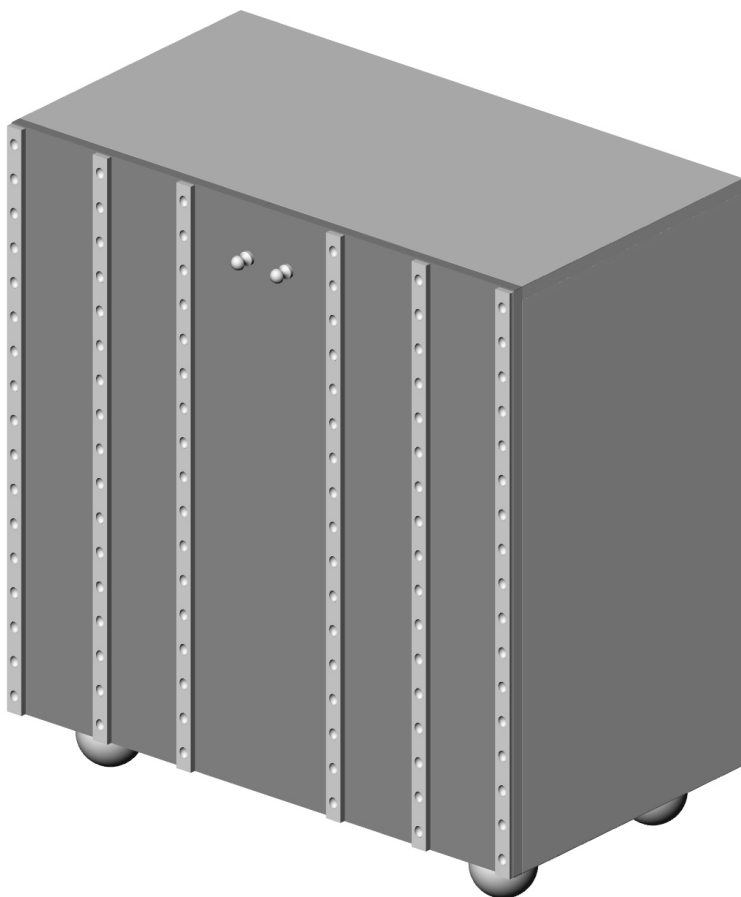

30 : 00

estimated
assembly time



2 or more

people required

Ok, let's
get started!




- Put on mood music!
- To prevent damage to product, use the clean side of package carton or rug as working surface.
- In the event of missing or damaged parts, delivery problems etc., please reach out to our team.
We will be happy to fix the problem!

care guide


- Clean regularly with a soft and dry cloth.
- To protect finish, avoid use of abrasive cleaners.
- Wipe up spills immediately. Please!




product parts

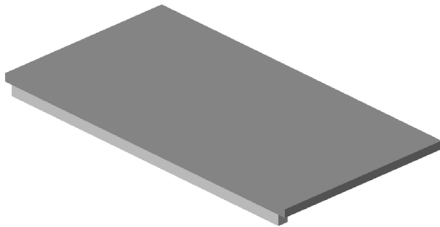


(A)
Top
x1

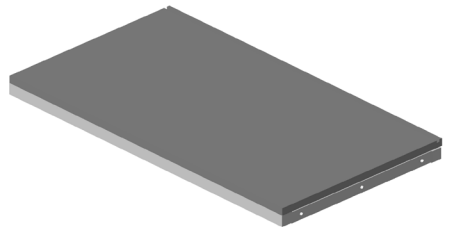


(B)
Bottom
x1

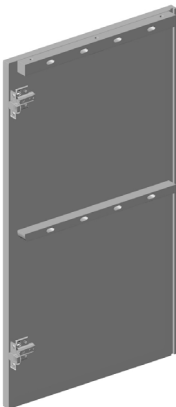


(C1)
Left
x1

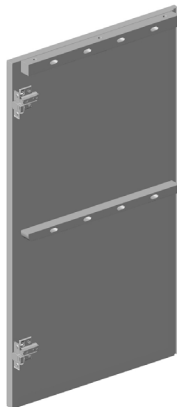


(C2)
Right
x1

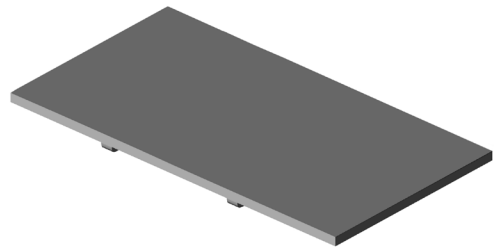


(D)
Shelf
x1

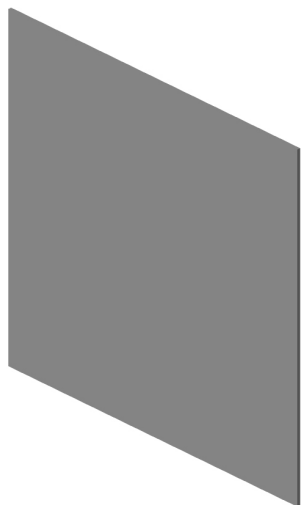


(E)
Back
x1

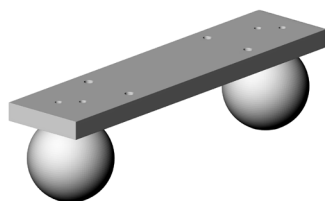


(G1)
Legs
x1

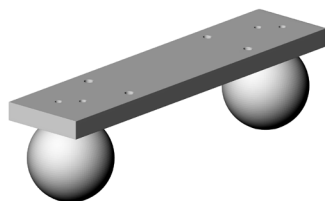

(G2)
Legs
x1

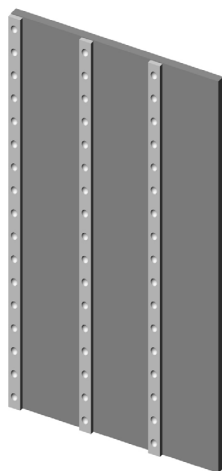

(F1)
Left Door
x1

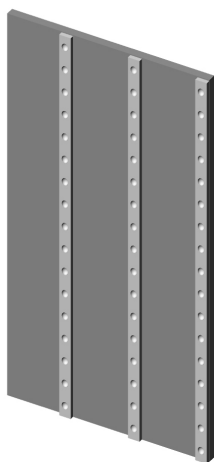

(F2)
Right Door
x1



(H)
Knobs
x2

what's included



(I)- Allen Bolt
(35x6mm)
X20




(J)- Allen Bolt
(20x6mm)
X2



(K)- Washer
(18x6mm)
X20



(L)- Lock Washer
(12x6mm)
X20



(M)- Allen Key
Wall Head
x1

YS

Yellow Sticker

GS

Green sticker

assembly instructions


Friendly Tip: Take a deep breath going in. This may be a tricky part, but nothing too overwhelming. Just follow these steps to the T and the outcome will be worth it!



- ⓘ While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.


step 1:

Start by placing the cabinet bottom (B) upside down on a flat surface. Ensure the yellow sticker (YS) is on your left side & green sticker (GS) on your right.

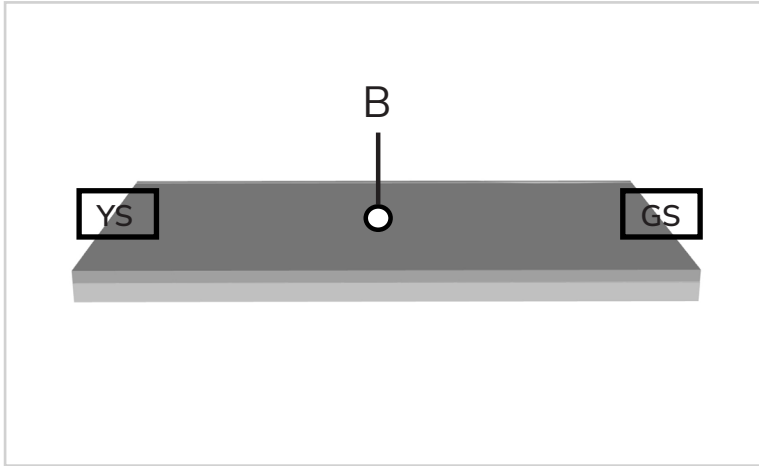


step 2:

Next, take the right side (C1) of the cabinet and align it with the right side of the bottom (B) by turning them sideways as shown in the image below. Ensure the sticker colors on (B) & (C1) matches. Now, fix them together by using washers (K), lock washers (L), and bolts (I) in the given slots. Tighten using allen key (M).

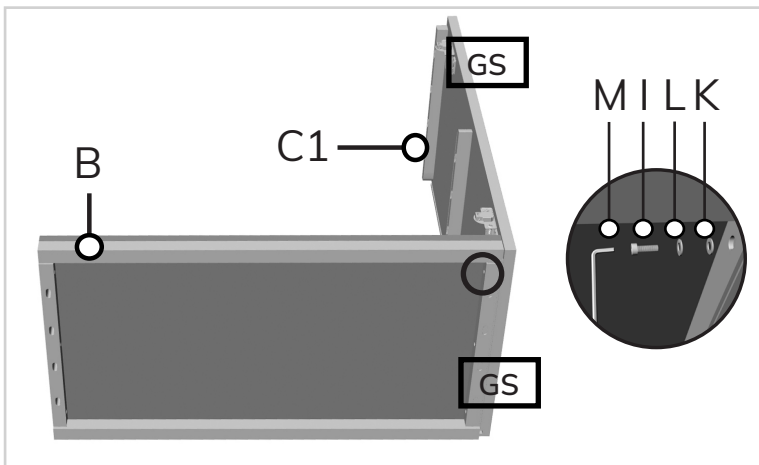

step 3:


Repeat step 2 with the left side (C2) of the cabinet.

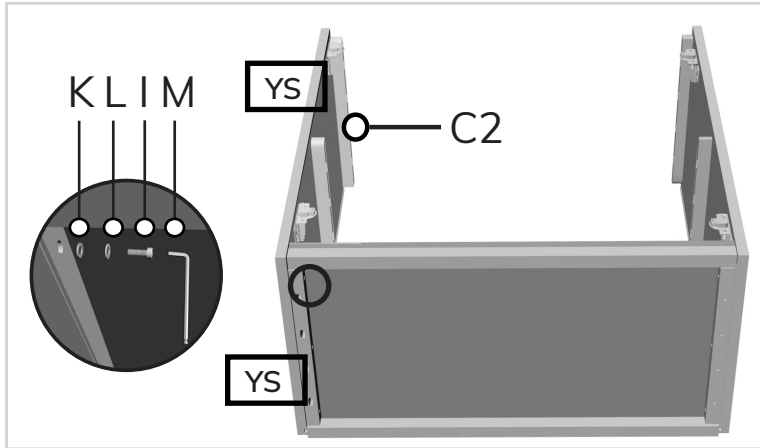

Note: Ensure the edges on the side parts of the cabinet align perfectly with the edges on the bottom part.


step 4

Now, take the leg (G1) and align the slots on it with the slots on the lower side of the cabinet bottom (B) as shown in the image below. Fix the leg in place by using washers (K), lock washers (L), and bolts (I) in the given slots. Tighten fully using allen key (M). Repeat the same step to fix the remaining leg (G2).

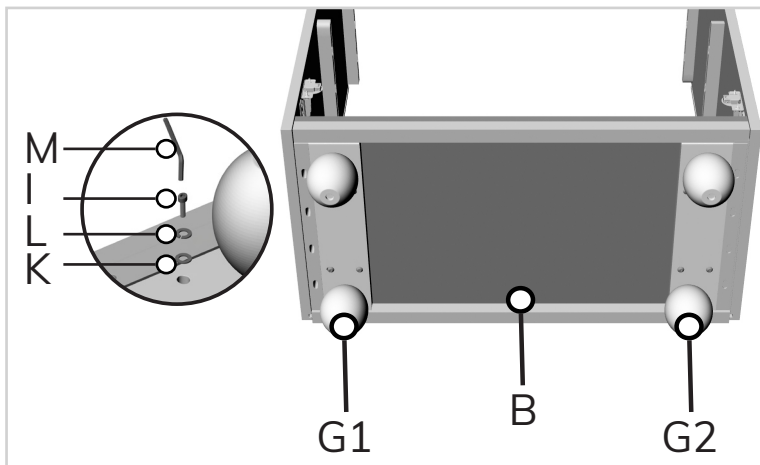


step 5:

Now, turn the cabinet upright and insert the cabinet back (E) in the grooves on the left side (C1) & right side (C2). Use the image below as a reference.

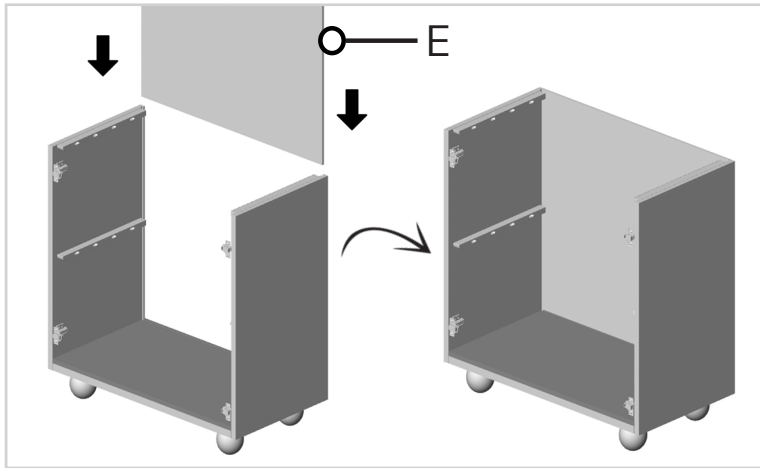


step 6:

Then, lay the cabinet on a flat surface, and place the cabinet top (A) over the cabinet sides

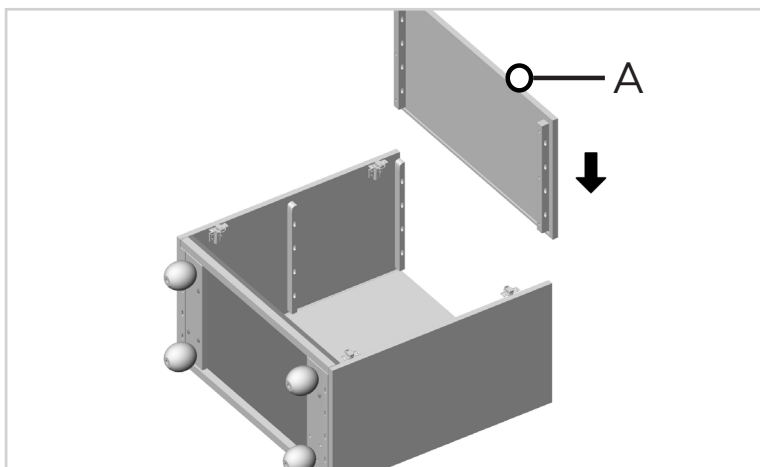


step 7:

Hold the cabinet top using your hands so it doesn't fall over while attaching. Now, fix it in place by using washers (K), lock washers (L), and bolts (I) in the given slots. Tighten fully using allen key (M). Repeat the same step on the other side.

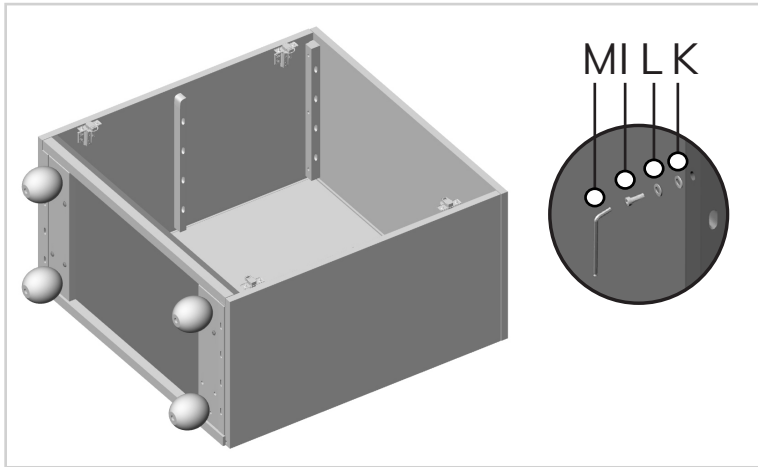


step 8:

Turn the cabinet upright. Place the shelf (D) over the slots given on the side panels (C1 & C2).

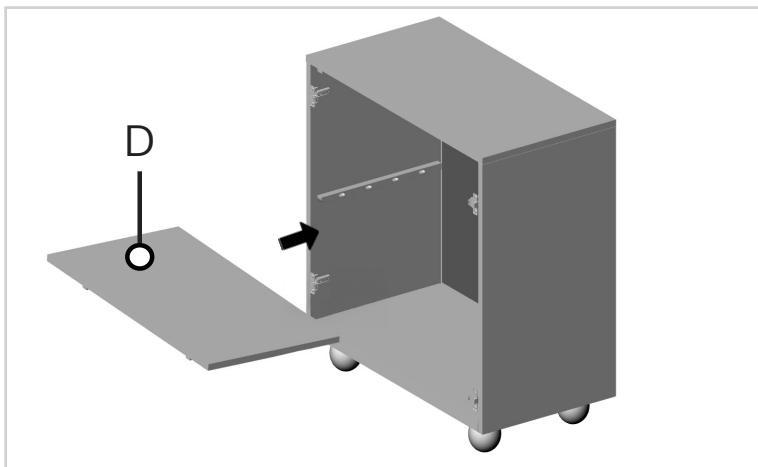


step 9:

Now, take the left door (F1) and align it with the left side panel (C1). Fix it in place by attaching the hinge on the door with the hinge clip on the side panel.

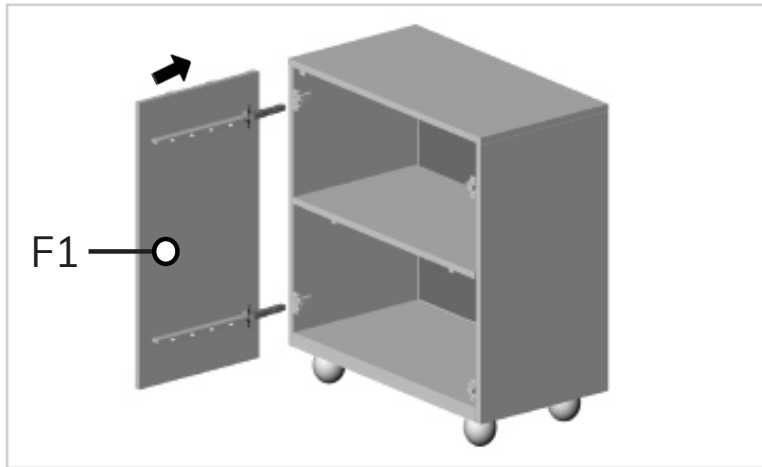


step 10:

Repeat step 9 with the right door (F2).

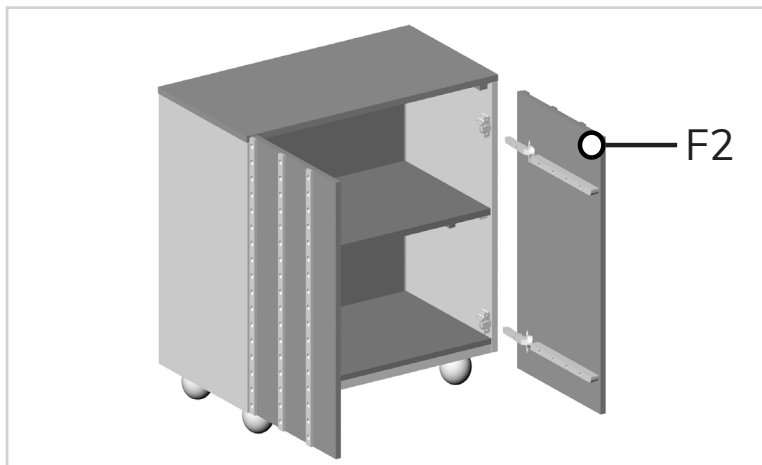


step 11:

When done, take the doorknob (H) and fix it outside the door using bolts (J). Tighten using allen key (M). Repeat the same step with the remaining door knob & door.

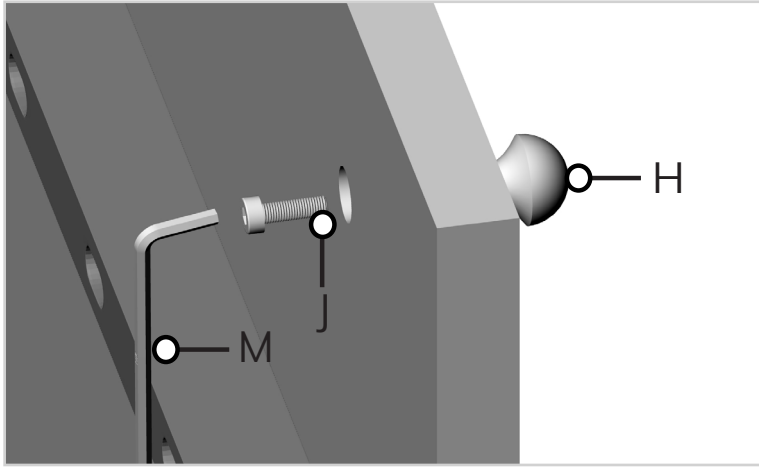

step 12:

If required, adjust the levellers according to the floor.

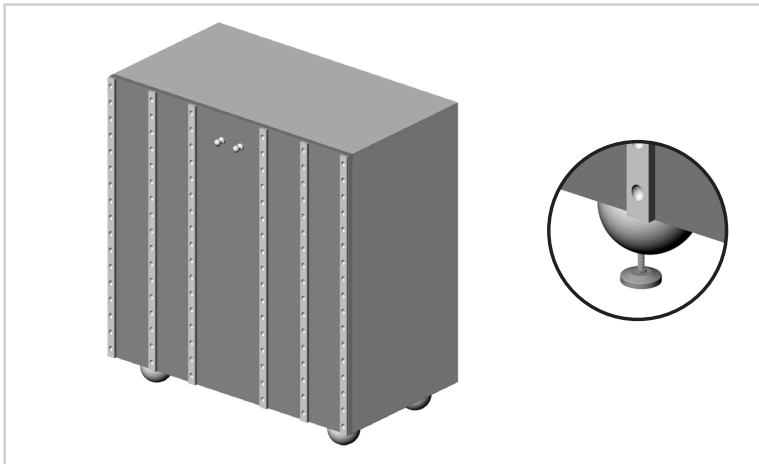

installation instructions



- ⚠ While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.

Hardware Included



a X 04
20mm X 6mm



b X 04
35mm X 6mm





c X 04



d X 04



e X 02

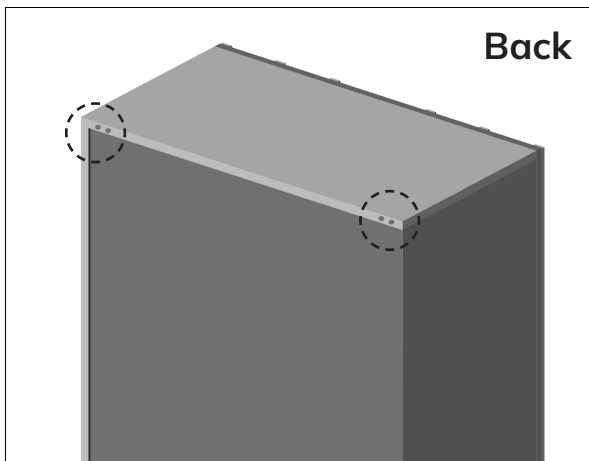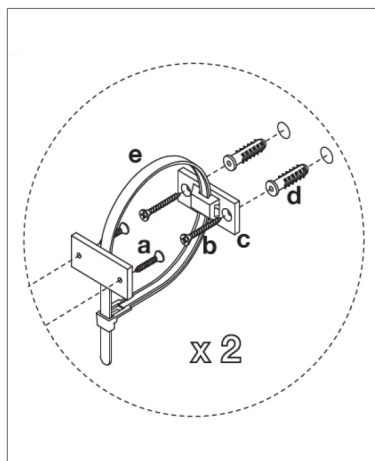

Wall Mounting Instructions

1. Using screws provided and a screwdriver, secure mounting plate(s) to the **pre-drill holes** on the back of product.
2. Noting the location of the product's mounting plate(s), mark and drill holes on the wall for mounting plate(s). Drill pilot holes into marked positions and into a wall stud. NOTE: if wall studs are not available, drill holes slightly smaller than the drywall anchors and insert each anchor until its flange is flush with the wall.
3. Using a screwdriver, secure mounting bracket(s) to the wall stud or drywall anchors with screws provided.
4. Position product in final location, and secure to the wall by lacing one end of plastic tie(s) through both the and product mounting plates, and through the other end, pulling tightly to remove slack. Do not over tighten.

Voila! Your accent cabinet is now assembled and secure!