


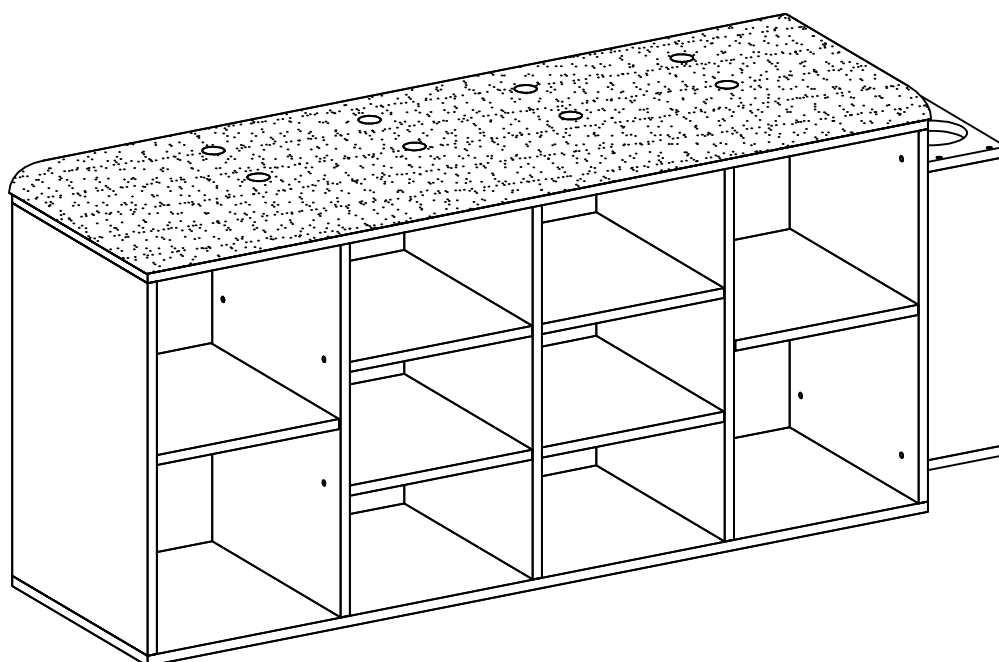


Installation Instruction


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.




HARDWARE LIST

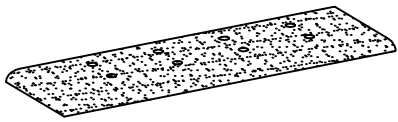


①×1PC

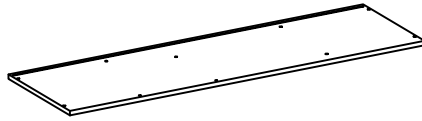


②×2PCS




③×2PCS

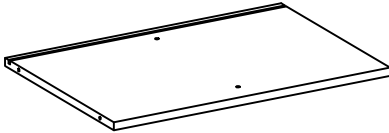


④×1PC

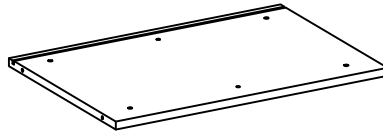


⑤×1PC

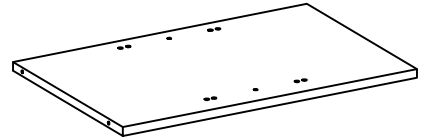


⑥×2PC

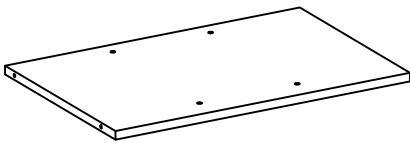


⑦×1PCS

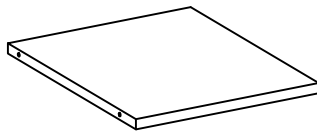


⑧×4PC

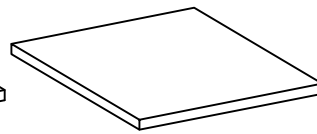


⑨×2PCS




⑩×1PC



⑪×1PCS



⑫×1PC



⑬×1PC



⑭×1PC

PARTA LIST



Ø91*18
A×2PCS



Ø39*13
B×2PCS



M5*38mm
C×40PCS



Ø6*40
E×8PCS



Ø6*14
F×8PCS



M3
G×1PC



L974mm
H×1PC



40*40*3mm
I×4PC




J×1PC




40*40*2mm
K×6PC


1

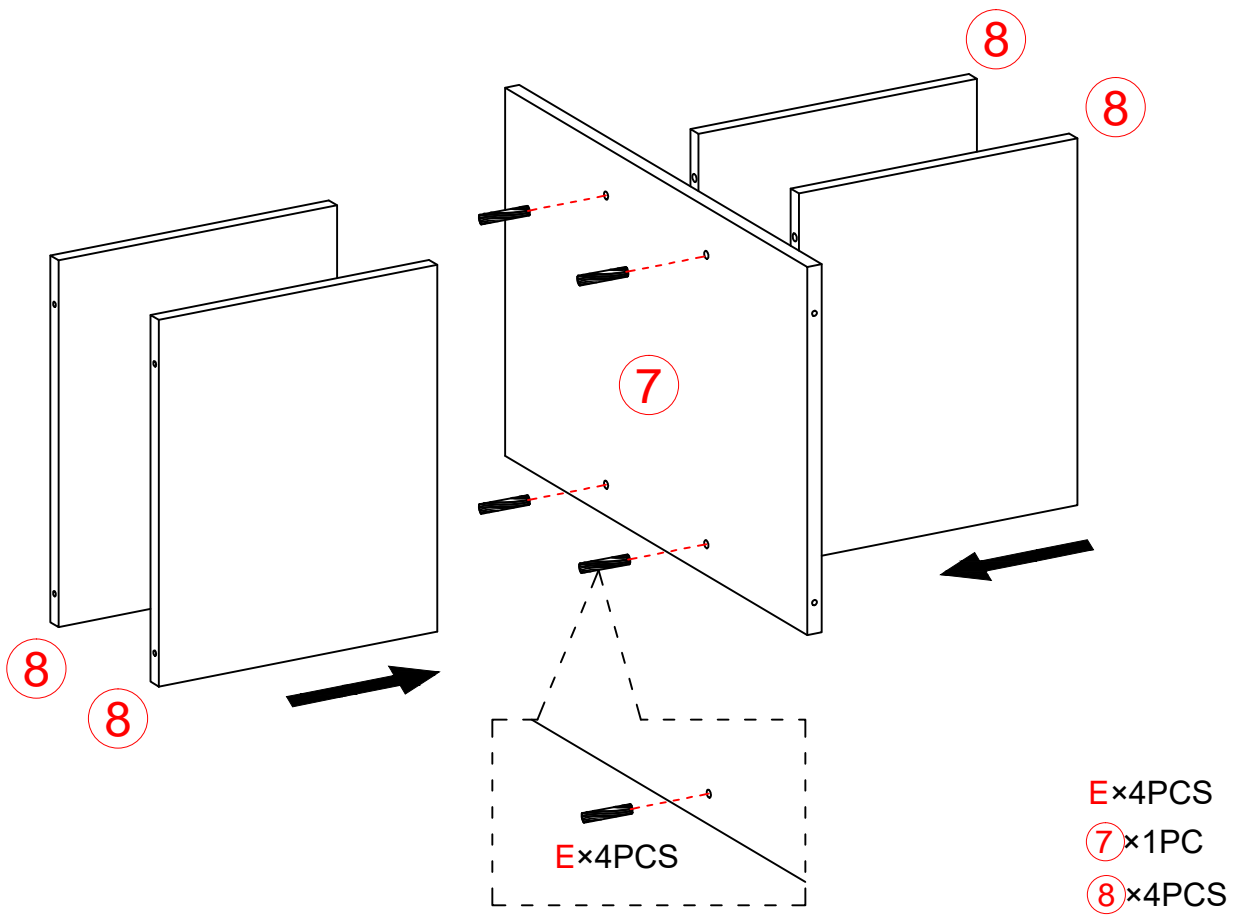

2

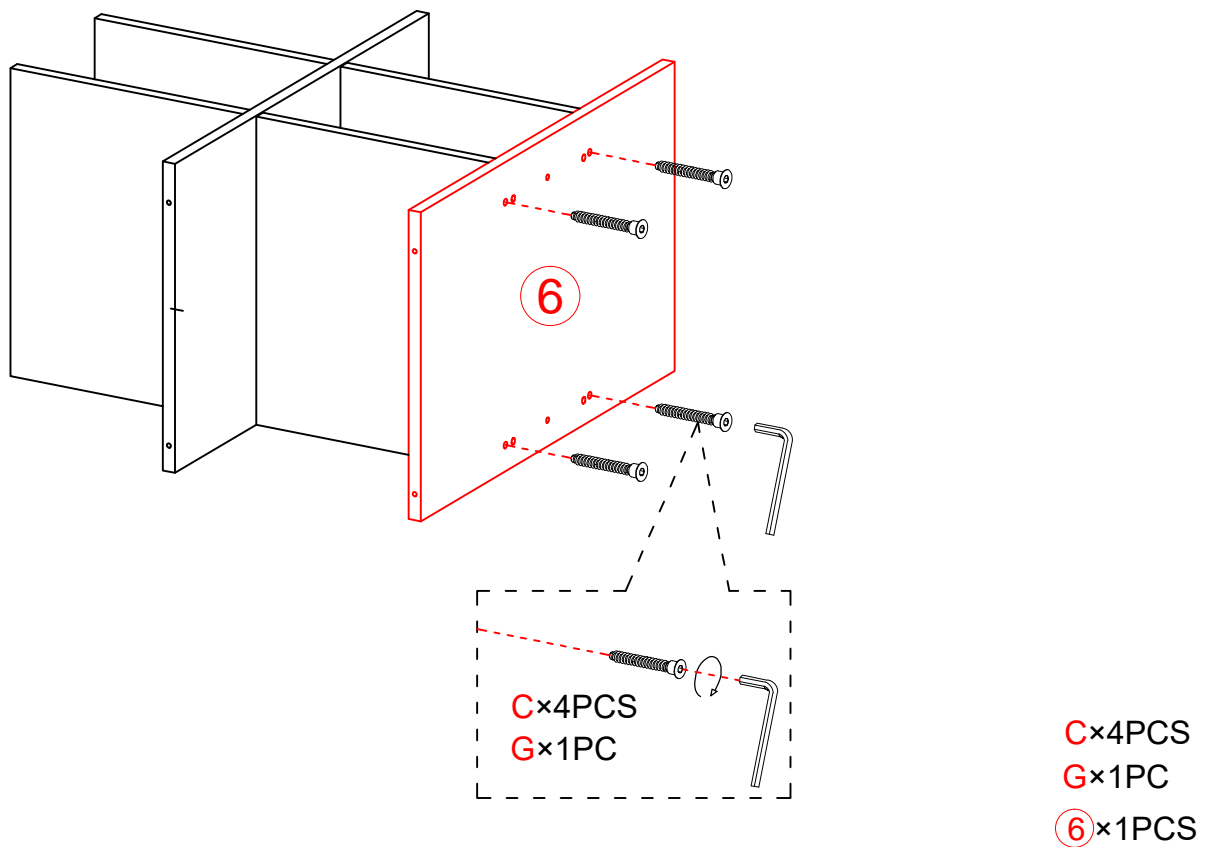


3

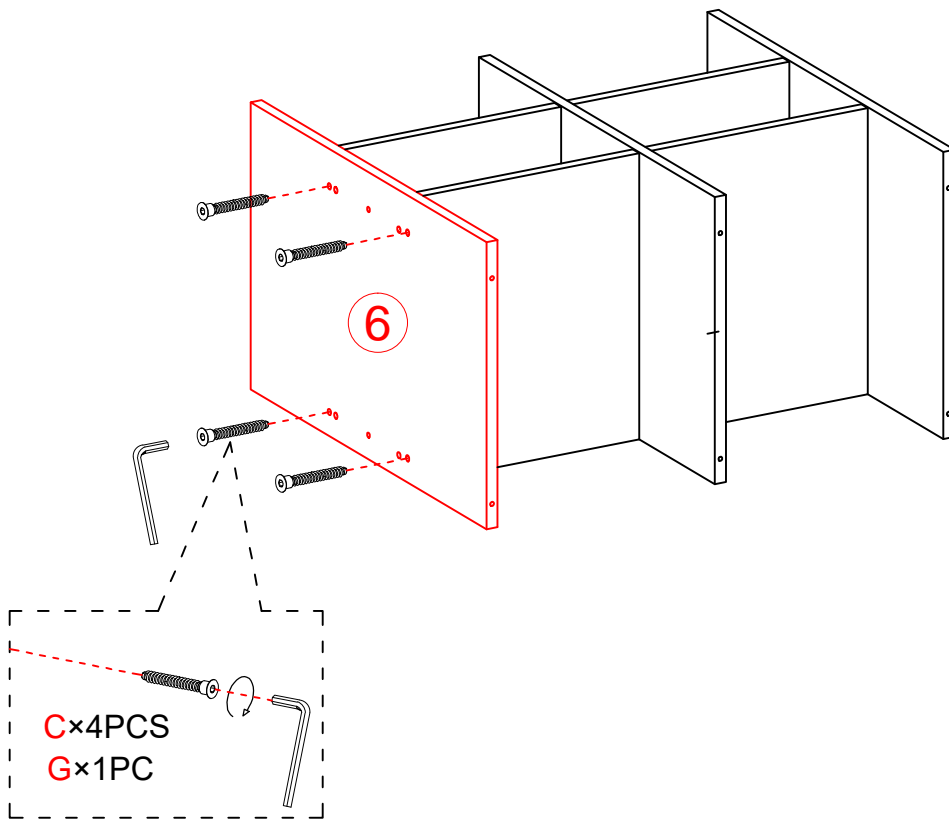




C×4PCS
G×1PC

C×4PCS
G×1PC
⑥×1PCS

4

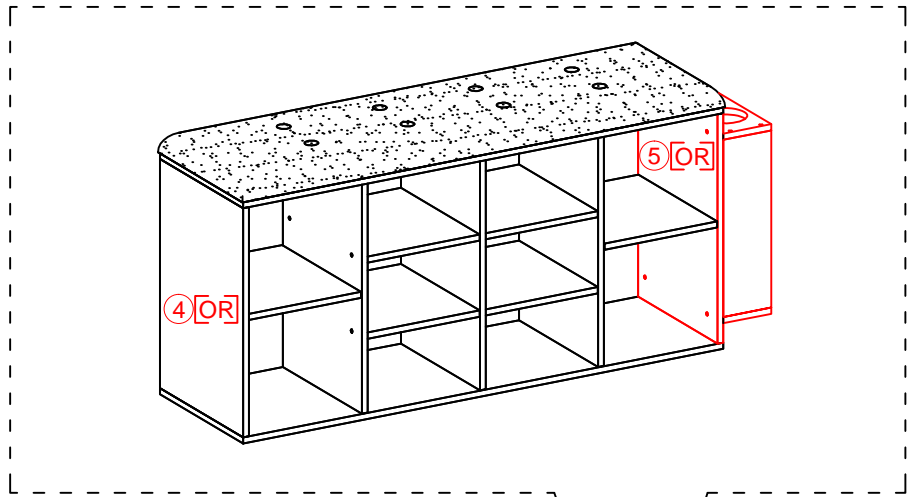


⚠ Attention

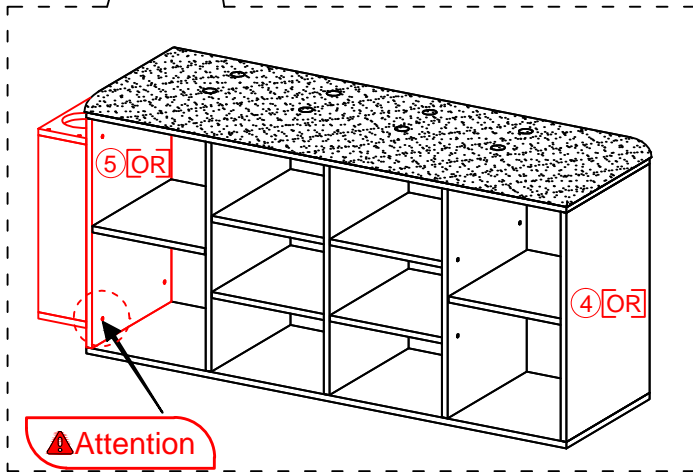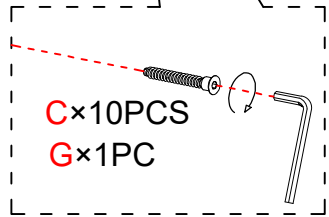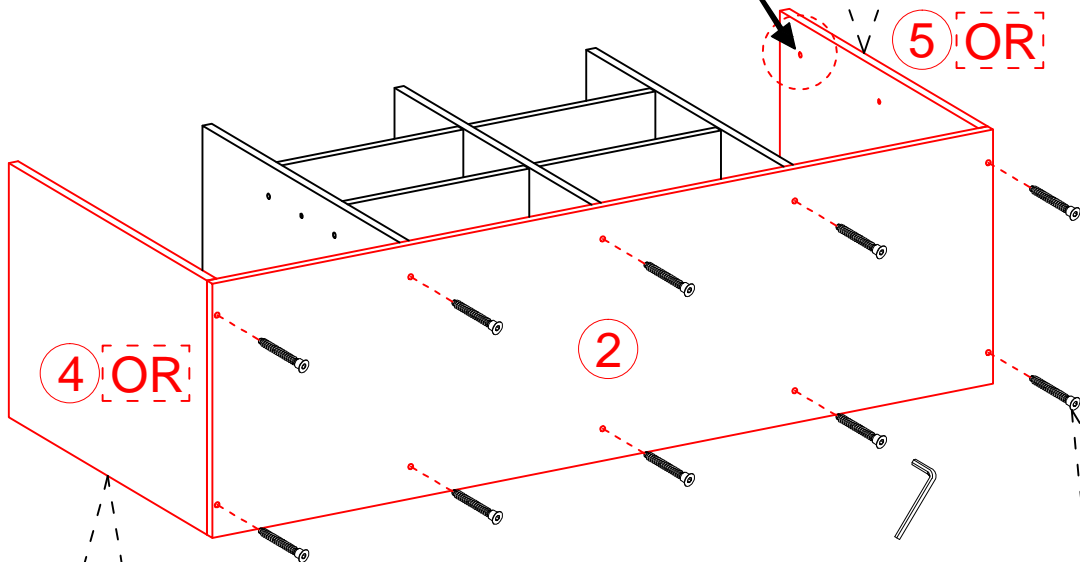


- C×10PCS
- G×1PC
- ②×1PC
- ④[OR]×1PC
- ⑤[OR]×1PC

5

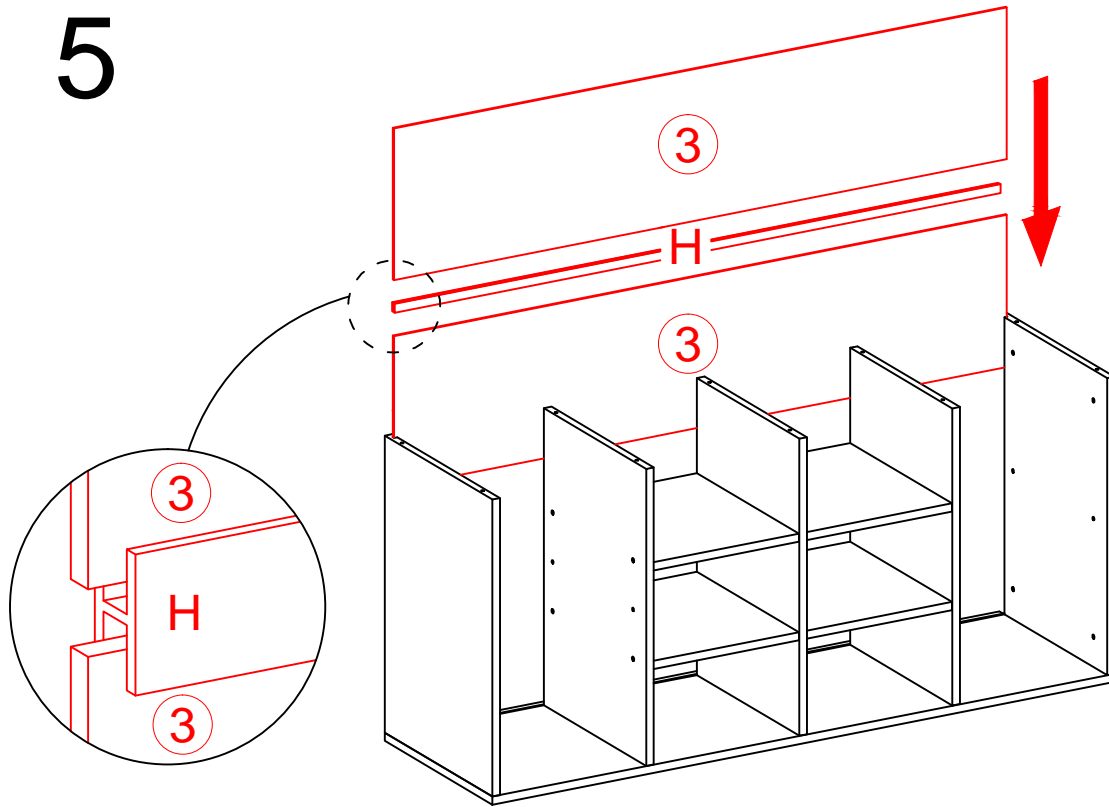

③×2PCS
H ×1PC


6

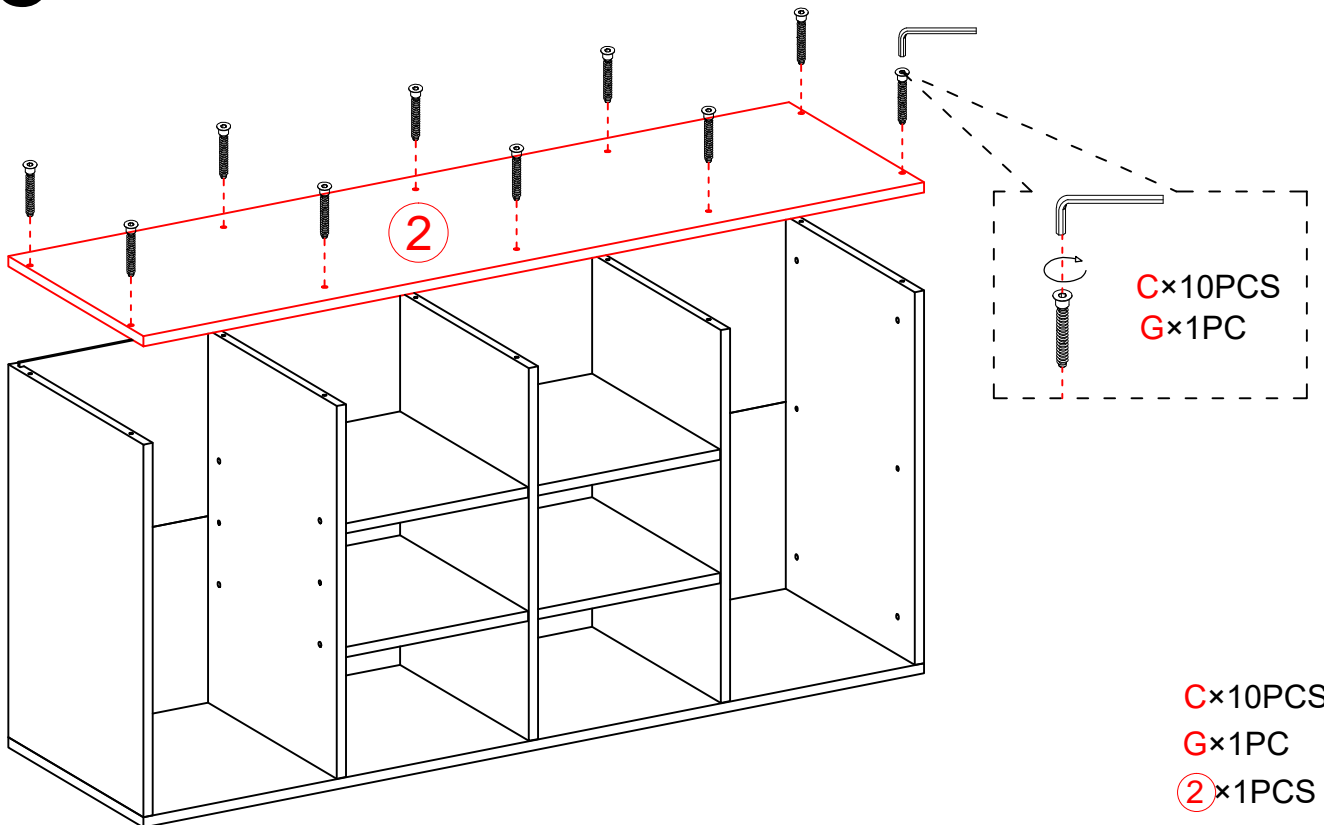

C×10PCS
G×1PC
②×1PCS


P6/10

7

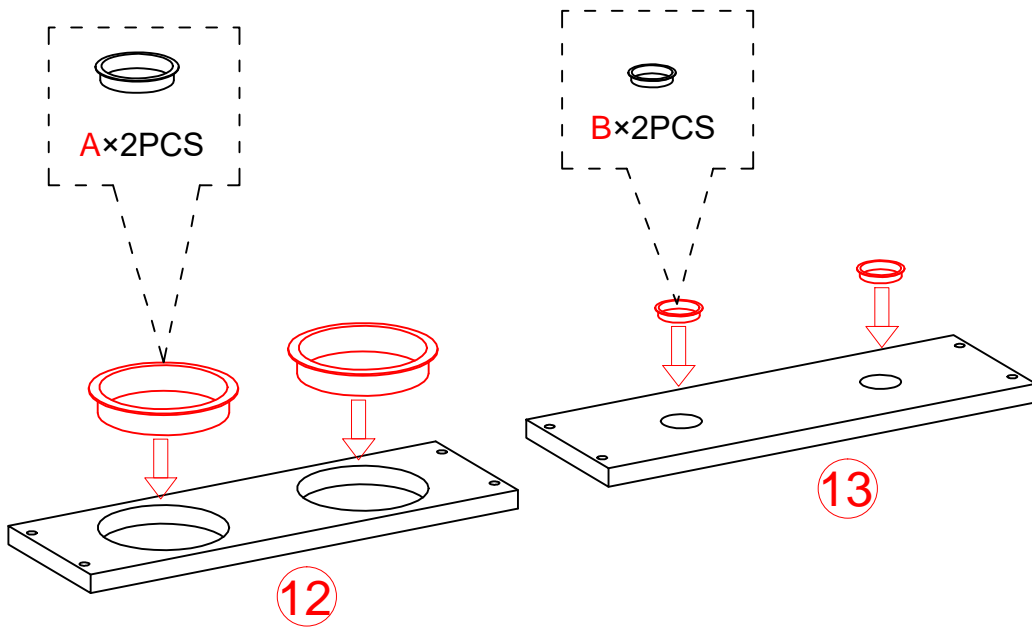


- A x 2 PCS
- B x 2 PCS
- 12 x 1 PC
- 13 x 1 PC

8

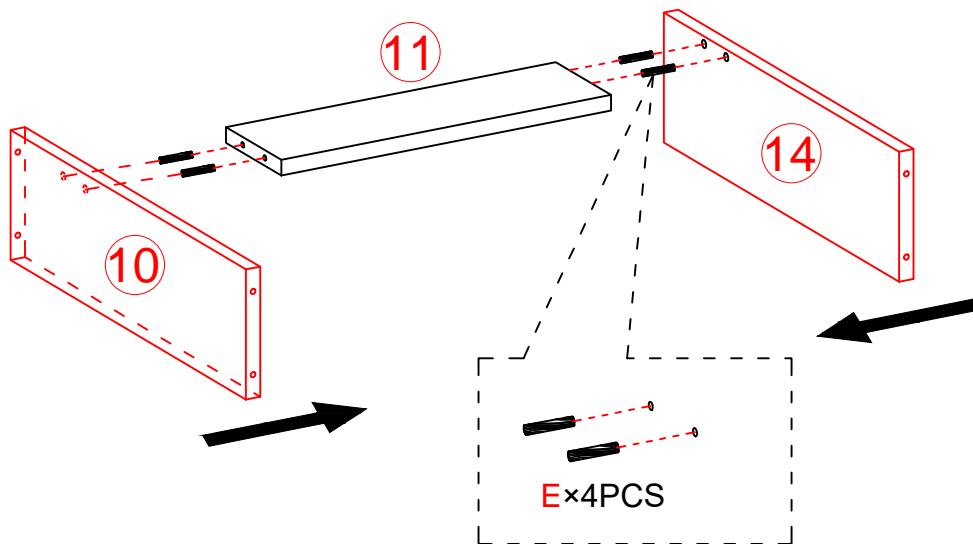

- E x 4 PCS
- 10 x 1 PCS
- 11 x 1 PC
- 14 x 1 PC


9

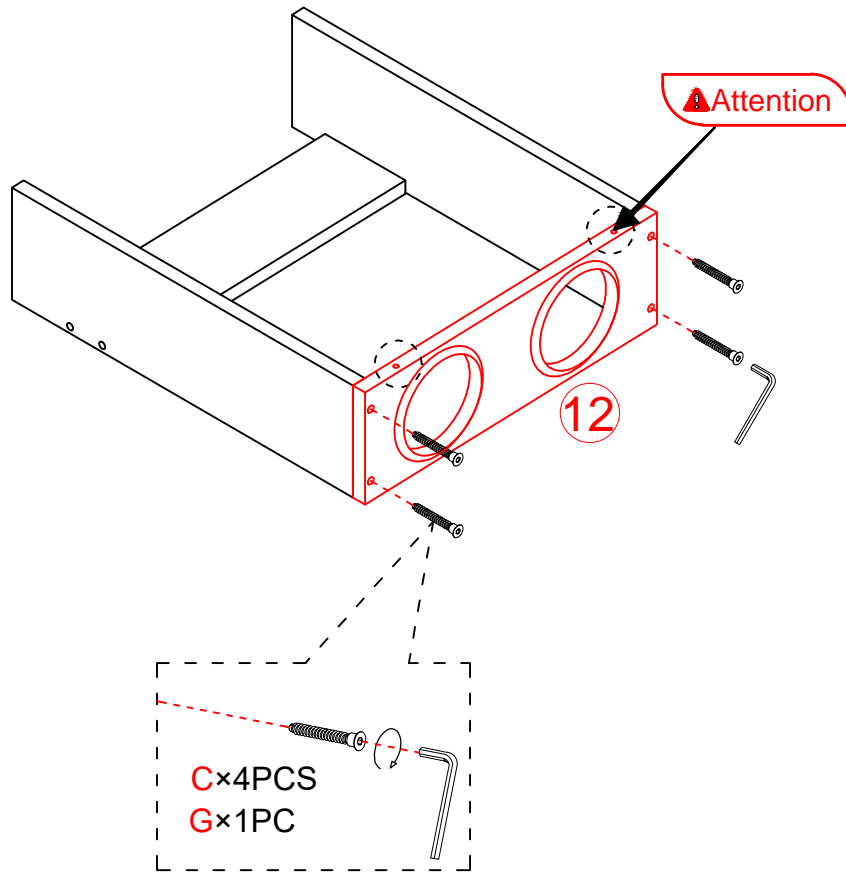

C×4PCS
G×1PC

C×4PCS
G×1PC
12×1PC


10

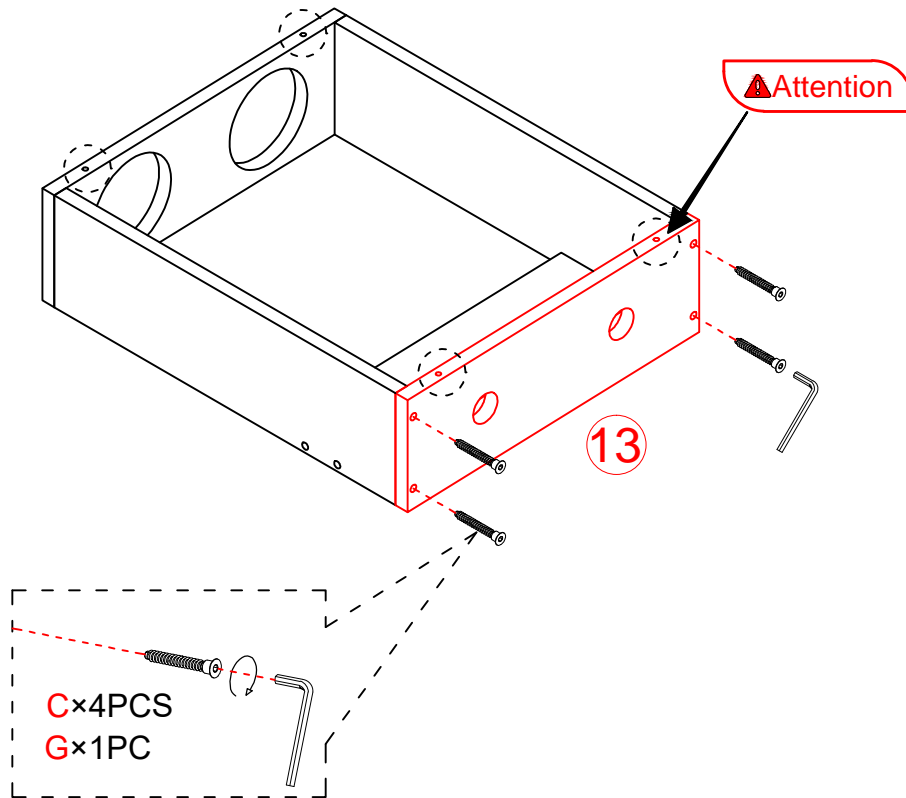


C×4PCS
G×1PC

C×4PCS
G×1PC
13×1PC


11

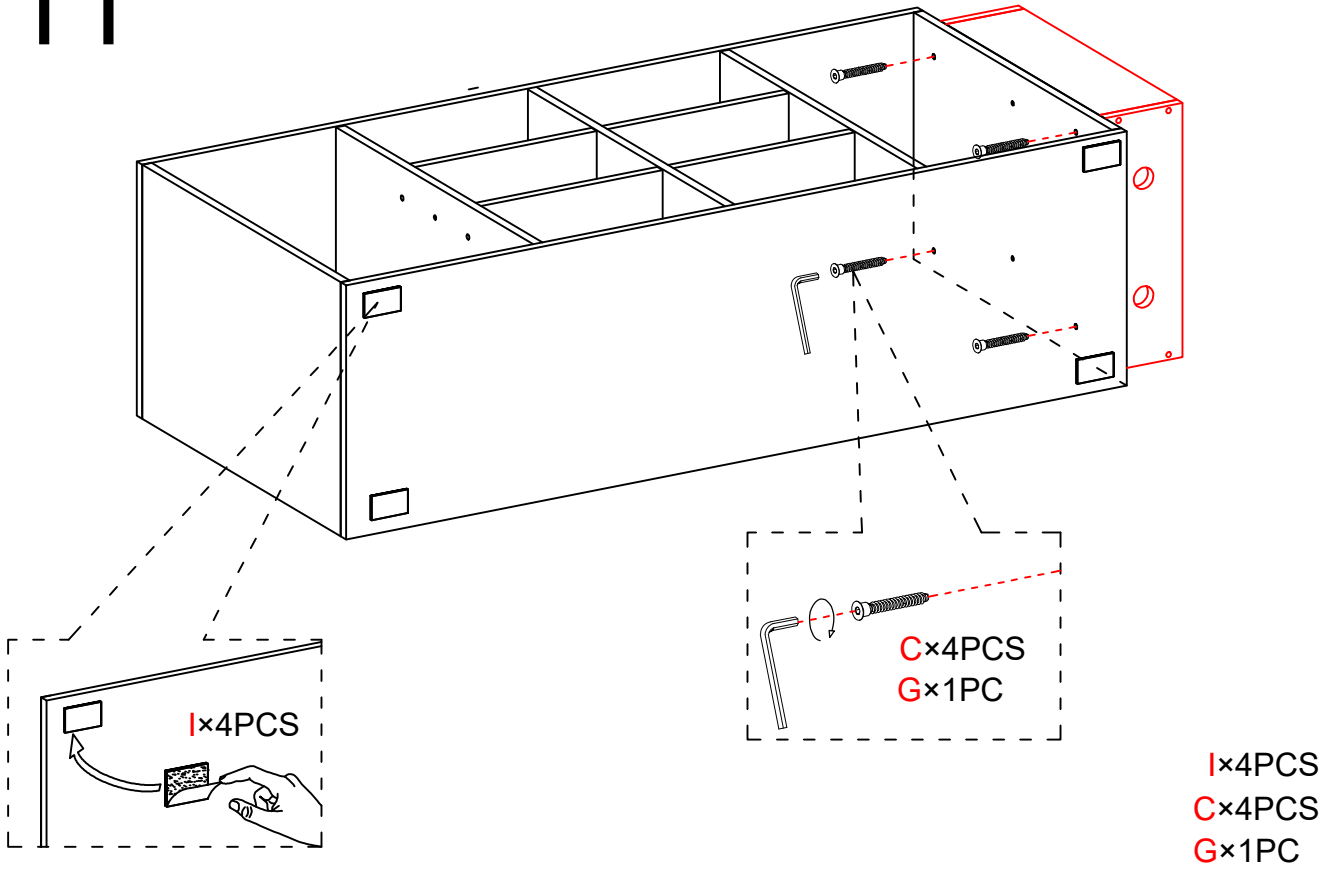

12

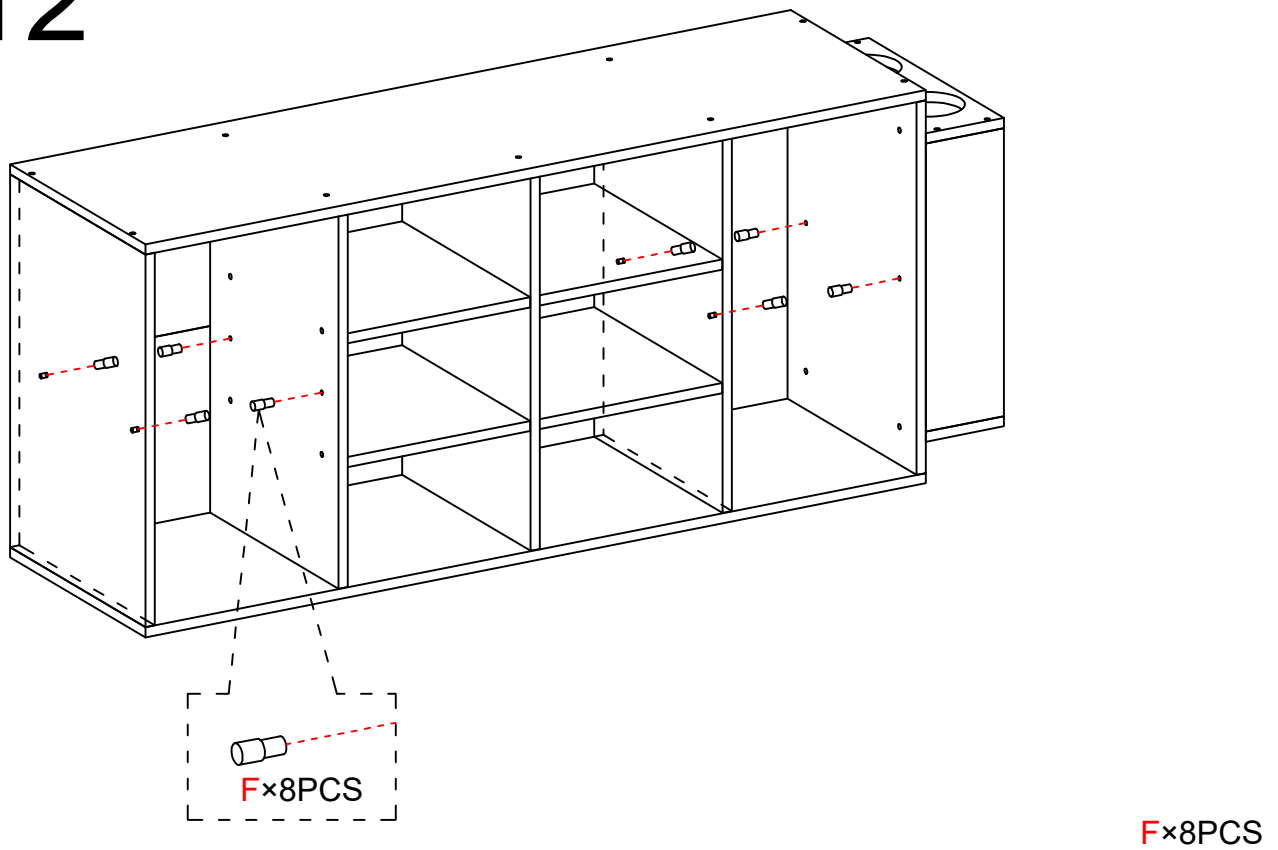


13

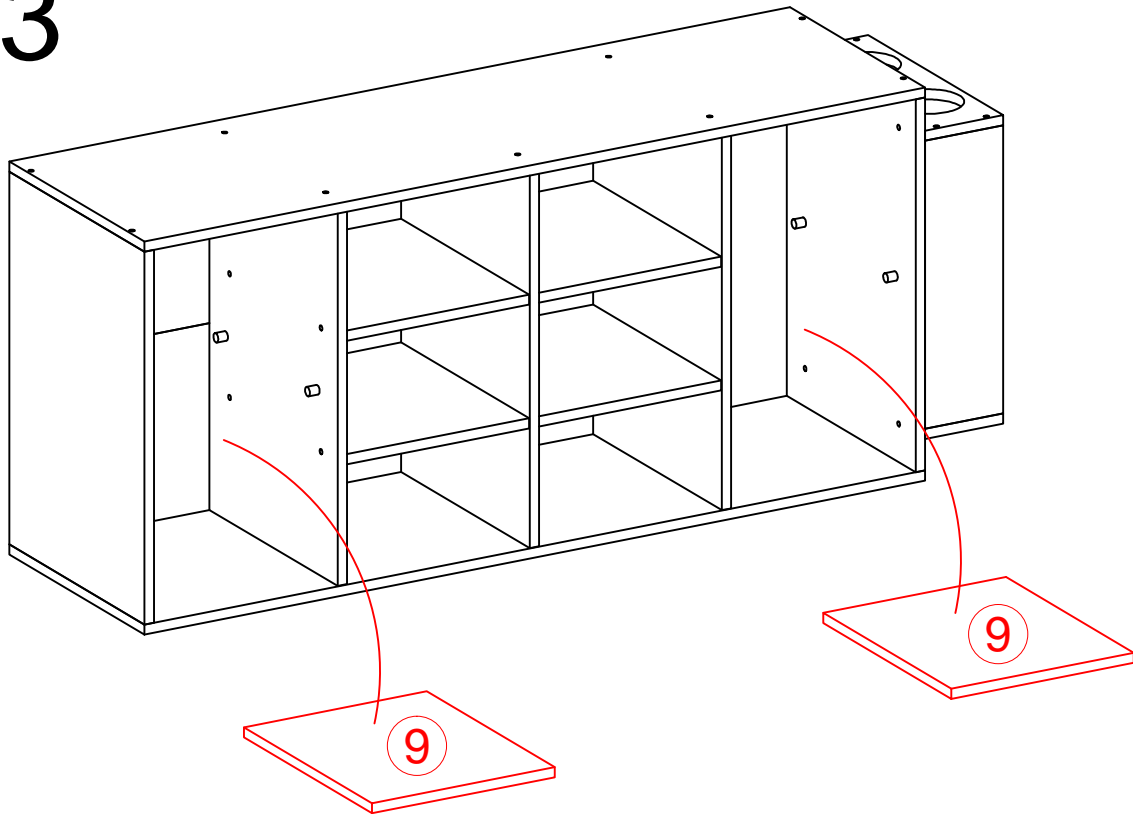

9×2PCS

14

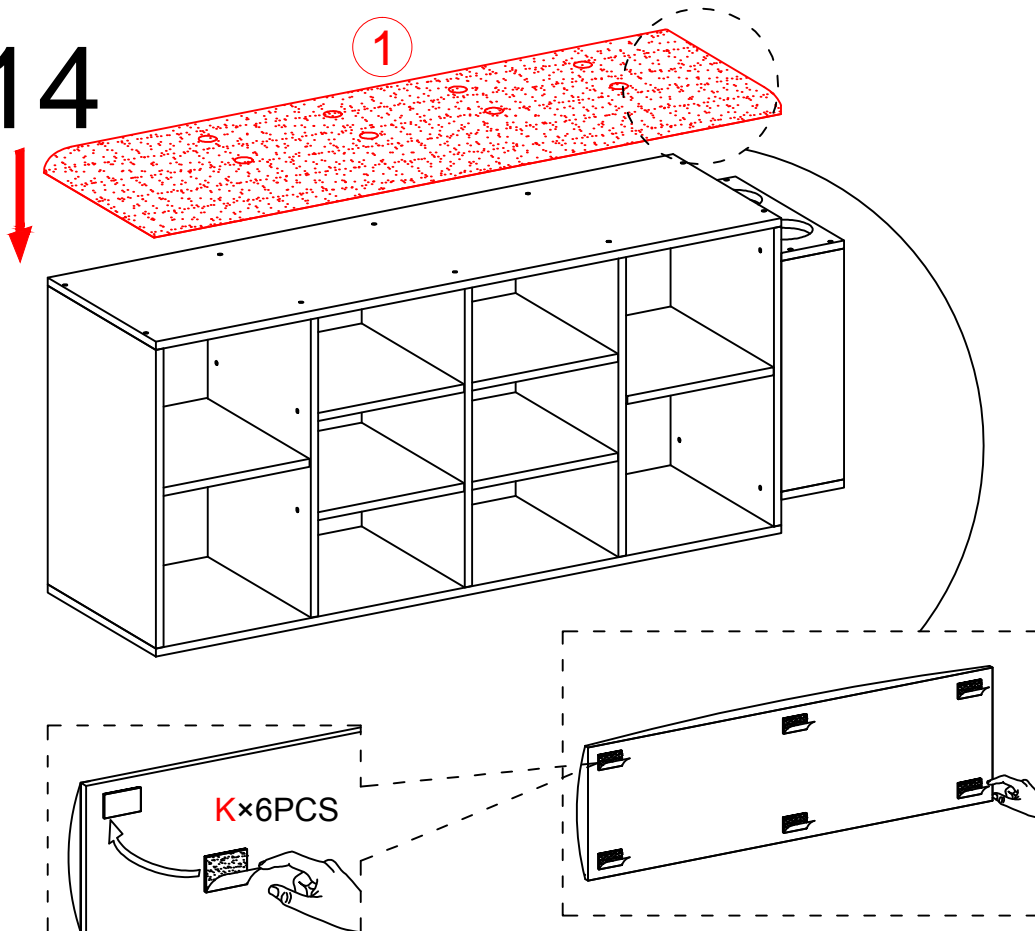

K×6PCS
1×1PC

P10/10