

Mobile Type Bookcase

SG064

Assembly Instructions

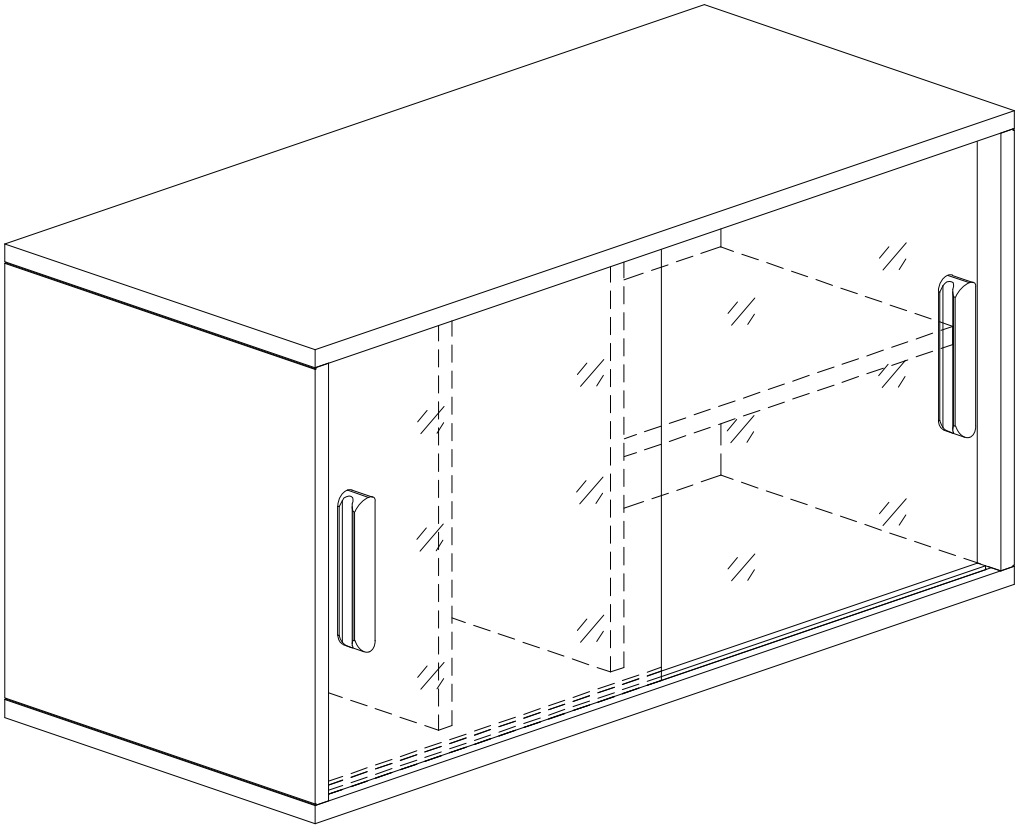


Assembly Overview

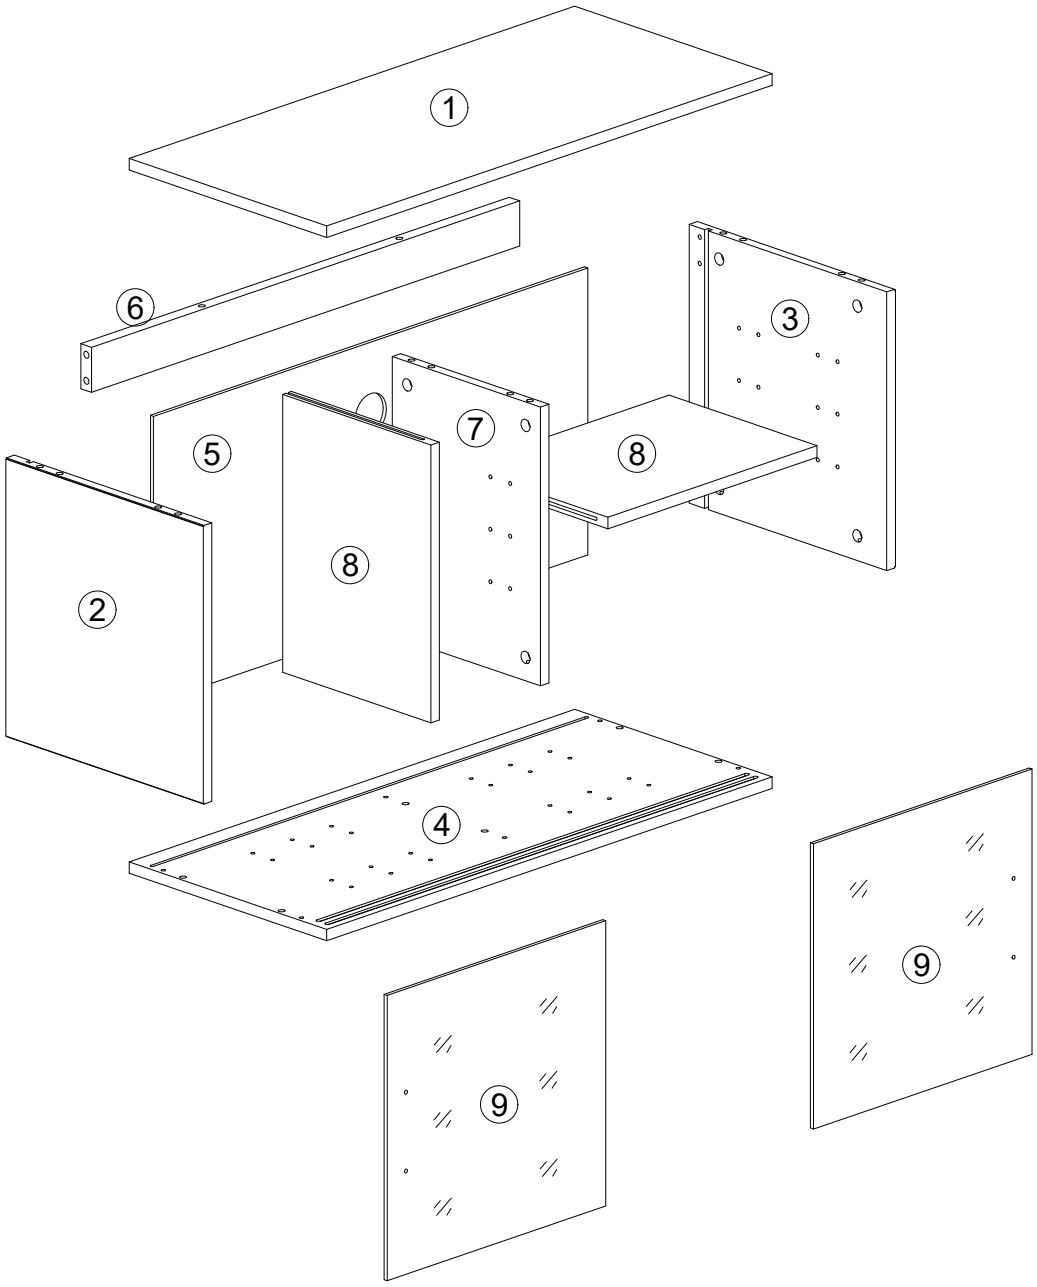


Parts List

1 Front panel

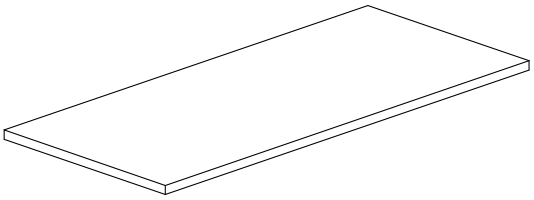


1 PC

2 Left side panel

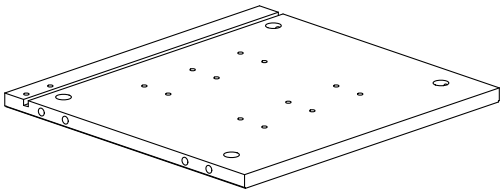


1 PC

3 Right side panel

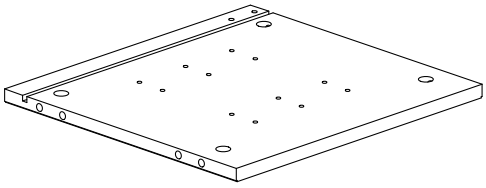

1 PC


4 Bottom panel

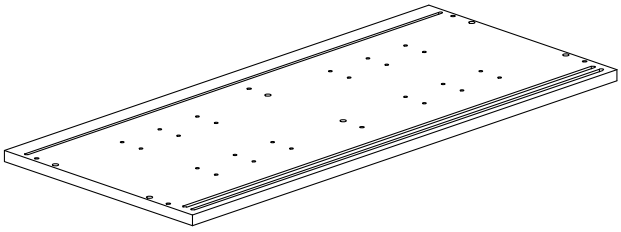

1 PC


Parts List (continued)

5 Back panel

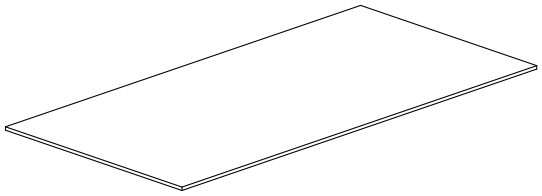


1 PC

6 Rear cross rail

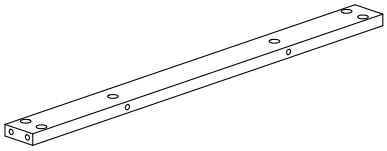


1 PC

7 Middle vertical panel

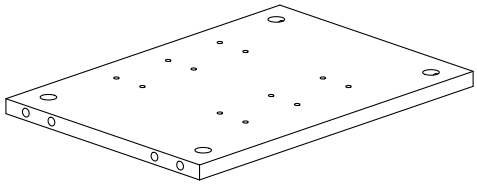

1 PC


8 Adjustable shelf

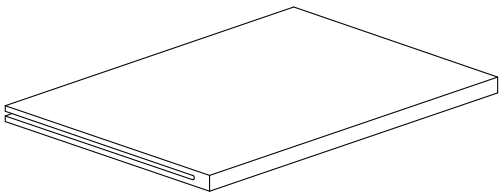

2 PCS

Parts List (continued)


9 Glass door panel

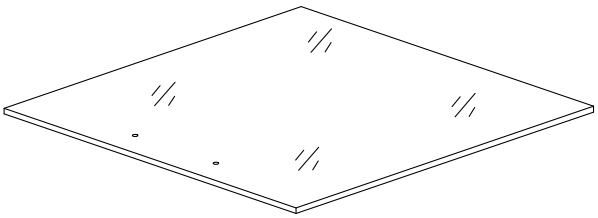

2 PCS

Hardware List


A Cam bolt

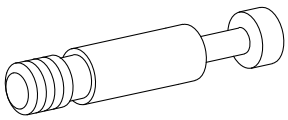

L = 40mm

18 + 1 PCS

B Cam lock

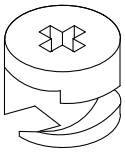

Ø15MM

18 + 1 PCS


C Wood dowel



Ø8 × 30MM

12 + 1 PCS

D Connecting iron plate



54 × 12 × 1.2MM

2 PCS

Hardware List (continued)


E Flat-head wood screw



#3 × 12MM

10 + 1 PCS


F Handle bolt

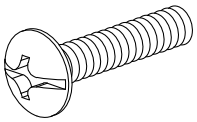

M4 × 12MM

4 + 1 PCS


G Back panel clip

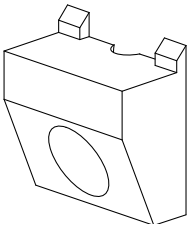

13 × 13 × 9.5MM

6 + 1 PCS

H Plastic washer




Ø10 × 1MM

4 + 1 PCS

Hardware List (continued)


I Decorative sticker



Ø20MM

18 + 1 PCS


K No-nail adhesive pad

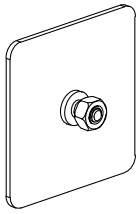

60 × 60MM

2 PCS


L Shelf clip



5 × 12 × 5MM

8 + 1 PCS

M Wooden handle



Hole spacing: 96MM


2 PCS

Reusable Tool

J Phillips screwdriver


Ø6 × 128MM


1 PC (reusable)

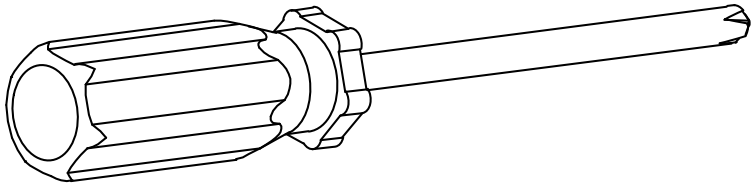


Important

Using the correct screws prevents damage to the components.

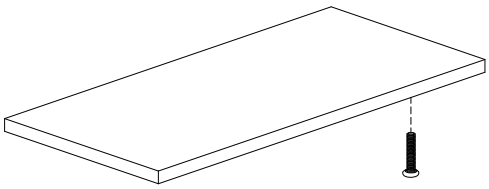

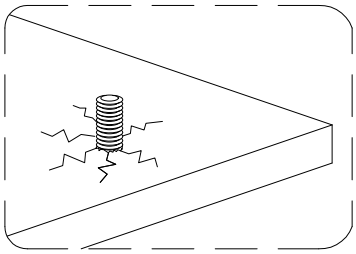

Incorrect screws can split the boards.

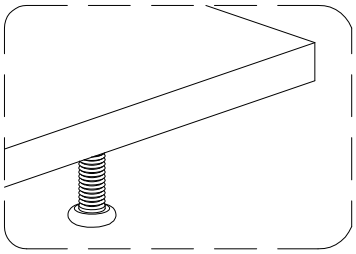

The correct screws fit properly.

WARNING

1. Place the unit on a level surface, or level it with the included hardware where applicable.

2. Do not sit or stand on the assembled product. Do not allow children to climb, sit, or stand on it.

3. For safety, this unit must be mounted to the wall.

4. Do not use the unit without installing the tip restraint.

5. The unit can tip over, causing severe injury or death.


6. Do not exceed the recommended weight limits.

7. Distribute weight evenly on each level and keep heavier loads at the bottom.


8. Before cutting, drilling, or hammering into any wall or floor, check the locations of electrical, plumbing, and gas lines. Cutting may cause serious injury.

Cam Lock System


General example: letters inside these diagrams are local example labels, not the product hardware IDs.

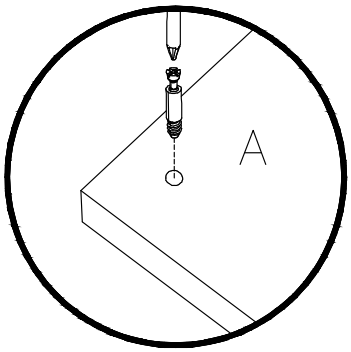


1. Screw the cam bolt into the panel.

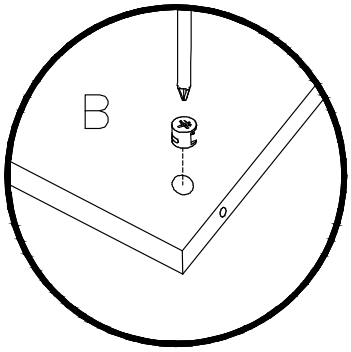


2. Push the cam into the panel. Point its arrow toward the panel edge.

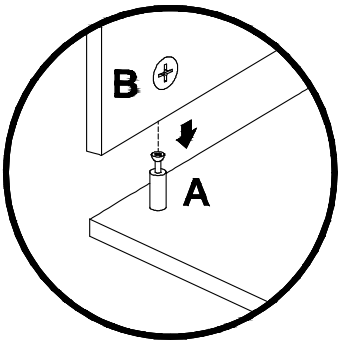

3. Align the cam bolts with the cams and insert fully into the cross-bored holes.

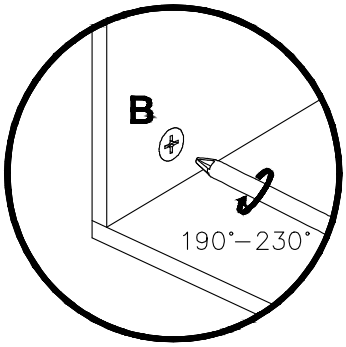


4. Turn the cams clockwise 190°–230° to lock the panels together.

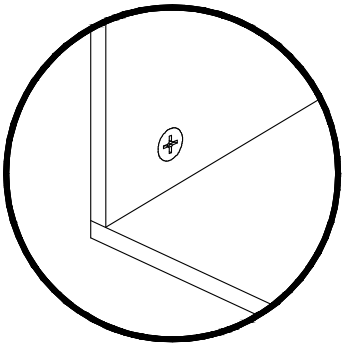

5. The panels should fit tightly together and the connection should be rigid.

Dowel Insertion Example

General example: A and C are local illustration labels, not product hardware IDs. Insert the wood dowel at least halfway. If necessary, tap lightly with a rubber mallet.

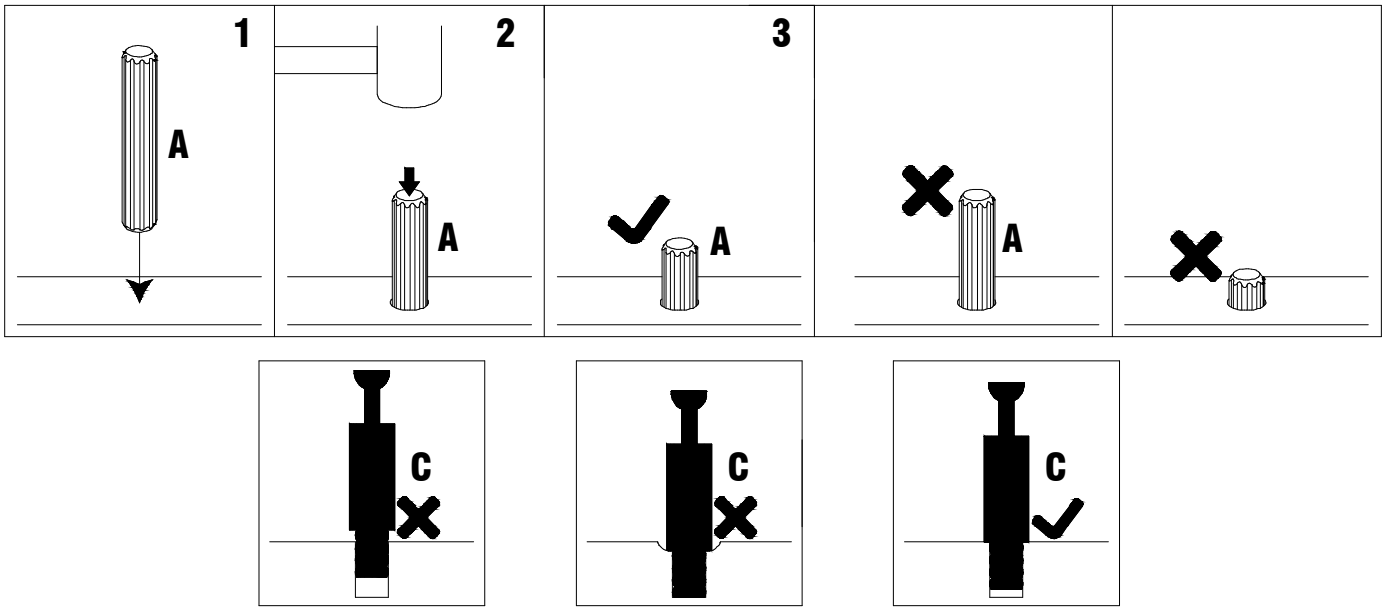


Step 1

Install cam bolts A in Panels 1, 2, 3, and 4 using screwdriver J.

A × 18 PCS

Tool: J × 1 PC (reusable)

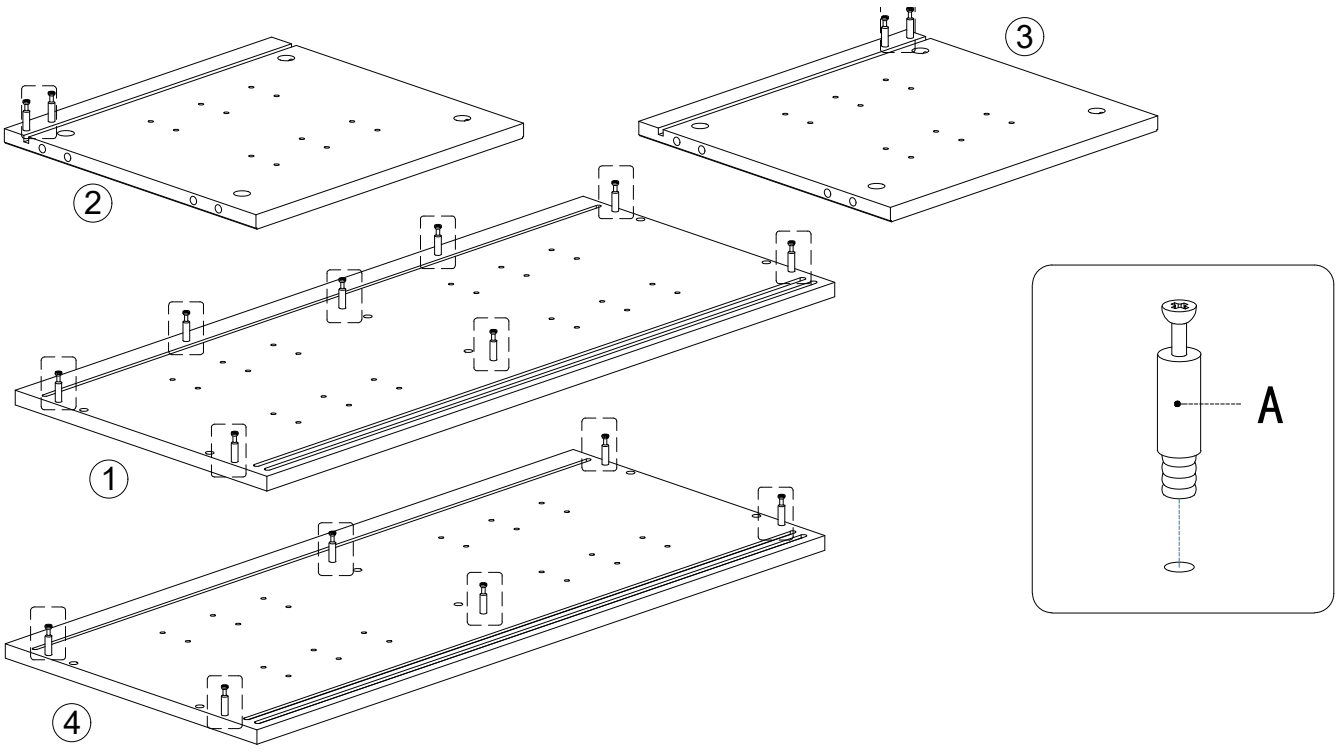



Step 2

Join Rear Cross Rail 6 to Side Panels 2 and 3 from Step 1 using cam locks B and screwdriver J. Cover the locks with stickers I. Orient the side with holes as shown.

B × 4 PCS; I × 4 PCS

Tool: J × 1 PC (reusable)

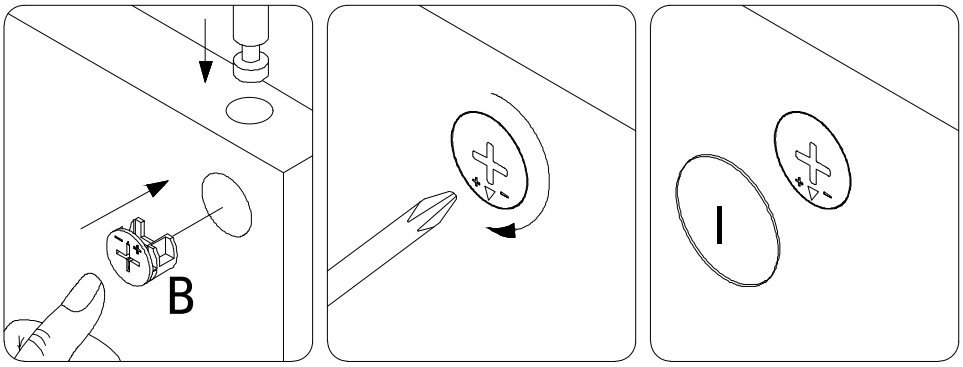

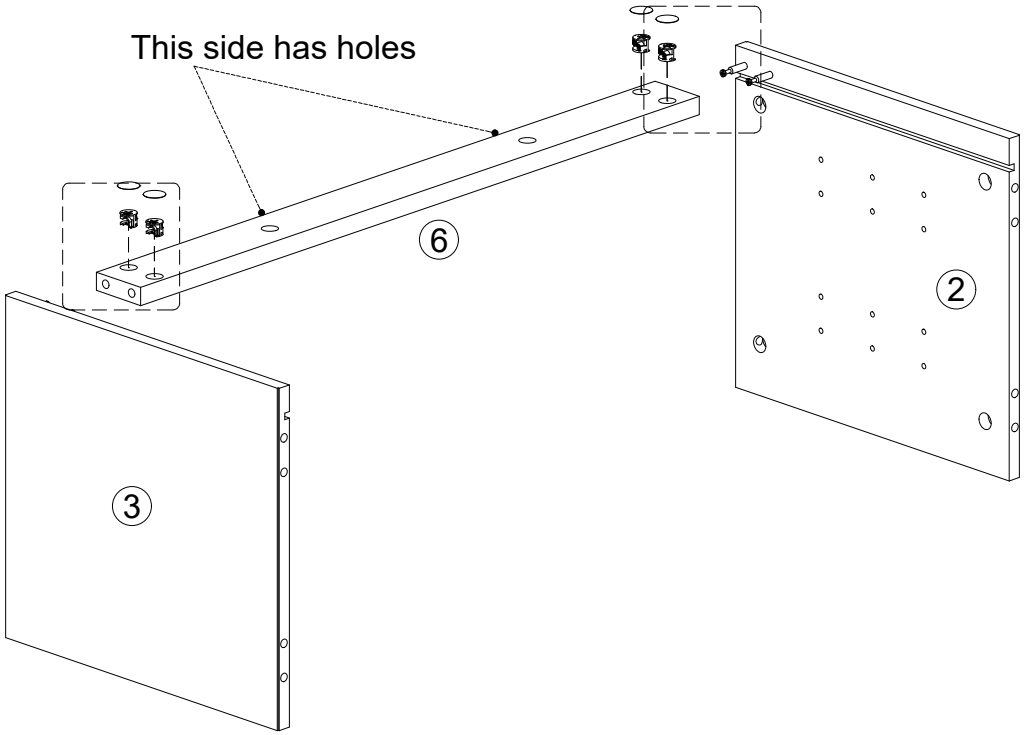


Step 3

Attach Bottom Panel 4 to the assembly from Step 2 using dowels C and cam locks B. Tighten with screwdriver J and cover the locks with stickers I.

B × 4 PCS; C × 4 PCS; I × 4 PCS

Tool: J × 1 PC (reusable)

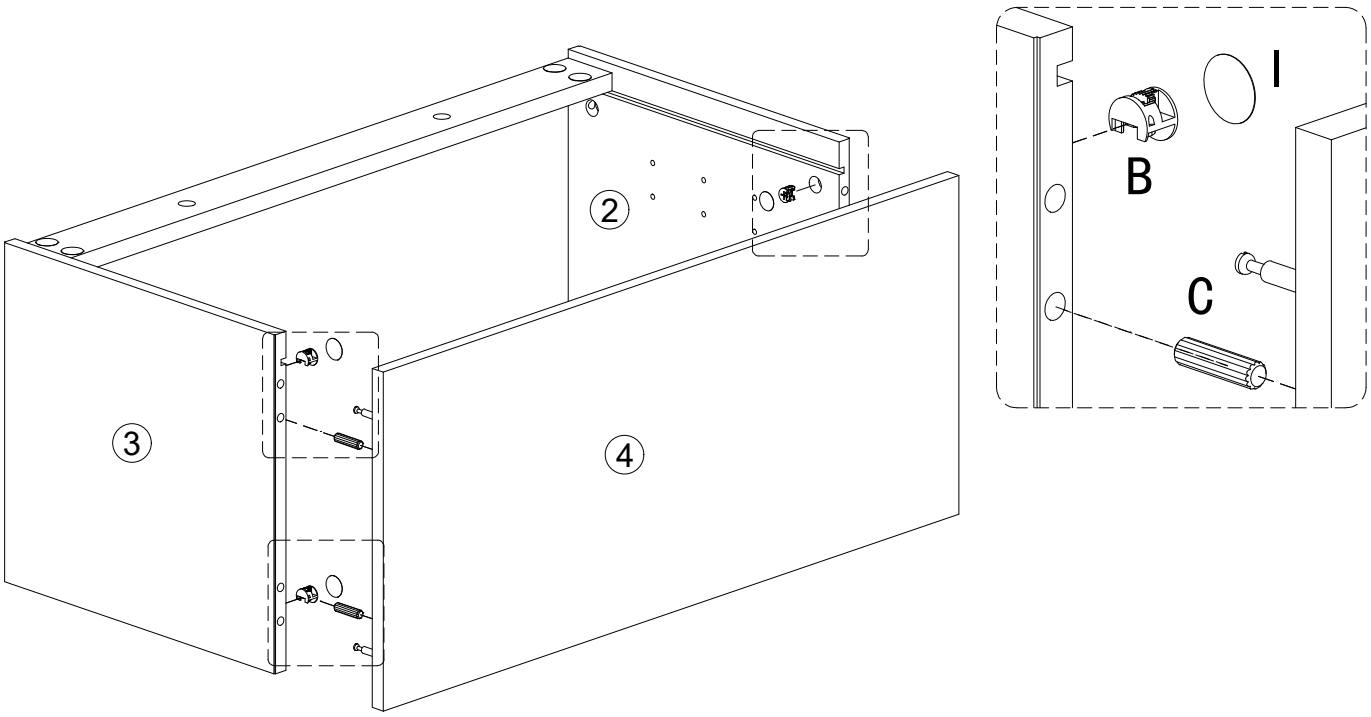



Step 4

Fit Middle Vertical Panel 7 to the assembly from Step 3 using dowels C and cam locks B. Tighten with screwdriver J and cover the locks with stickers I.

B × 2 PCS; C × 2 PCS; I × 2 PCS

Tool: J × 1 PC (reusable)

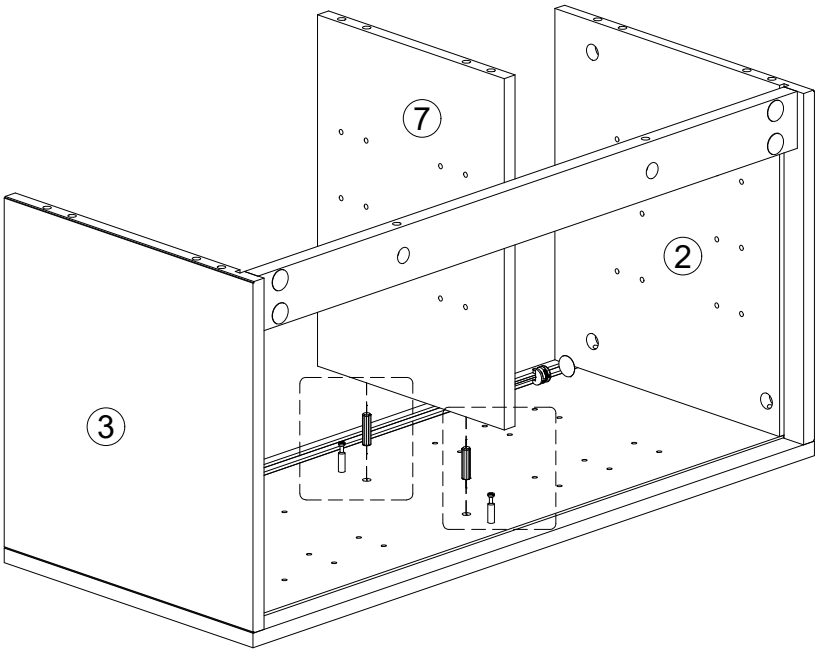


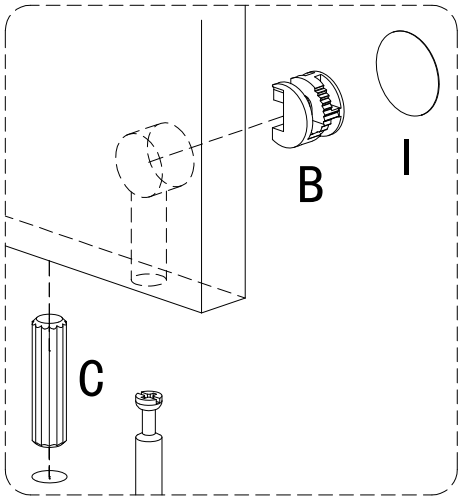

Step 5

Slide Back Panel 5 into position in the assembly from Step 4. Insert wood dowels C at the positions shown.

C × 6 PCS

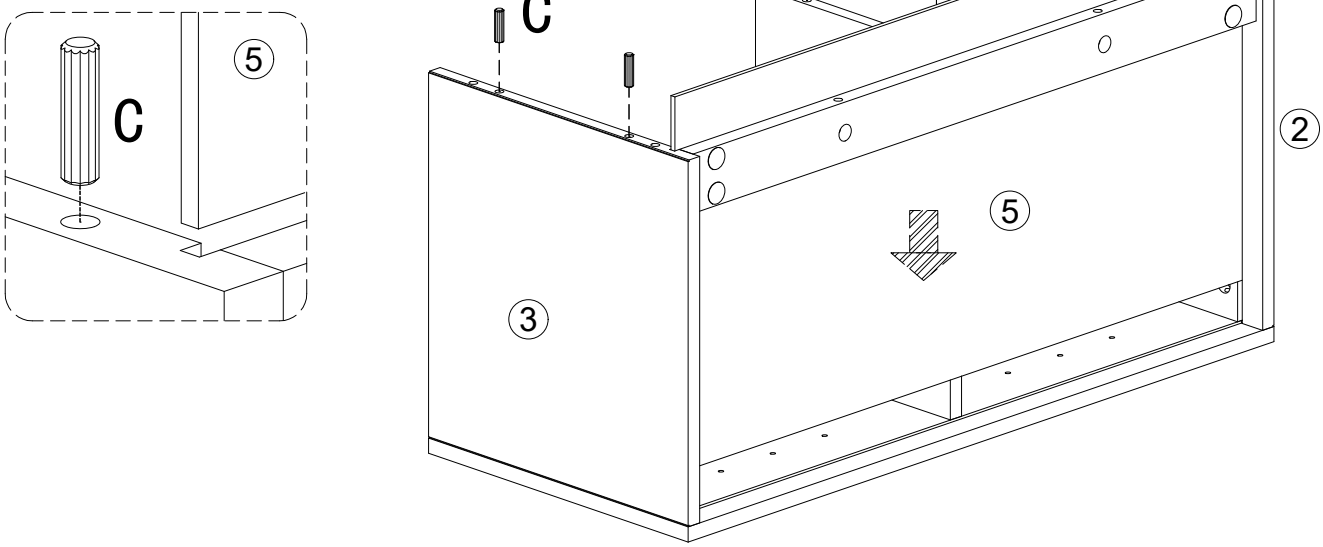


Step 6

Fit Front Panel 1 to the assembly from Step 5 using cam locks B and screwdriver J. Cover the locks with stickers I.

B × 8 PCS; I × 8 PCS

Tool: J × 1 PC (reusable)

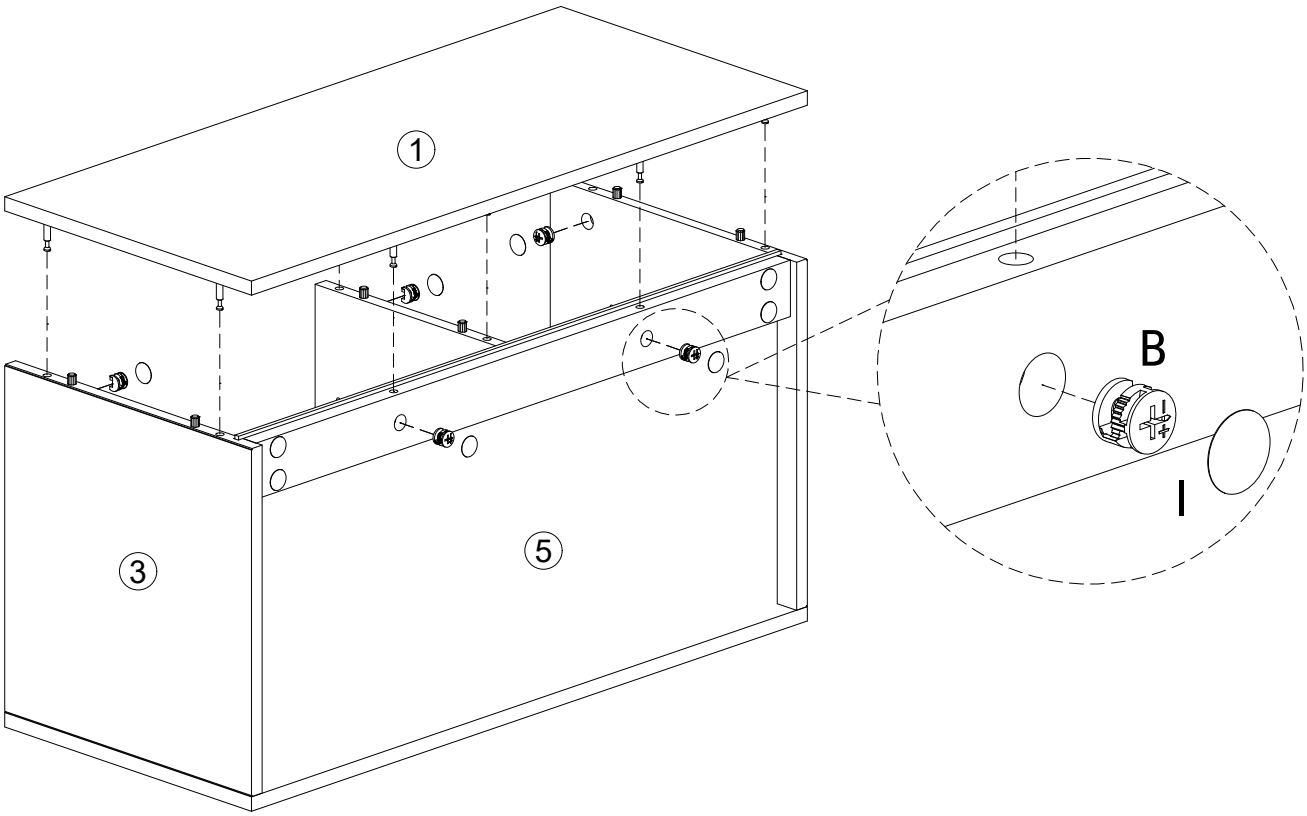


Step 7

Install connecting plates D and back panel clips G using screws E and screwdriver J at the positions shown.

D × 2 PCS; G × 6 PCS; E × 8 PCS


Tool: J × 1 PC (reusable)

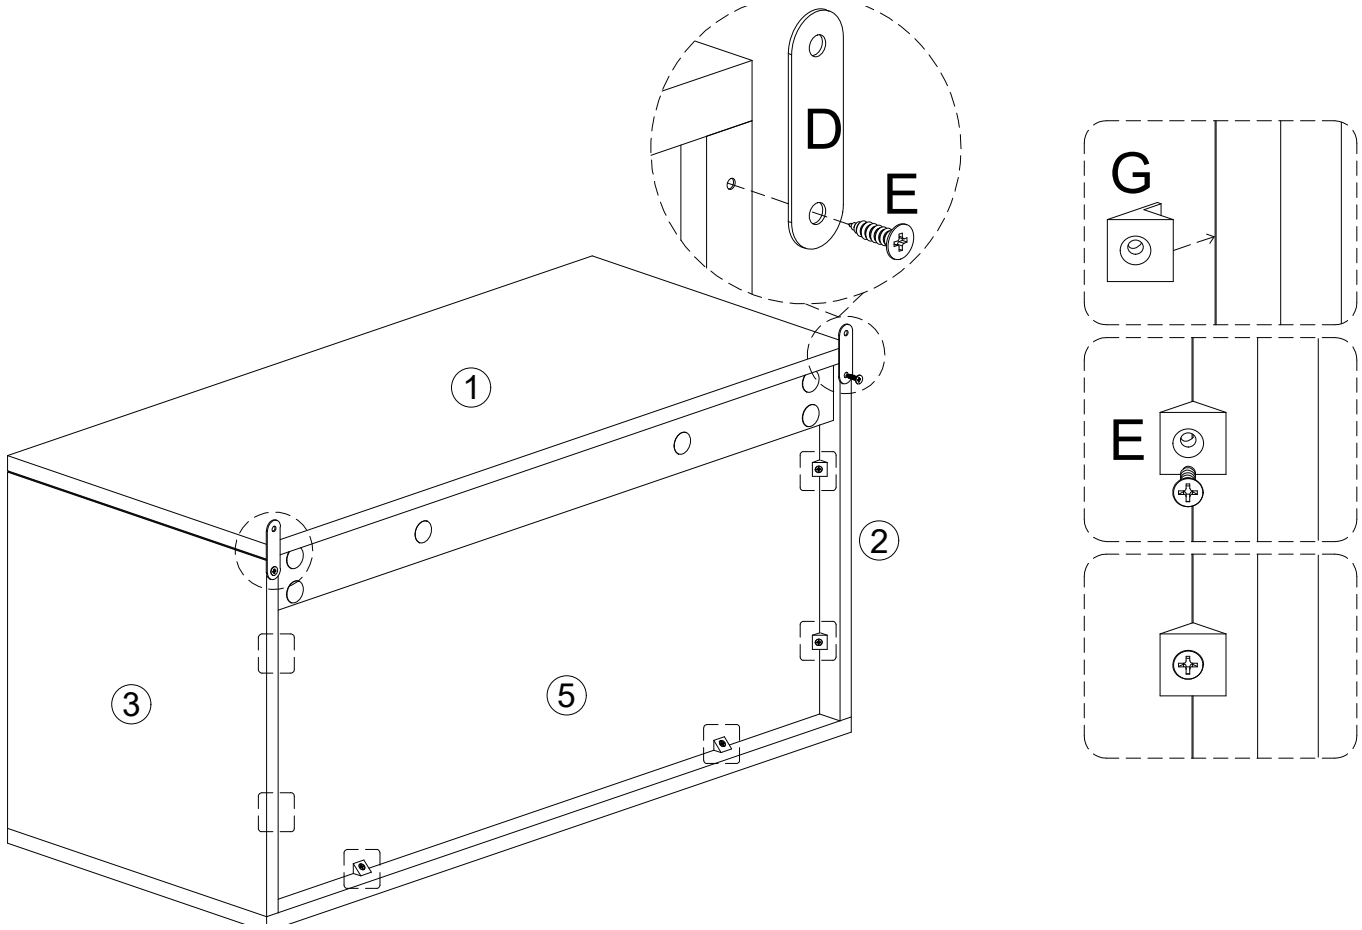

Step 8


Install shelf clips L at the positions shown on the assembly from Step 7.

L × 8 PCS

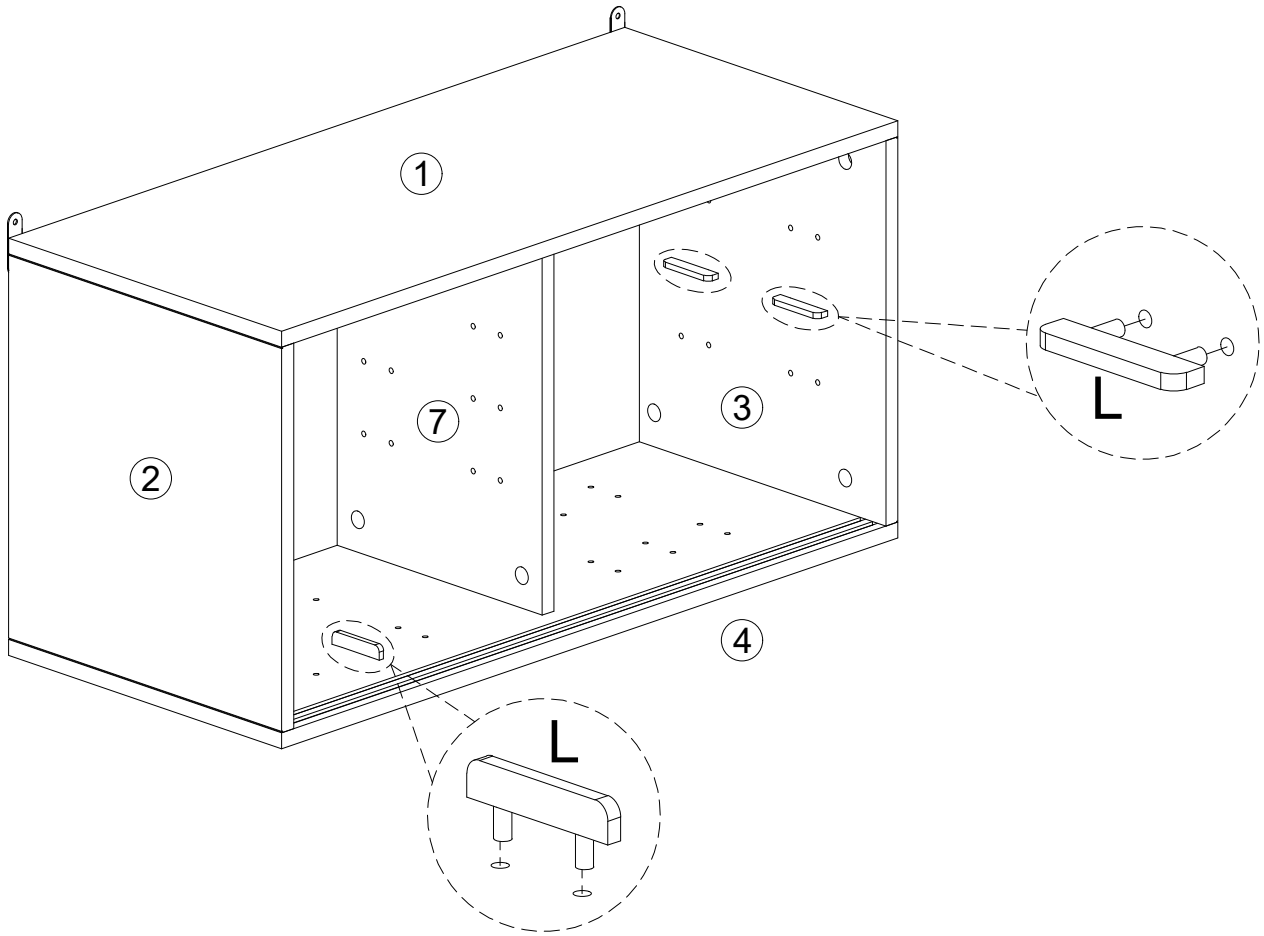

Step 9

Slide both Shelves 8 onto shelf clips L in the cabinet body, as shown.

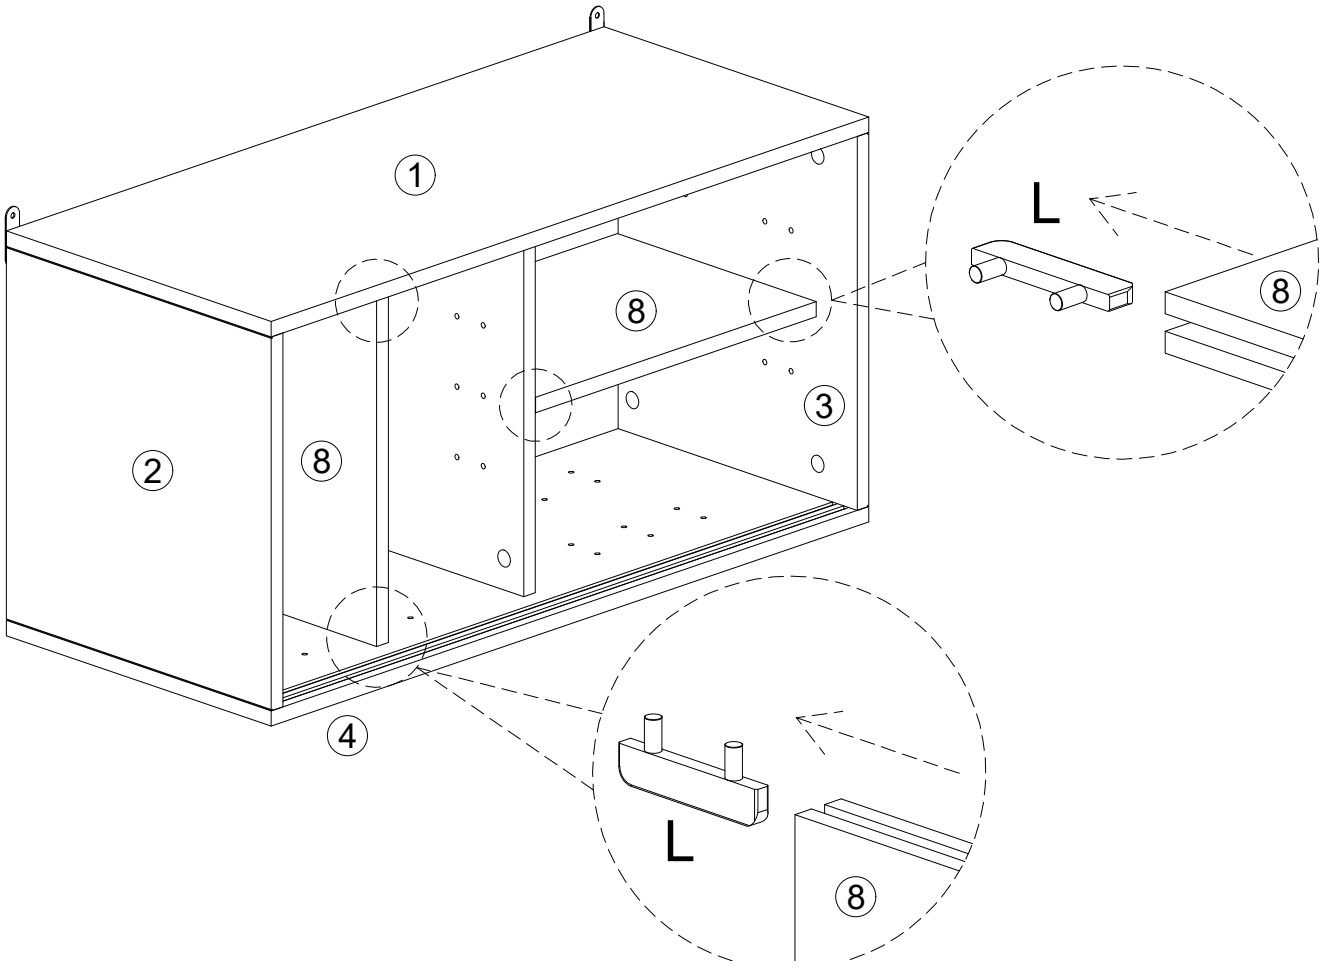


Step 10

Attach handles M to both Glass Door Panels 9 using bolts F and washers H. Tighten with screwdriver J.


F × 4 PCS; H × 4 PCS; M × 2 PCS (total)


Tool: J × 1 PC (reusable)

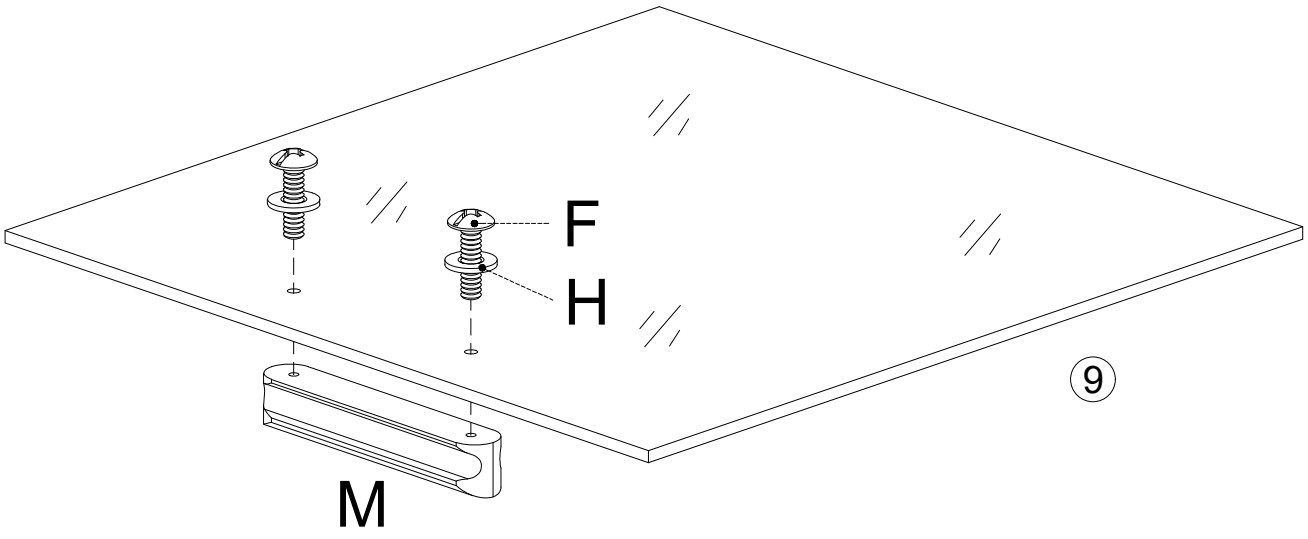

Step 11

Insert the door assemblies from Step 10 into the grooves in the cabinet body from Step 9, following the illustrations.

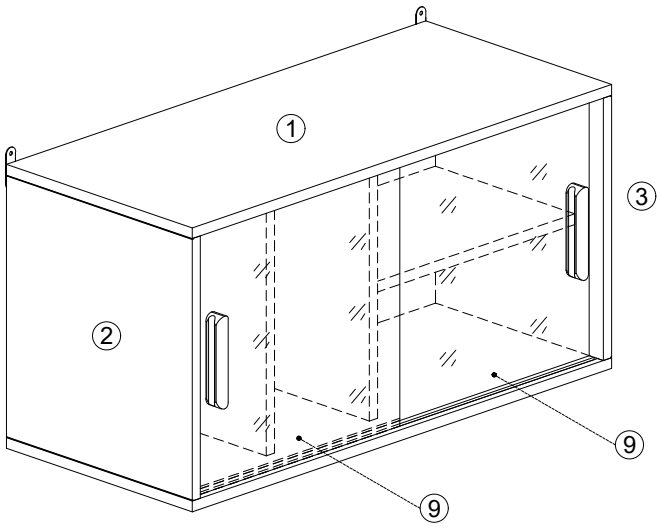

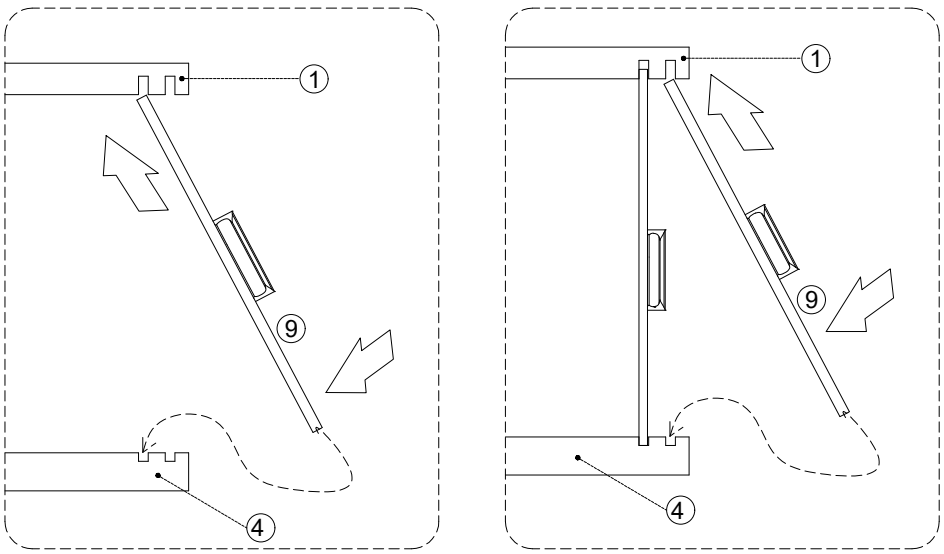

Step 12

Figure 1: Secure the assembled cabinet to the purchased floor-standing bookcase using screws E and screwdriver J. Figure 2: Secure the cabinet to the wall using adhesive pads K, as shown.

E × 2 PCS; K × 2 PCS

Tool: J × 1 PC (reusable)

