



Outdoor Privacy Screen

ASSEMBLY MANUAL




Missing part? Damaged? Contact us via email at
service@domioutdoorliving.com

www.domioutdoorliving.com


SKU: LNCN0591

Prior to assembly


1. Wear Gloves For Safety

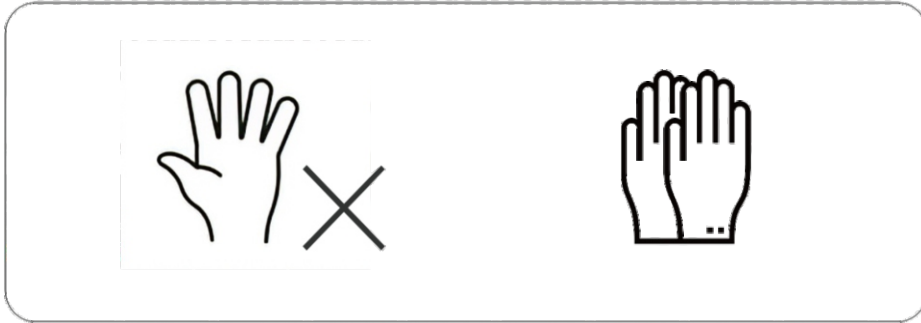


2. Seeking Assistance

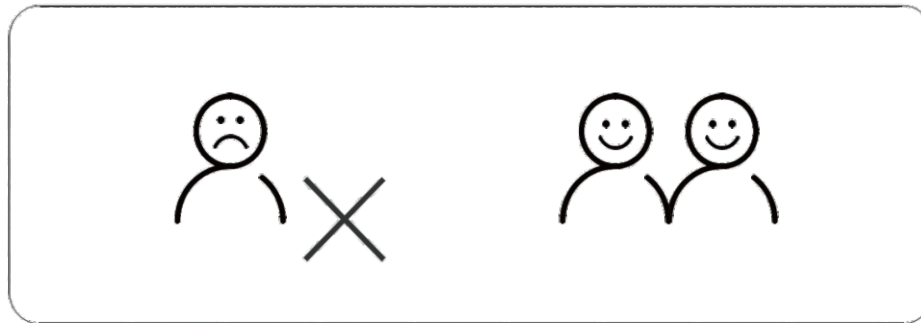


3. Avoid Installing on Hard Surfaces

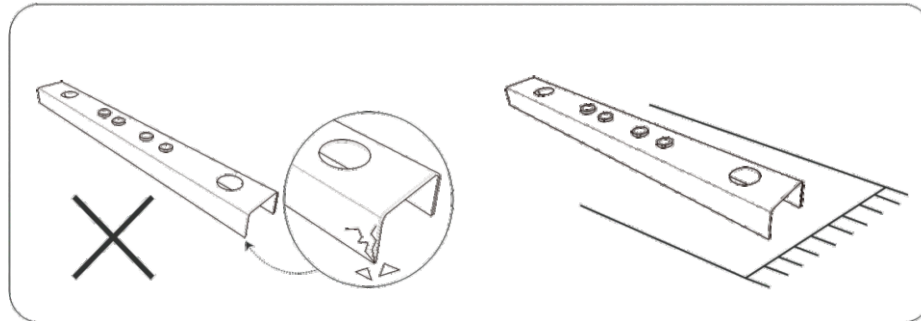

4. Careful Handling of Metal Edges


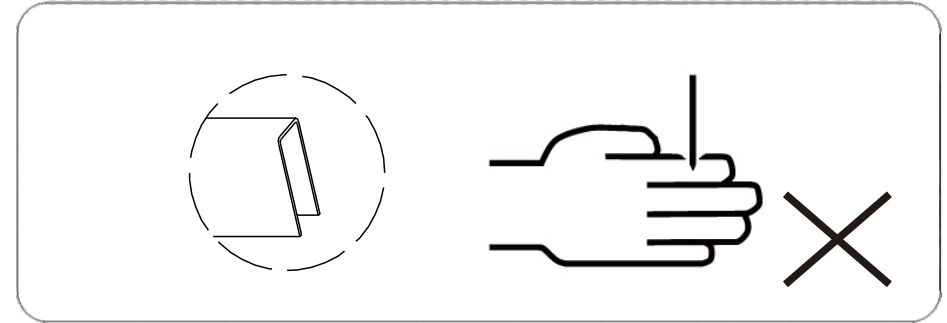







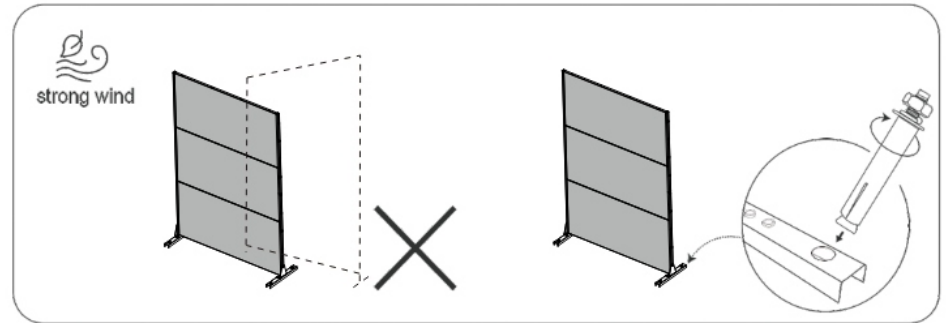




5. Use Hex-Head Sleeve Anchors to fix the privacy screen on solid ground if necessary.

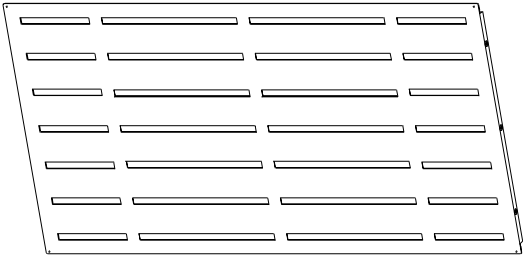


Warning & Attention

- Before beginning the construction, please verify that all parts and components are intact and complete, ensuring there are no damages or missing items of the product.
- During the installation process, please do not fully tighten the screws.
- After assembly, please ensure that all screws are properly tightened to prevent any parts from coming loose.
- Use expansion bolts to secure the frame to the ground to withstand strong winds.

<p>(A)</p>  <p>3PCS</p>	<p>(D)</p>  <p>2PCS</p>				
<p>(B)</p>  <p>2PCS</p>	<p>(E)</p>  <p>2PCS</p>				
<p>(C)</p>  <p>2PCS</p>	<p>(F)</p>  <p>2PCS</p>				
<p>(G)</p>  <p>2PCS</p>	<p>(H)</p>  <p>4PCS</p>	<p>(I)</p>  <p>M6x15</p> <p>26PCS</p>	<p>(J)</p>  <p>St4x8</p> <p>12PCS</p>	<p>(K)</p>  <p>1PCS</p>	<p>(L)</p>  <p>1PCS</p>


Please ensure all parts listed included before assembly and feel free to contact us if there are any problems.

A

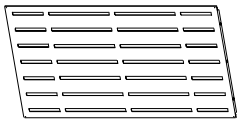

3PCS

B



2PCS

C



2PCS

J




ST4X8

12PCS


1

Screen Panel Assembly

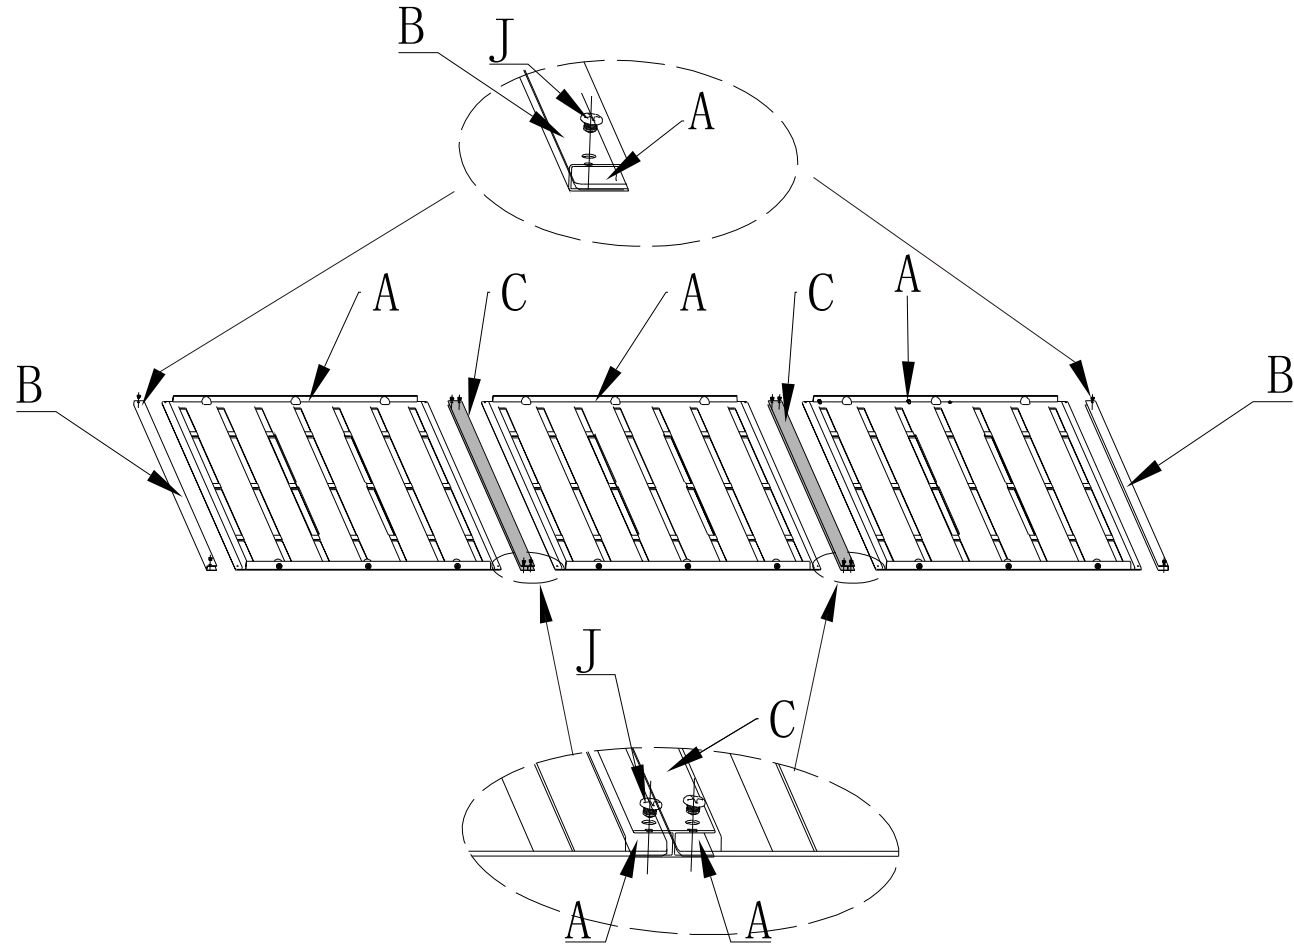

Use 8 bolts #J to secure the 2 connecting tubes #C with 3 screen panels #A.
 Use 4 bolts #J to secure the 2 transverse tubes #B to the top and bottom.

D




2PCS

F



2PCS

I




M6X15

8PCS


Screen Panel Assembly

x2

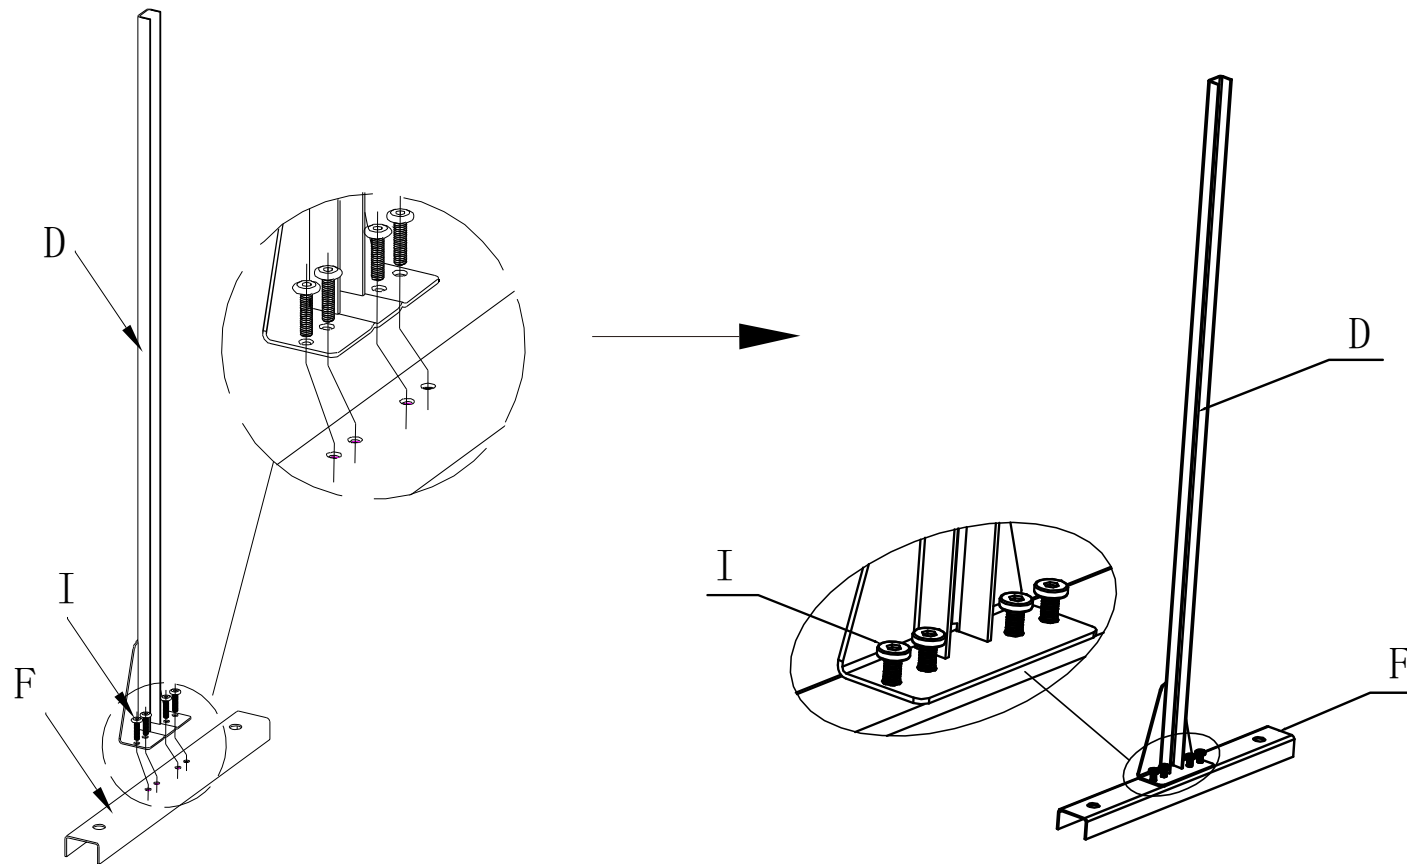

Use 4 bolts #I to secure the support tubes #D with the base #F.

D F

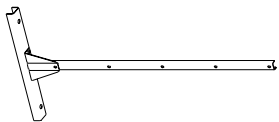

2PCS

E




2PCS

G



2PCS

I




M6X15

18PCS

3

Combination Assembly



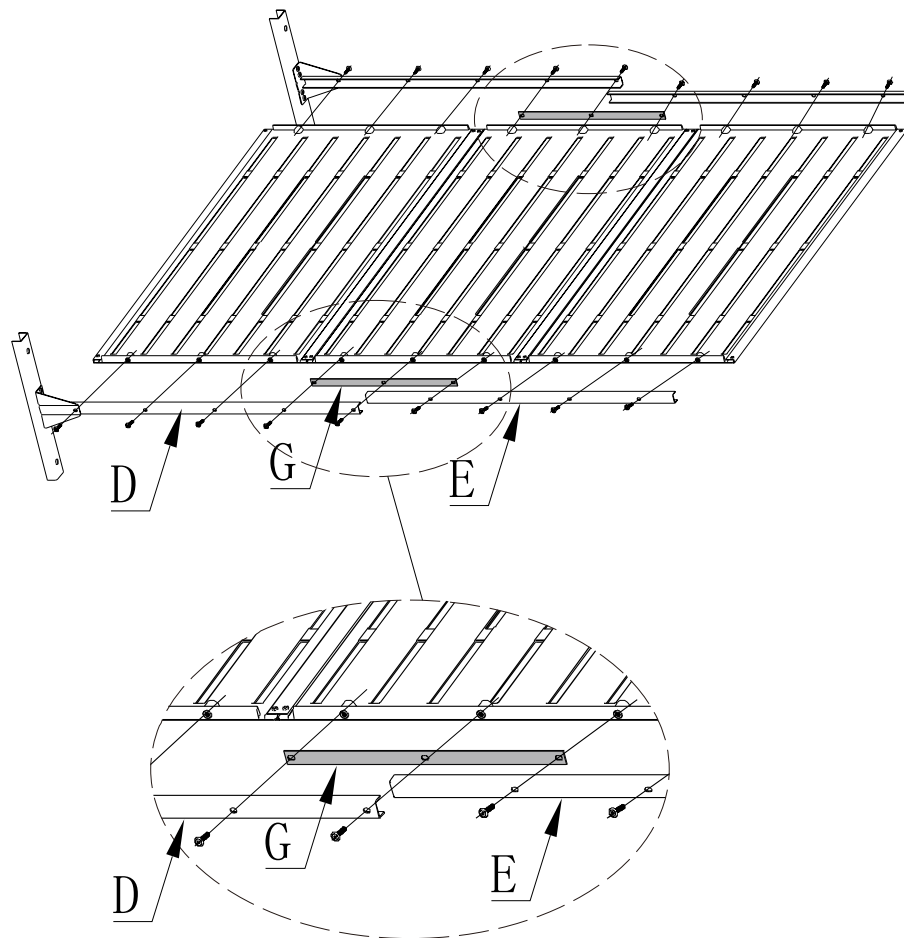


Use 6 bolts #I to secure 2 support tubes #D and #E with 2 reinforcement tubes #G and secure the assembly to 3 screen panel #A using 12 bolts #I.

H




4PCS

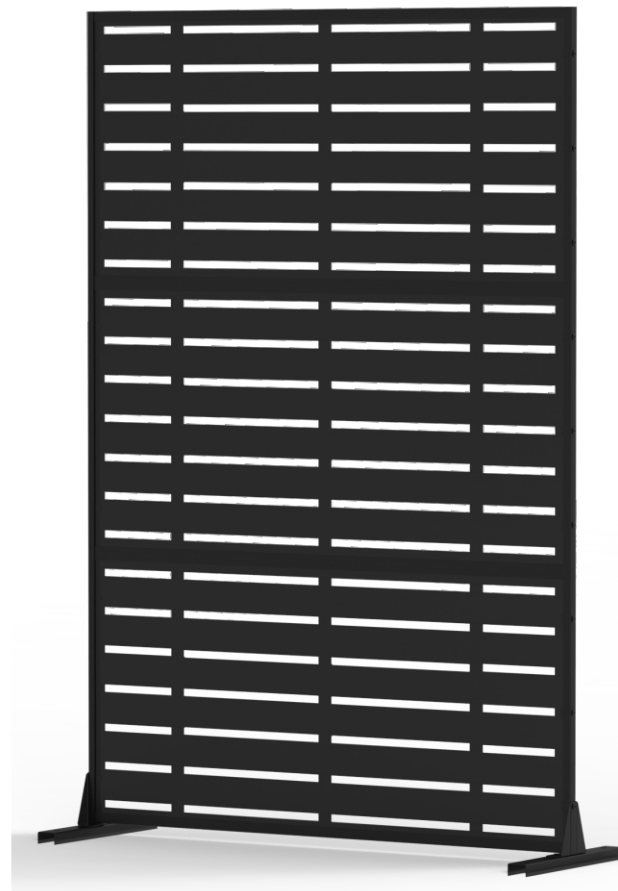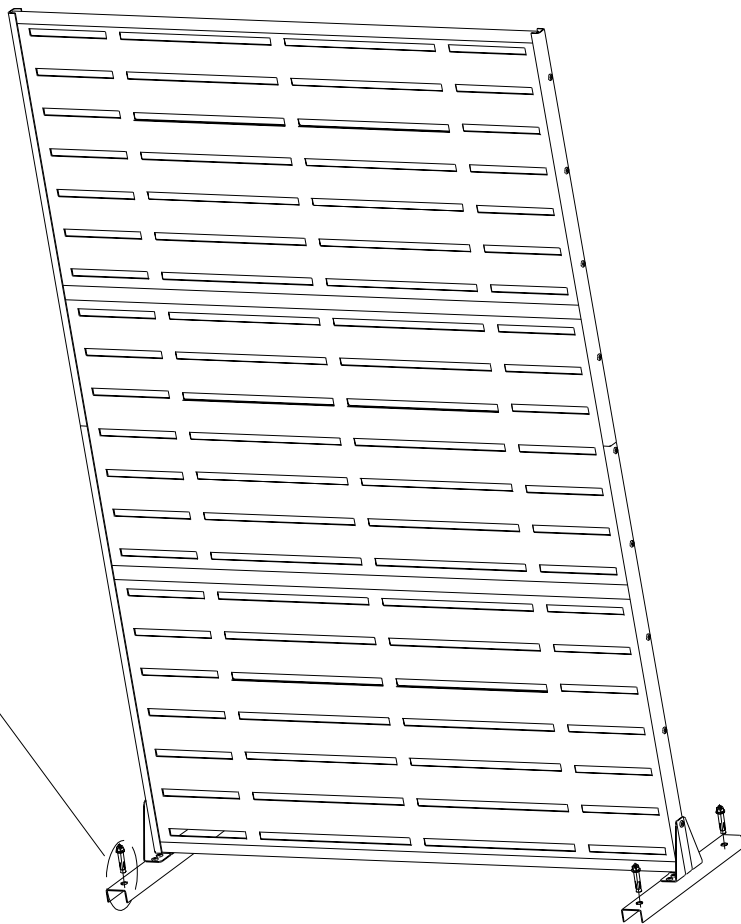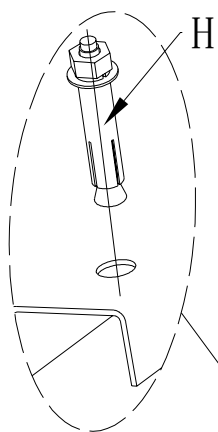


4


We offer a wide range of pattern options for you.

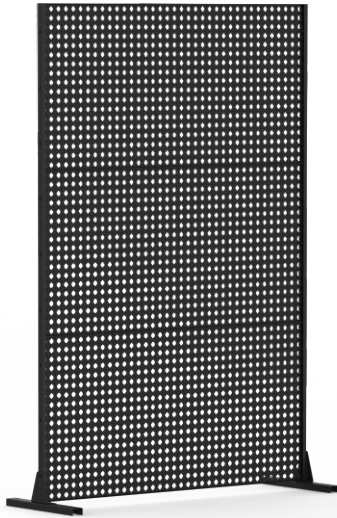


LNCF0557

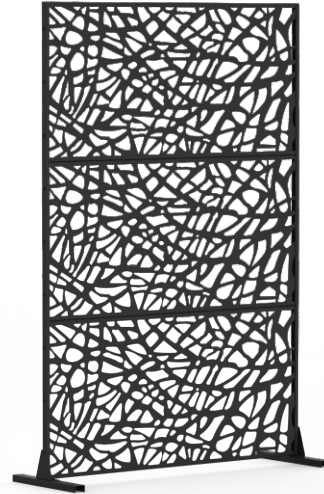


LNCF0558

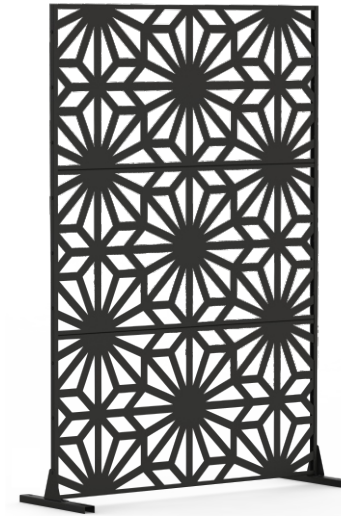


LNCF0559

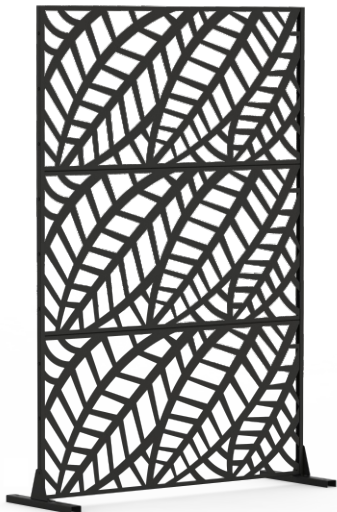

LNCF0560

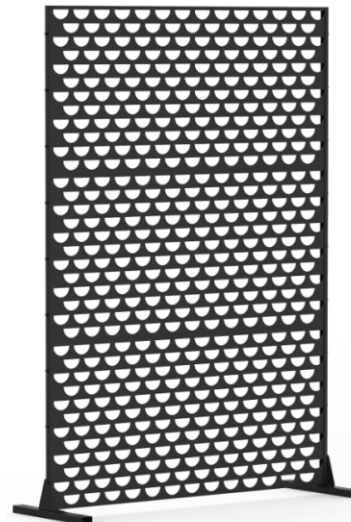

LNCF0552

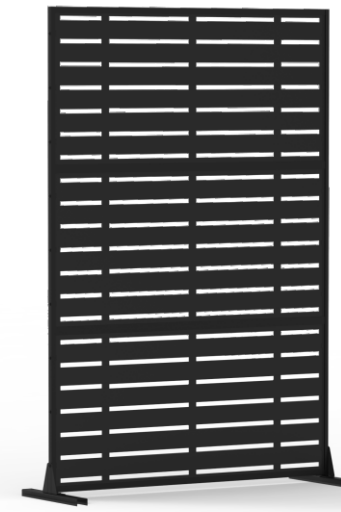

LNCN0591

RESORT COMFORT IN YOUR OWN BACKYARD

Support:



After-sales contact email:

service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.