




















Assembly Instructions

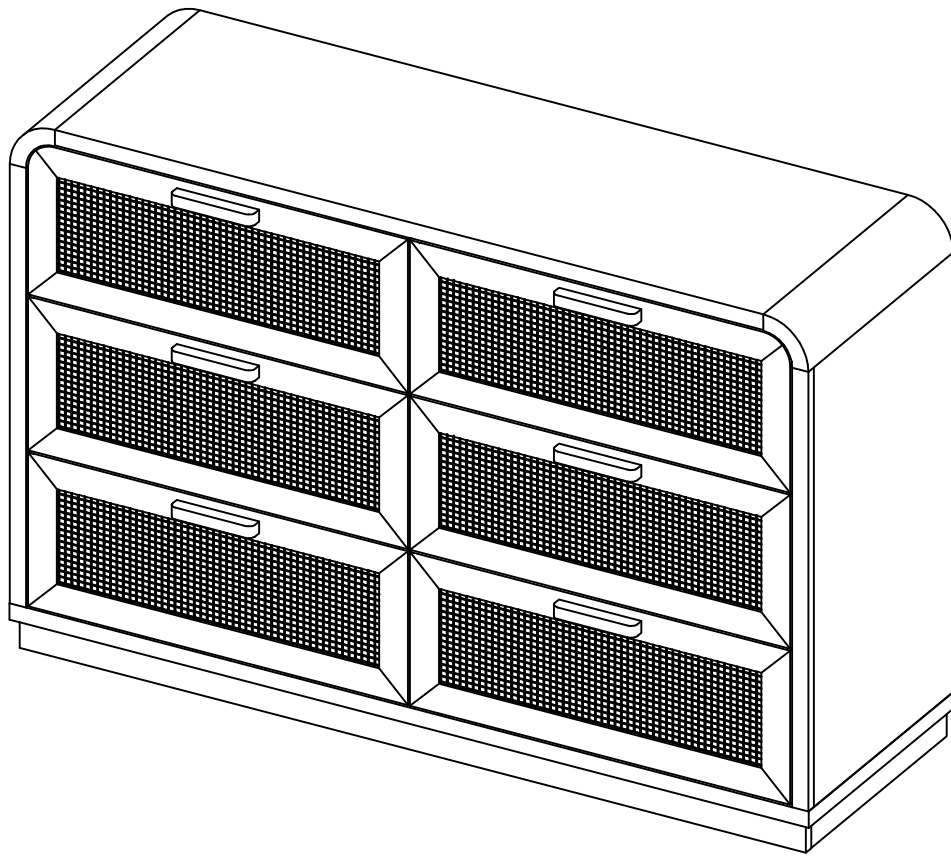




PART LIST

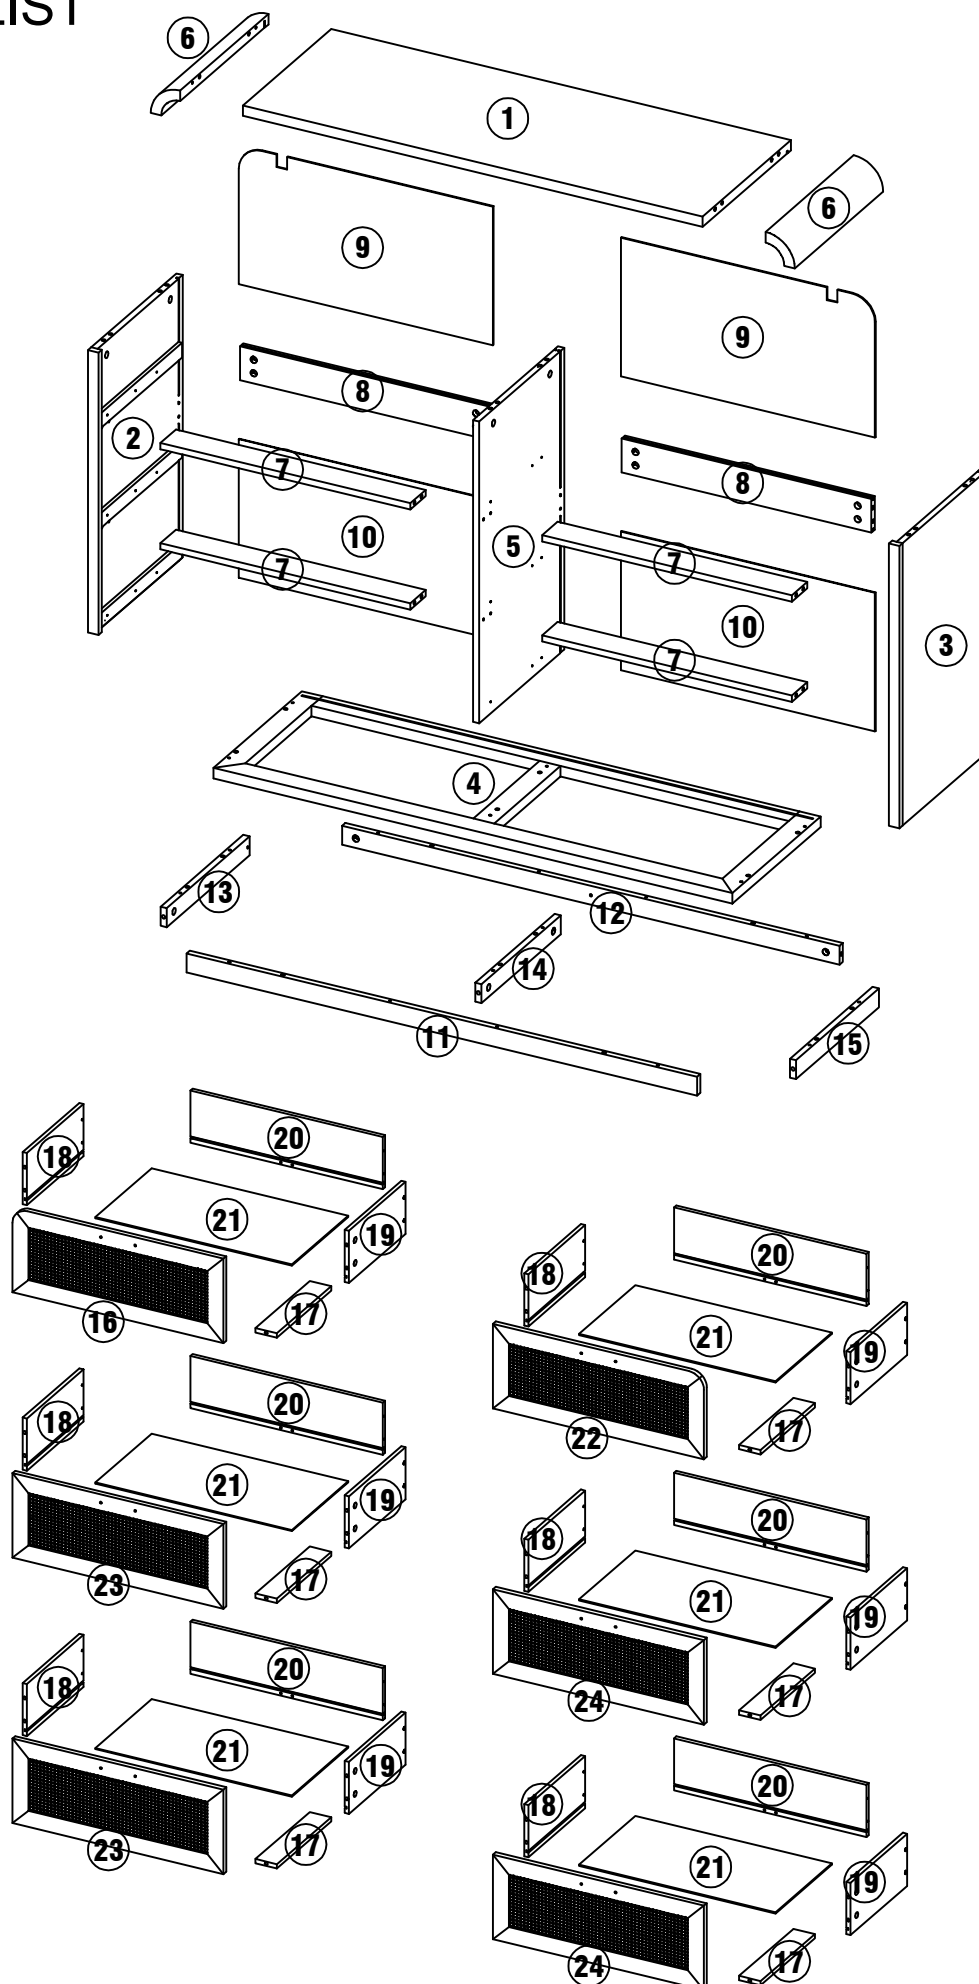








PART LIST

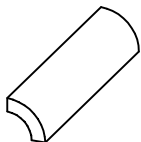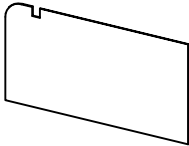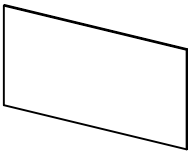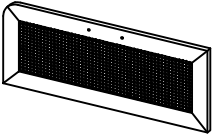
①  1 pc	②  1 pc	③  1 pc
④  1 pc	⑤  1 pc	⑥  2 pcs
⑦  4 pcs	⑧  2 pcs	⑨  2 pcs
⑩  2 pcs	⑪  1 pc	⑫  1 pc
⑬  1 pc	⑭  1 pc	⑮  1 pc
⑯  1 pc	⑰  6 pcs	⑱  6 pcs
⑲  6 pcs	⑳  6 pcs	㉑  6 pcs

PART LIST

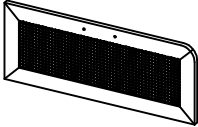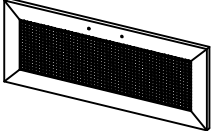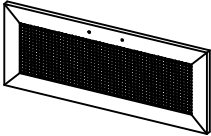22  1 pc	23  2 pcs	24  2 pcs
--	---	---

HARDWARE LIST

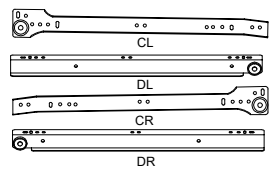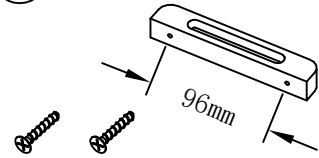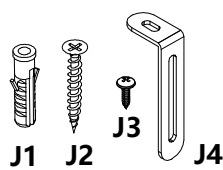
A X26+2  Ø8X30MM	B X70+2  Ø6X40MM	C X70+2  Ø15X10MM
D X72+2  Ø3X11MM	E X20+1  Ø4X50MM	F X6 
G X36+1  Ø4X35MM	H X12  Ø3X19MM	I X6  Ø4X30MM
J X2  J1 J2 J3 J4		




Bolt



Connecting piece

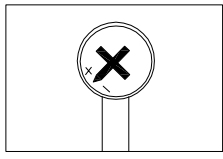


Adjust connecting piece direction until it is properly lined up with the hole.

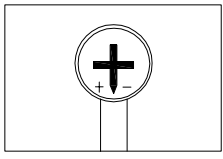


Insert bolt when connecting piece direction is properly lined up.


1.

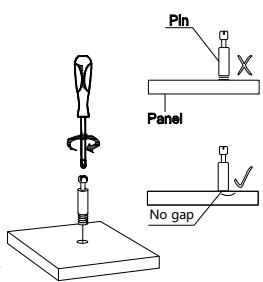


2.

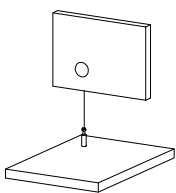



3.

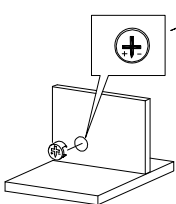

4.


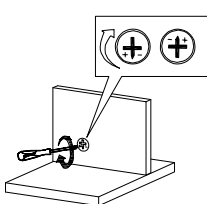


STEP 1

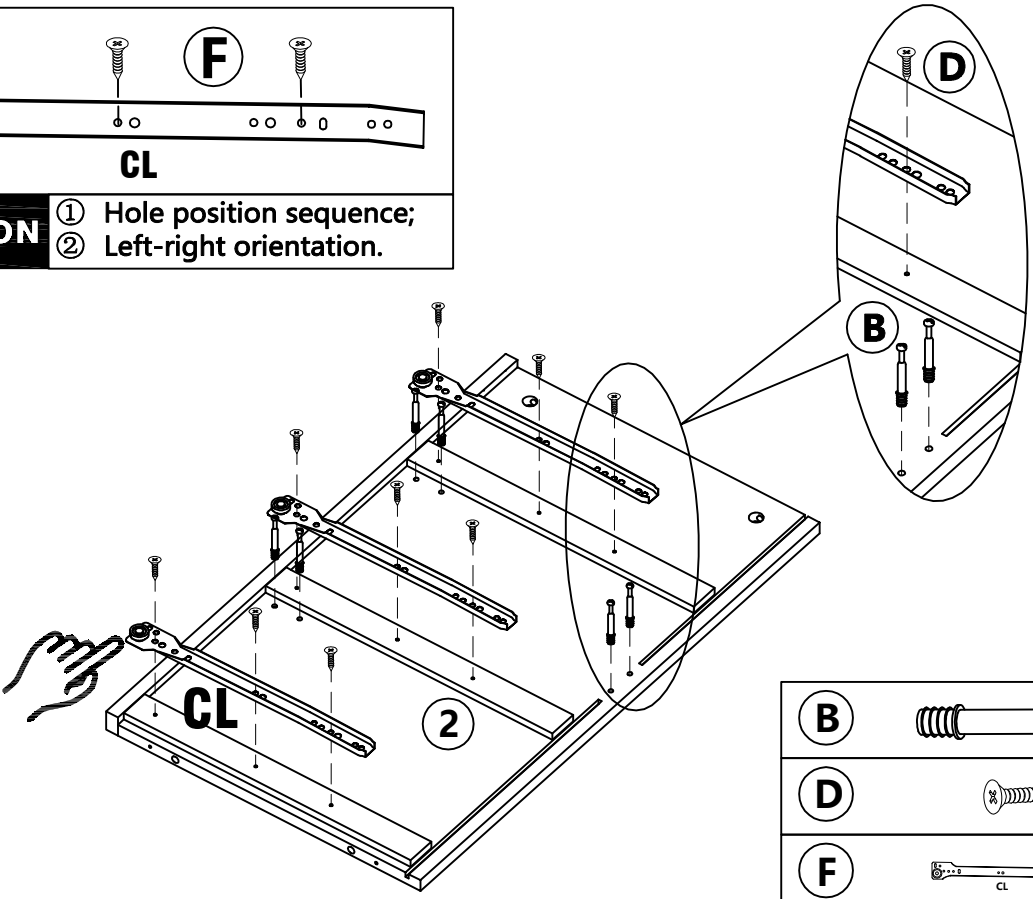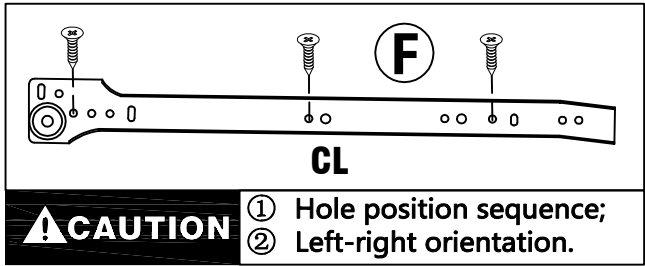



B		X6
D		X9
F		X3

STEP 2

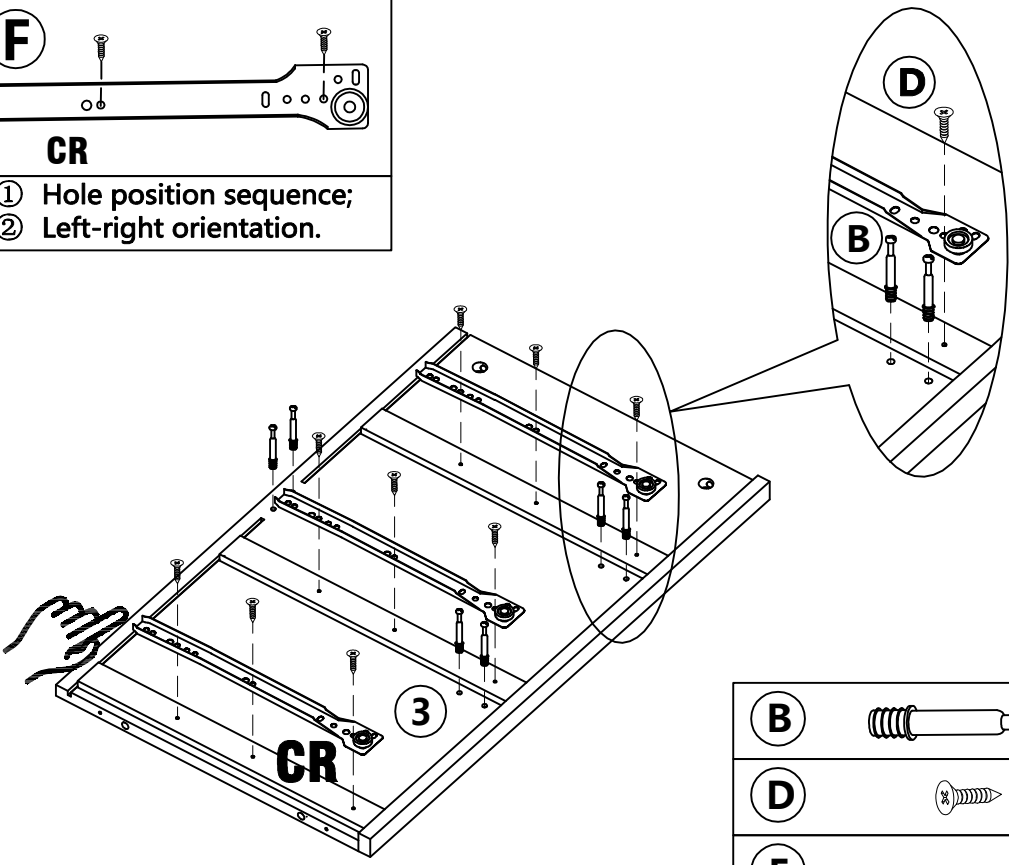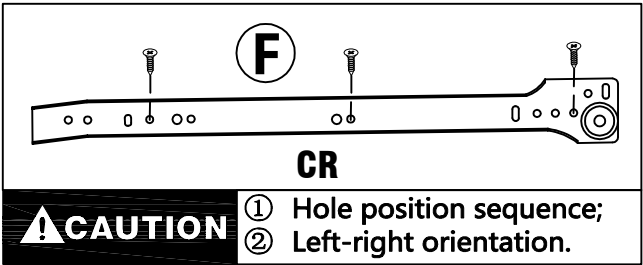




B		X6
D		X9
F		X3

STEP 3

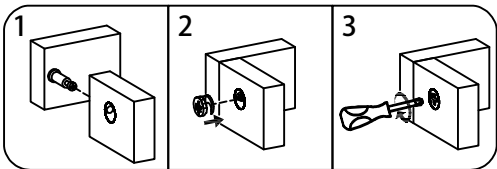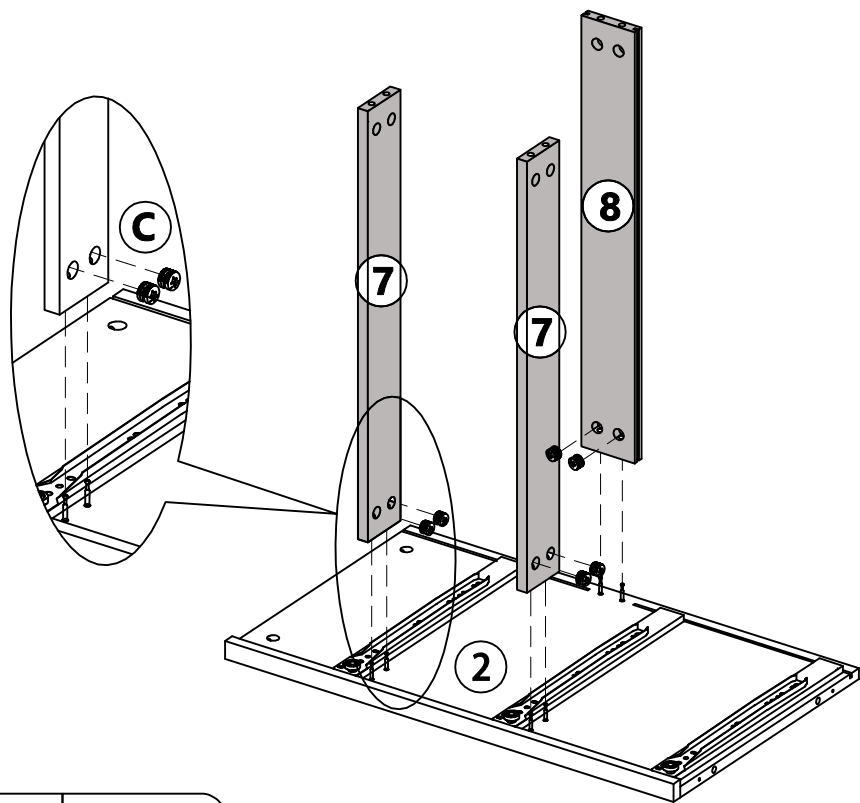



C		X6
---	--	----

STEP 4

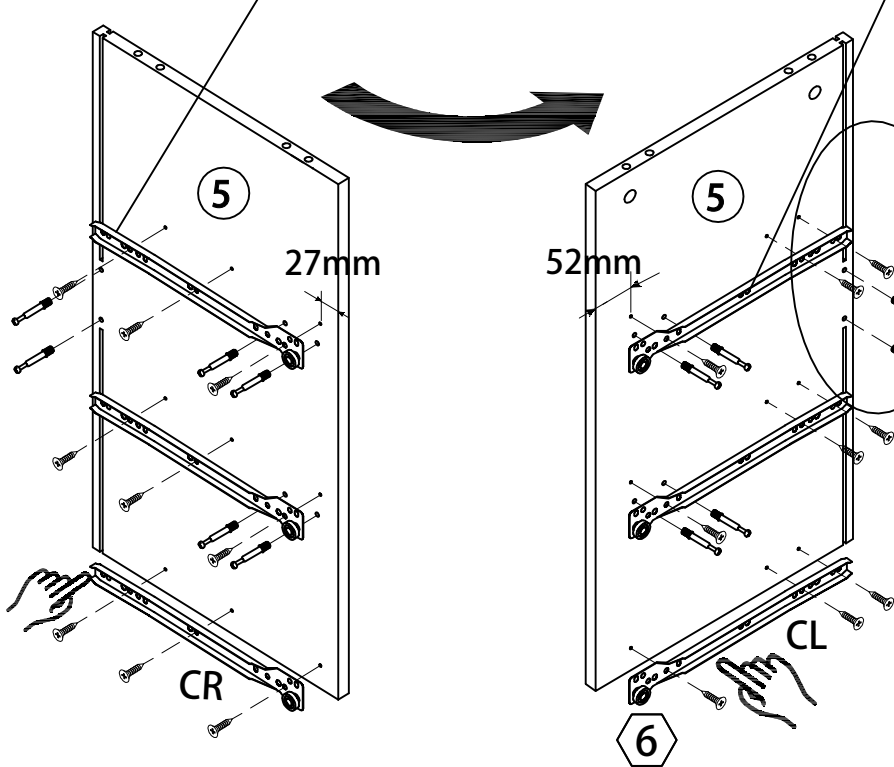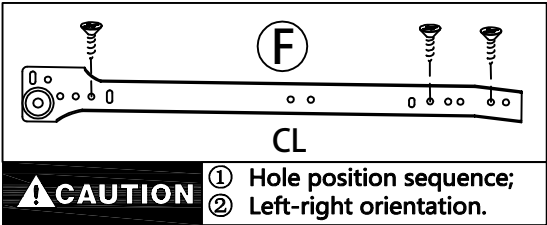
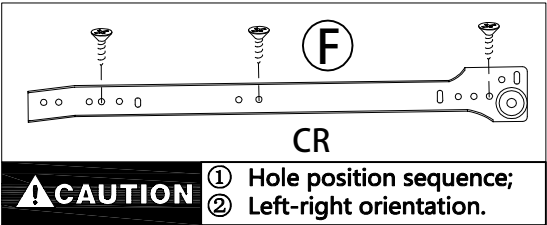


B		X12
D		X18
F		X3



STEP 5

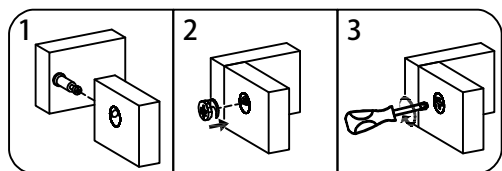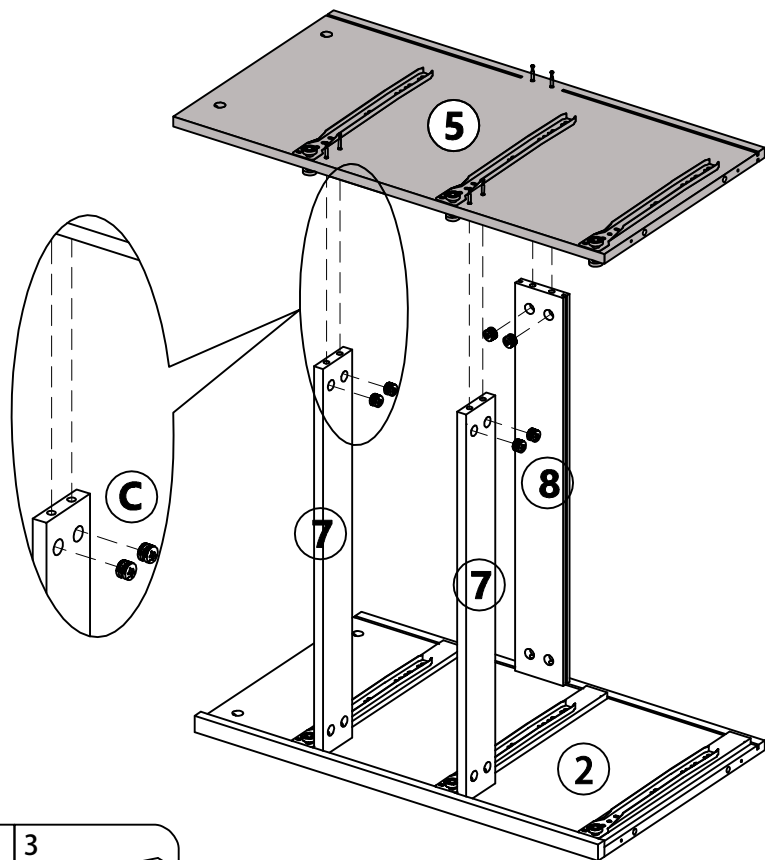


STEP 6

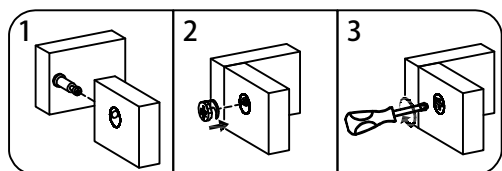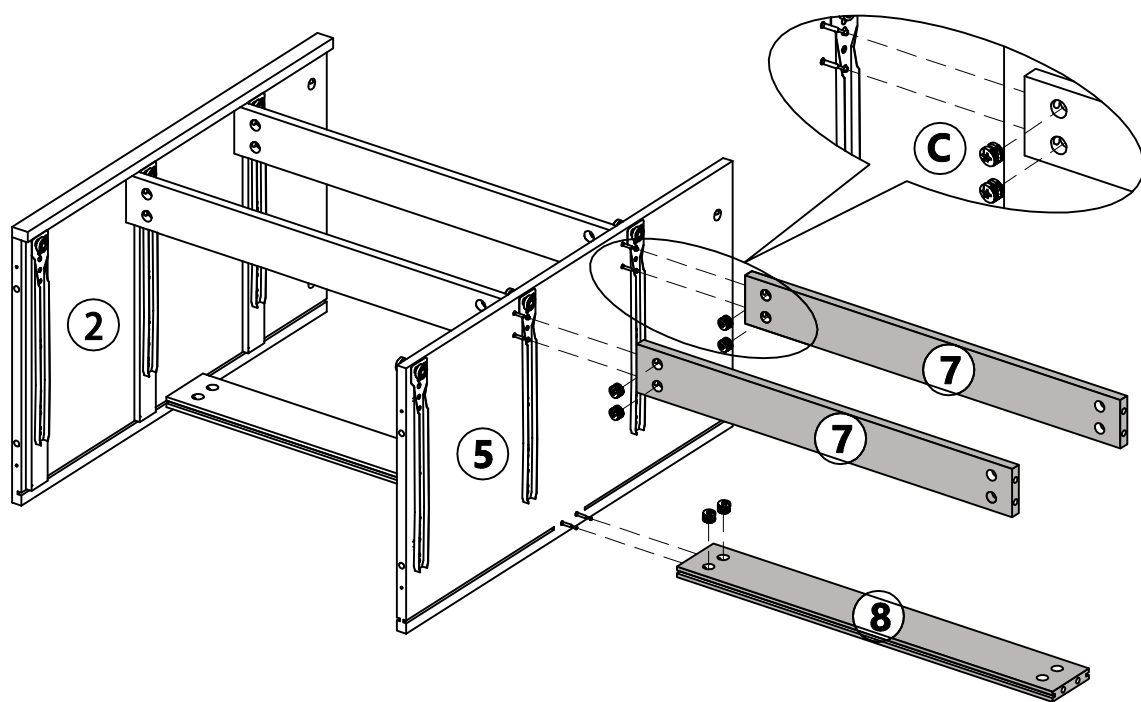


STEP 7

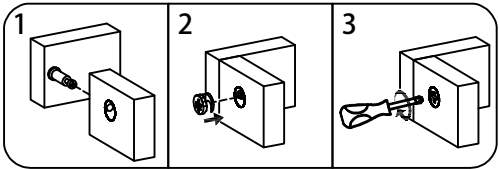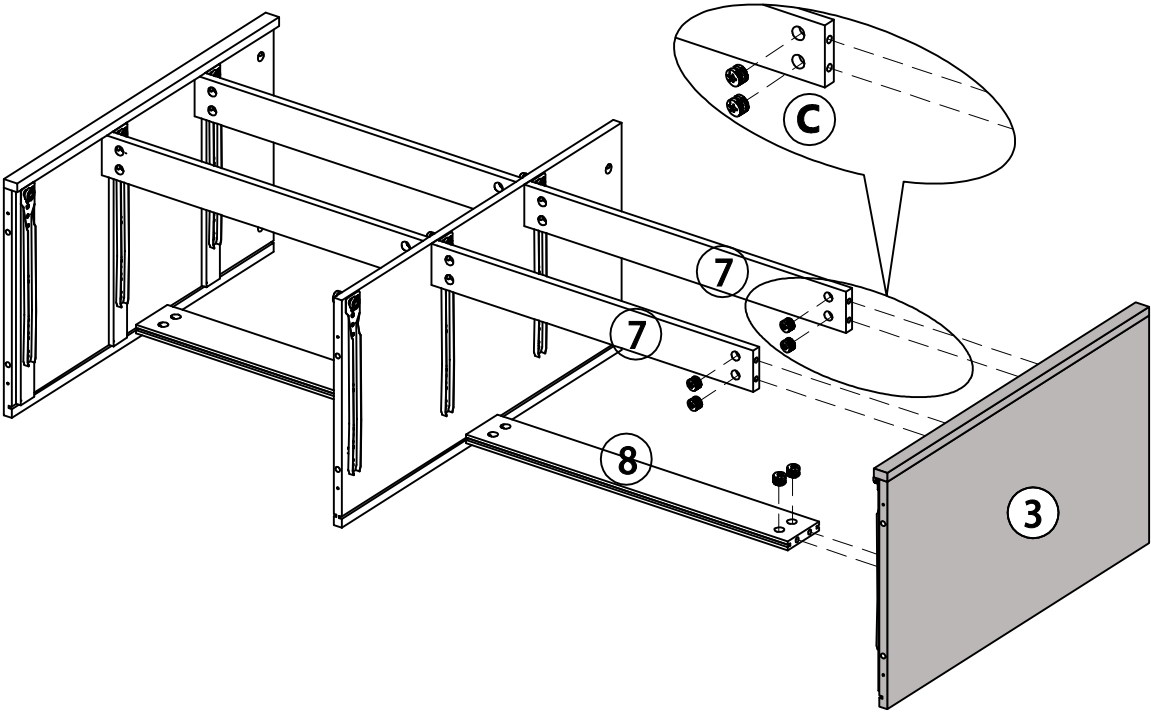


STEP 8

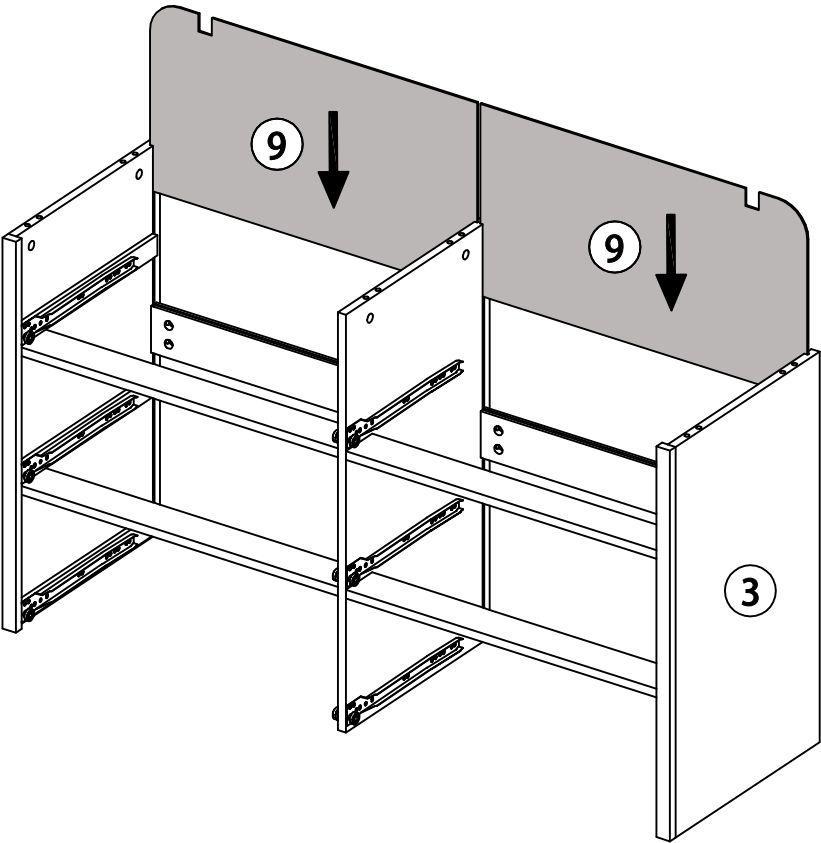

STEP 9



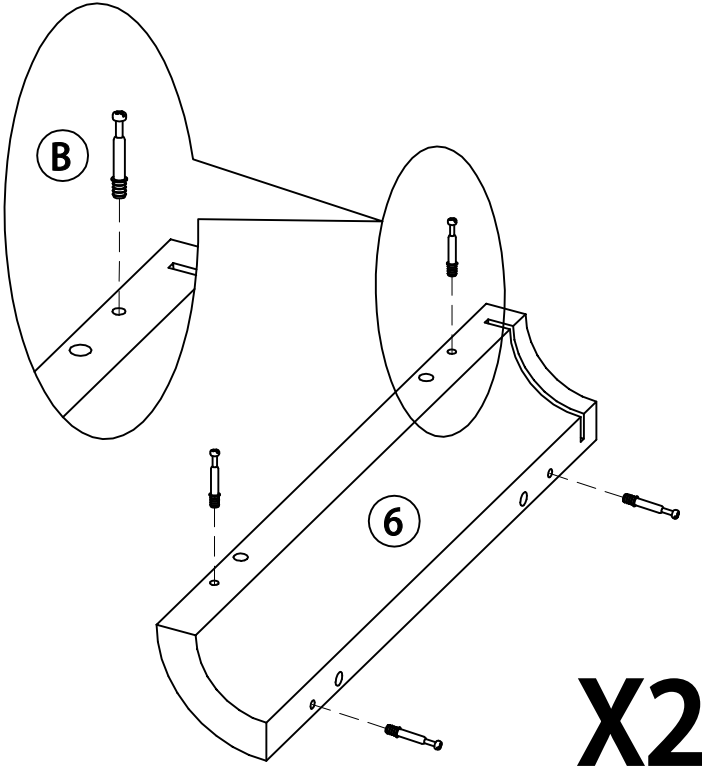



X2

B		X8
---	---	----



STEP 10


Note: Put the anti-tip device J4 on the top panel, near the back side, and fix it with a screw J3.

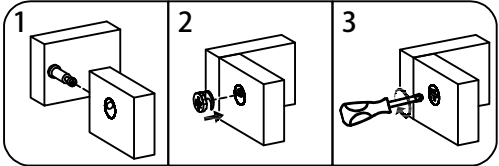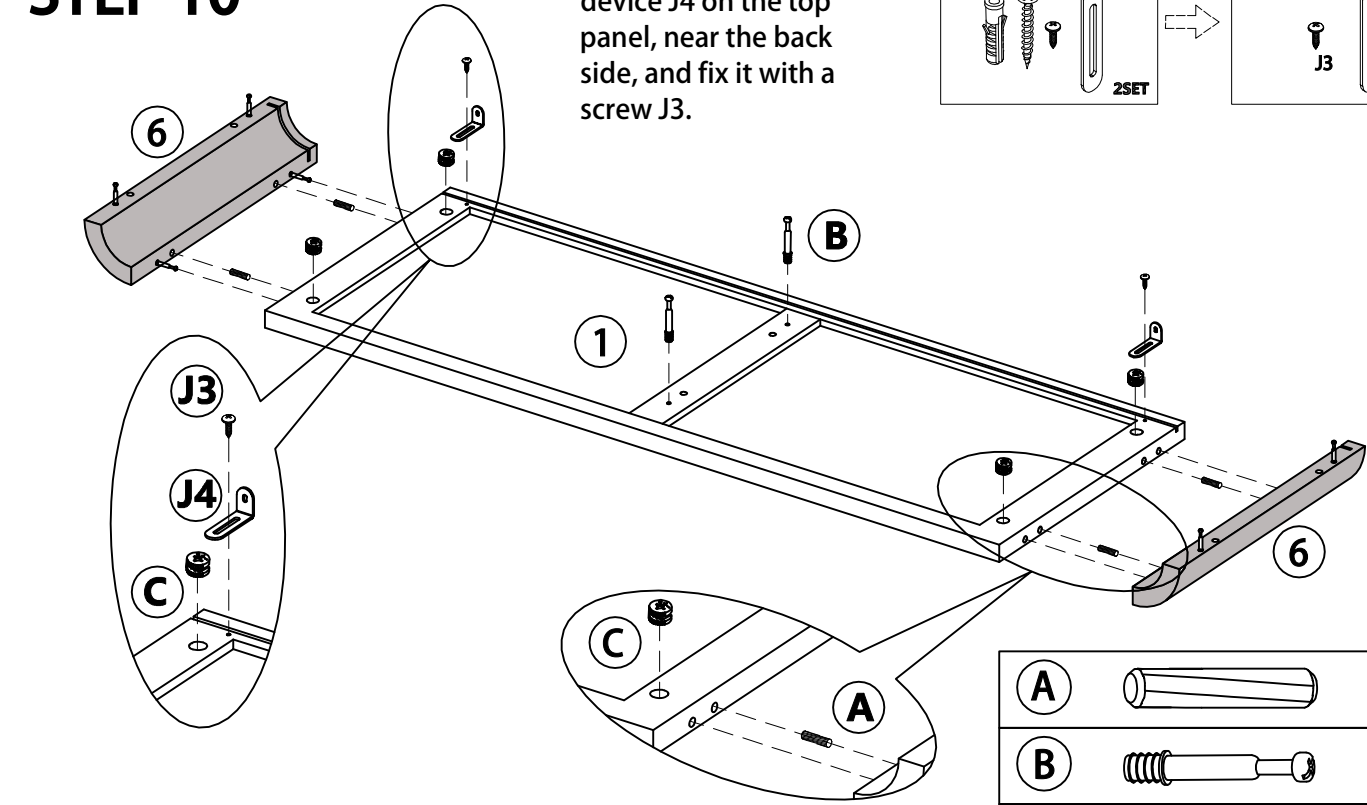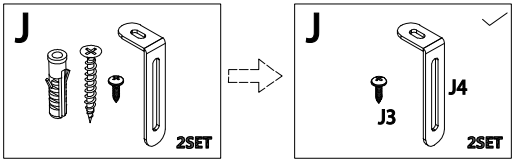


A		X4
B		X2
C		X4
J	J1  J2  J3  J4 	X2

STEP 11

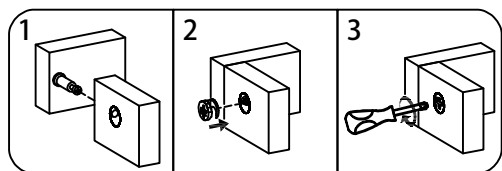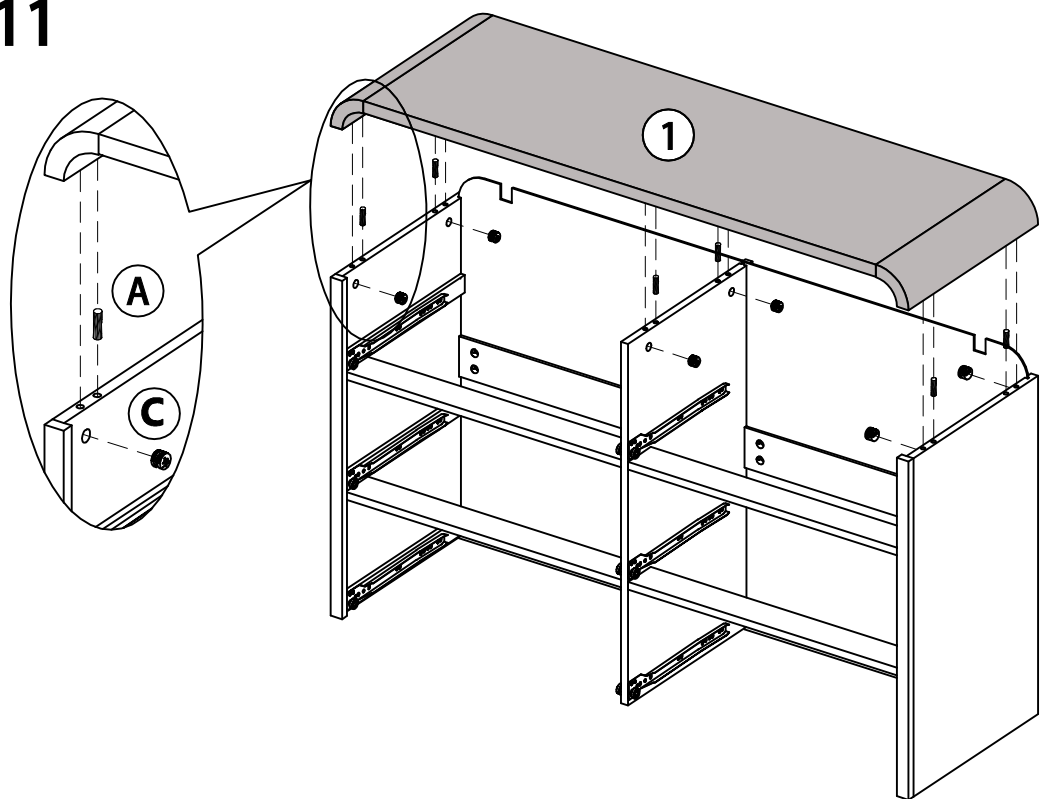


A		X6
C		X6

STEP 12

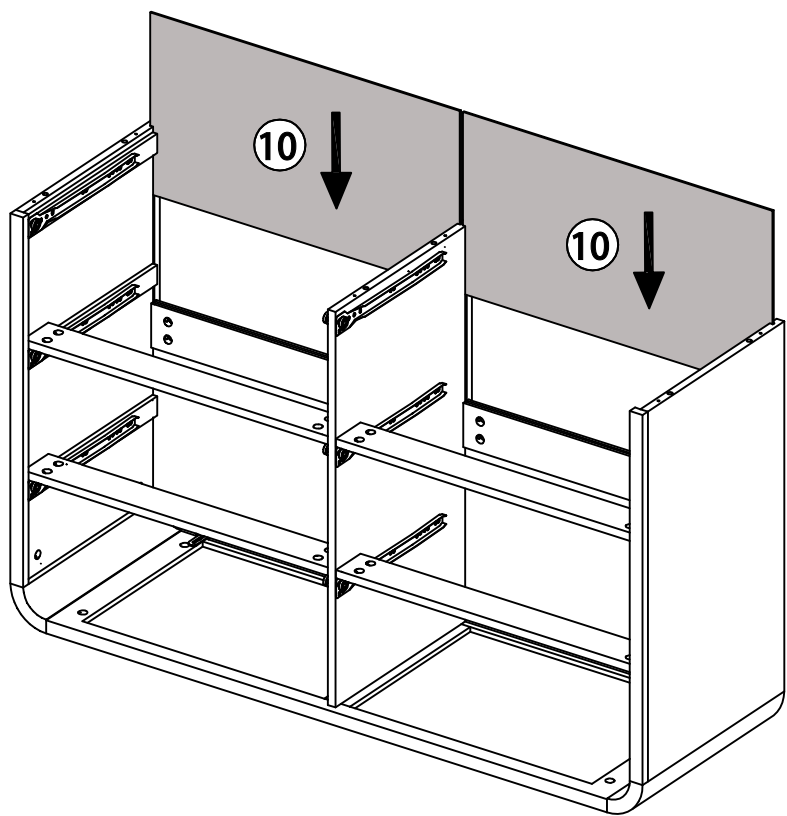


STEP 13

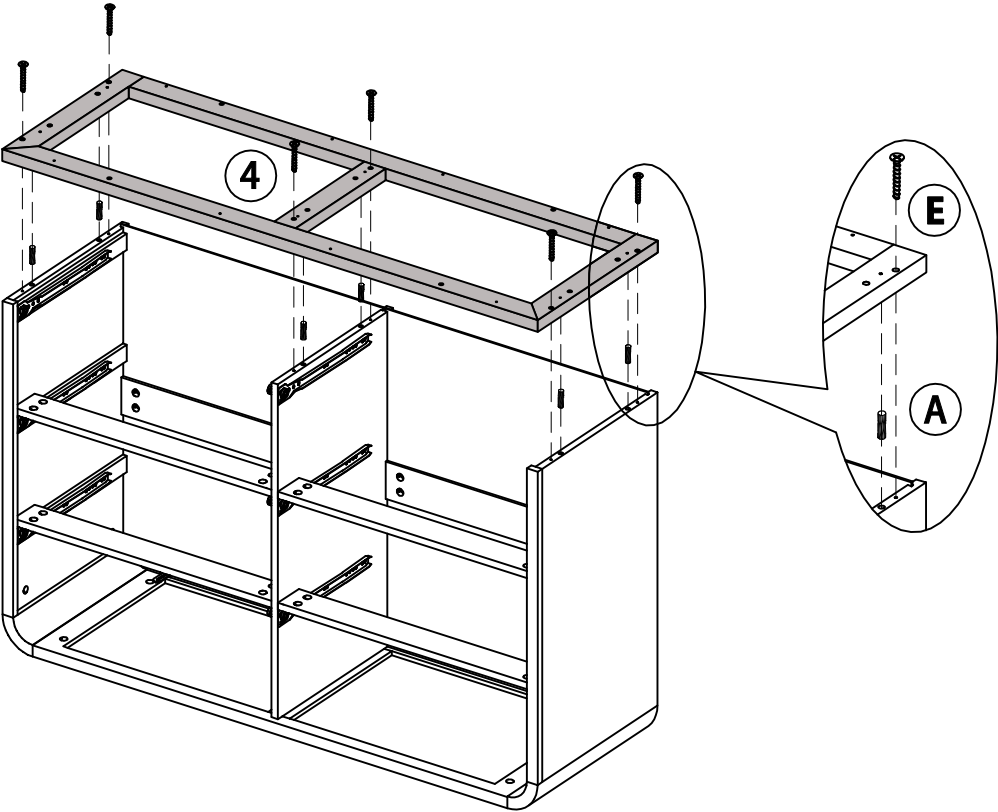

A		X6
E		X6



STEP 14

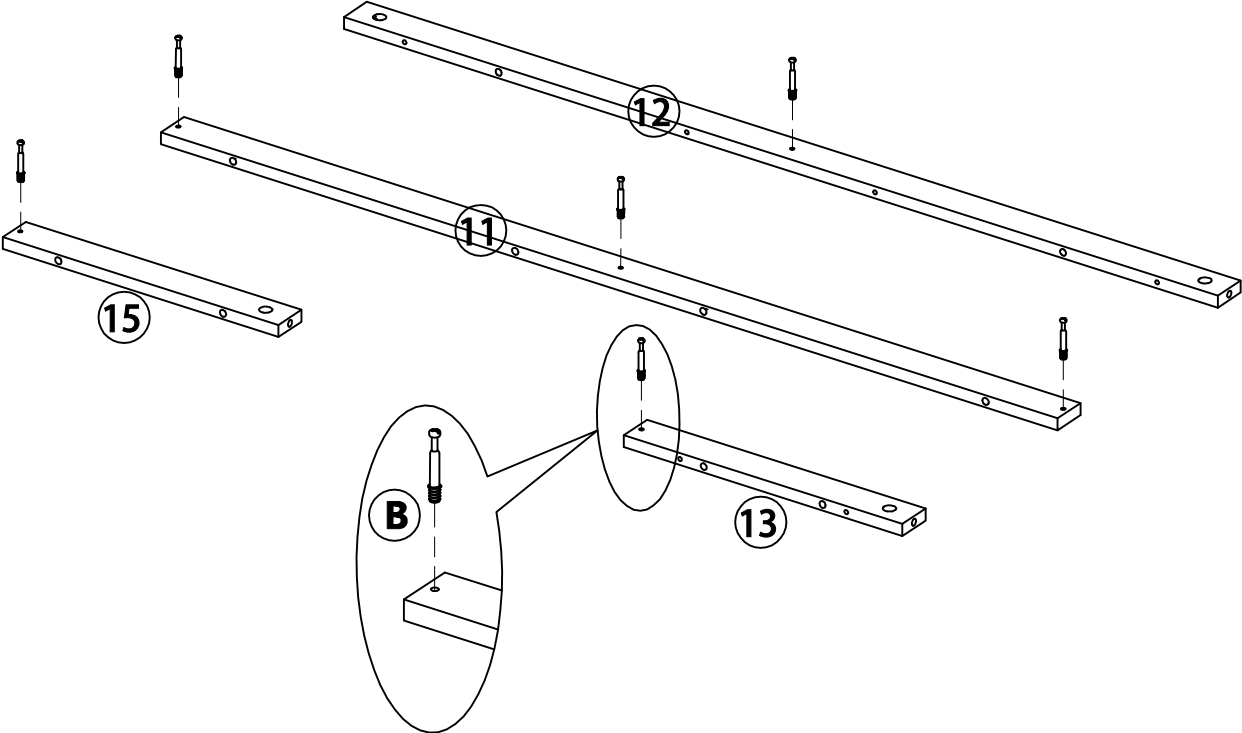



B		X6
----------	--	-----------

11


STEP 15

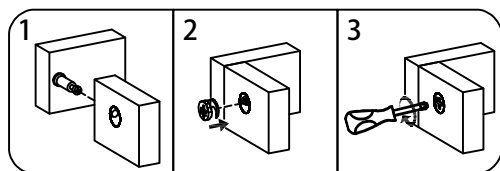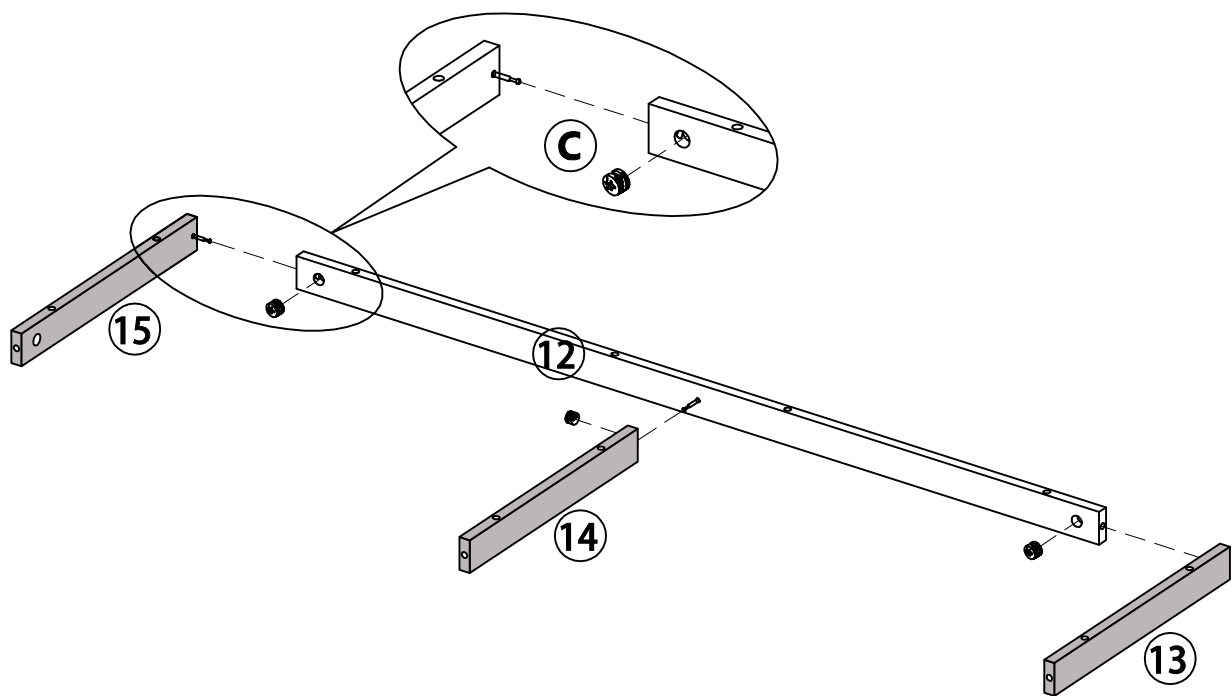

STEP 16

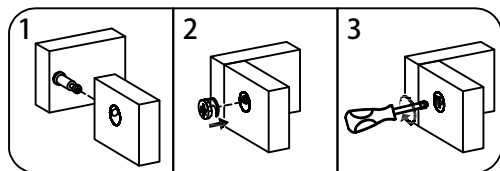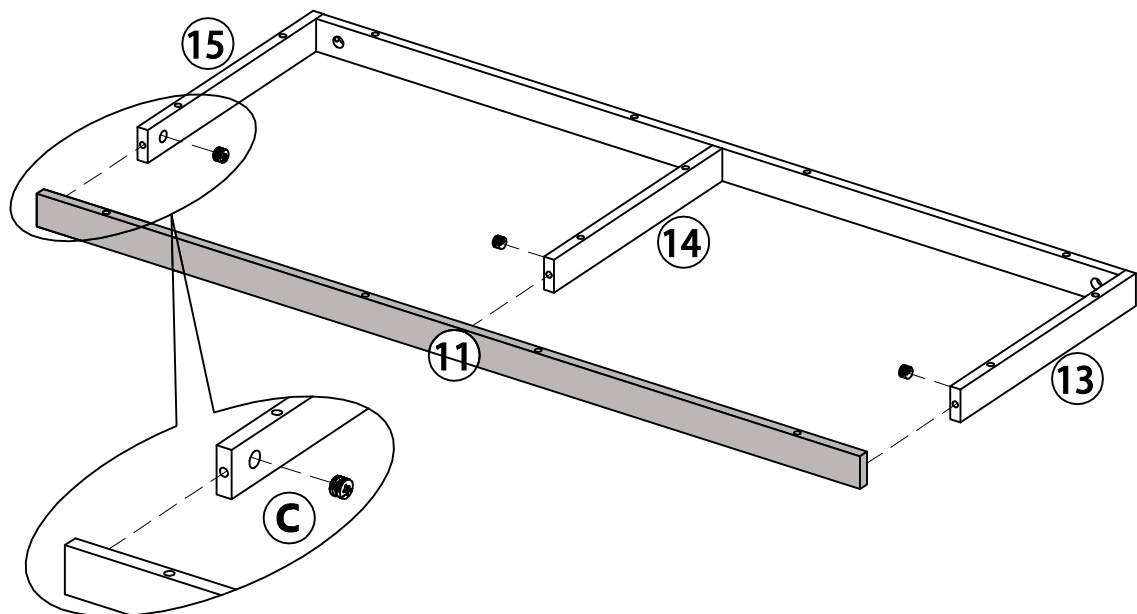


STEP 17


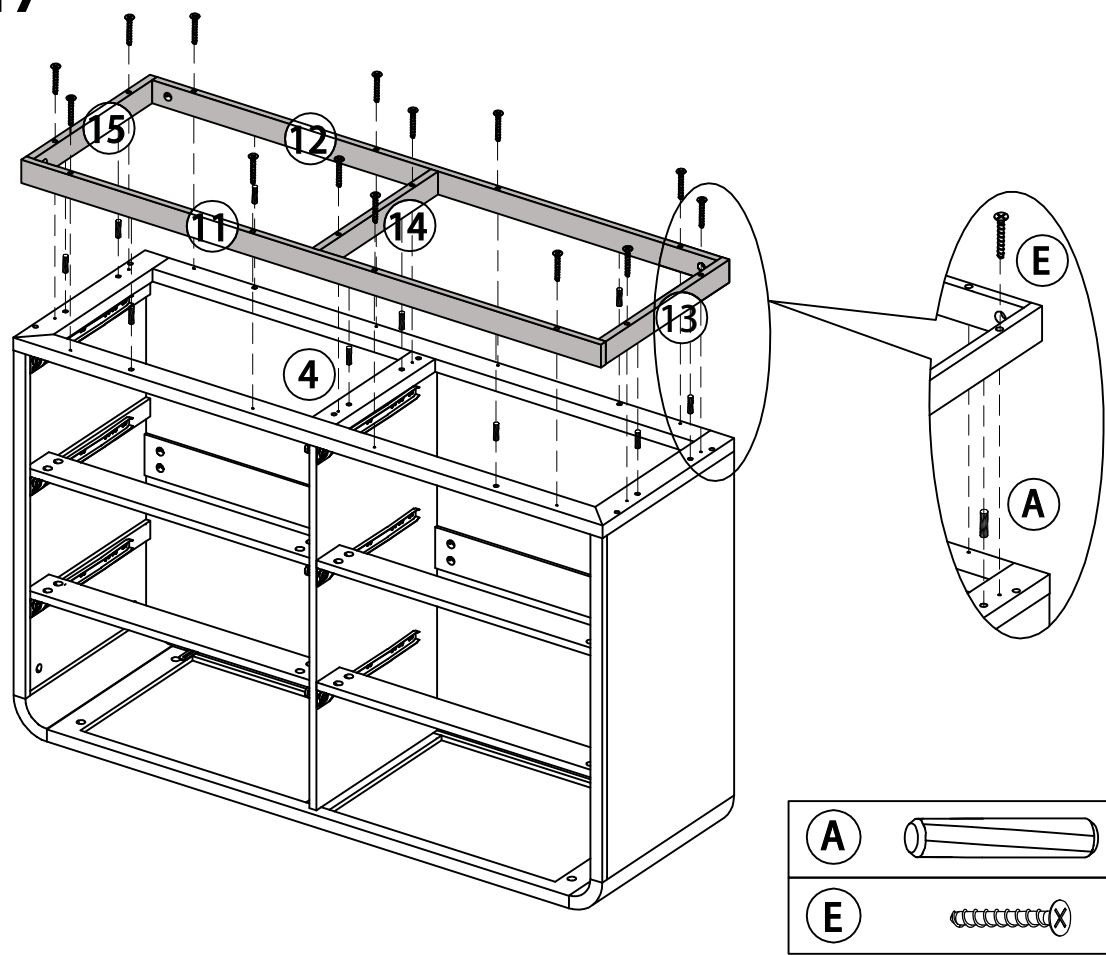


STEP 18



Please be sure to install the mending wedges to prevent the product from becoming unstable or wobbling.

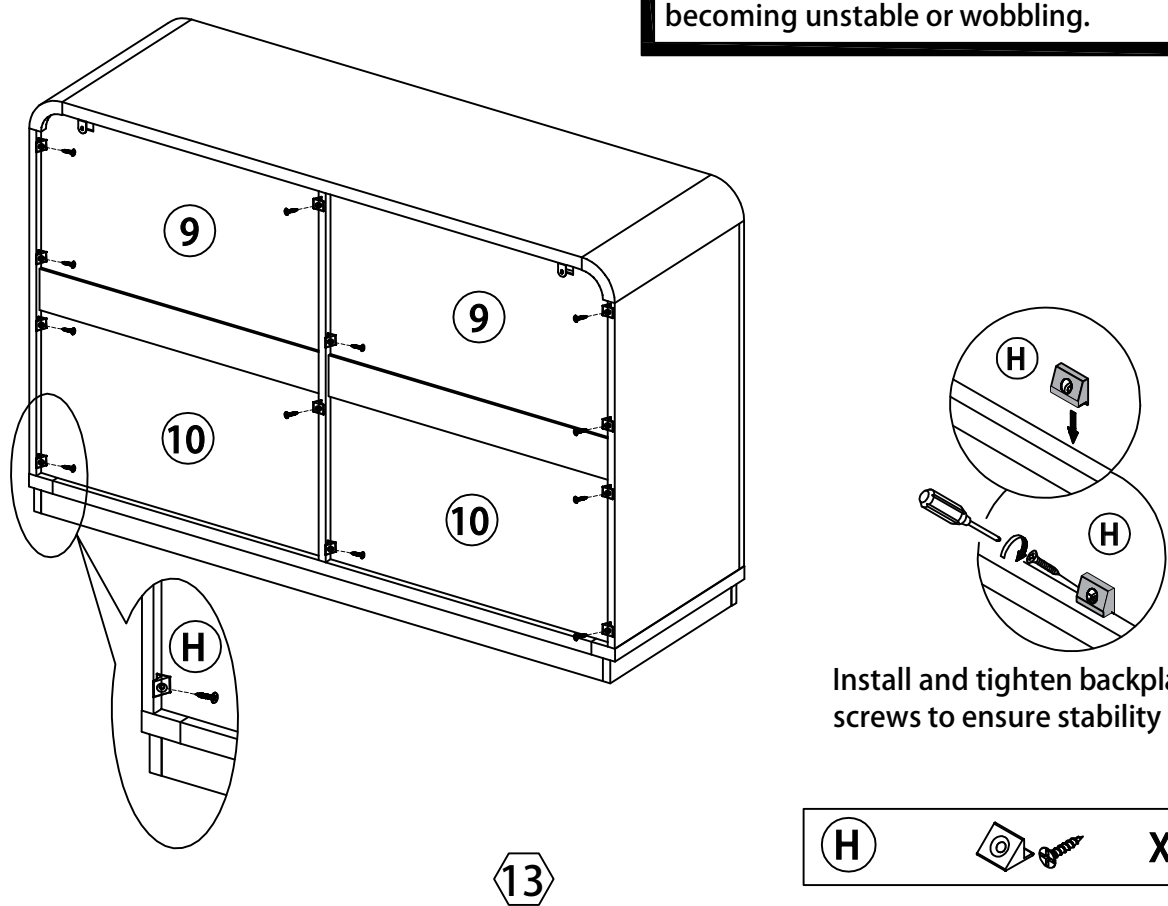


STEP 19

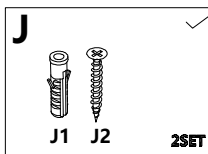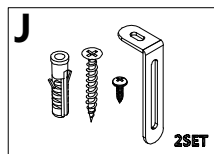





Drill a hole in the wall , then hammer the J1 into the wall with a hammer

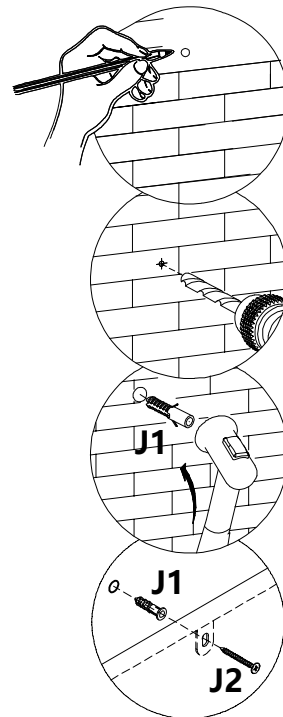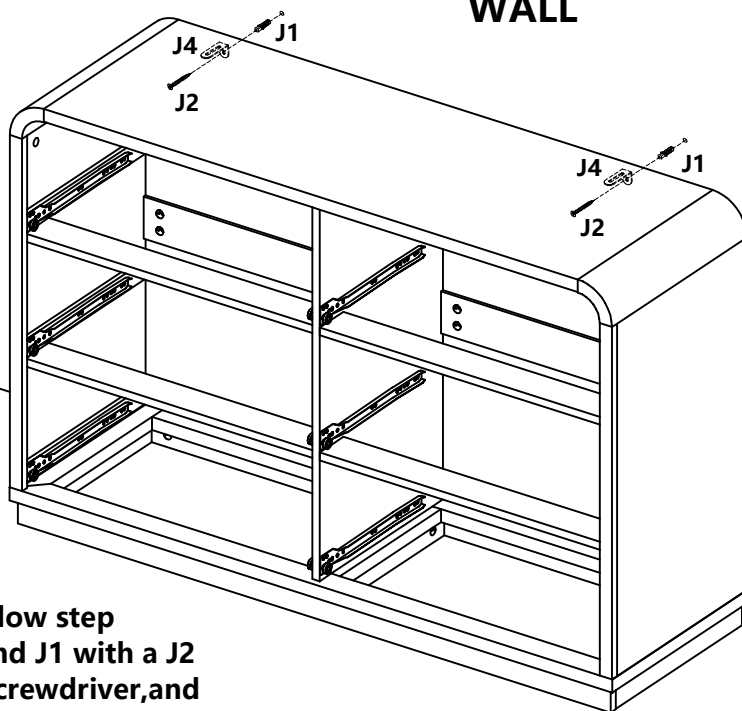


Note: Follow step Link J4 and J1 with a J2 using a screwdriver, and assembly it tightly.




STEP 20

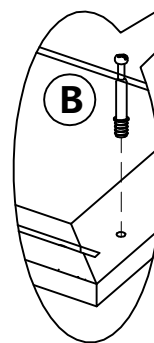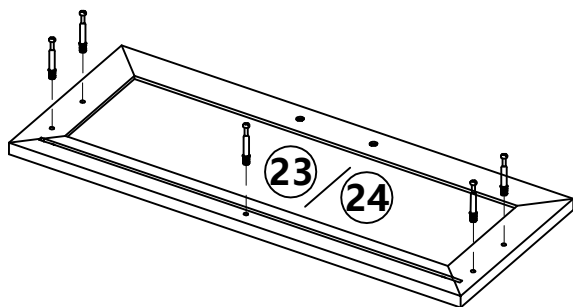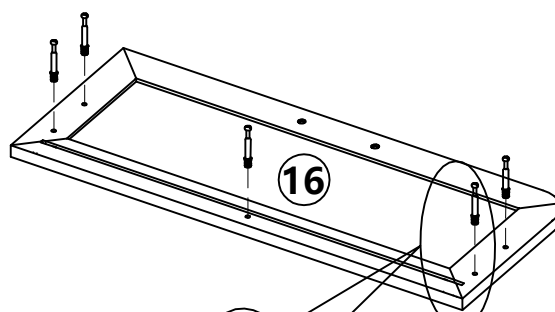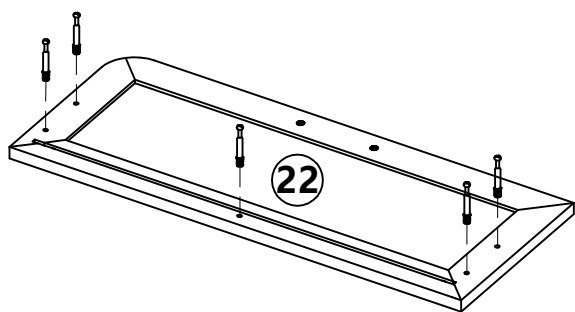


X4




STEP 21

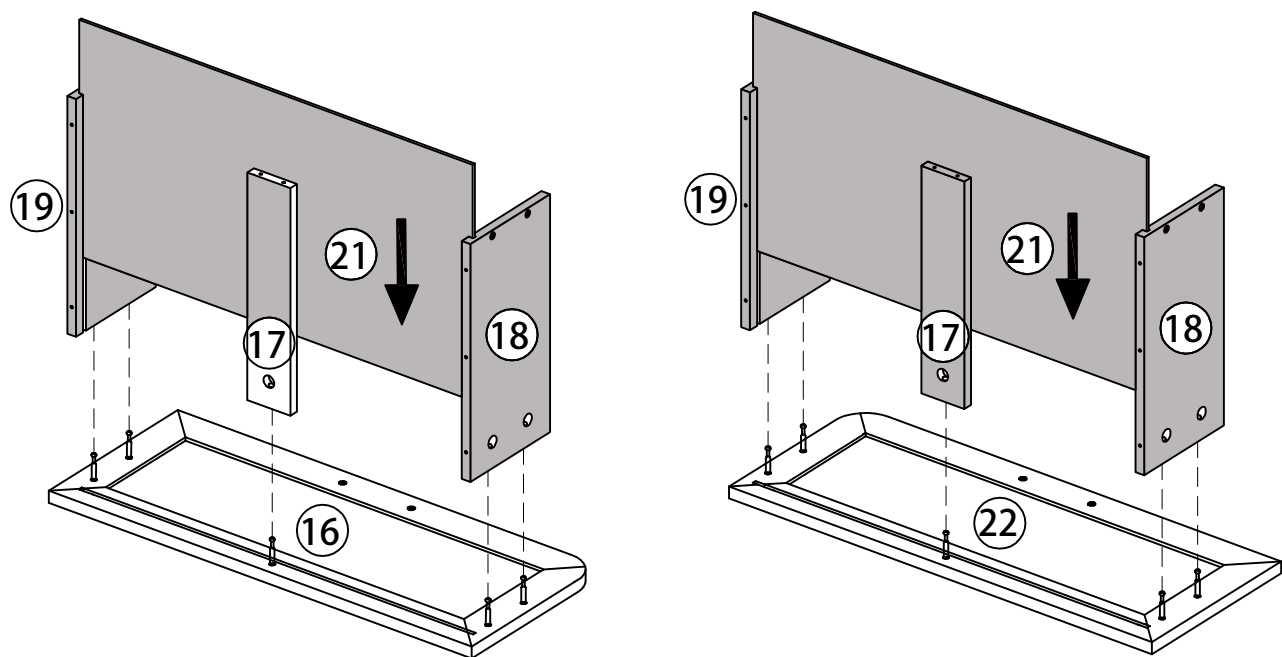

STEP 22

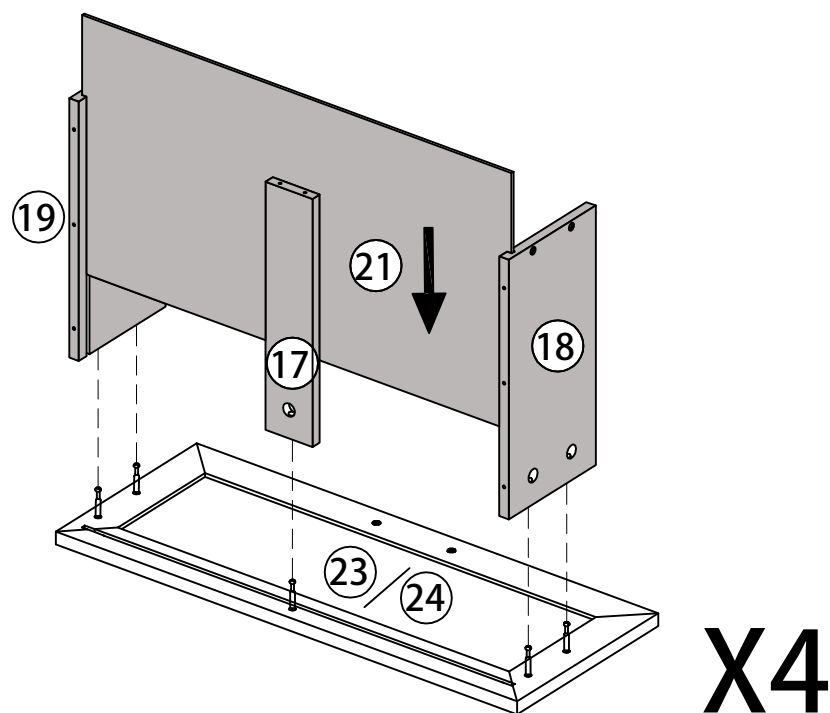


STEP 23

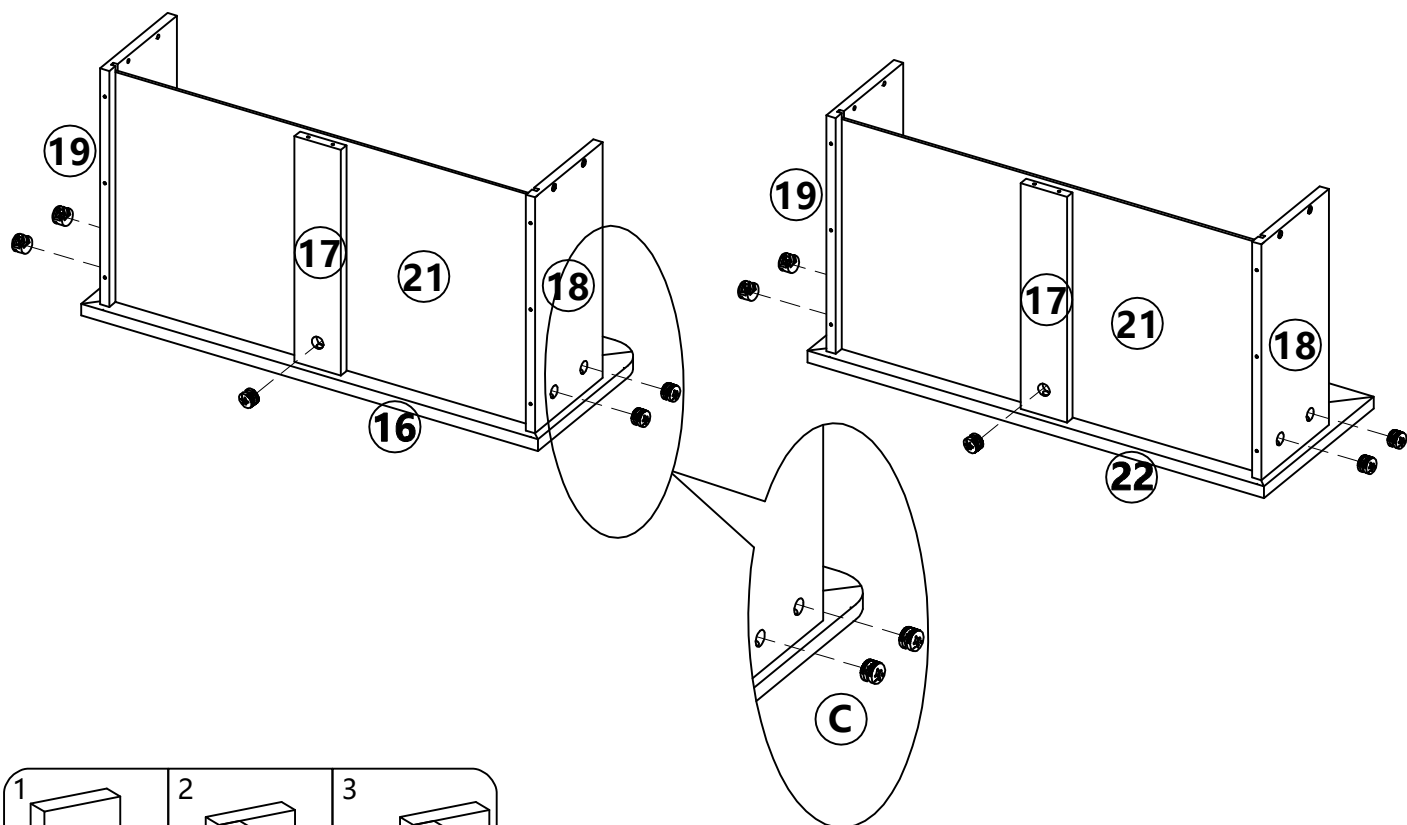


(C)  X10

STEP 24

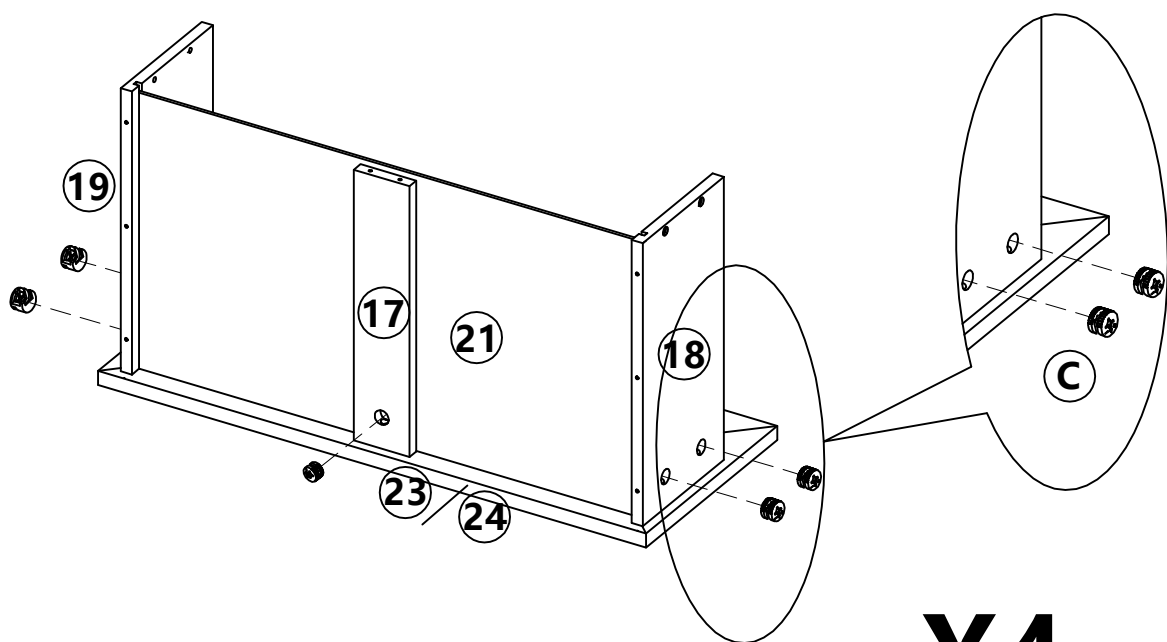


X4

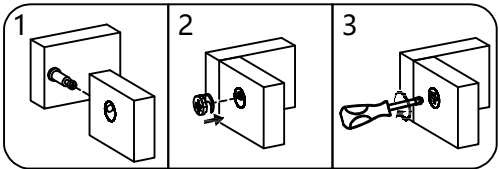


(C)  X20

STEP 25

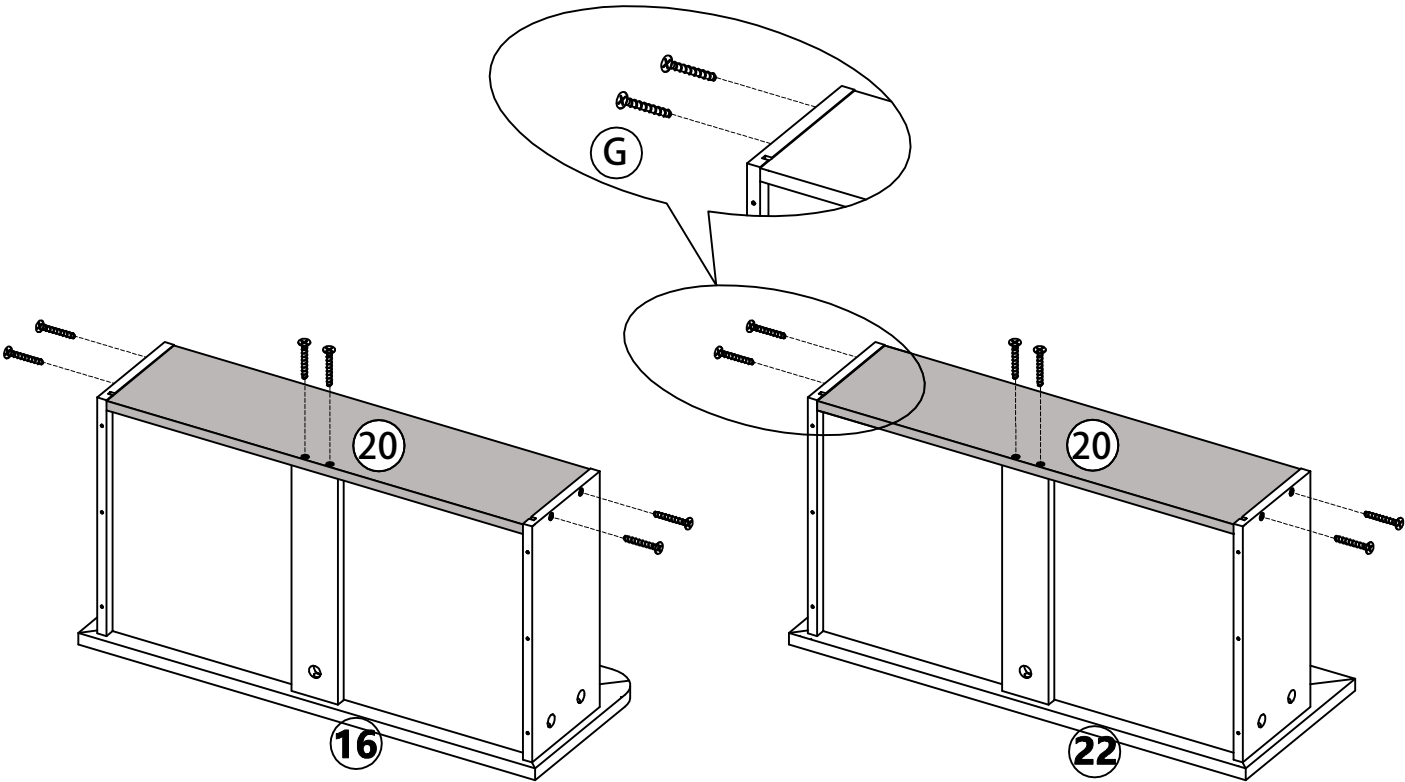

(G)  X12


STEP 26

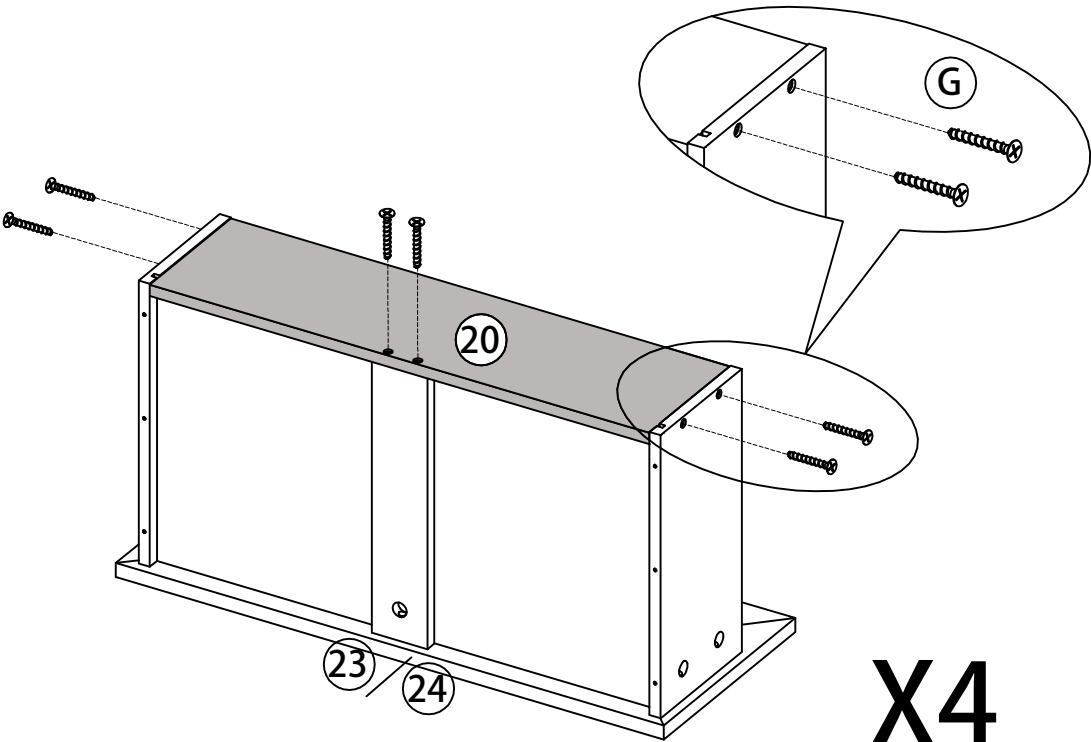


X4

(G)  X24



STEP 27

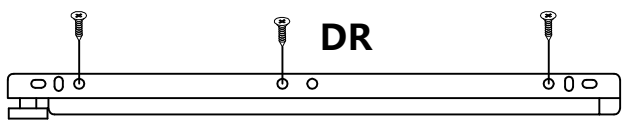

! CAUTION ① Hole position sequence;
② Left-right orientation.

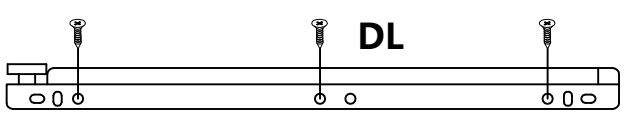


! CAUTION ① Hole position sequence;
② Left-right orientation.

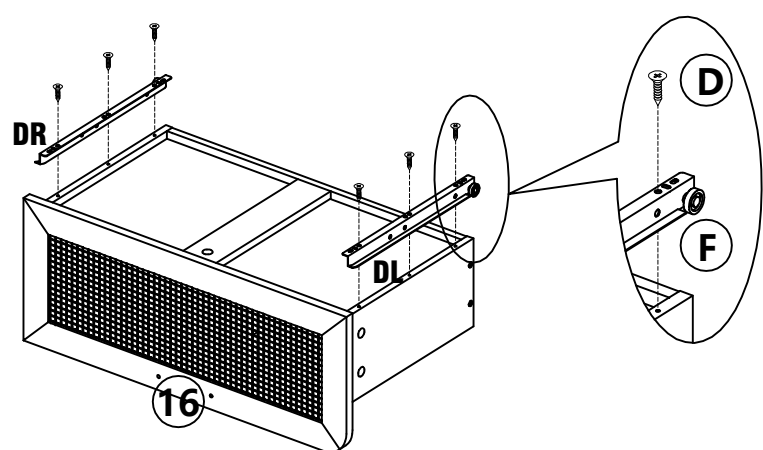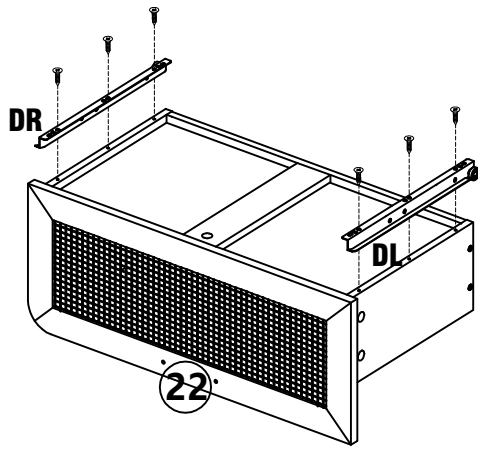


(D)		X12
(F)		X2


STEP 28

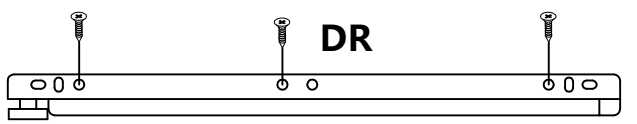


! CAUTION ① Hole position sequence;
② Left-right orientation.

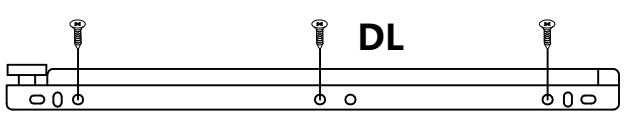


! CAUTION ① Hole position sequence;
② Left-right orientation.

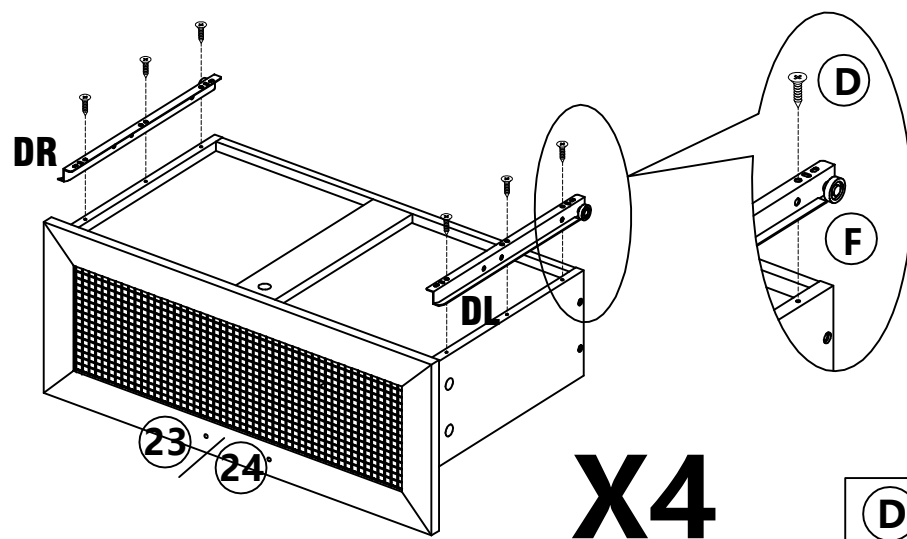


X4

(D)		X24
(F)		X4


STEP 29

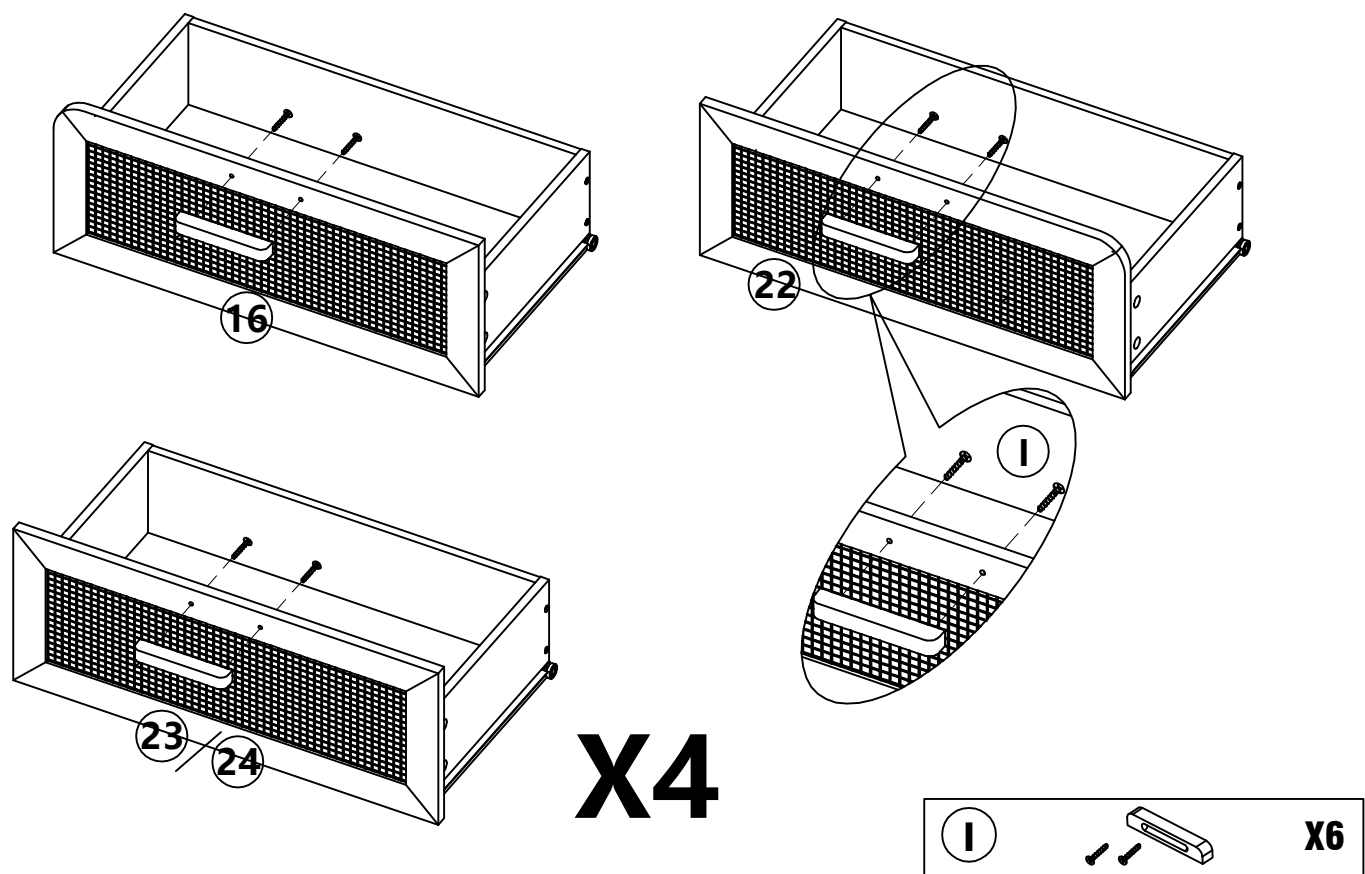

STEP 30

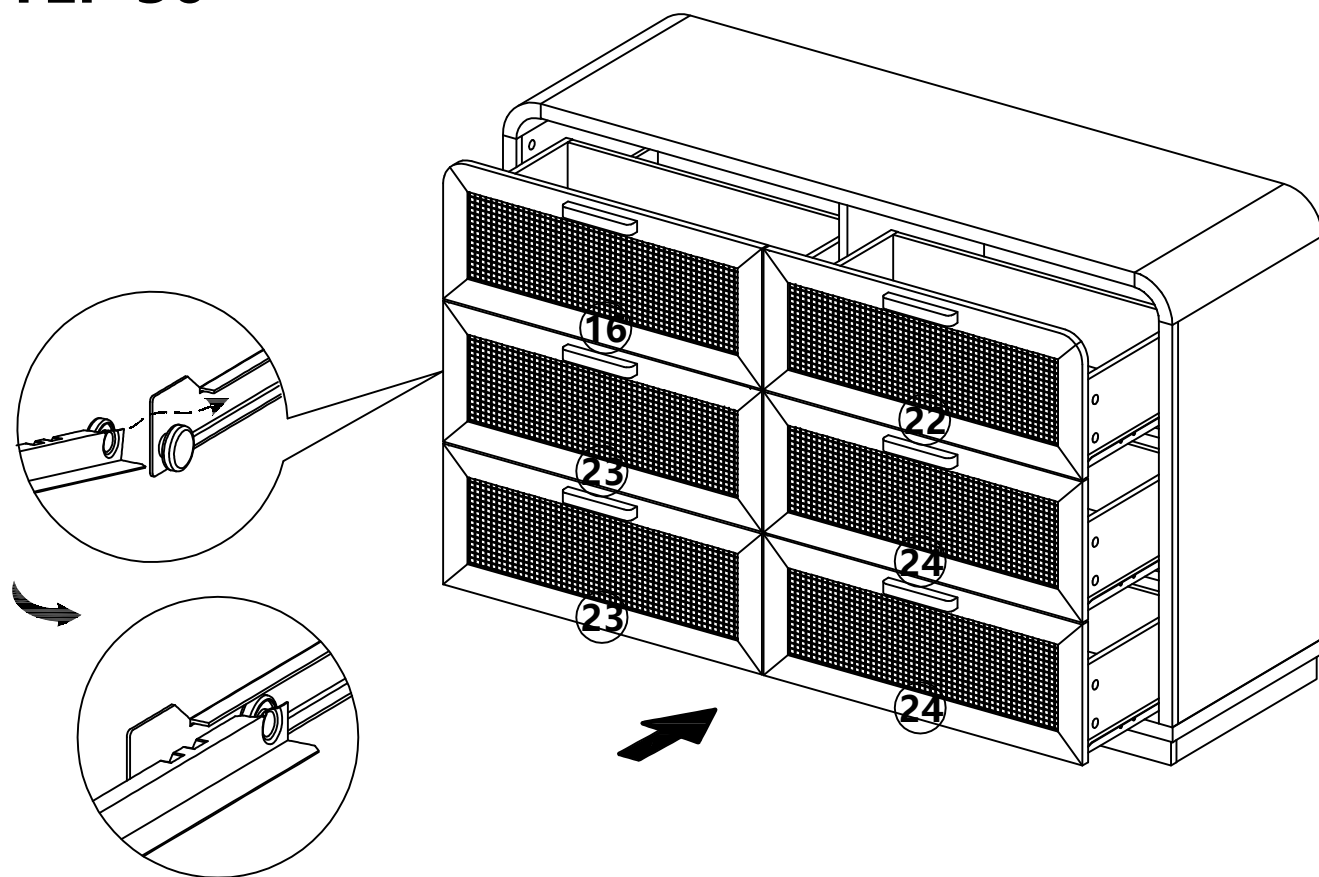

STEP 31

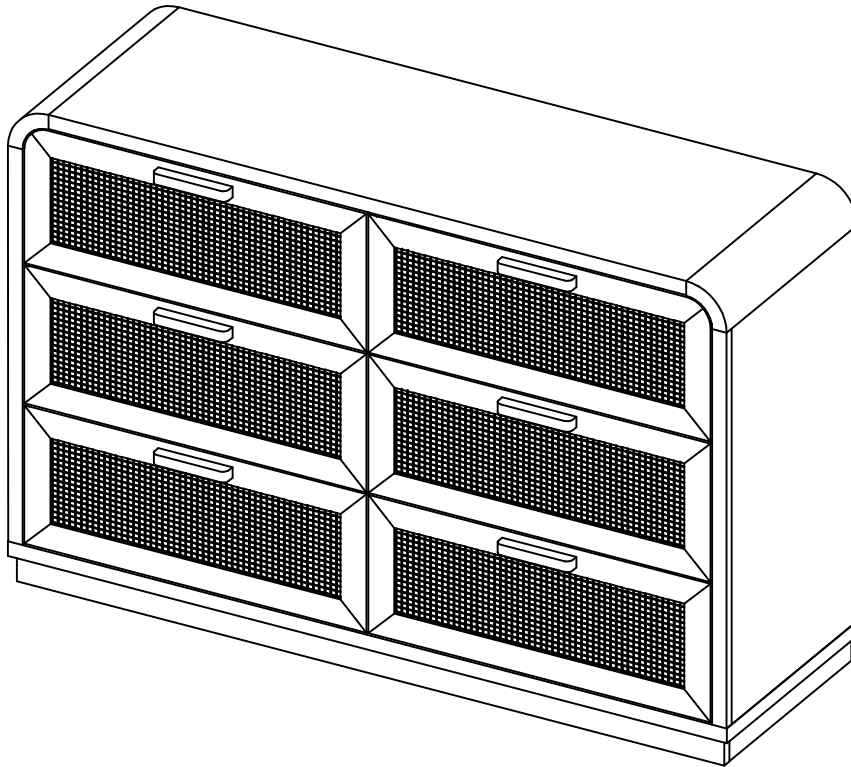

⚠ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover:
	• ALWAYS install anti-tip device provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on any drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
<i>this is a permanent label. Do not remove!</i>	