


Home Office Desk

Instruction Manual

BZ-B01-71IN

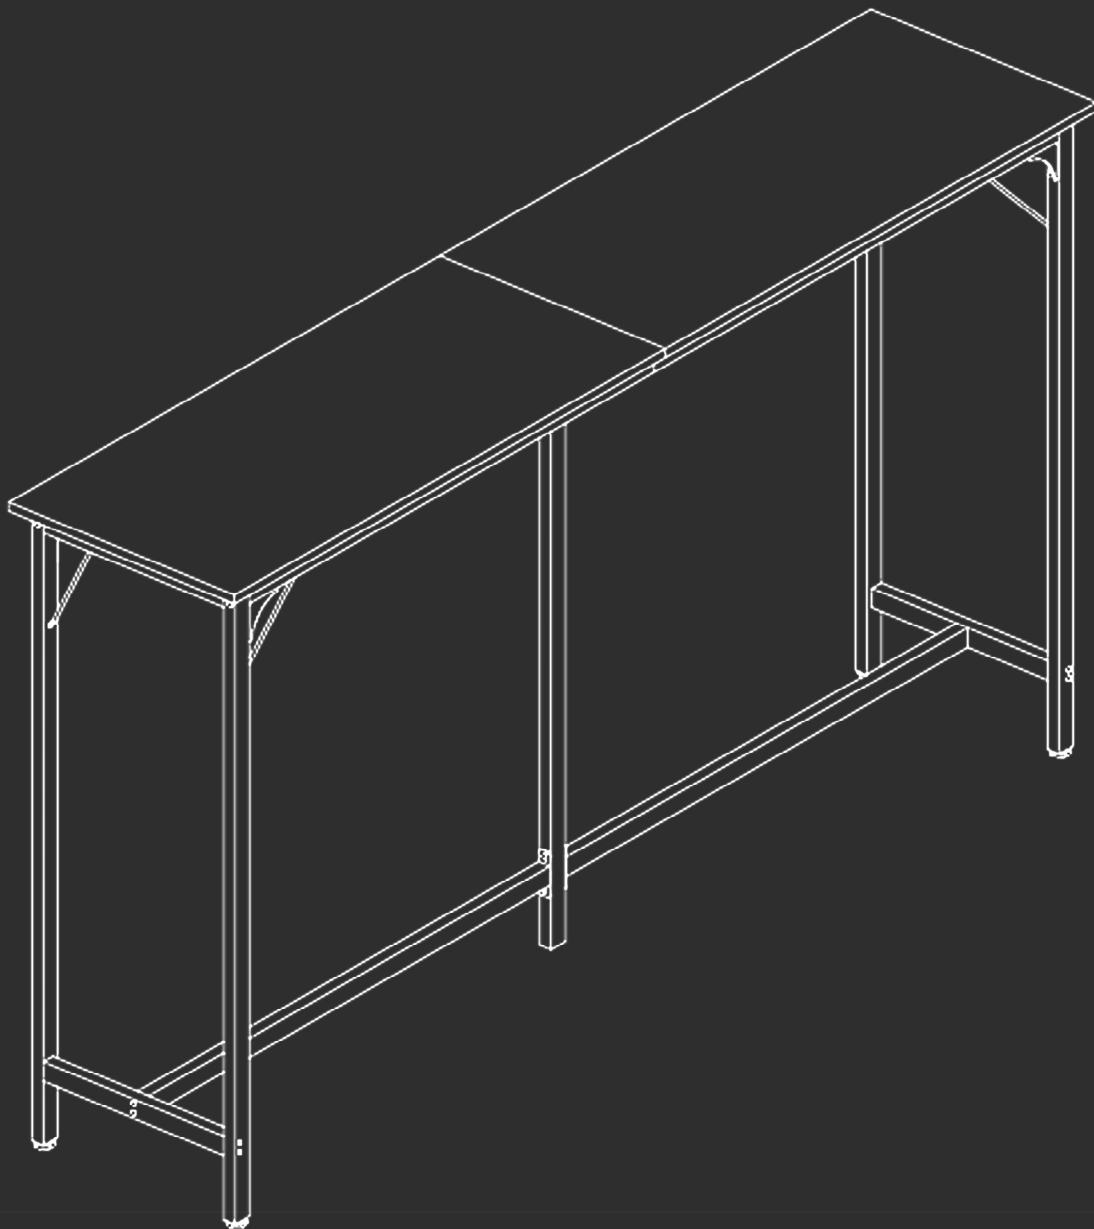

✉ HJ-Customer-Service@outlook.com


☎ (909)637-7665 | (909)637-7593

EST 9:00AM--17:00PM




1 Package List


A X2

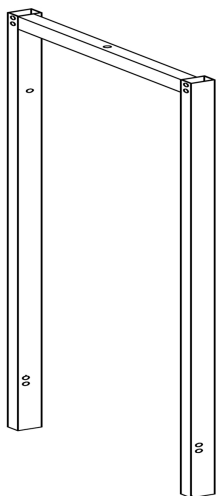


B X2

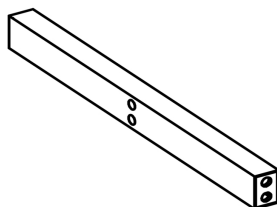


C X2

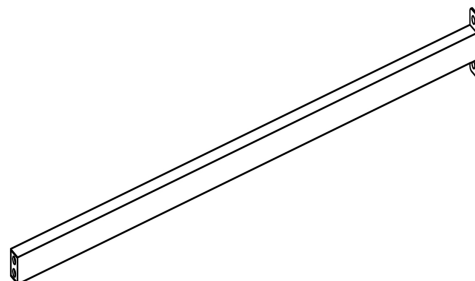


D X1




E X2

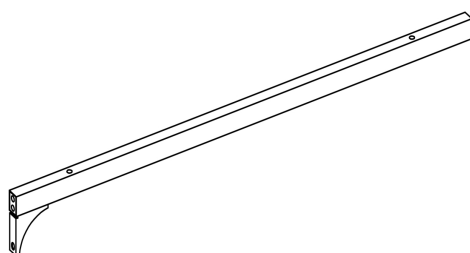


F X2

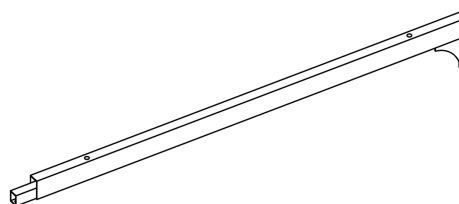

G X4




H X2

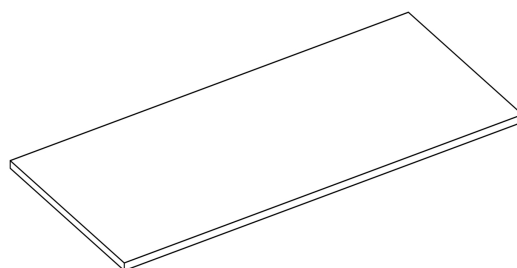


2 Supplied Parts and Hardware

1 X19



M6x40mm

2 X13




M6x28mm

3 X23



M6x12mm

4 X3



Ø6*30mm


5 X5




6 X1



7 X2

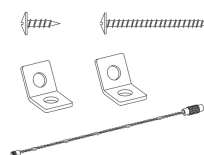



Step 1

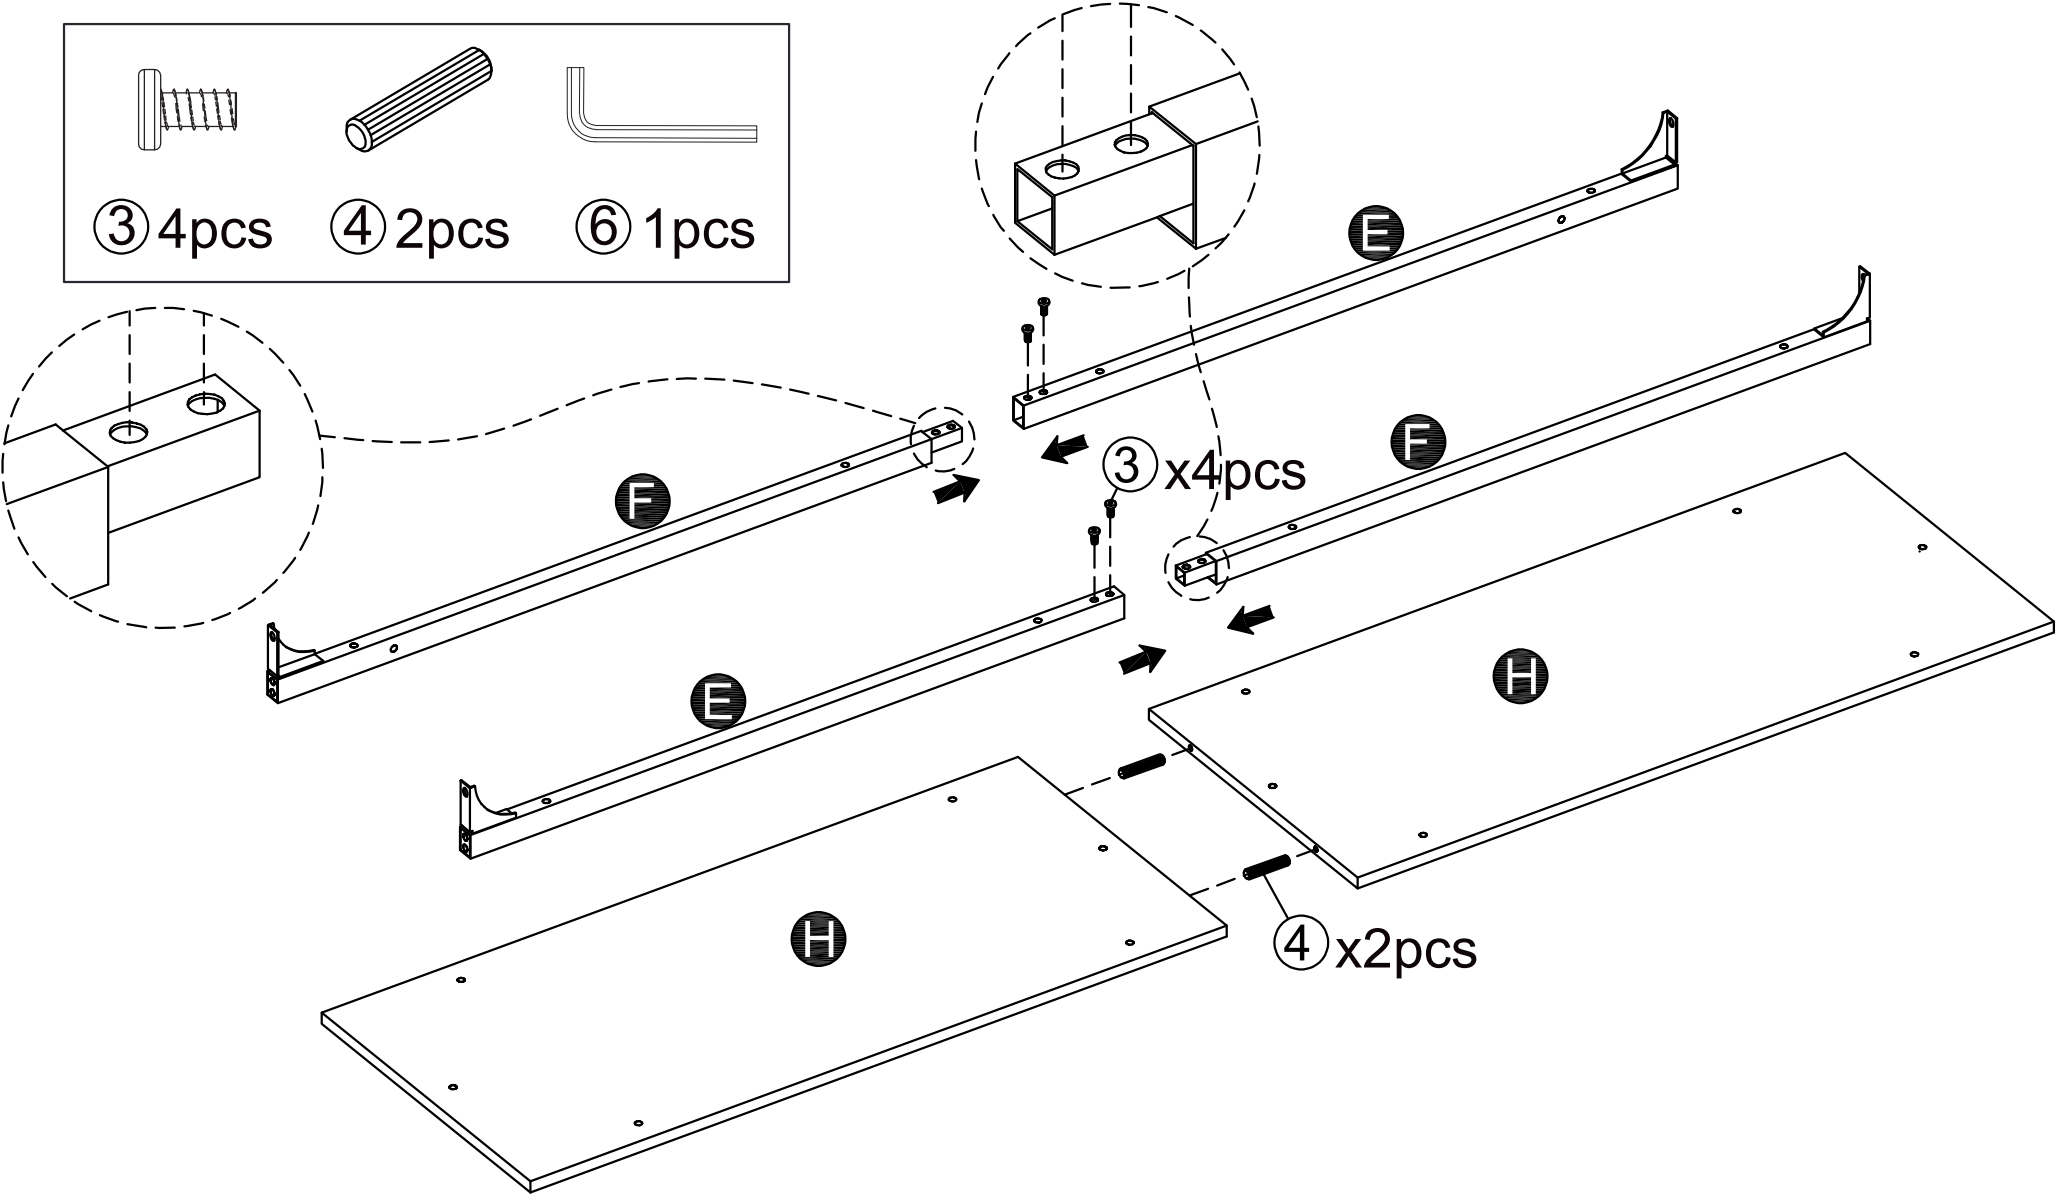

Install component (E) and (F) on the non-penetrating holes.



Step 2

NOTE: DO NOT tighten the bolts

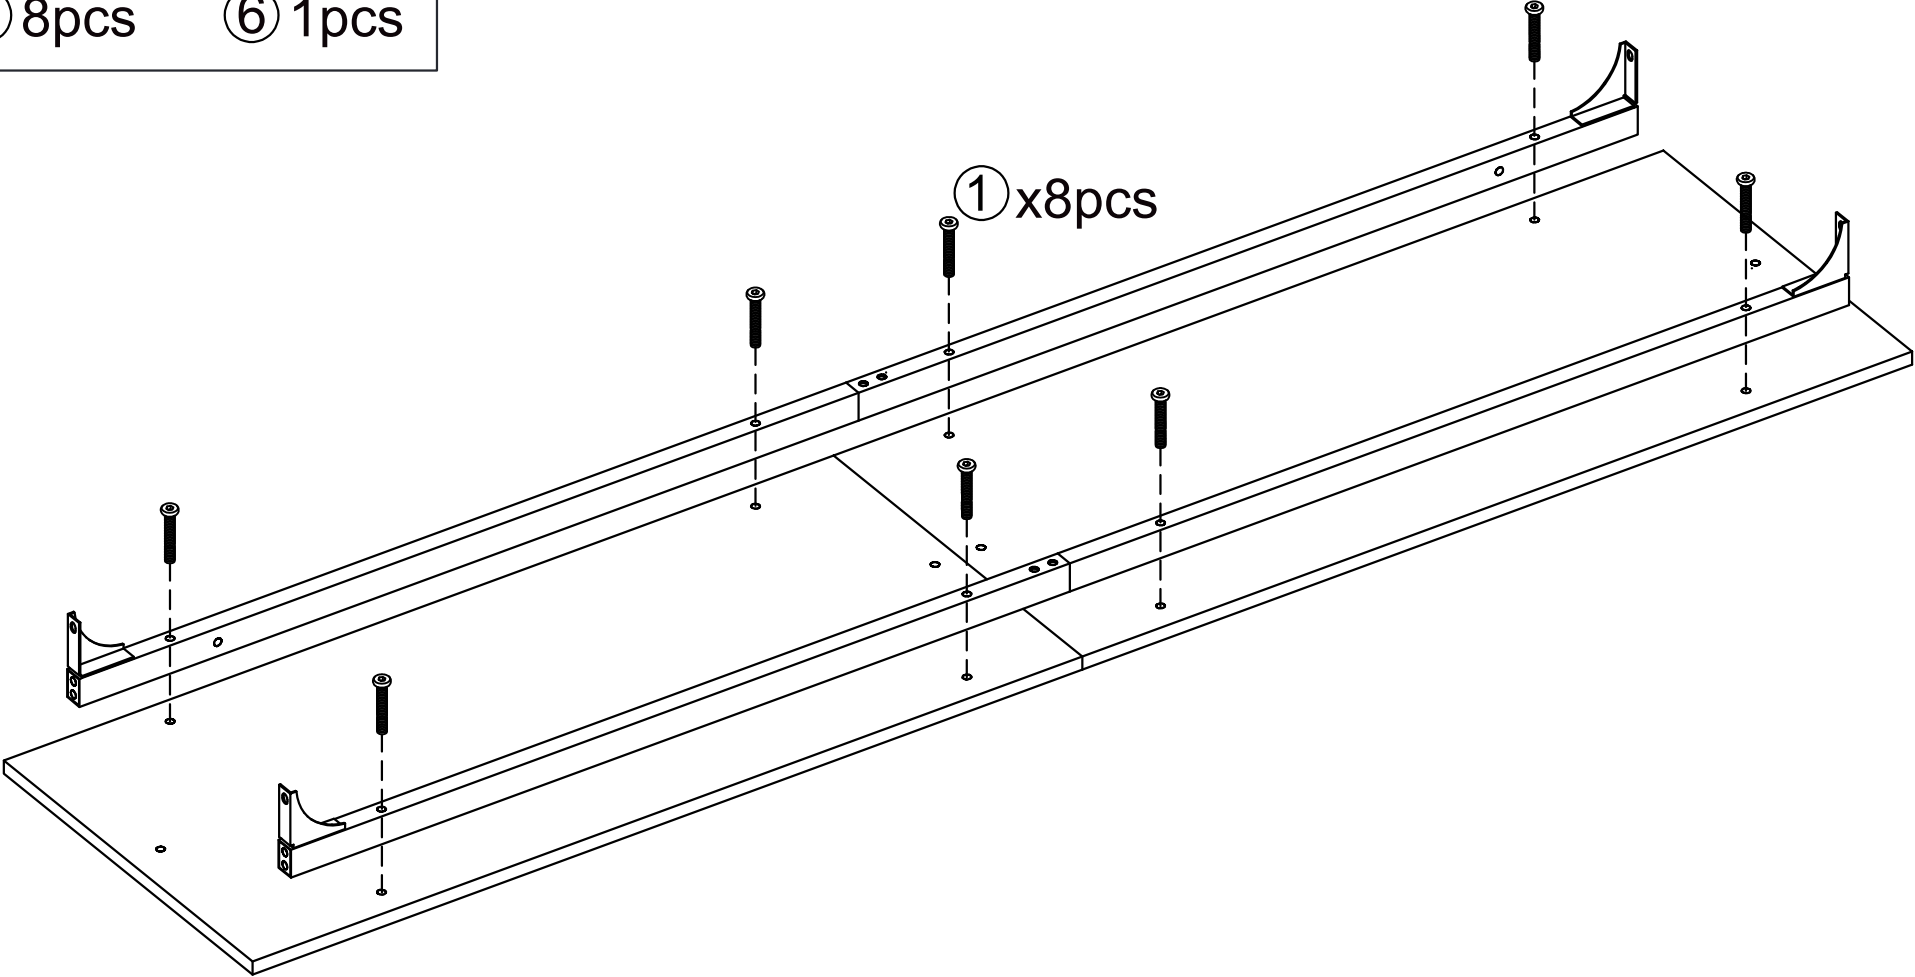
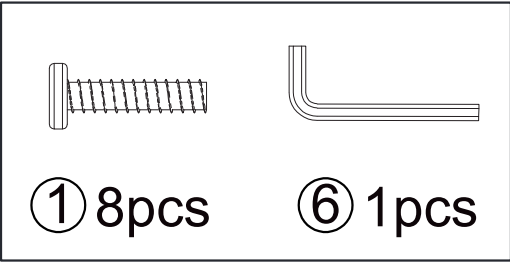


NOTE: DO NOT tighten the bolts

Step 3

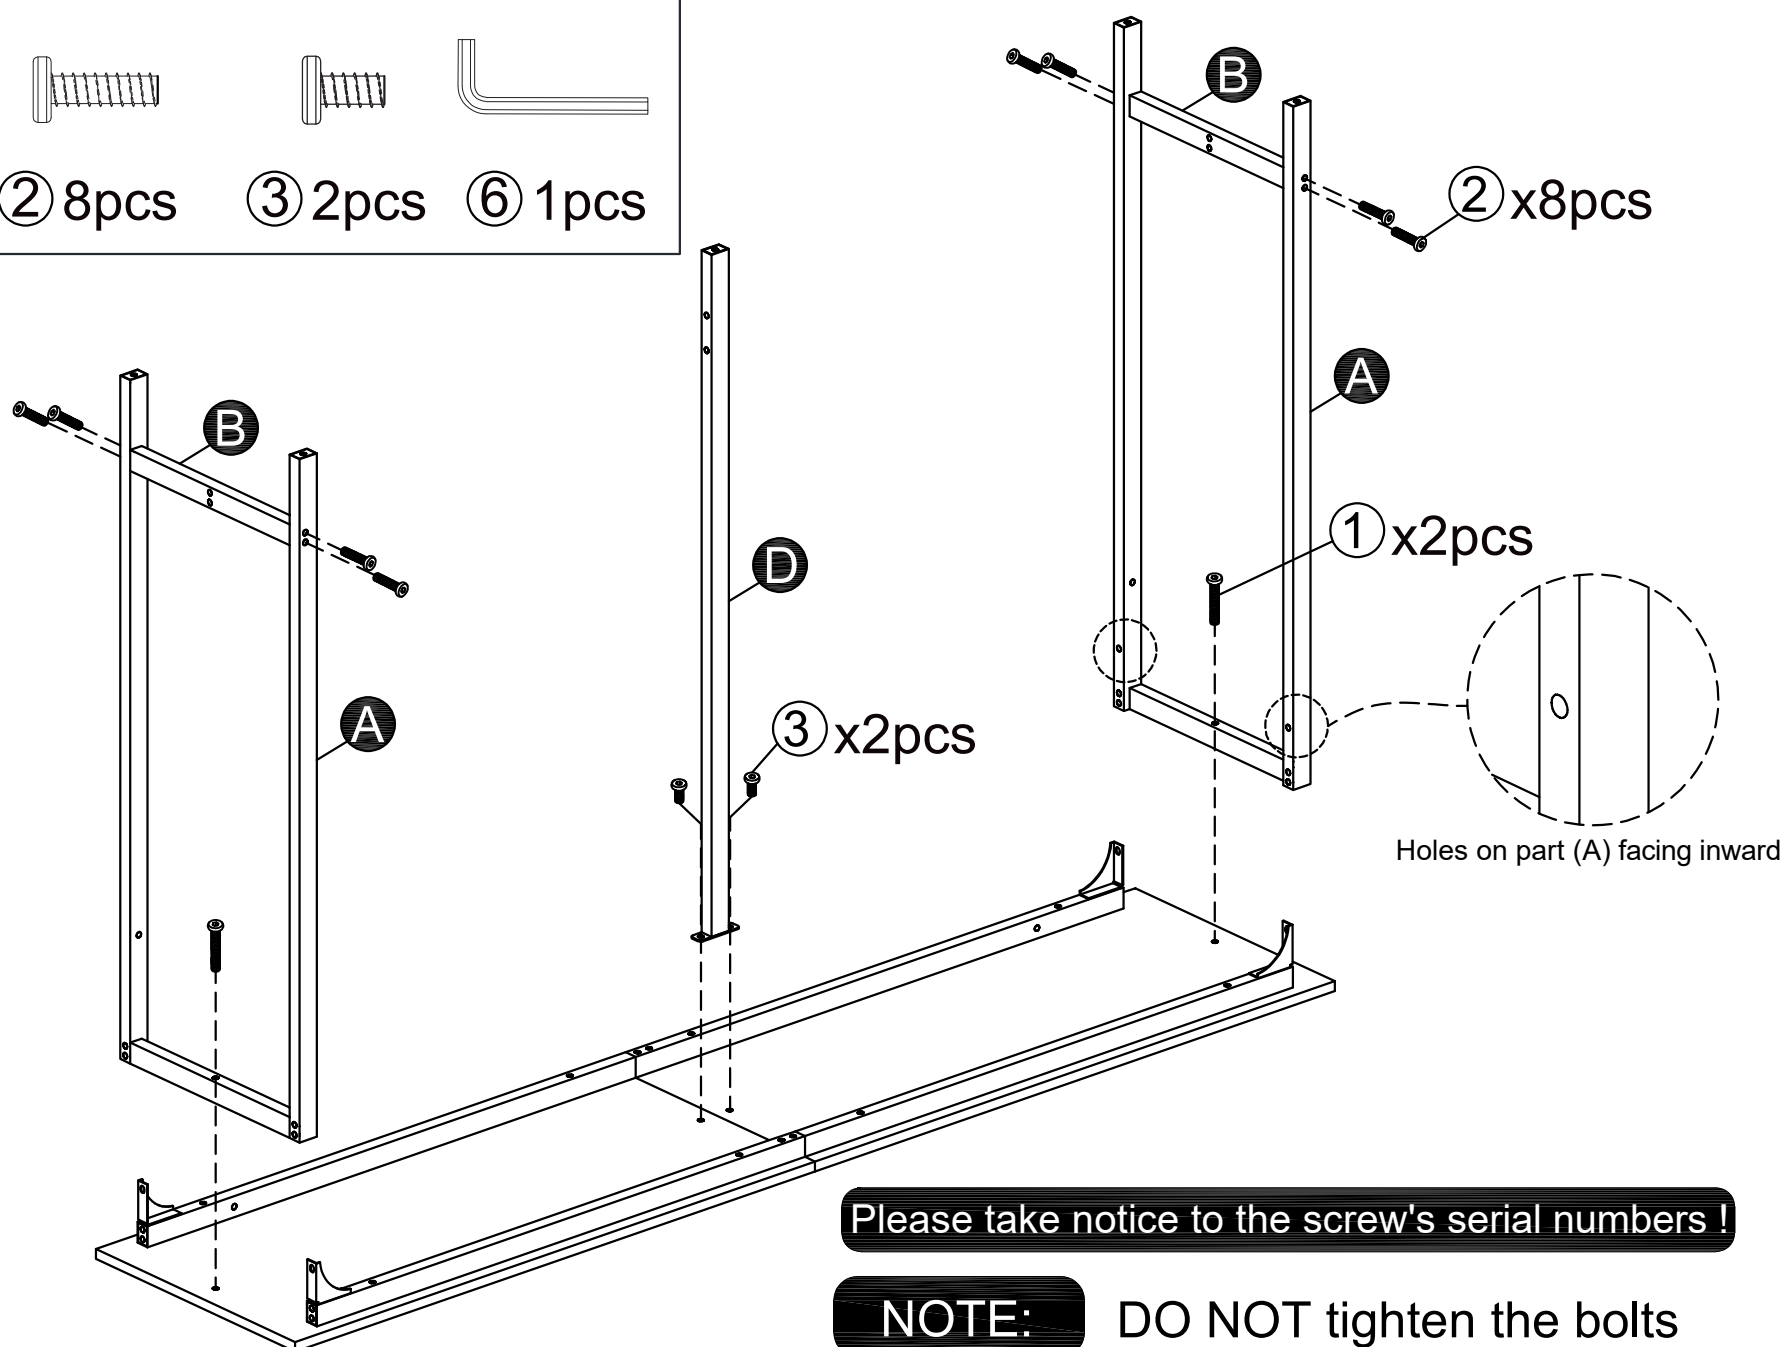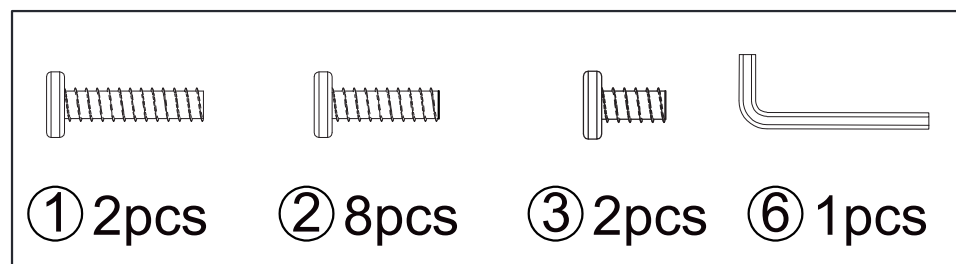


Step 4

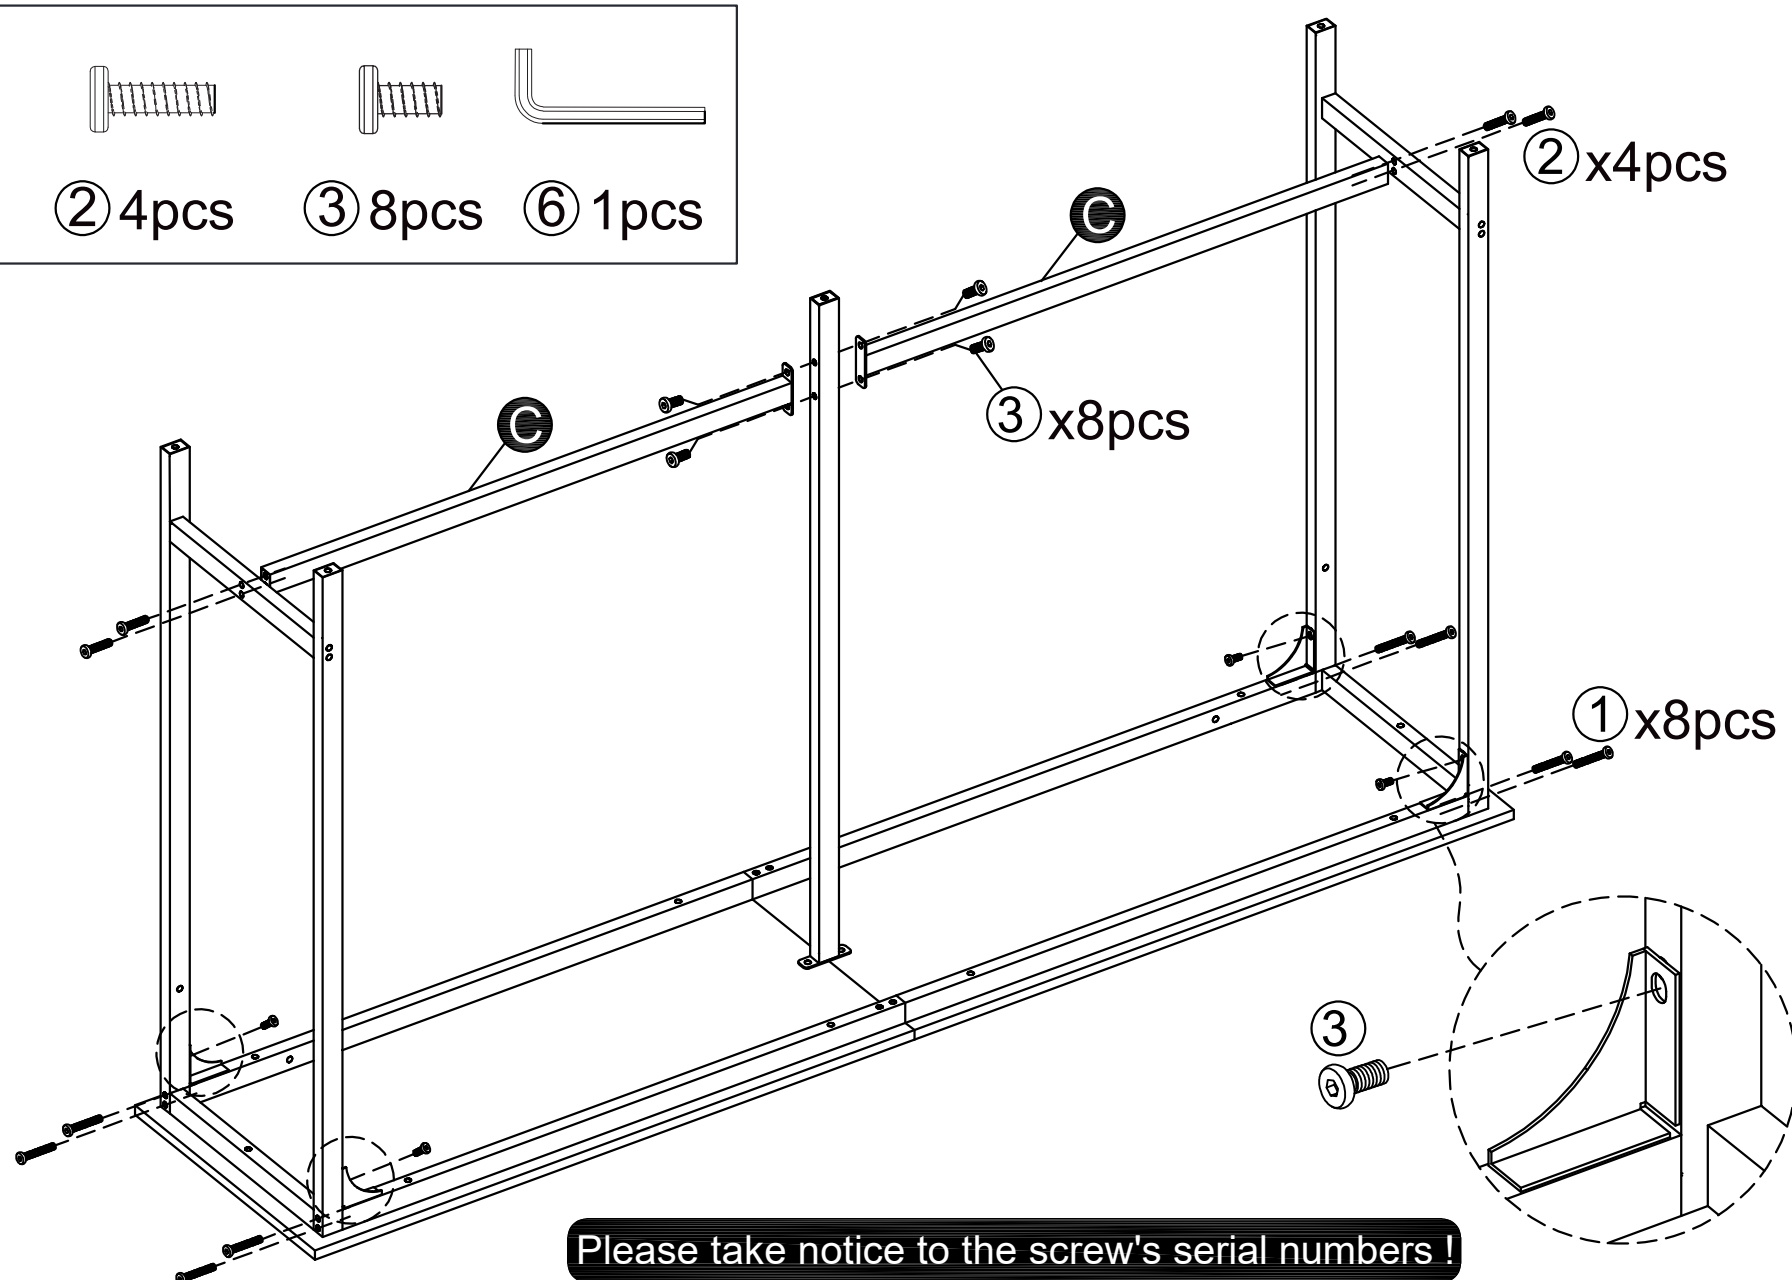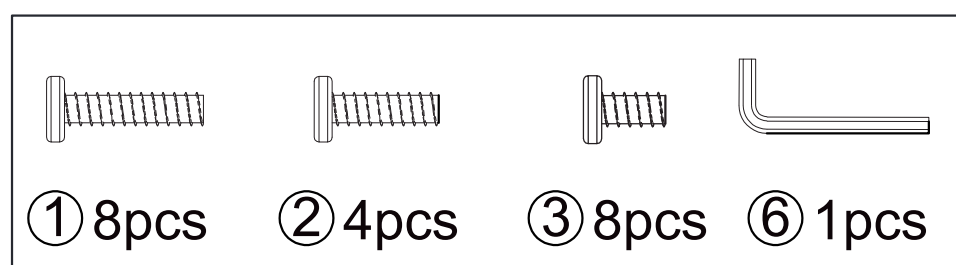

Step 5




③ 8pcs ⑤ 5pcs ⑥ 1pcs

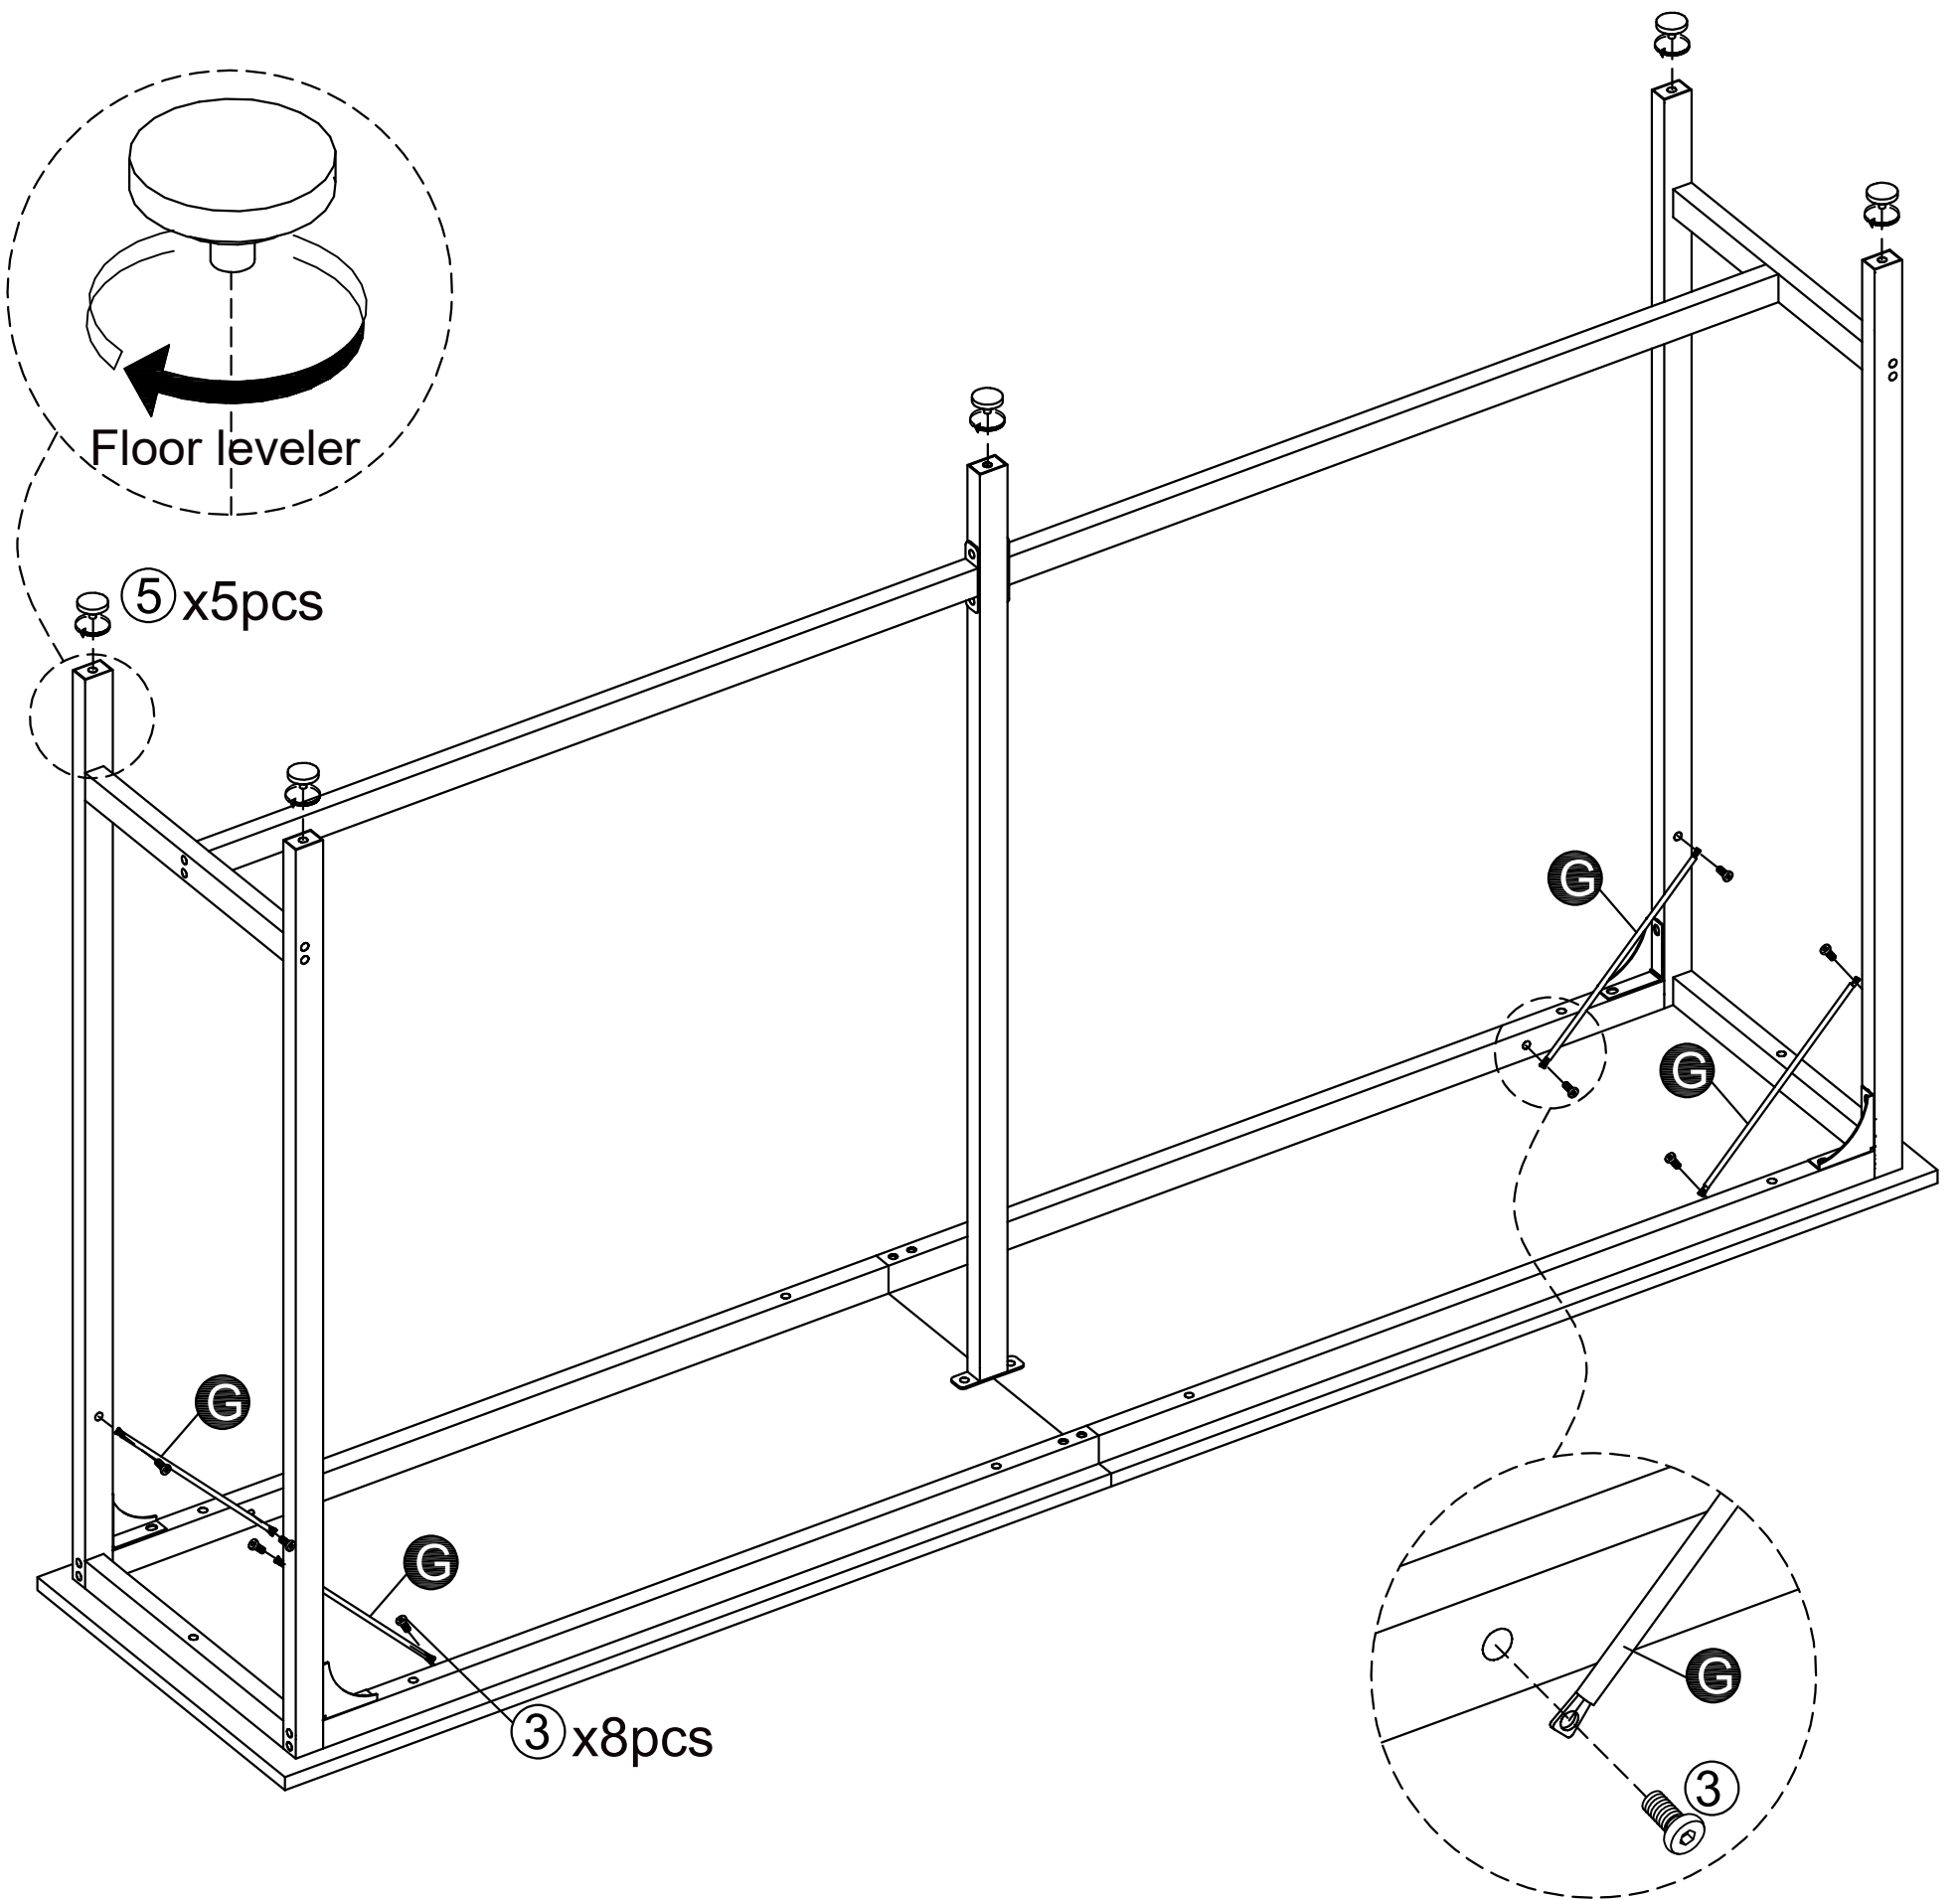


NOTE: Tighten all the bolts !

Step 6

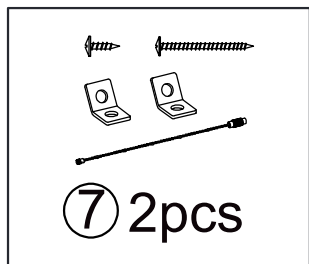


Wall

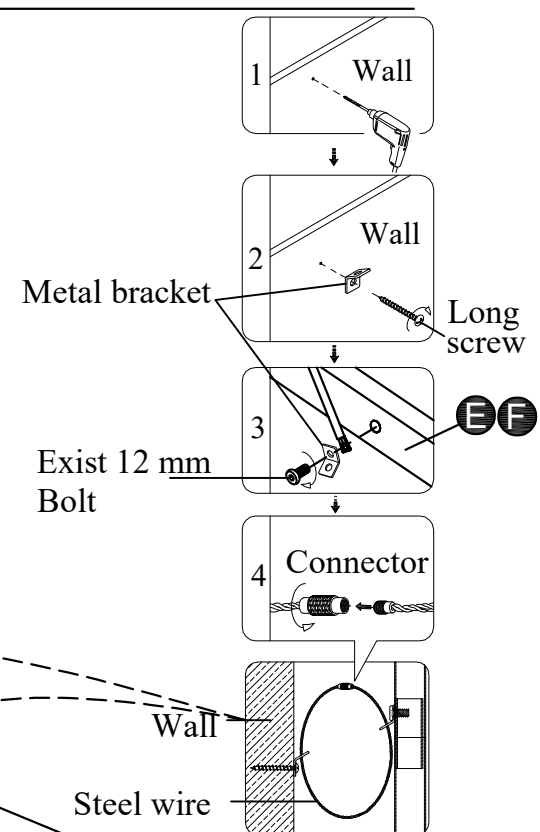

NOTE:

- 1- Unscrew the 12 mm Bolts (3) on the inside back (E) (F) and install the metal brackets to the unit with the same Bolts.
- 2- Ask for assistance to position the assembled unit at the desired location against a wall.

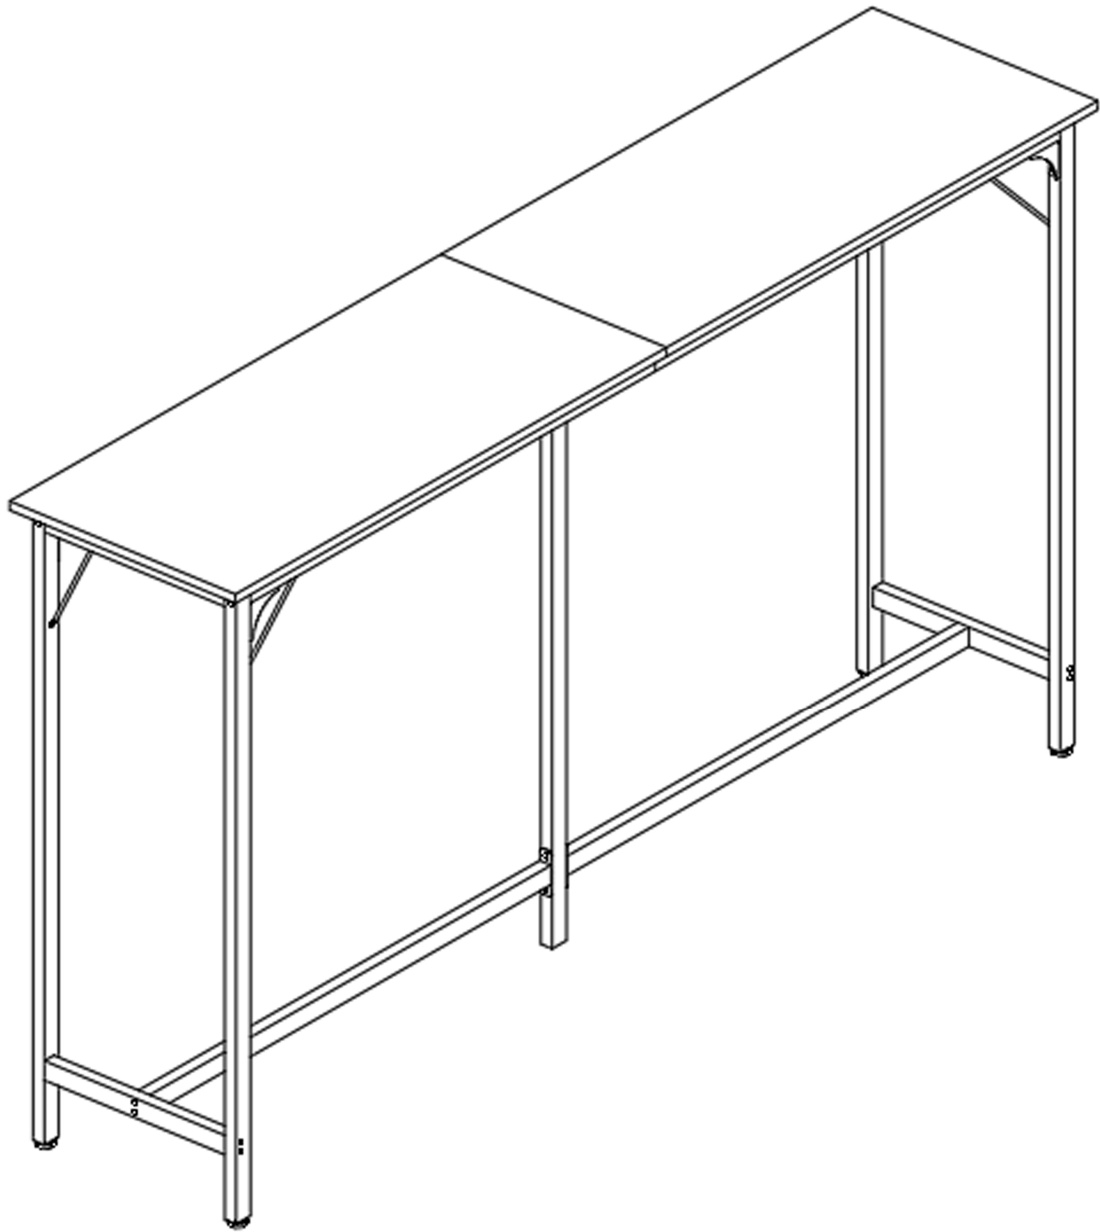

Technical Support

(909)637-7665 | (909)637-7593

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us.