



Product Installation Instructions

ITEM-BJ029

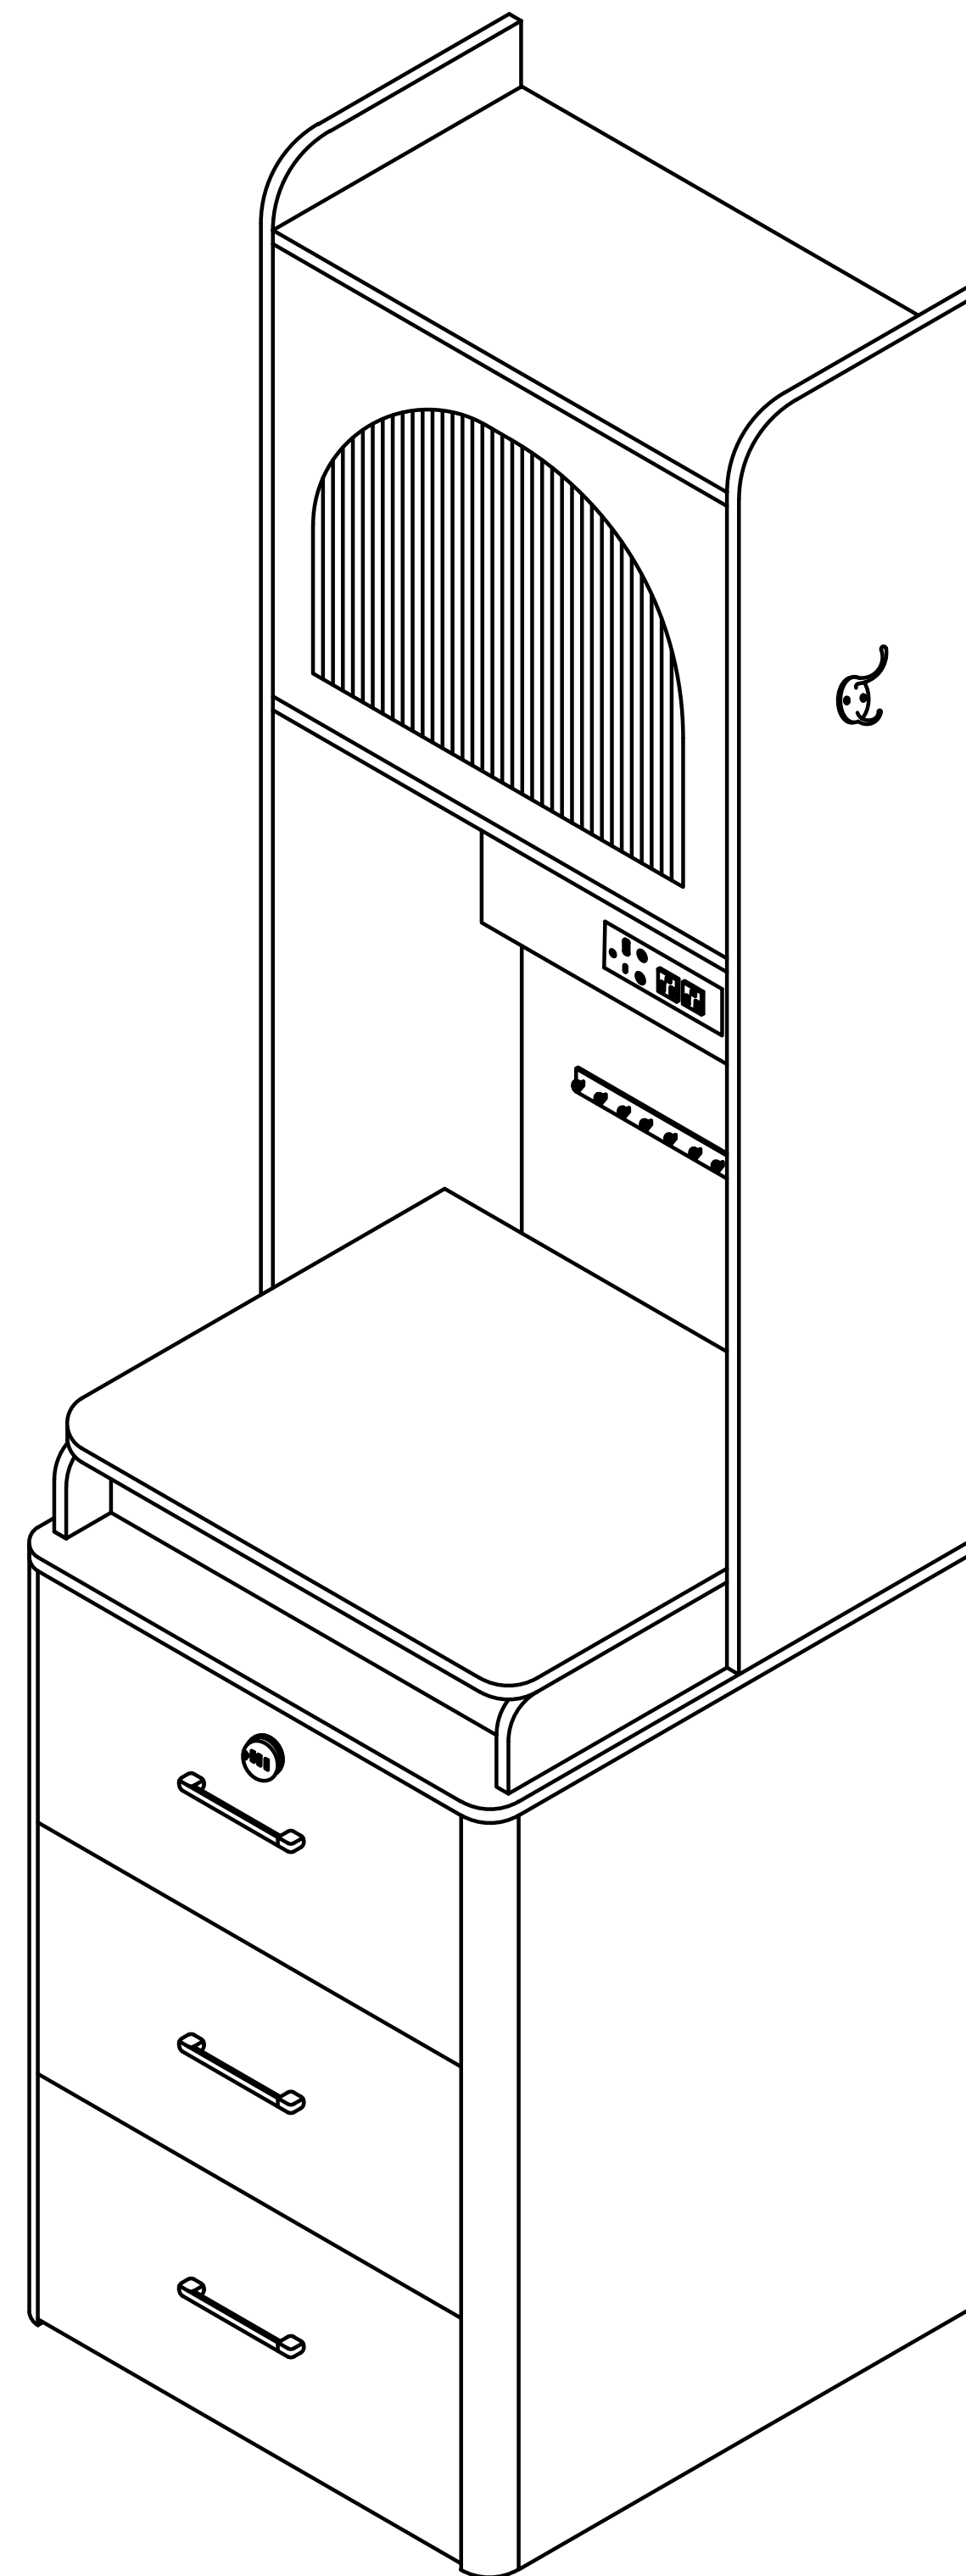


For more information contact our customer service by sending an email to furniture.services@126.com


Read before use & keep for future reference.

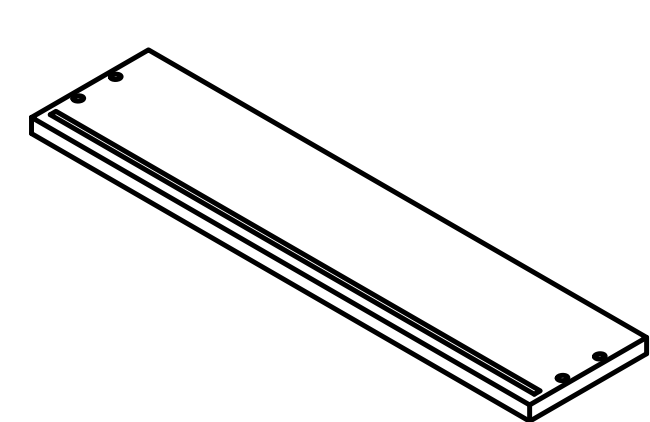


①x1

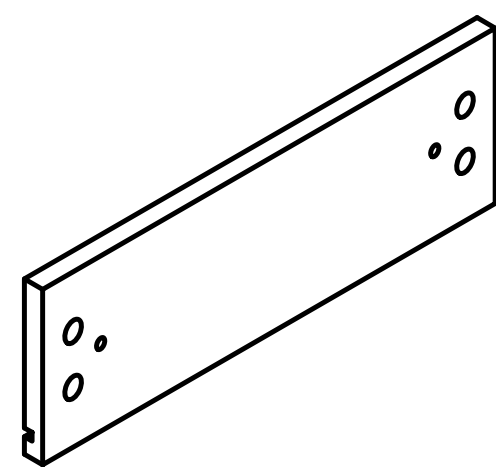


②x2

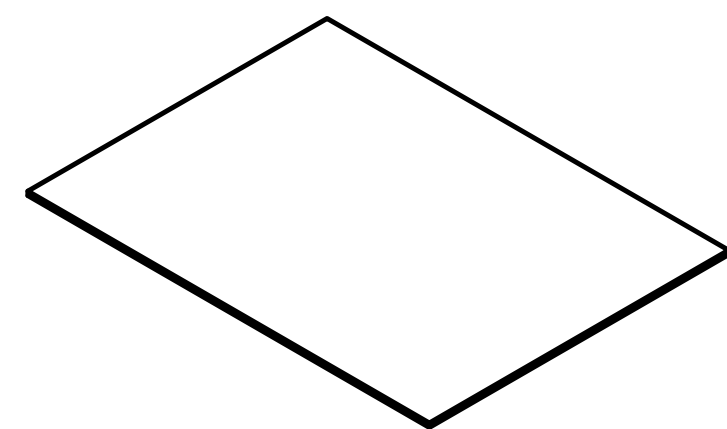


③x1

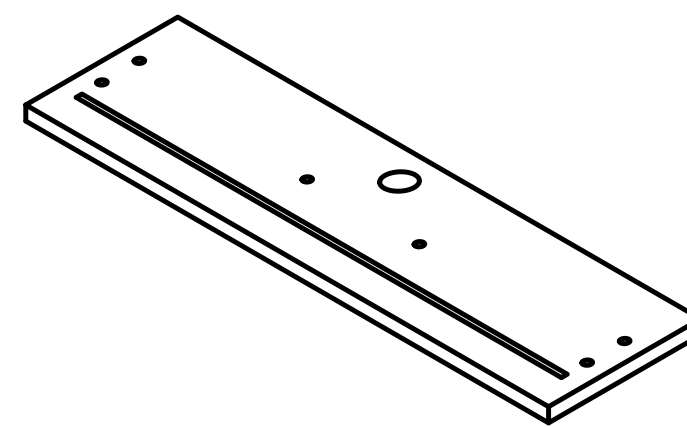


④x1

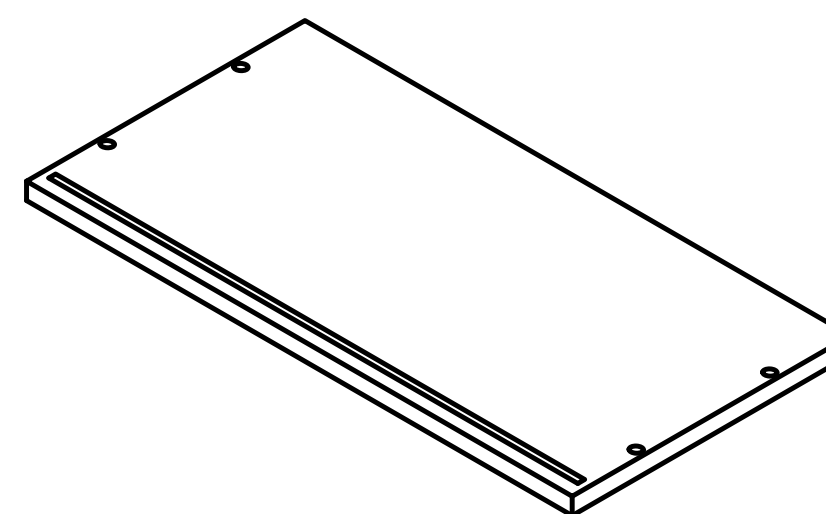


⑤x1

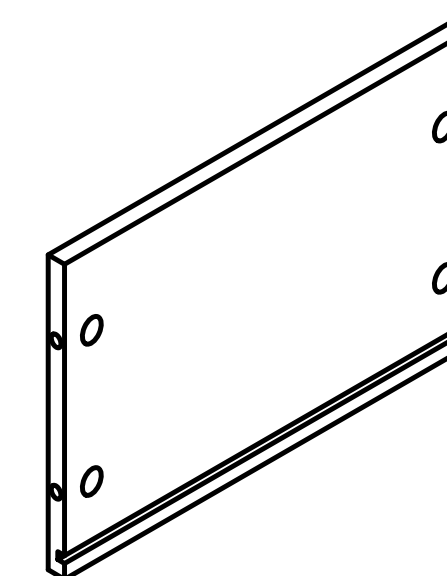


⑥x2

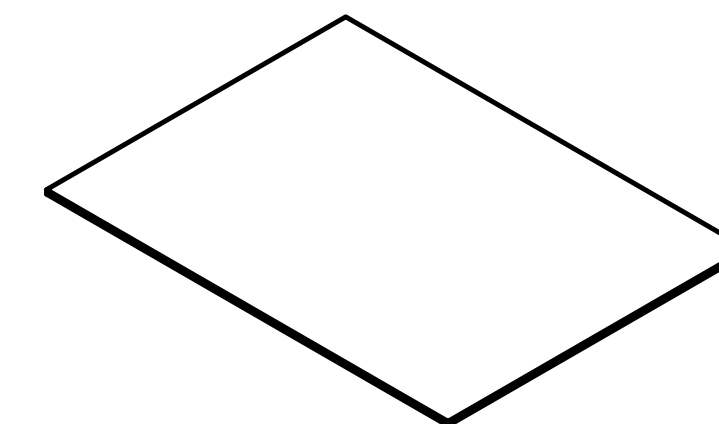


⑦x1

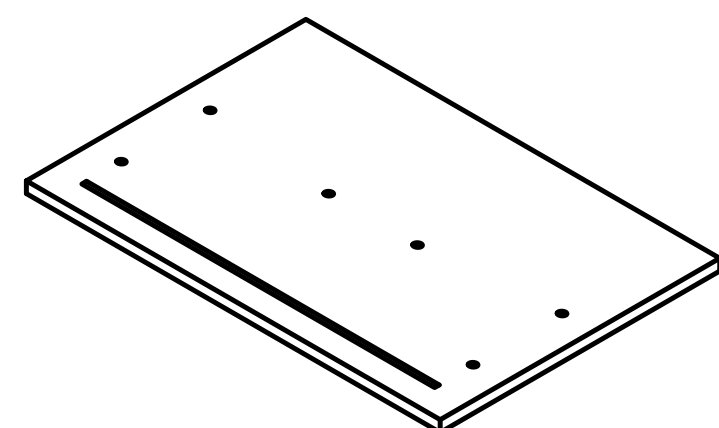


⑧x1

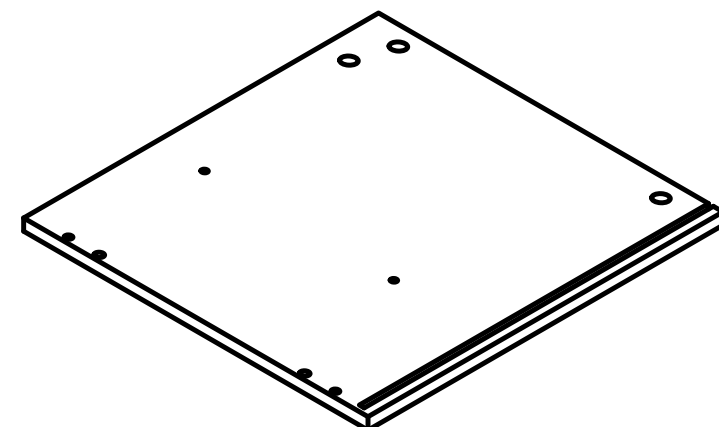


⑨x1

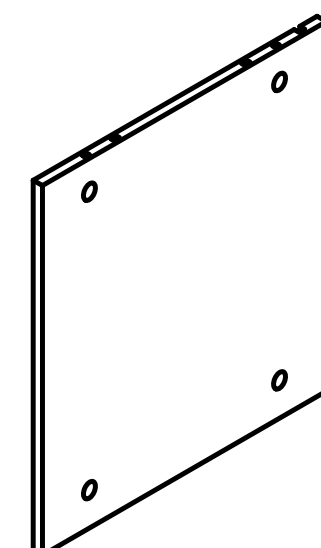


⑩x1

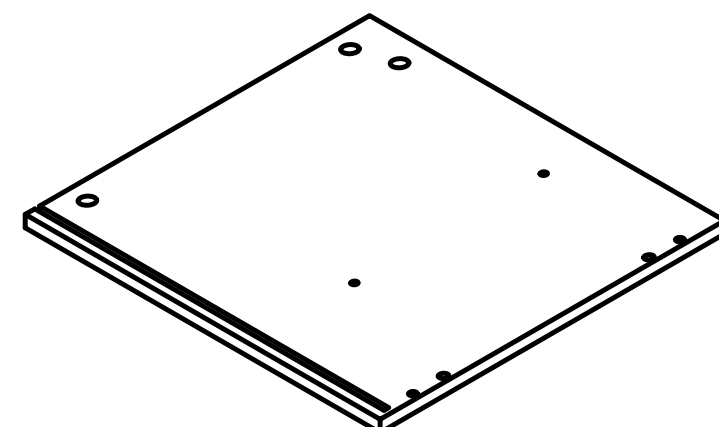


⑪x1

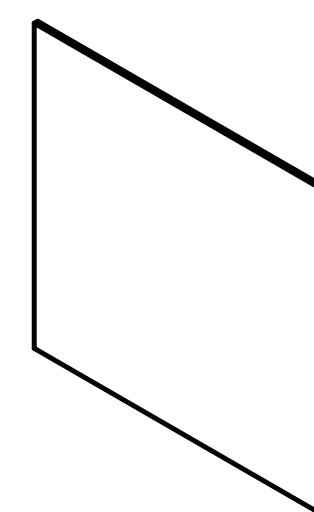


⑫x1

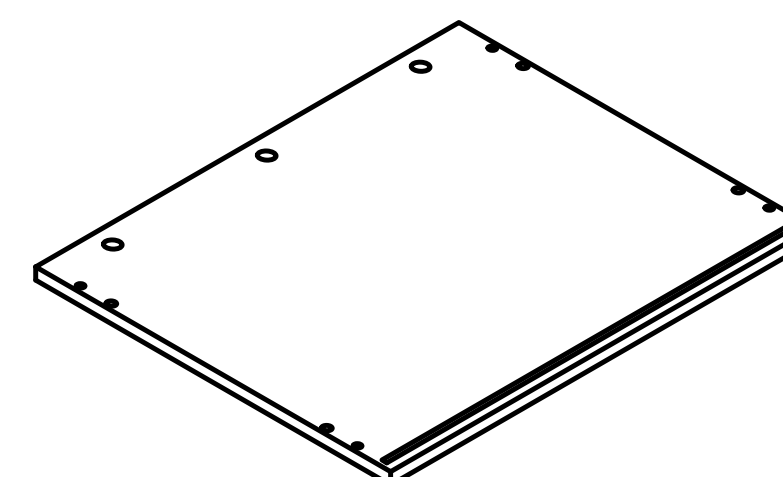


⑬x1

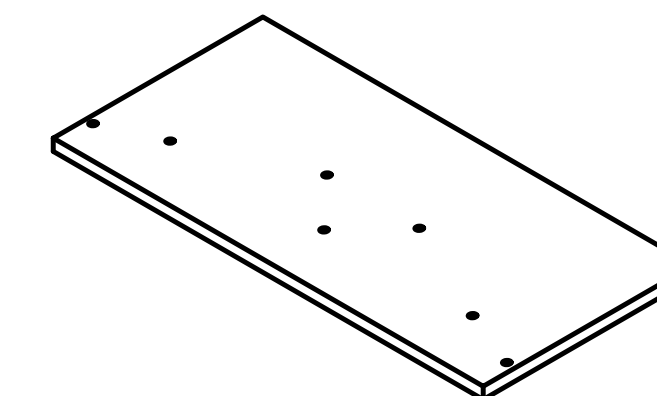


⑭x1

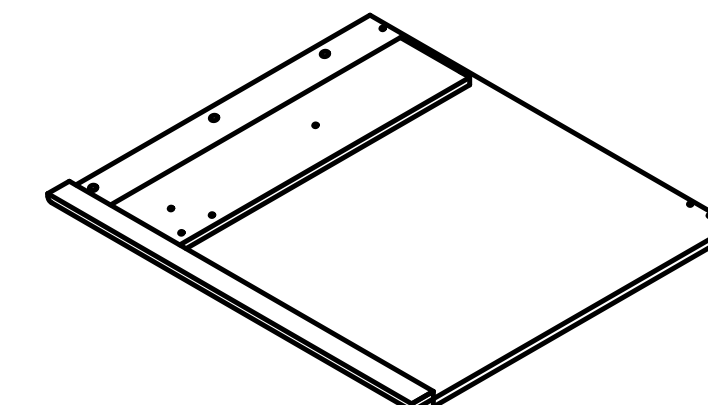

⑮x1




⑯x1

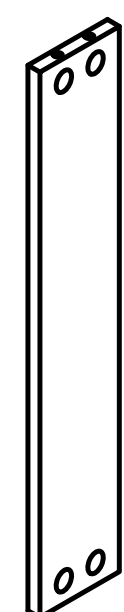


⑰x1




⑱x1

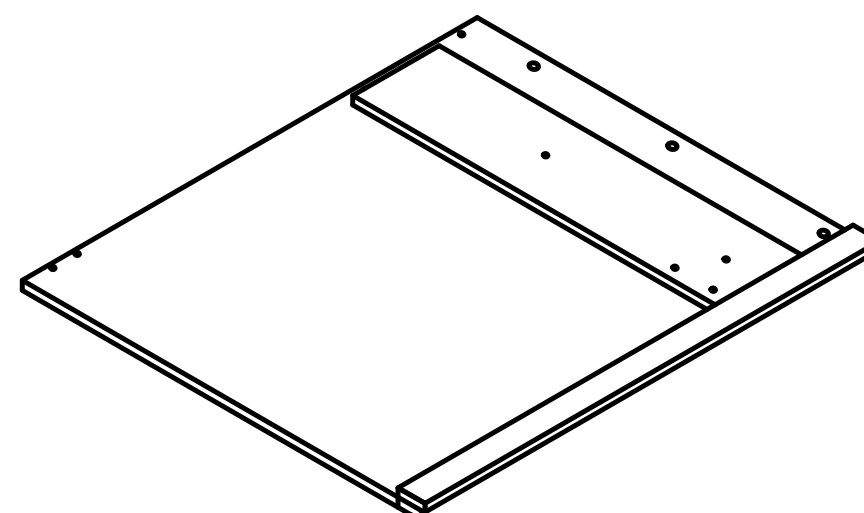


⑲x1

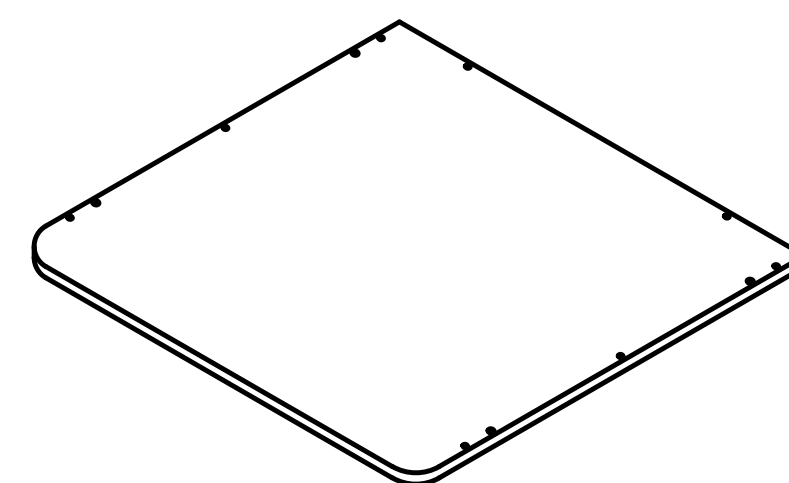


⑳x1

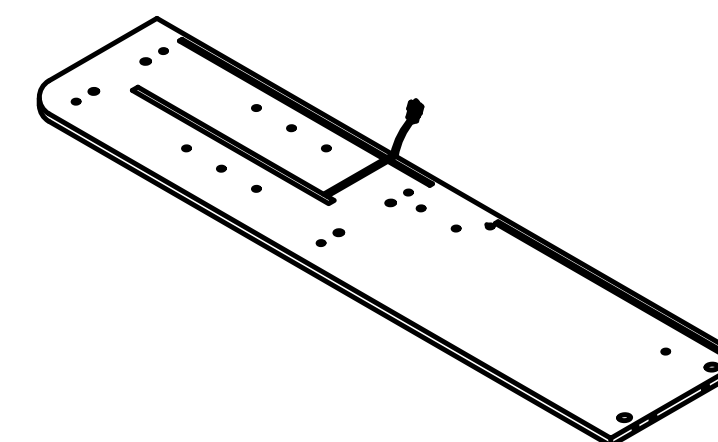


㉑x1

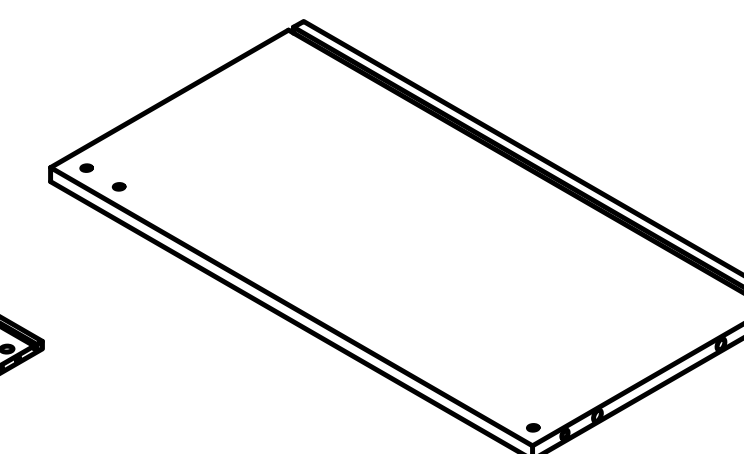


㉒x1

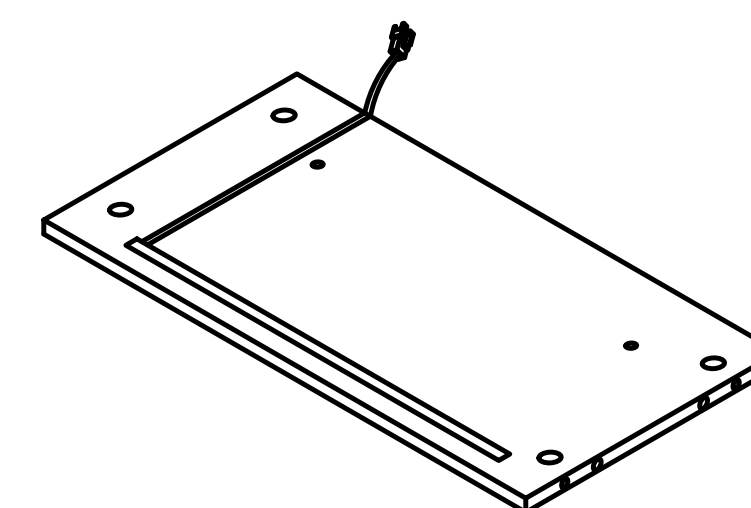


㉓x1

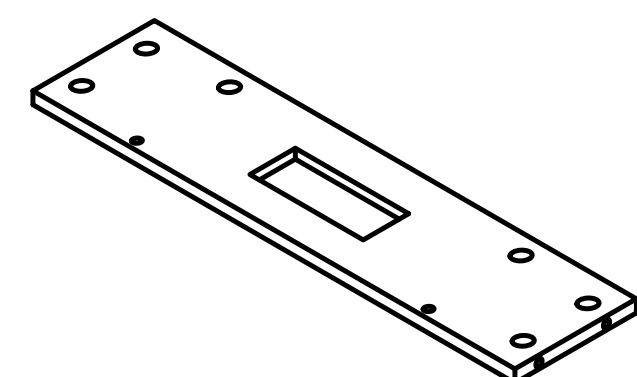


㉔x1

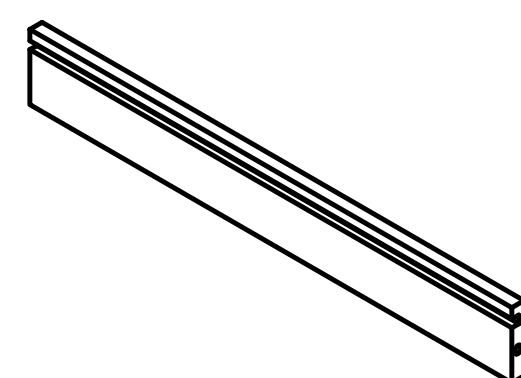


㉕x1

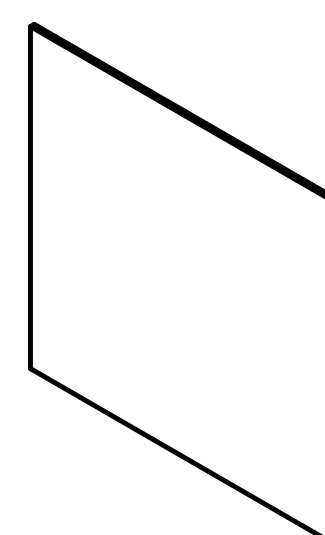


㉖x1

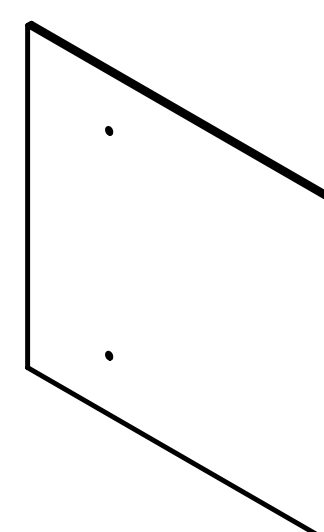


㉗x1

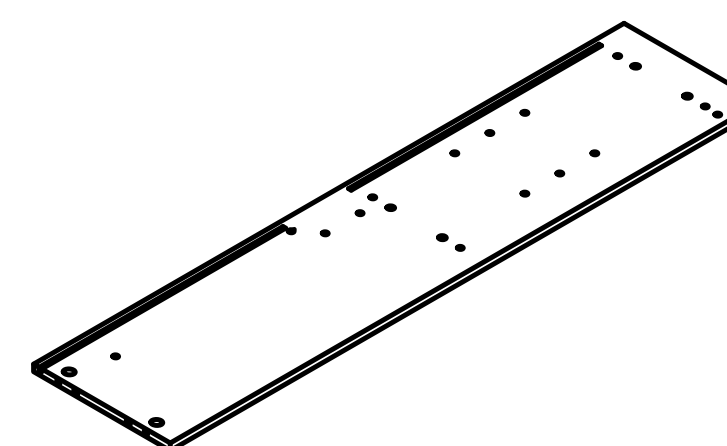


㉘x1

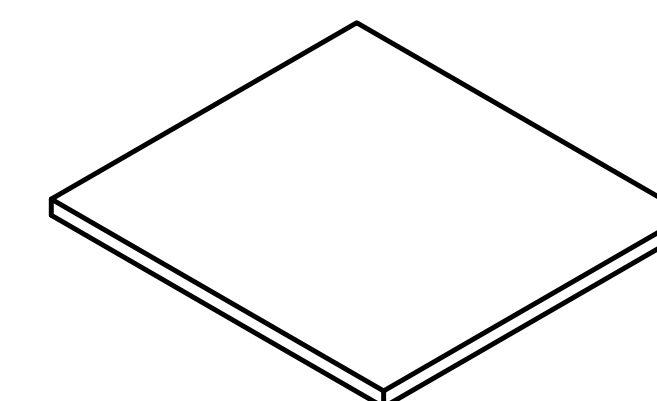


㉙x1

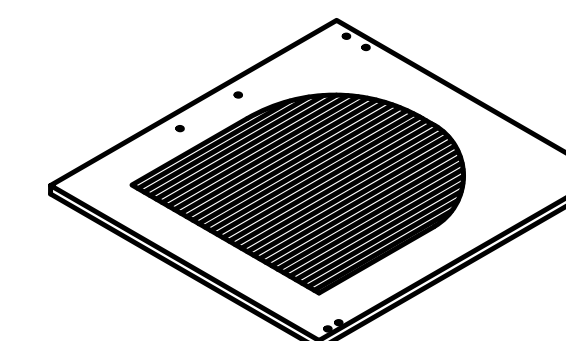


㉚x1

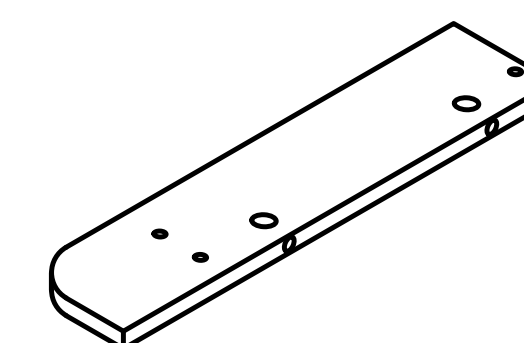


㉛x1




㉜x1




㉝x1

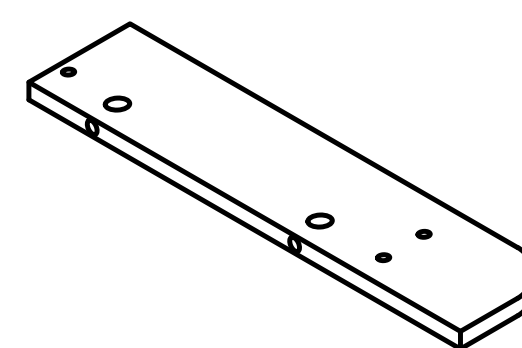


㉞x1

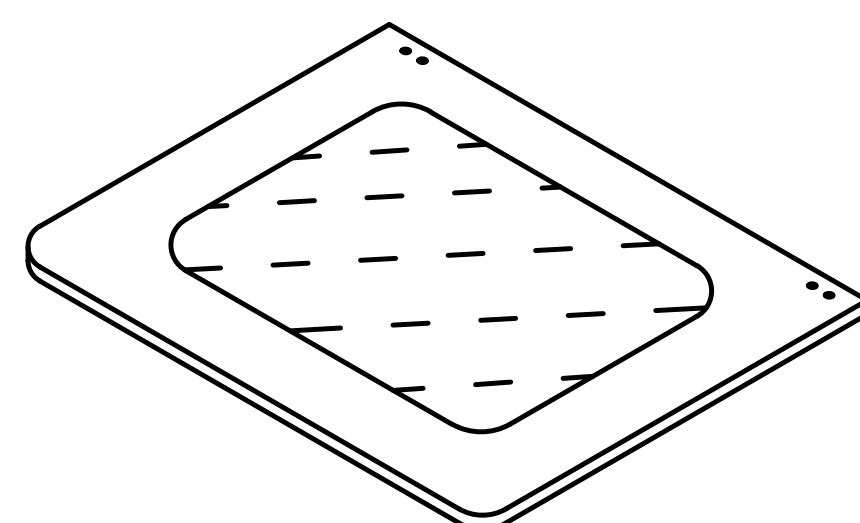


㉟x1

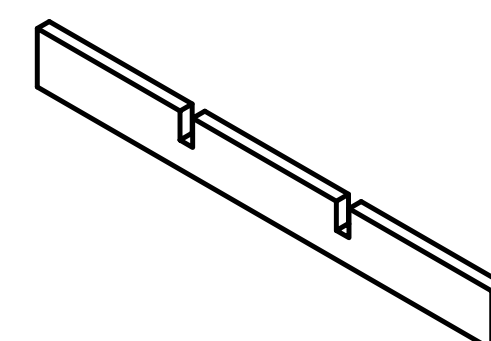


㊱x1

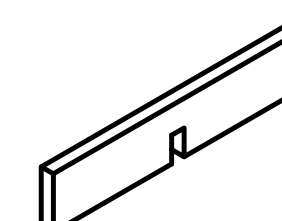


㊲x2

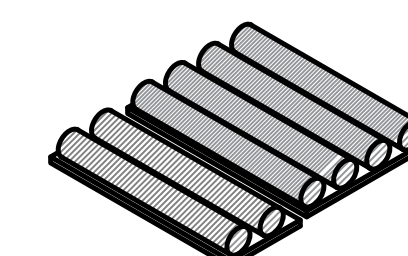





















㊳x1

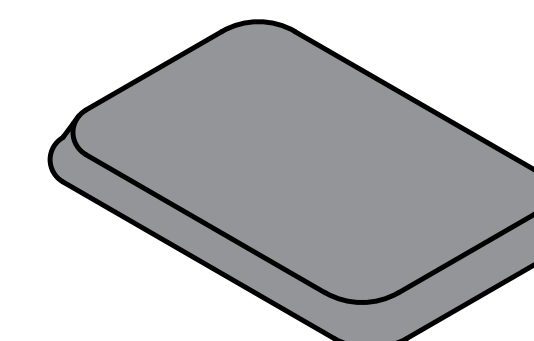


㊴x1








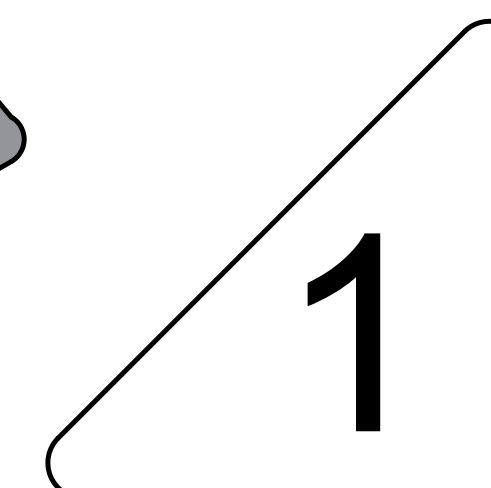






1

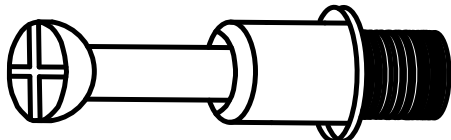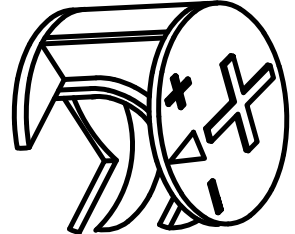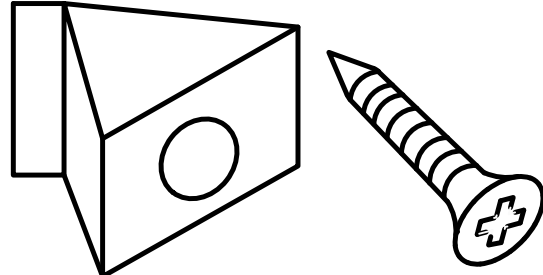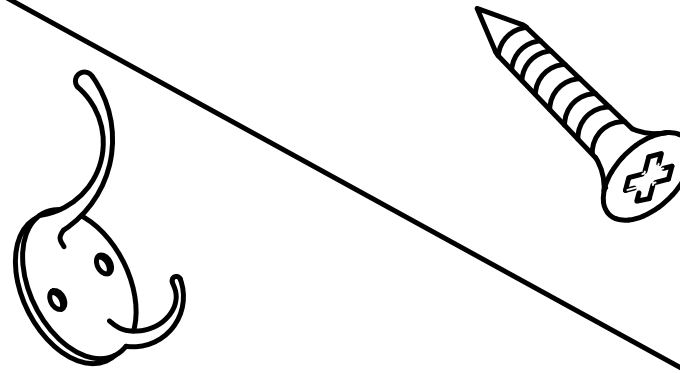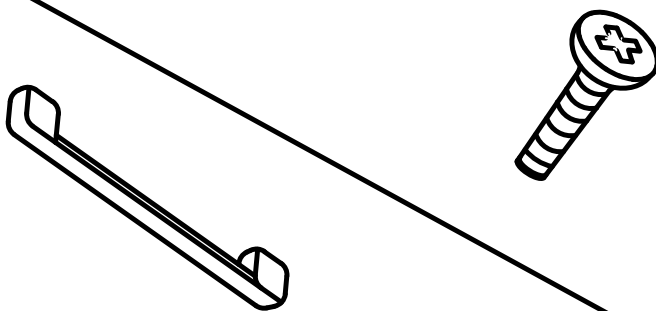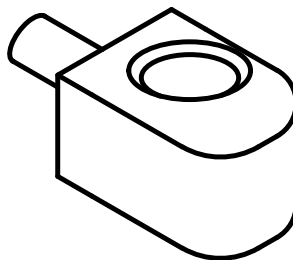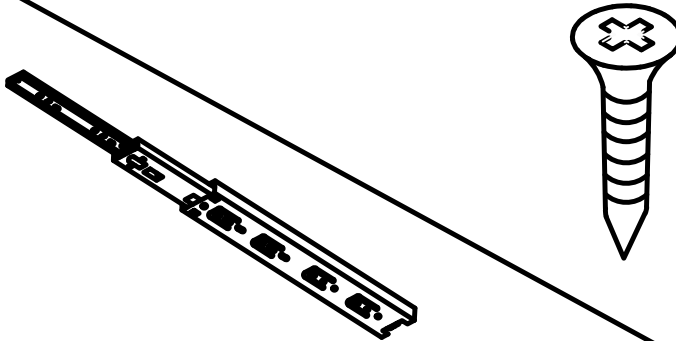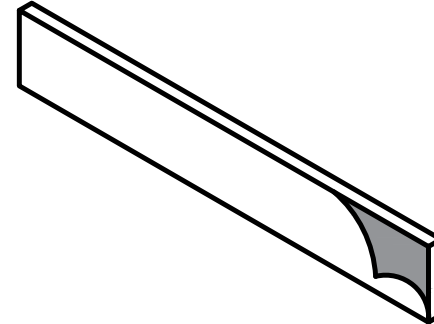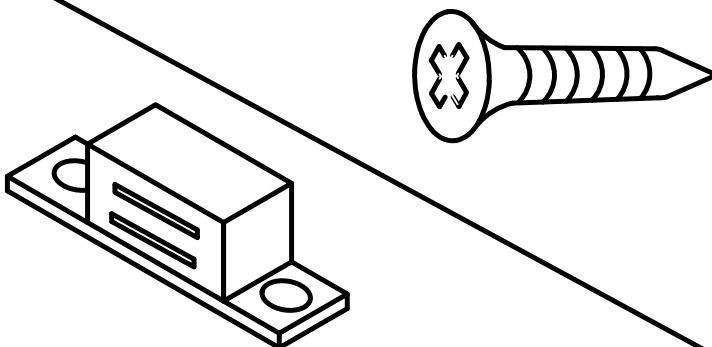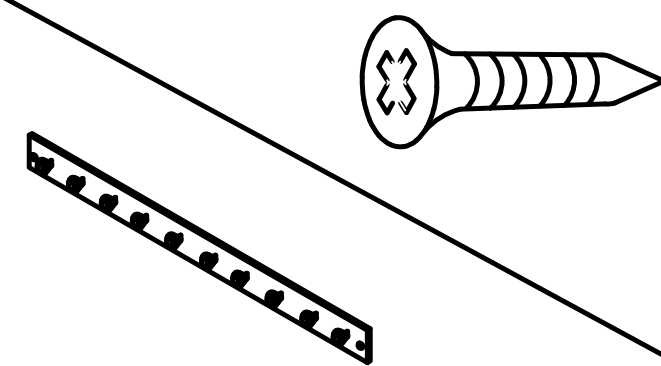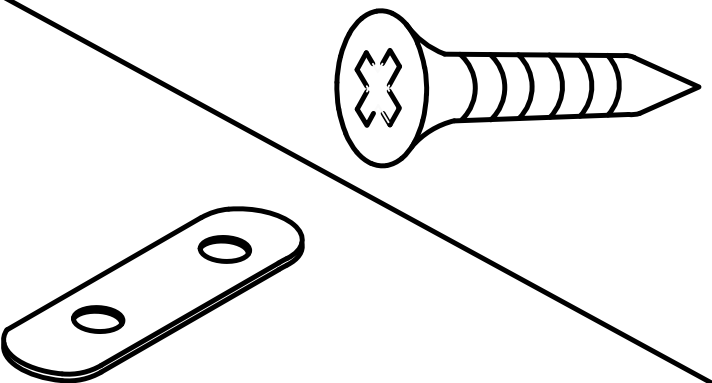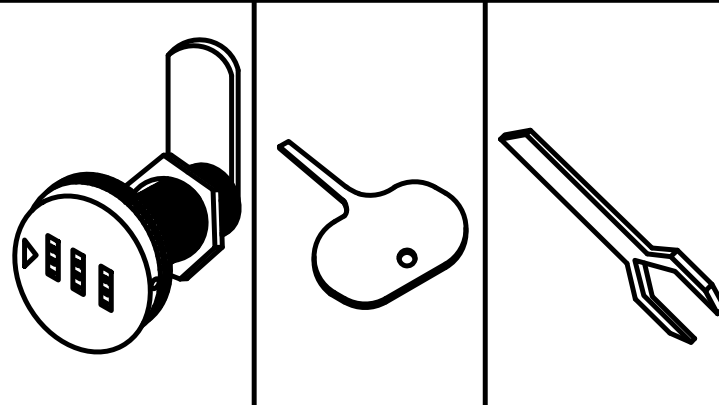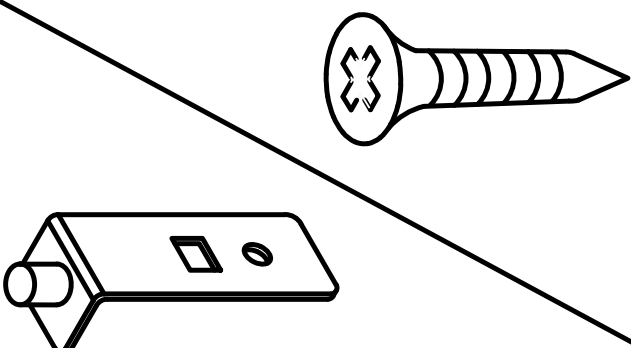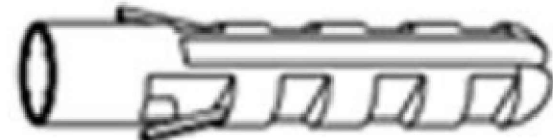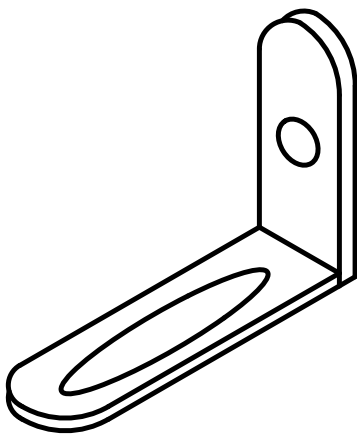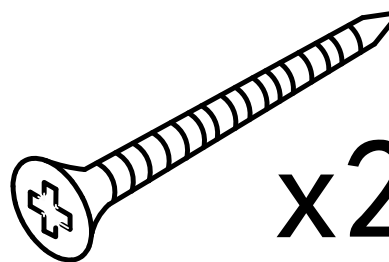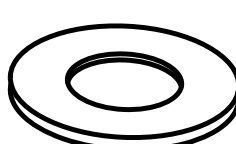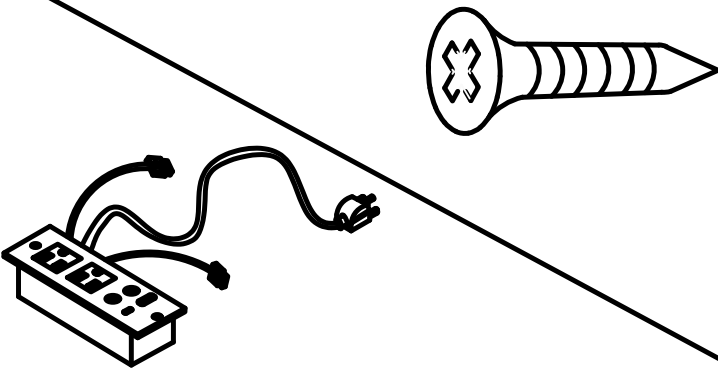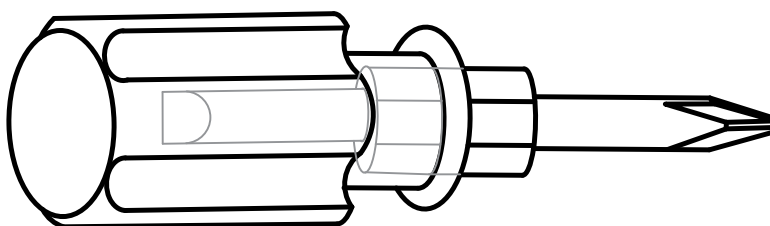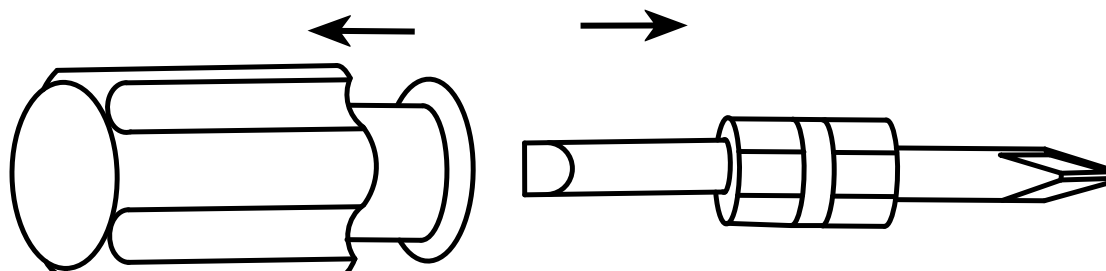A		Two In One Screw (6x28mm)	83pcs +6pcs	J		Non-slip pads	11pcs +3pcs
B		Two In One Nut (10x12mm)	83pcs +6pcs	K		Fixing clip & Screw (3x16mm)	12pcs +2pcs
C		Wood Chipping (6x30mm)	24pcs +4pcs	L		Hook & Screw (3x12mm)	4pcs +1pcs 2pcs
D		Handle & Screw (4x16mm)	8pcs +2pcs 4pcs	M		Laminate Support Nail	4pcs +1pcs
E		Guide & Screw (3x12mm)	20pcs +4pcs 4pcs	N		Double Sided Tape	2pcs
F		Magnetic Attraction & Screw (3.5x12mm)	2pcs +1pcs 1pcs	O		Crystal Hook & Screw (3.5x14mm)	2pcs +1pcs 1pcs
G		Iron Sheet & Screw (3x10mm)	2pcs +1pcs 1pcs	P		Password Locks & Tools	1pcs
H		Cabinet Door Hinge & Screw (3x10mm)	8pcs +2pcs 4pcs	Q	Anti Fall Hardware  x2  x2  x2 (4x45mm)  x4		
I		Power Socket & Screw (3x10mm)	2pcs +1pcs 1pcs				
 1pcs Double-head screwdriver, use as required  2							

Product structure decomposition

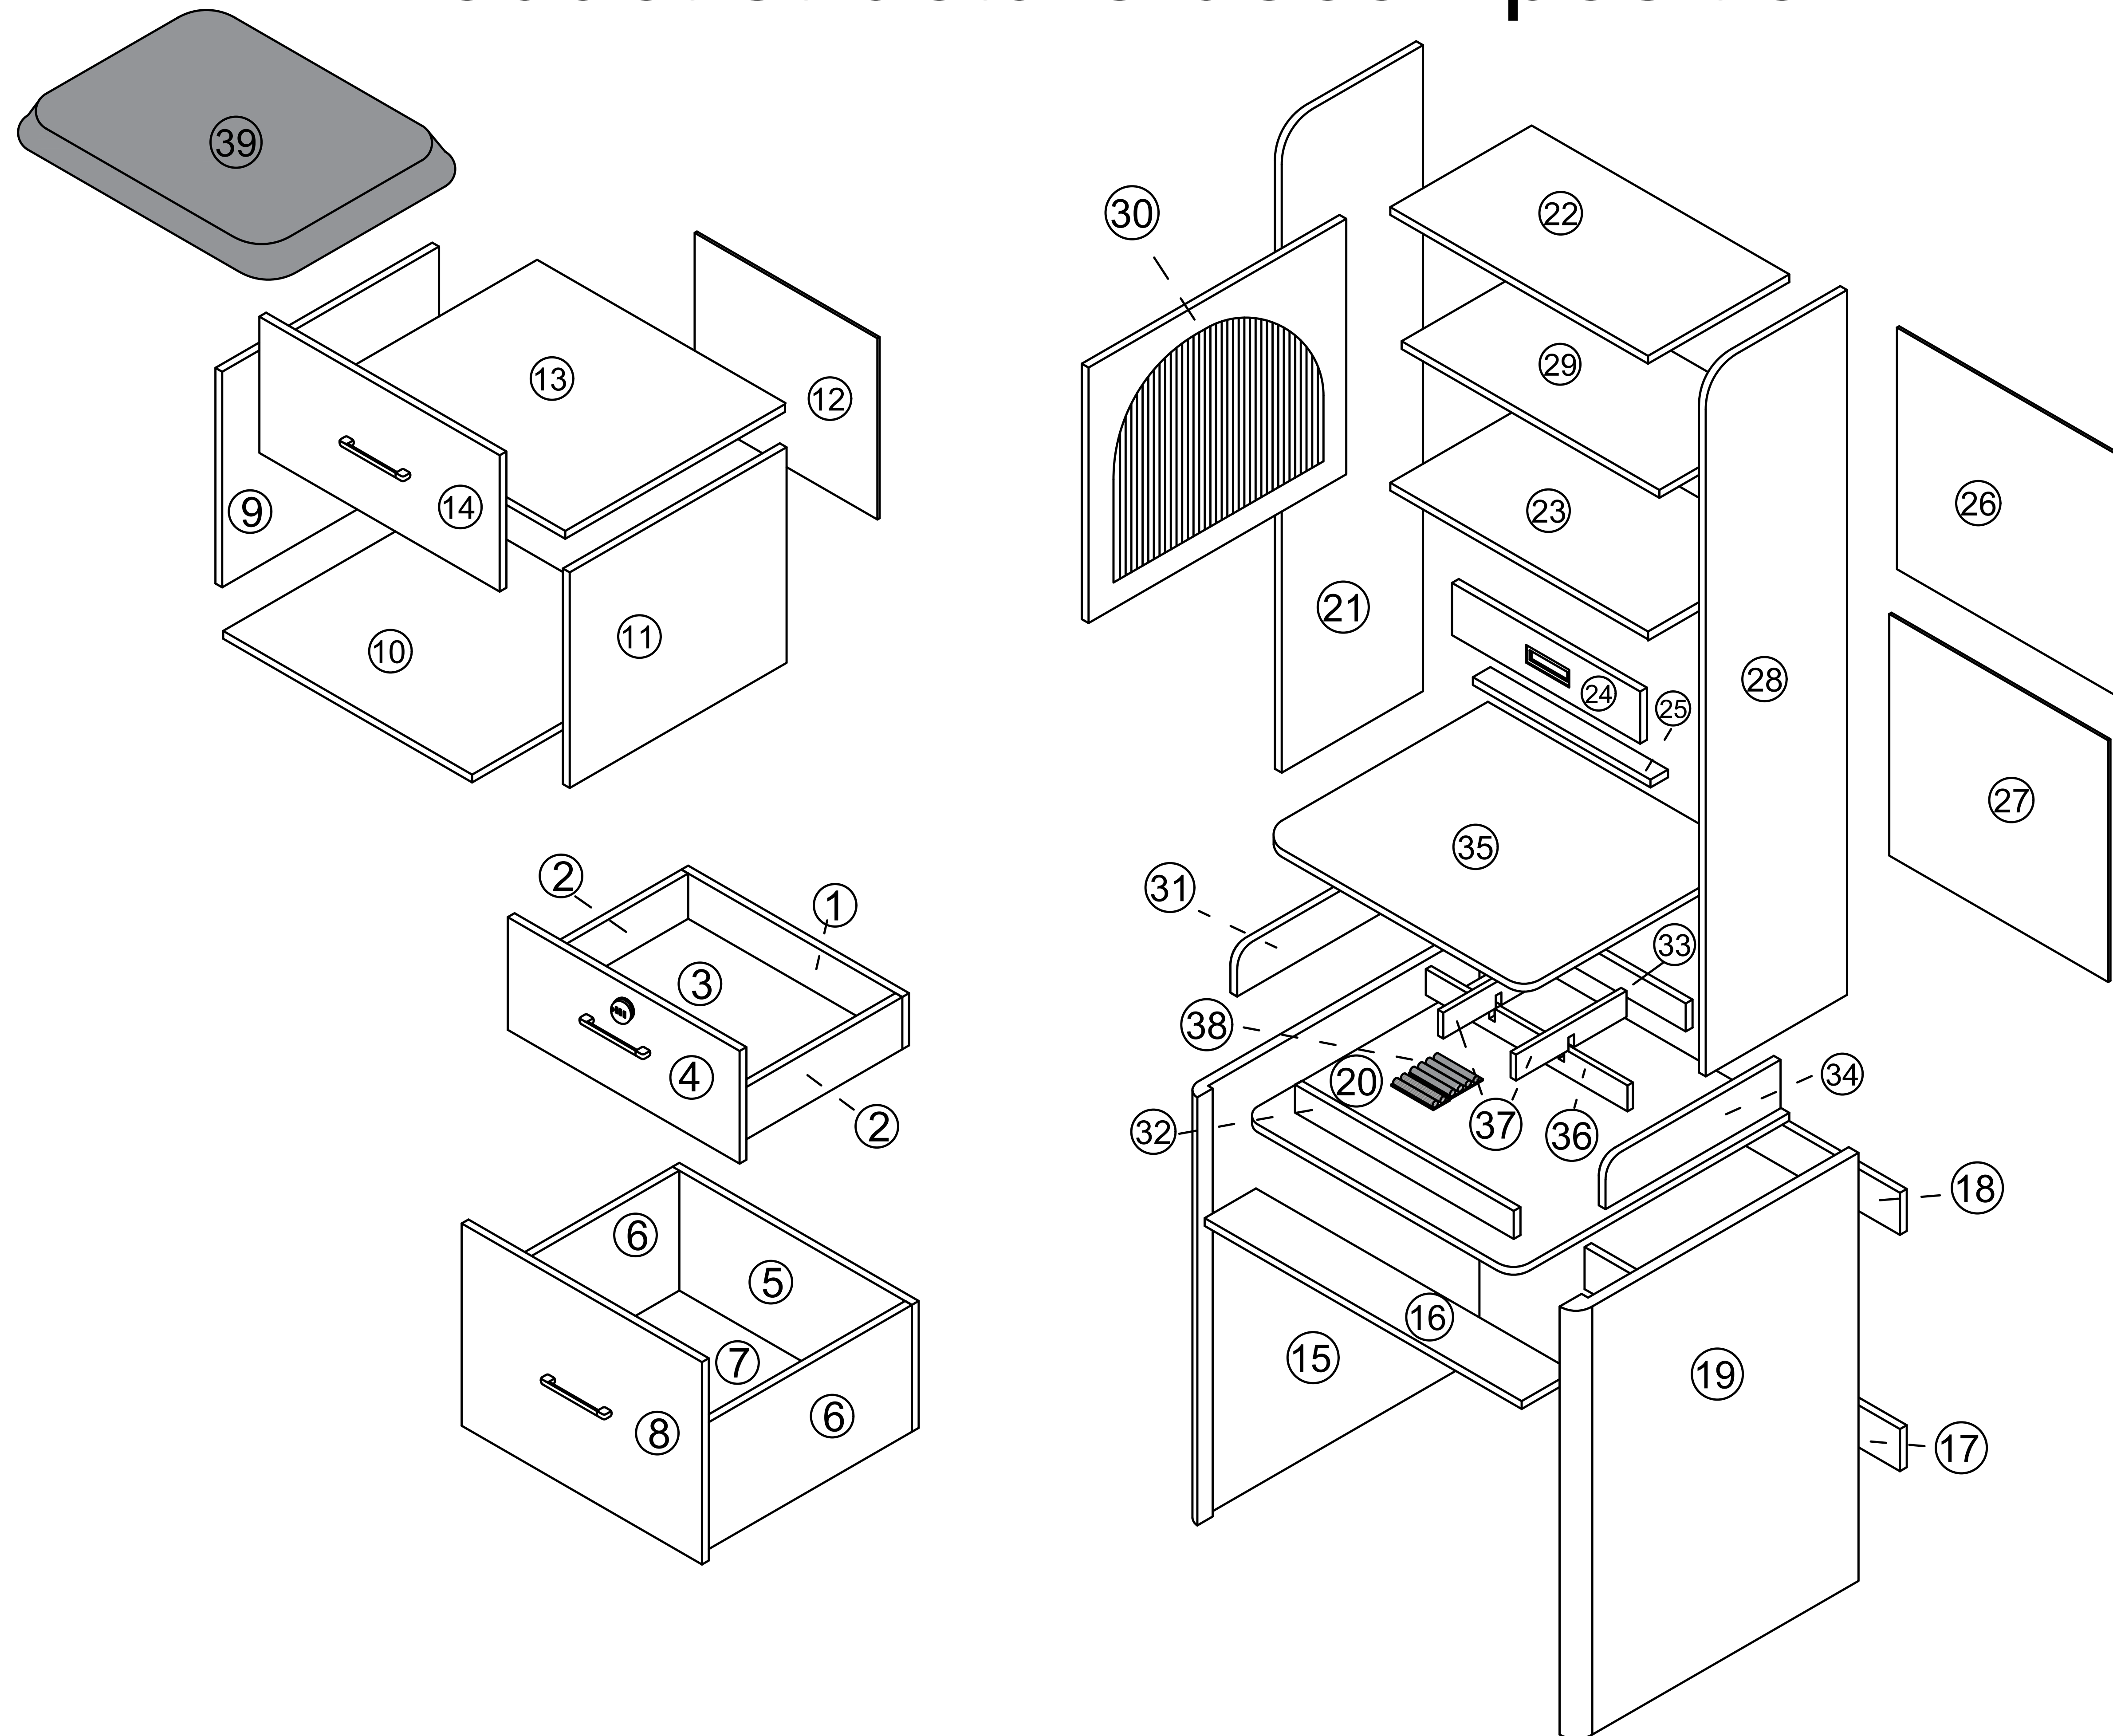


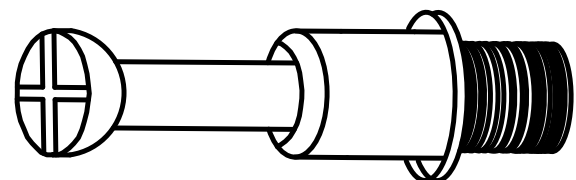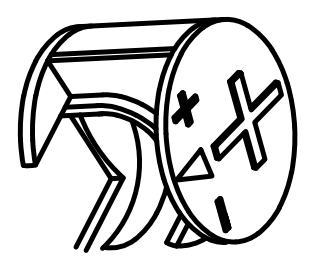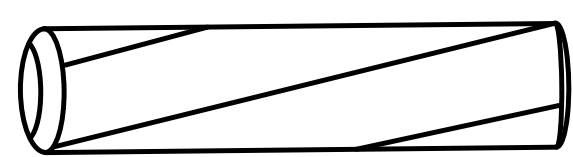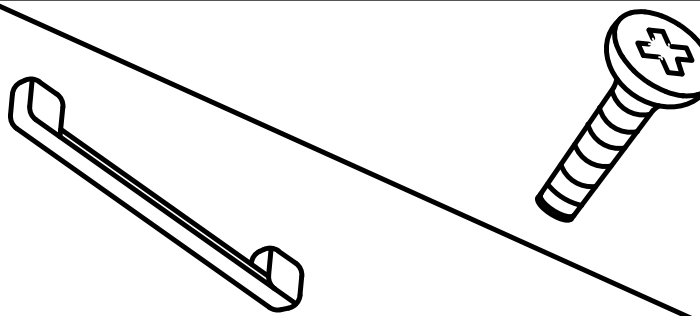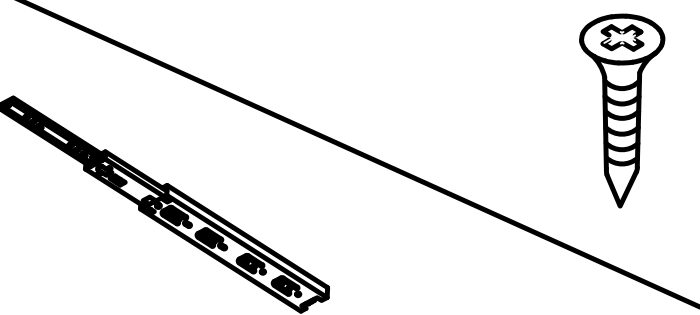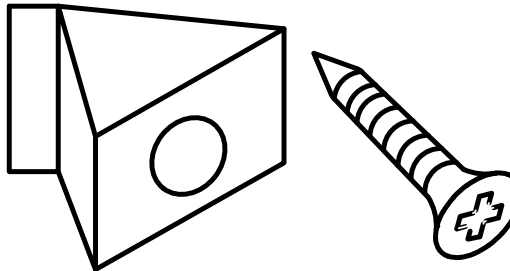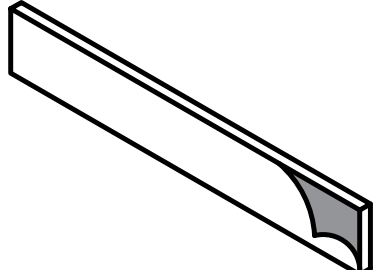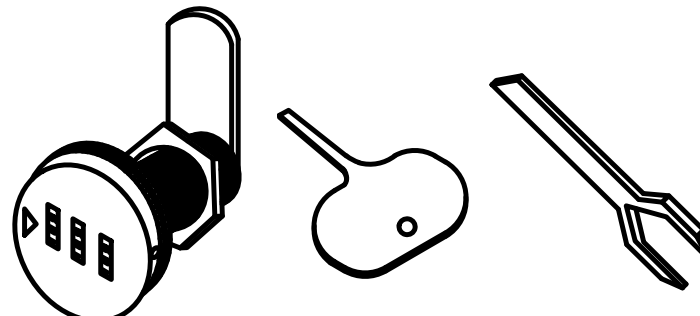A		29pcs
B		29pcs
C		8pcs
D		6pcs
E		14pcs
J		4pcs
K		4pcs
N		2pcs
P		1pcs

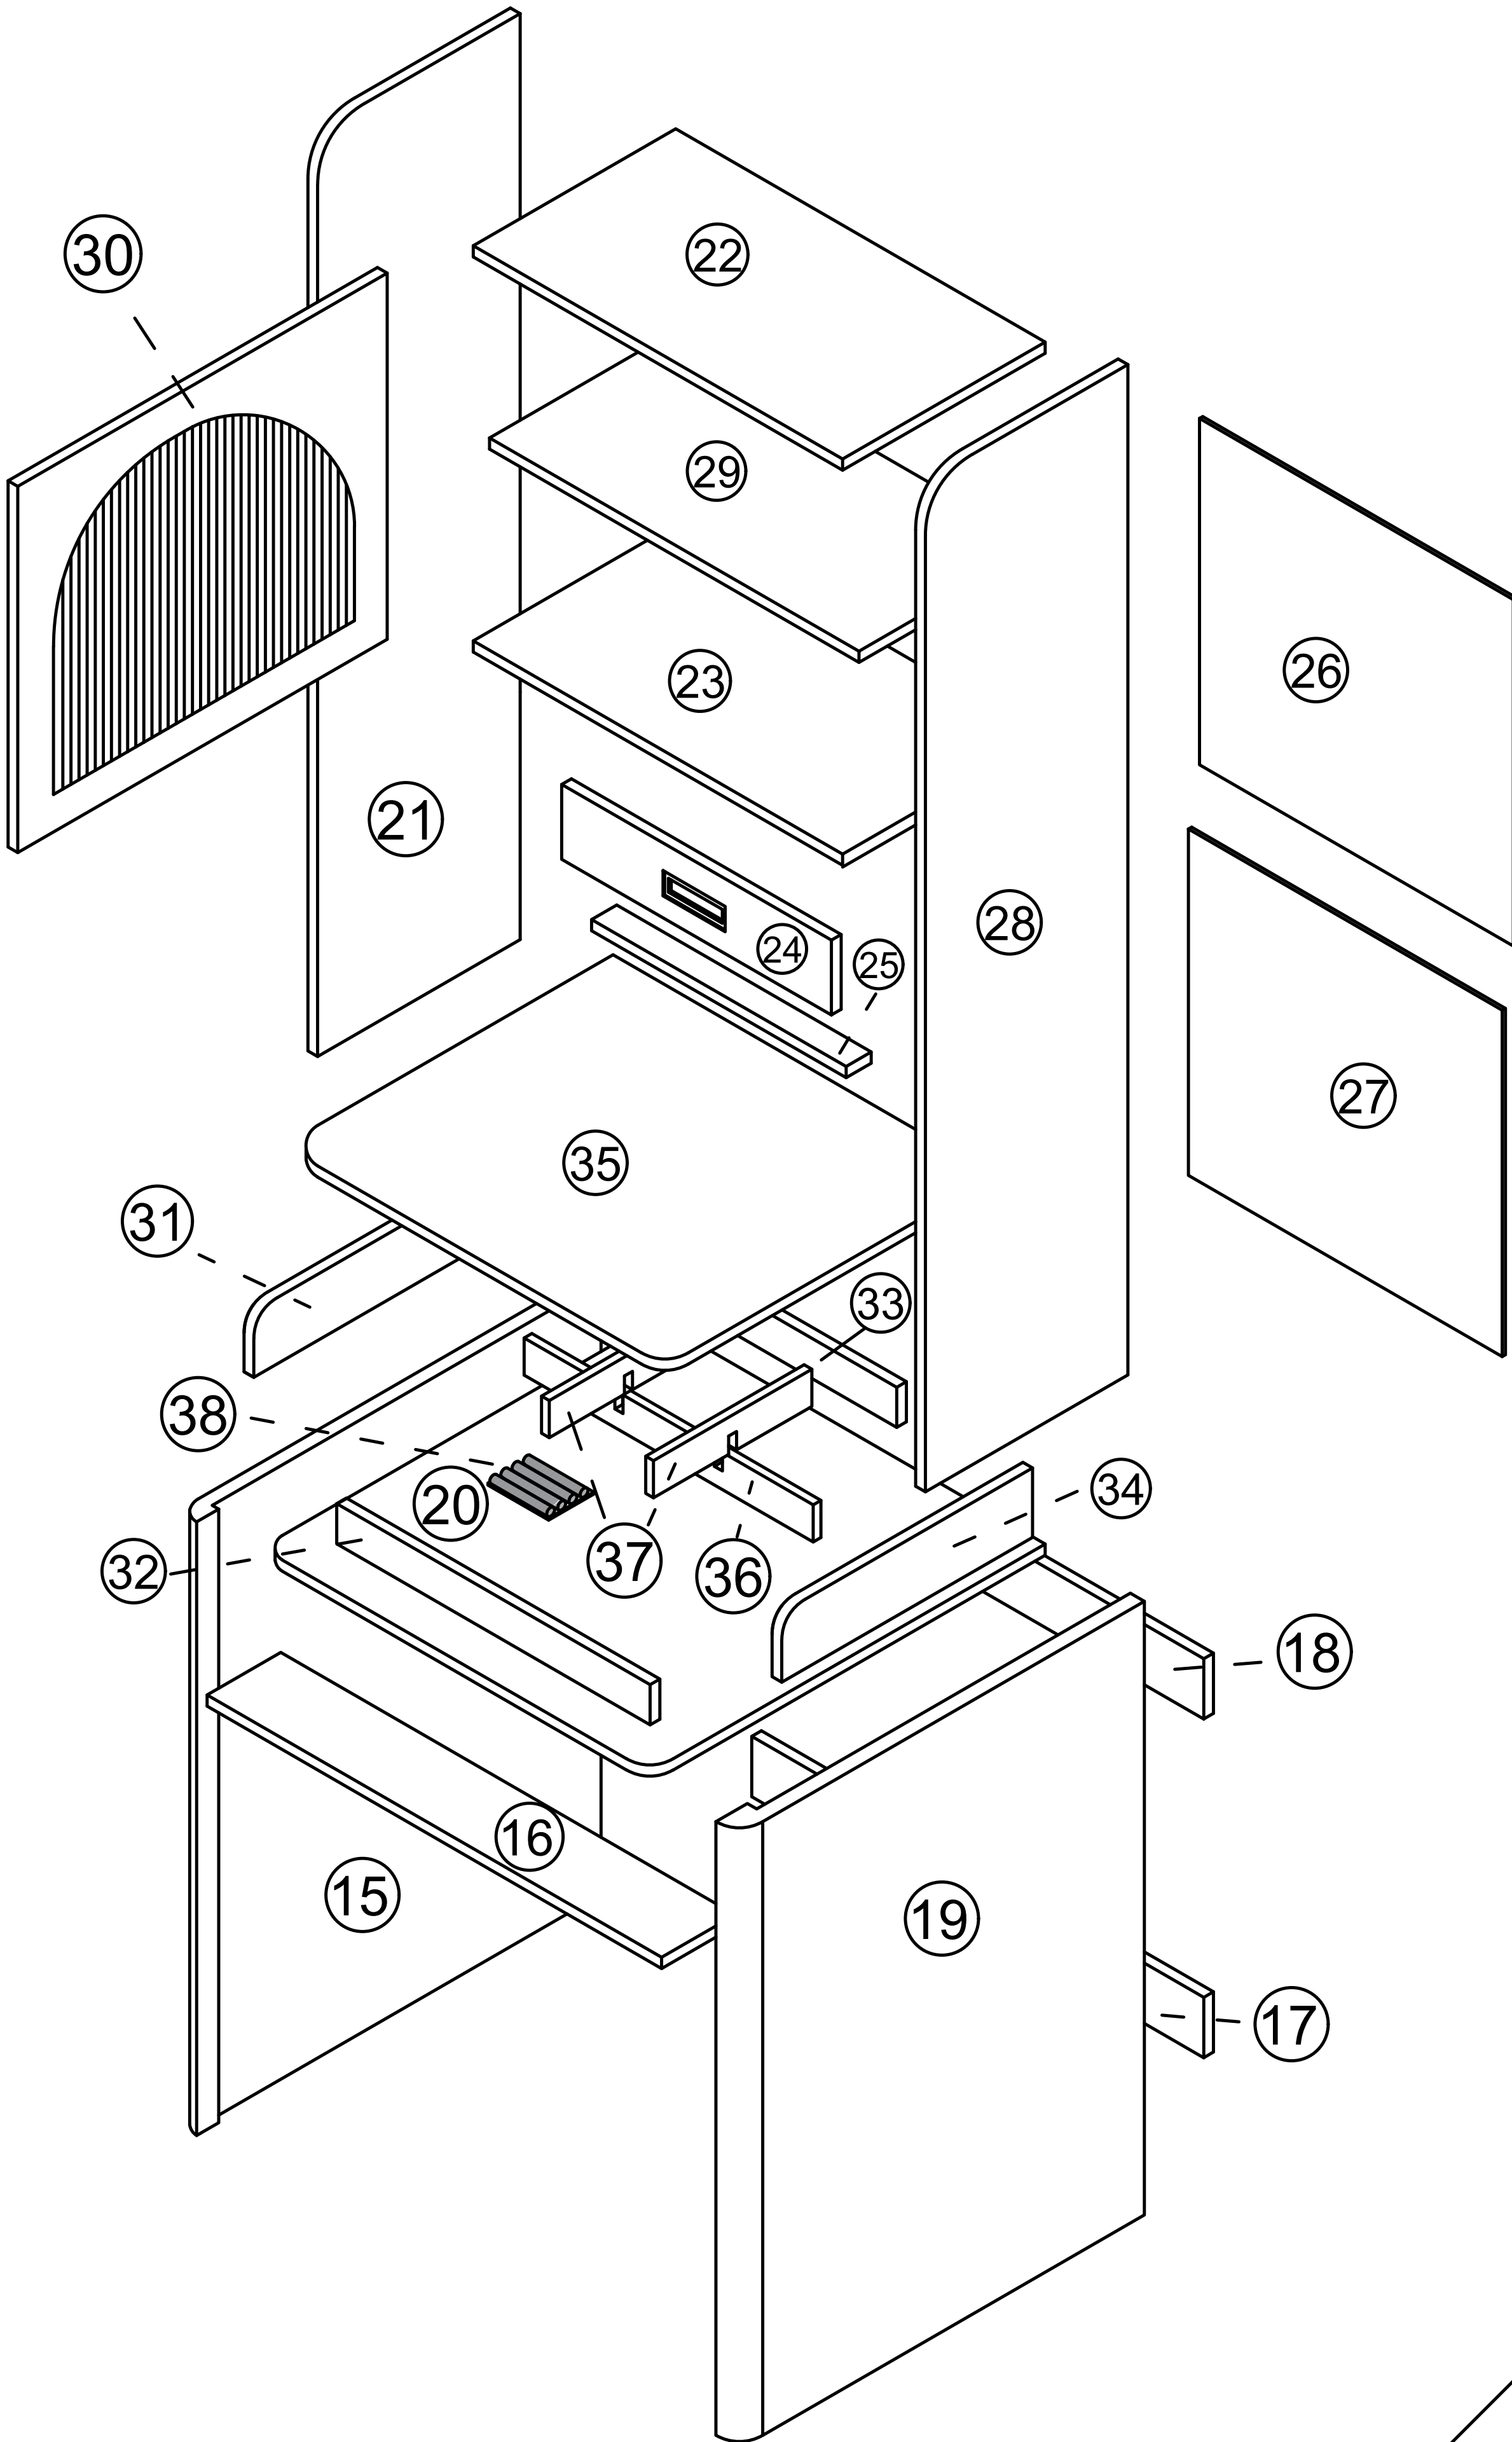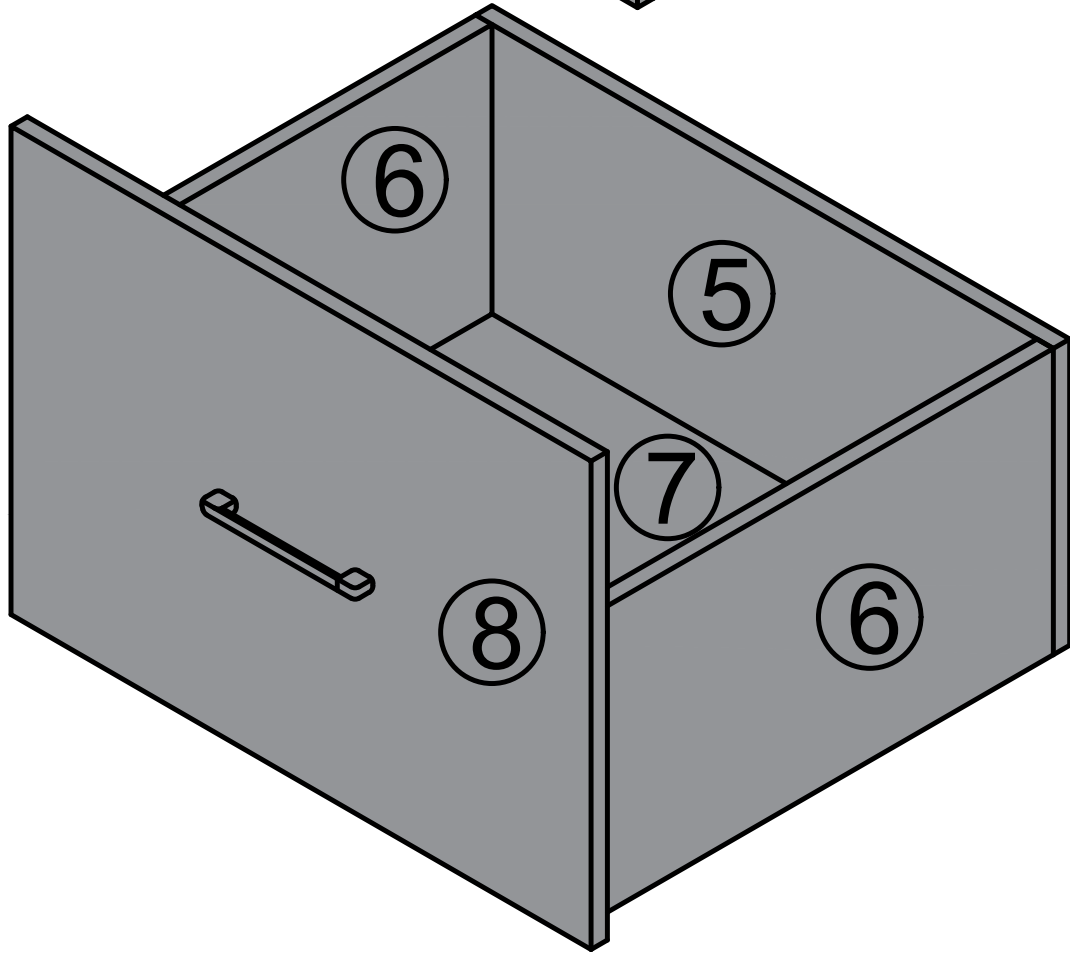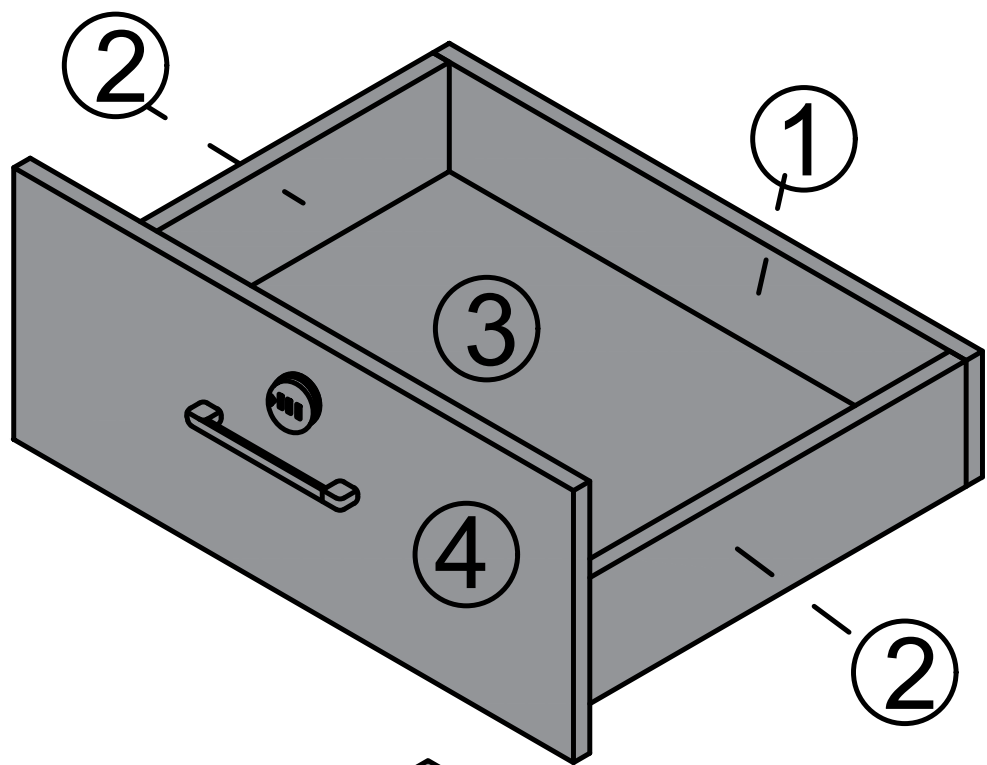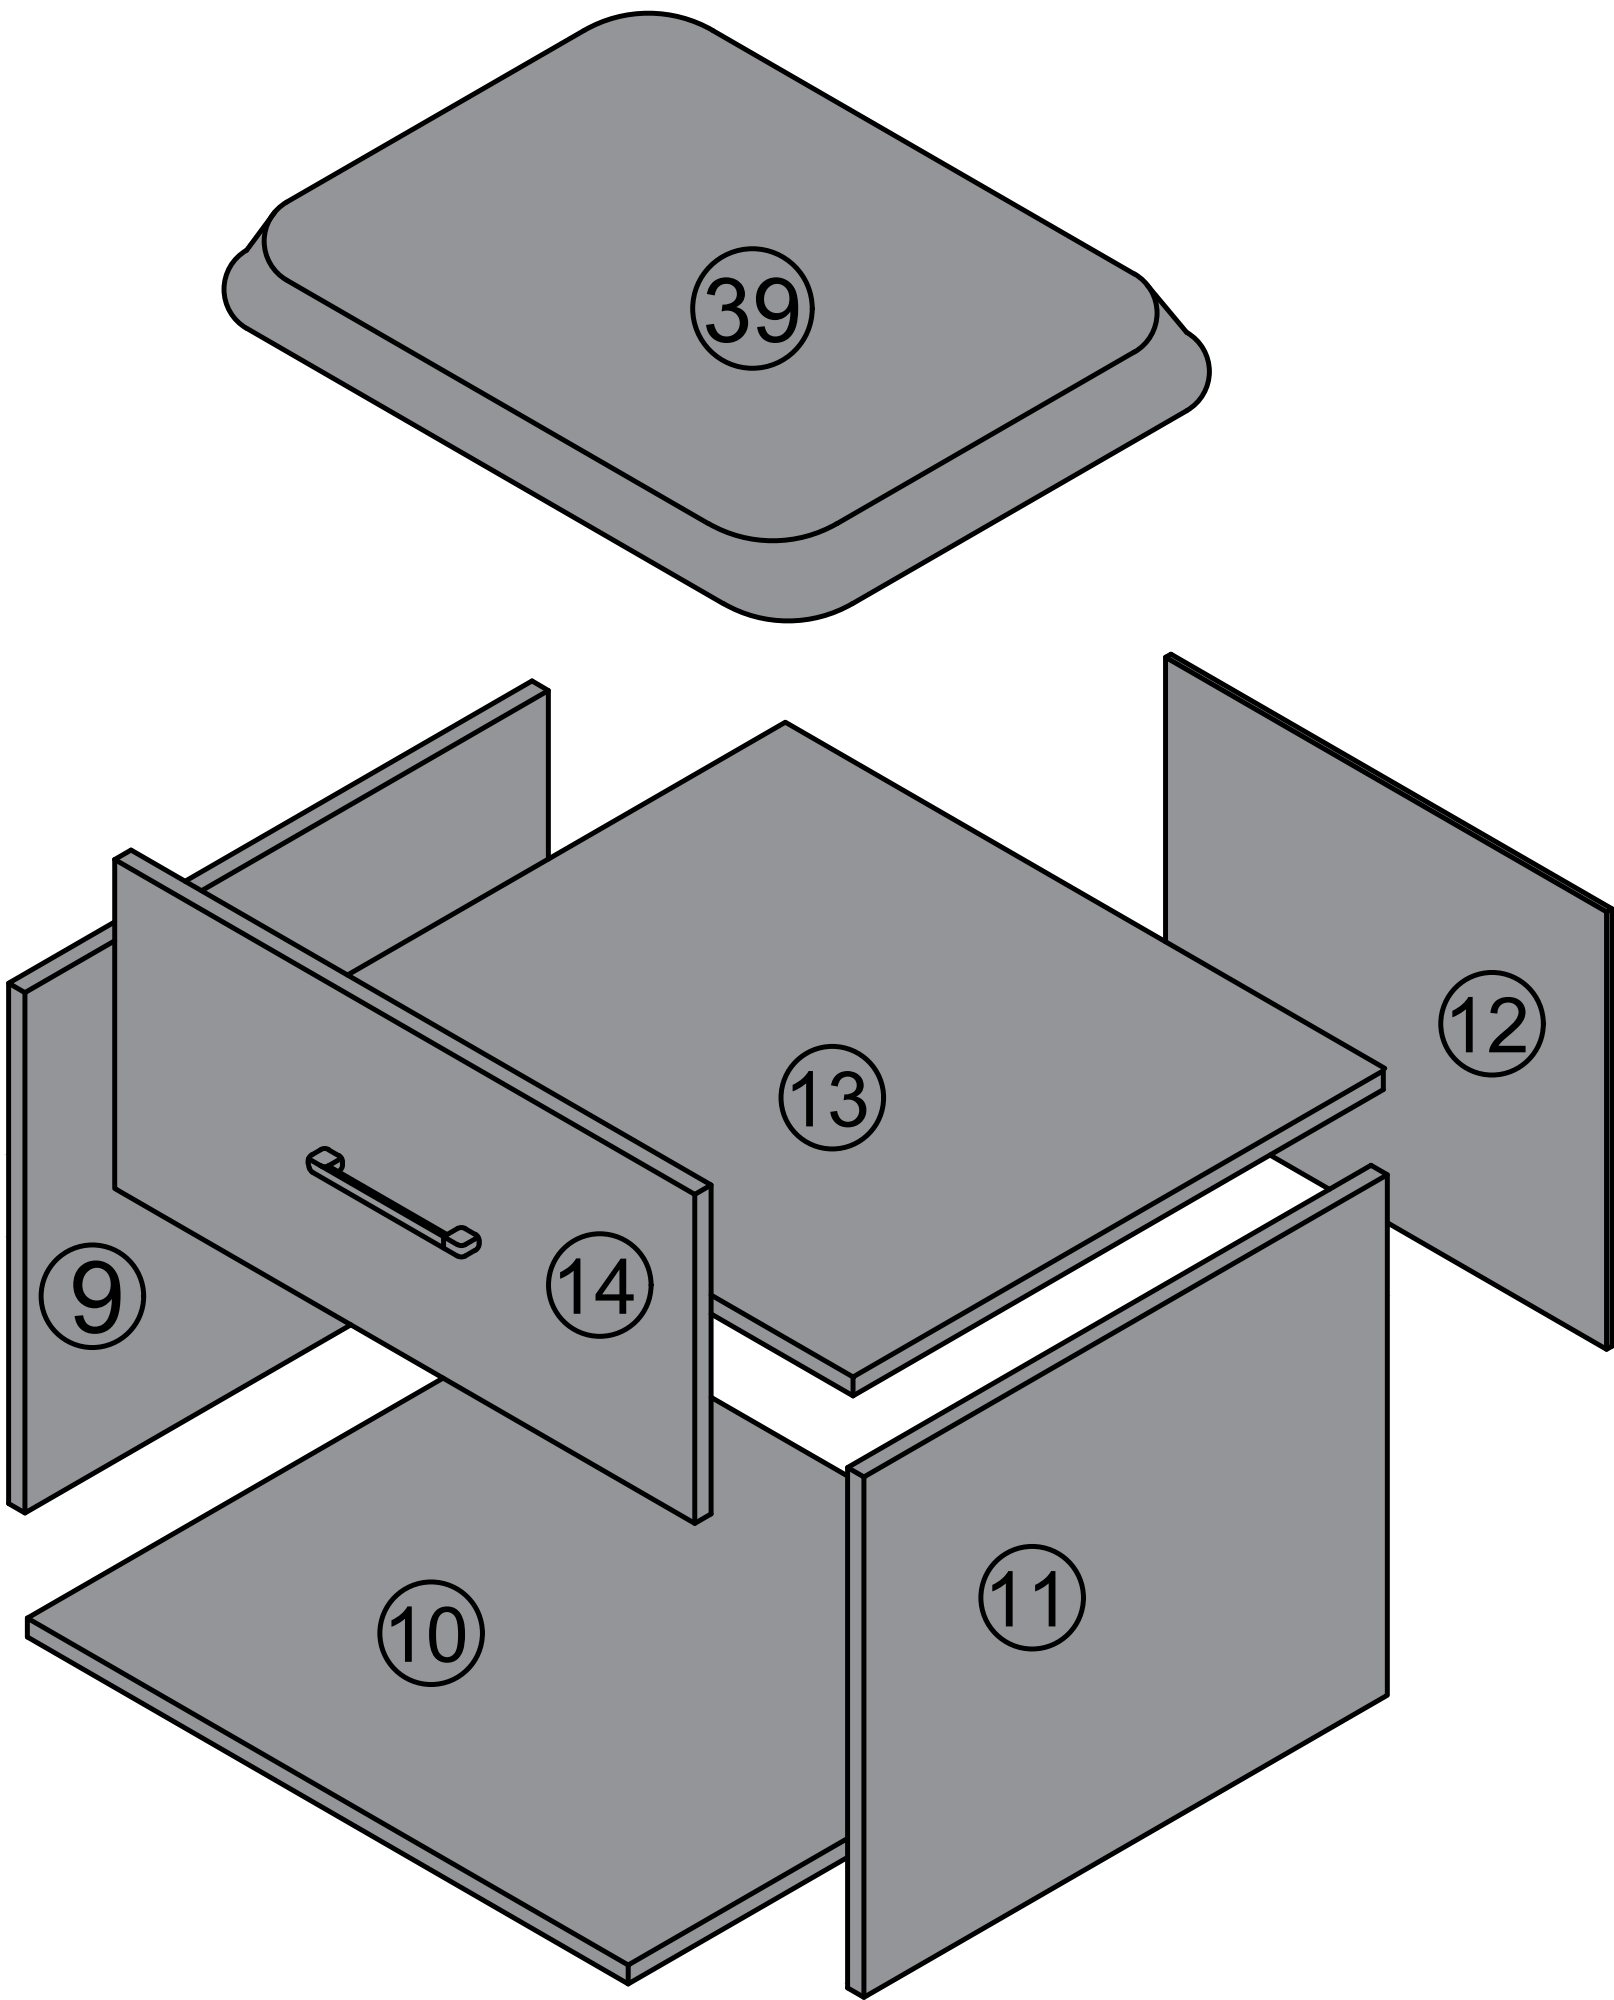


Use parts ① and ②




Step1

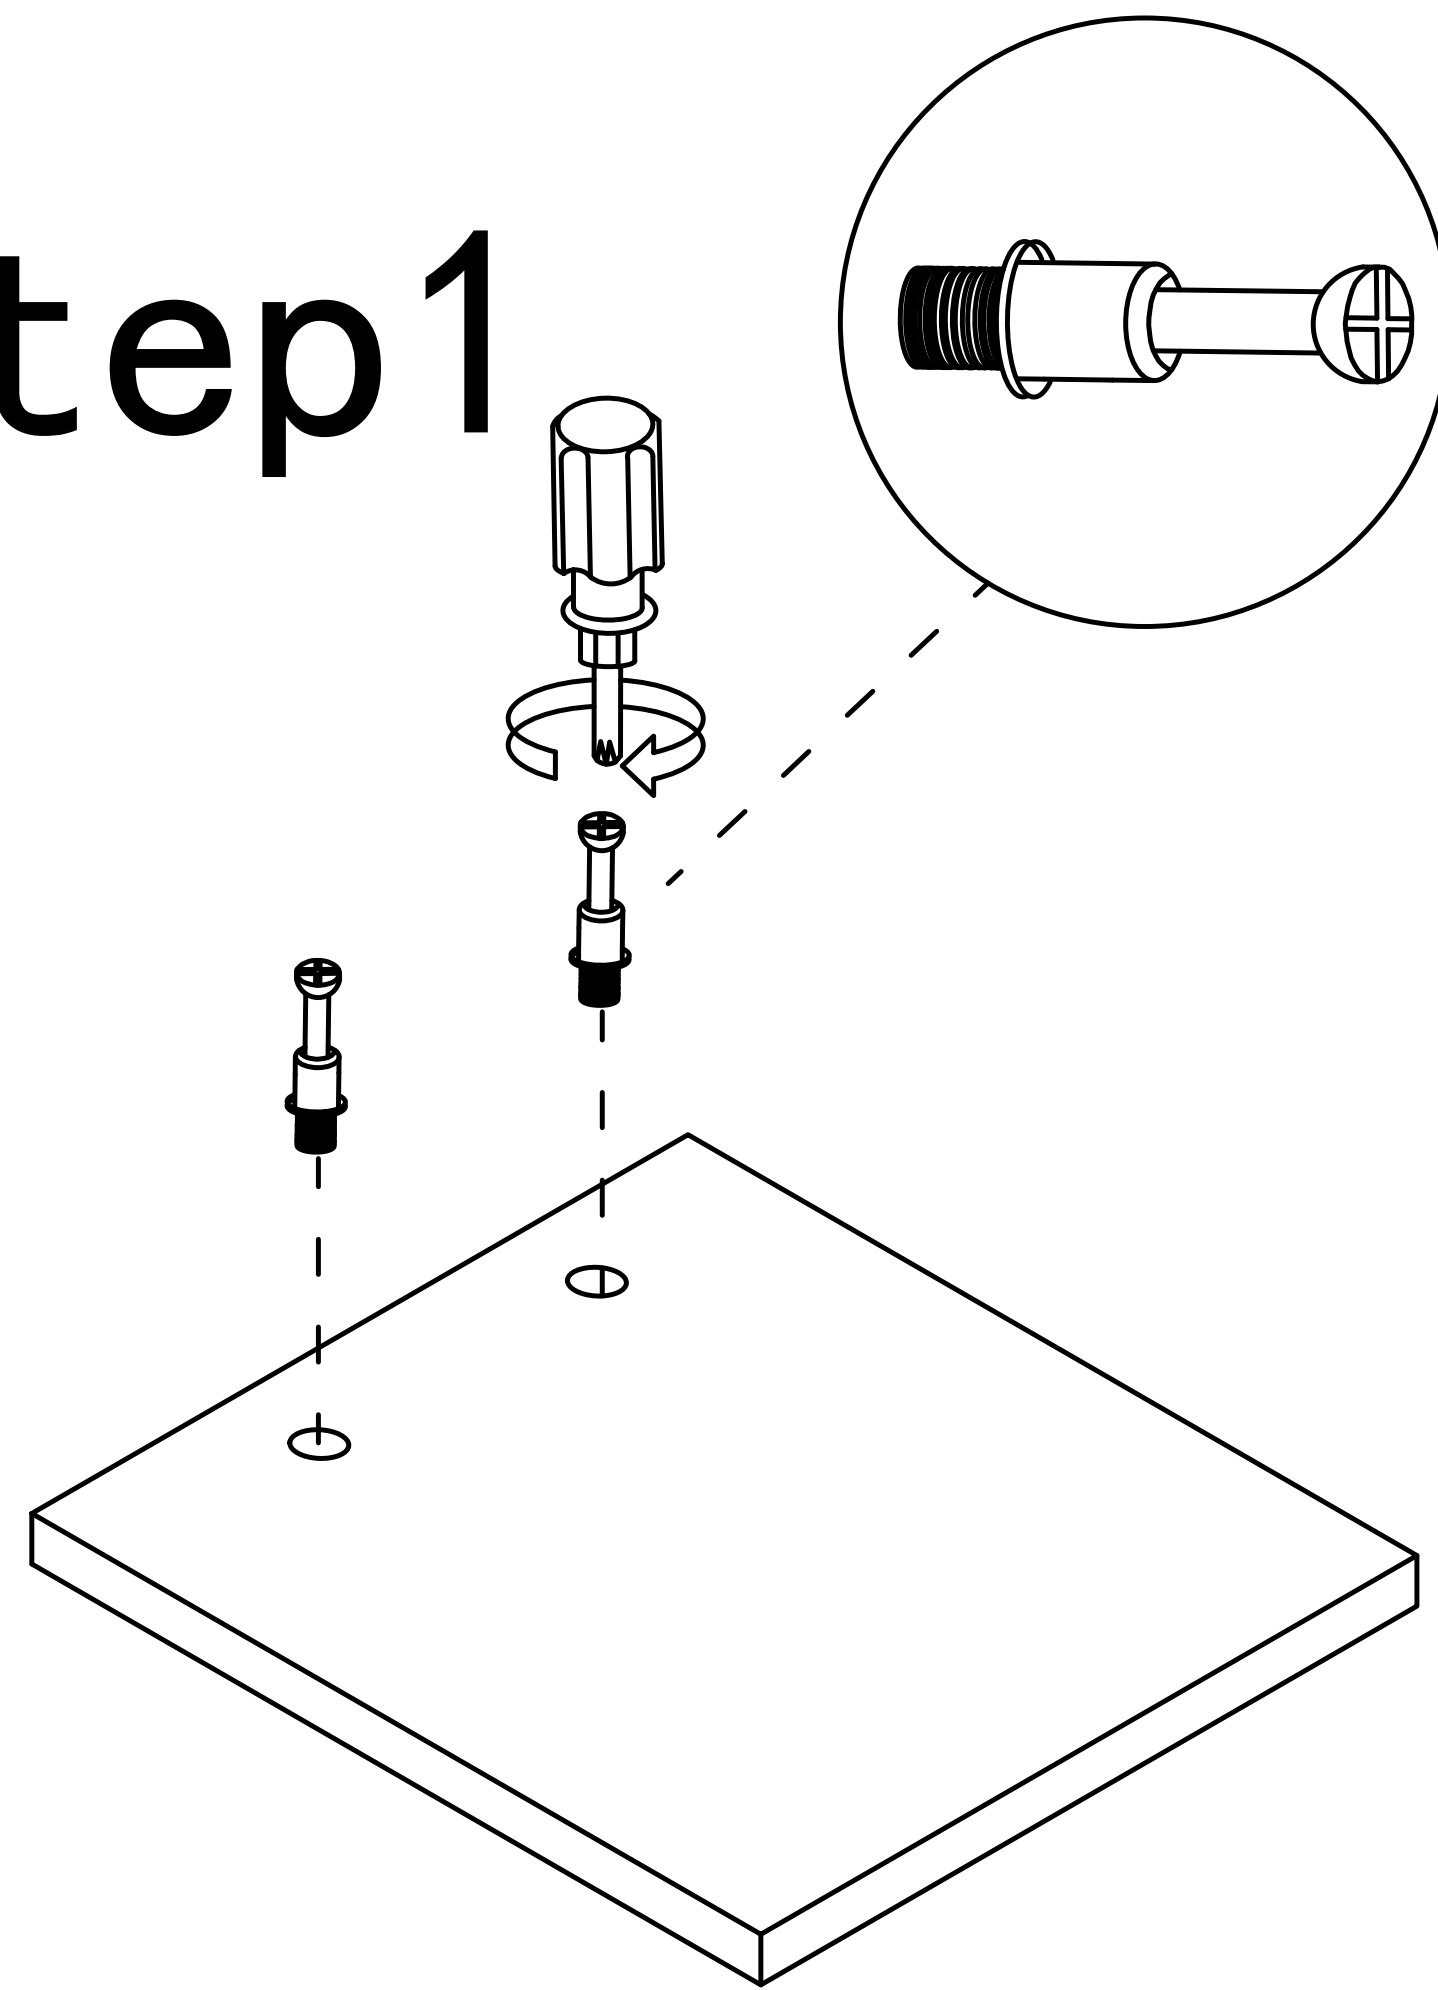

Step2

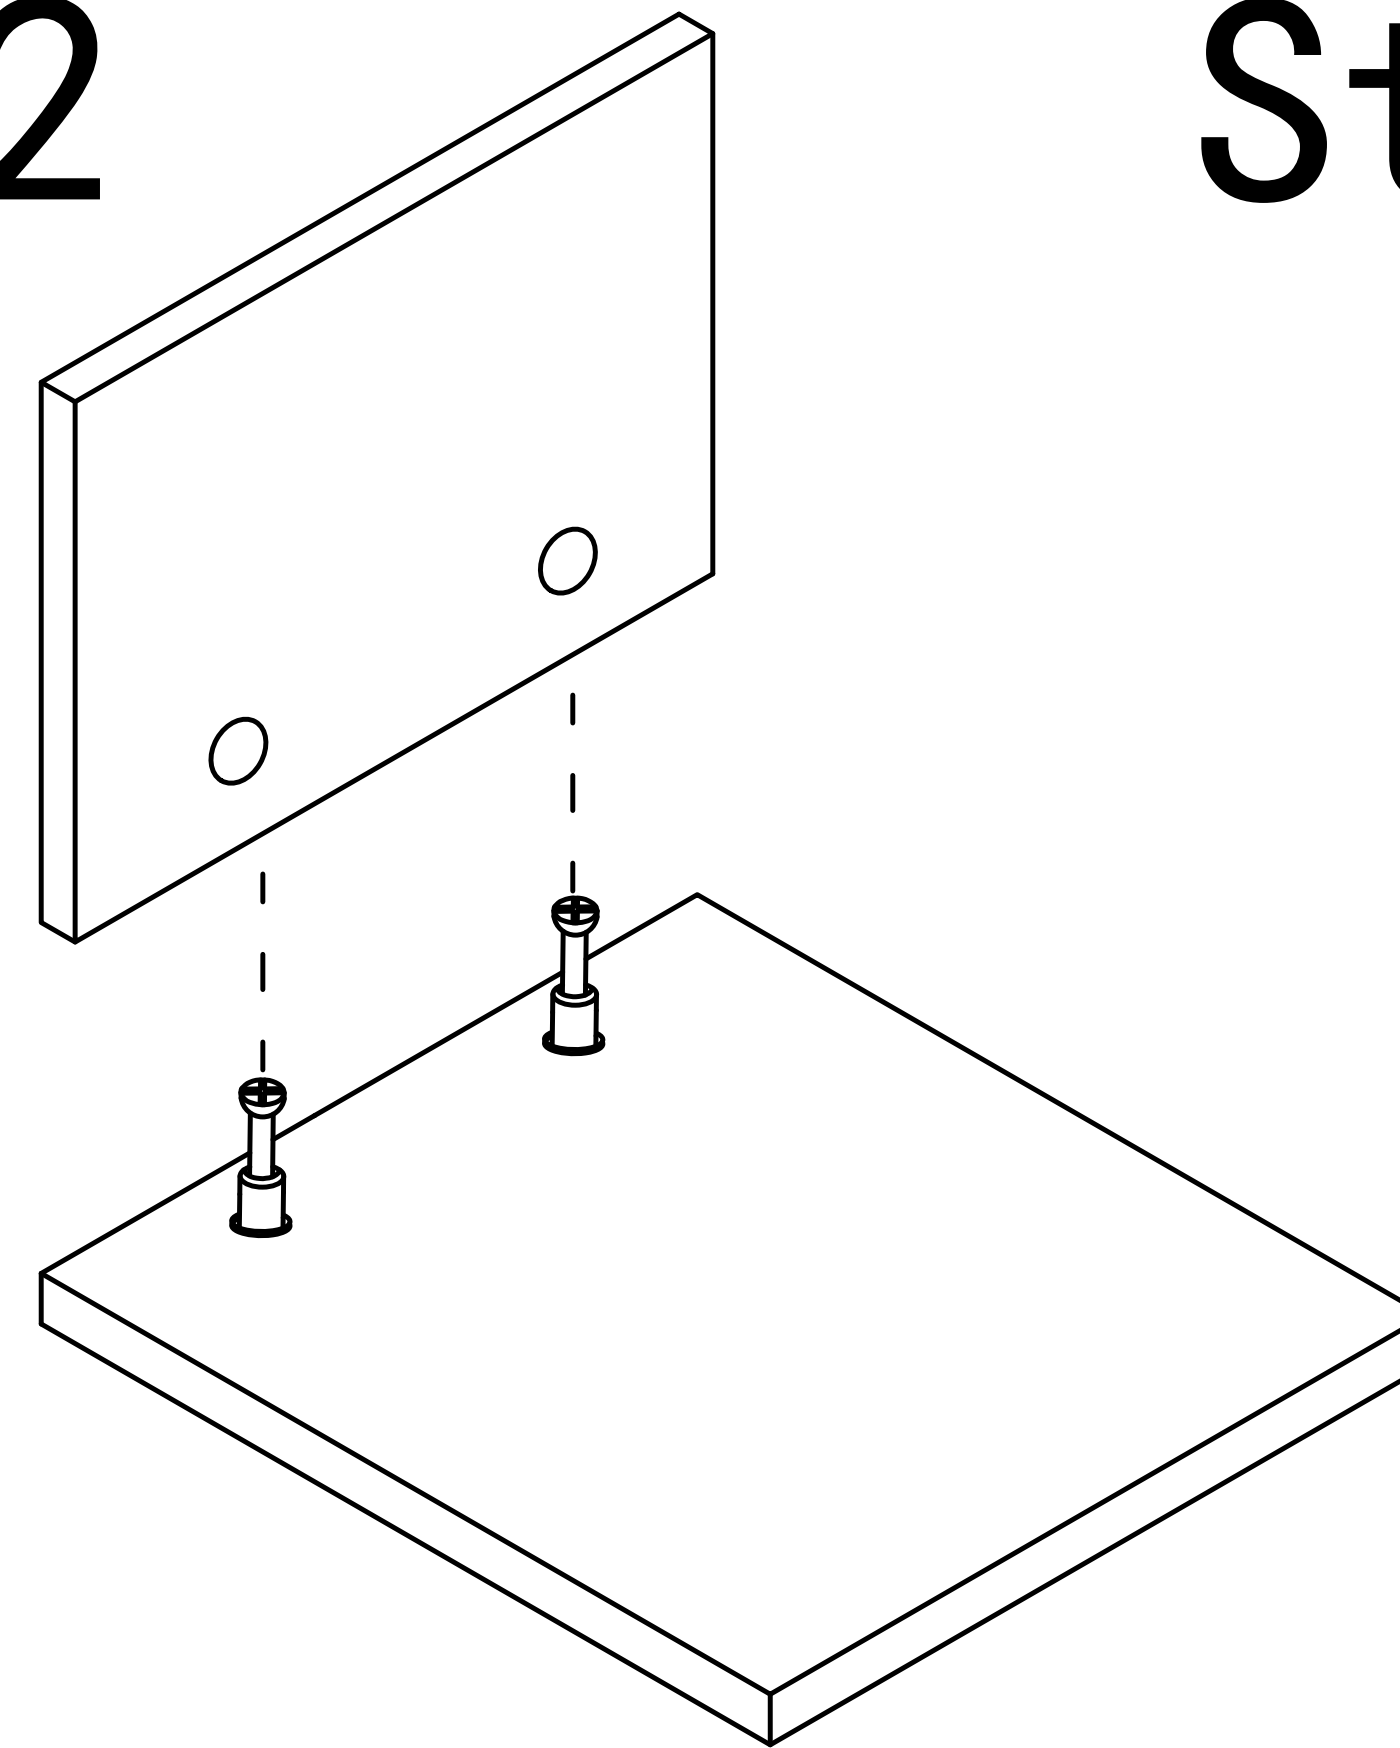



Step3

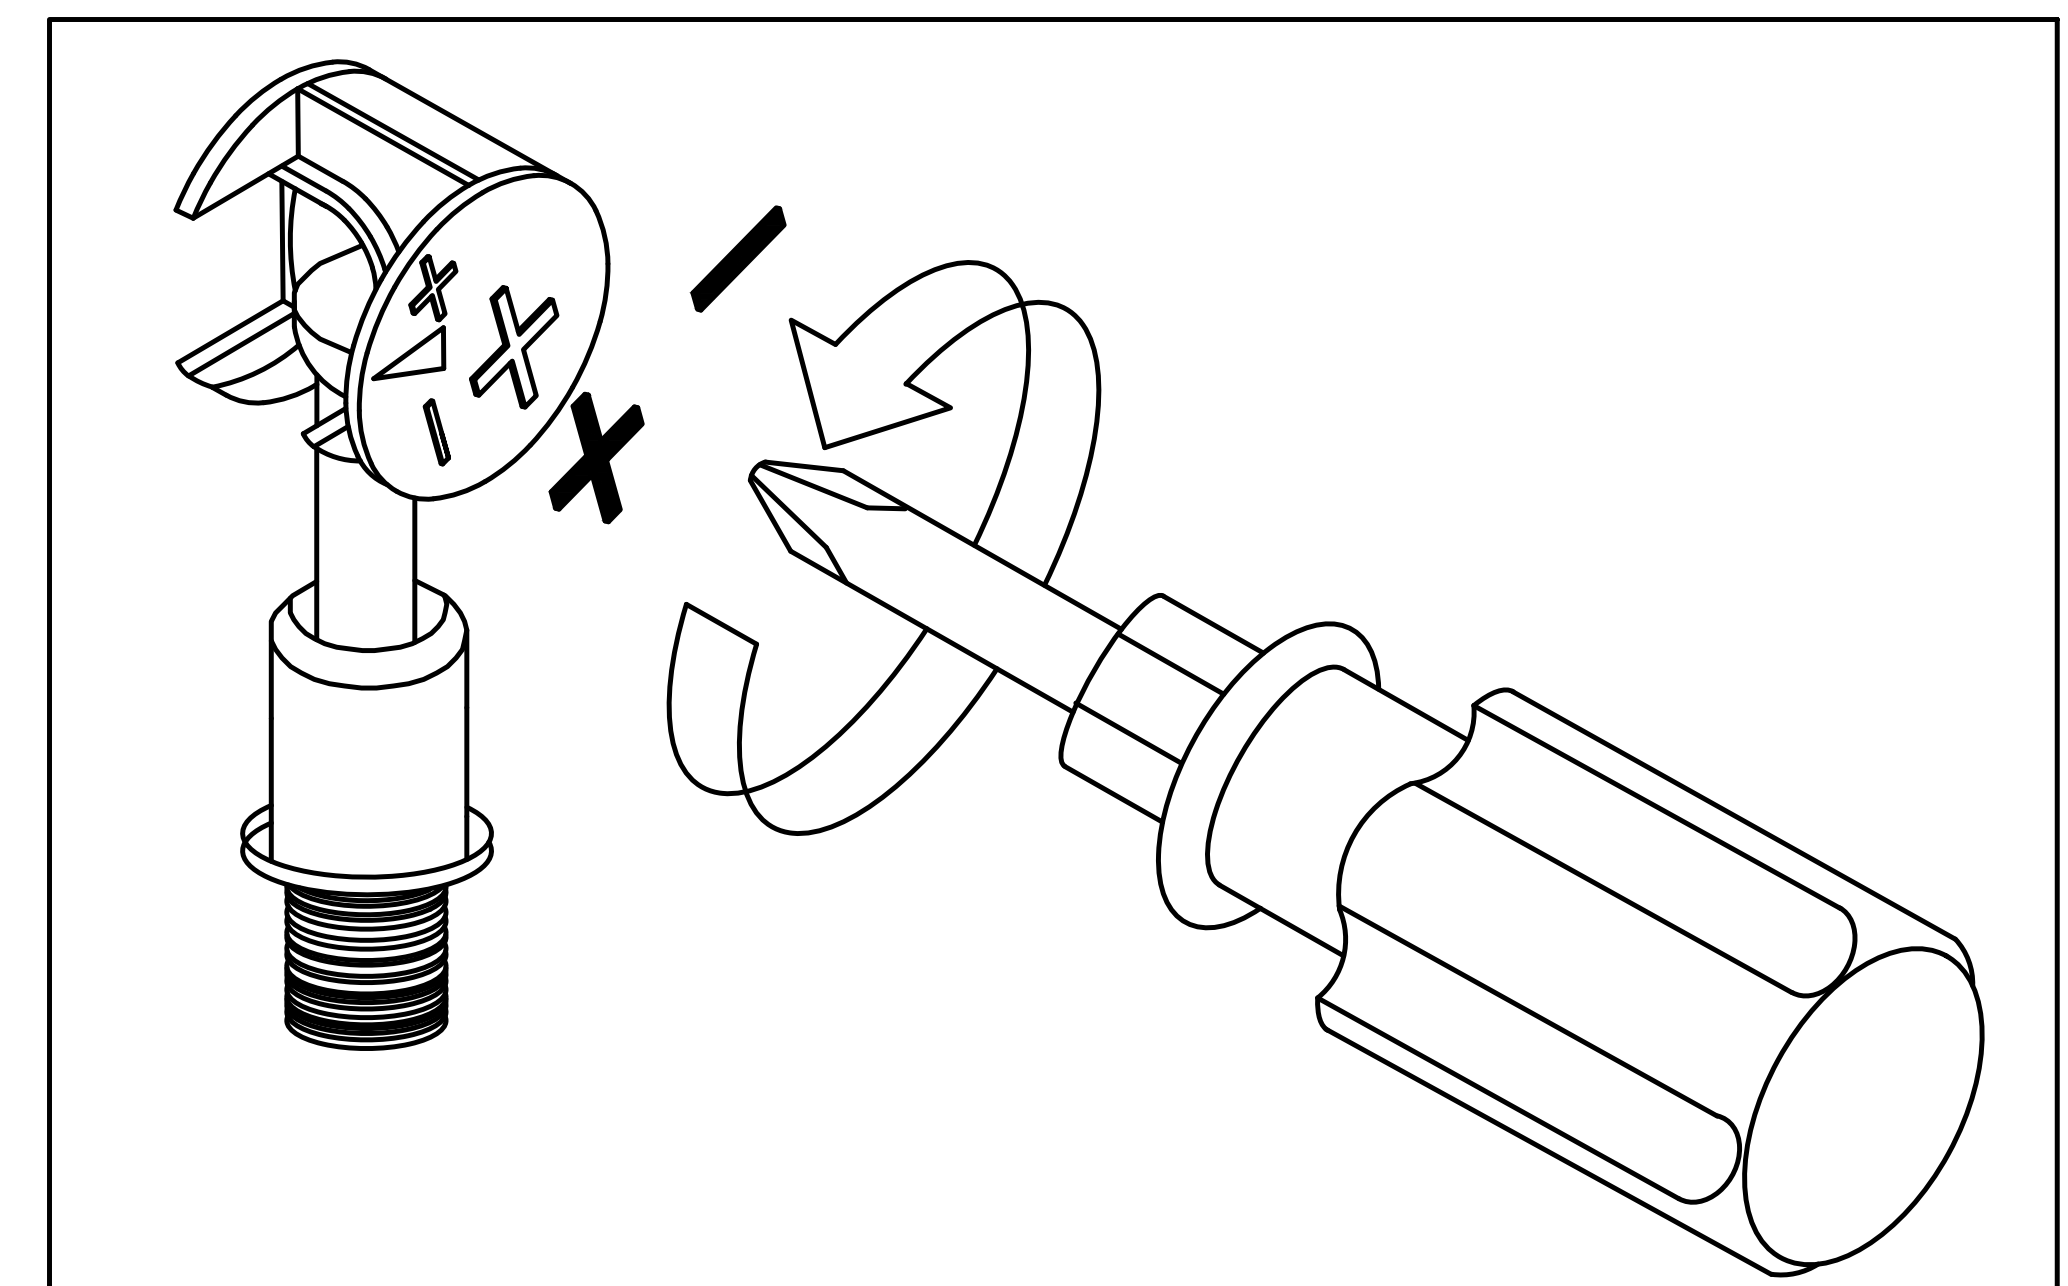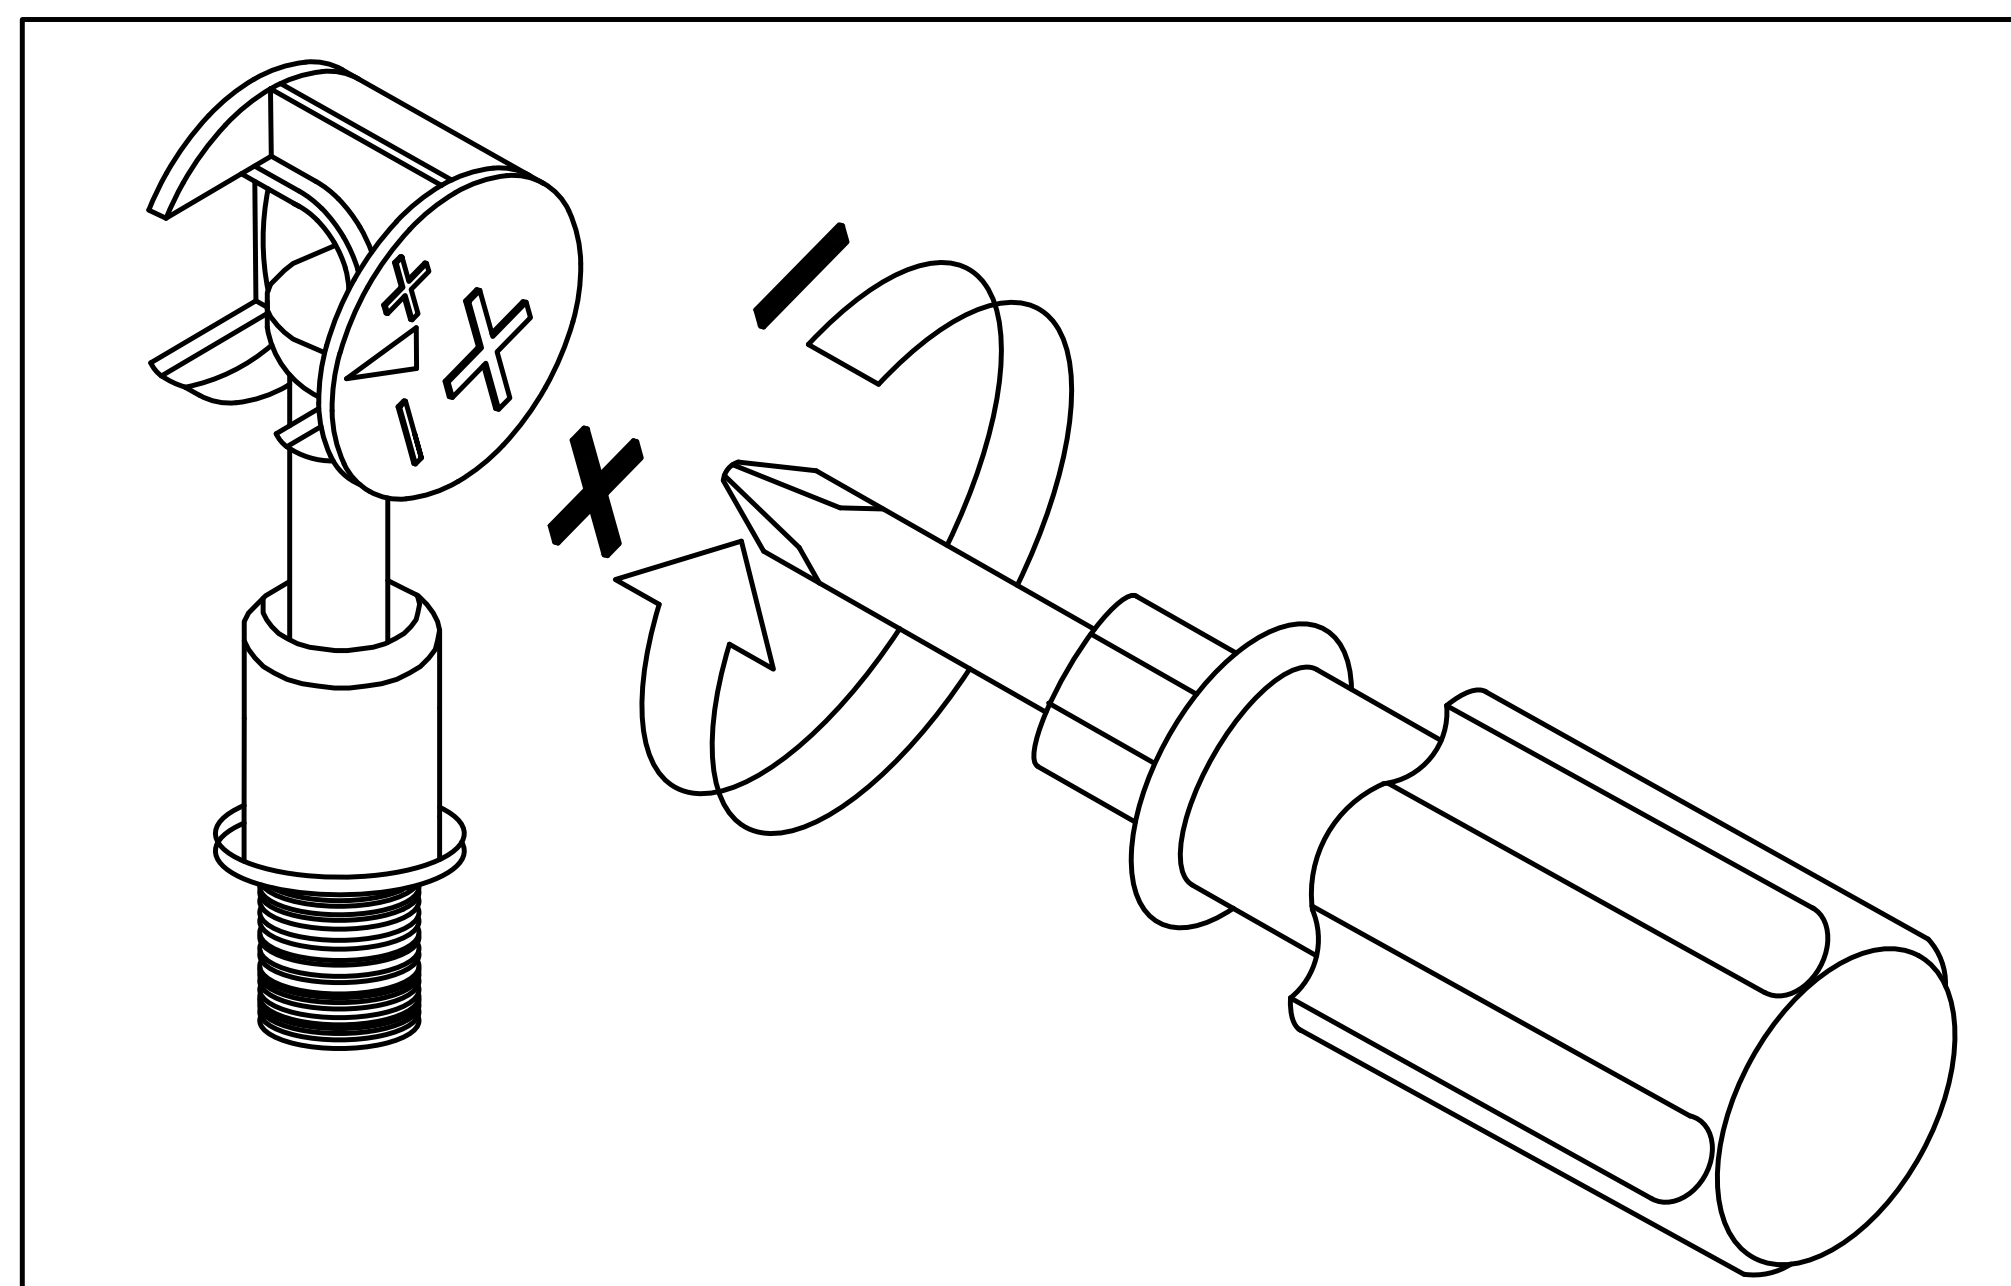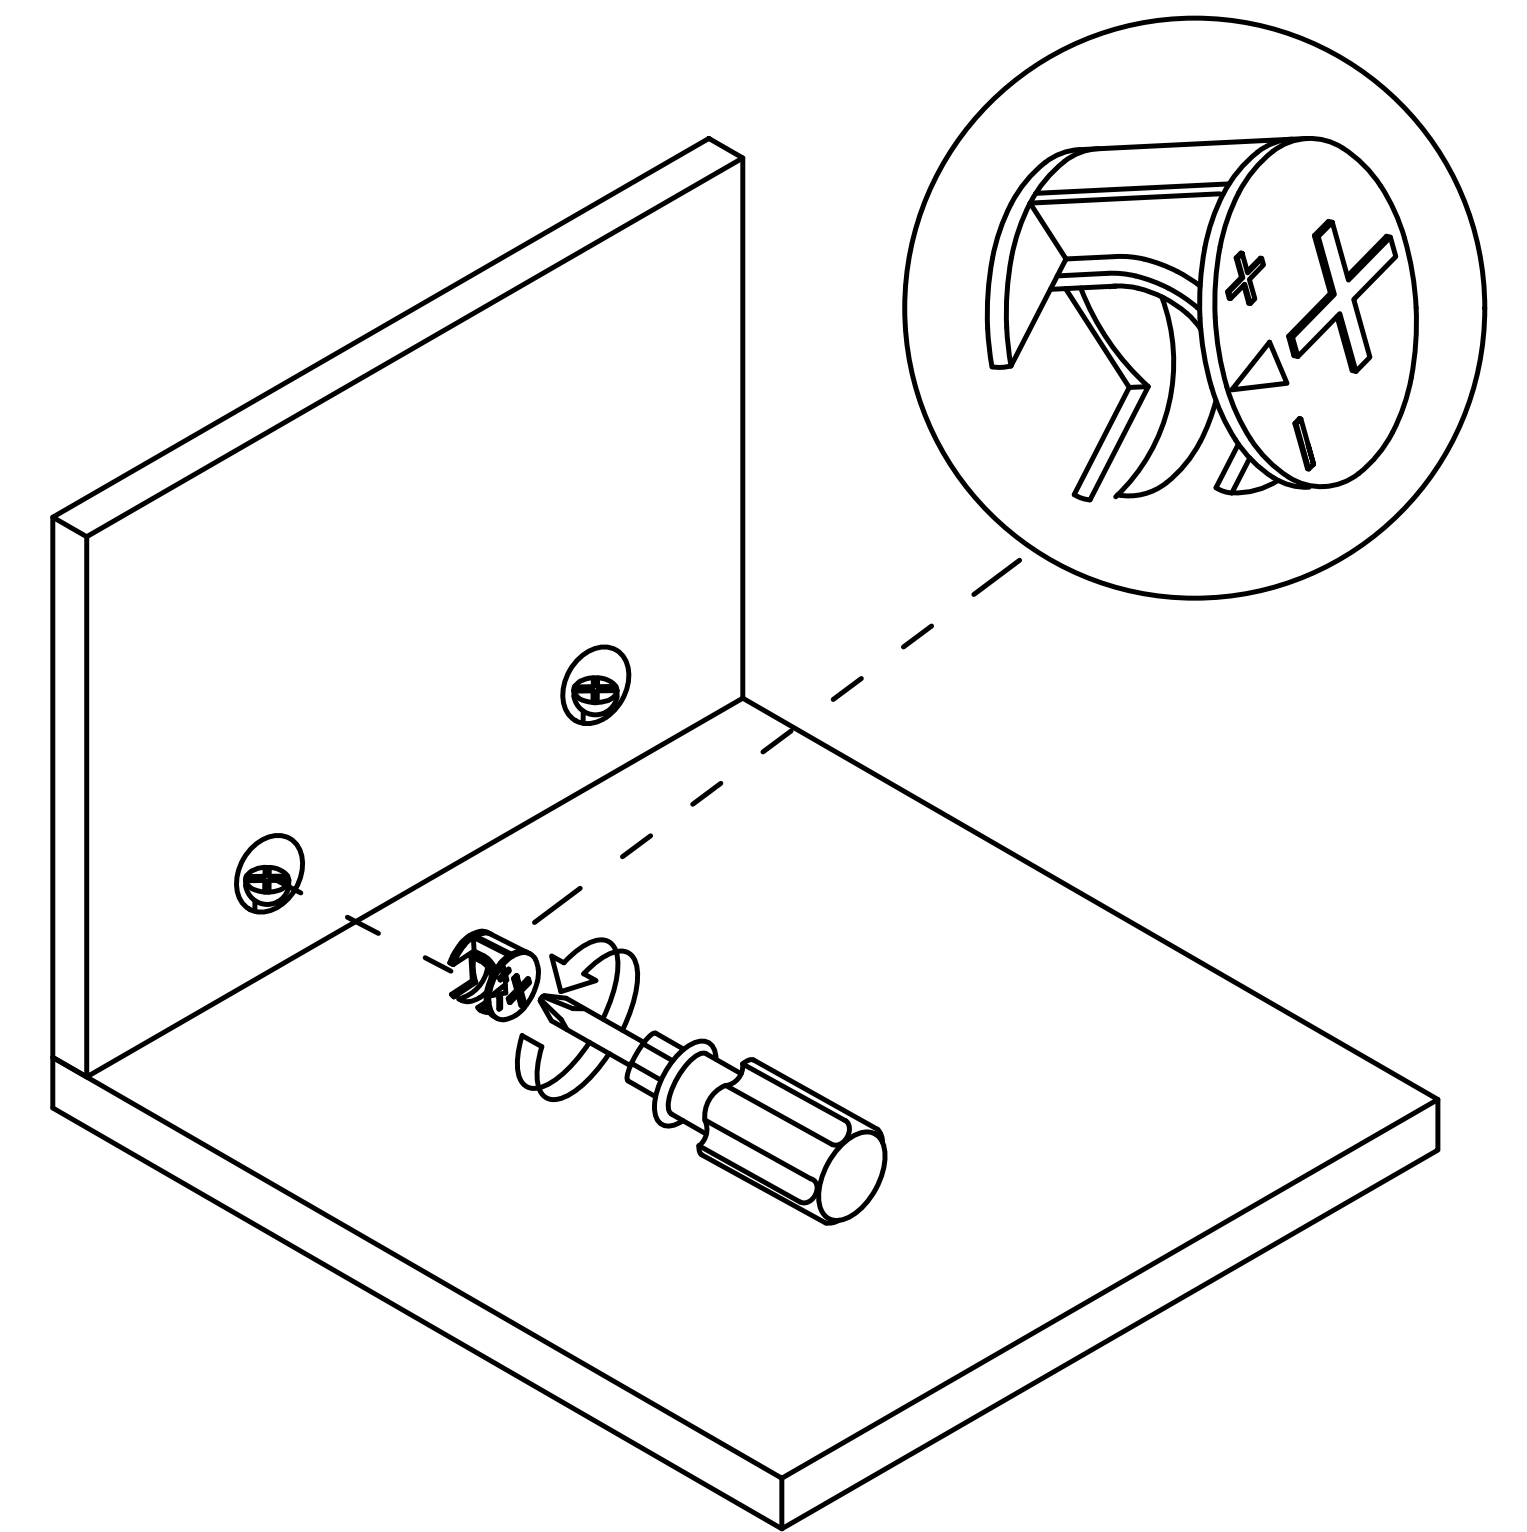





Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign


Step 1

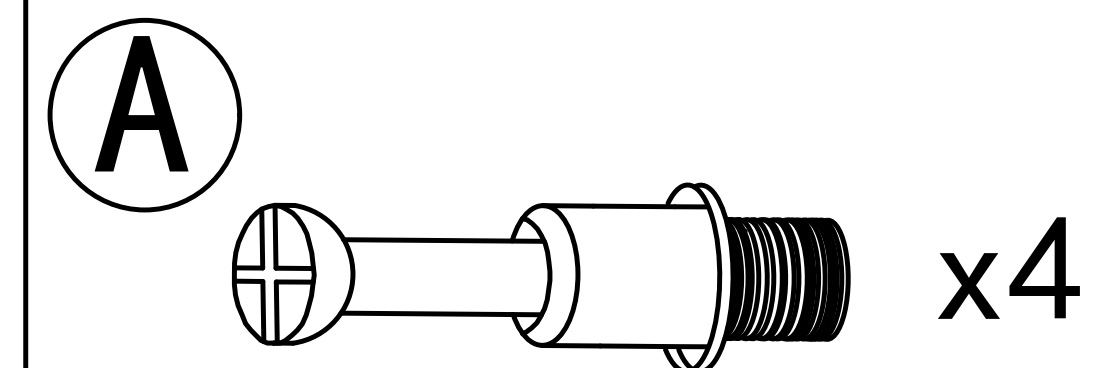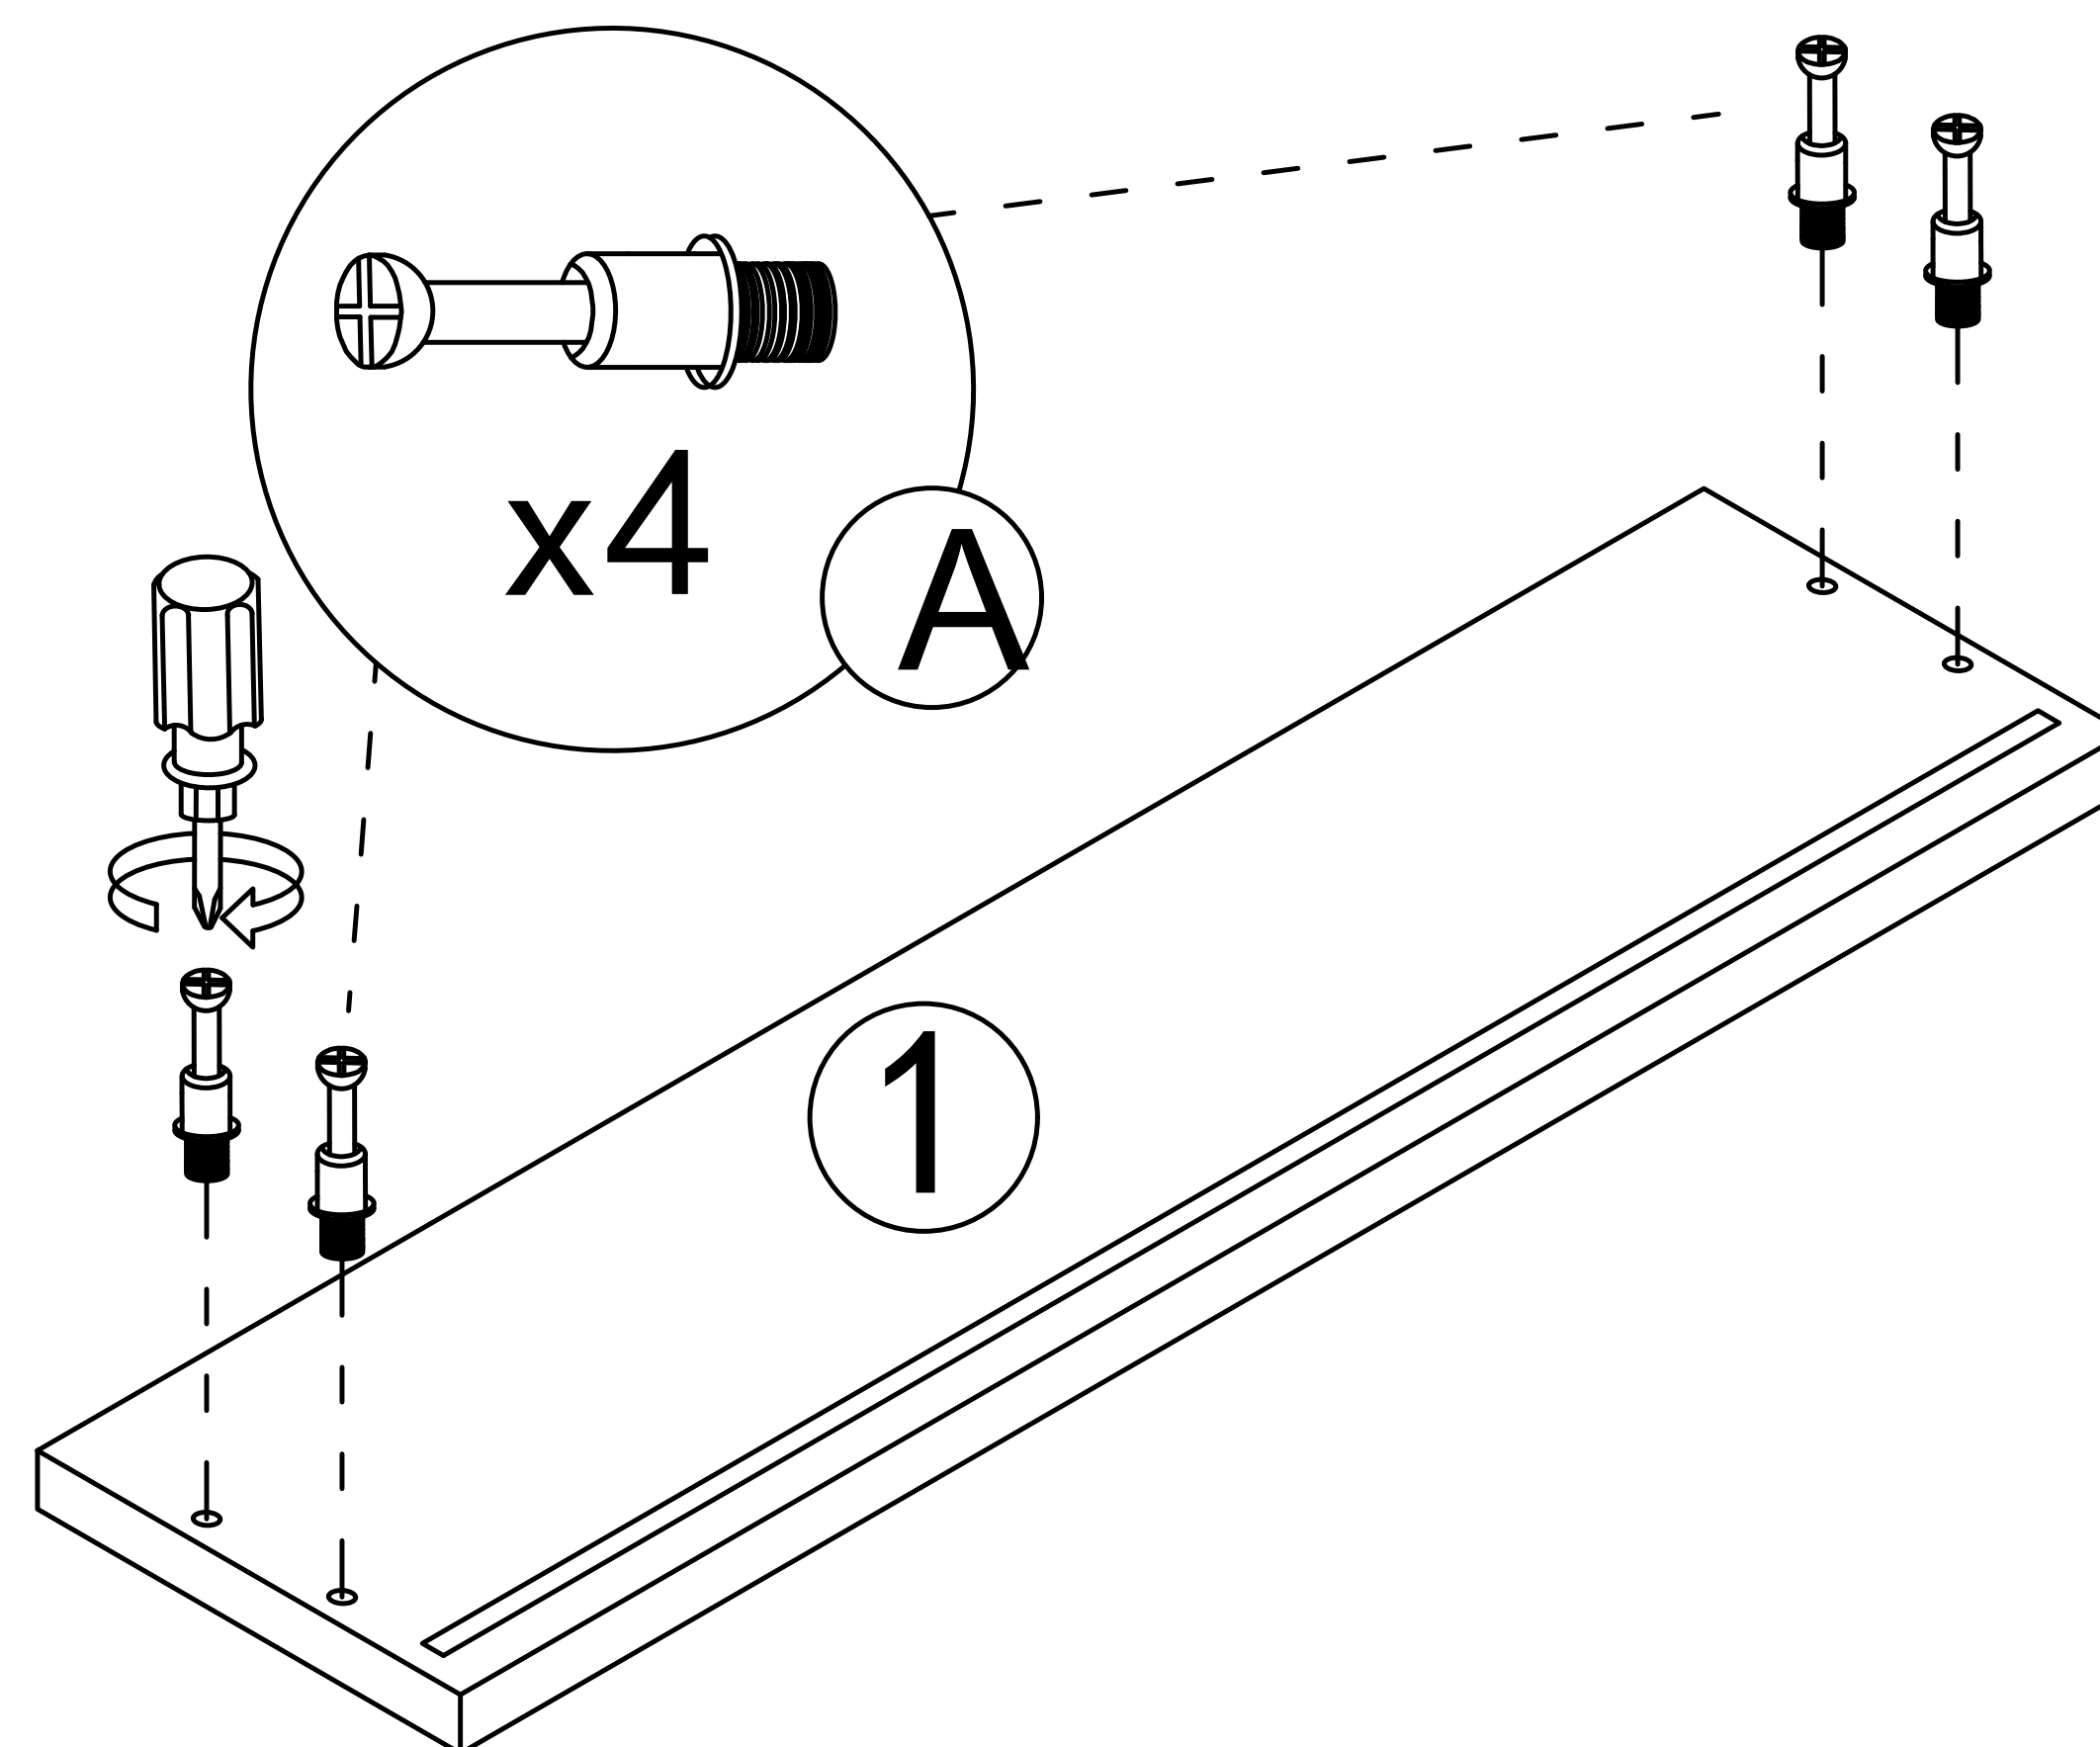



Step 2

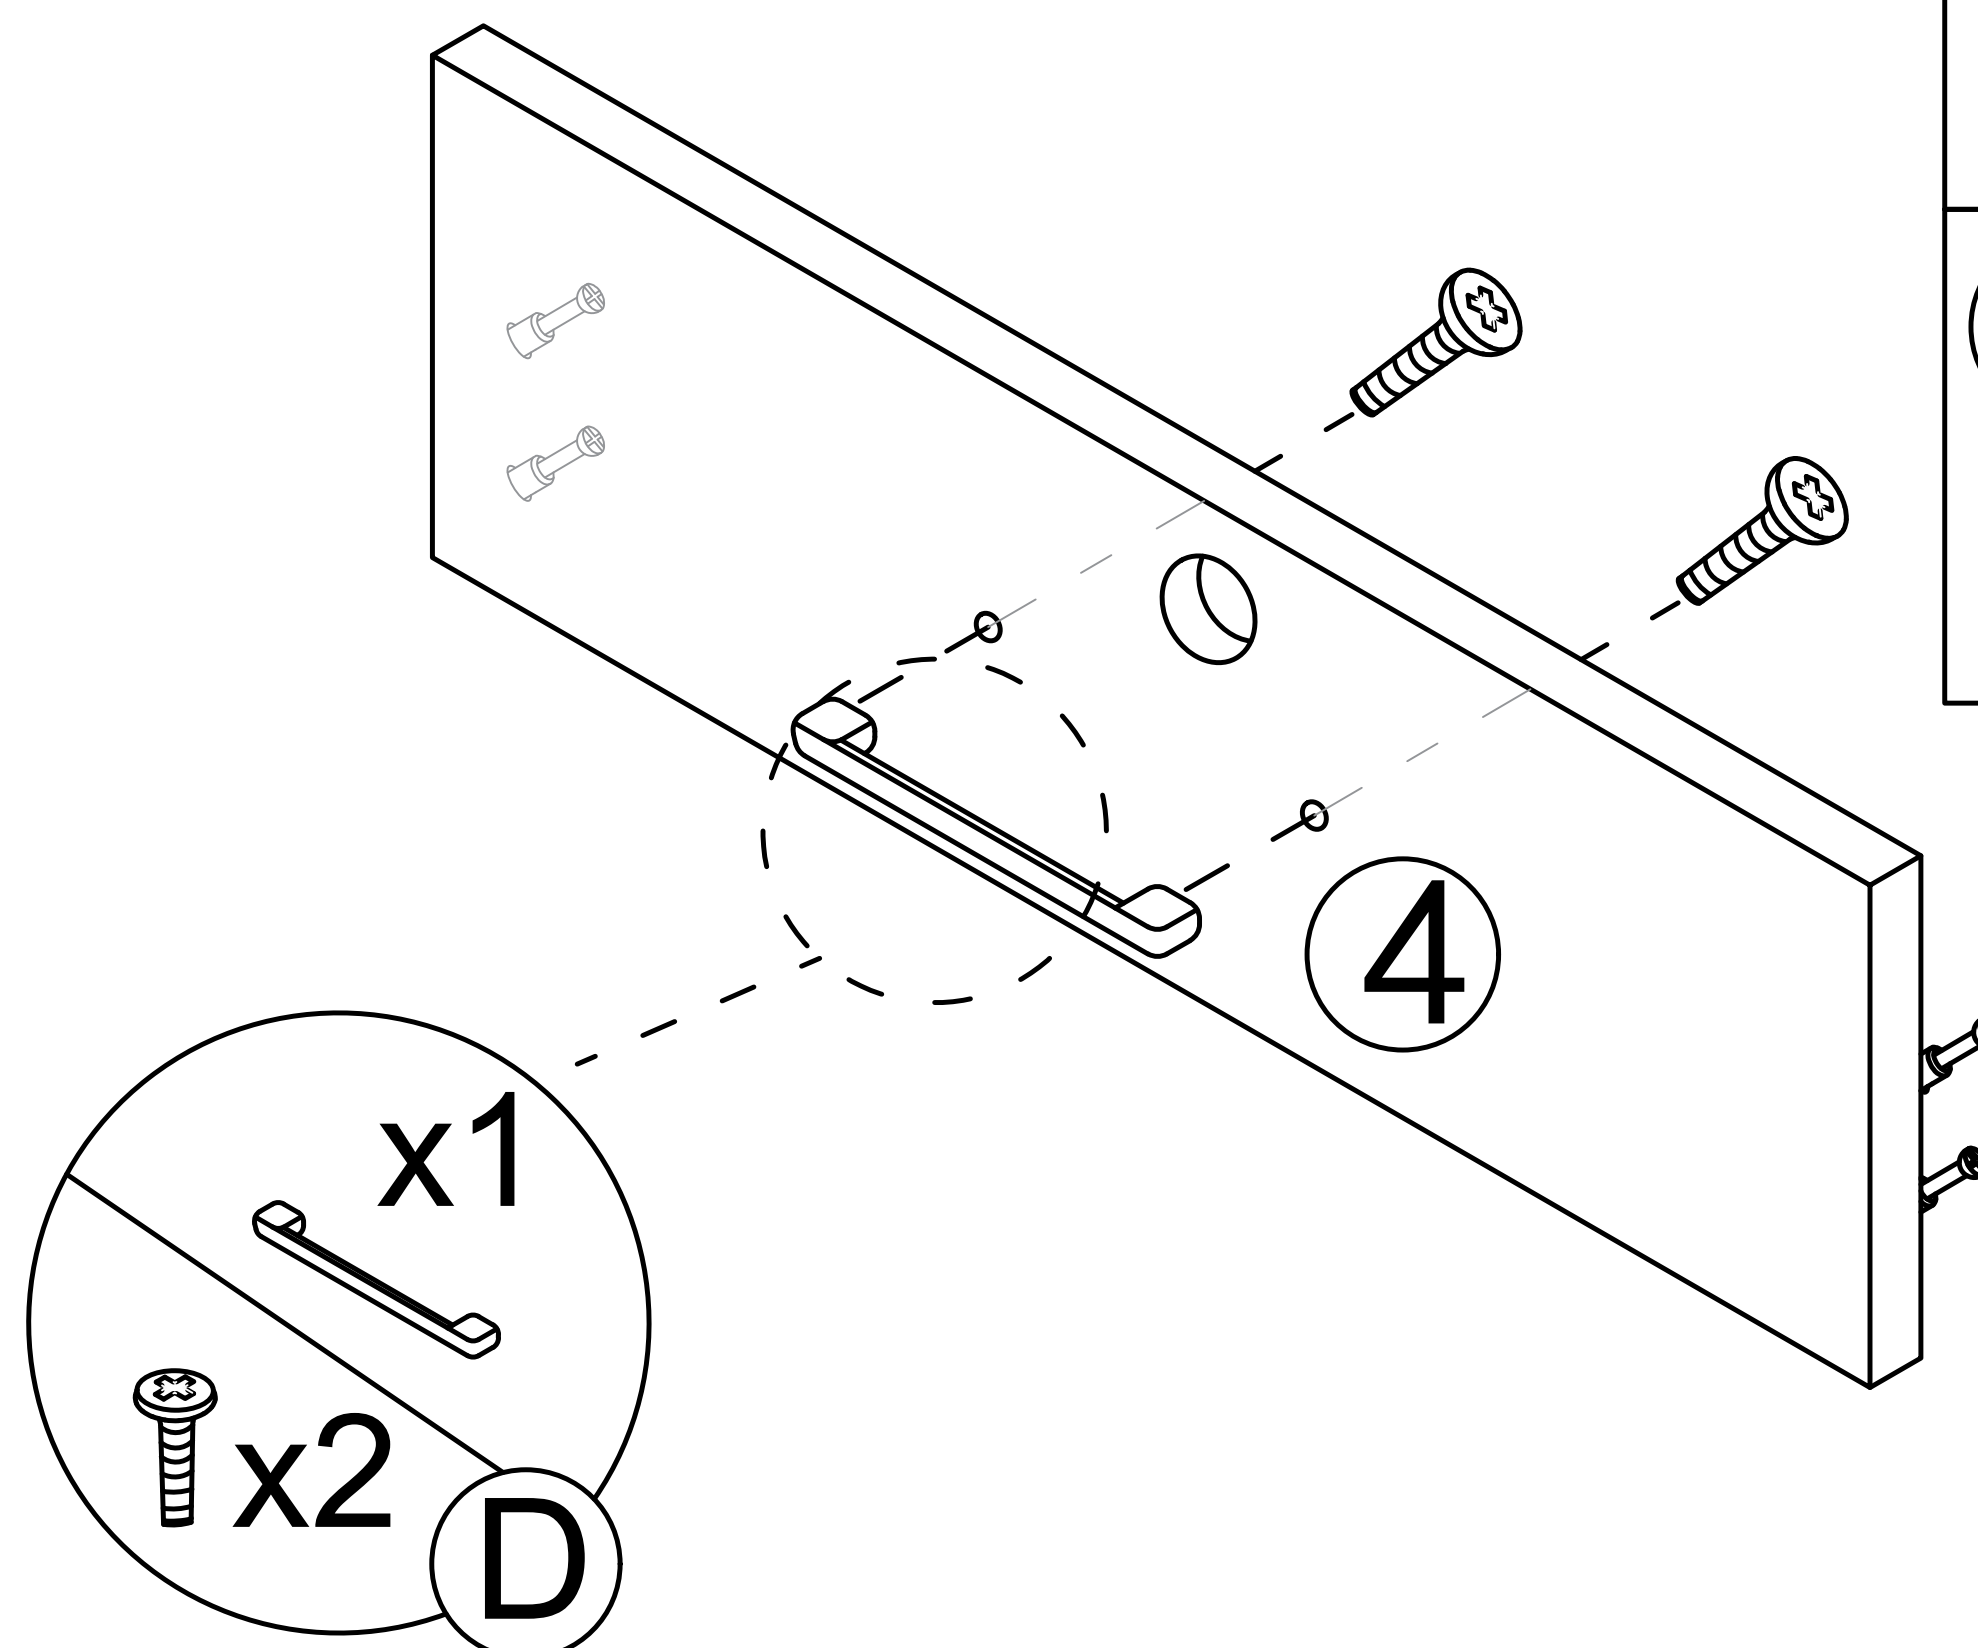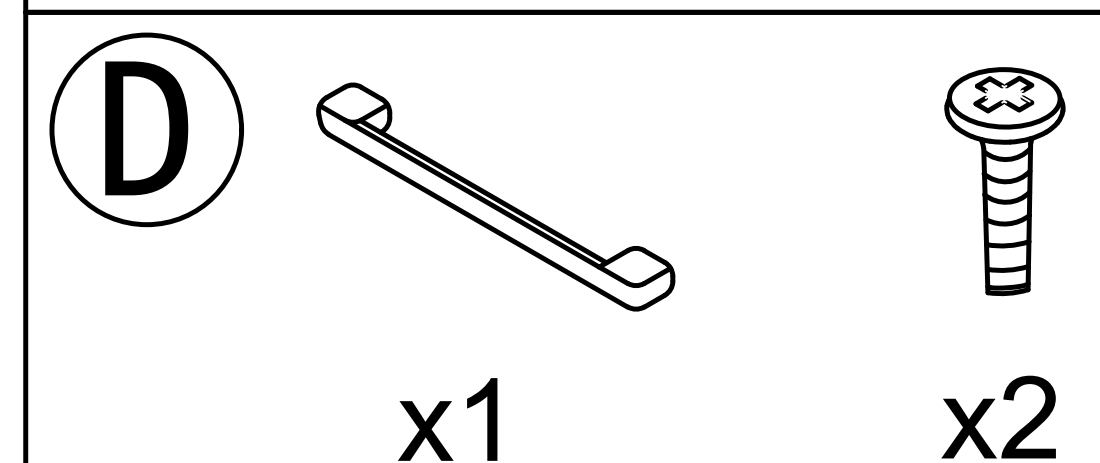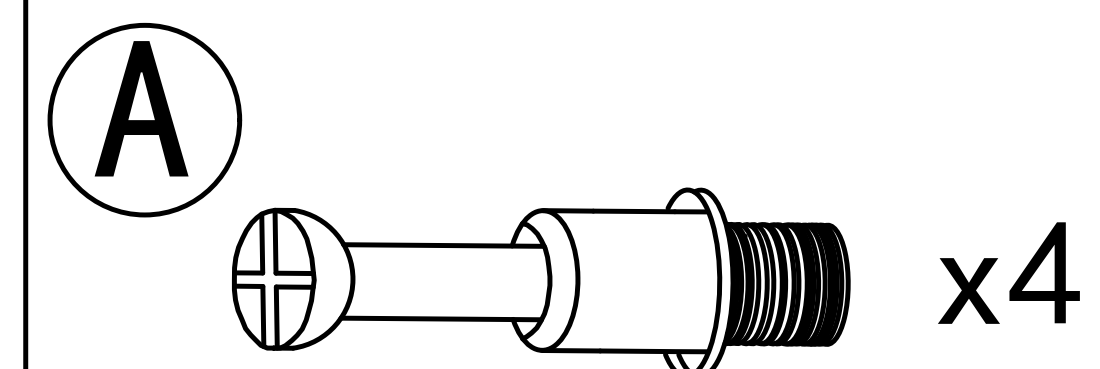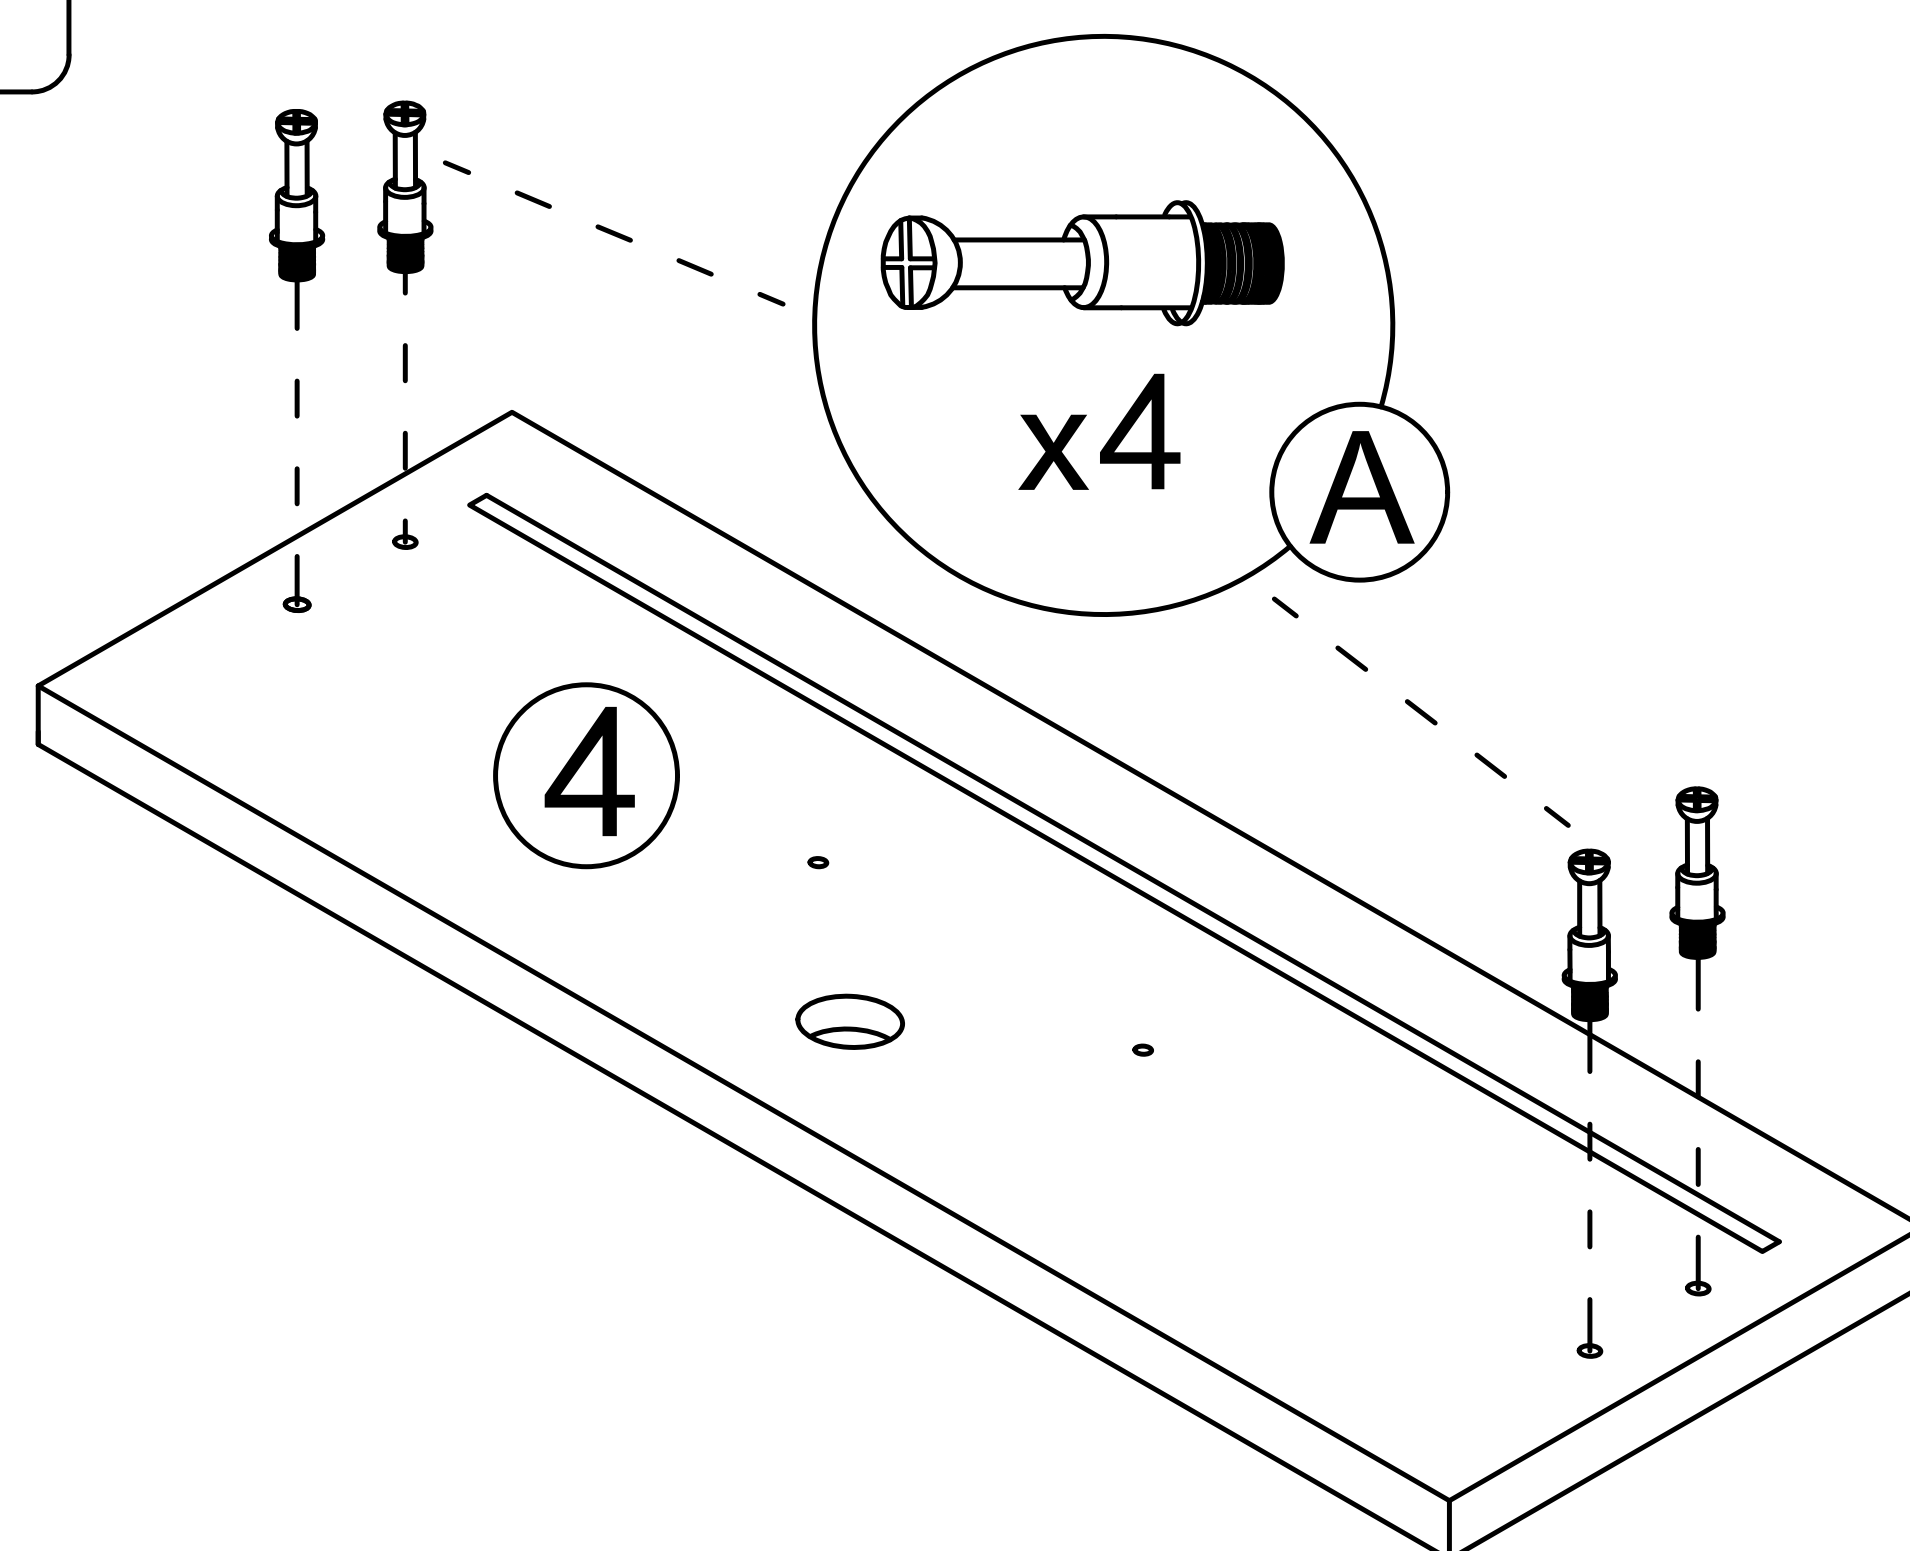

Step 3

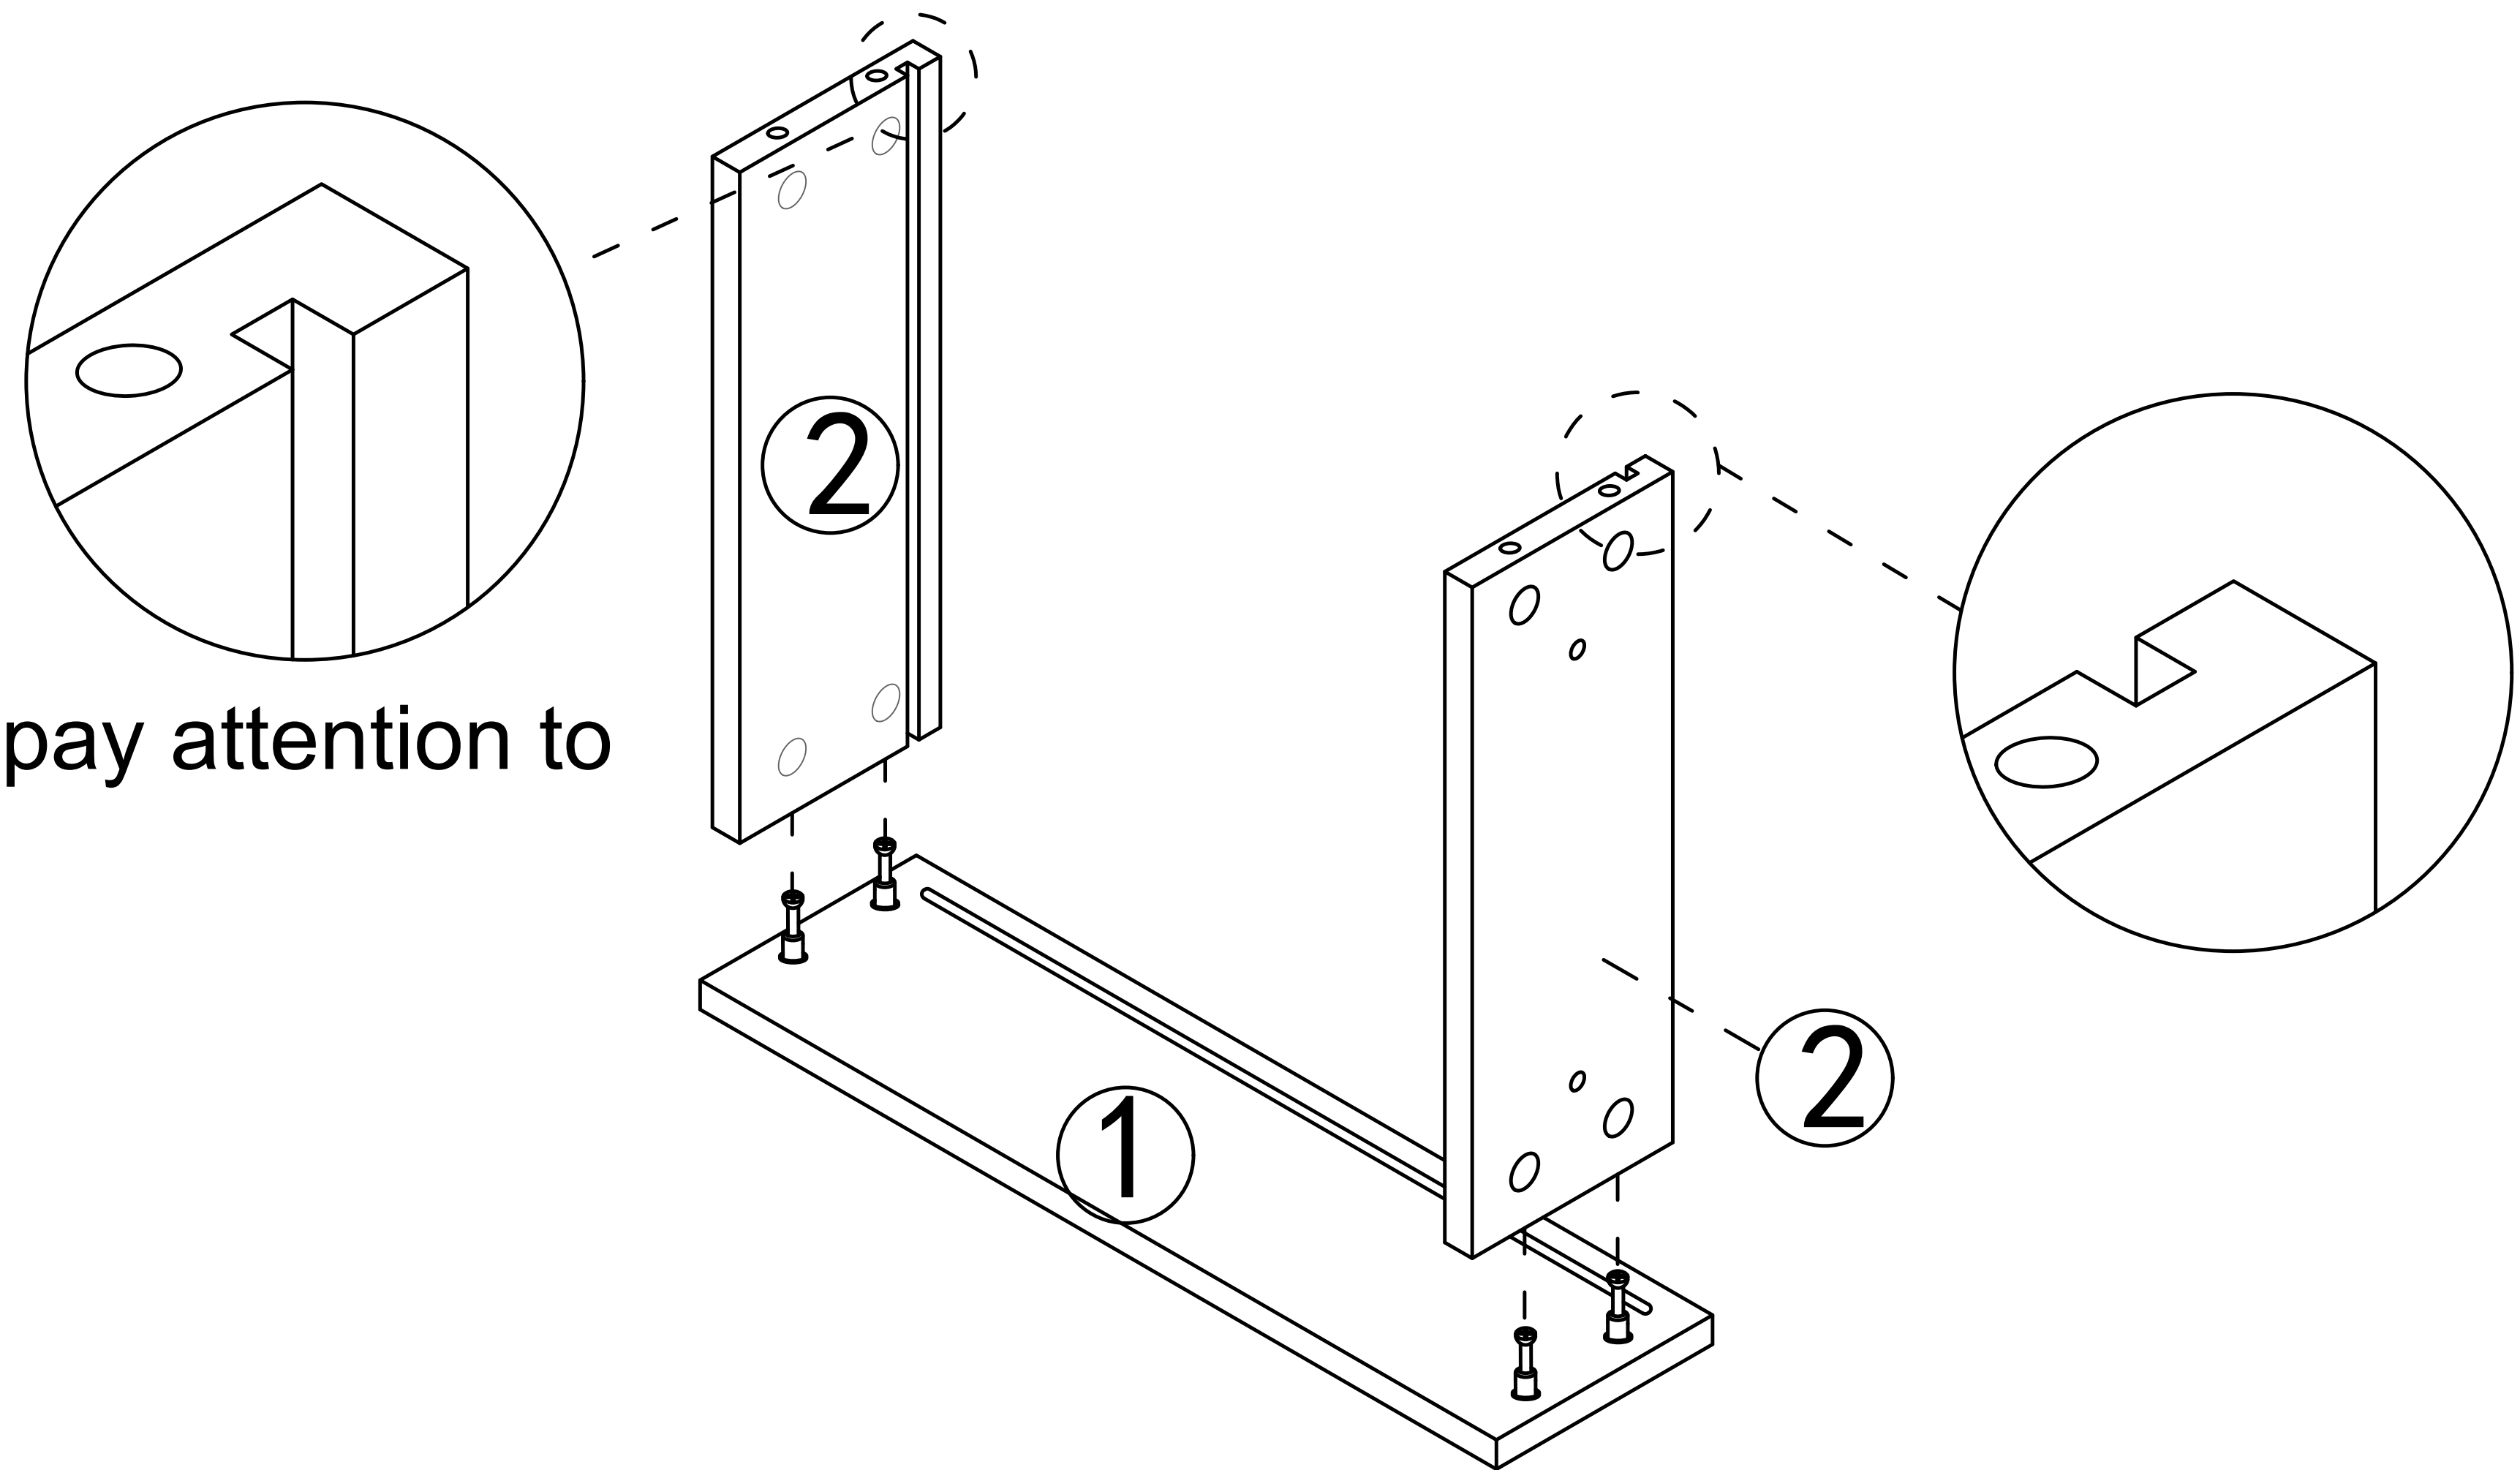



Step 4

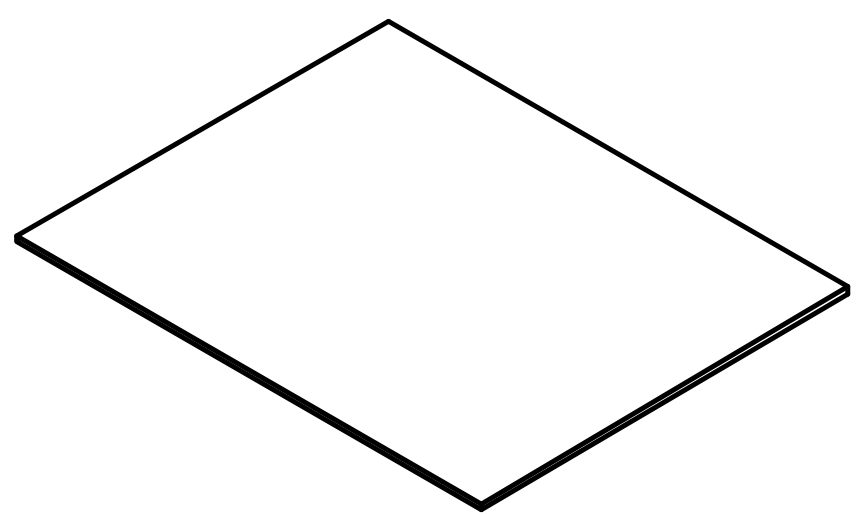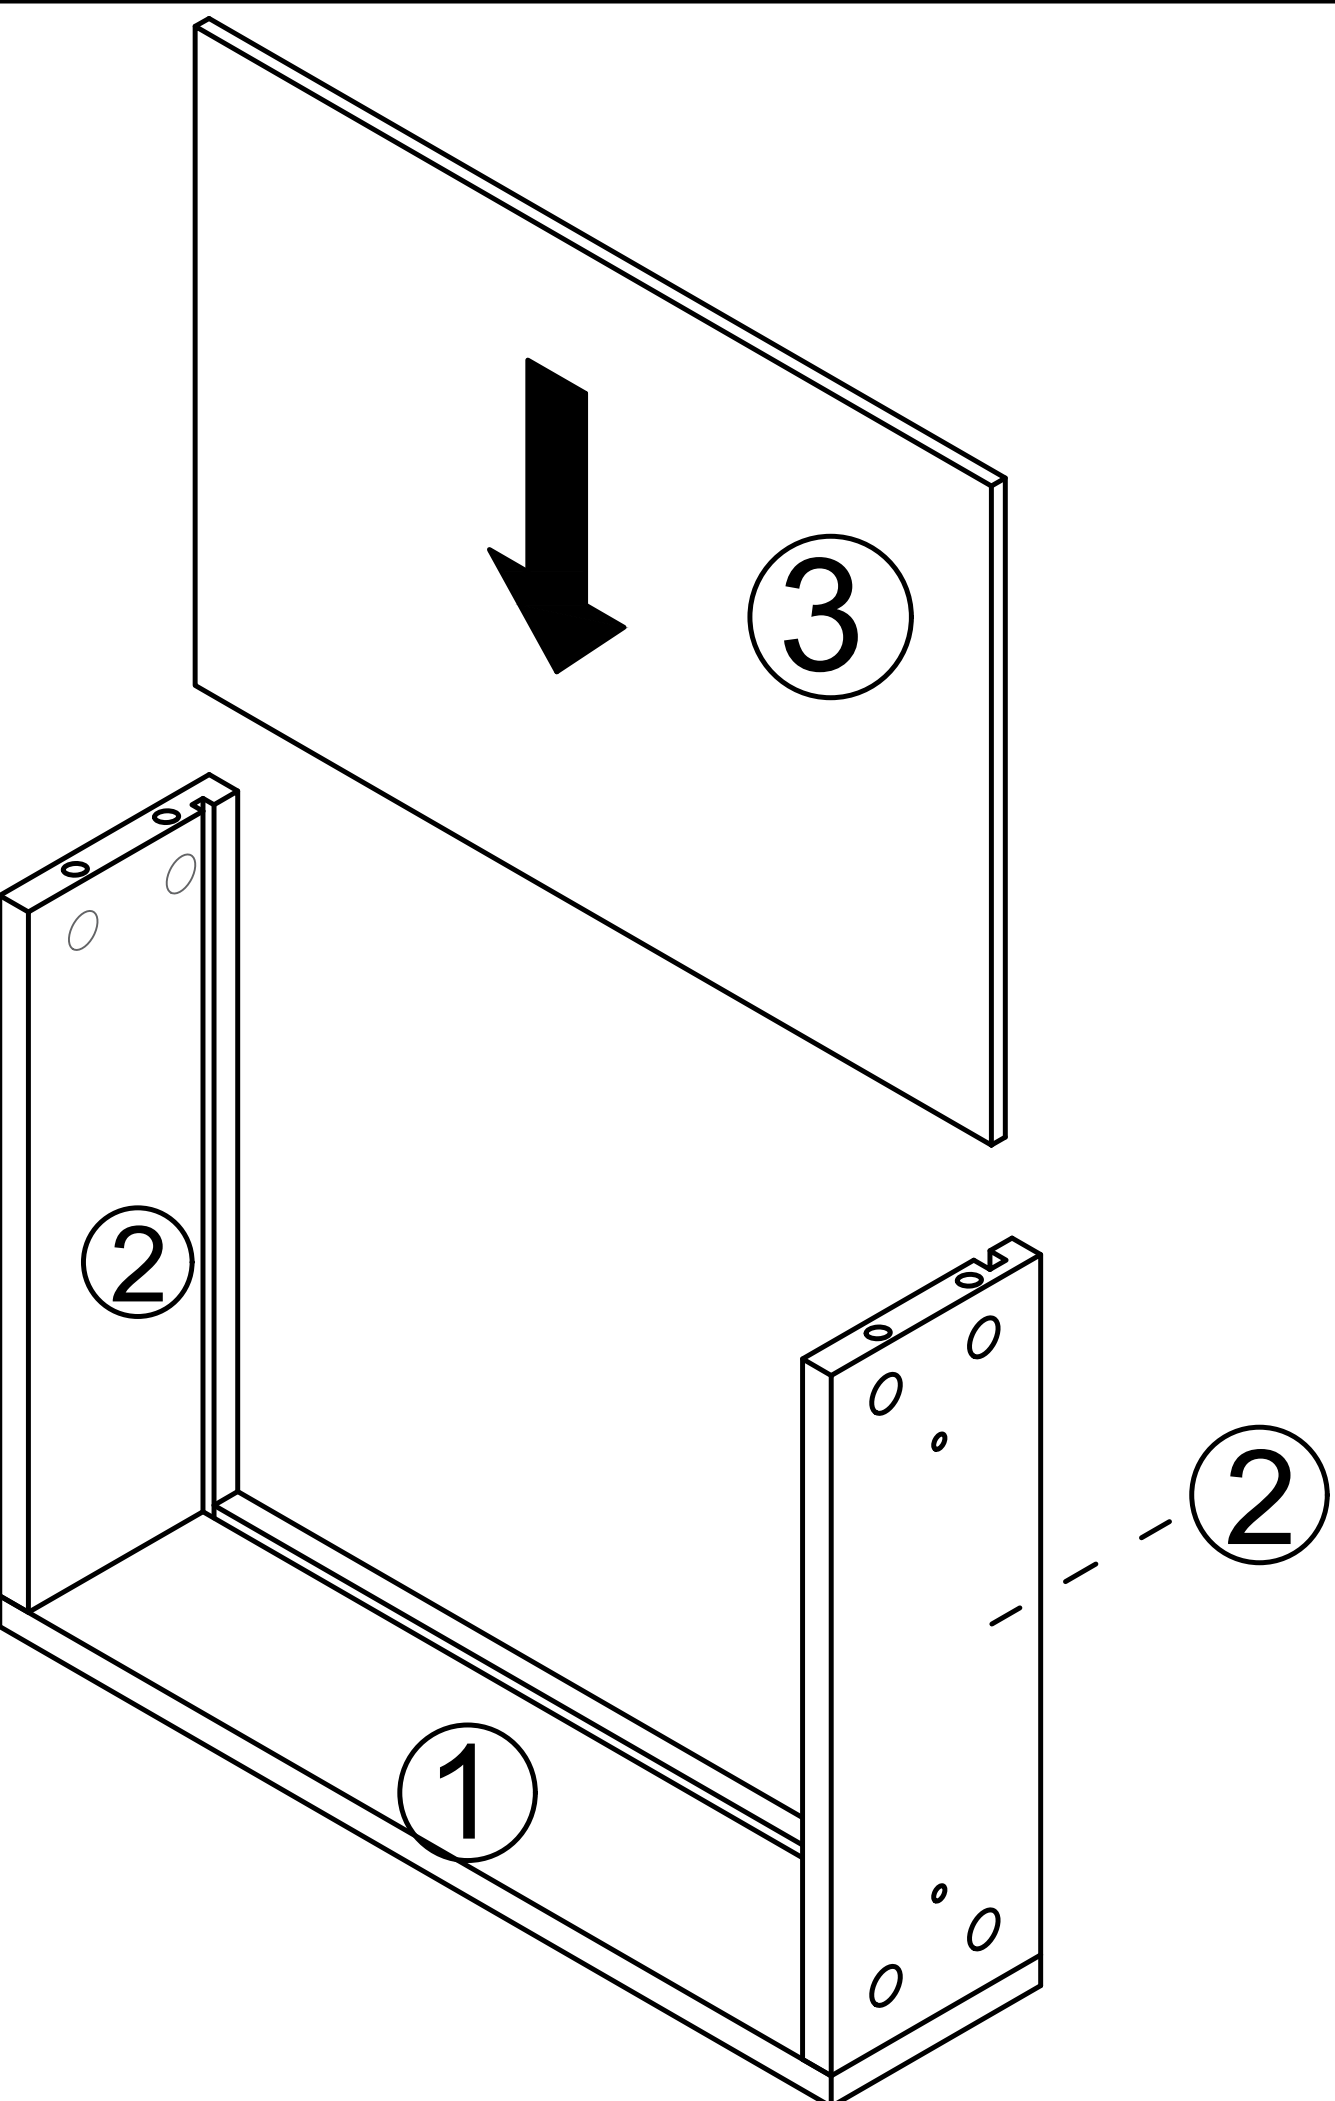




③ x1



Step 5

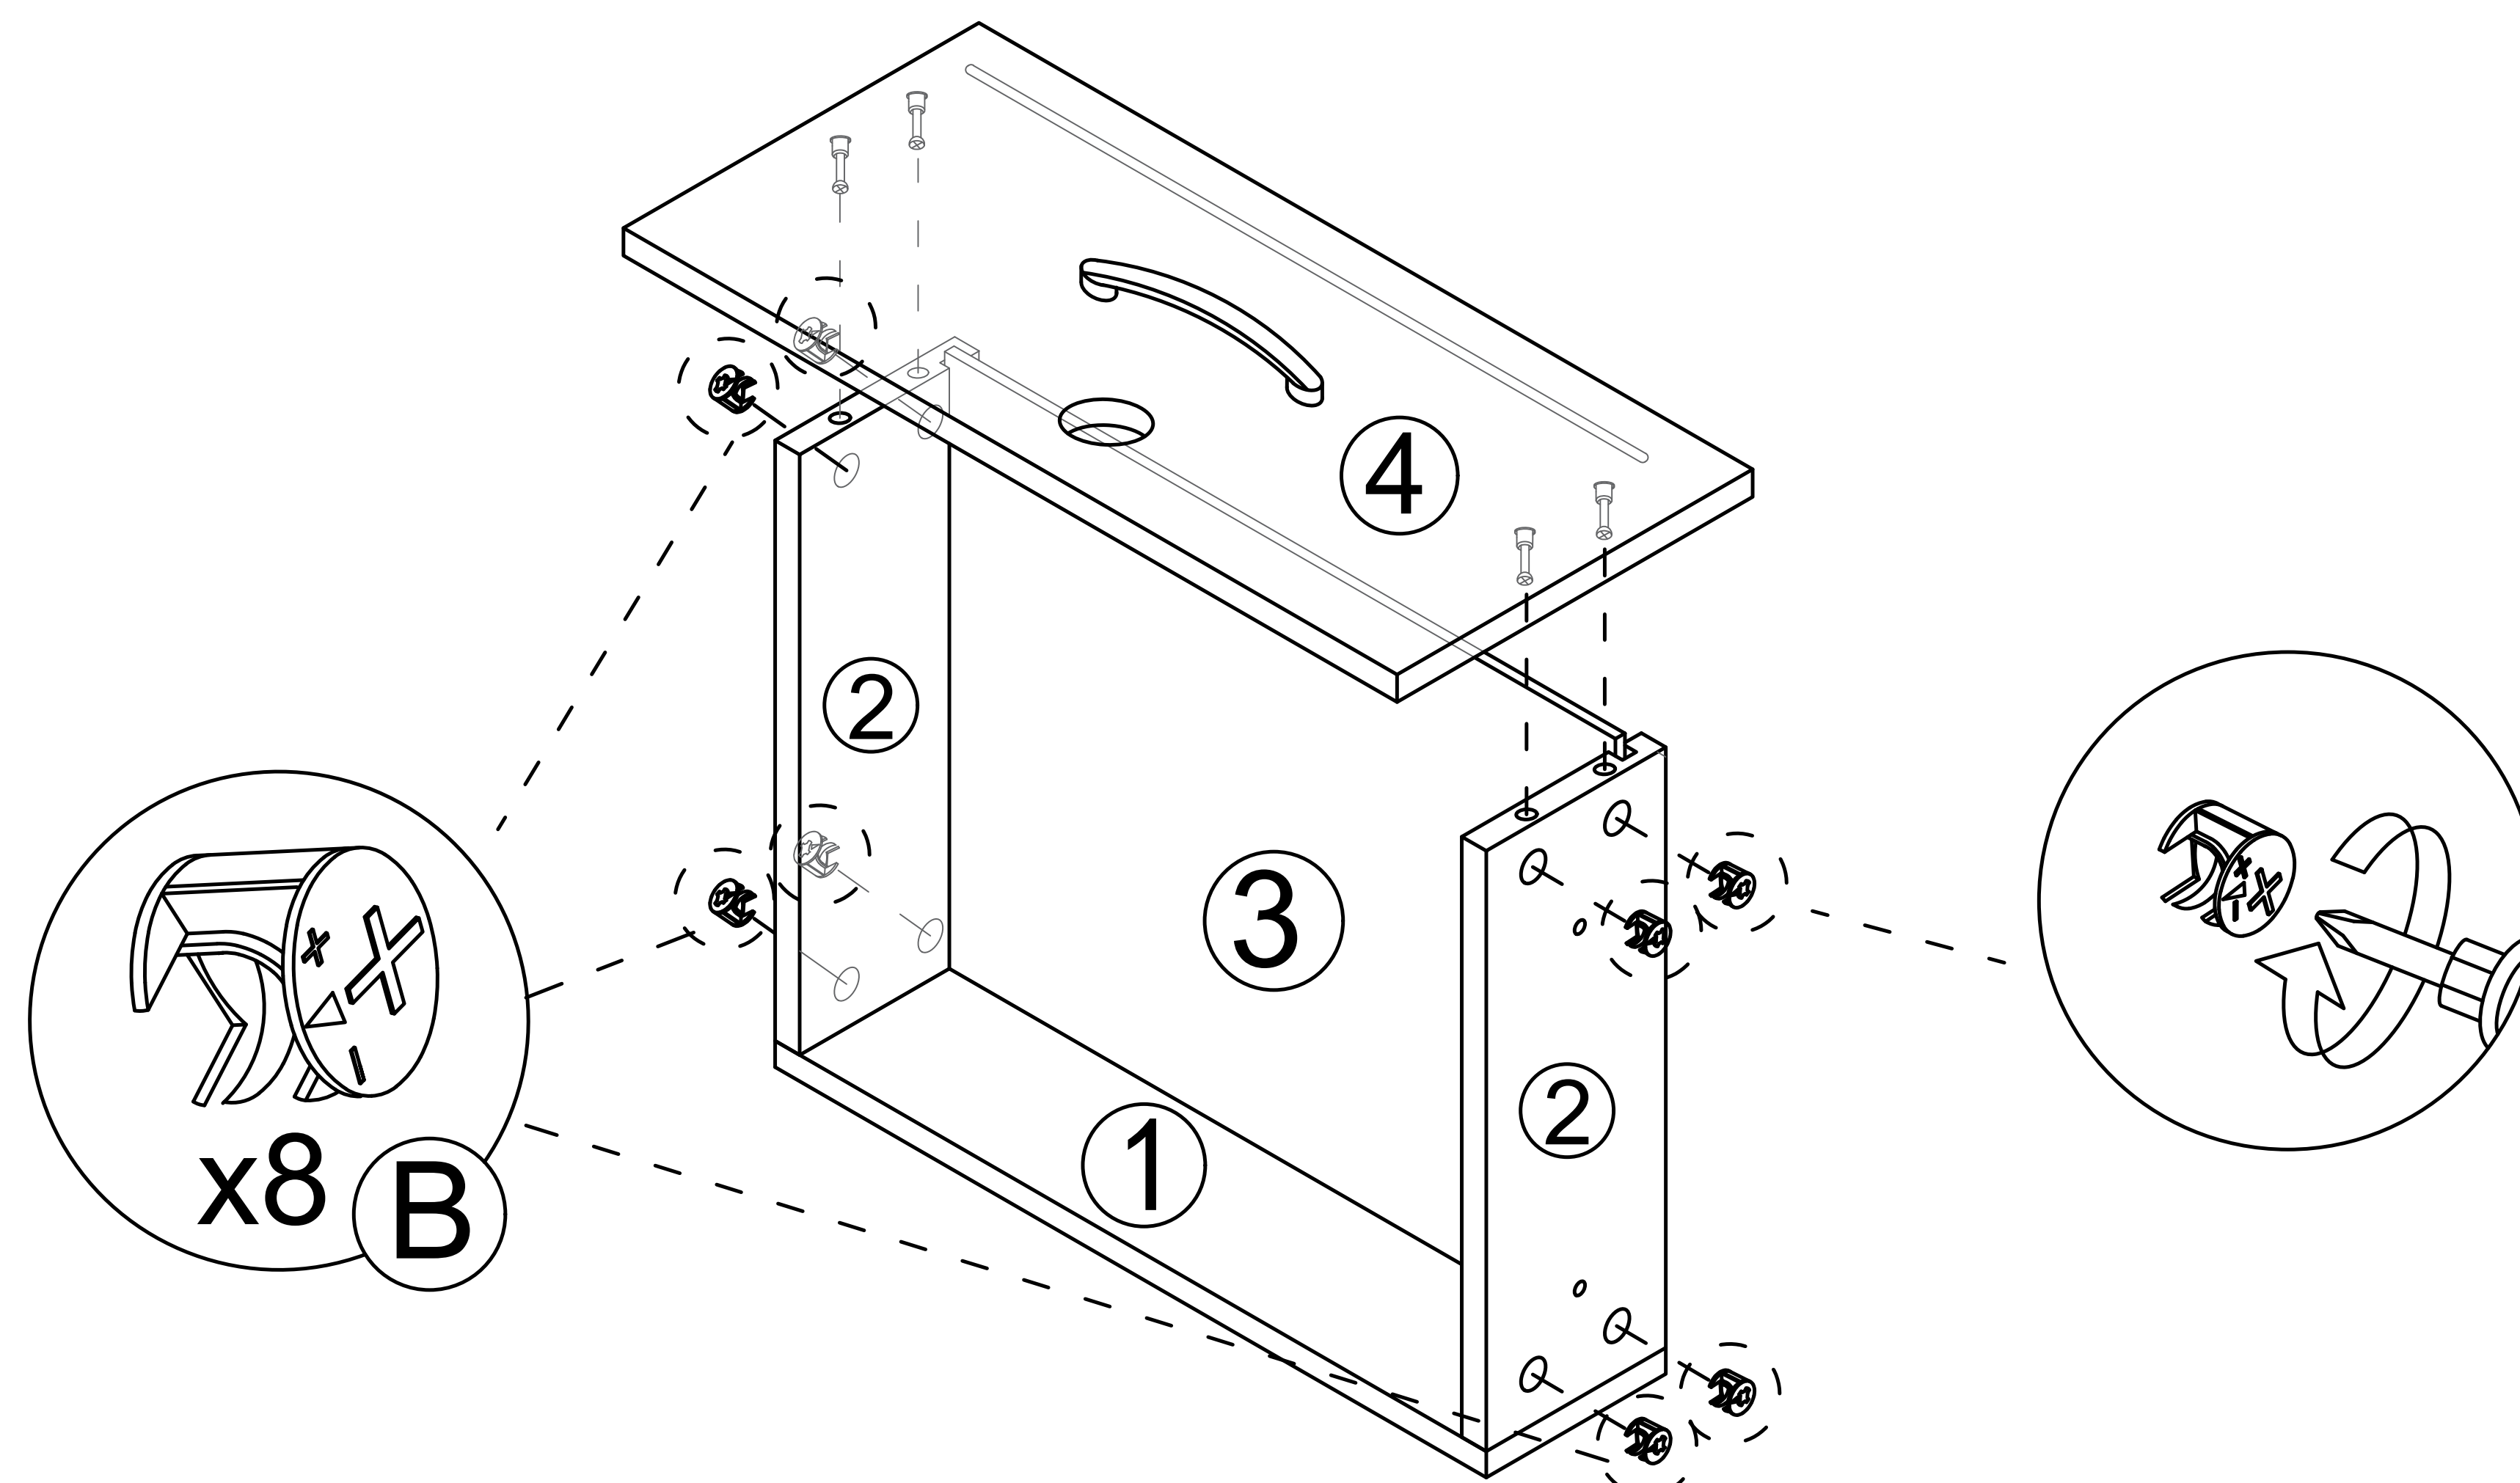

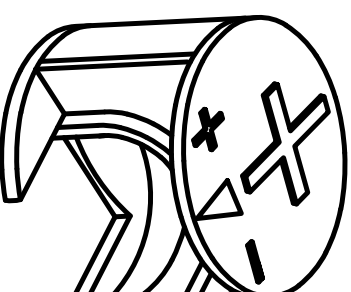B  x8


Step 6

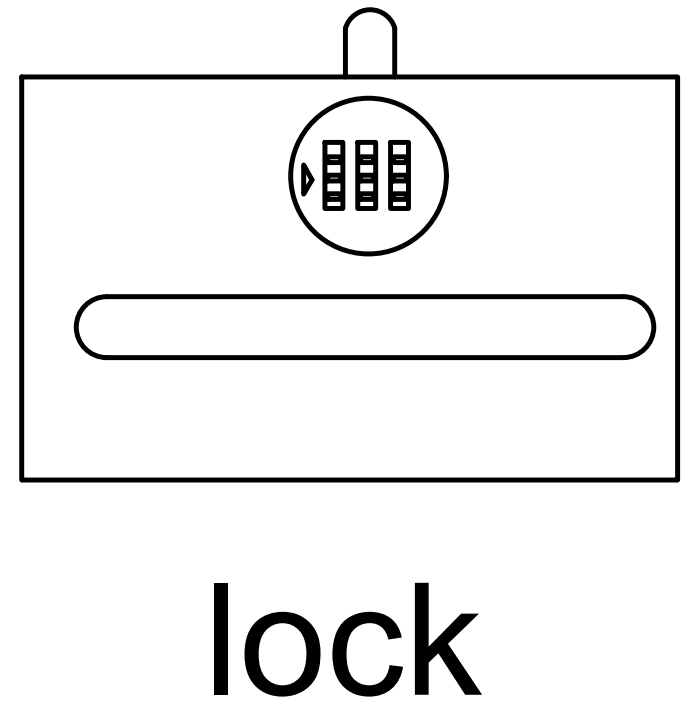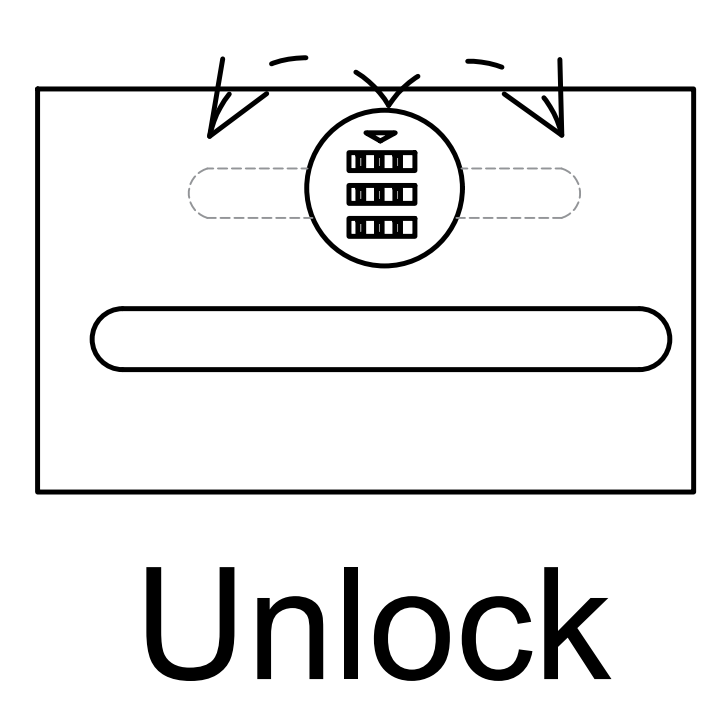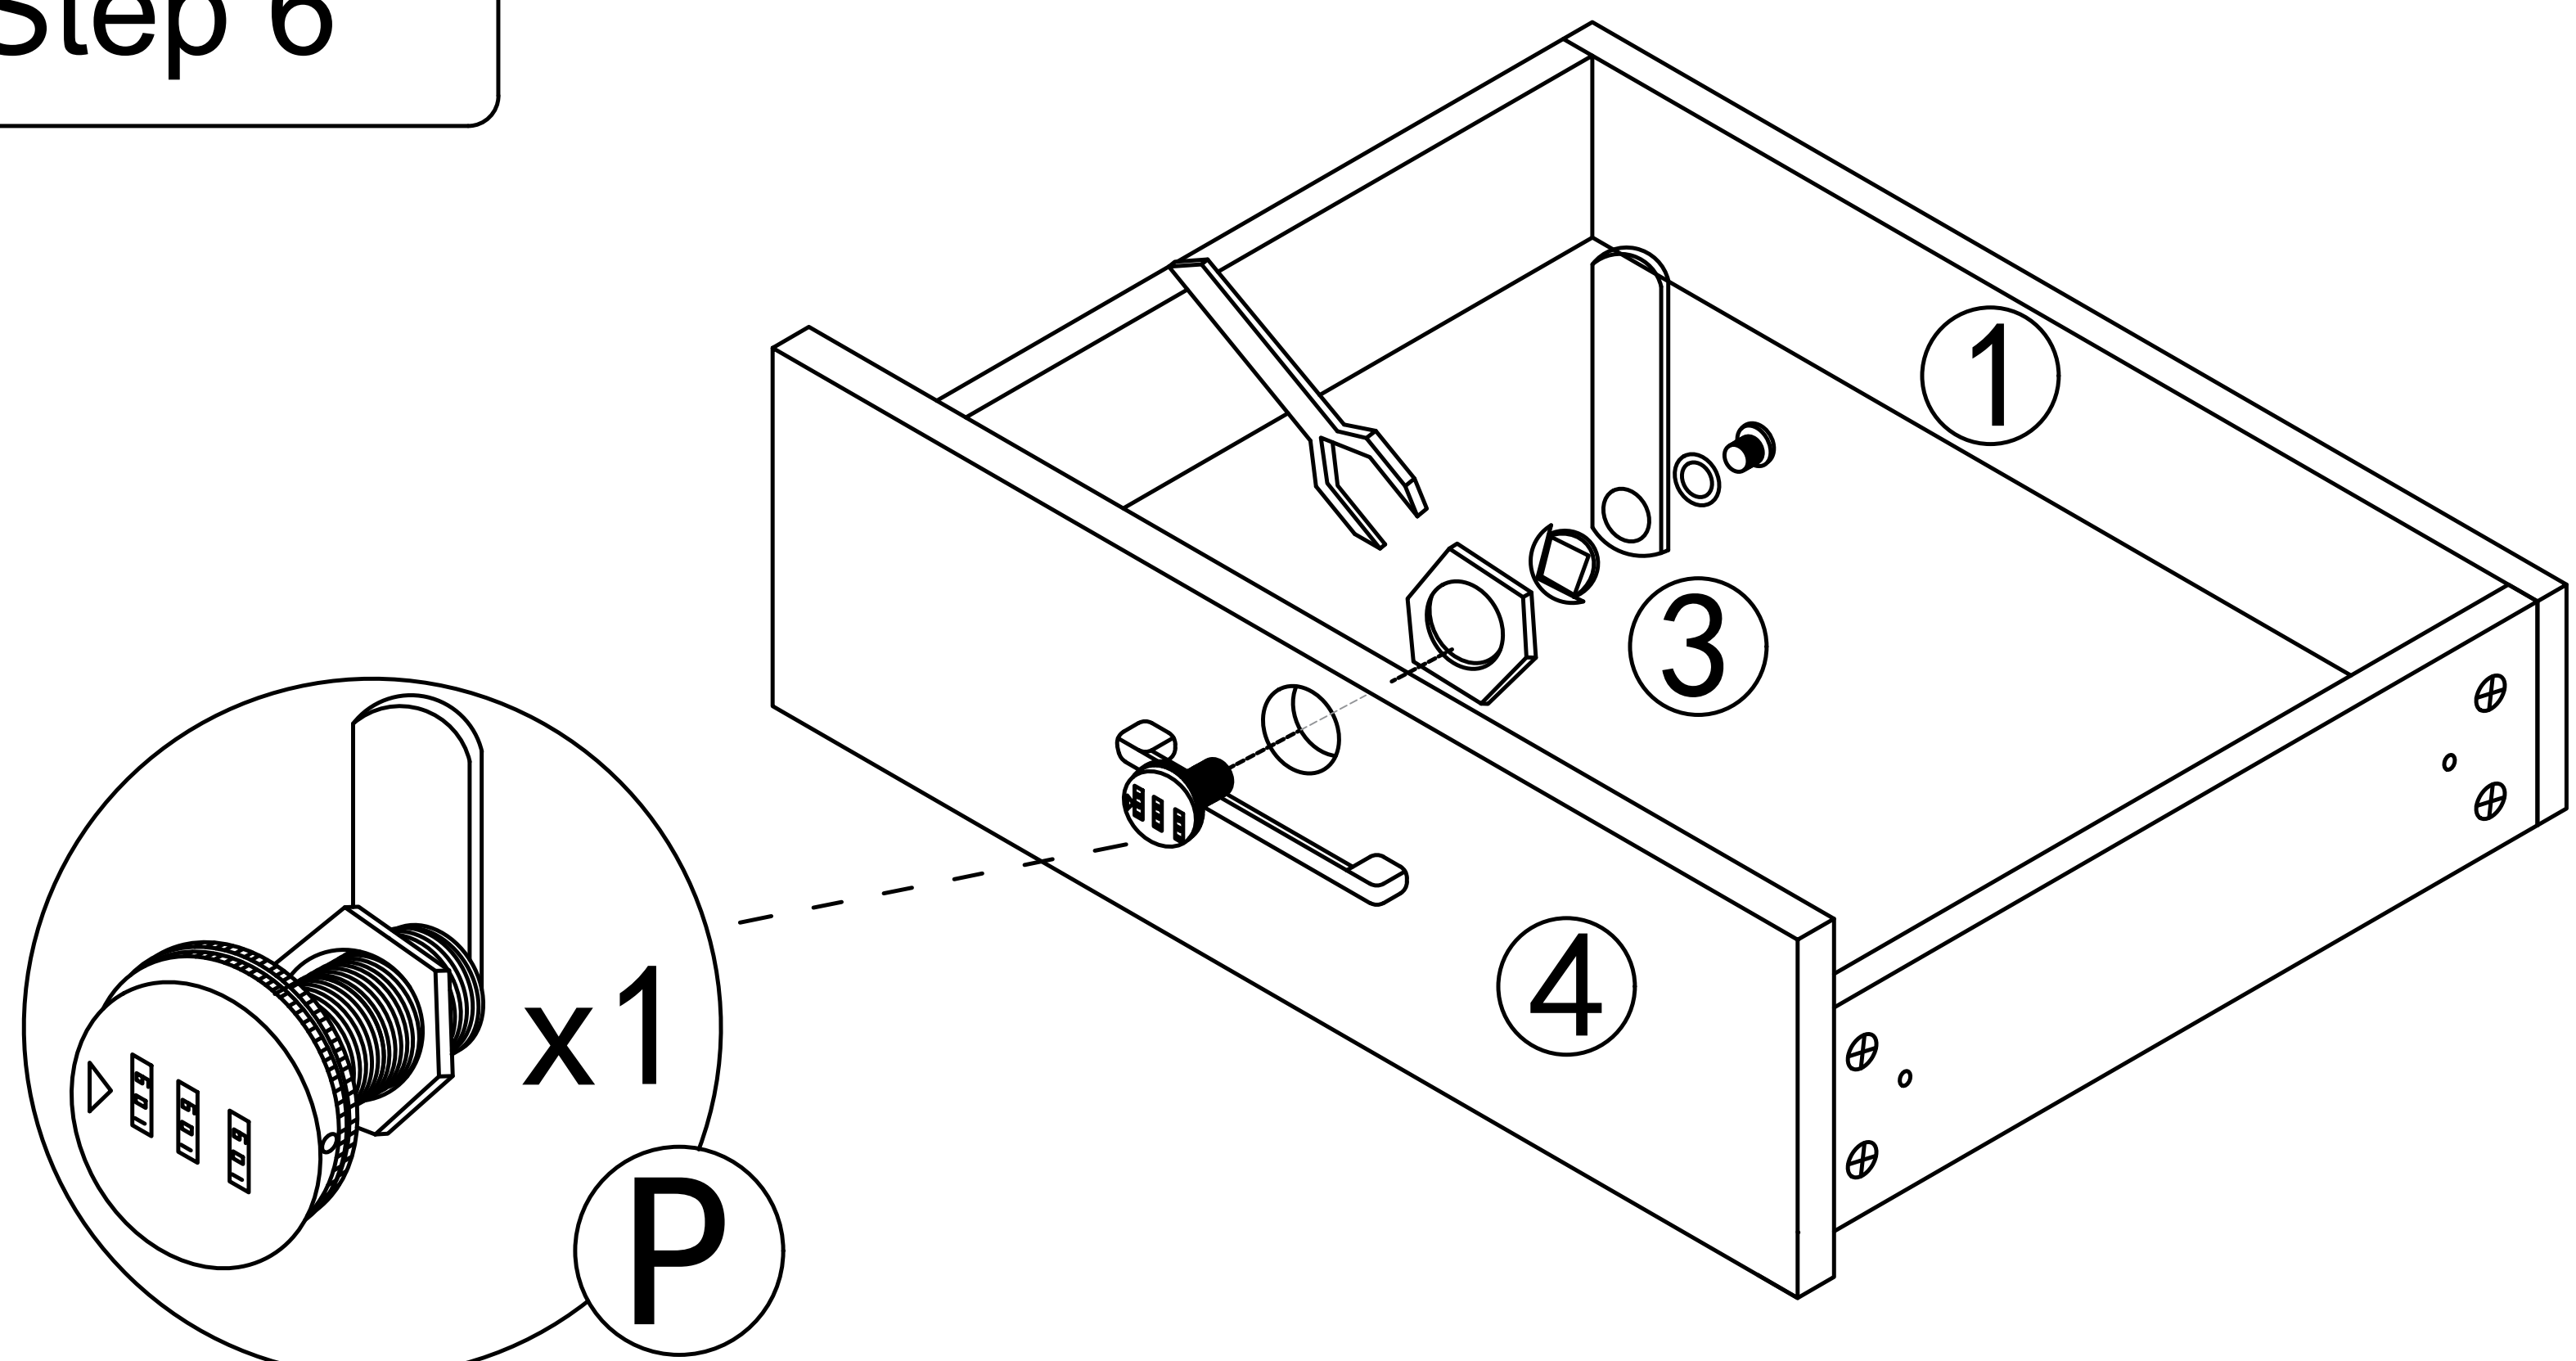

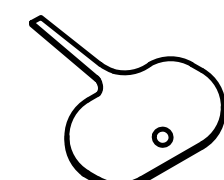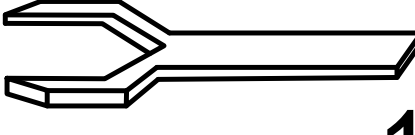P  x1
 x1  x1



Step 6

Drawer rail breakdown diagram

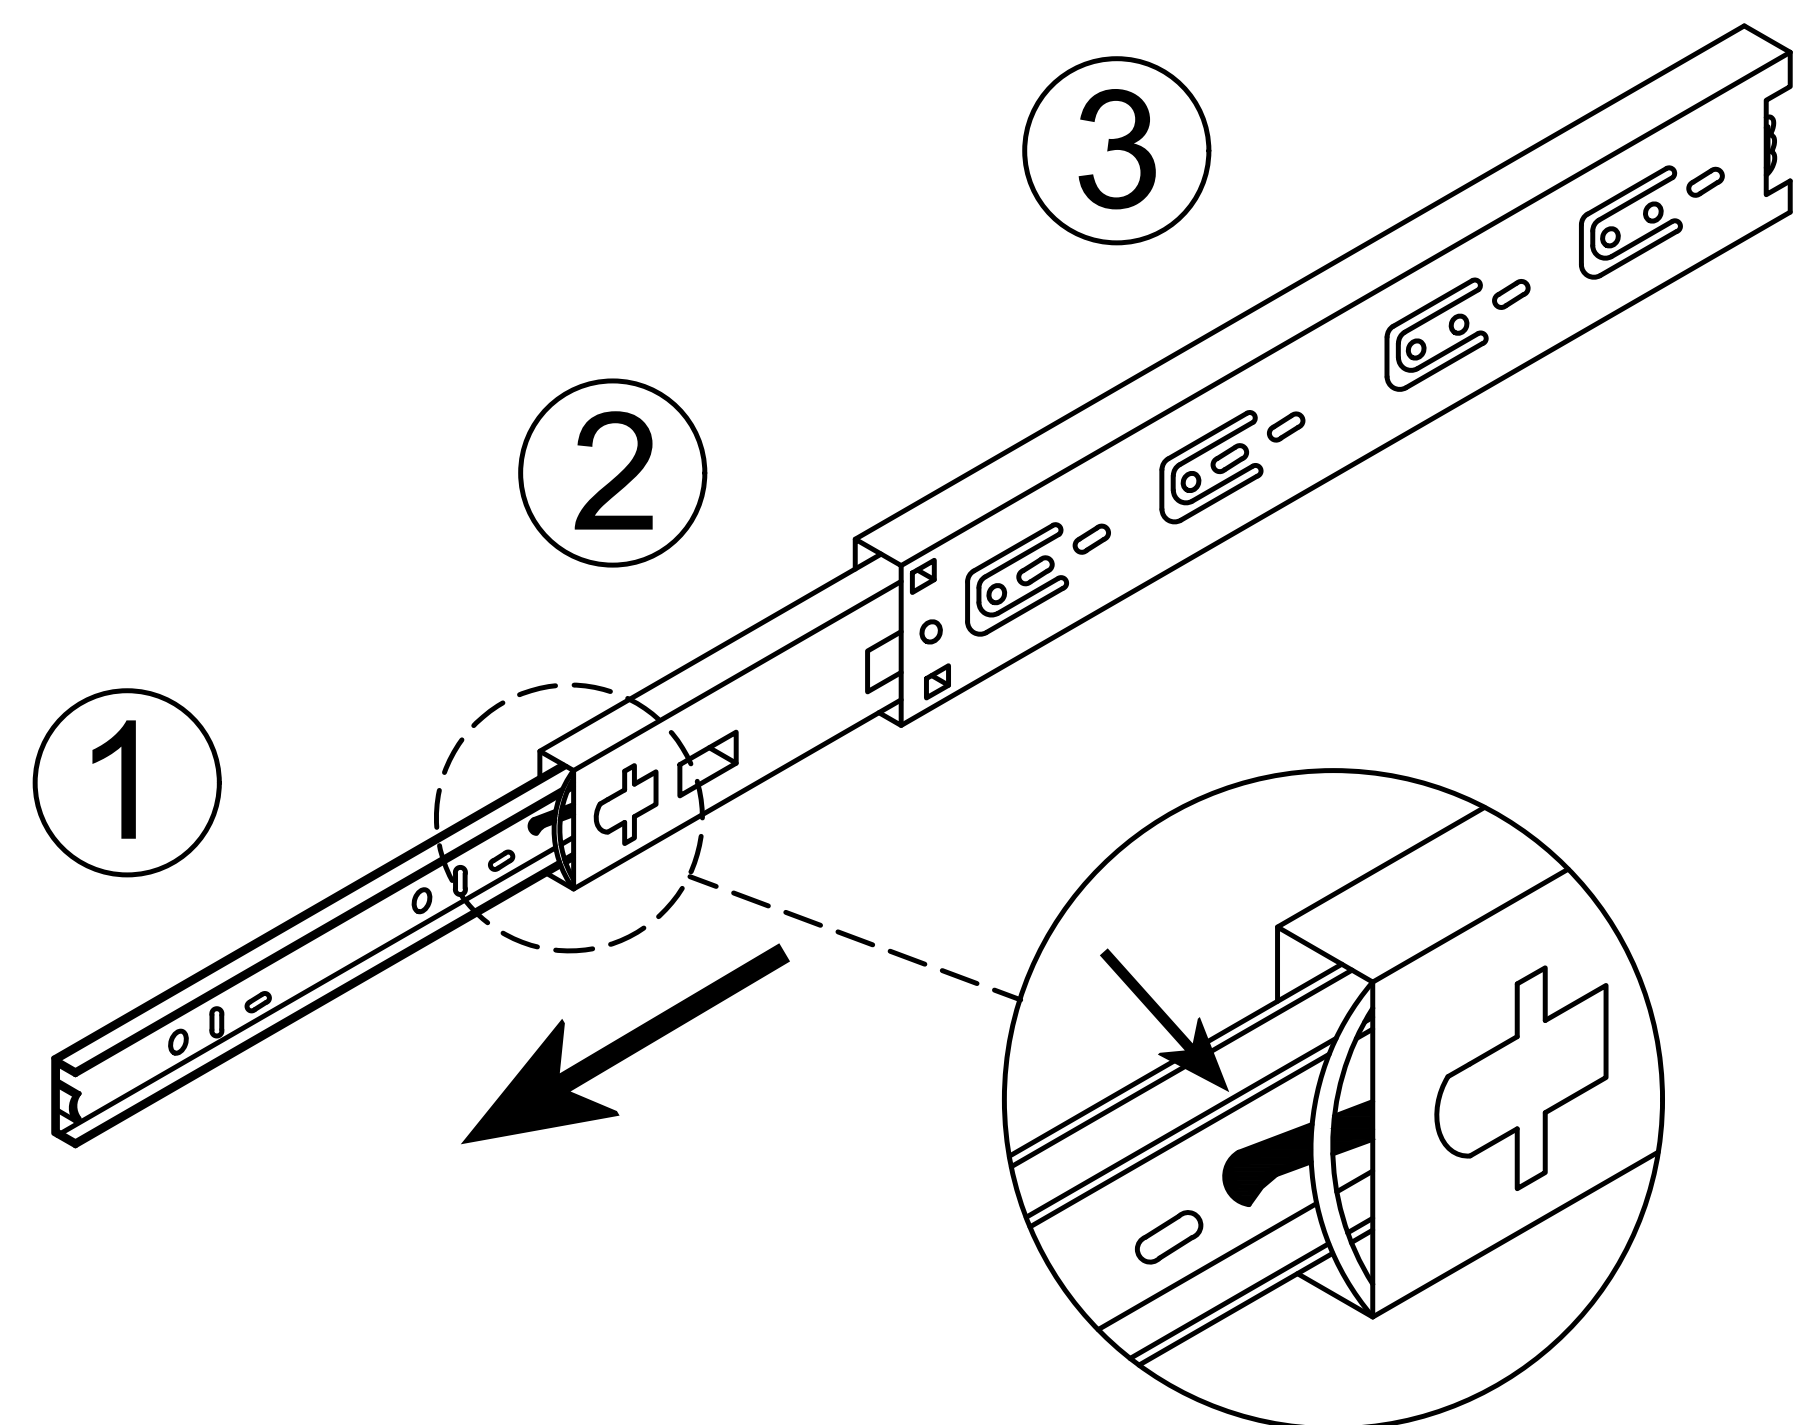




Step 1 : Pull the rails apart

Step 2 : Push the nylon buckle outward ①

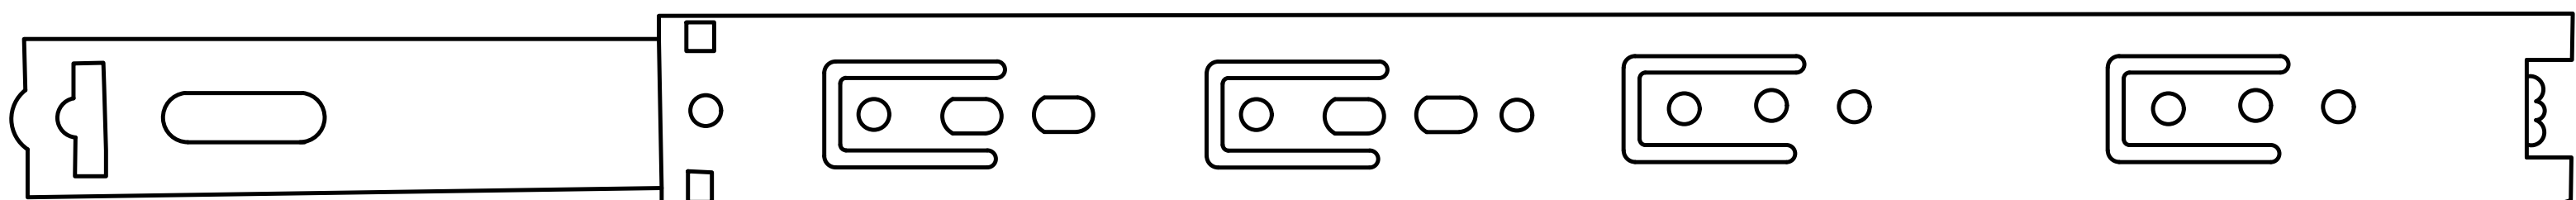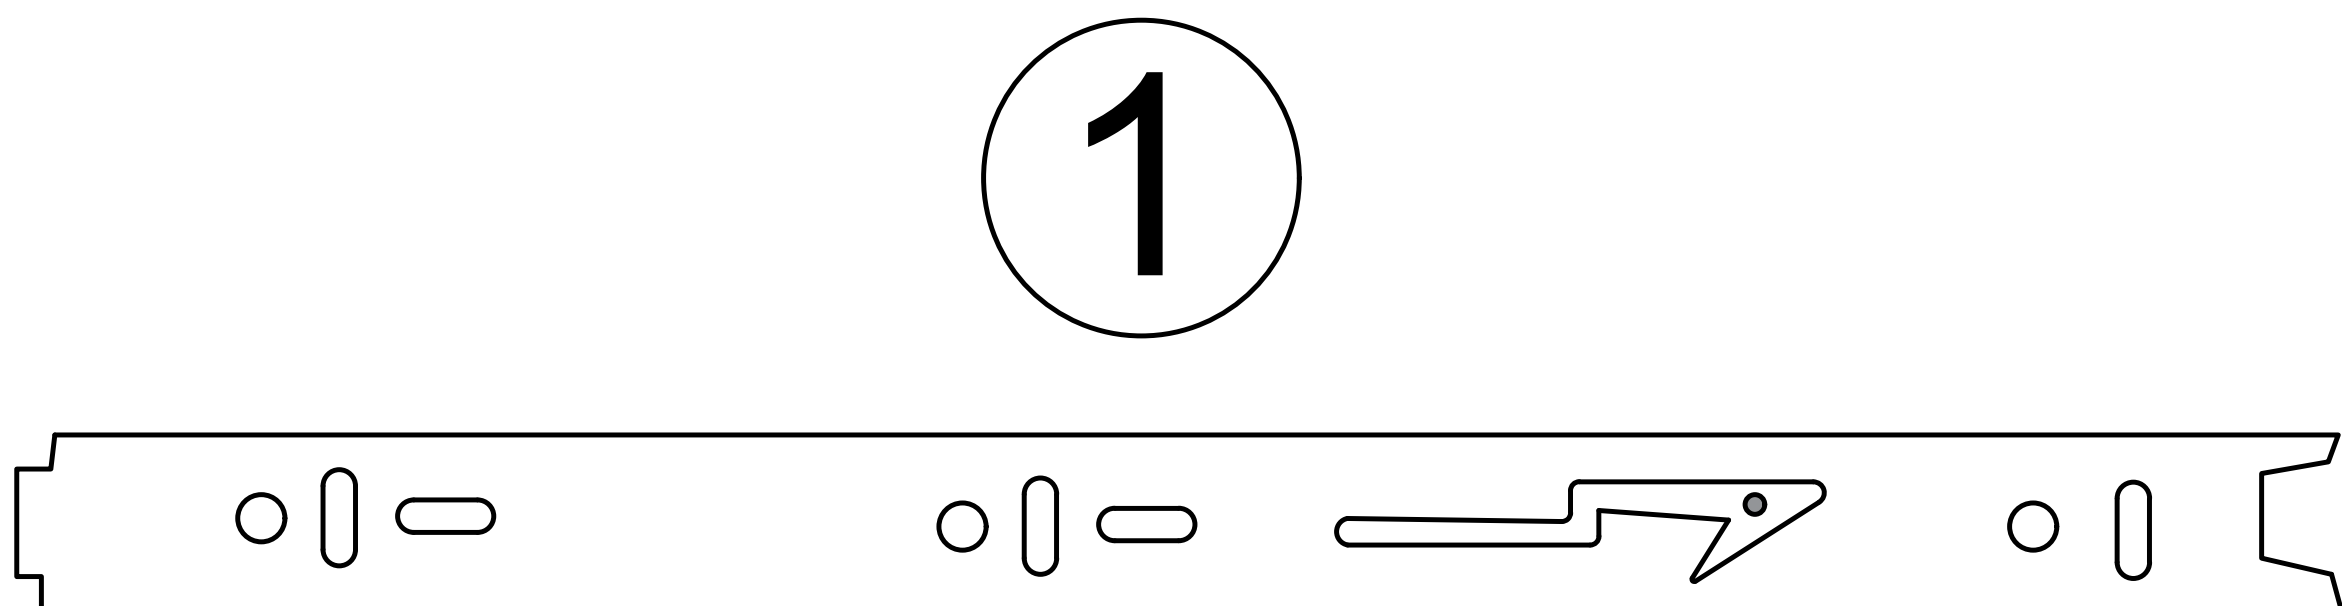

②

③


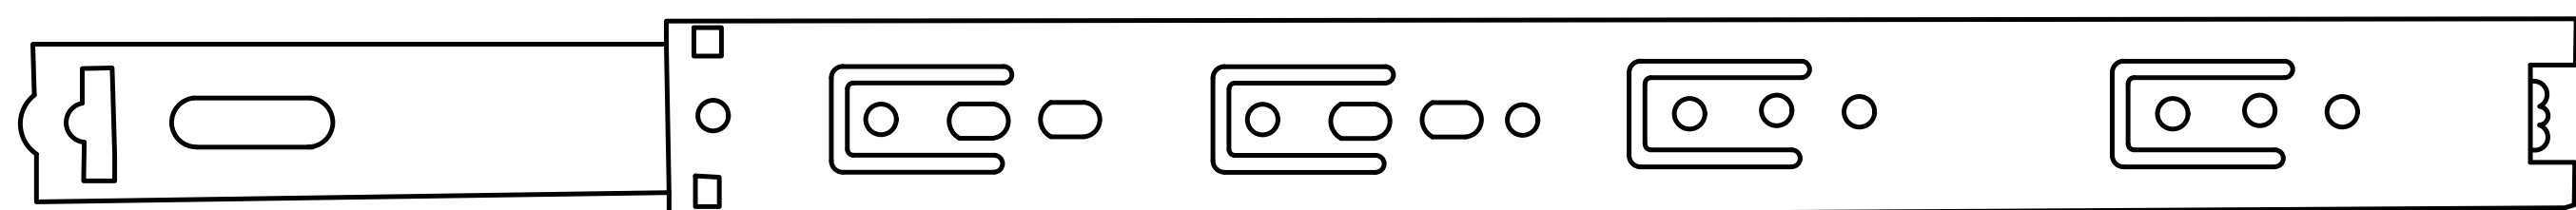
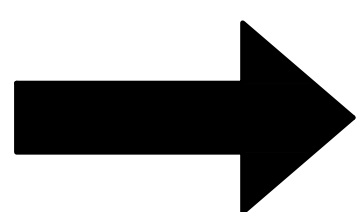
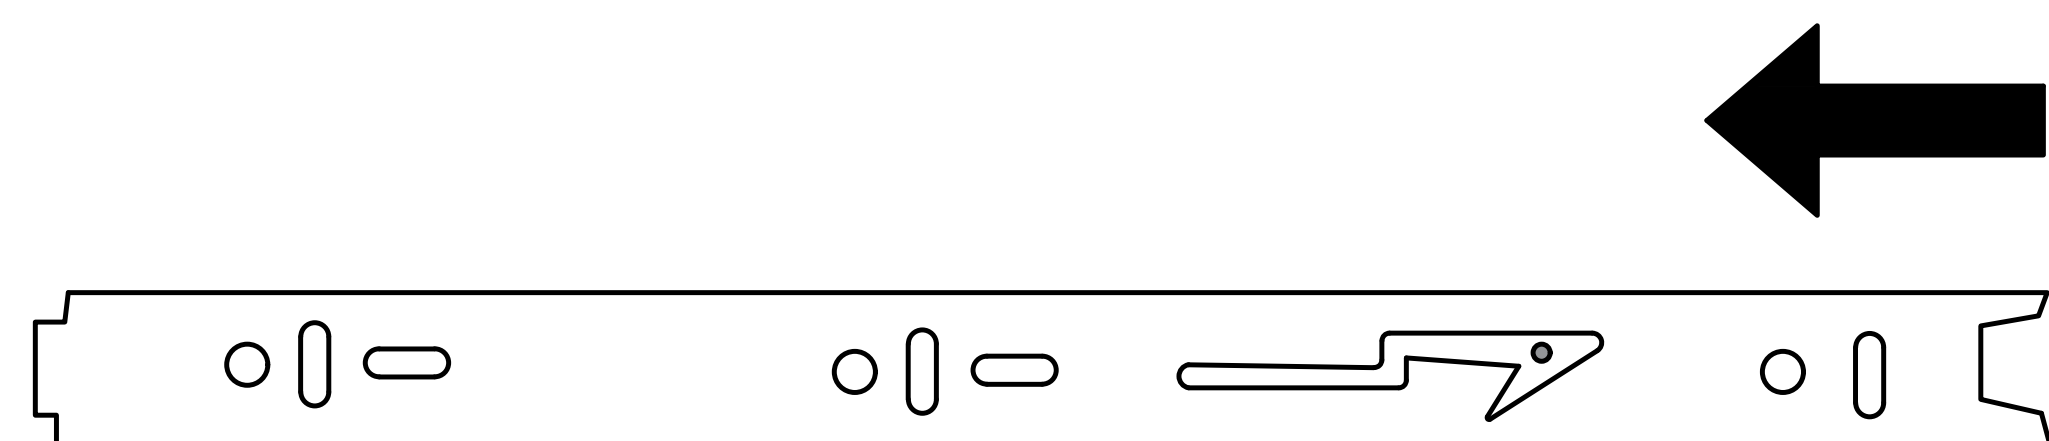


①



②

③


Step 7

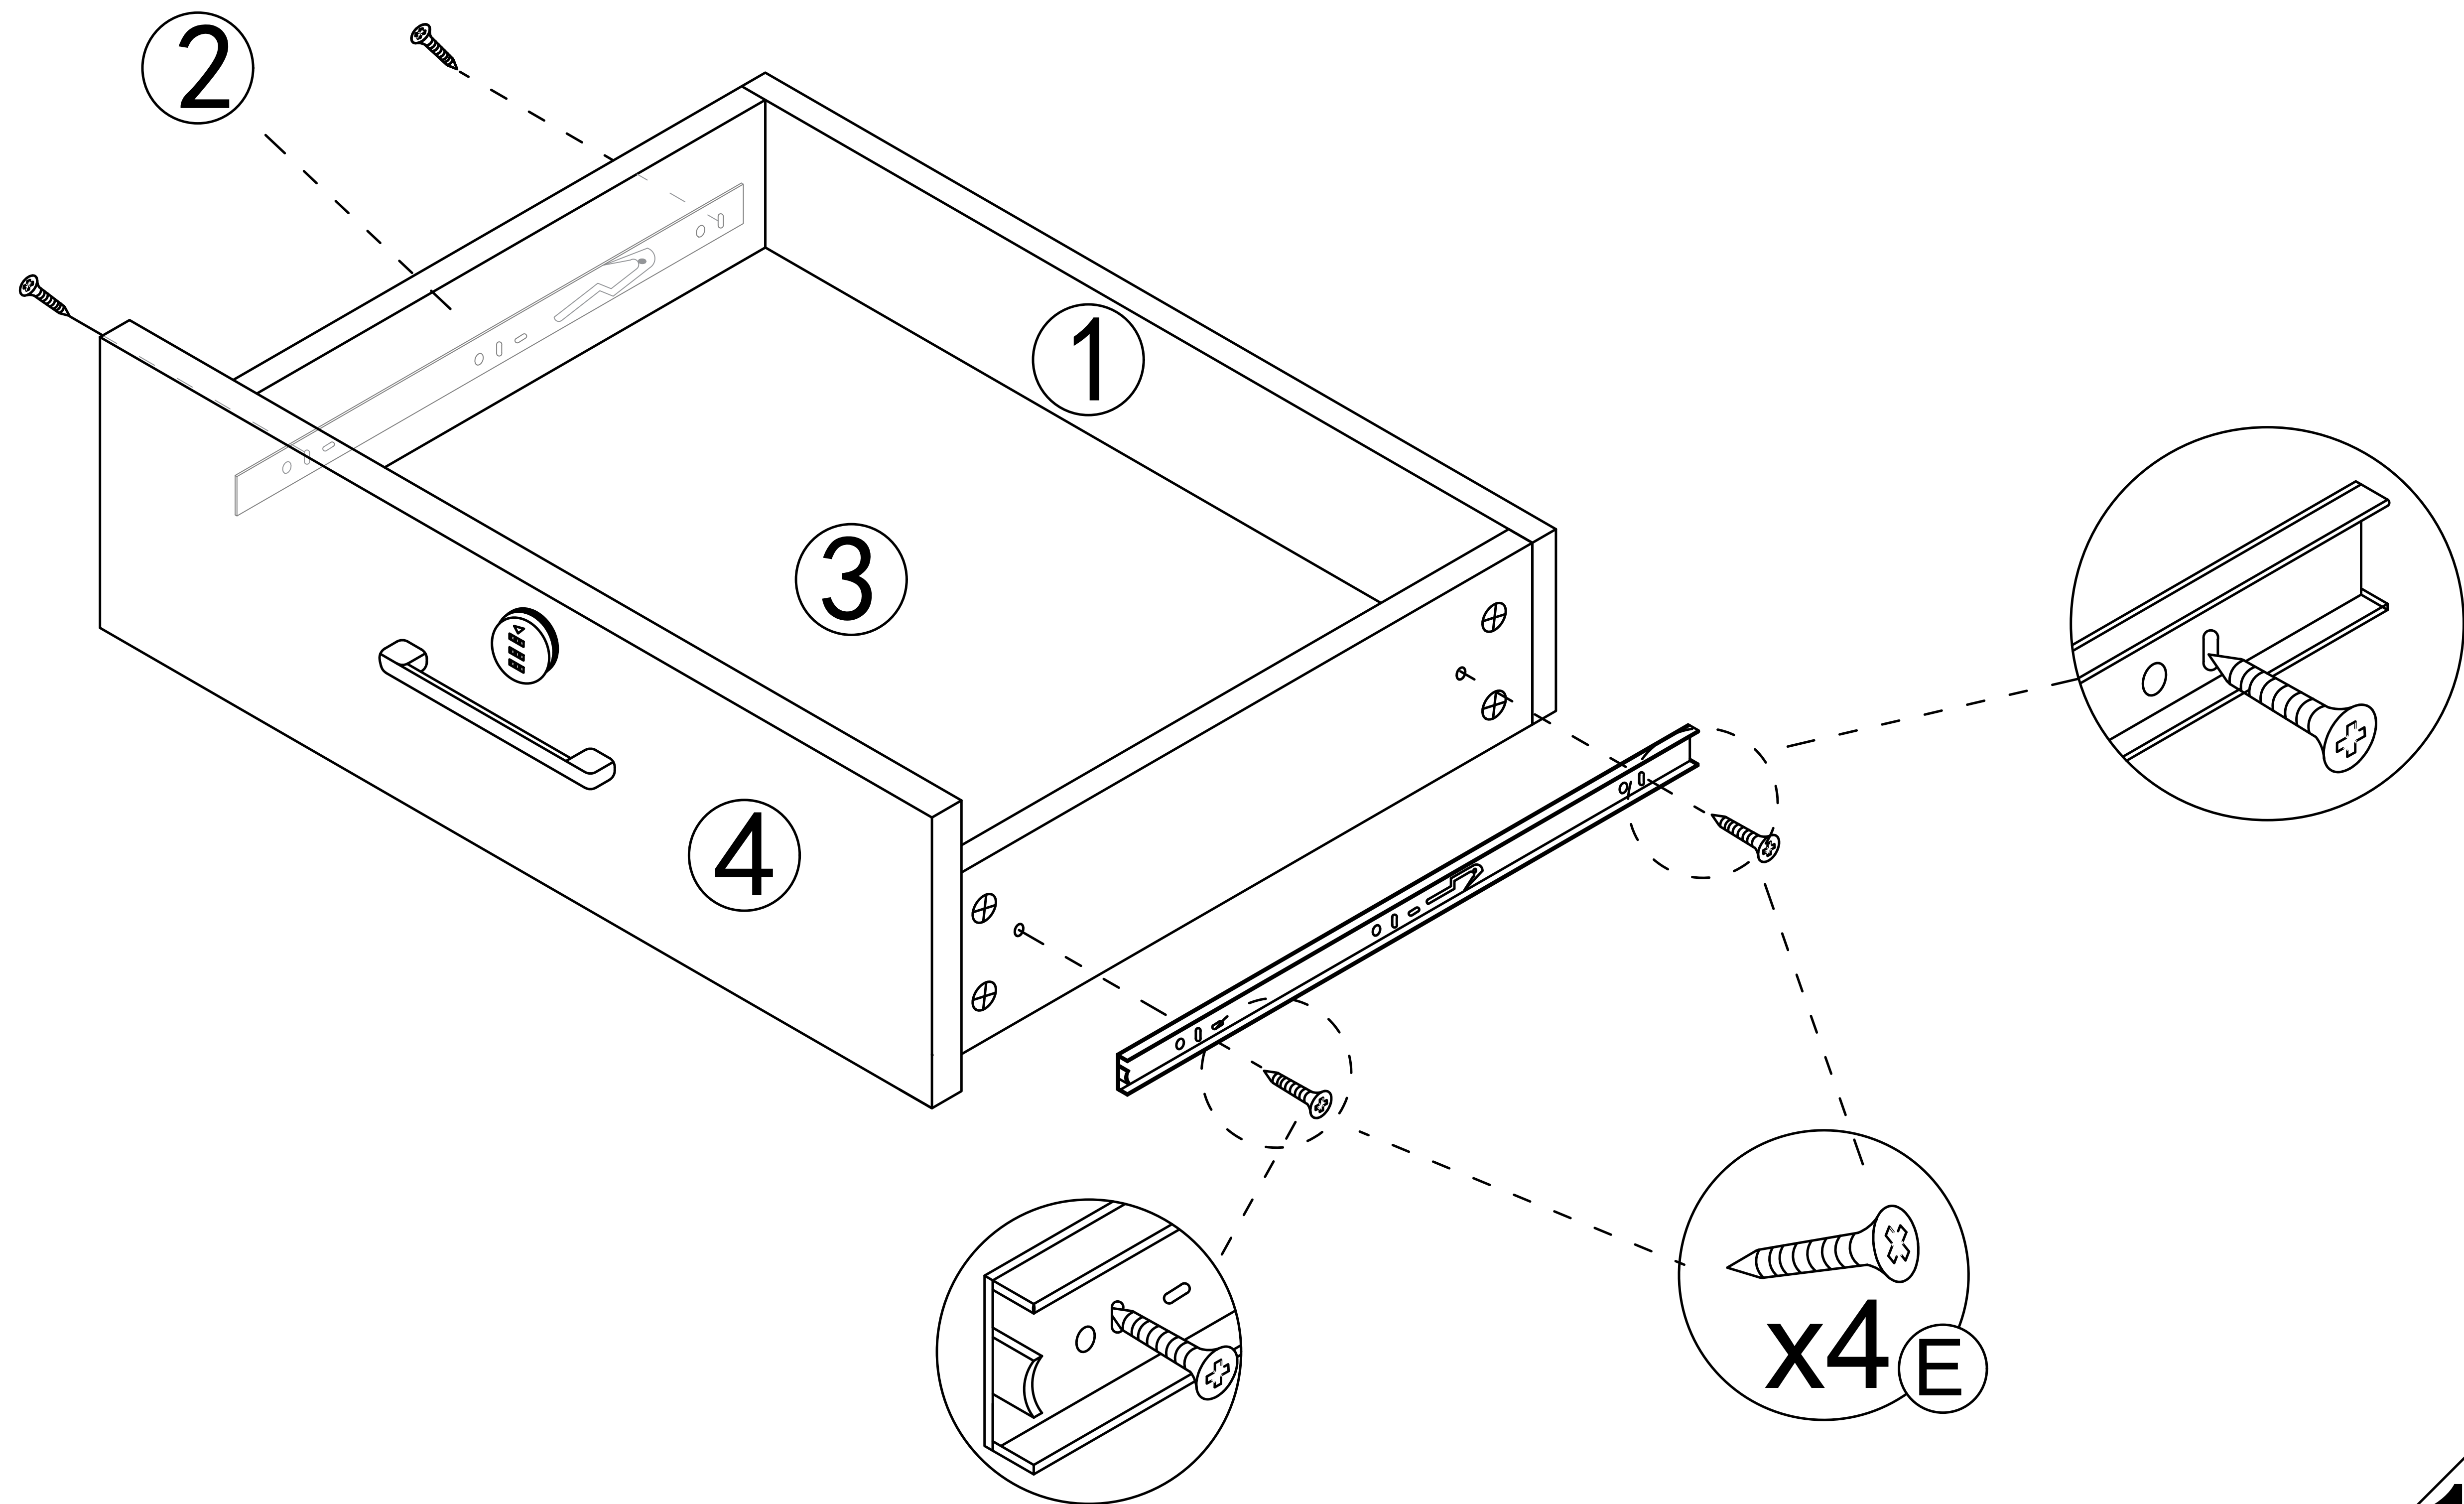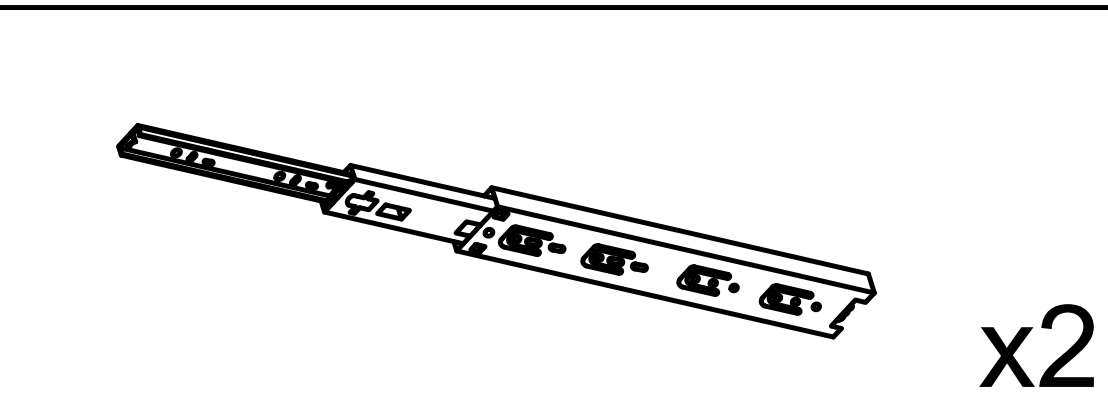
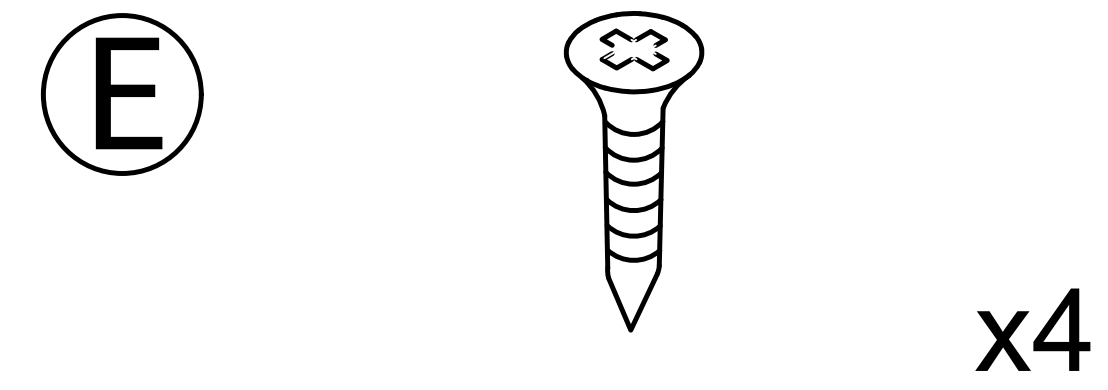
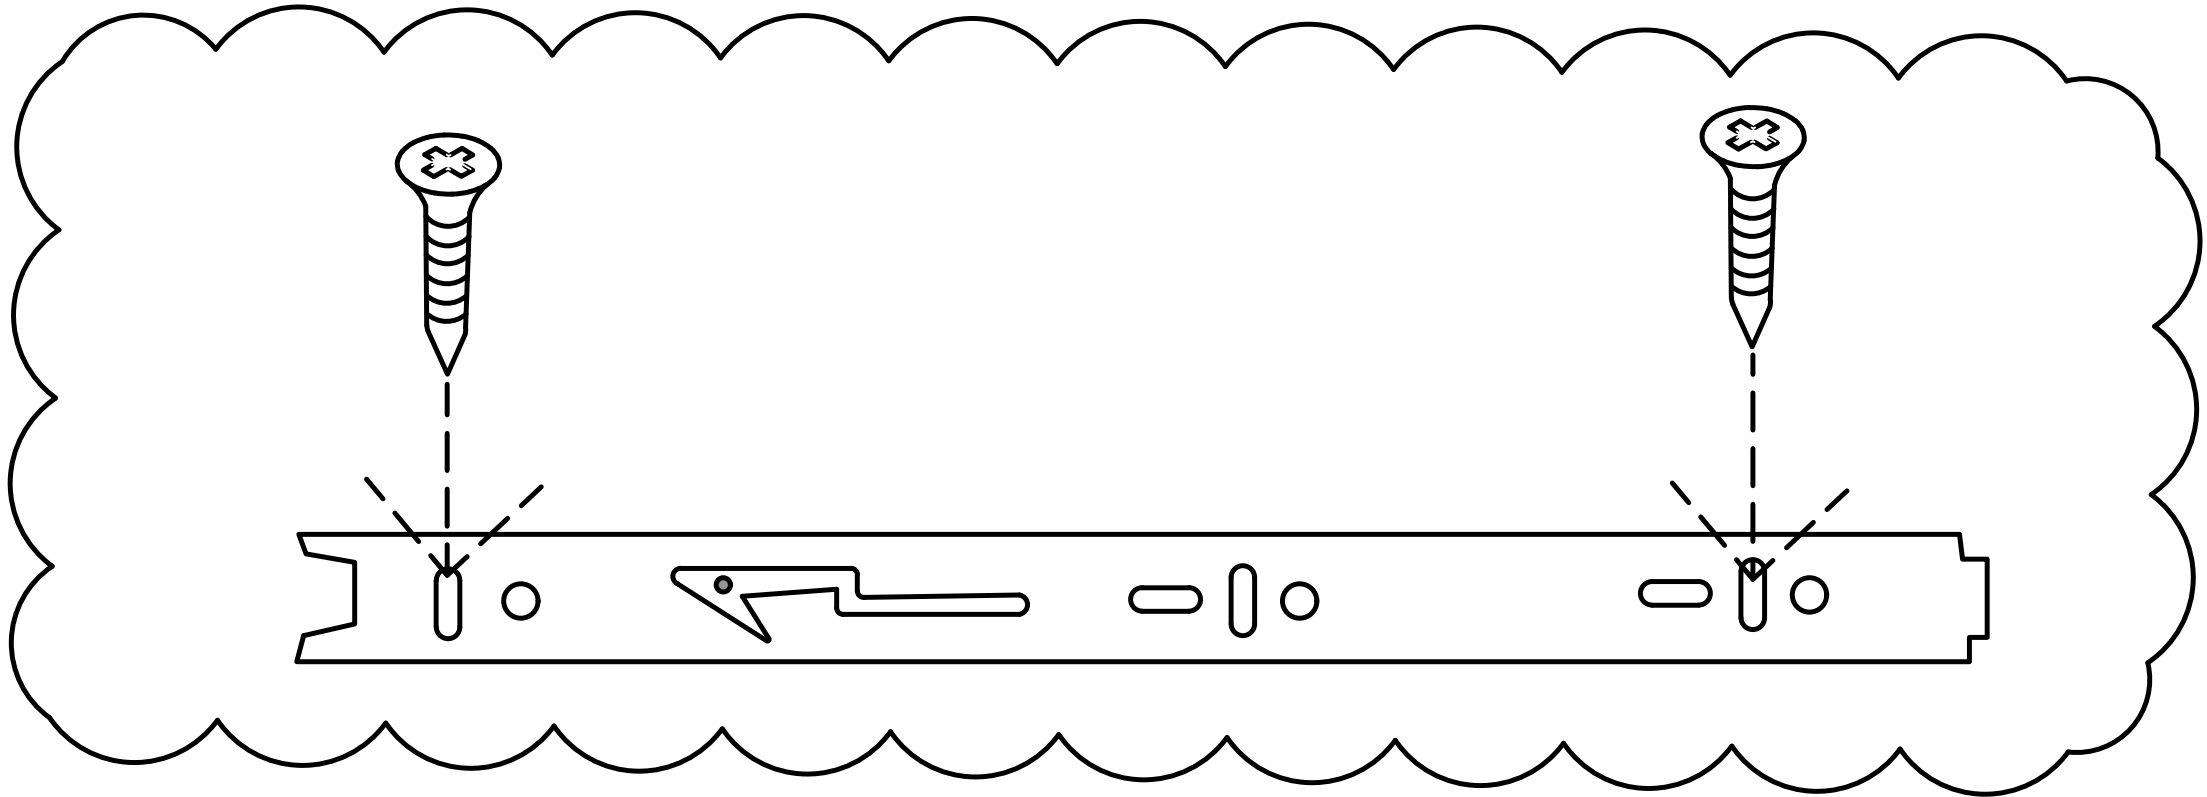



Step 8

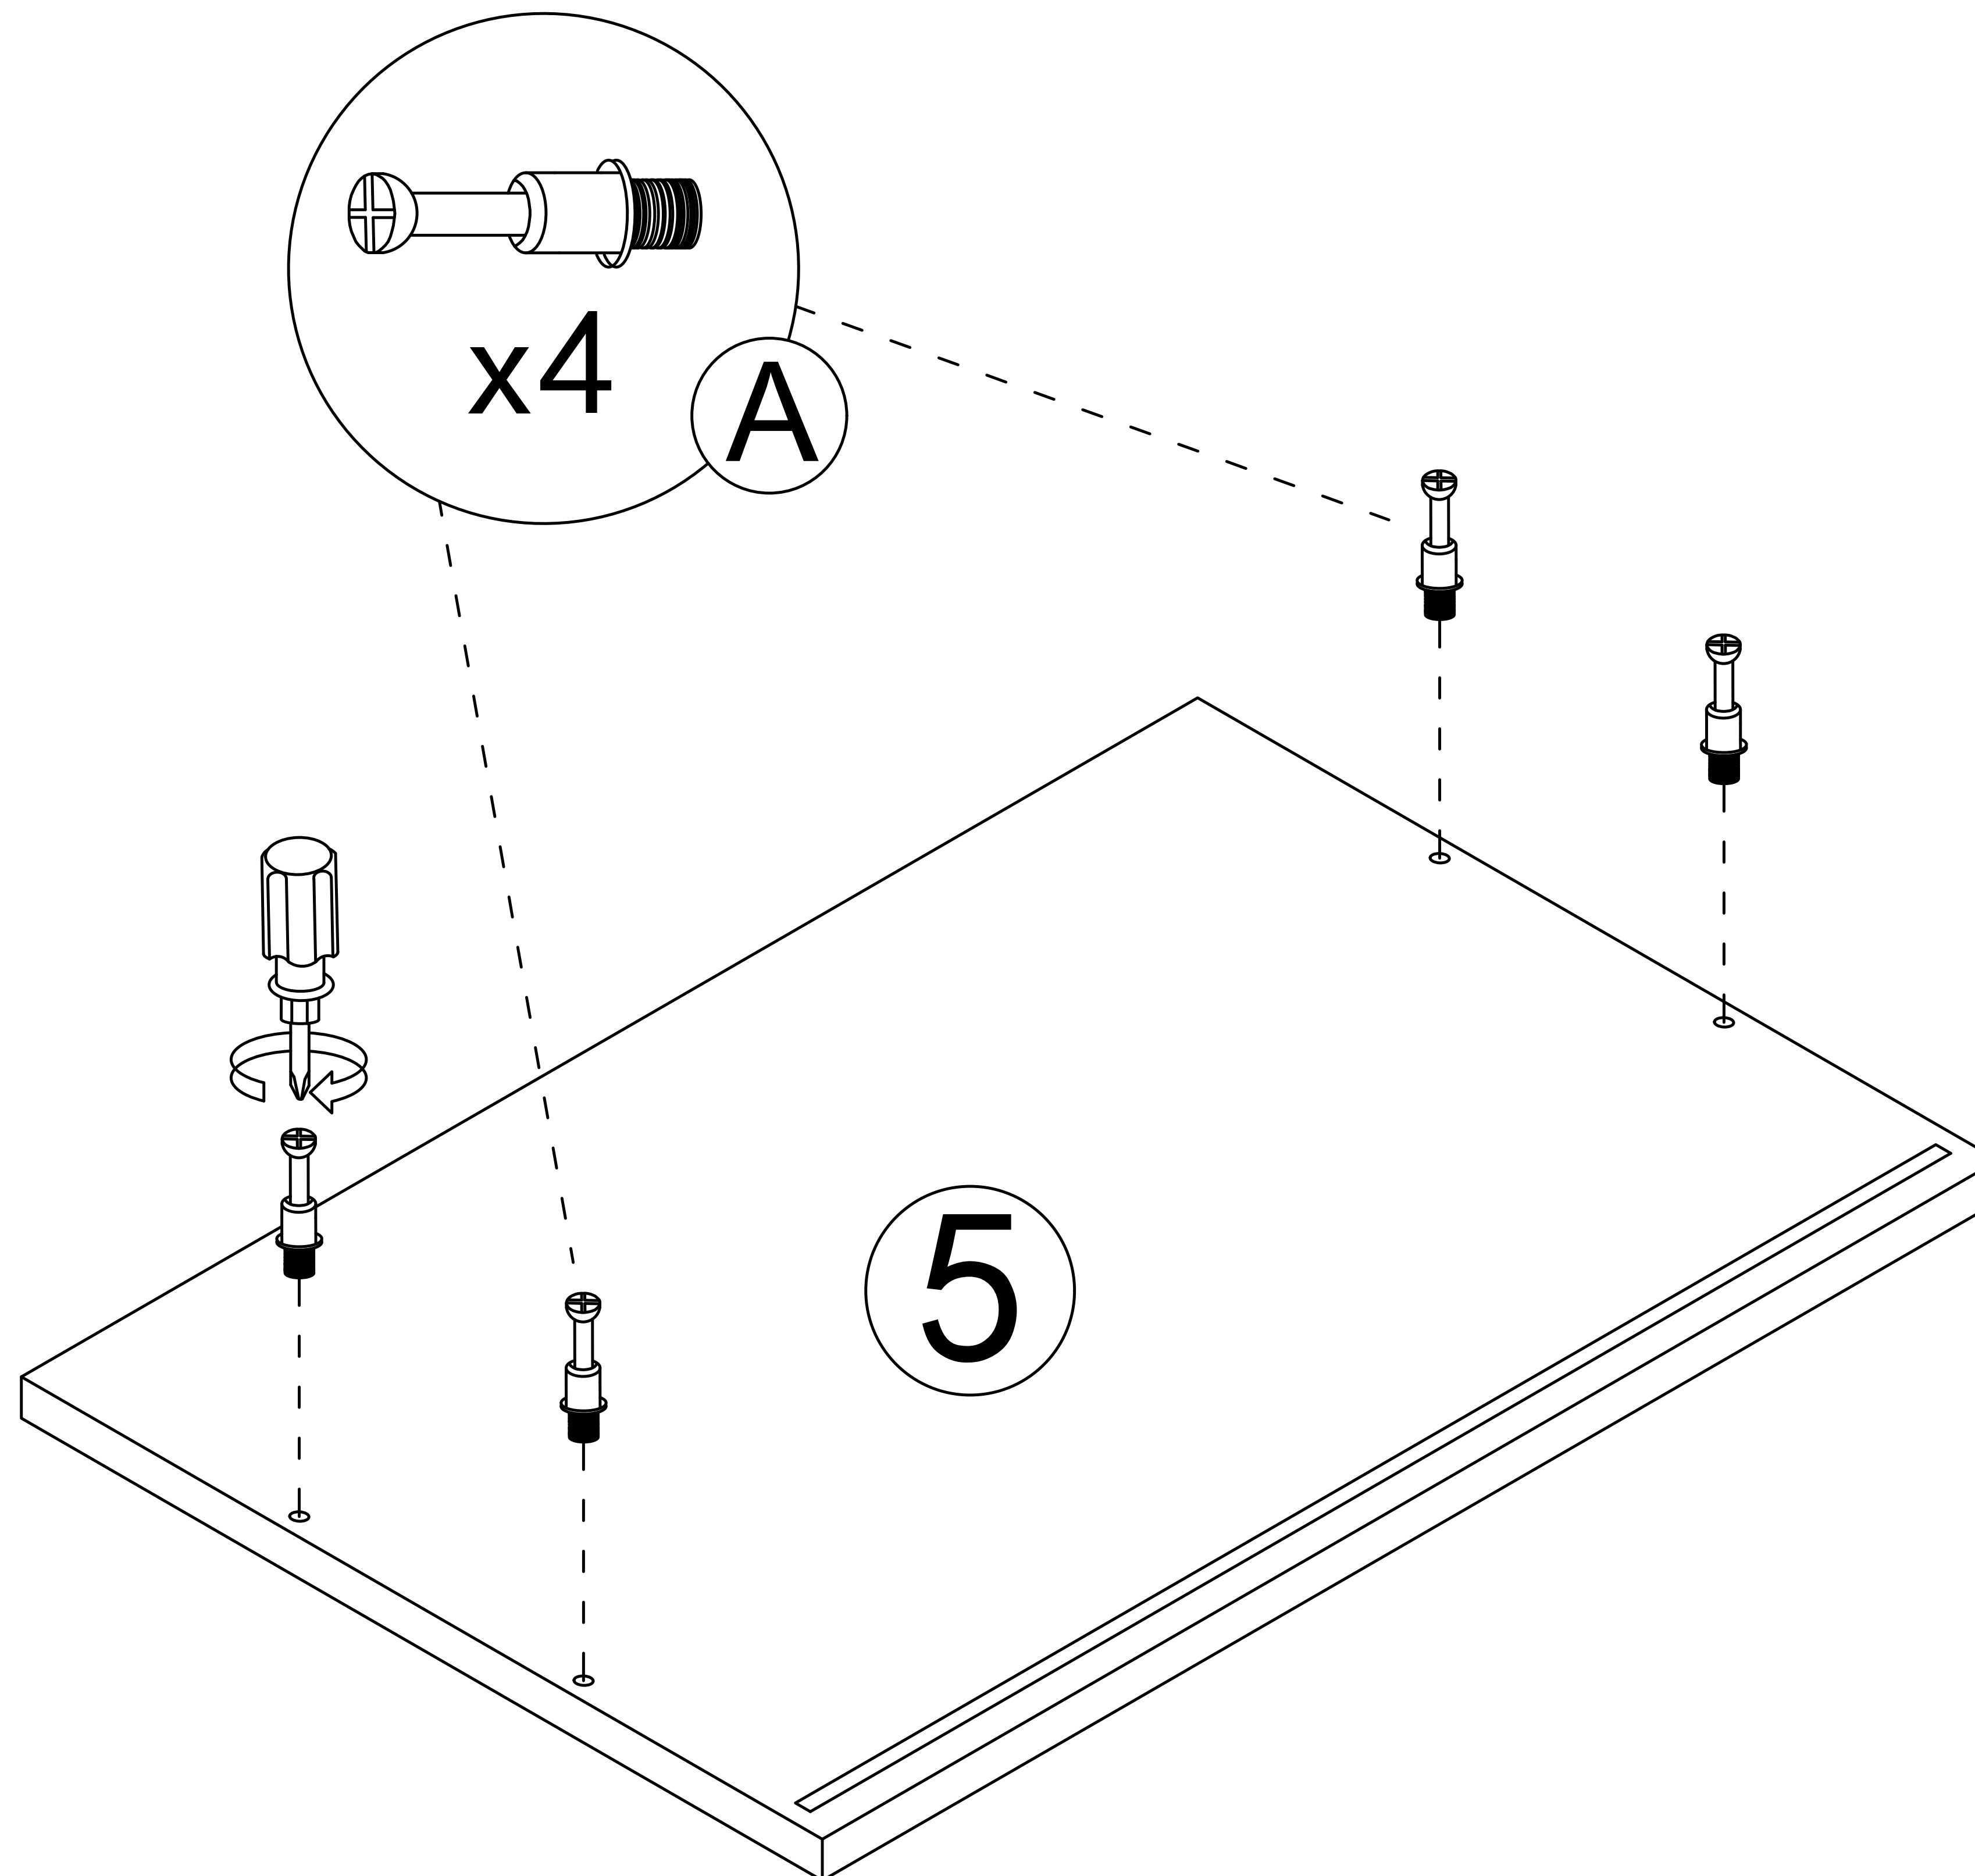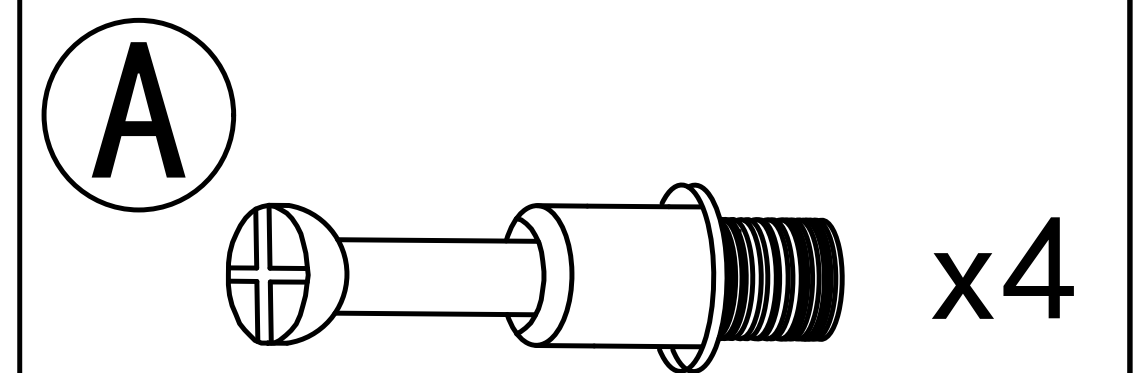


Step 9

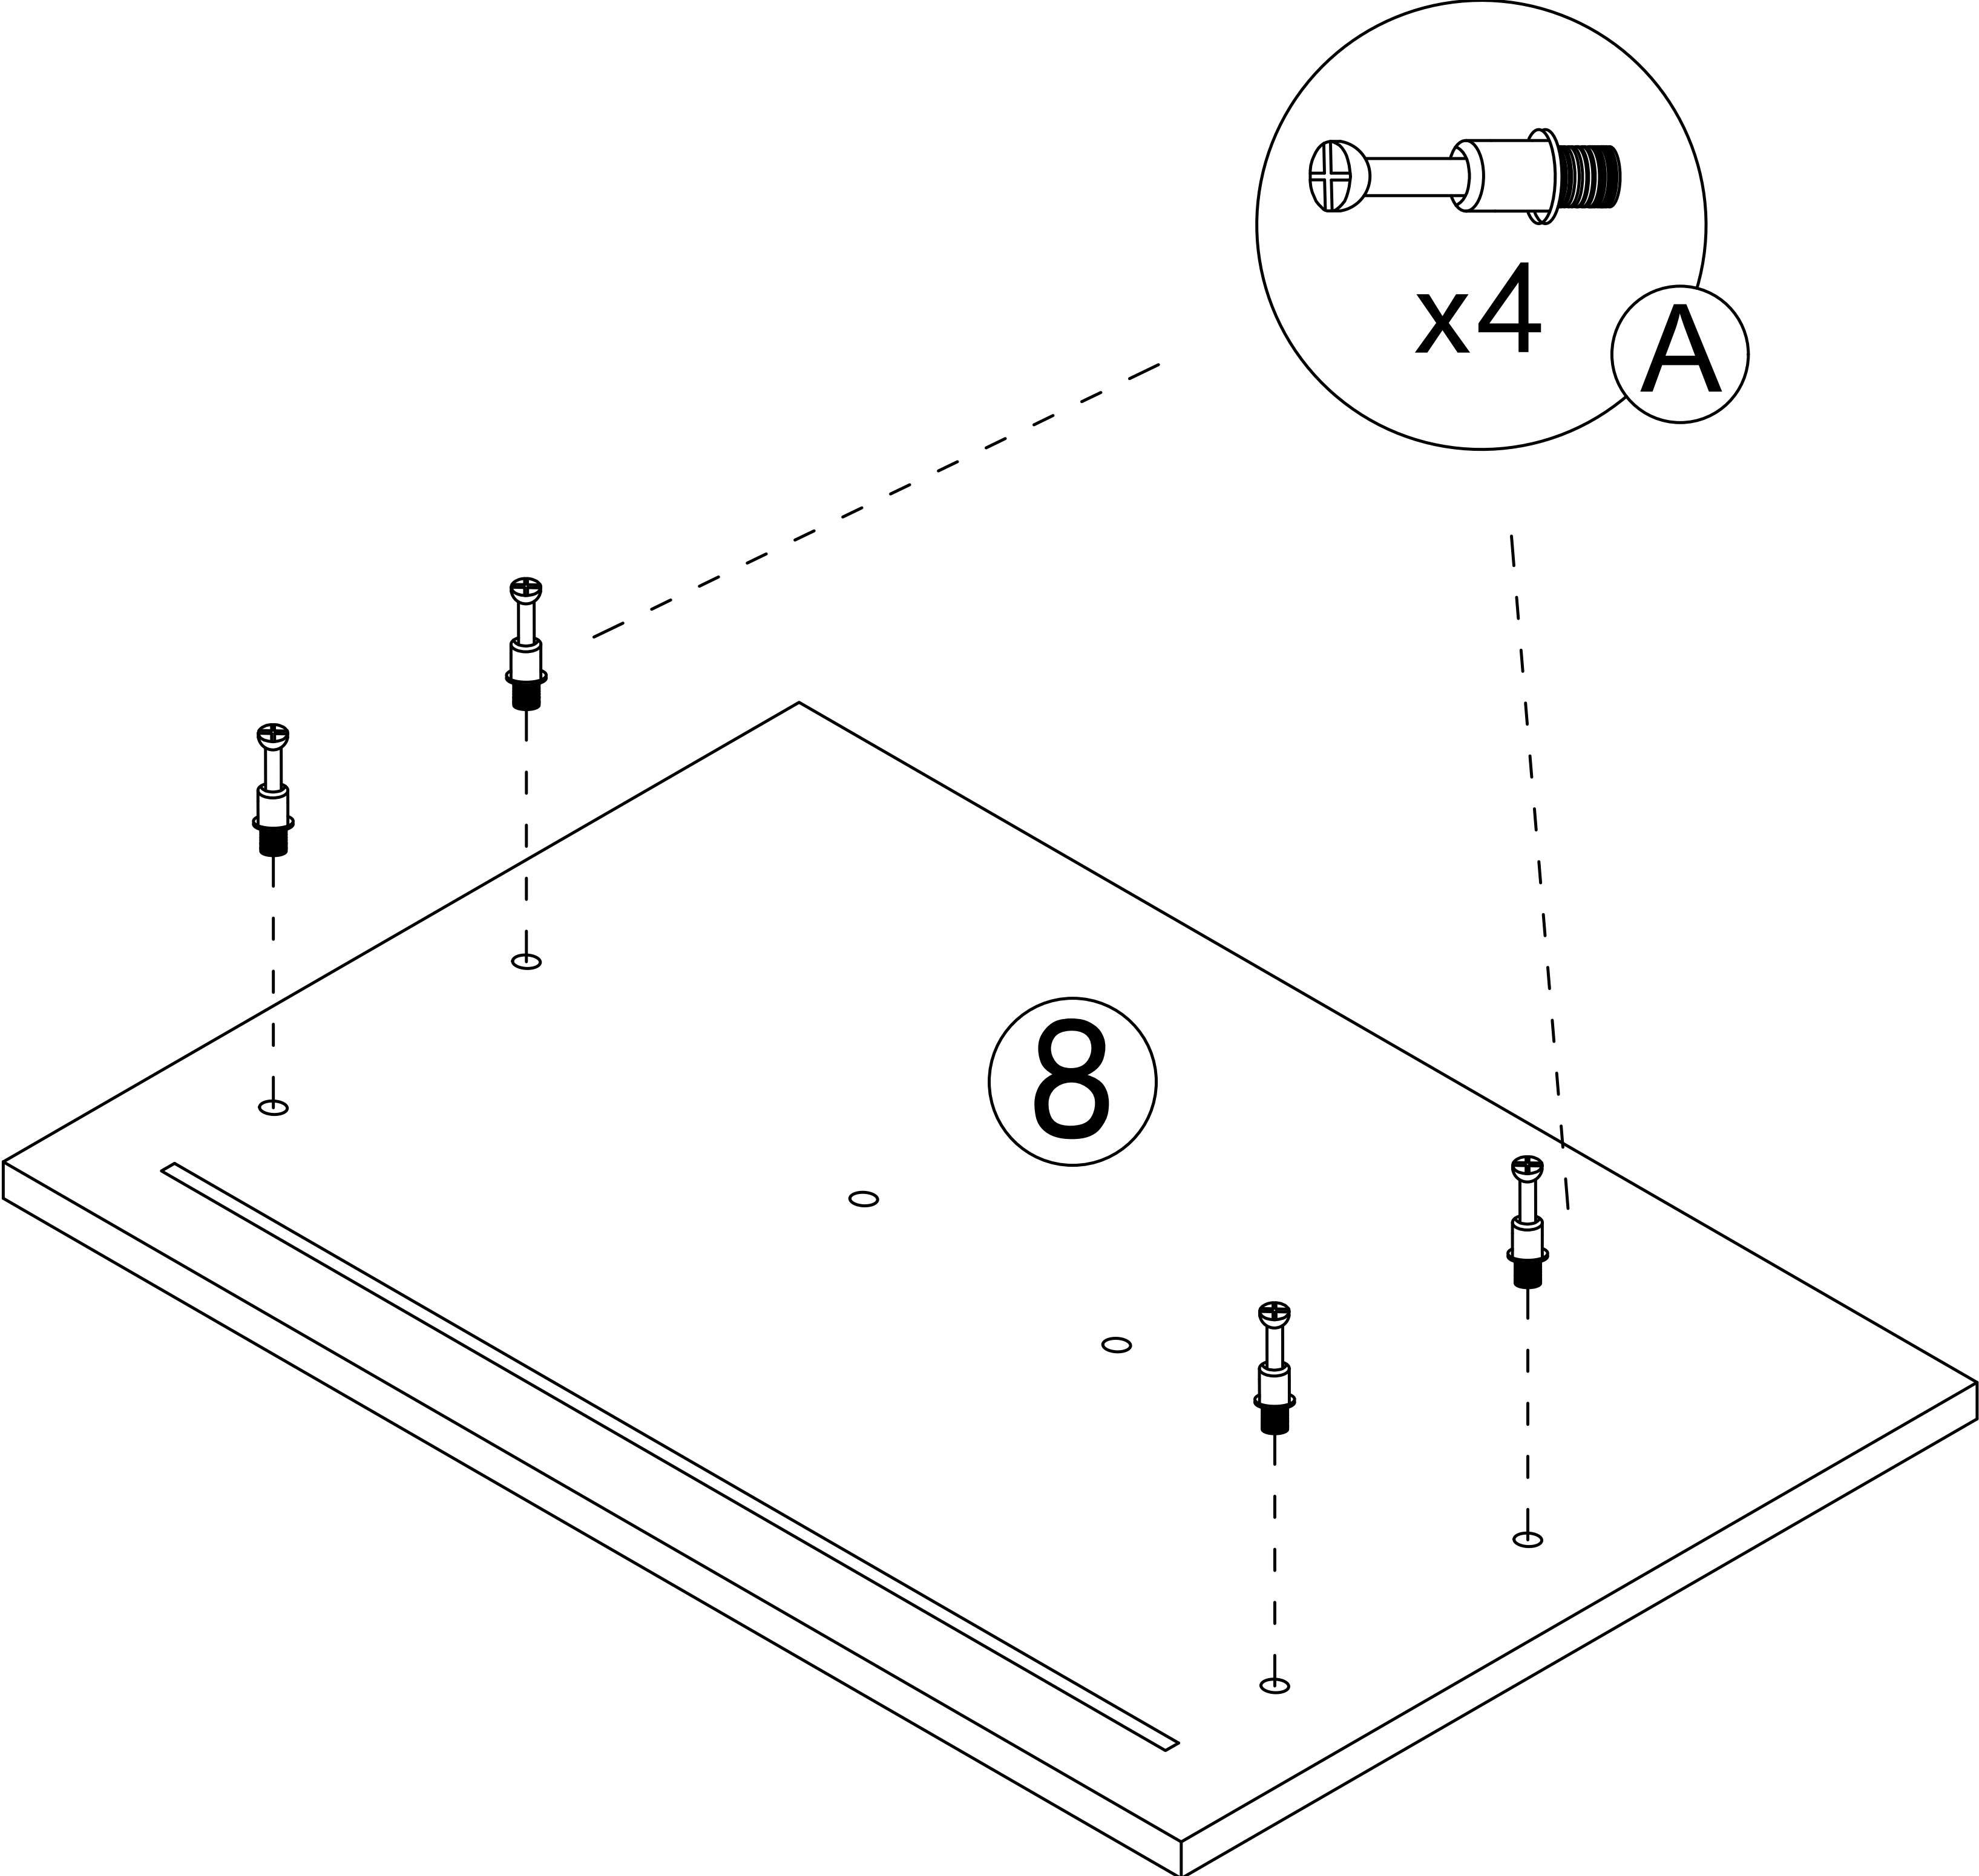

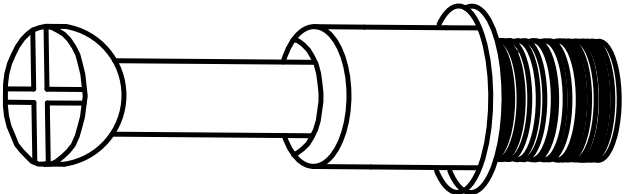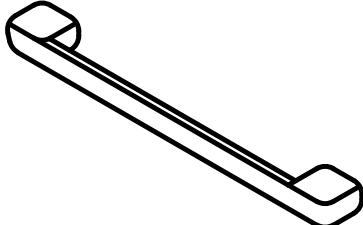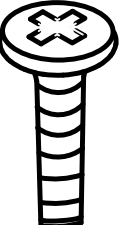
- | | | |
|----------|---|----|
| A |  | x4 |
| D |  | x1 |
| |  | x2 |

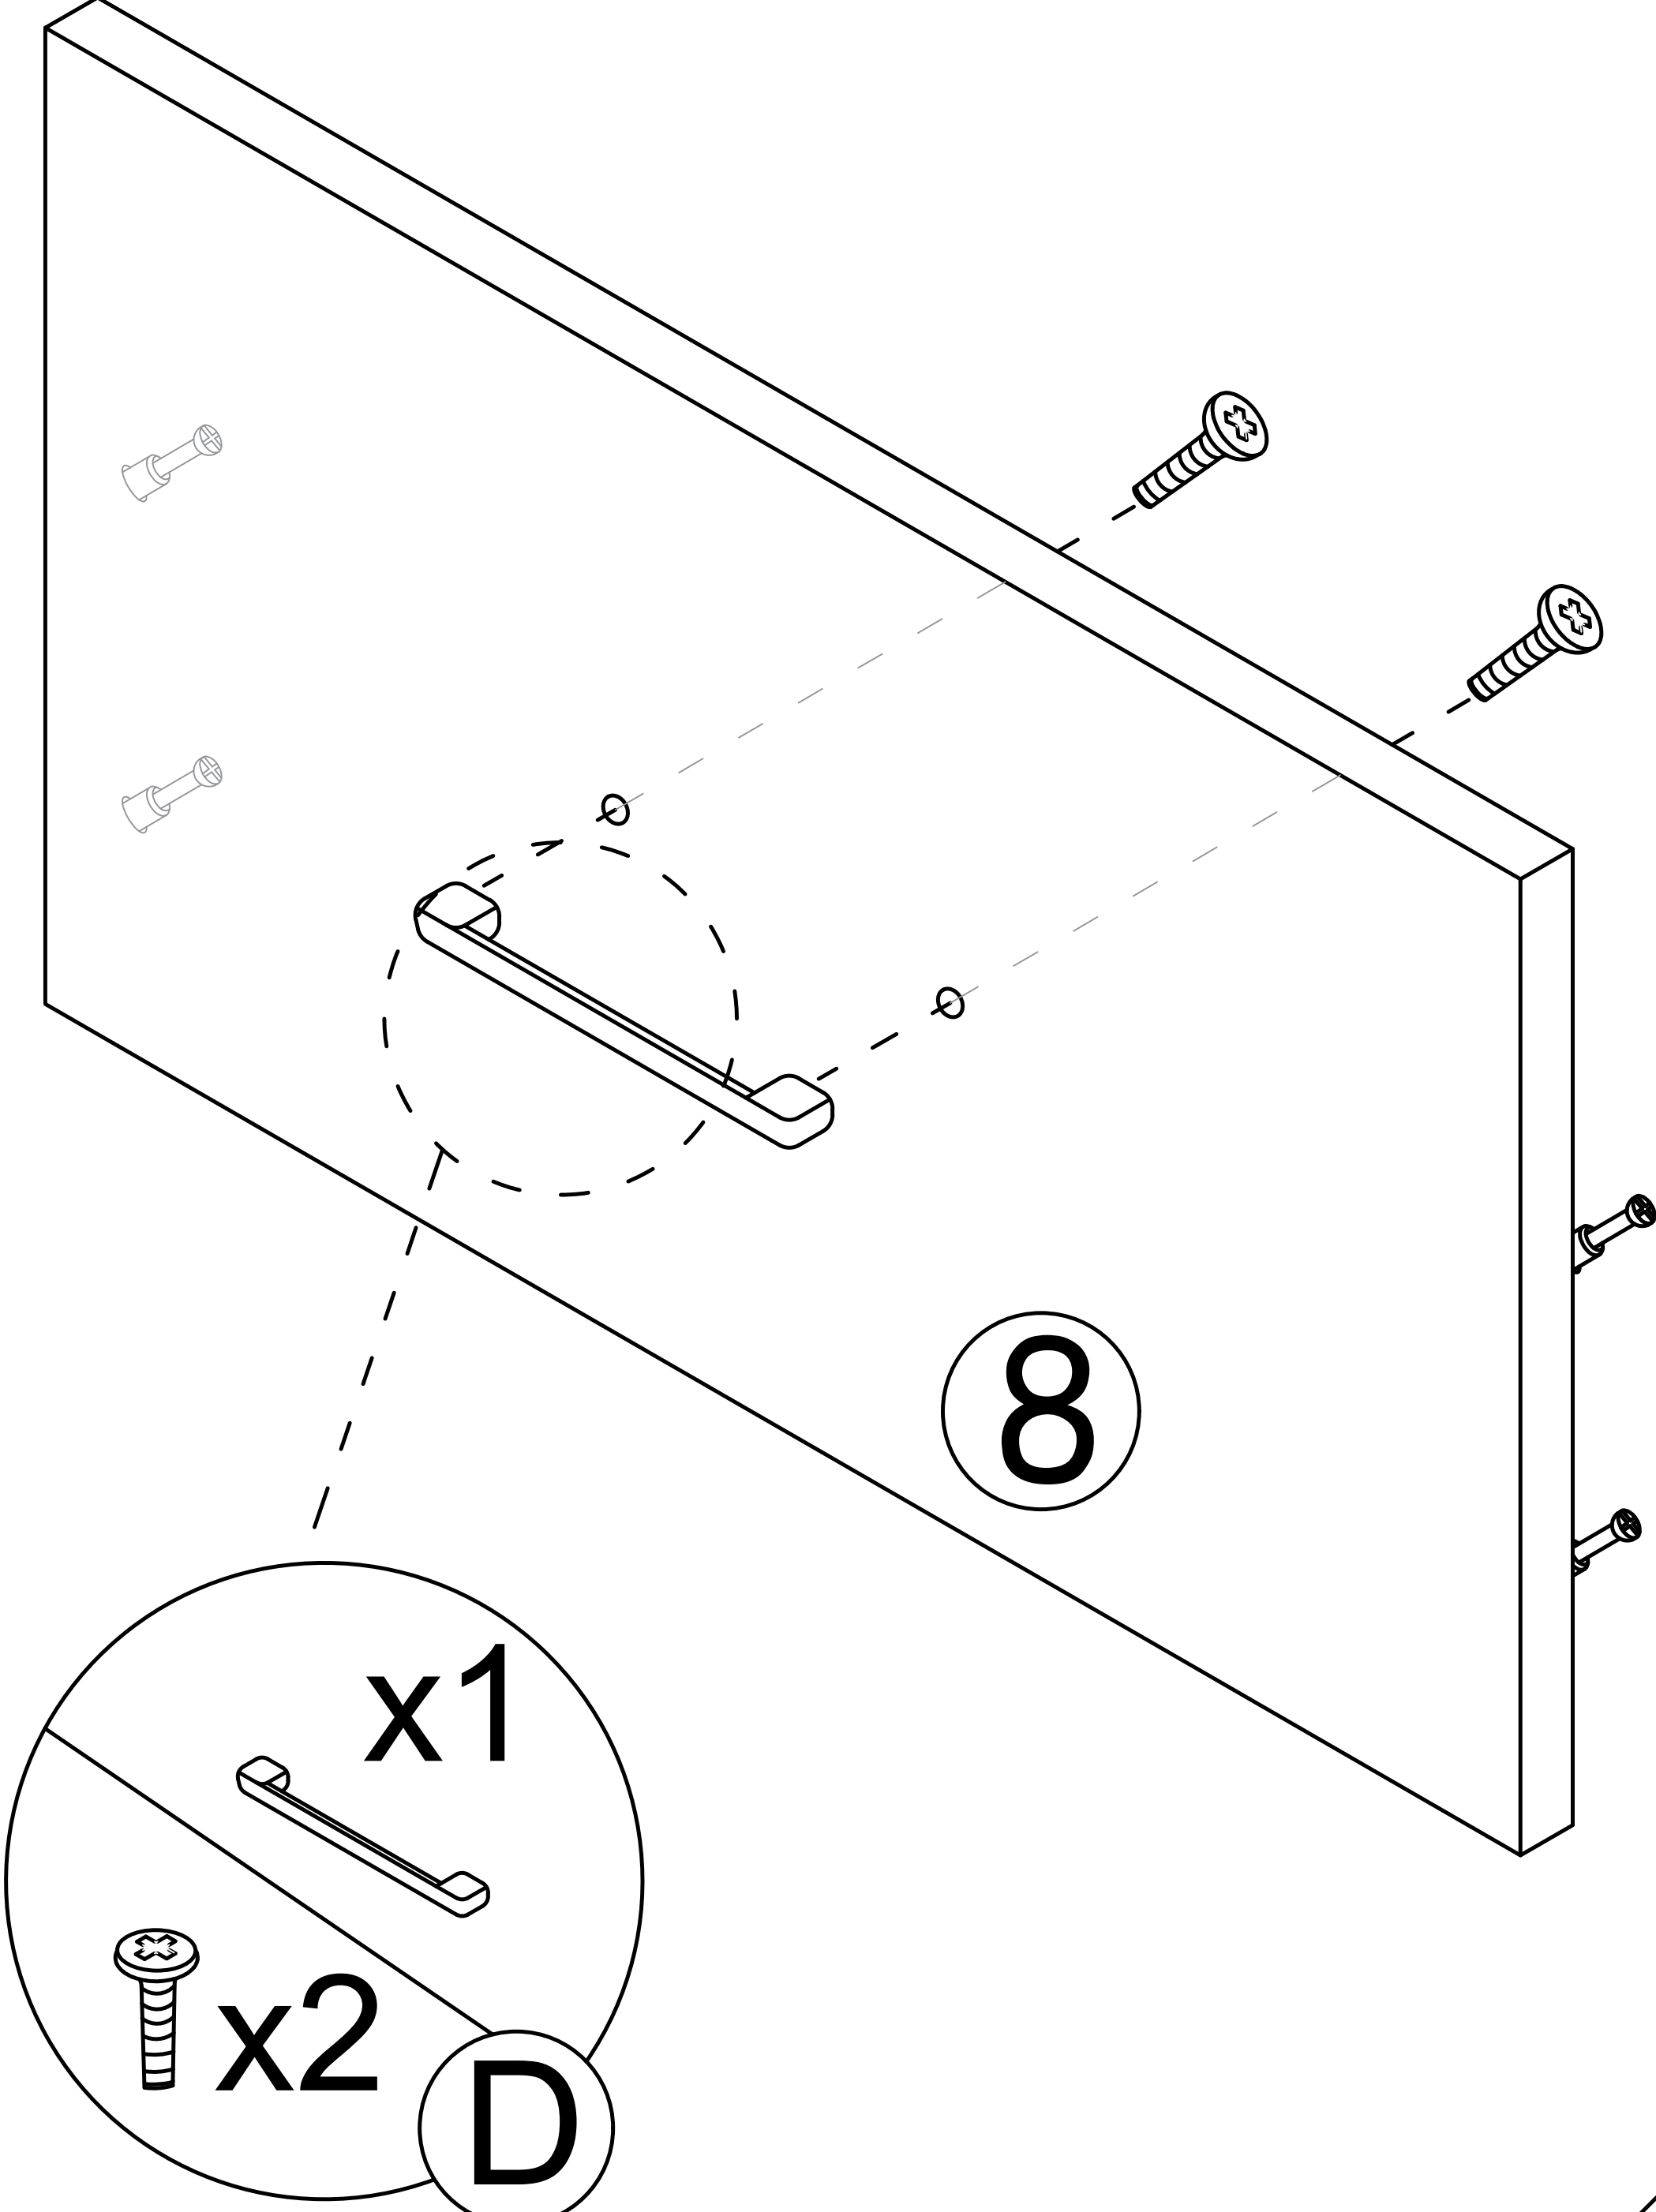


Step 10

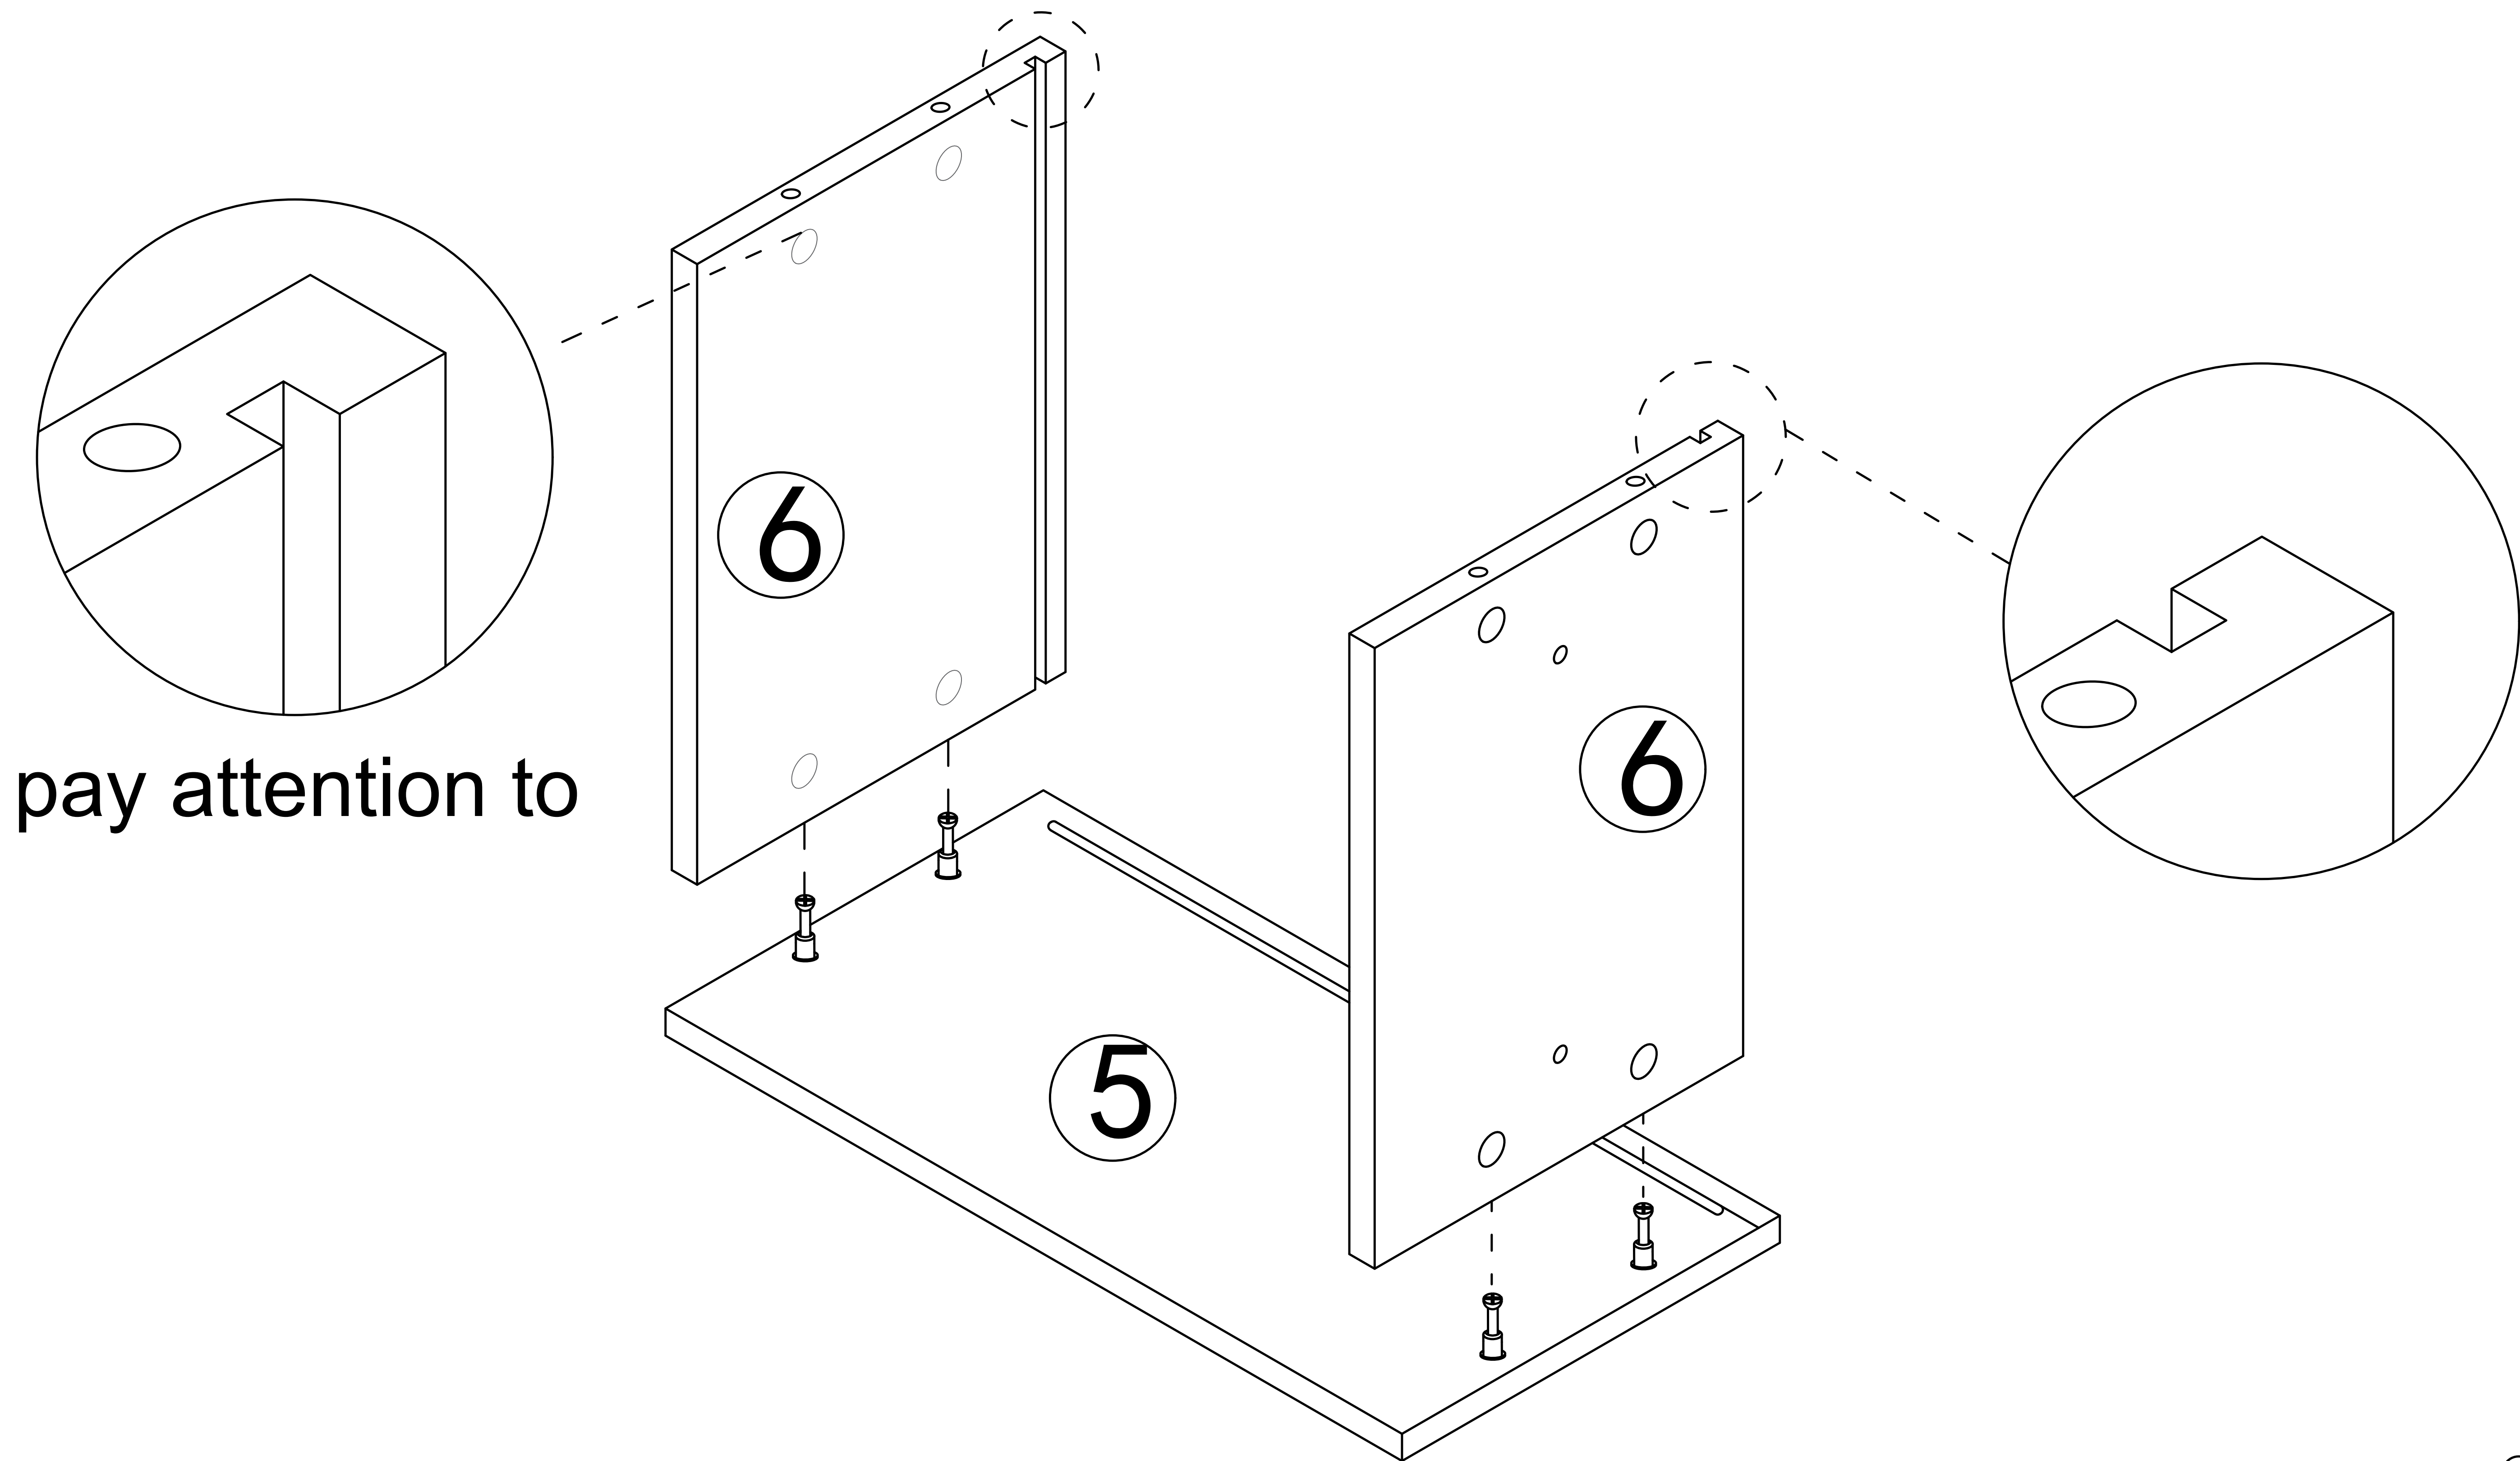



Step 11

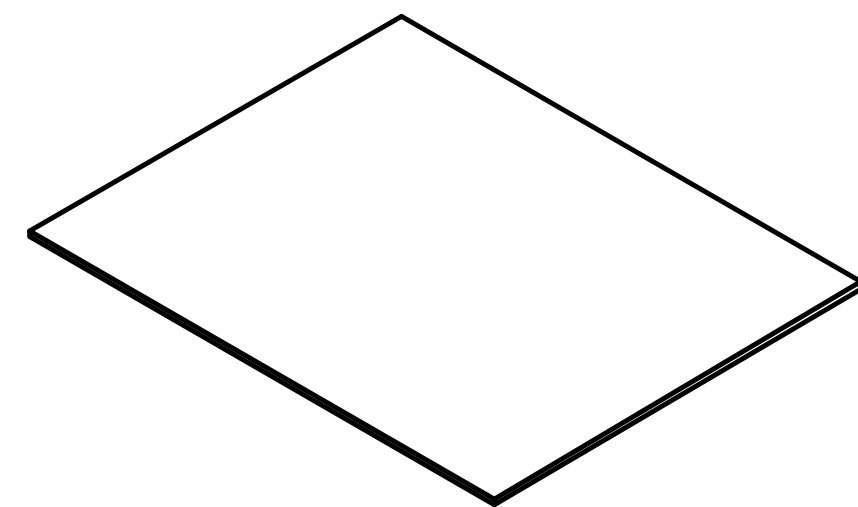

⑦ x1

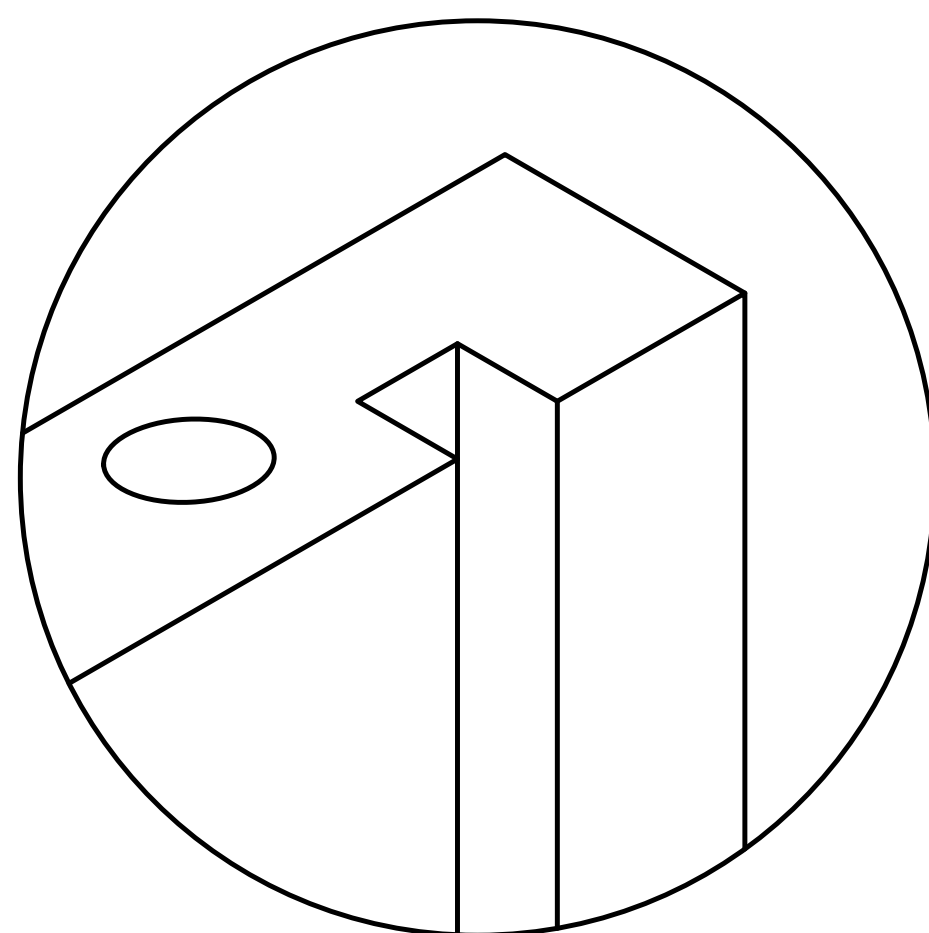


pay attention to

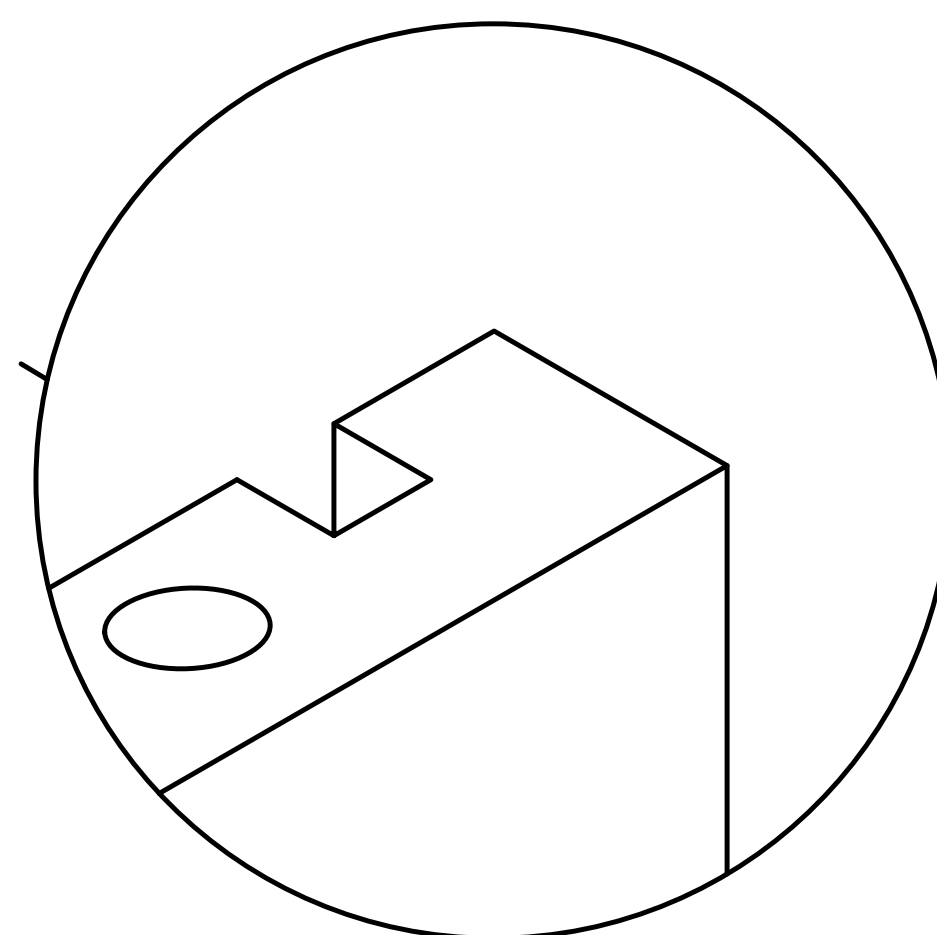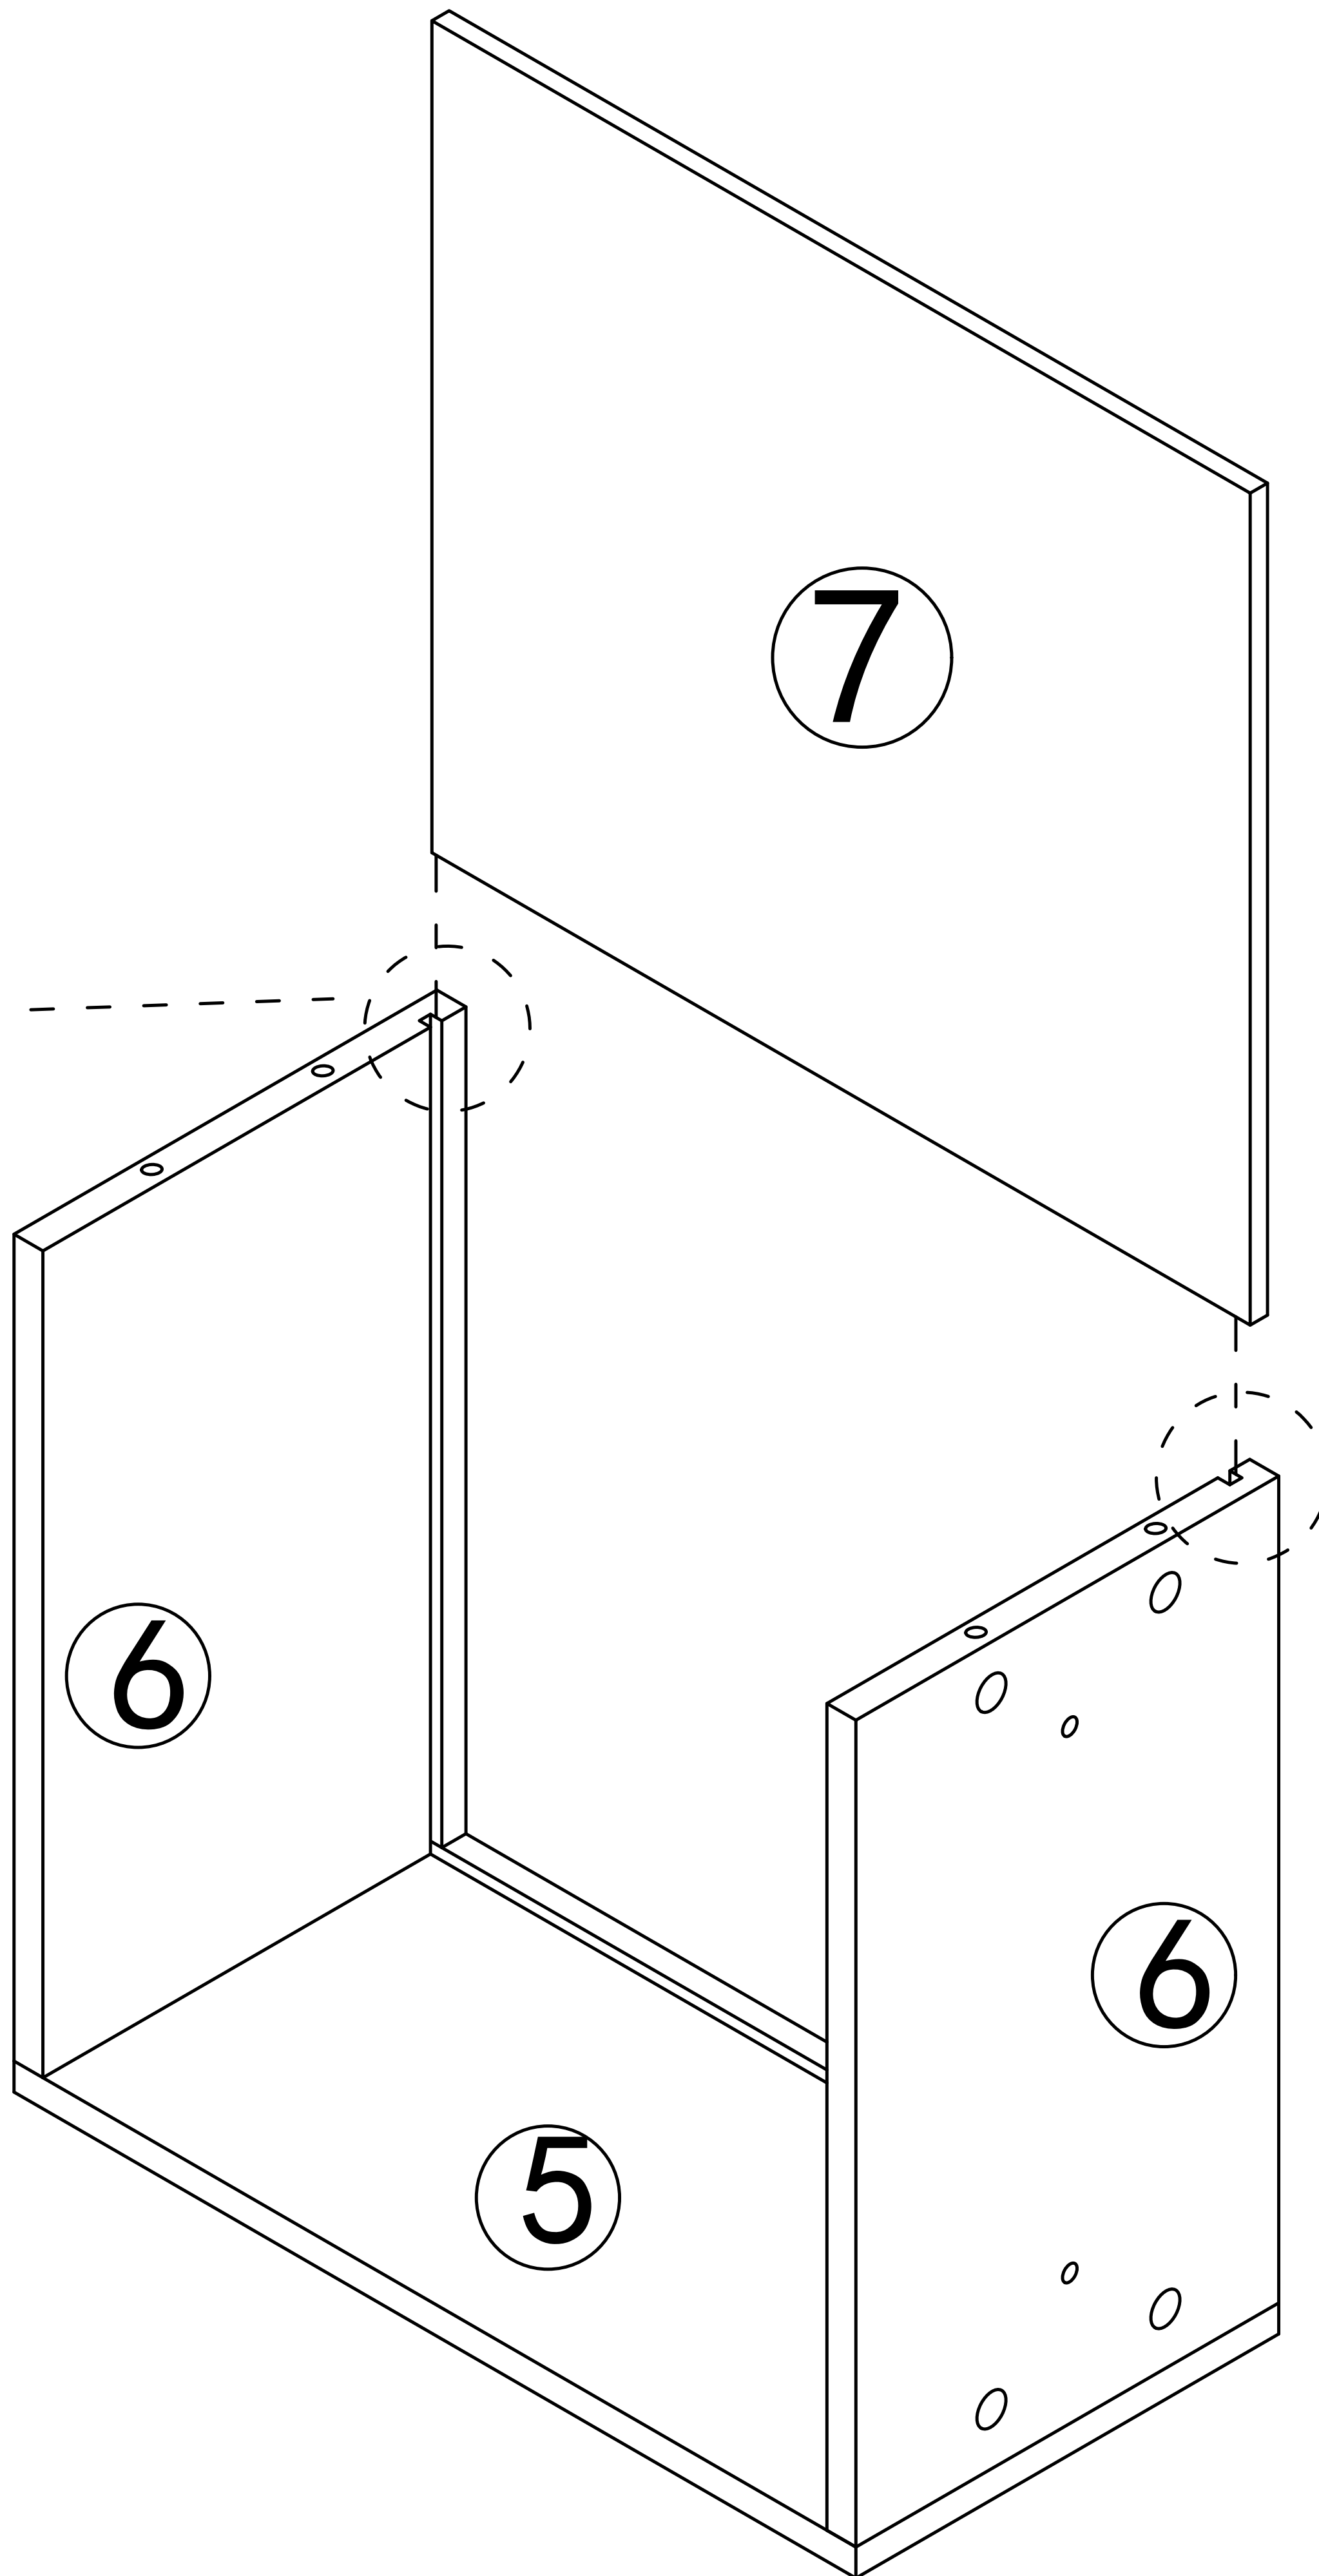


Step 12


B

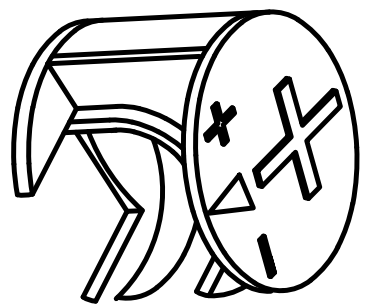


x8

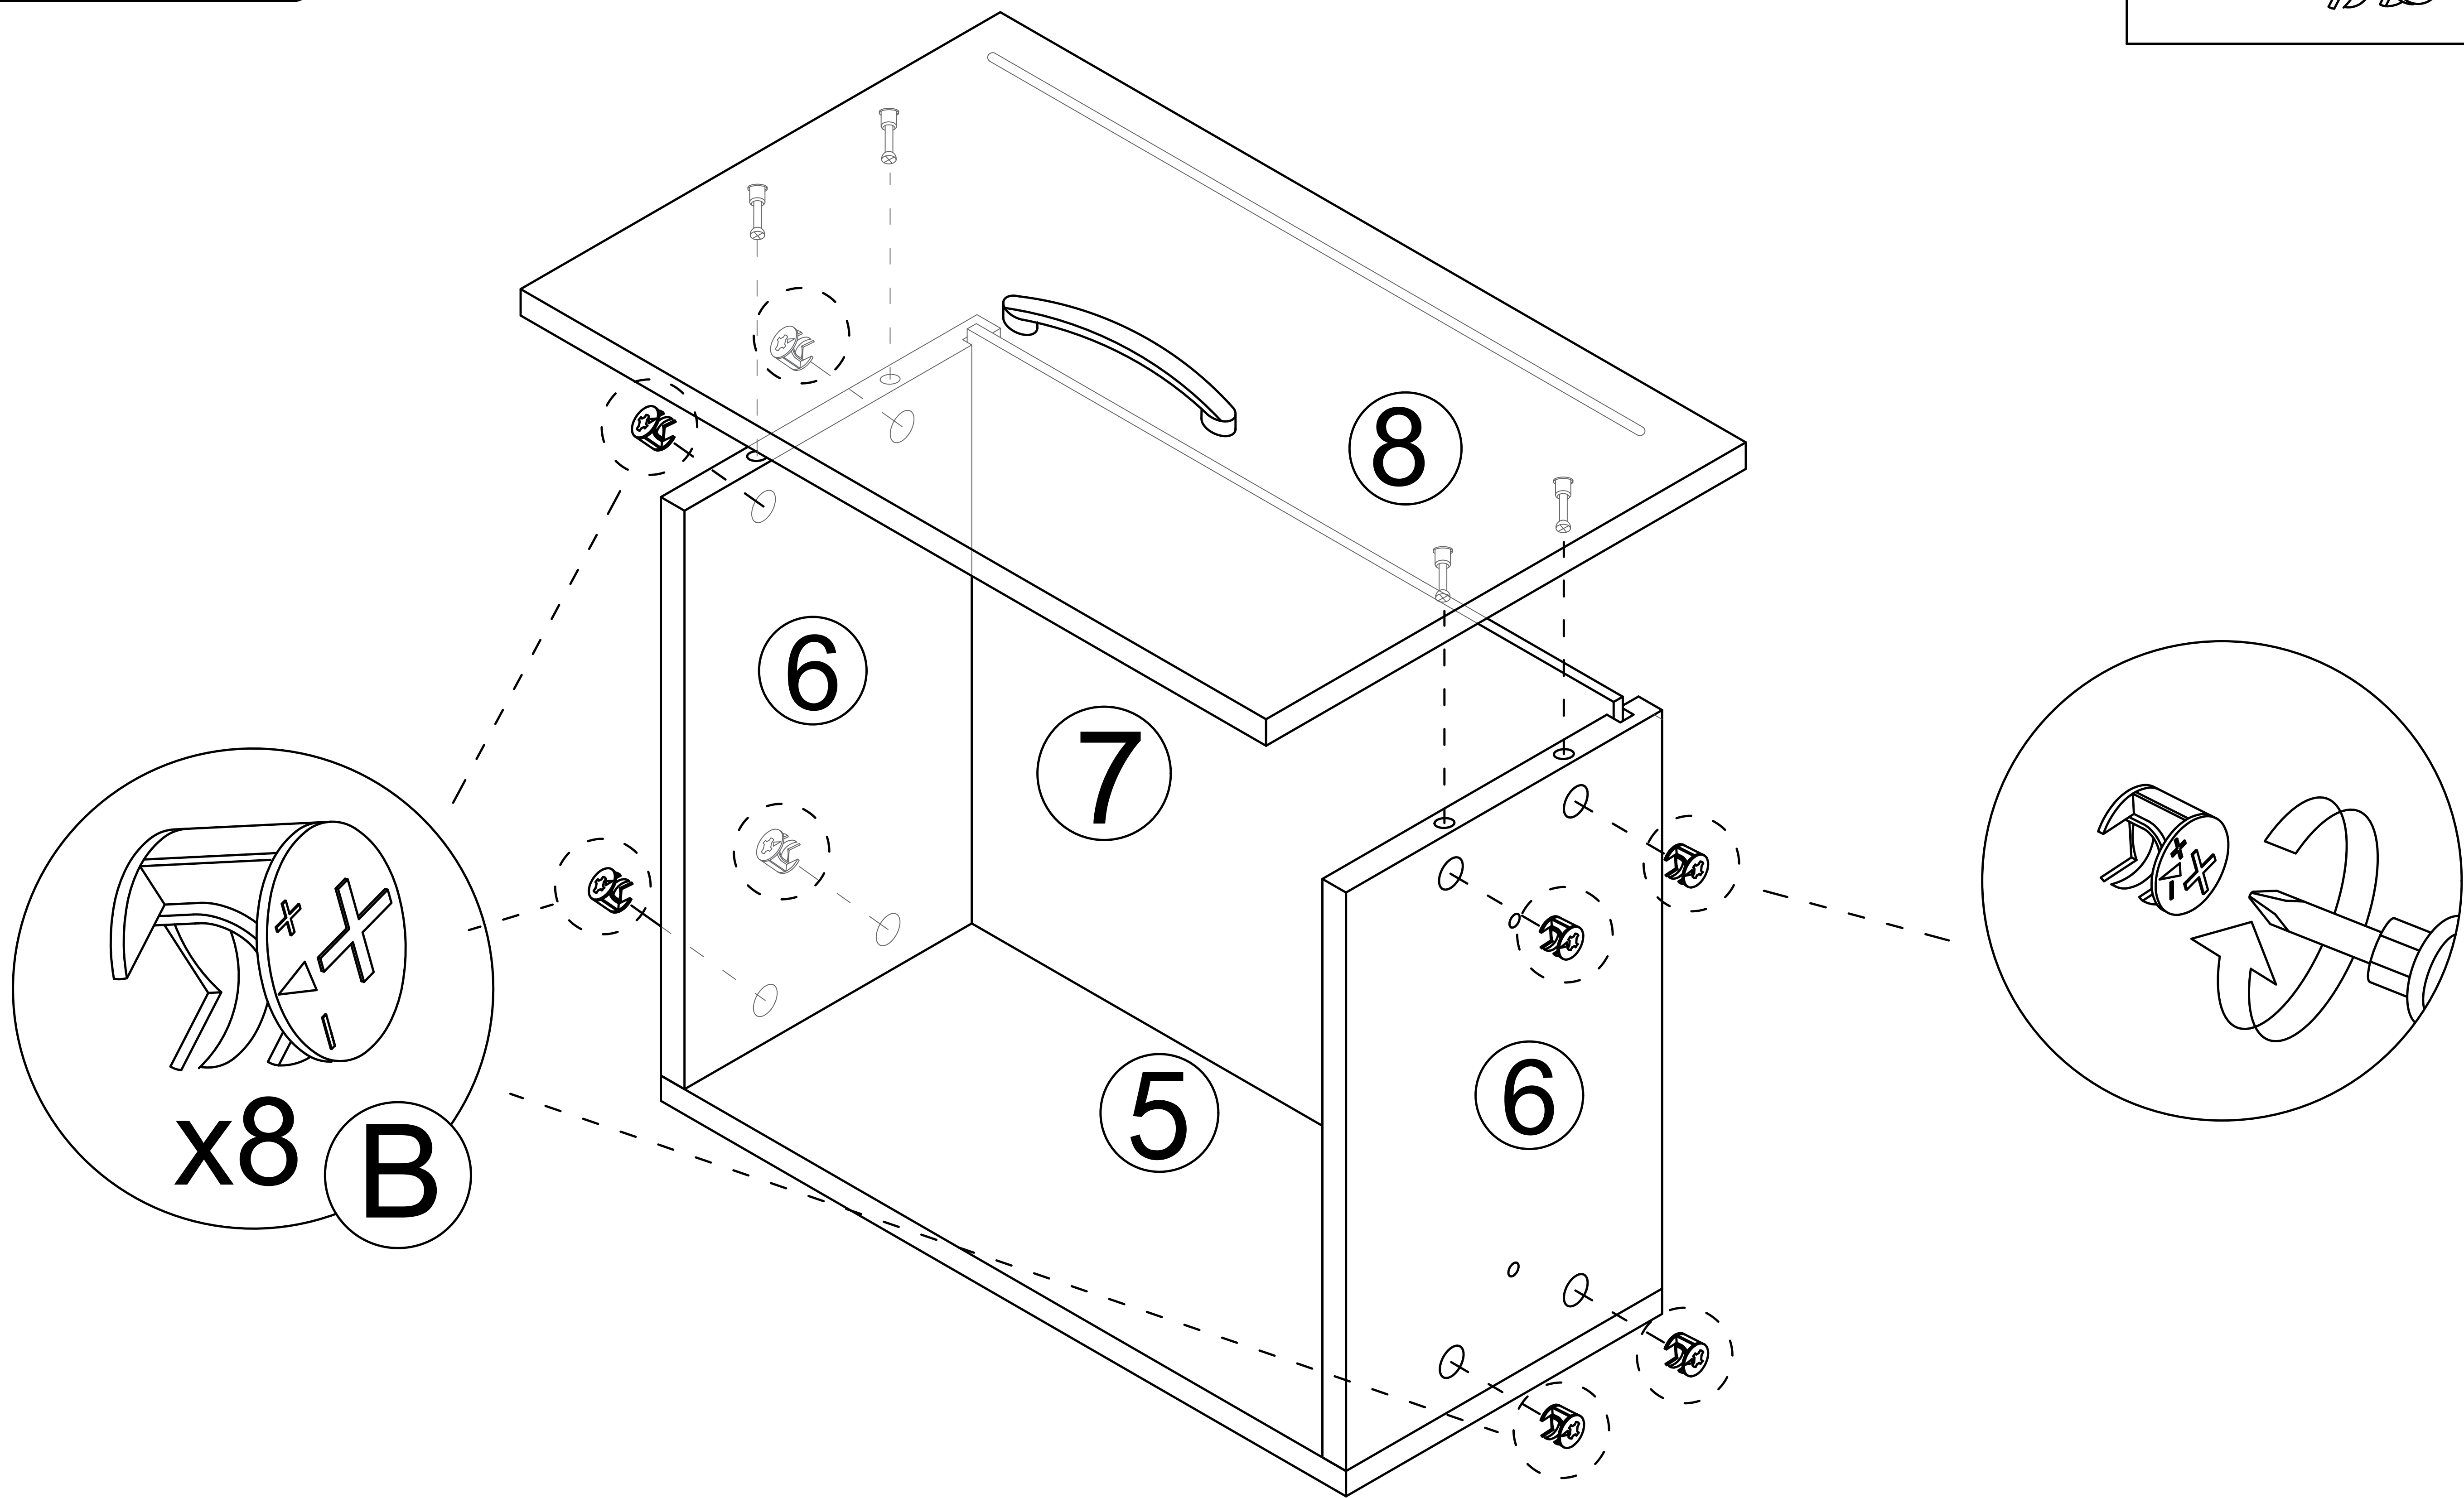


Step 13

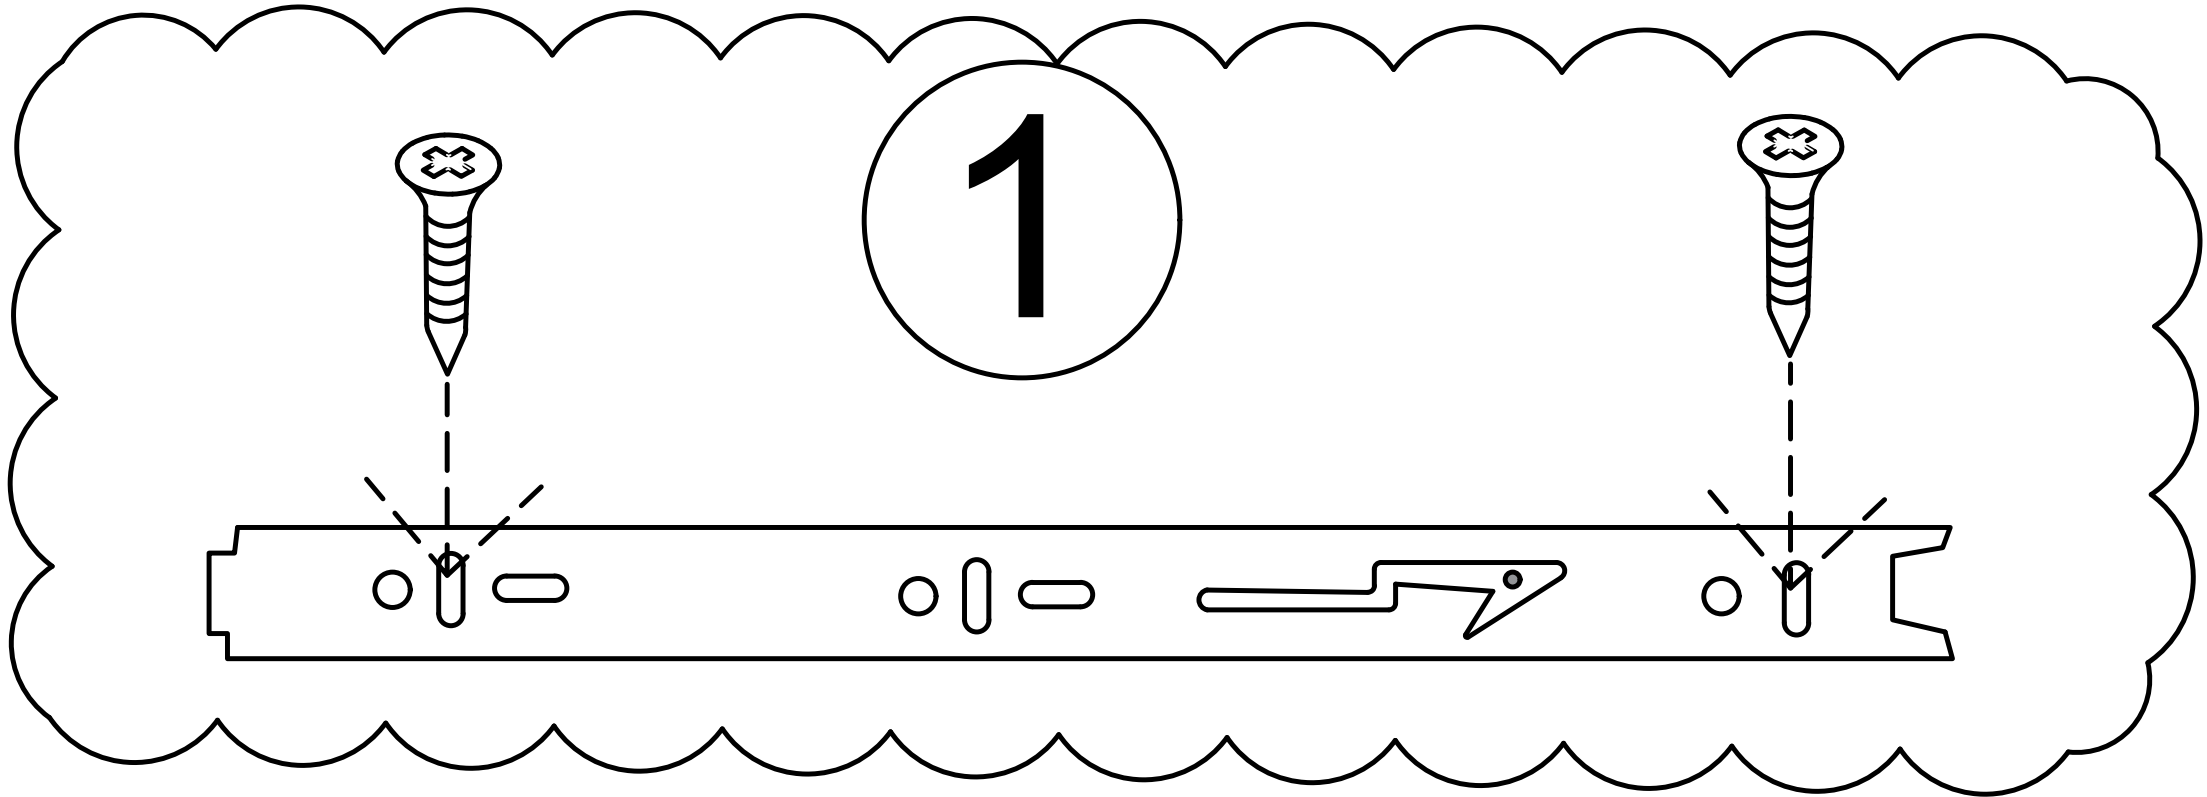


E

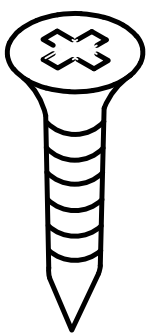

x4

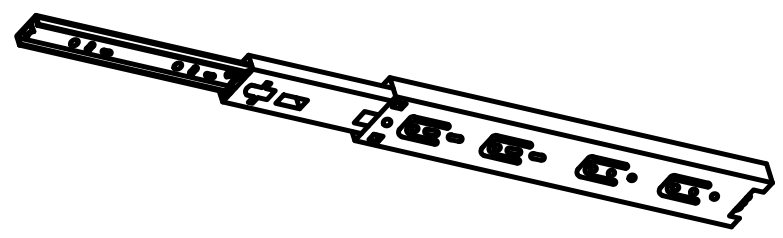


x2



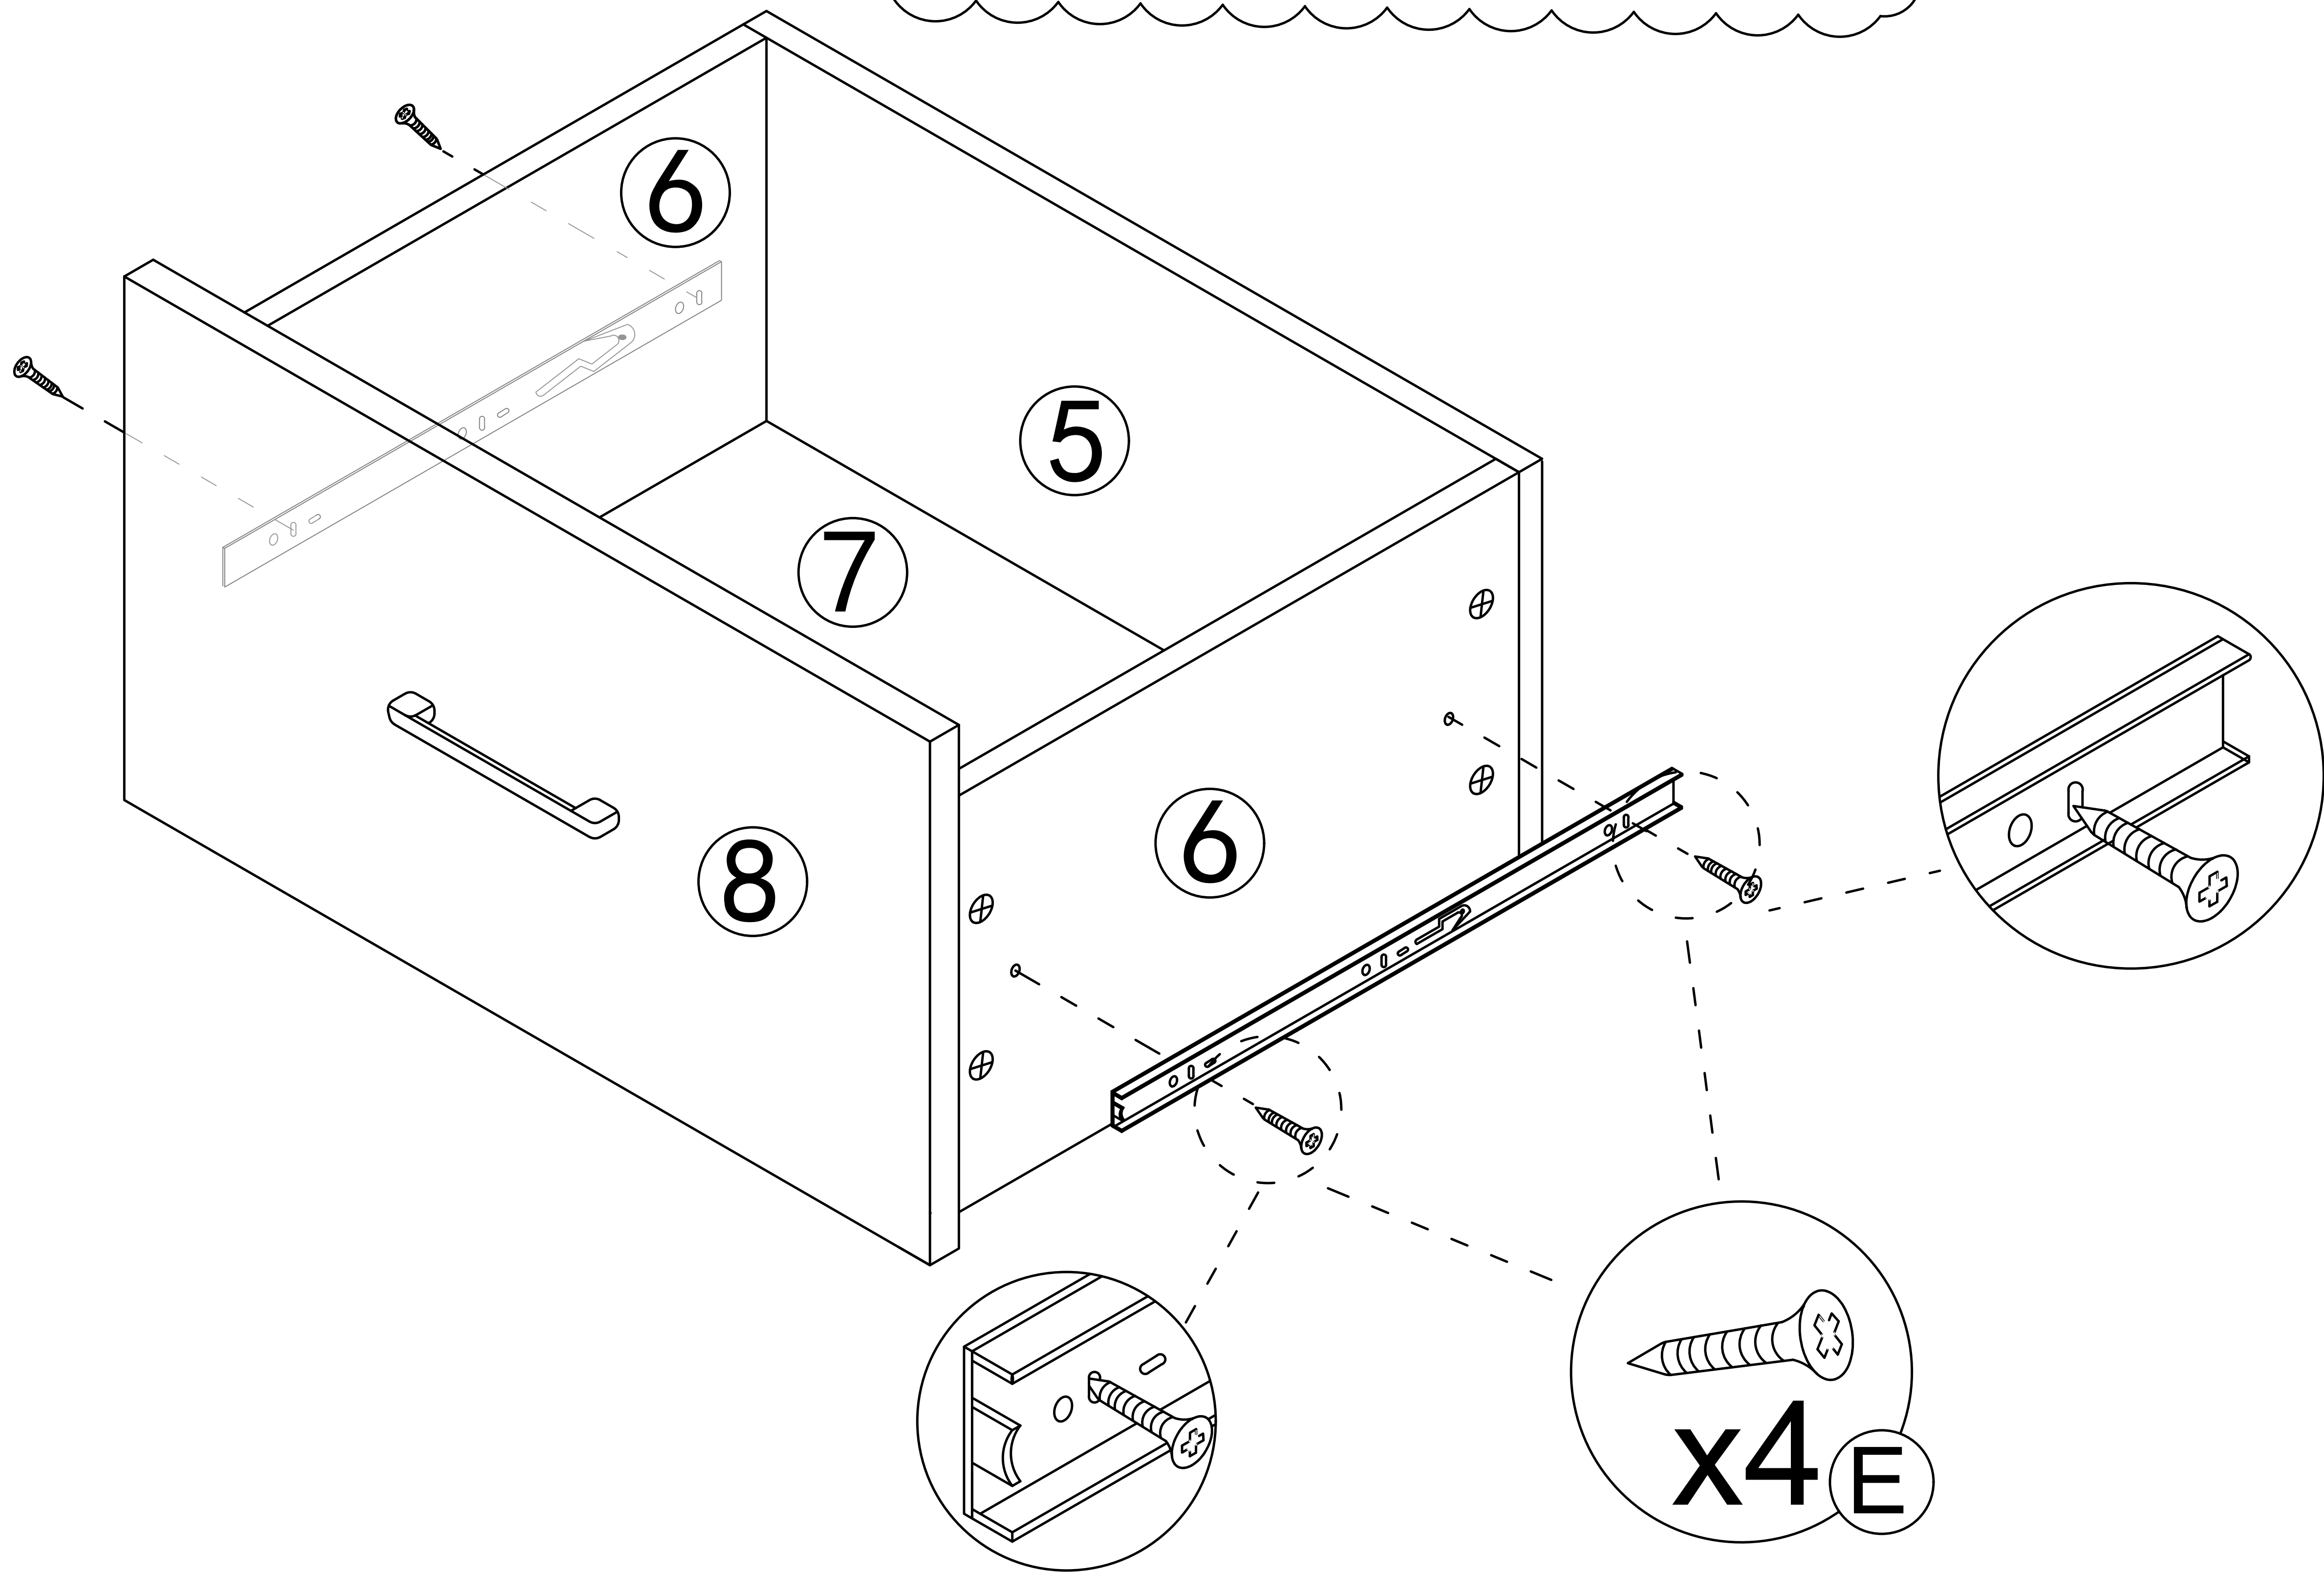


Step 14




A

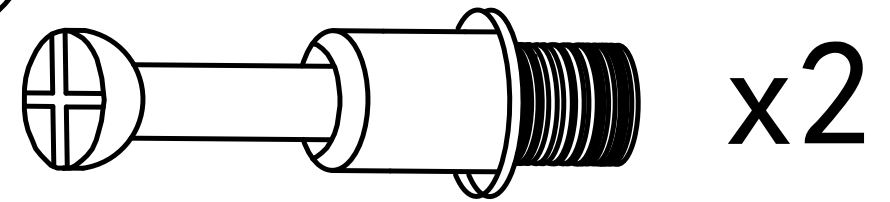

C

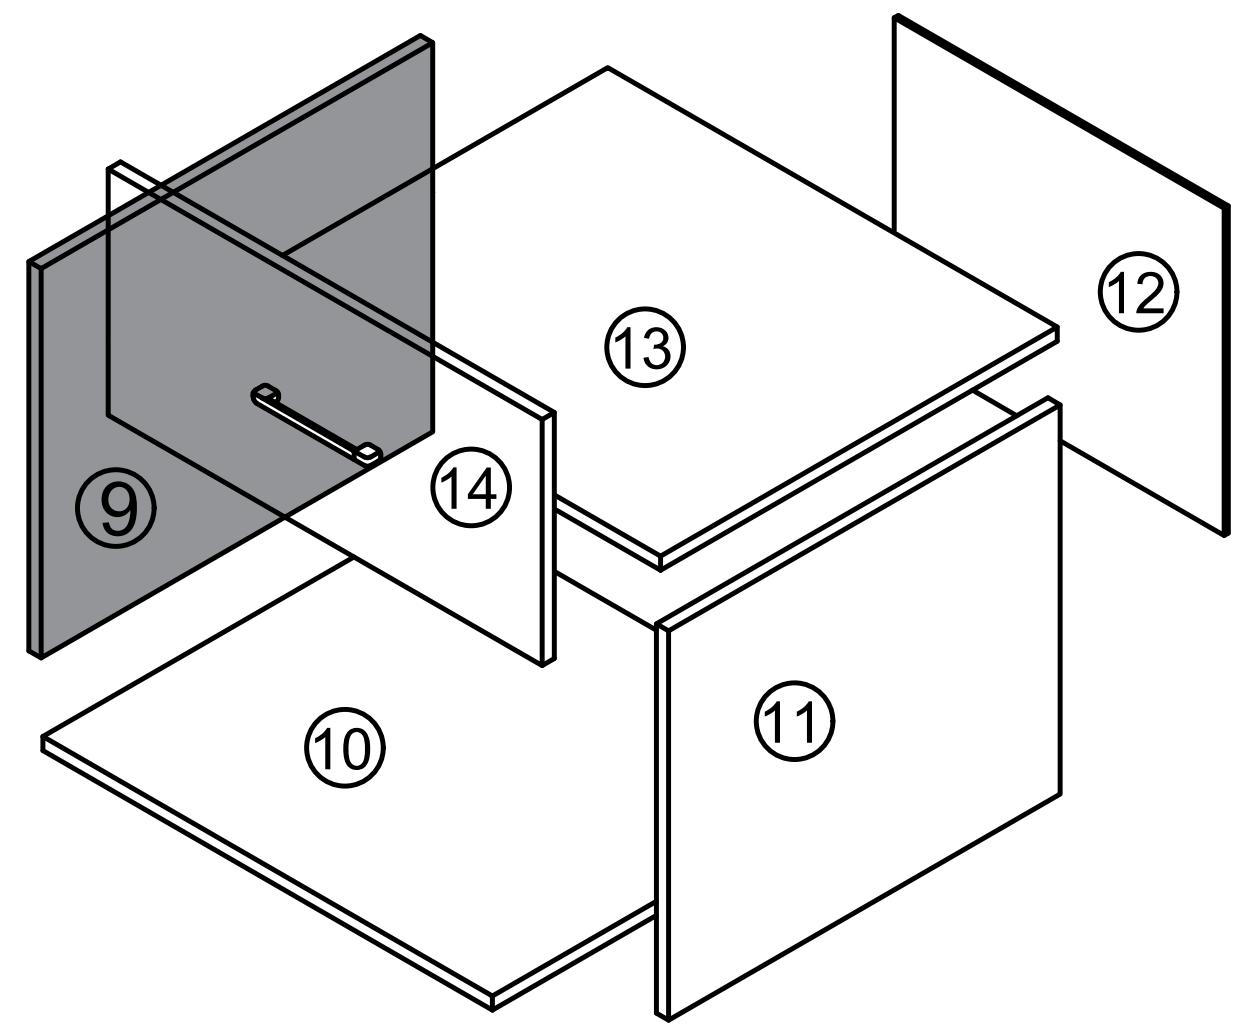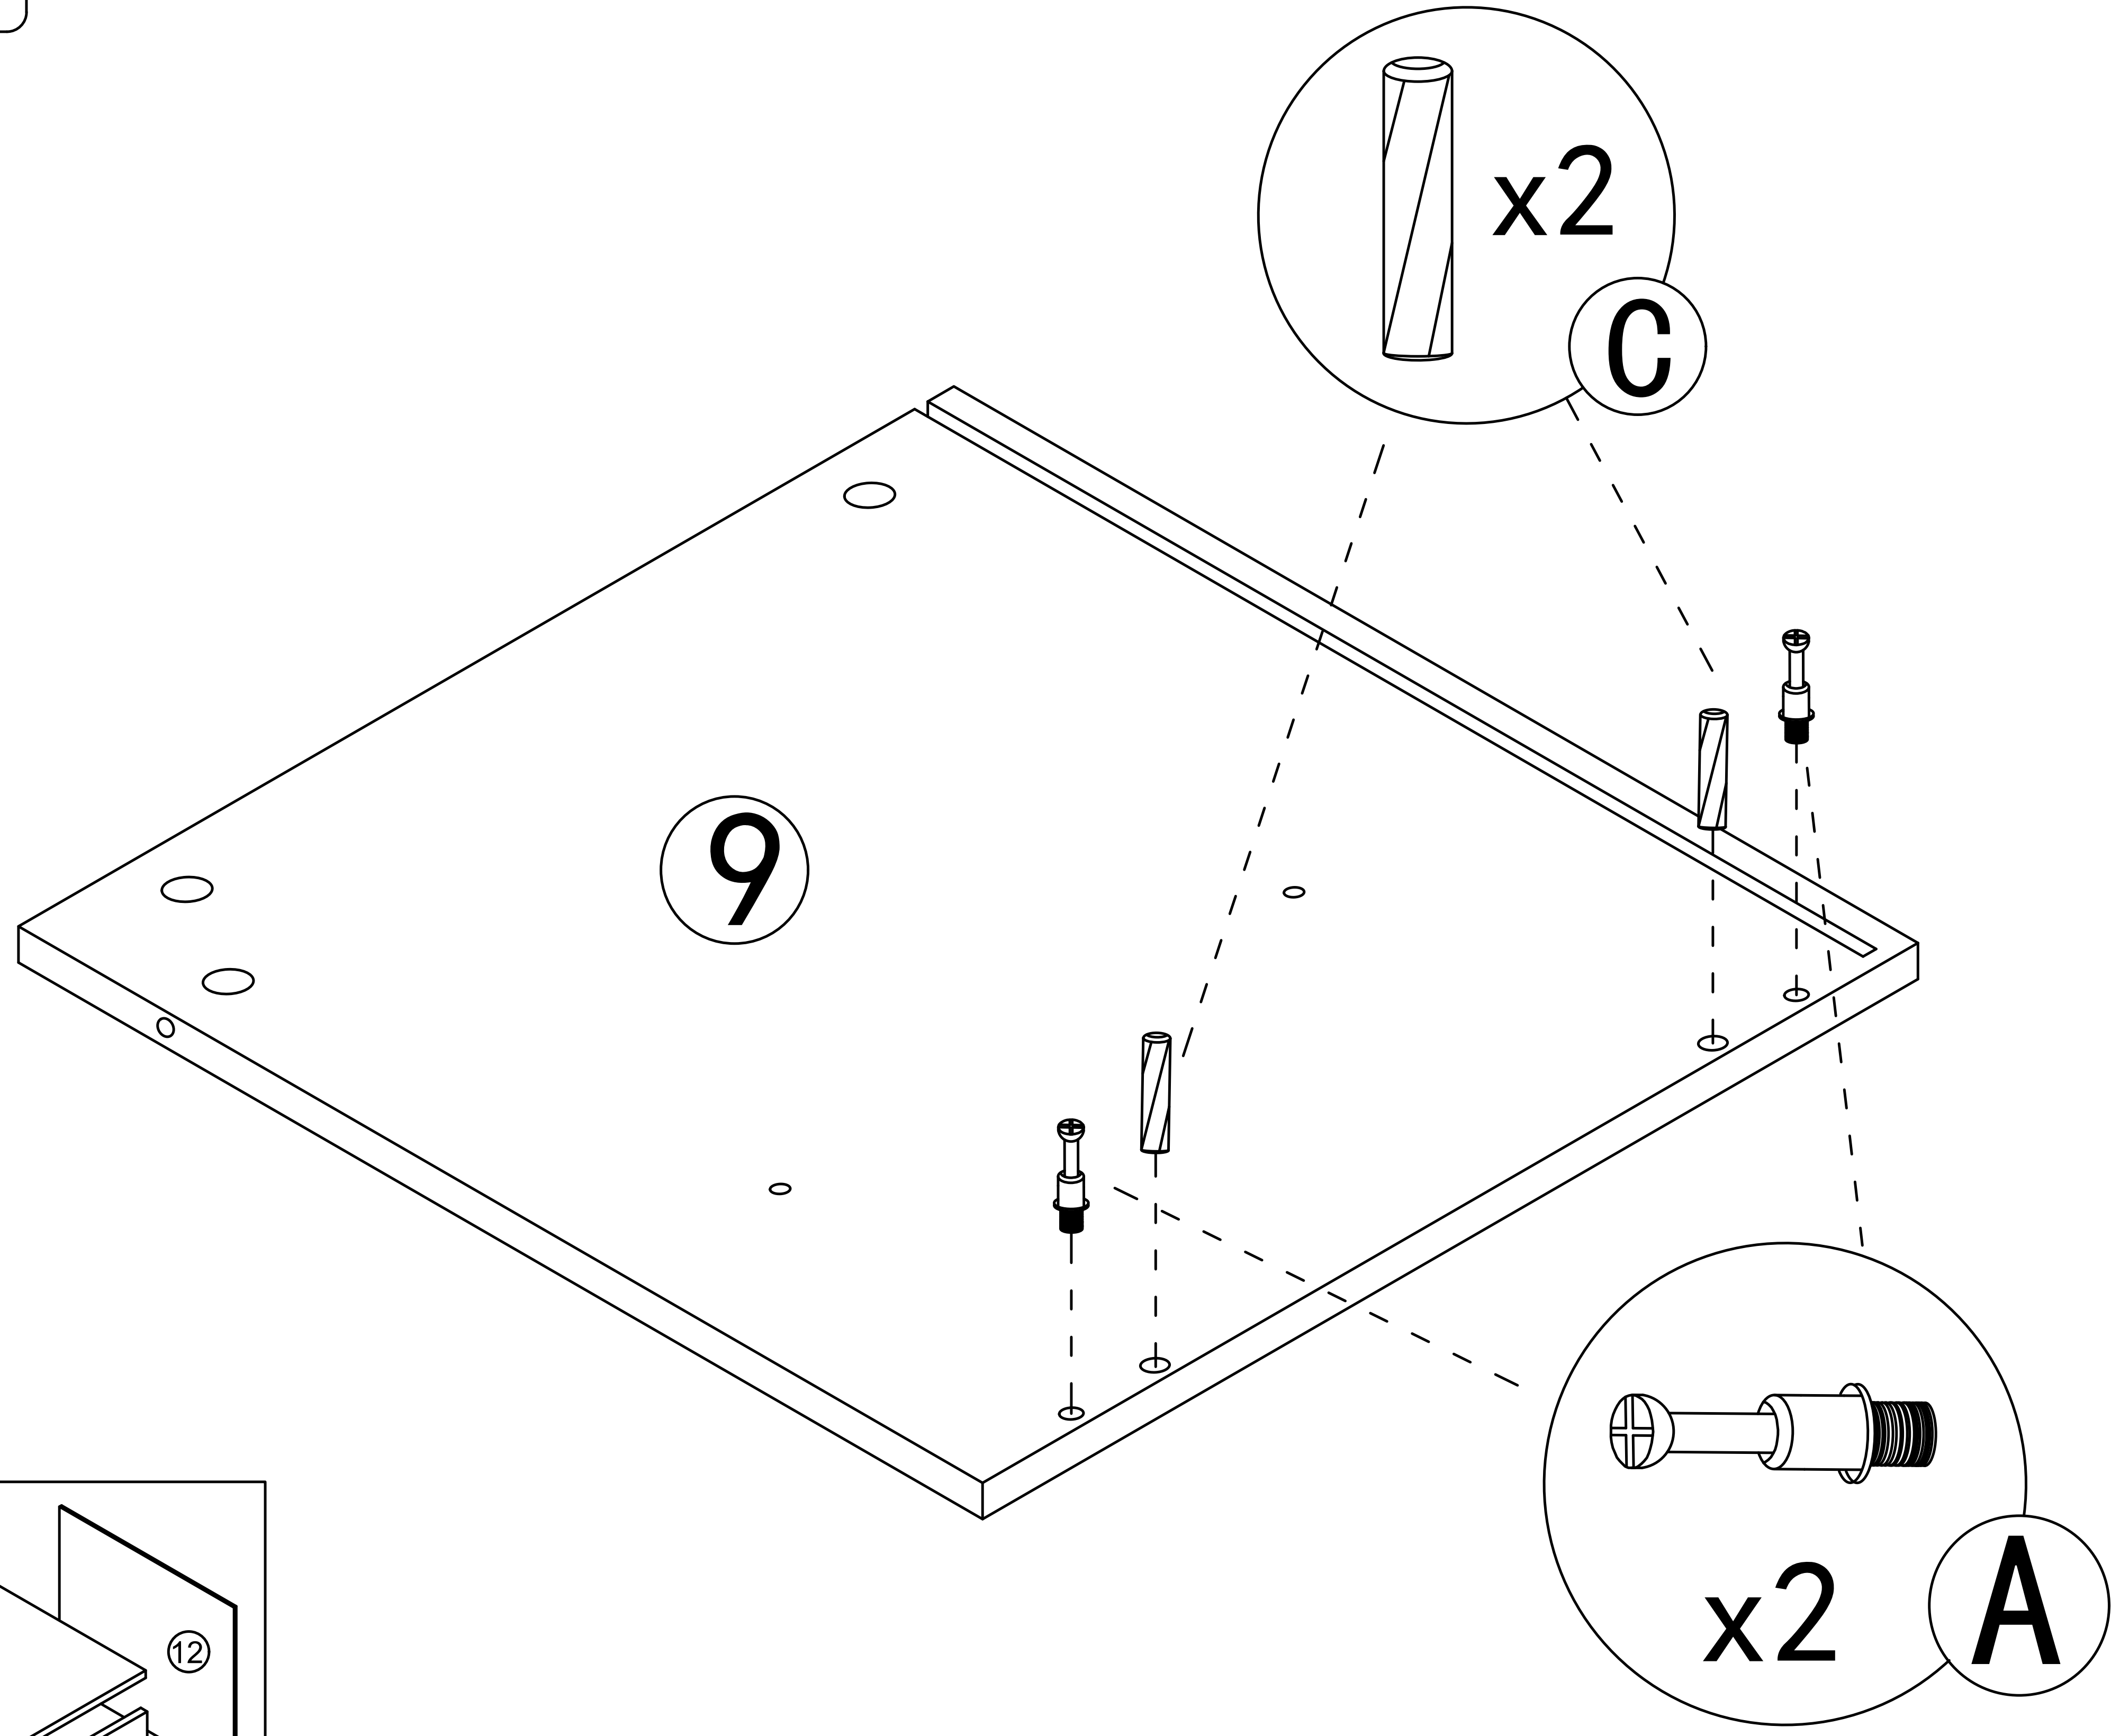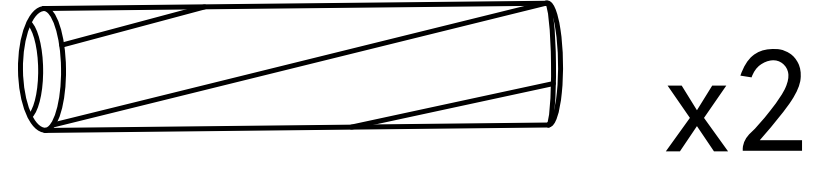


Step 15

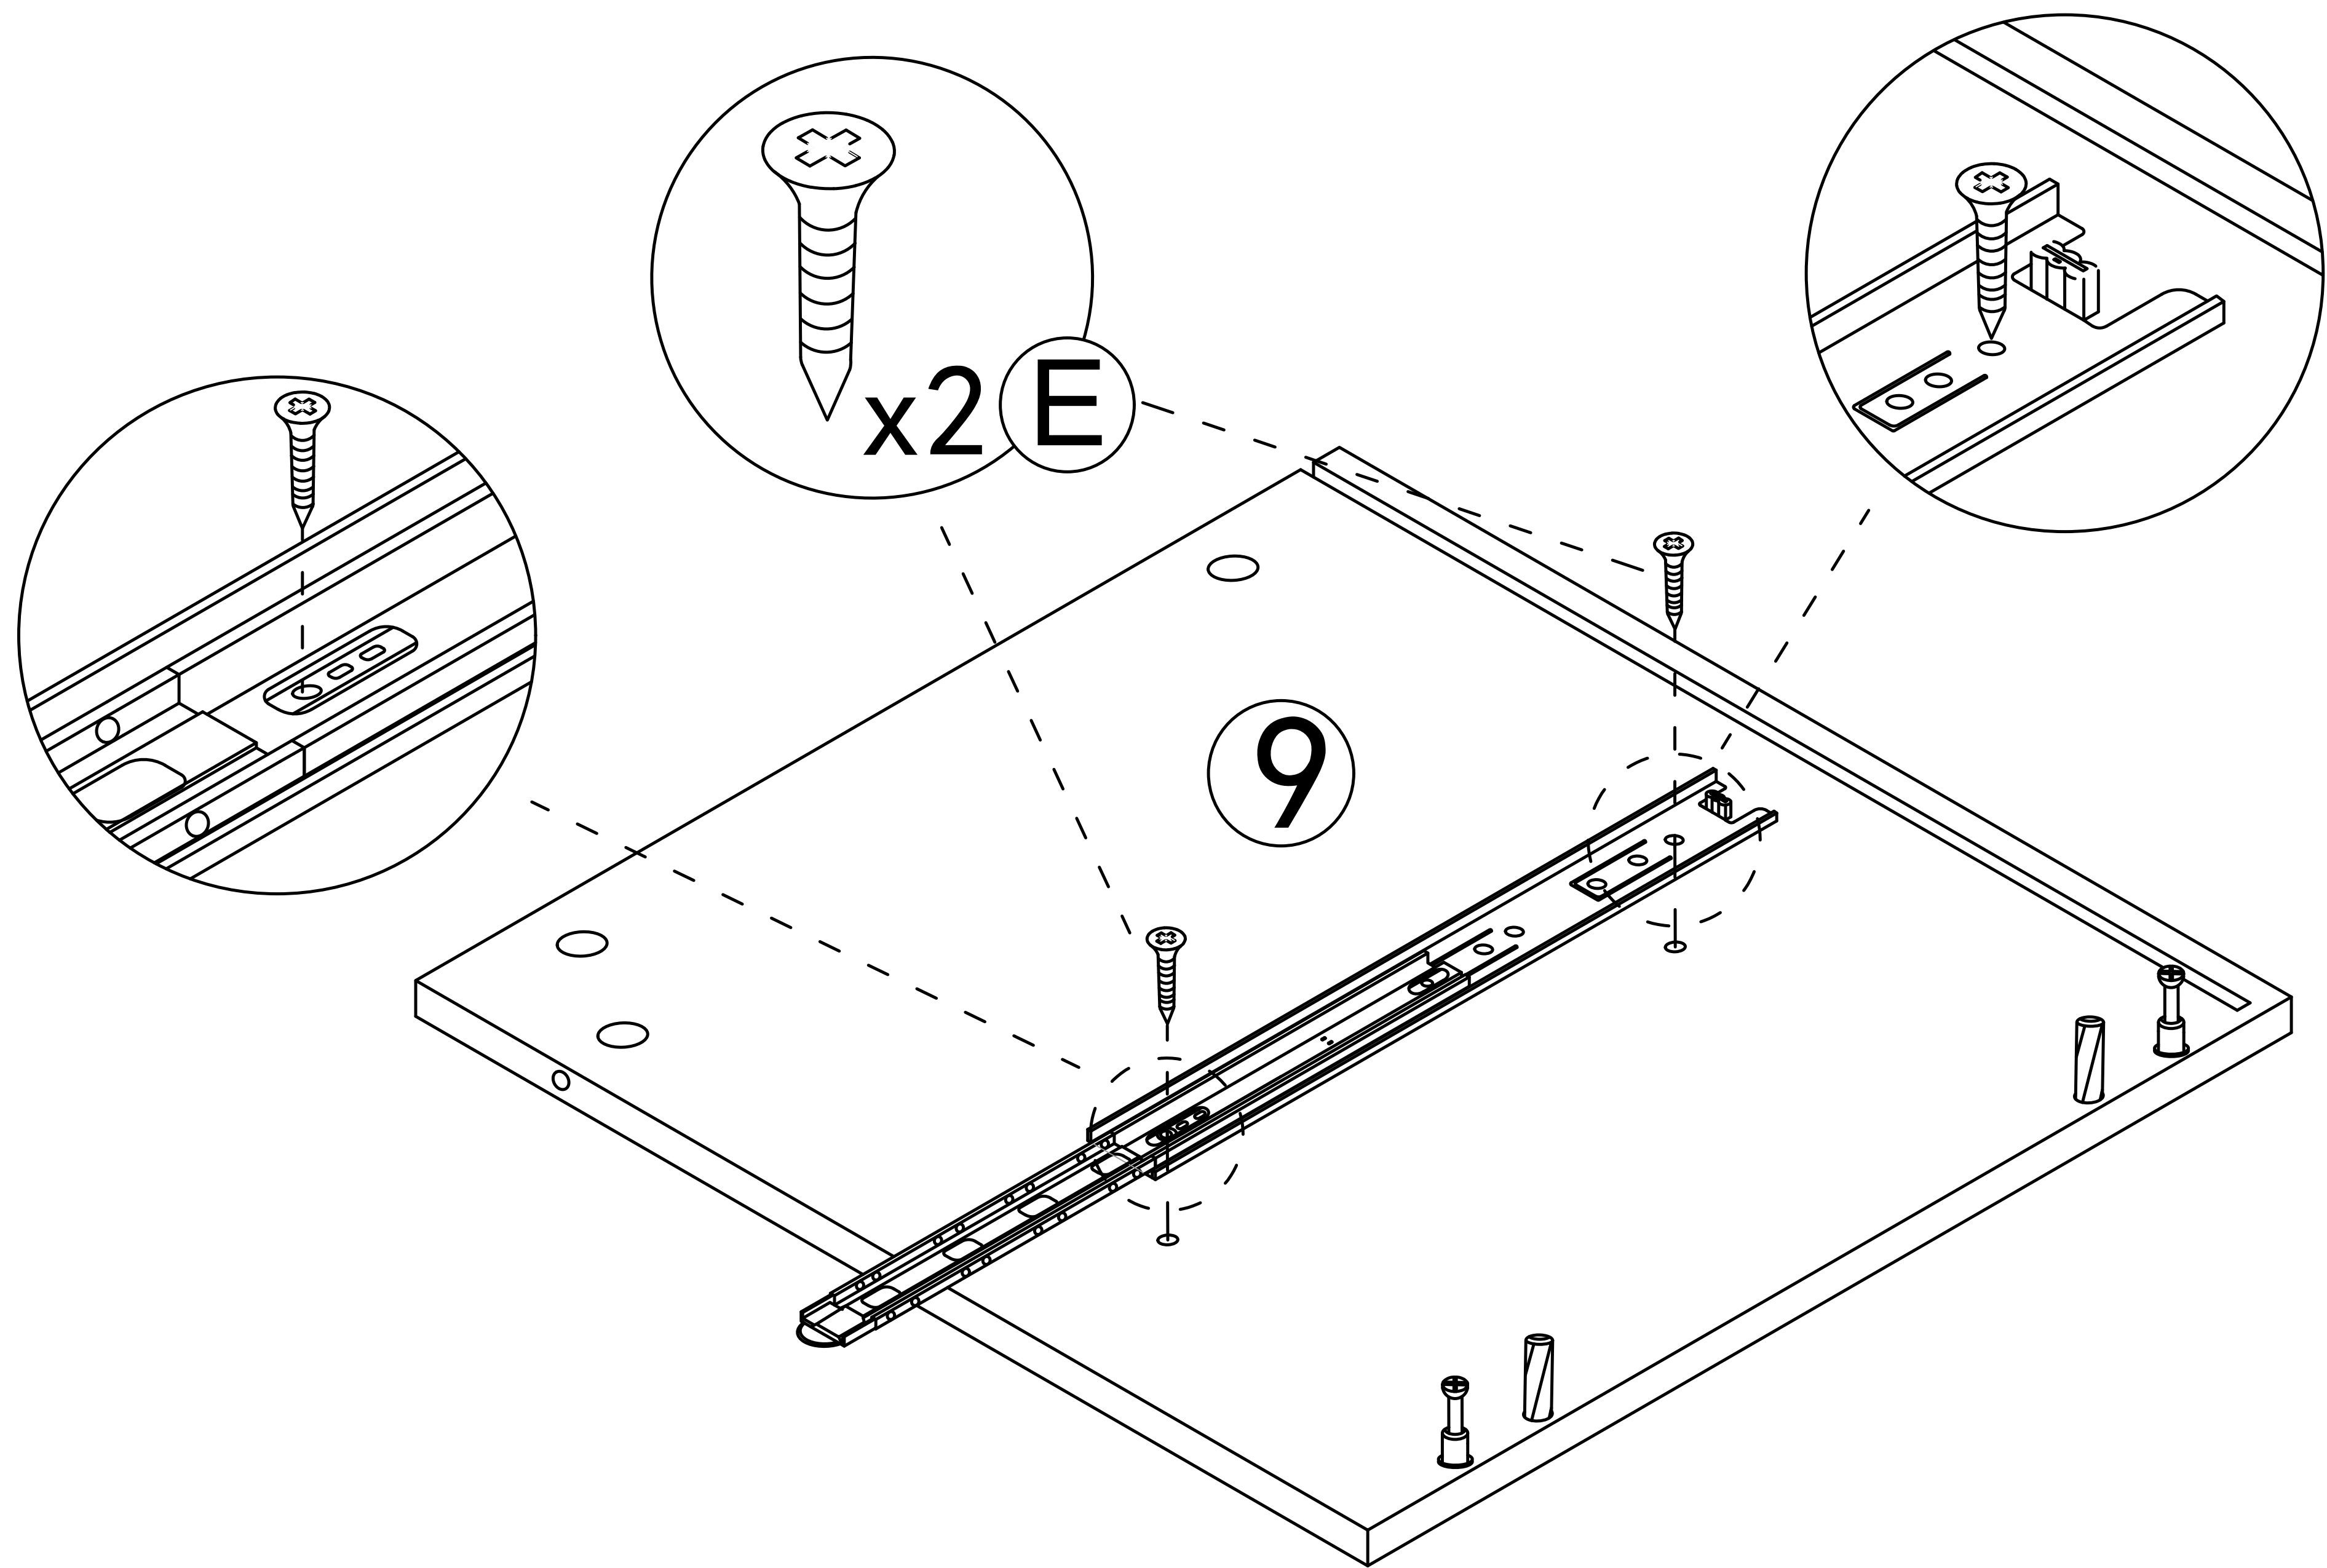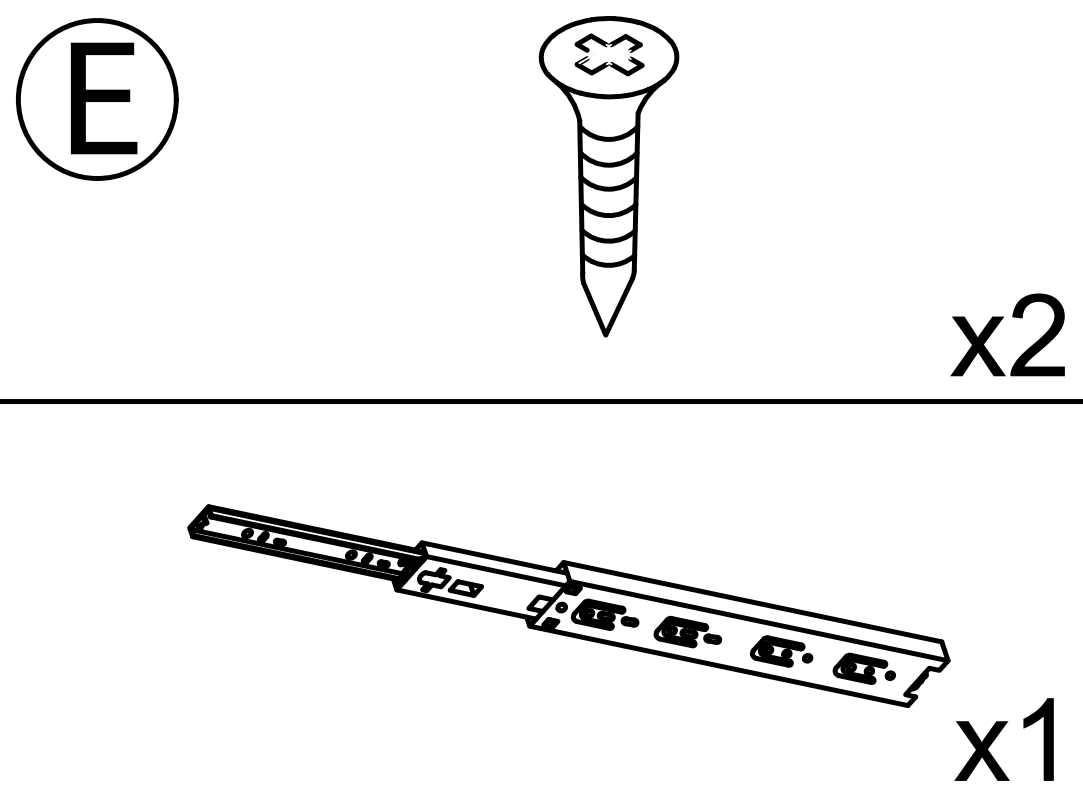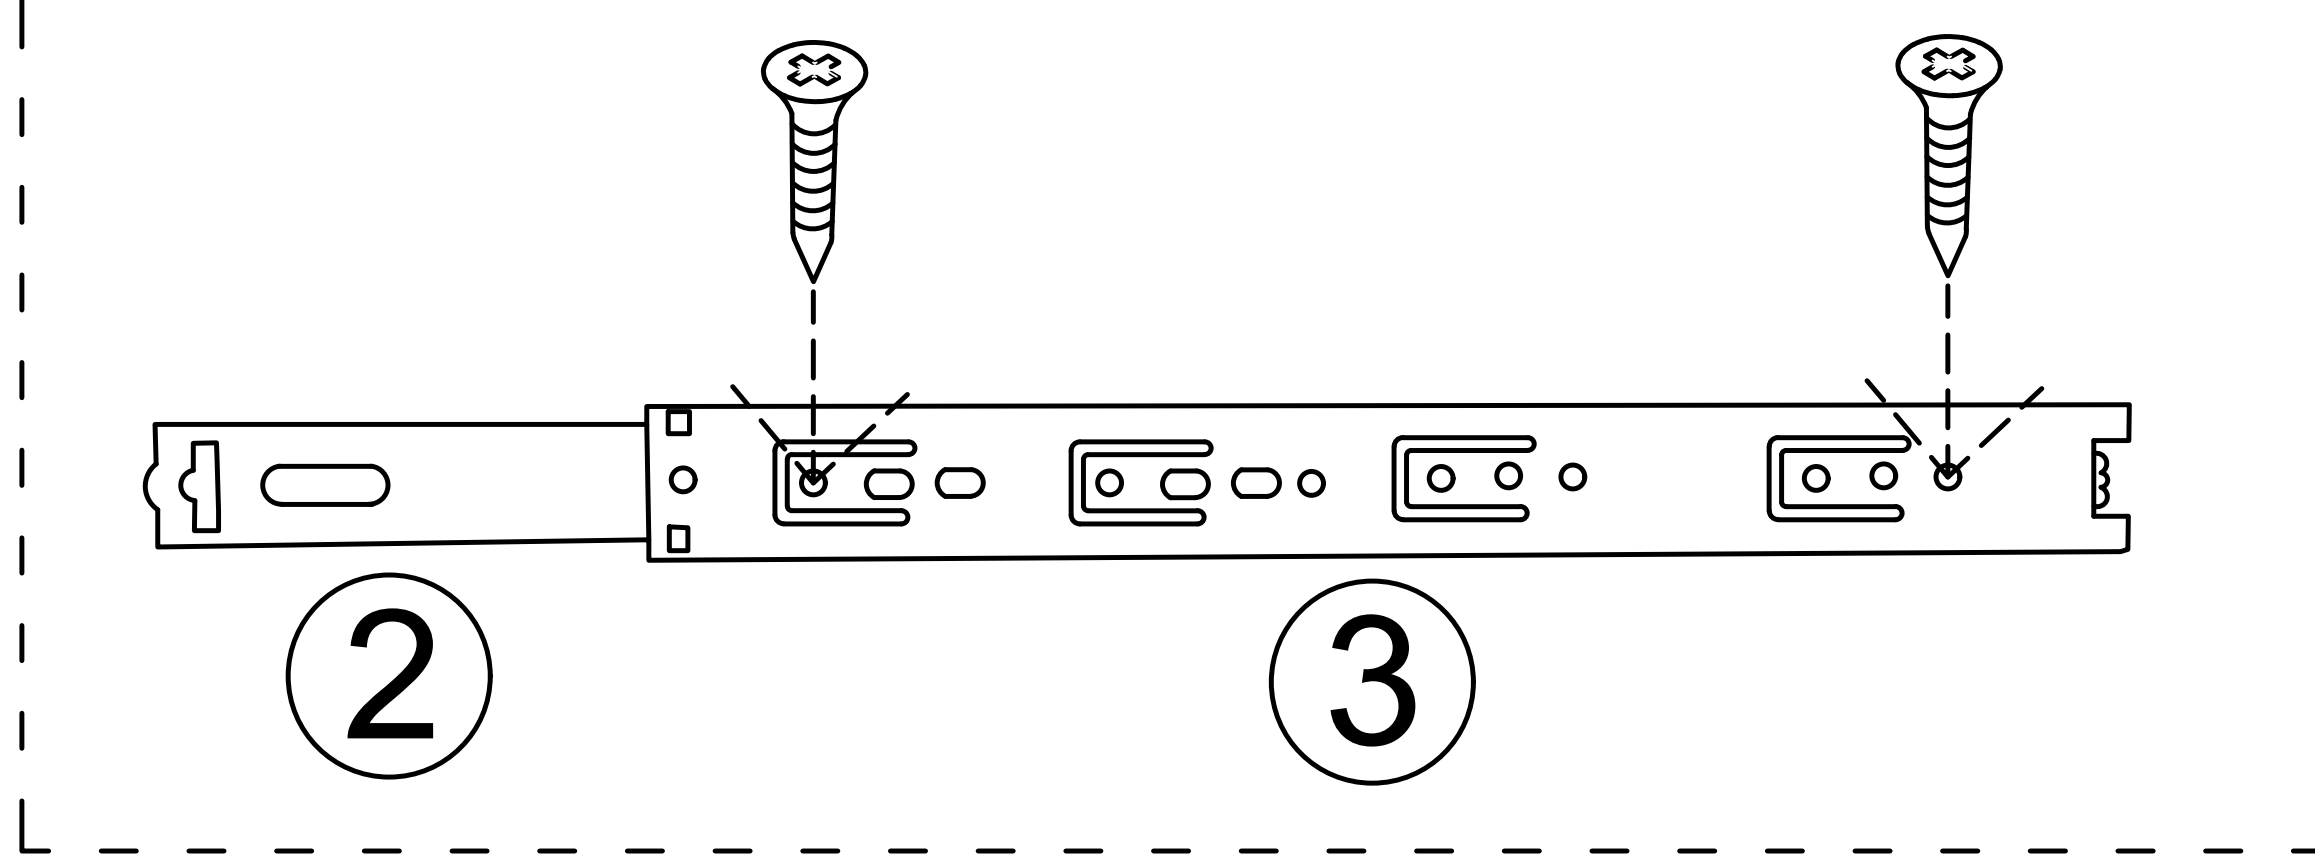


Step 16

E


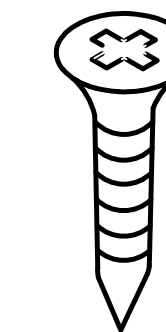




x1

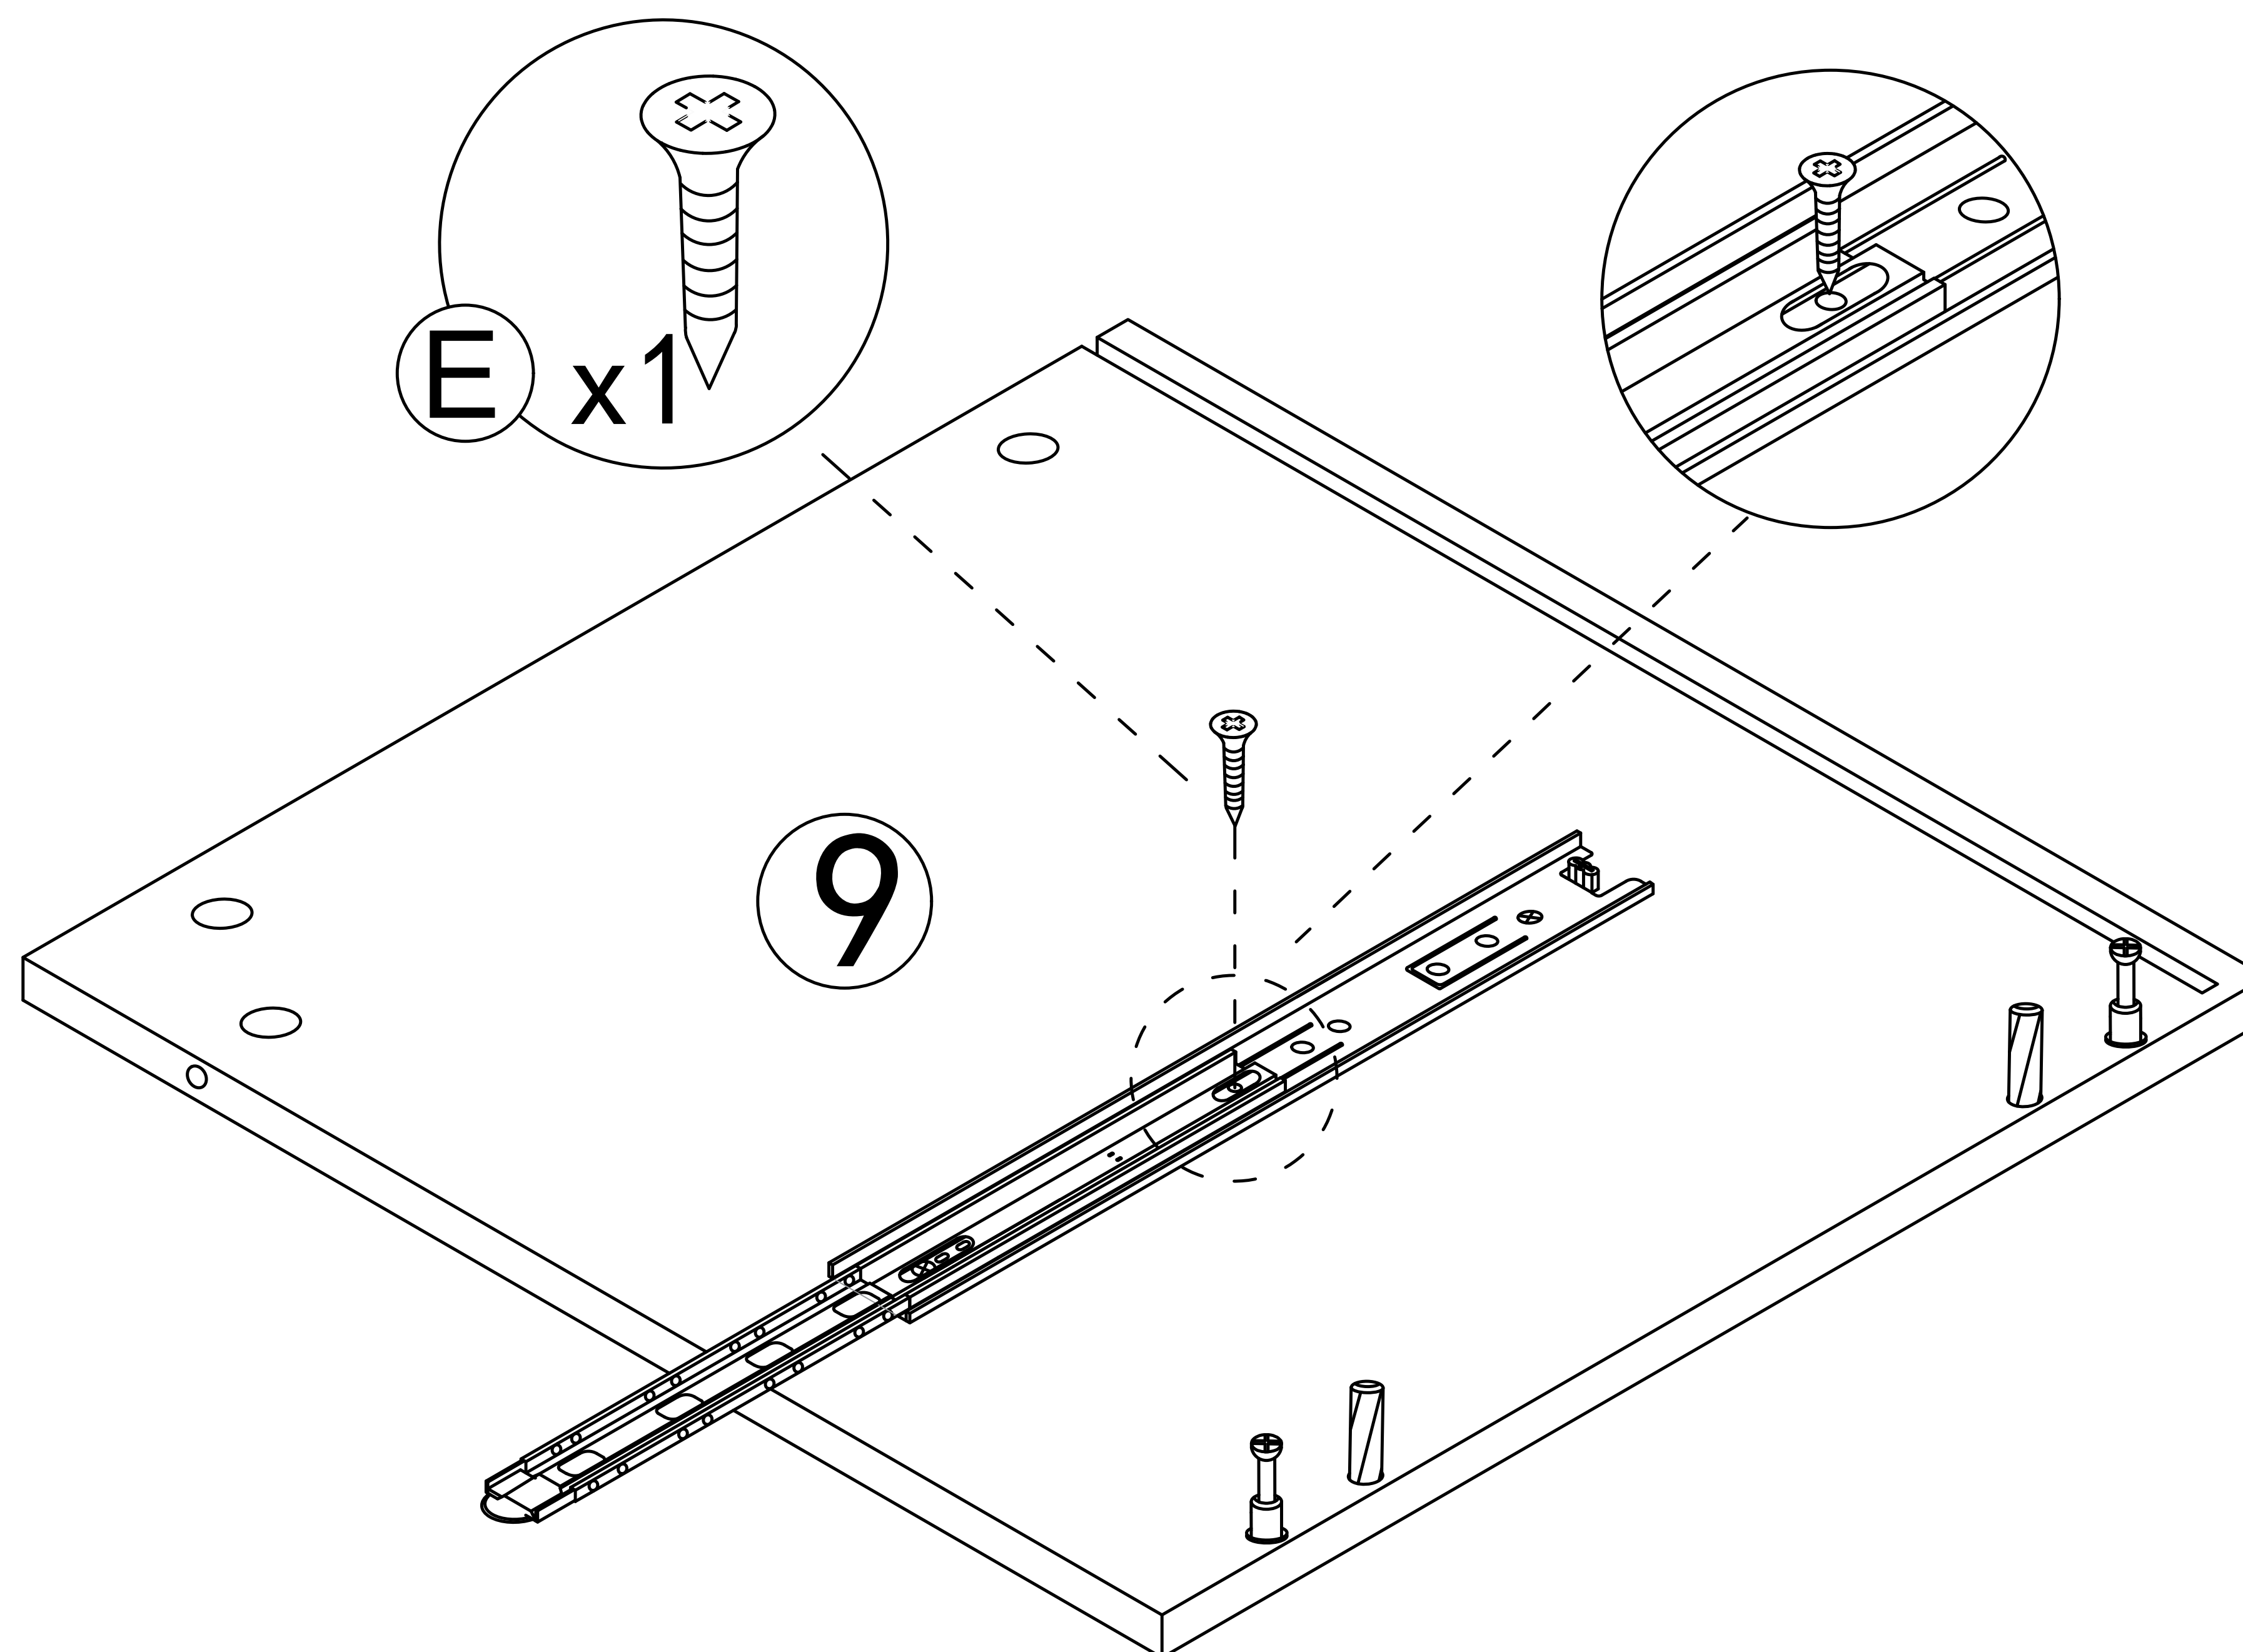






This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 17

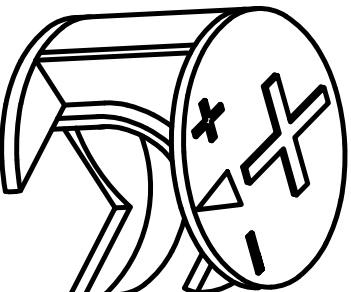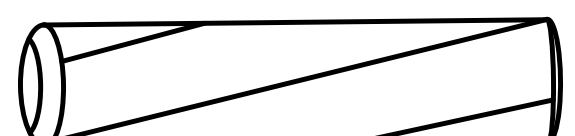- B**  x2
- C**  x2

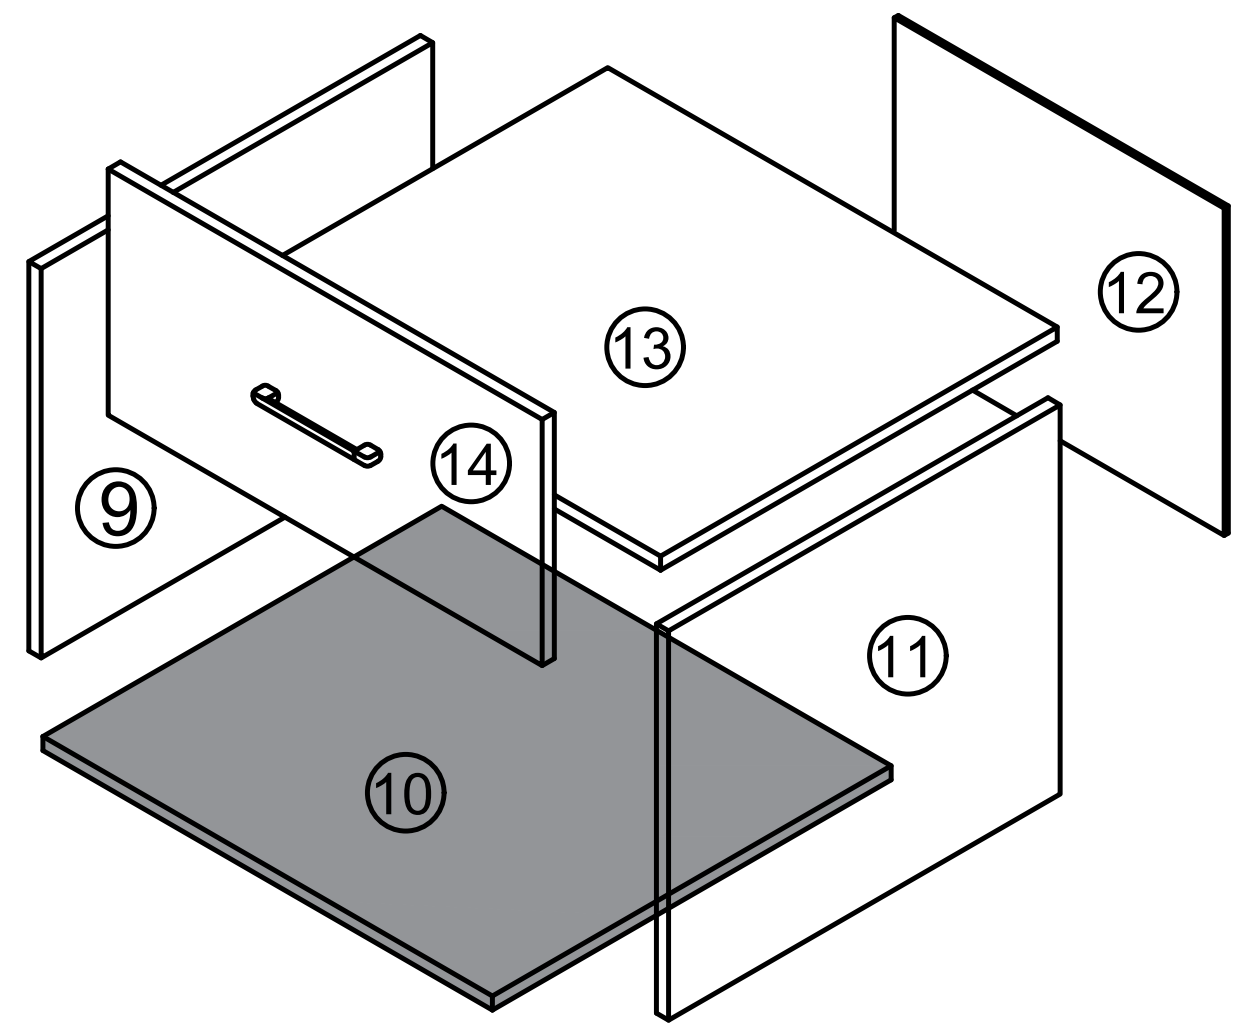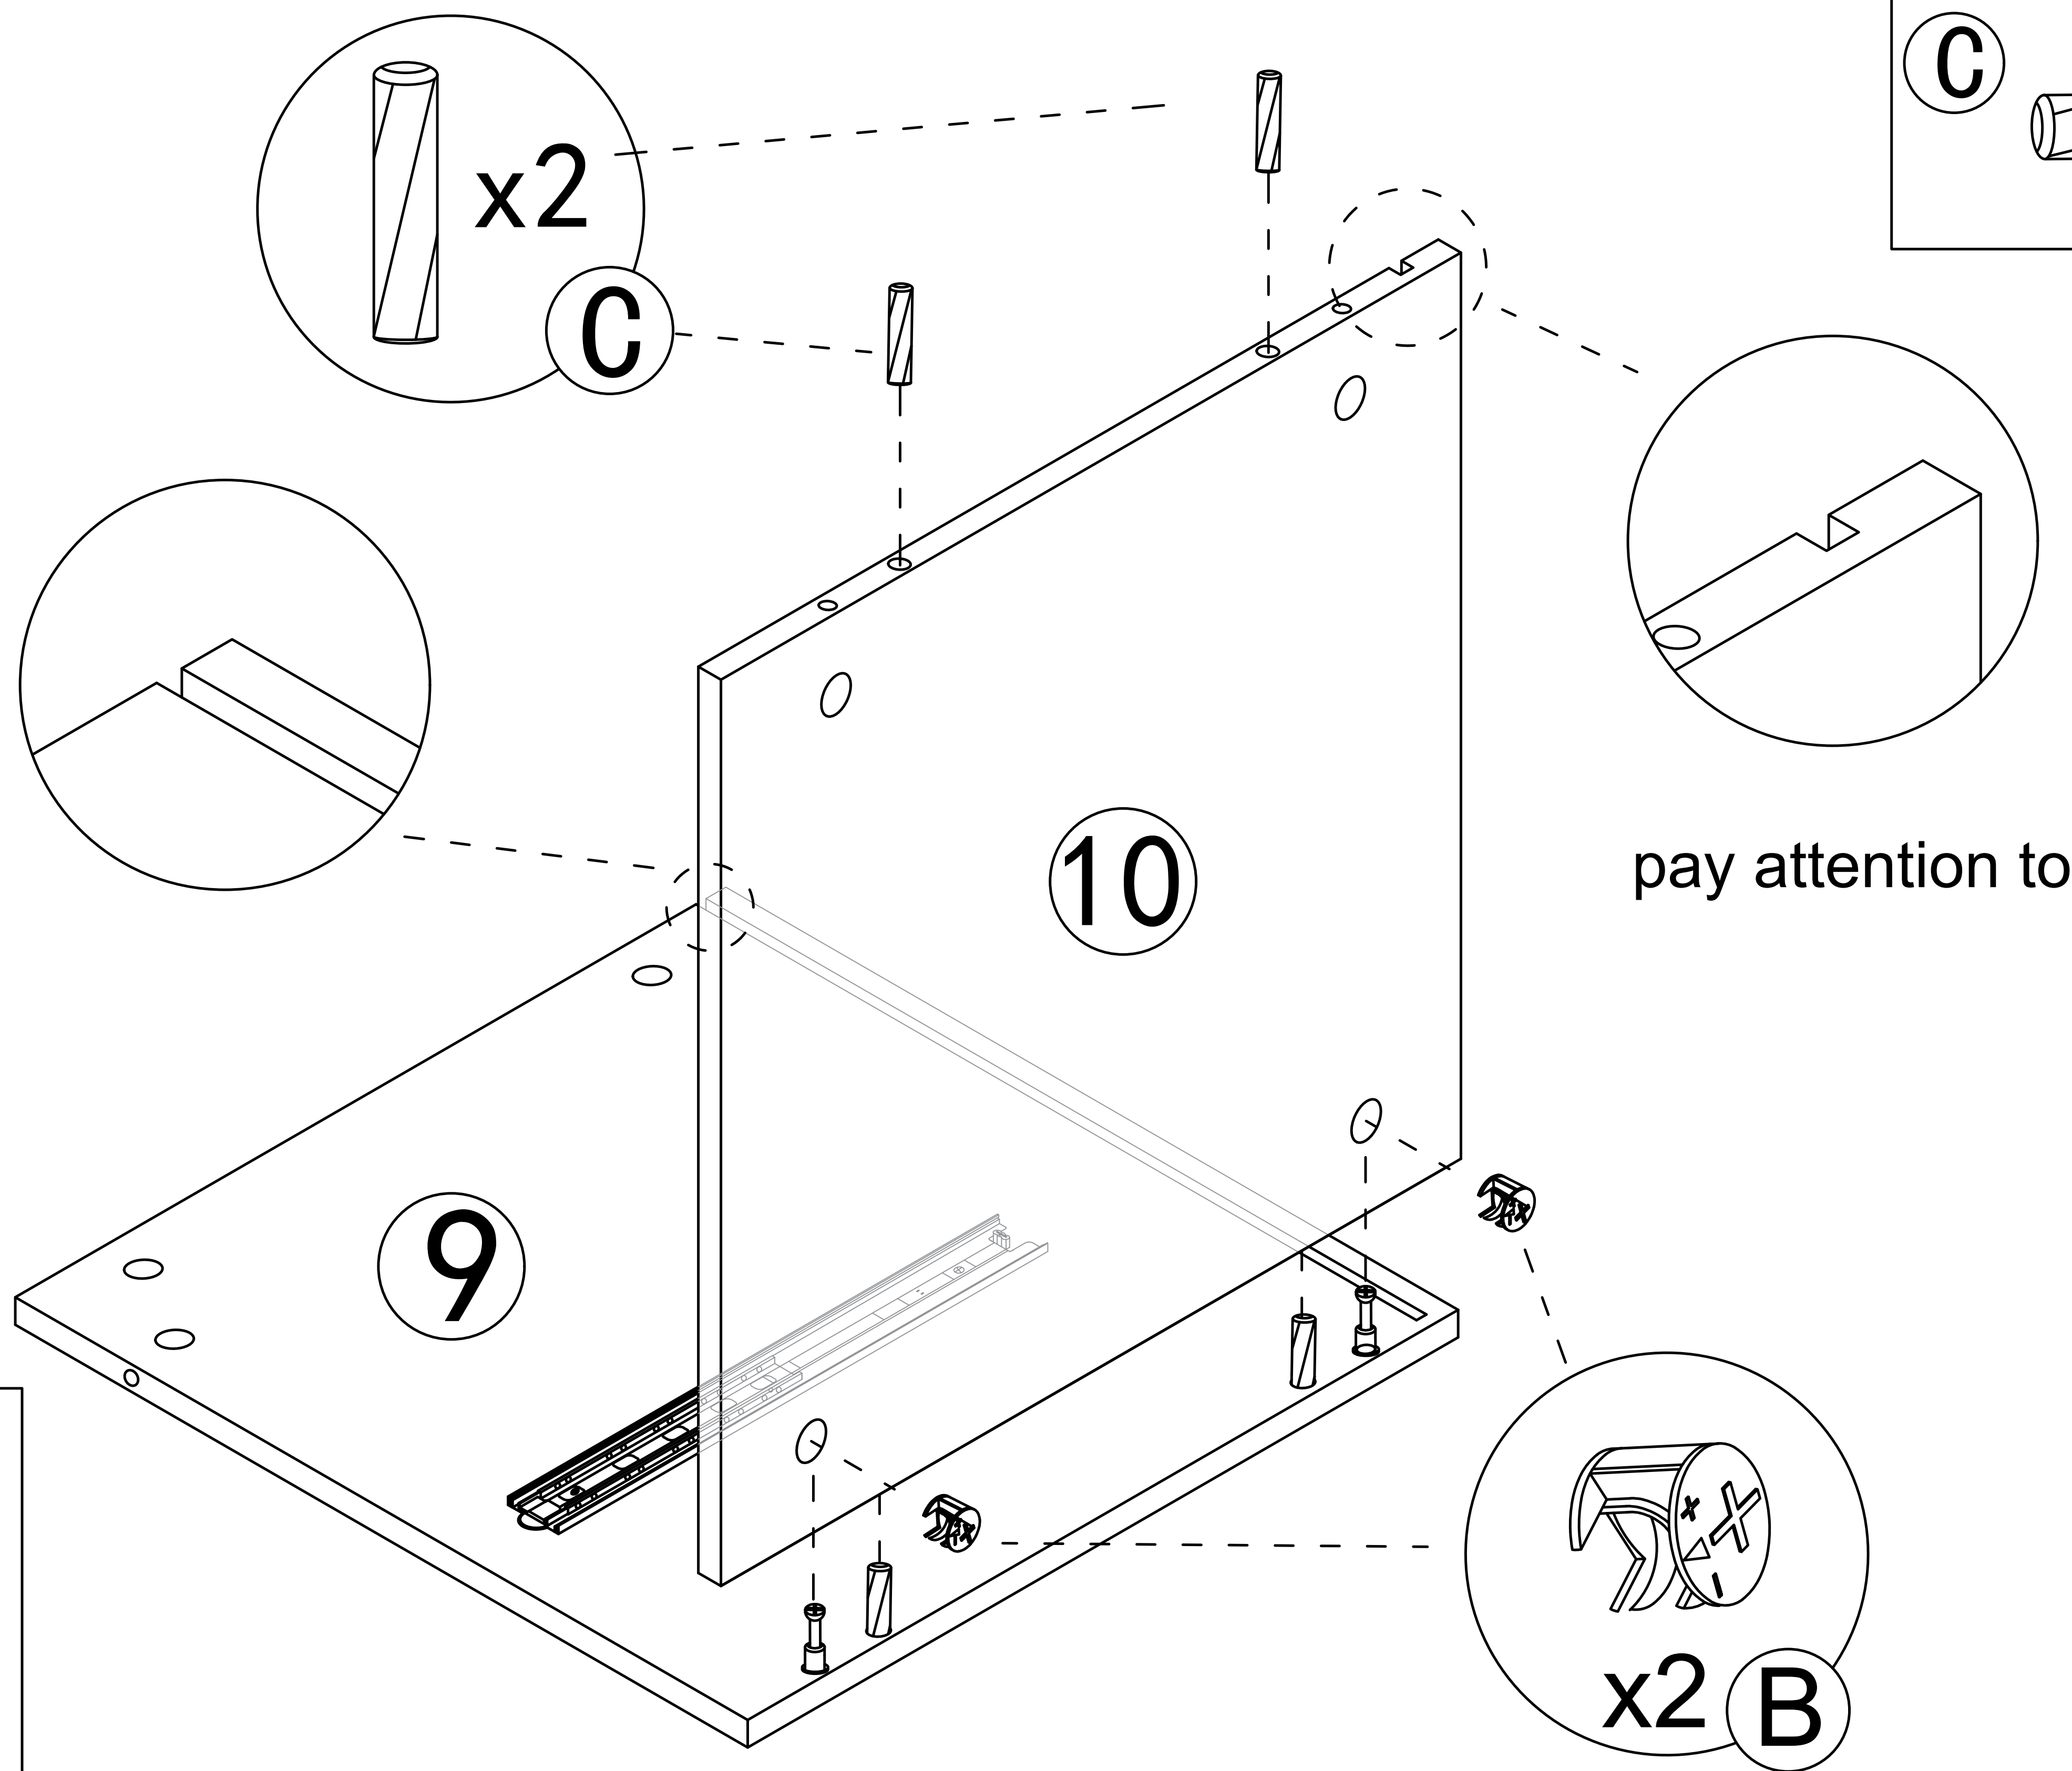


Step 18

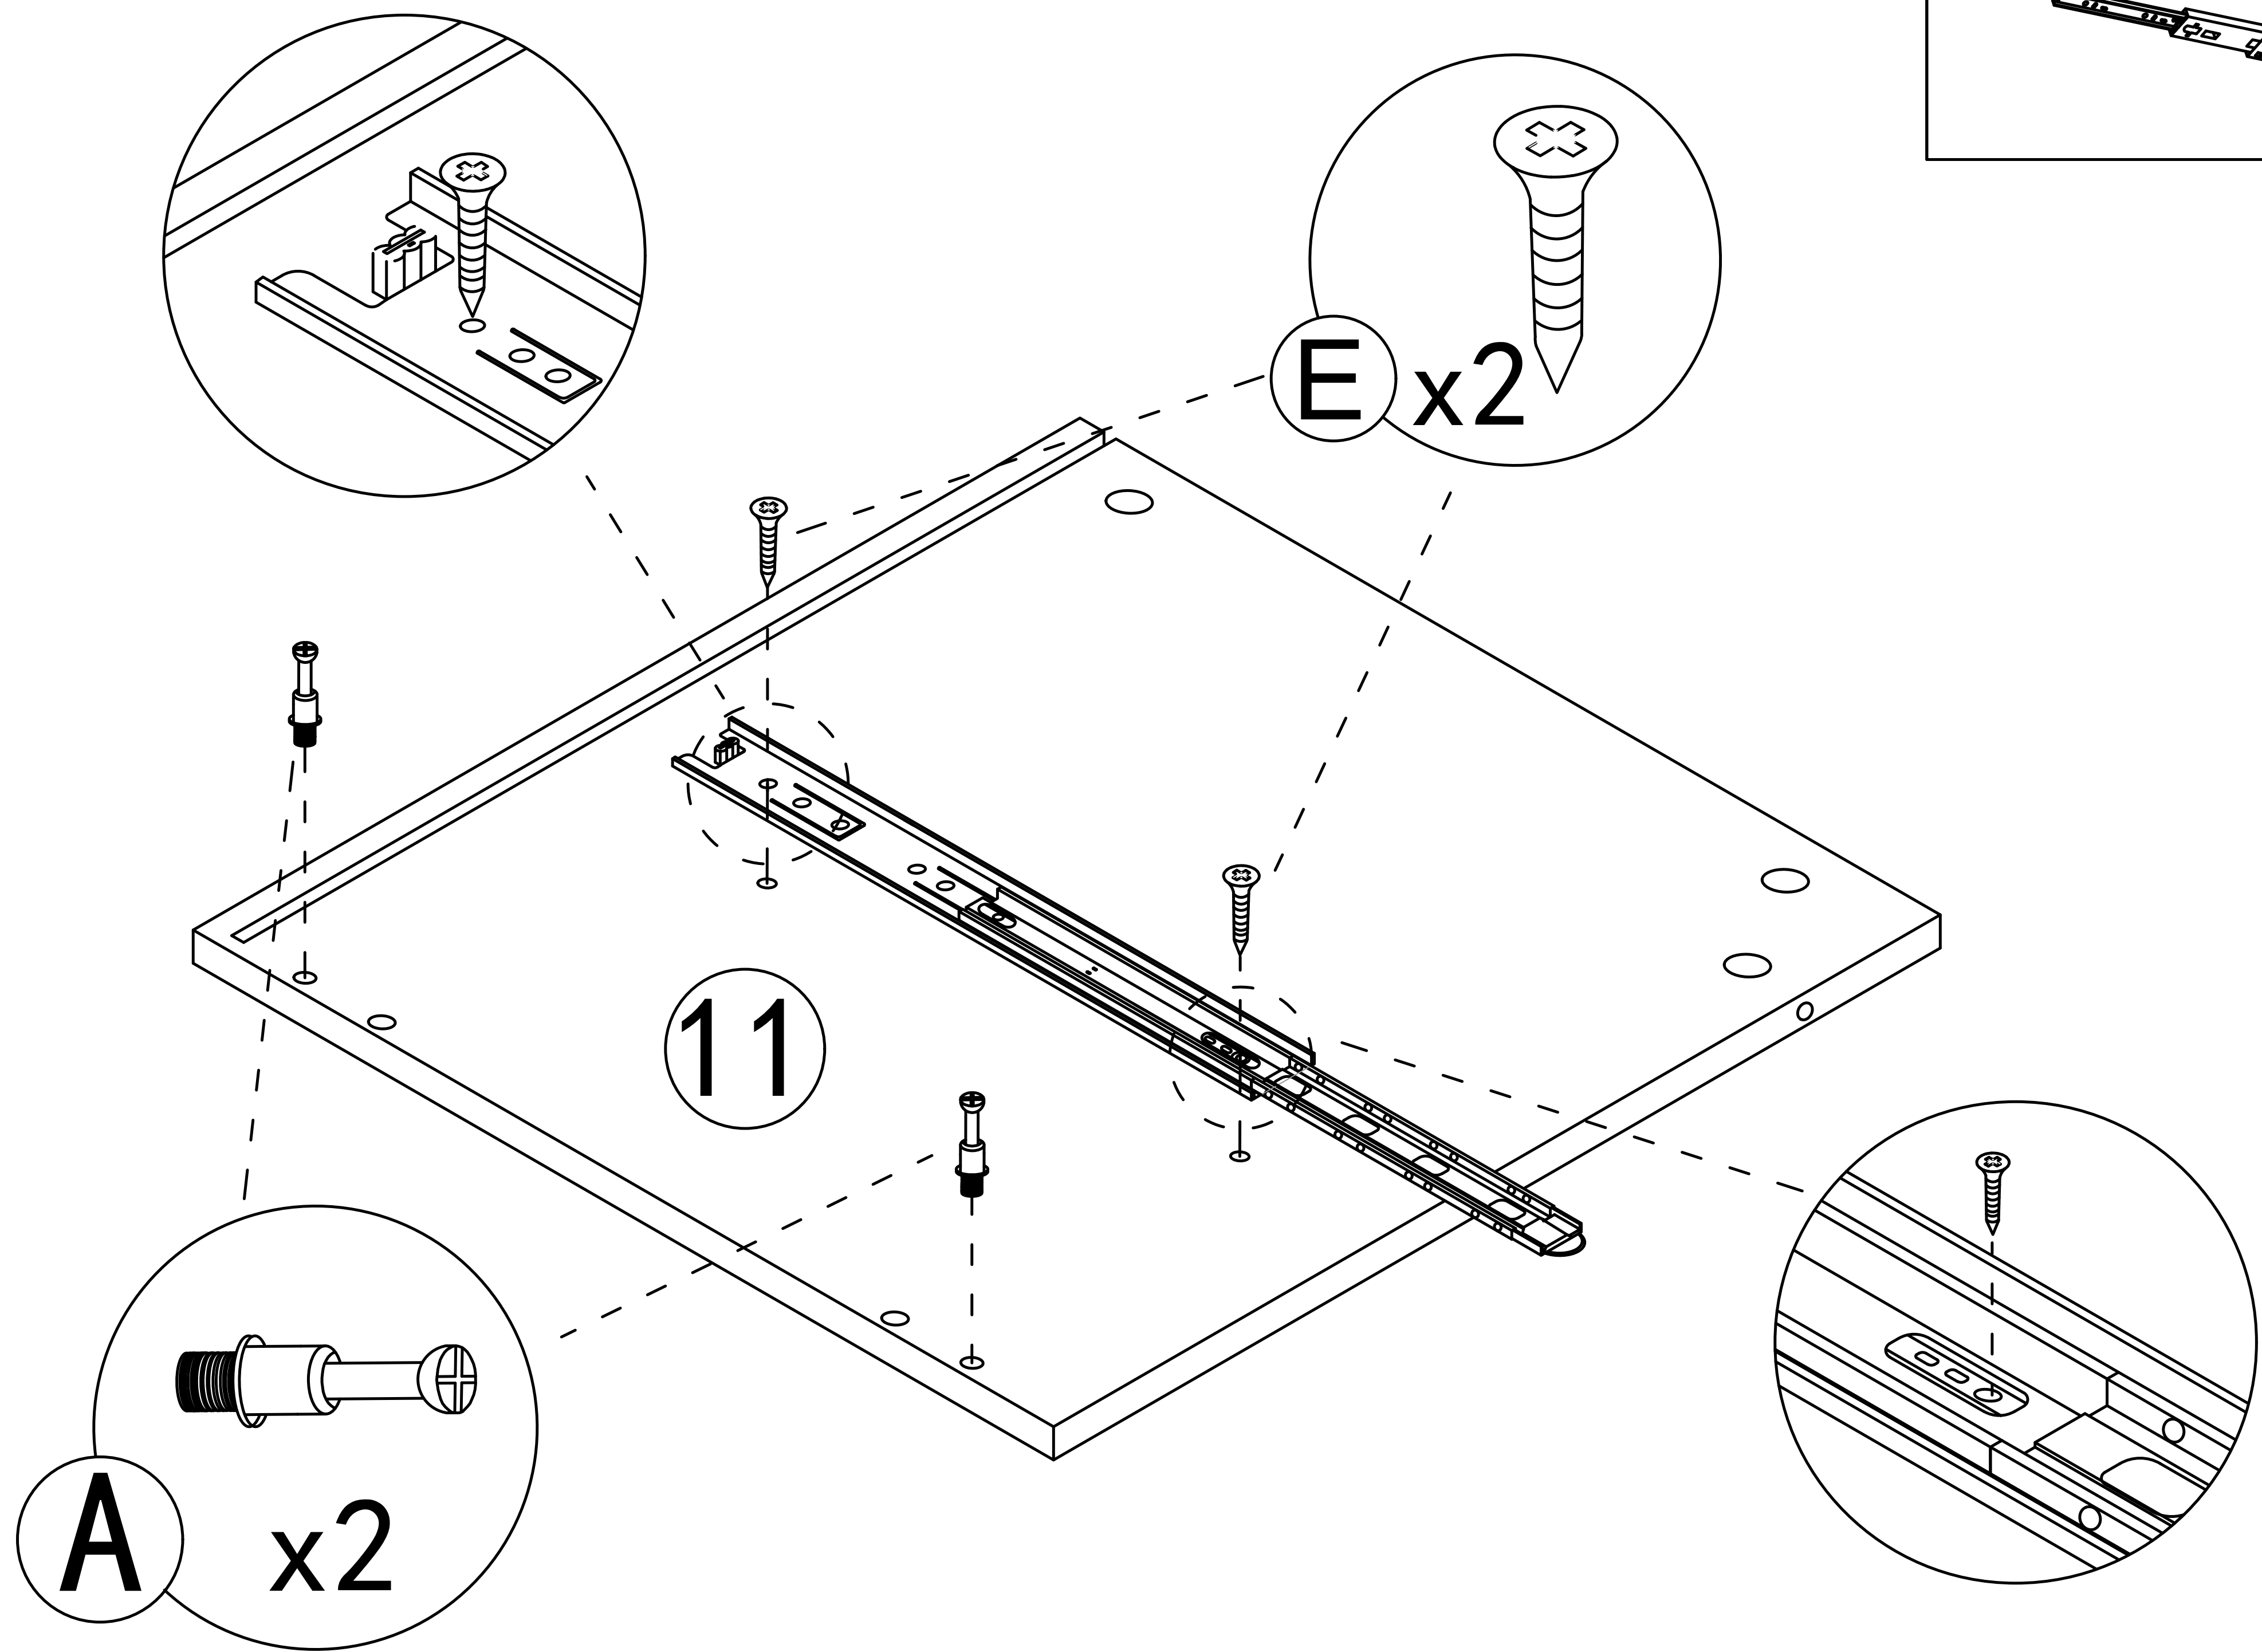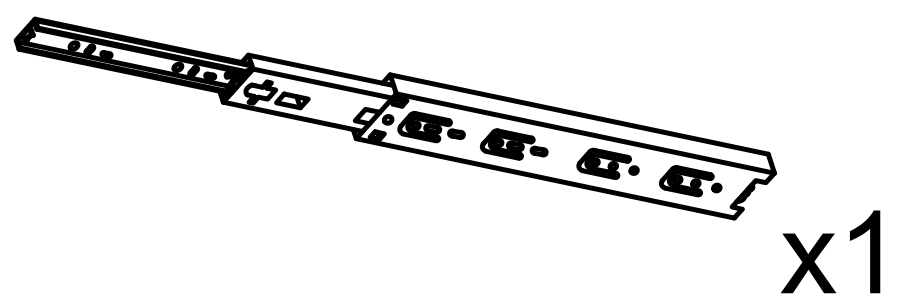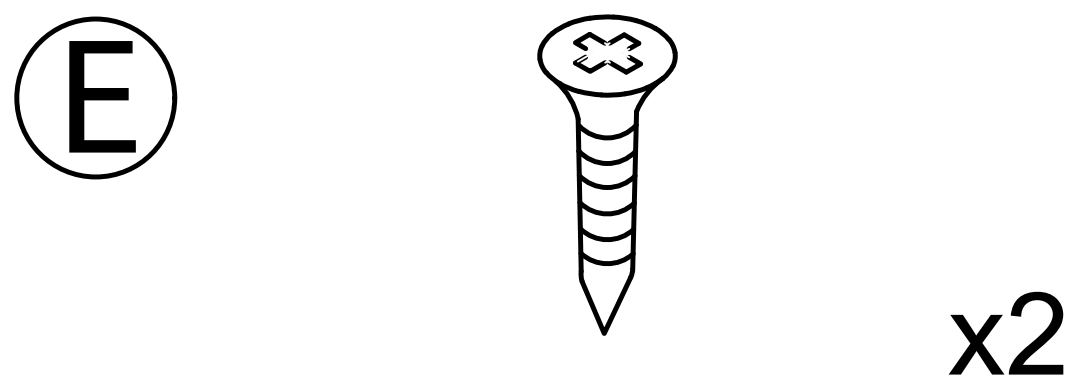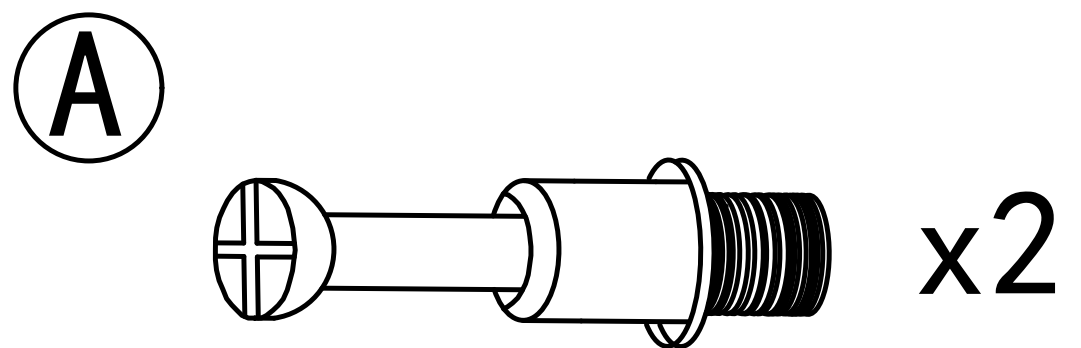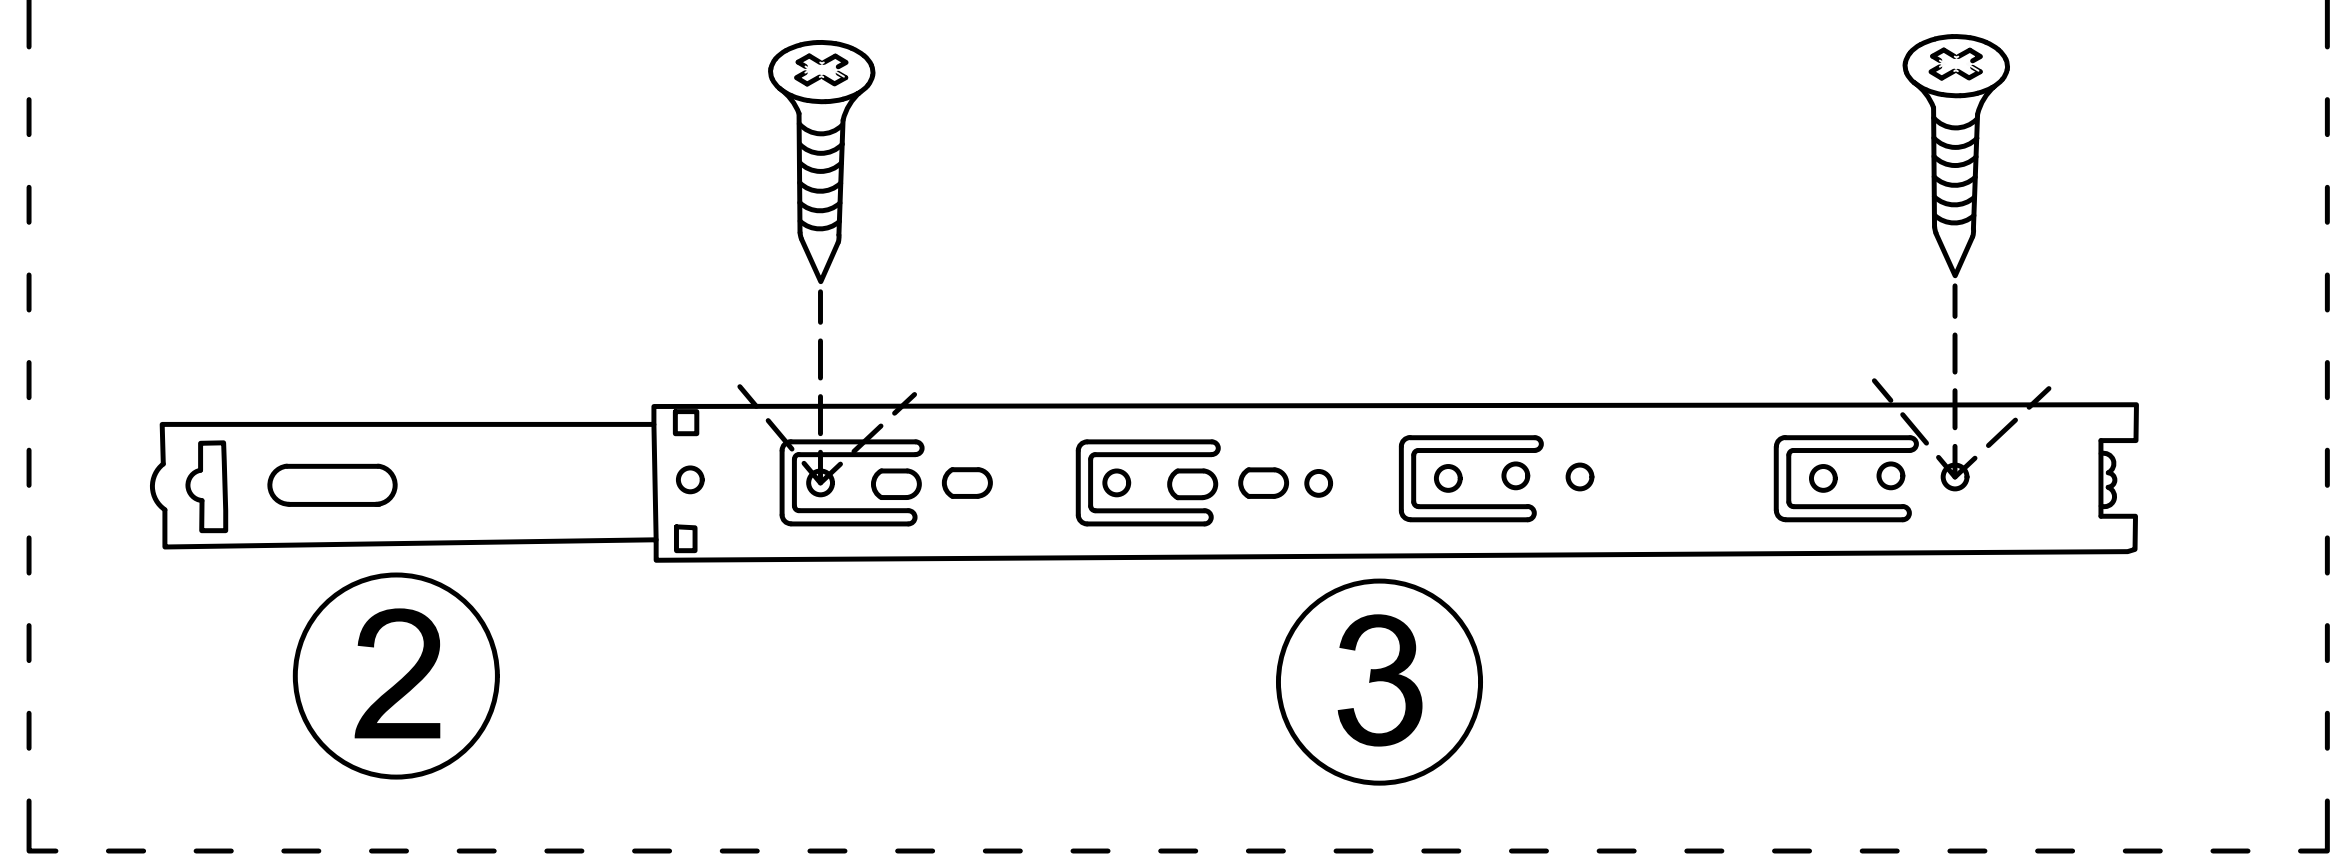


Step 19

E

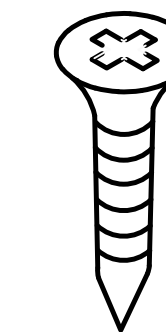


x1

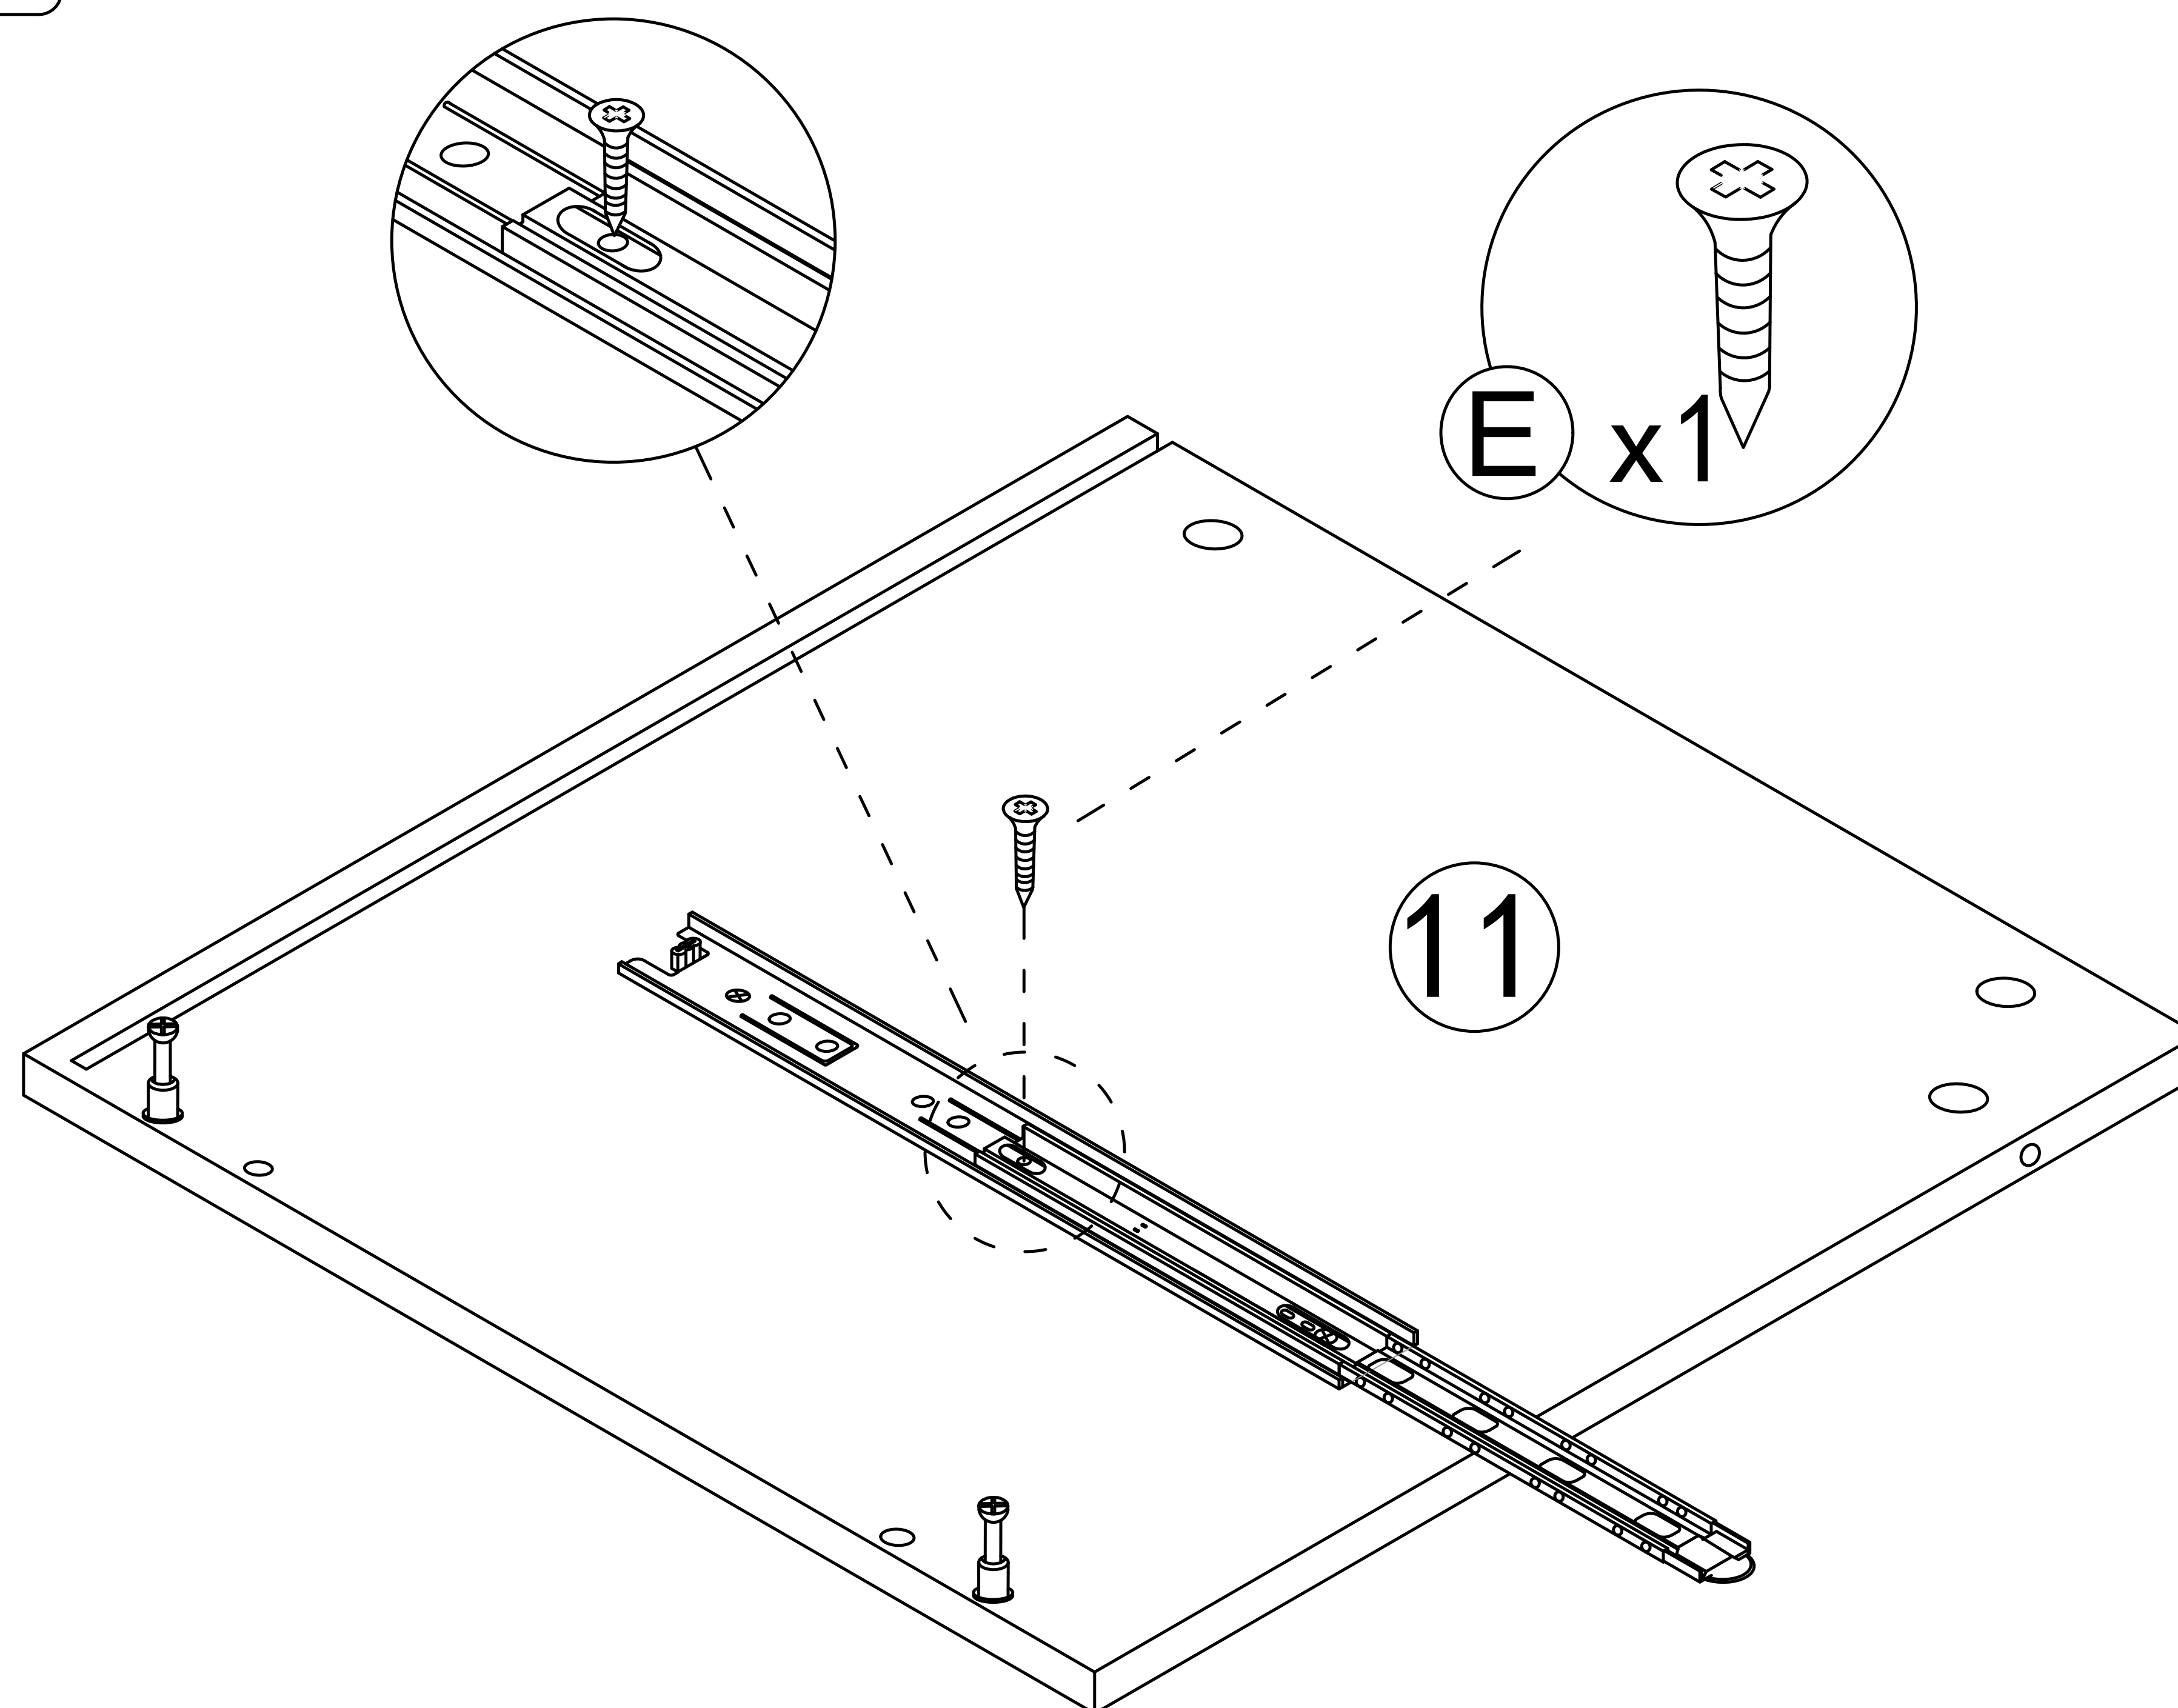




This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 20


B

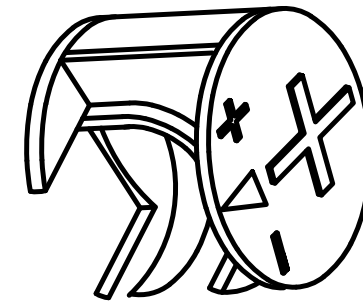


x2

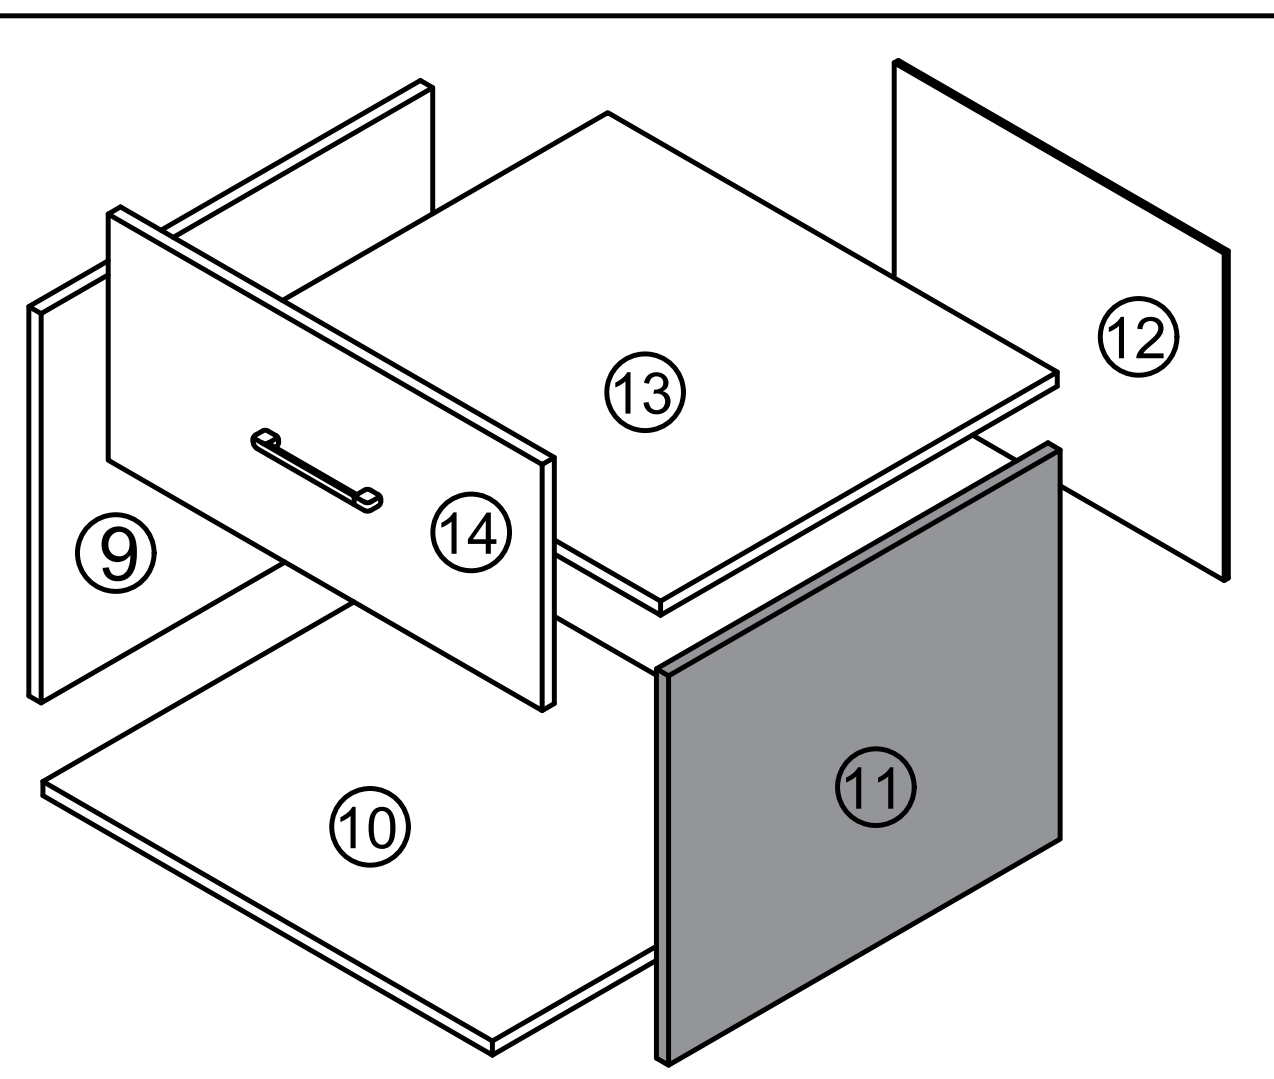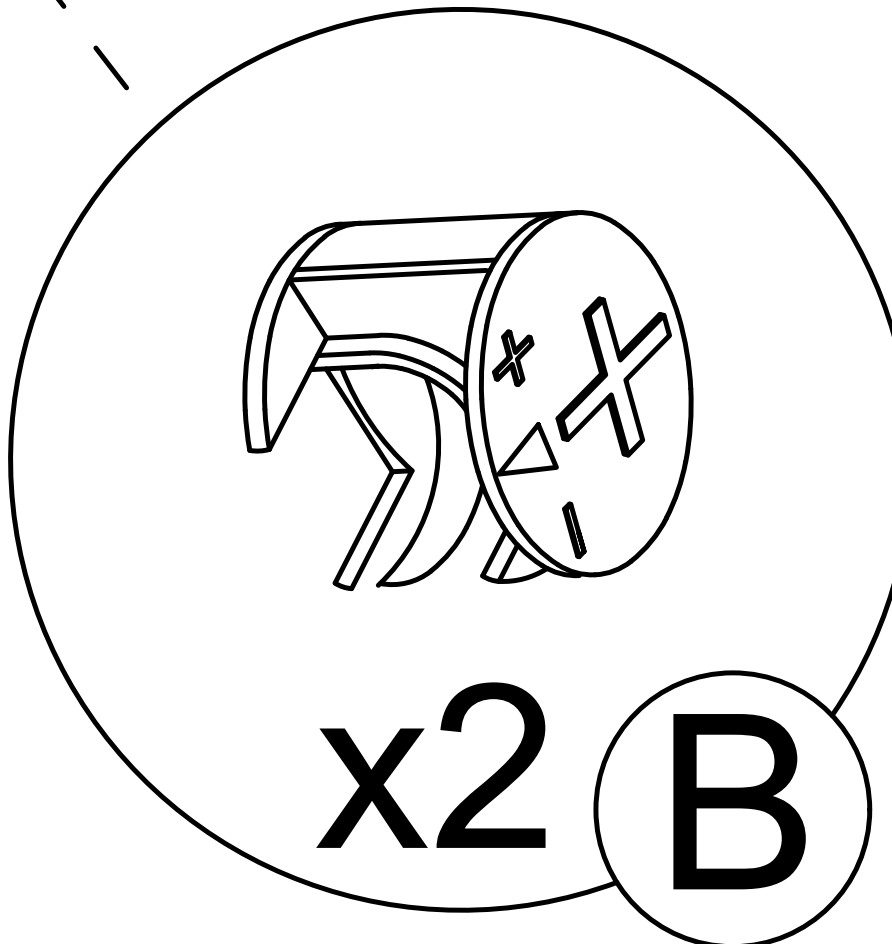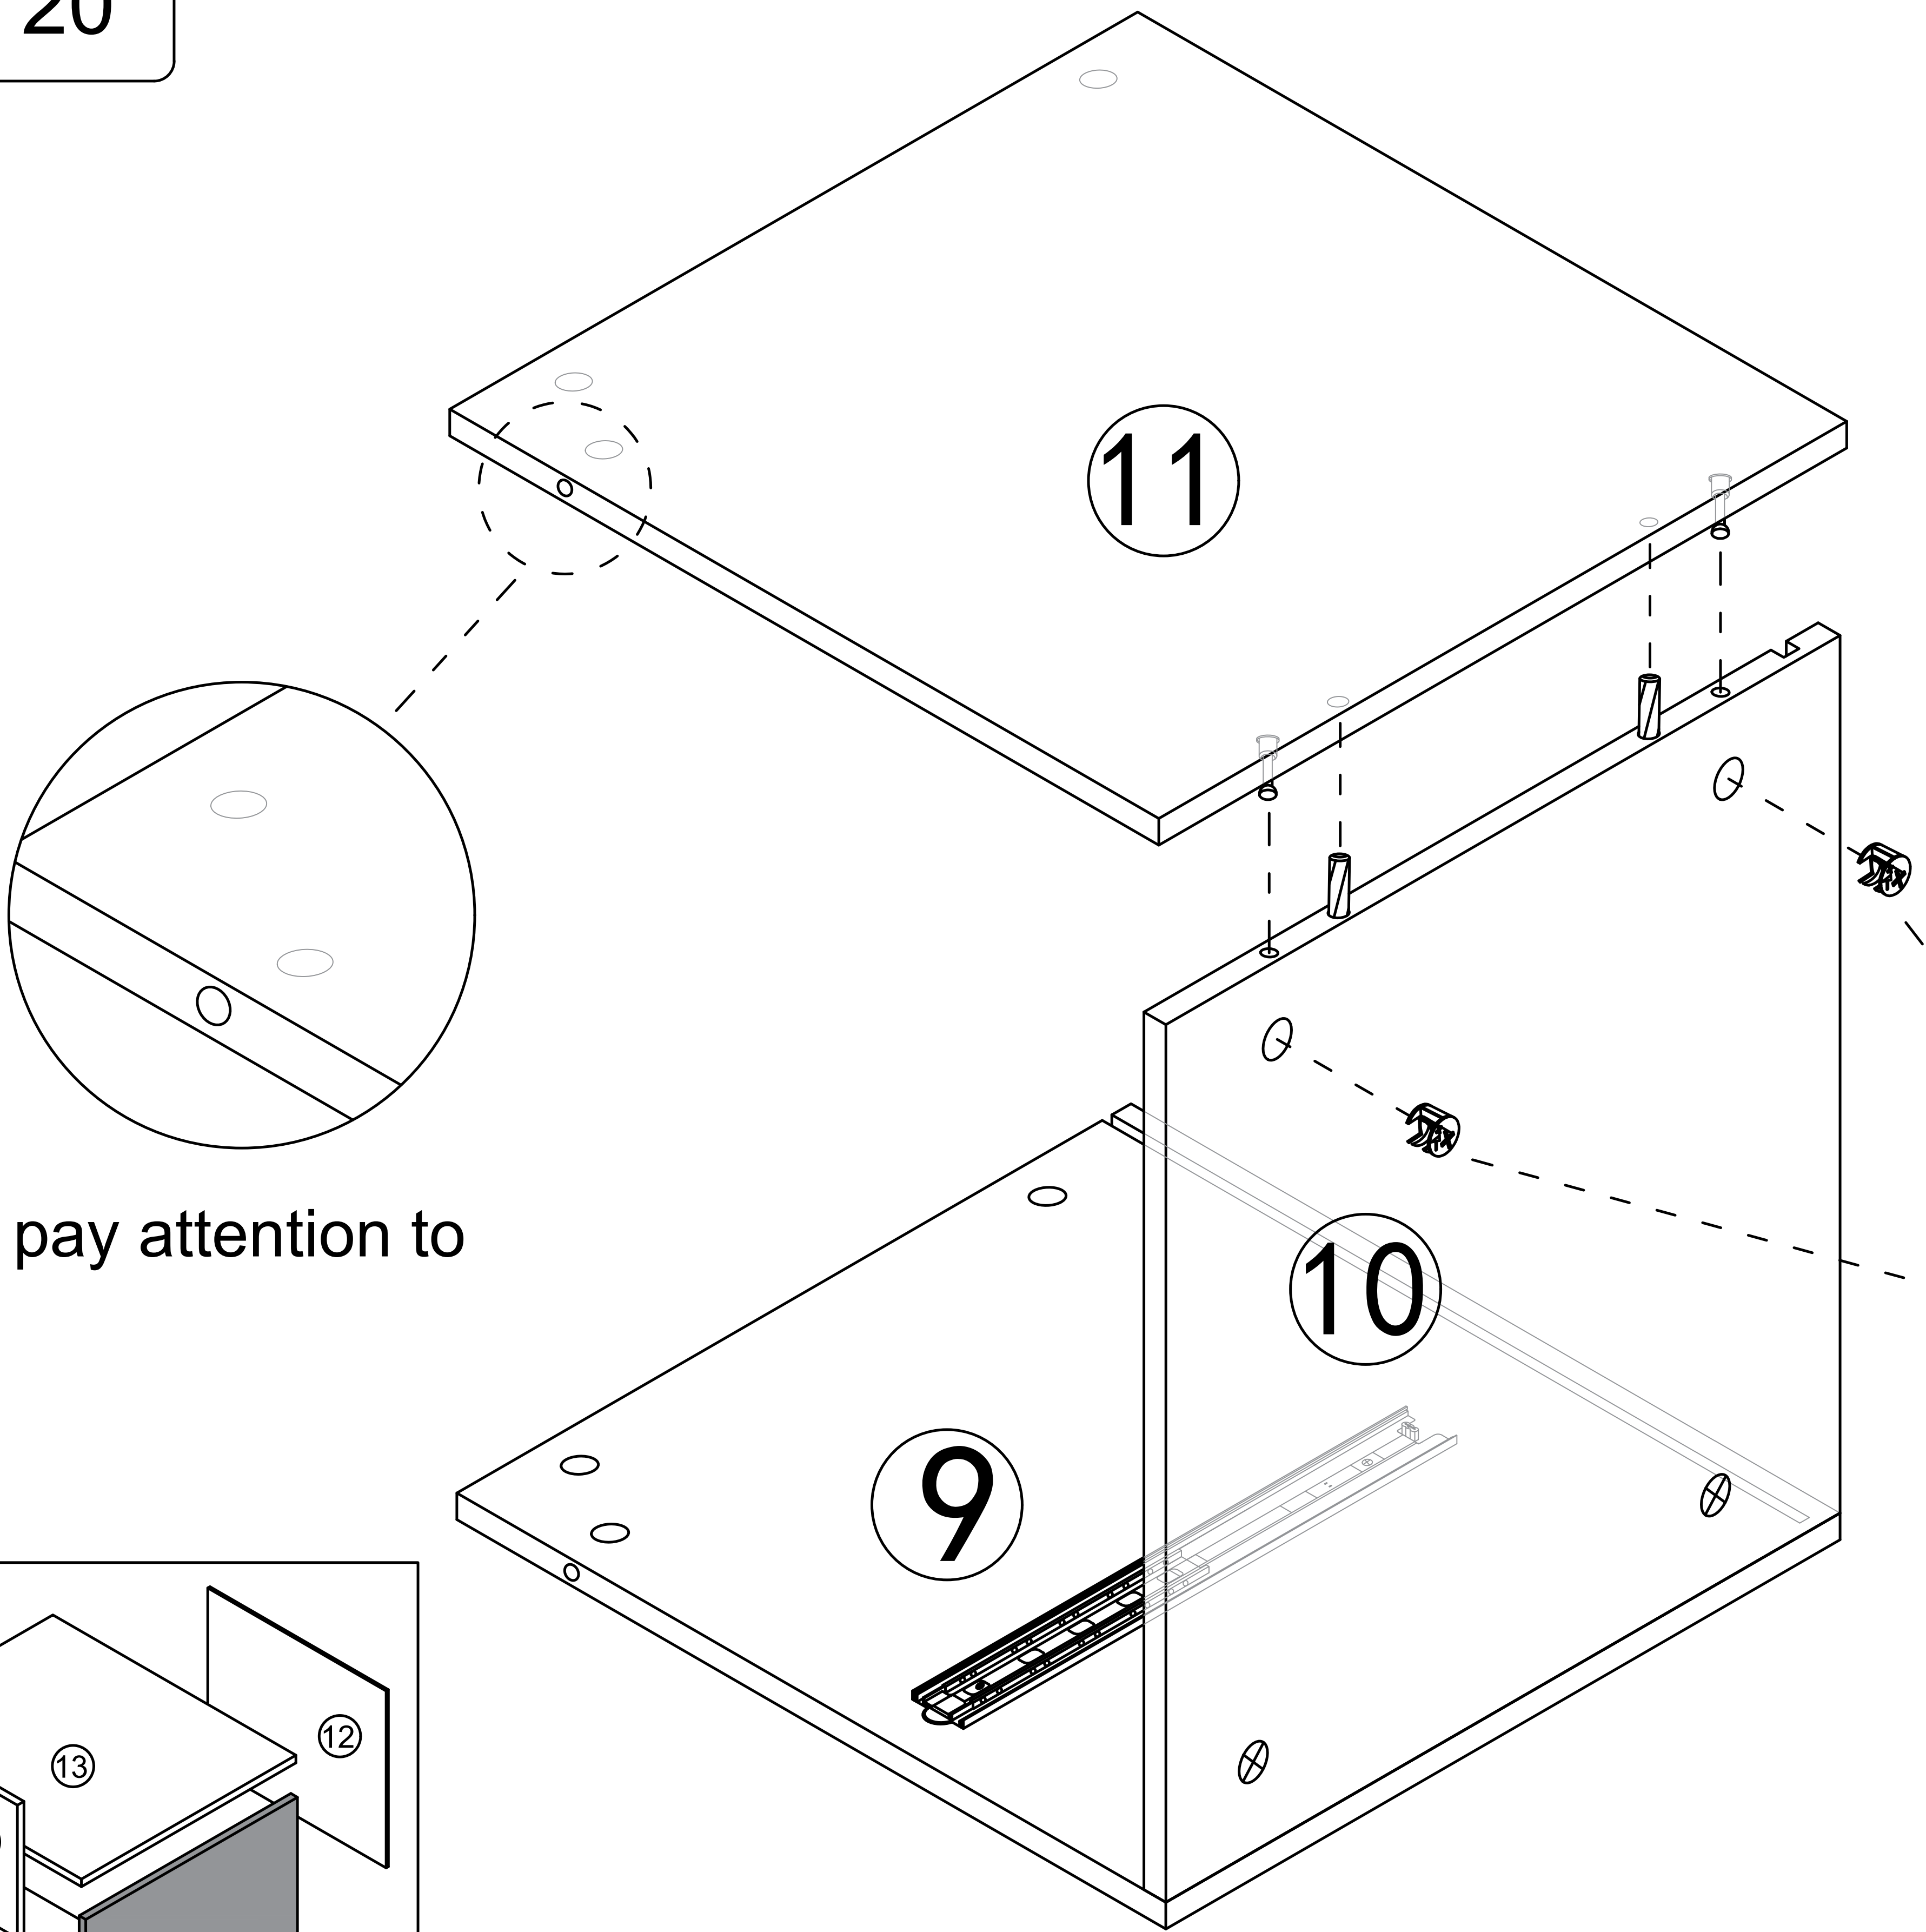

Step 21

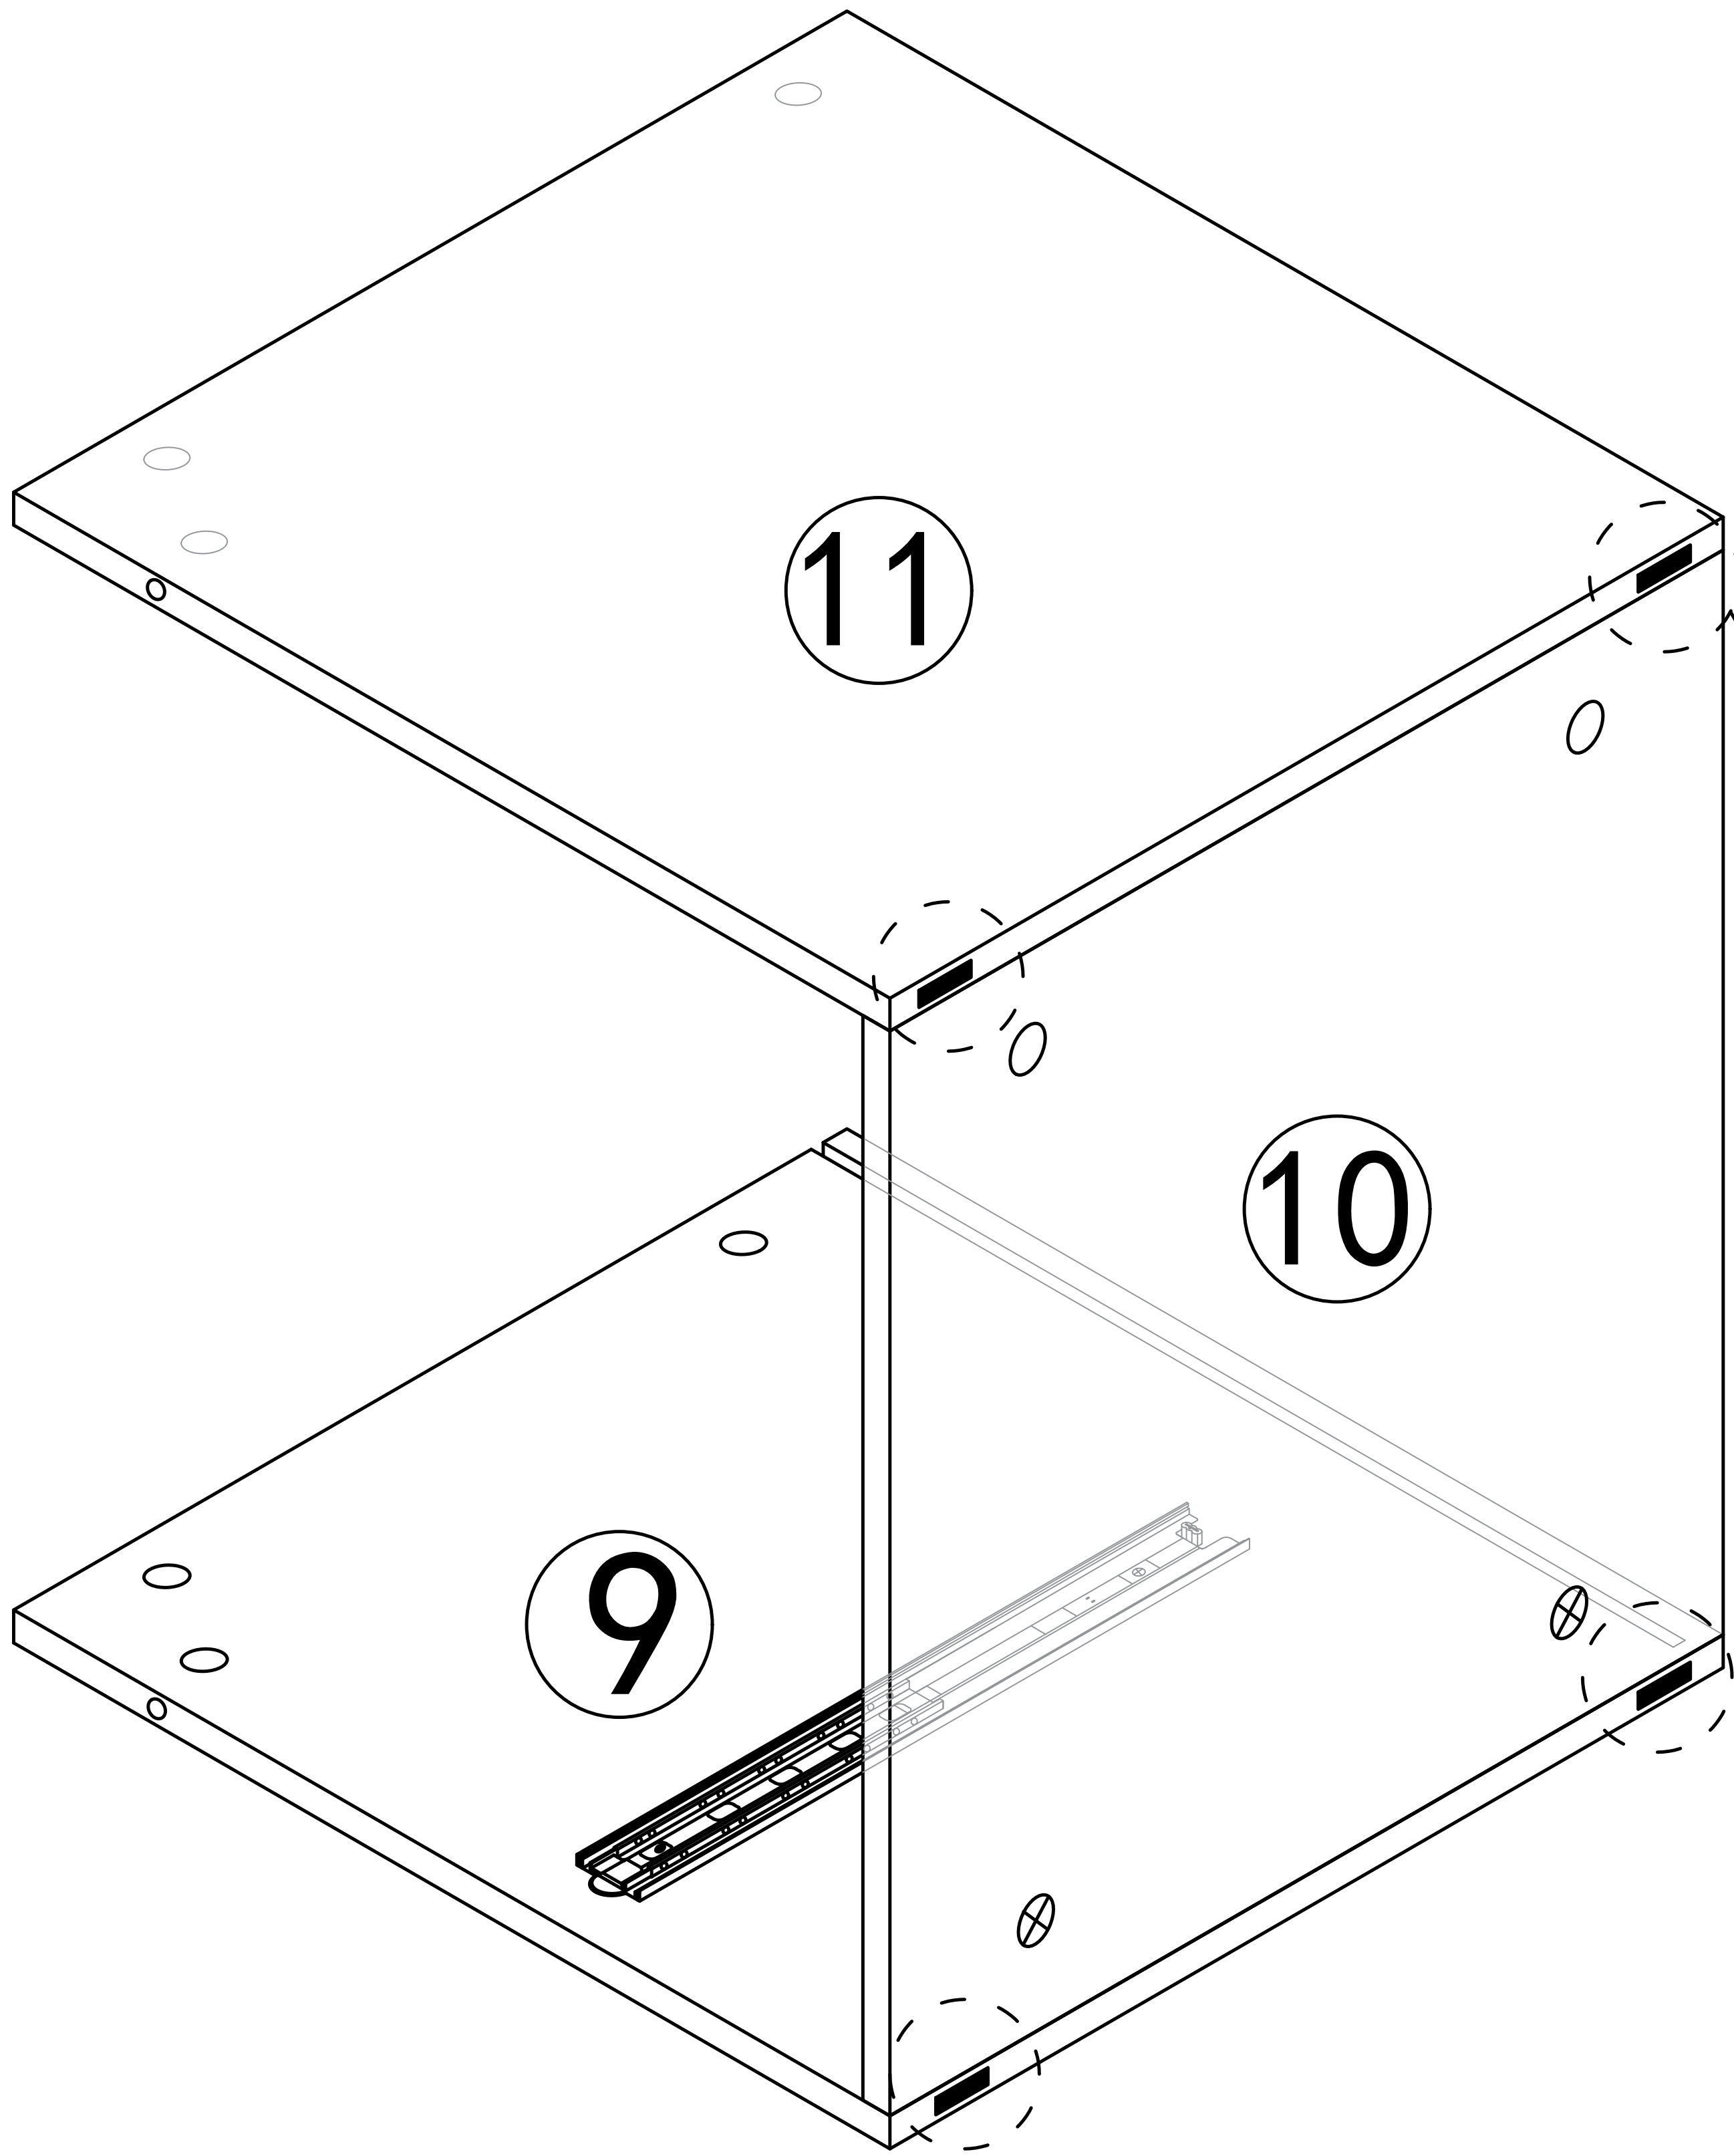

J

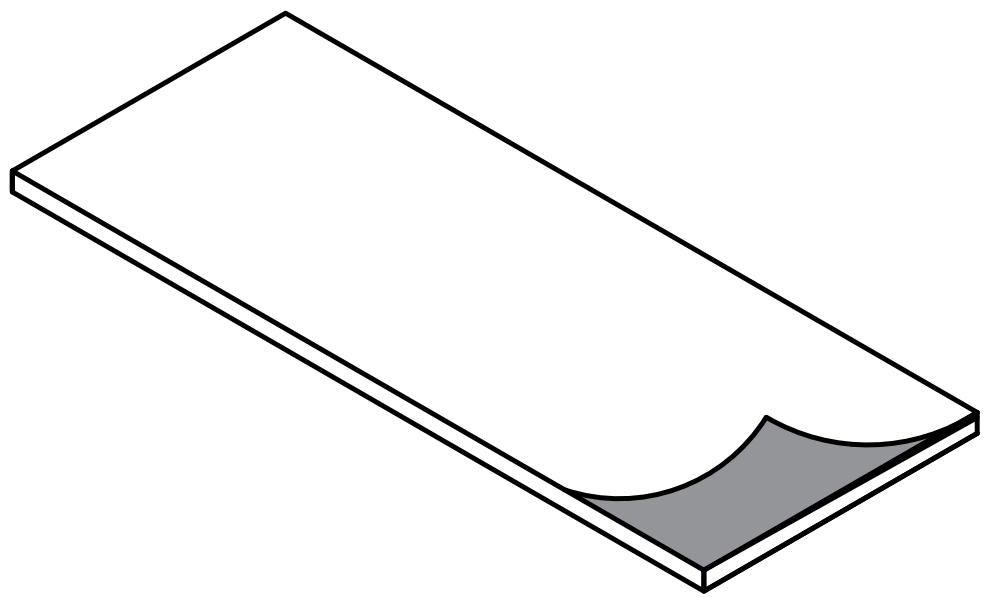

x4



Tear off release paper and stick the black foot pad on the board



x4


J

Step 22

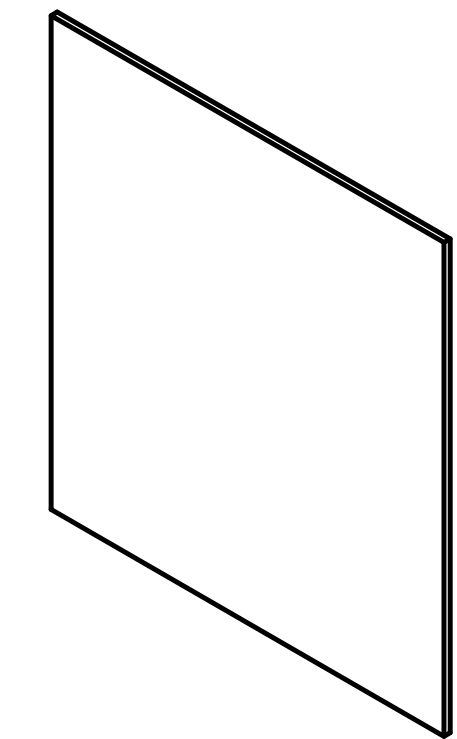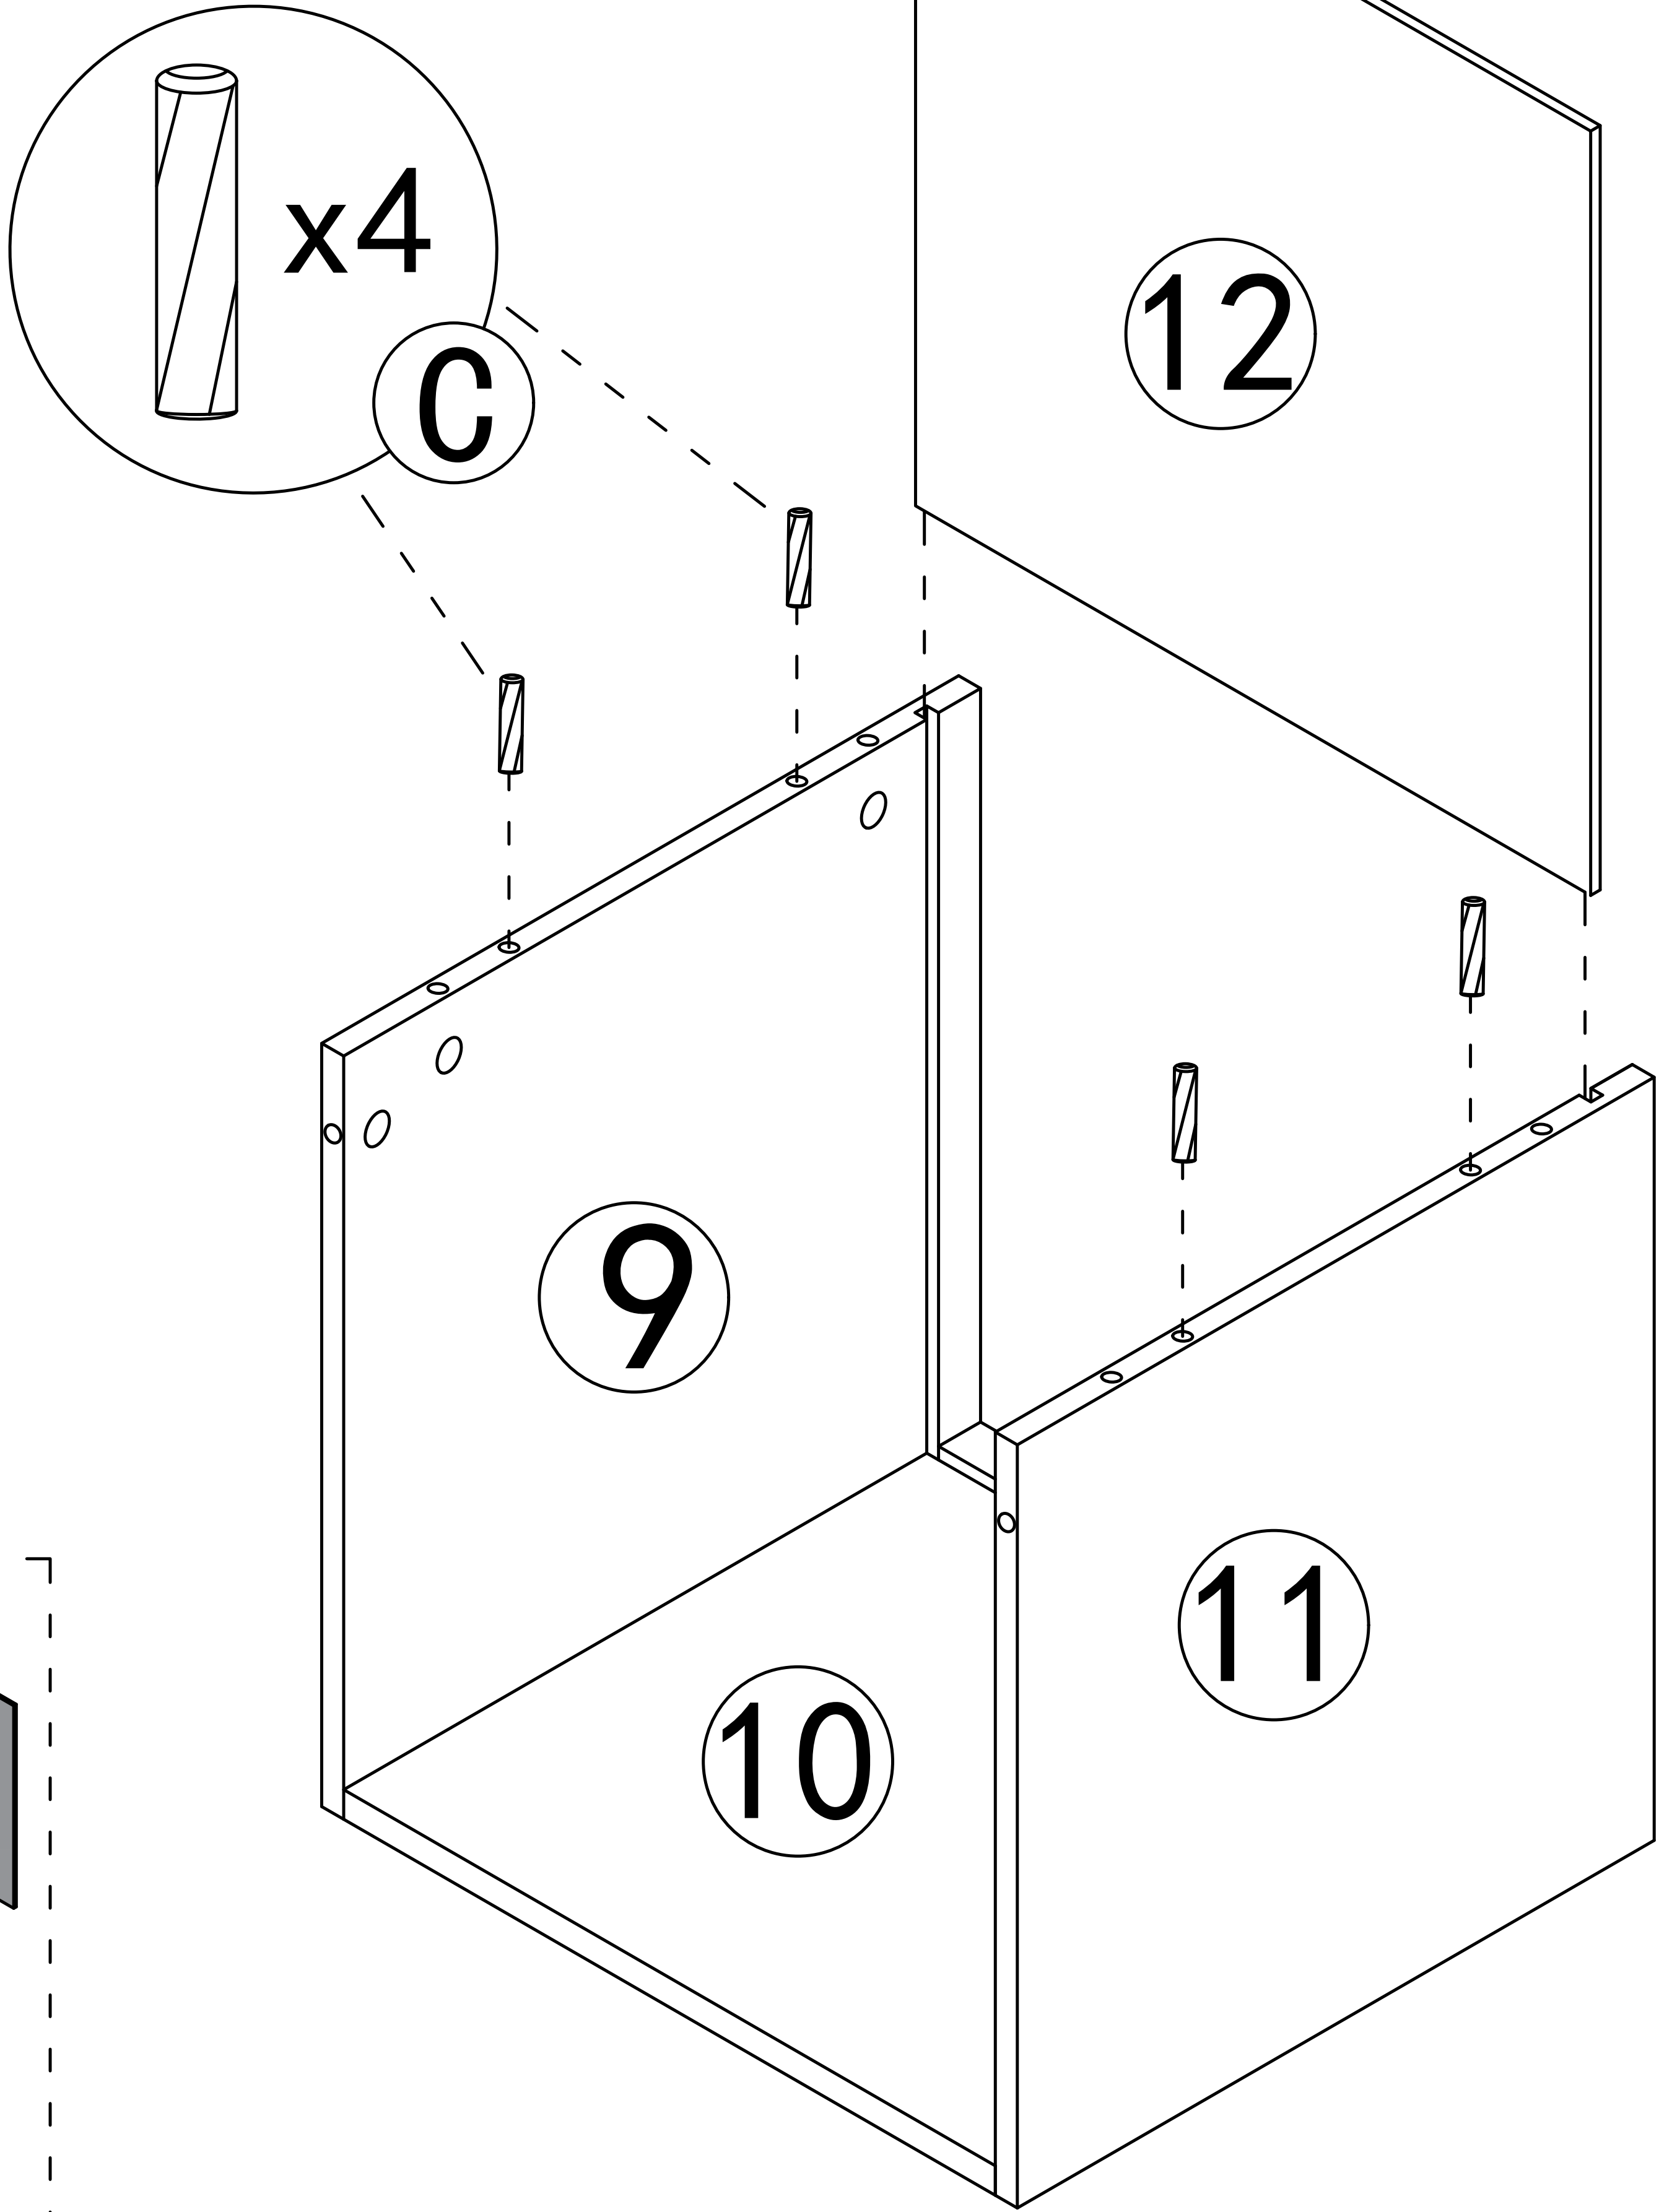


12 X1

C



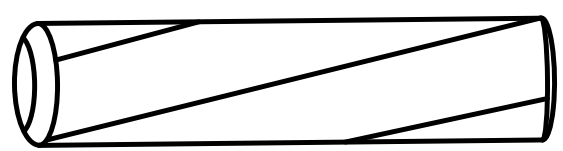


x4

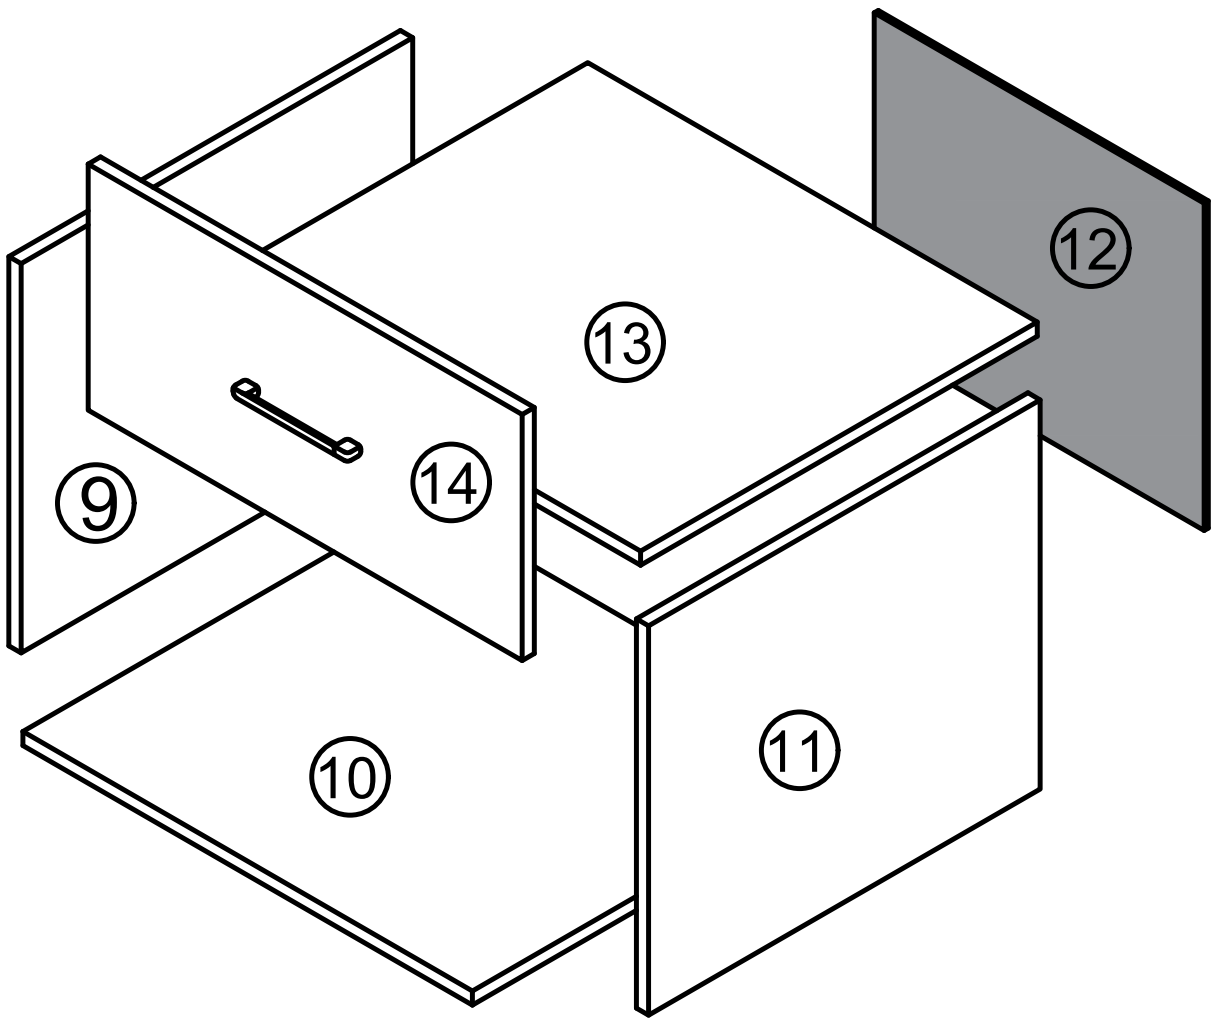


Step 23

A

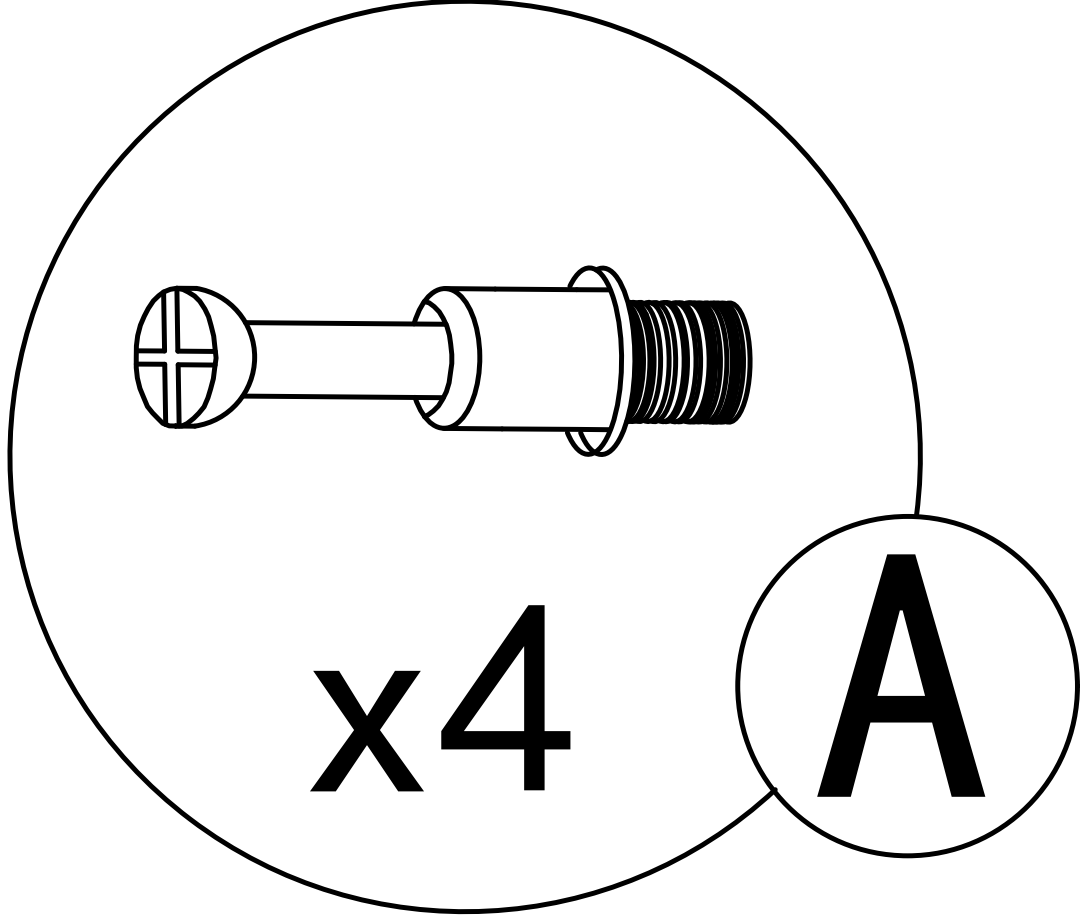
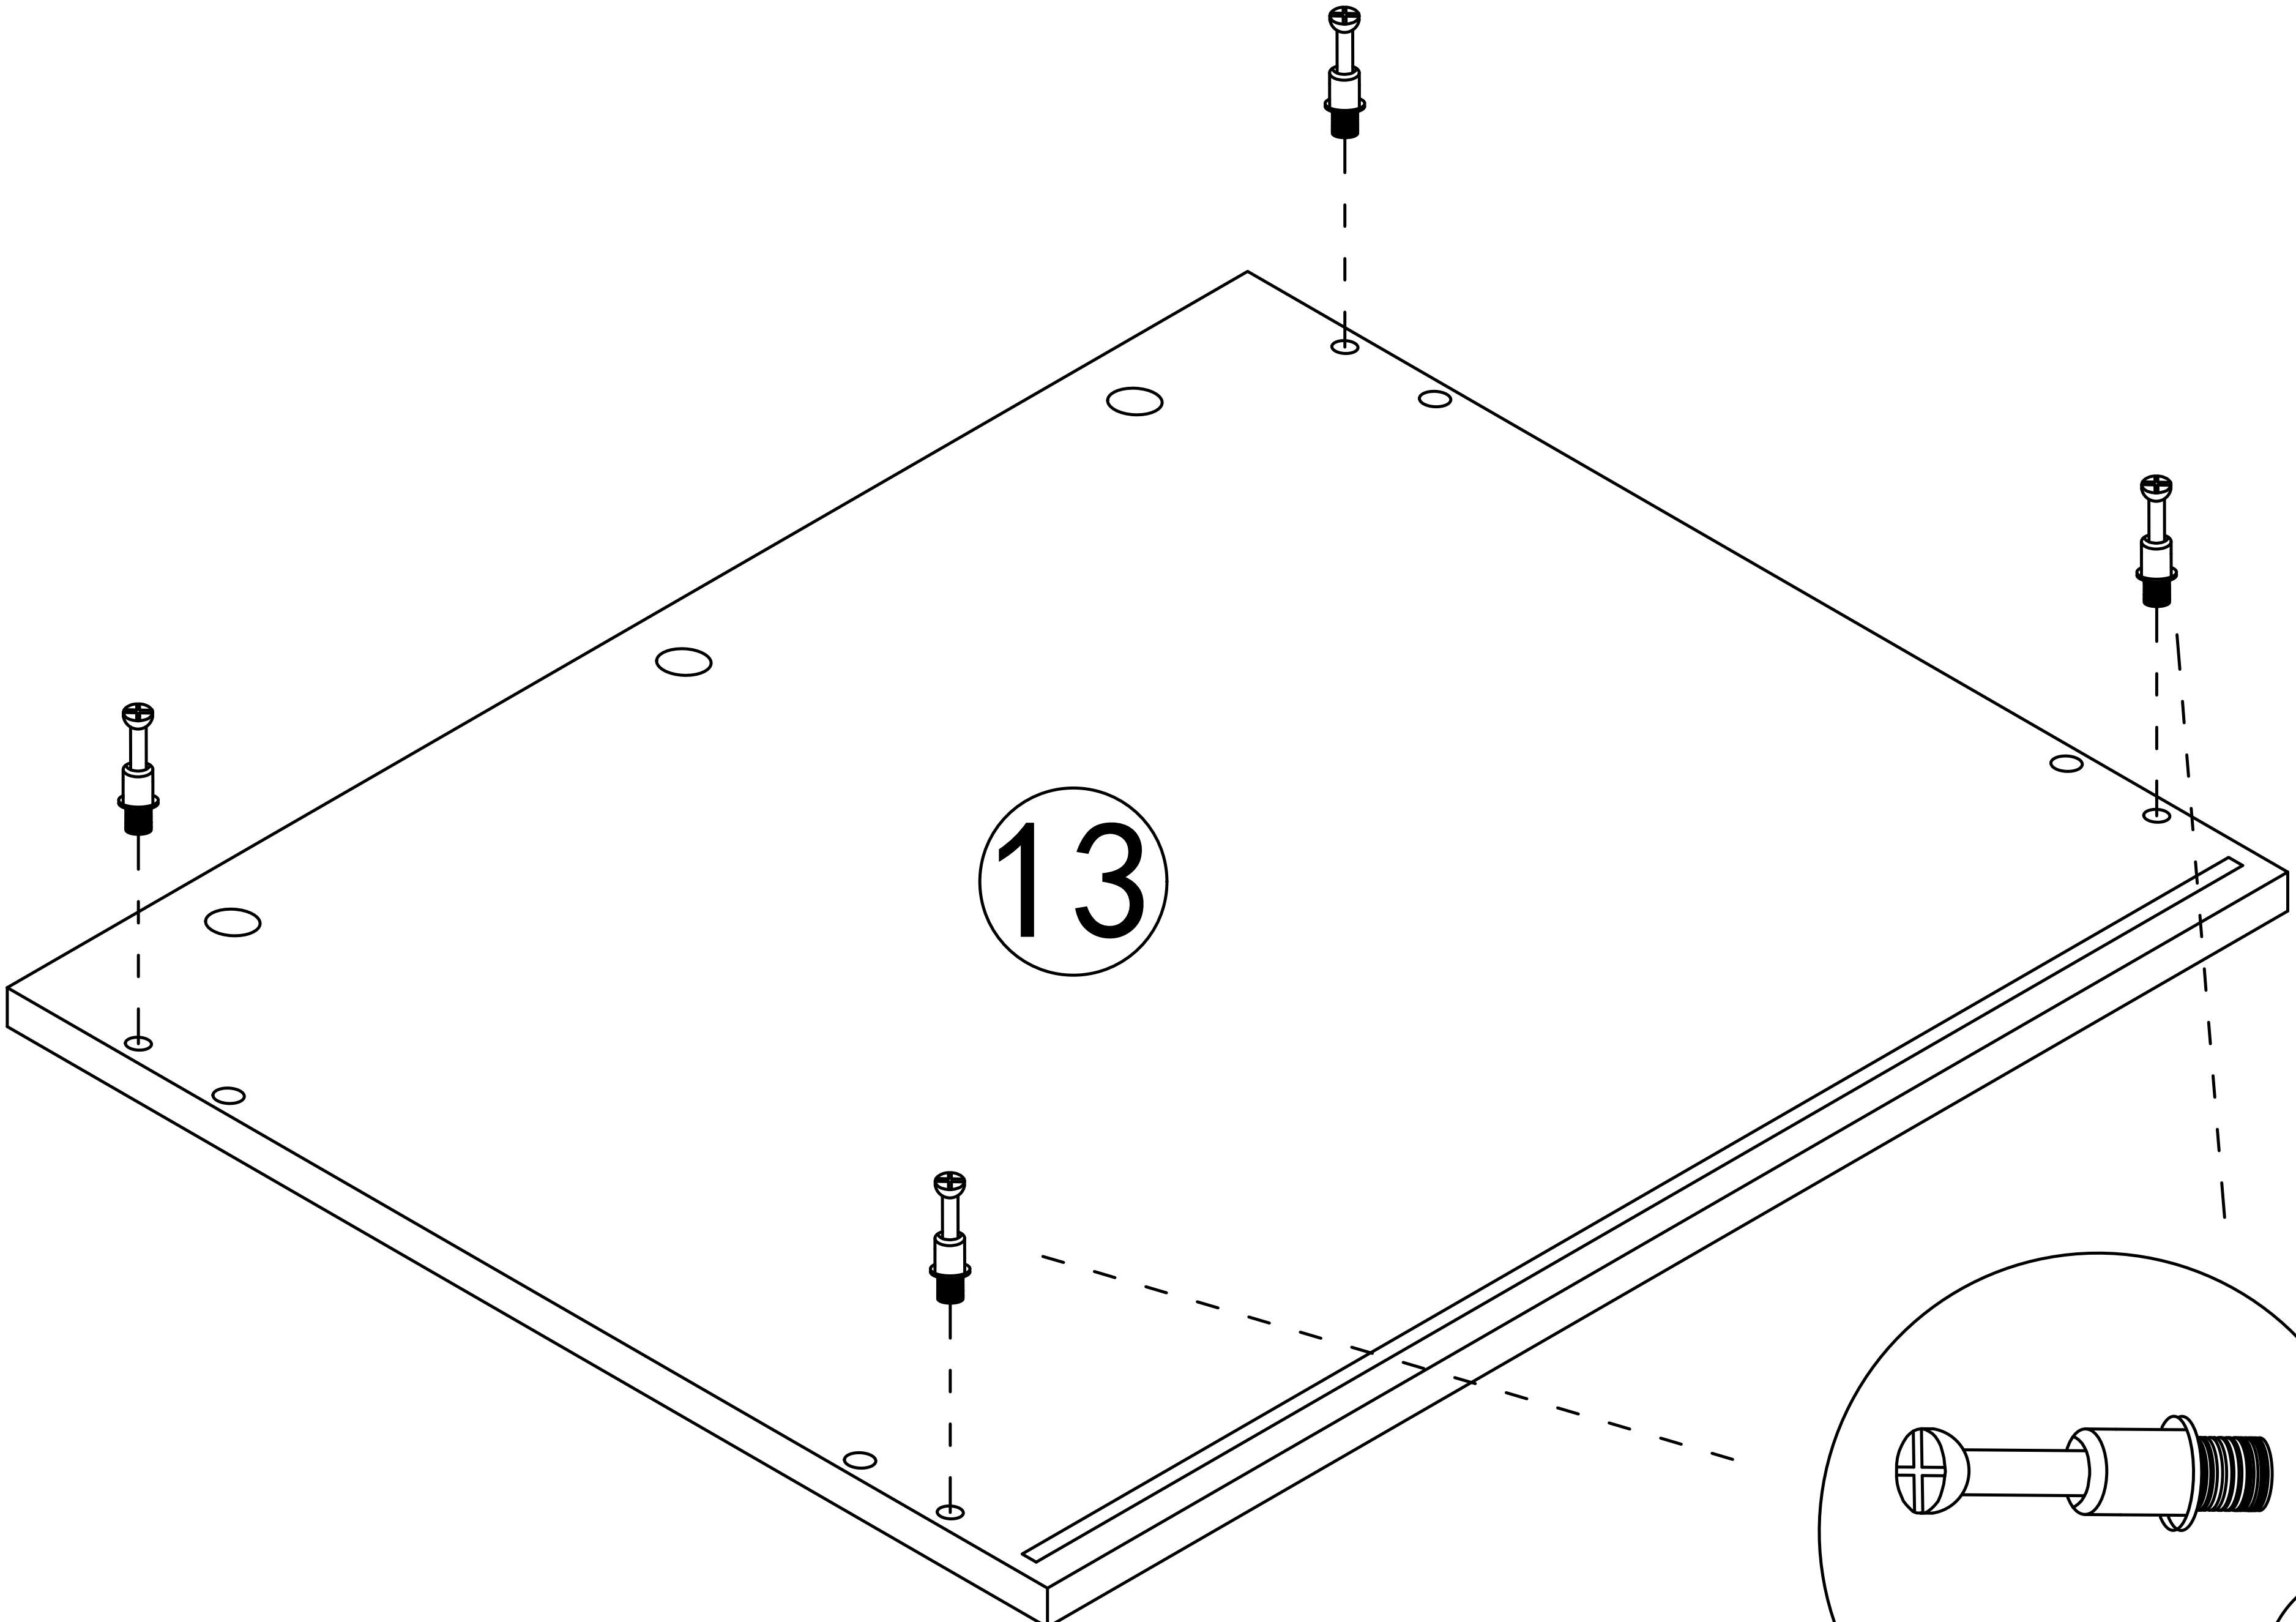
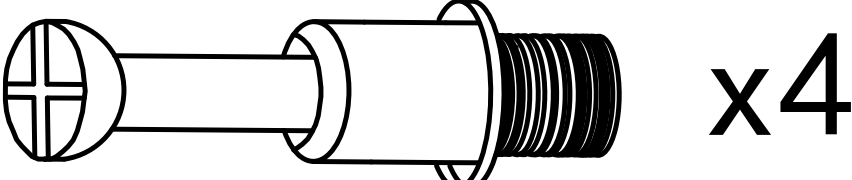


Step 24

B


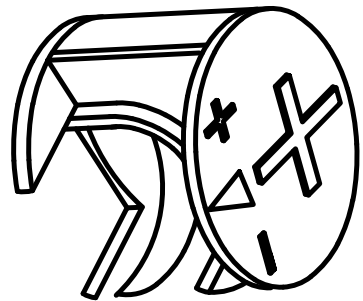


x4

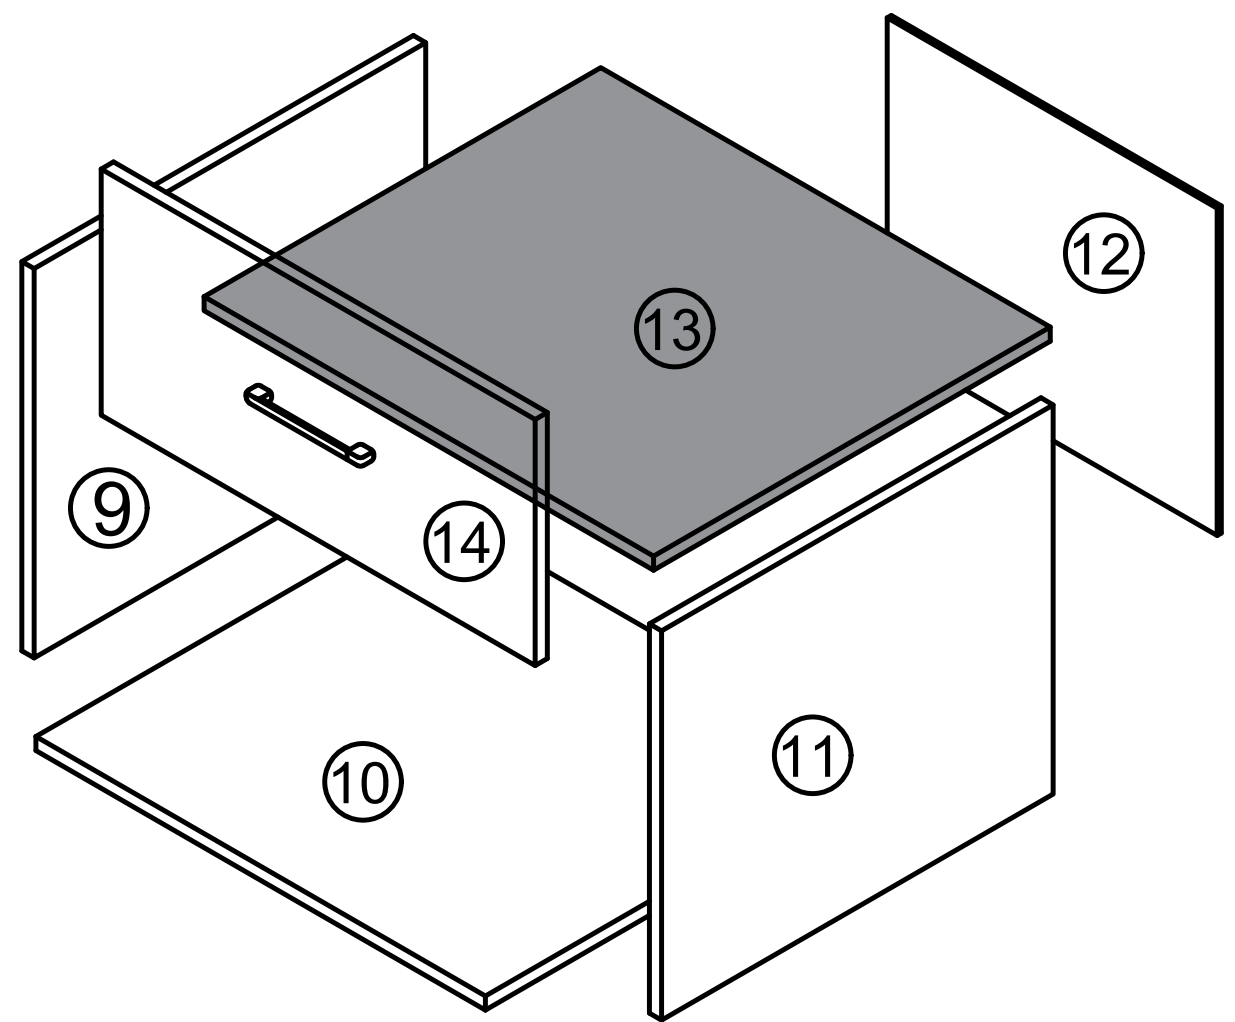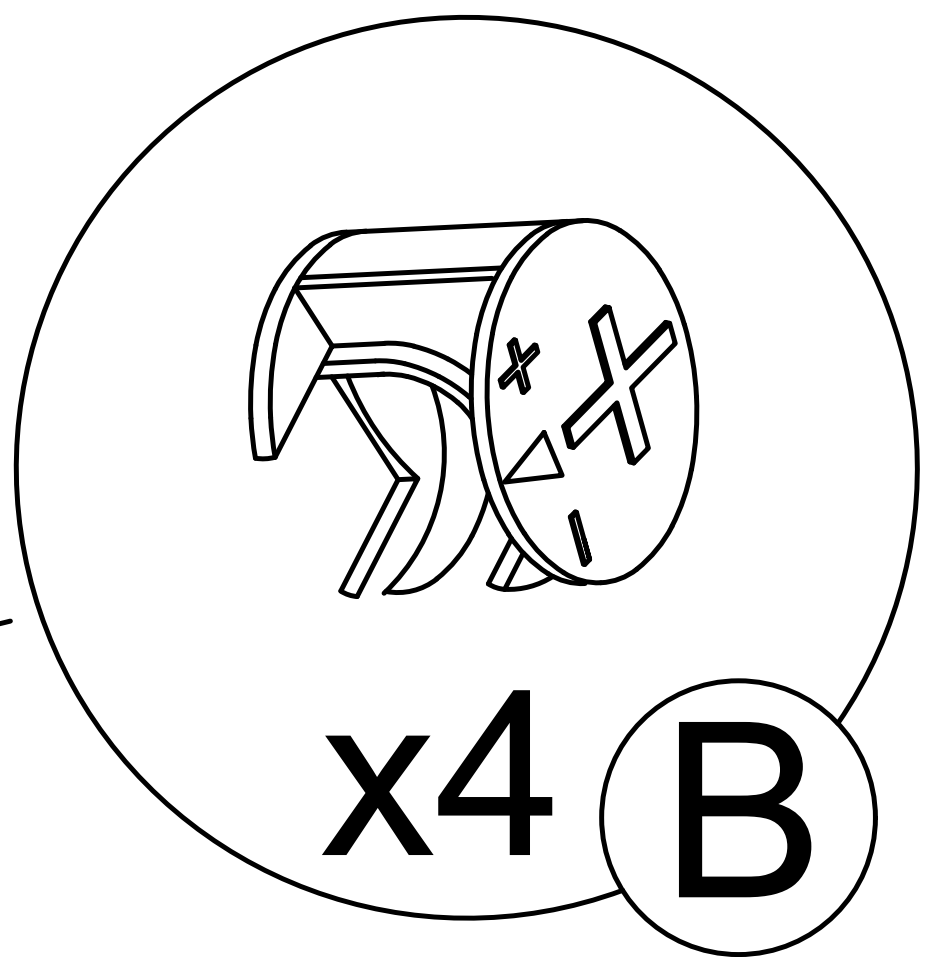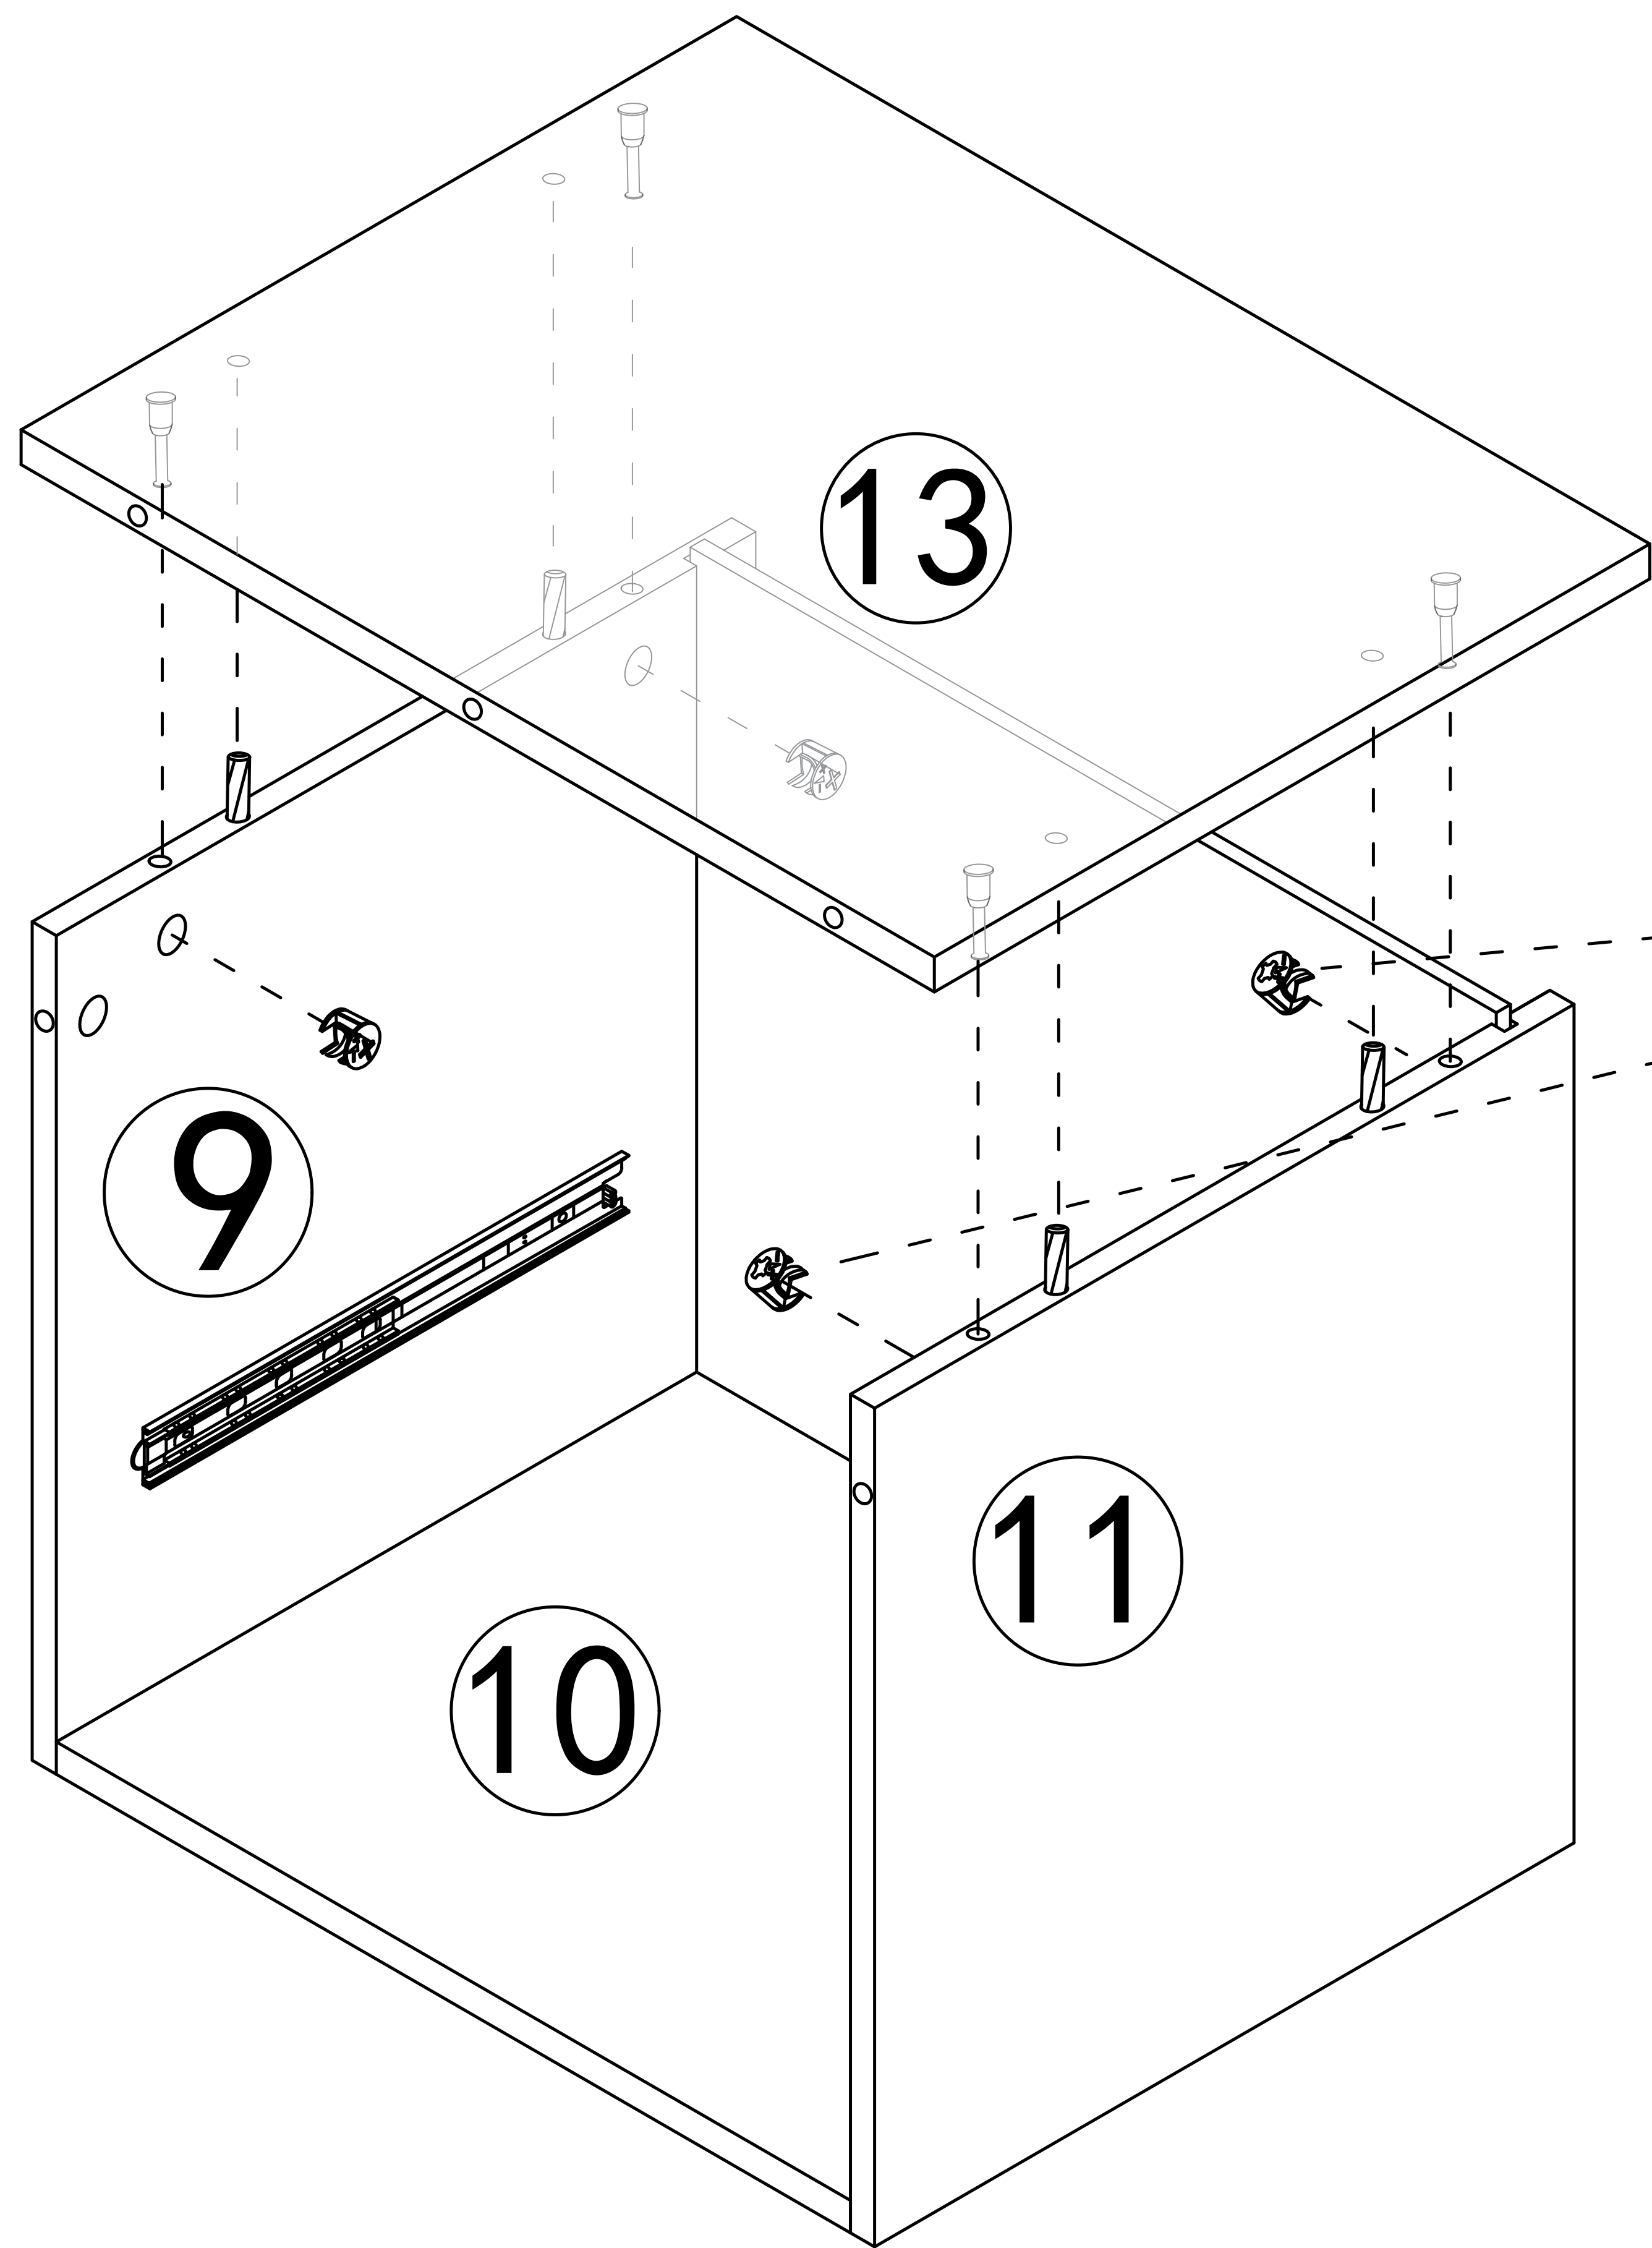


Step 25

A

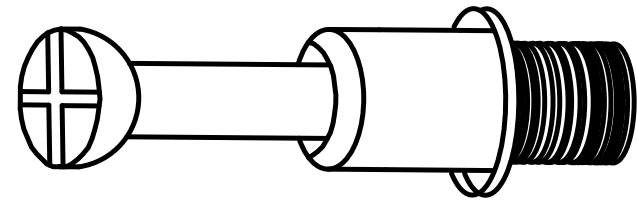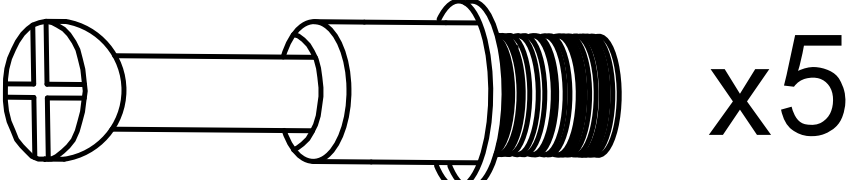


x5

A



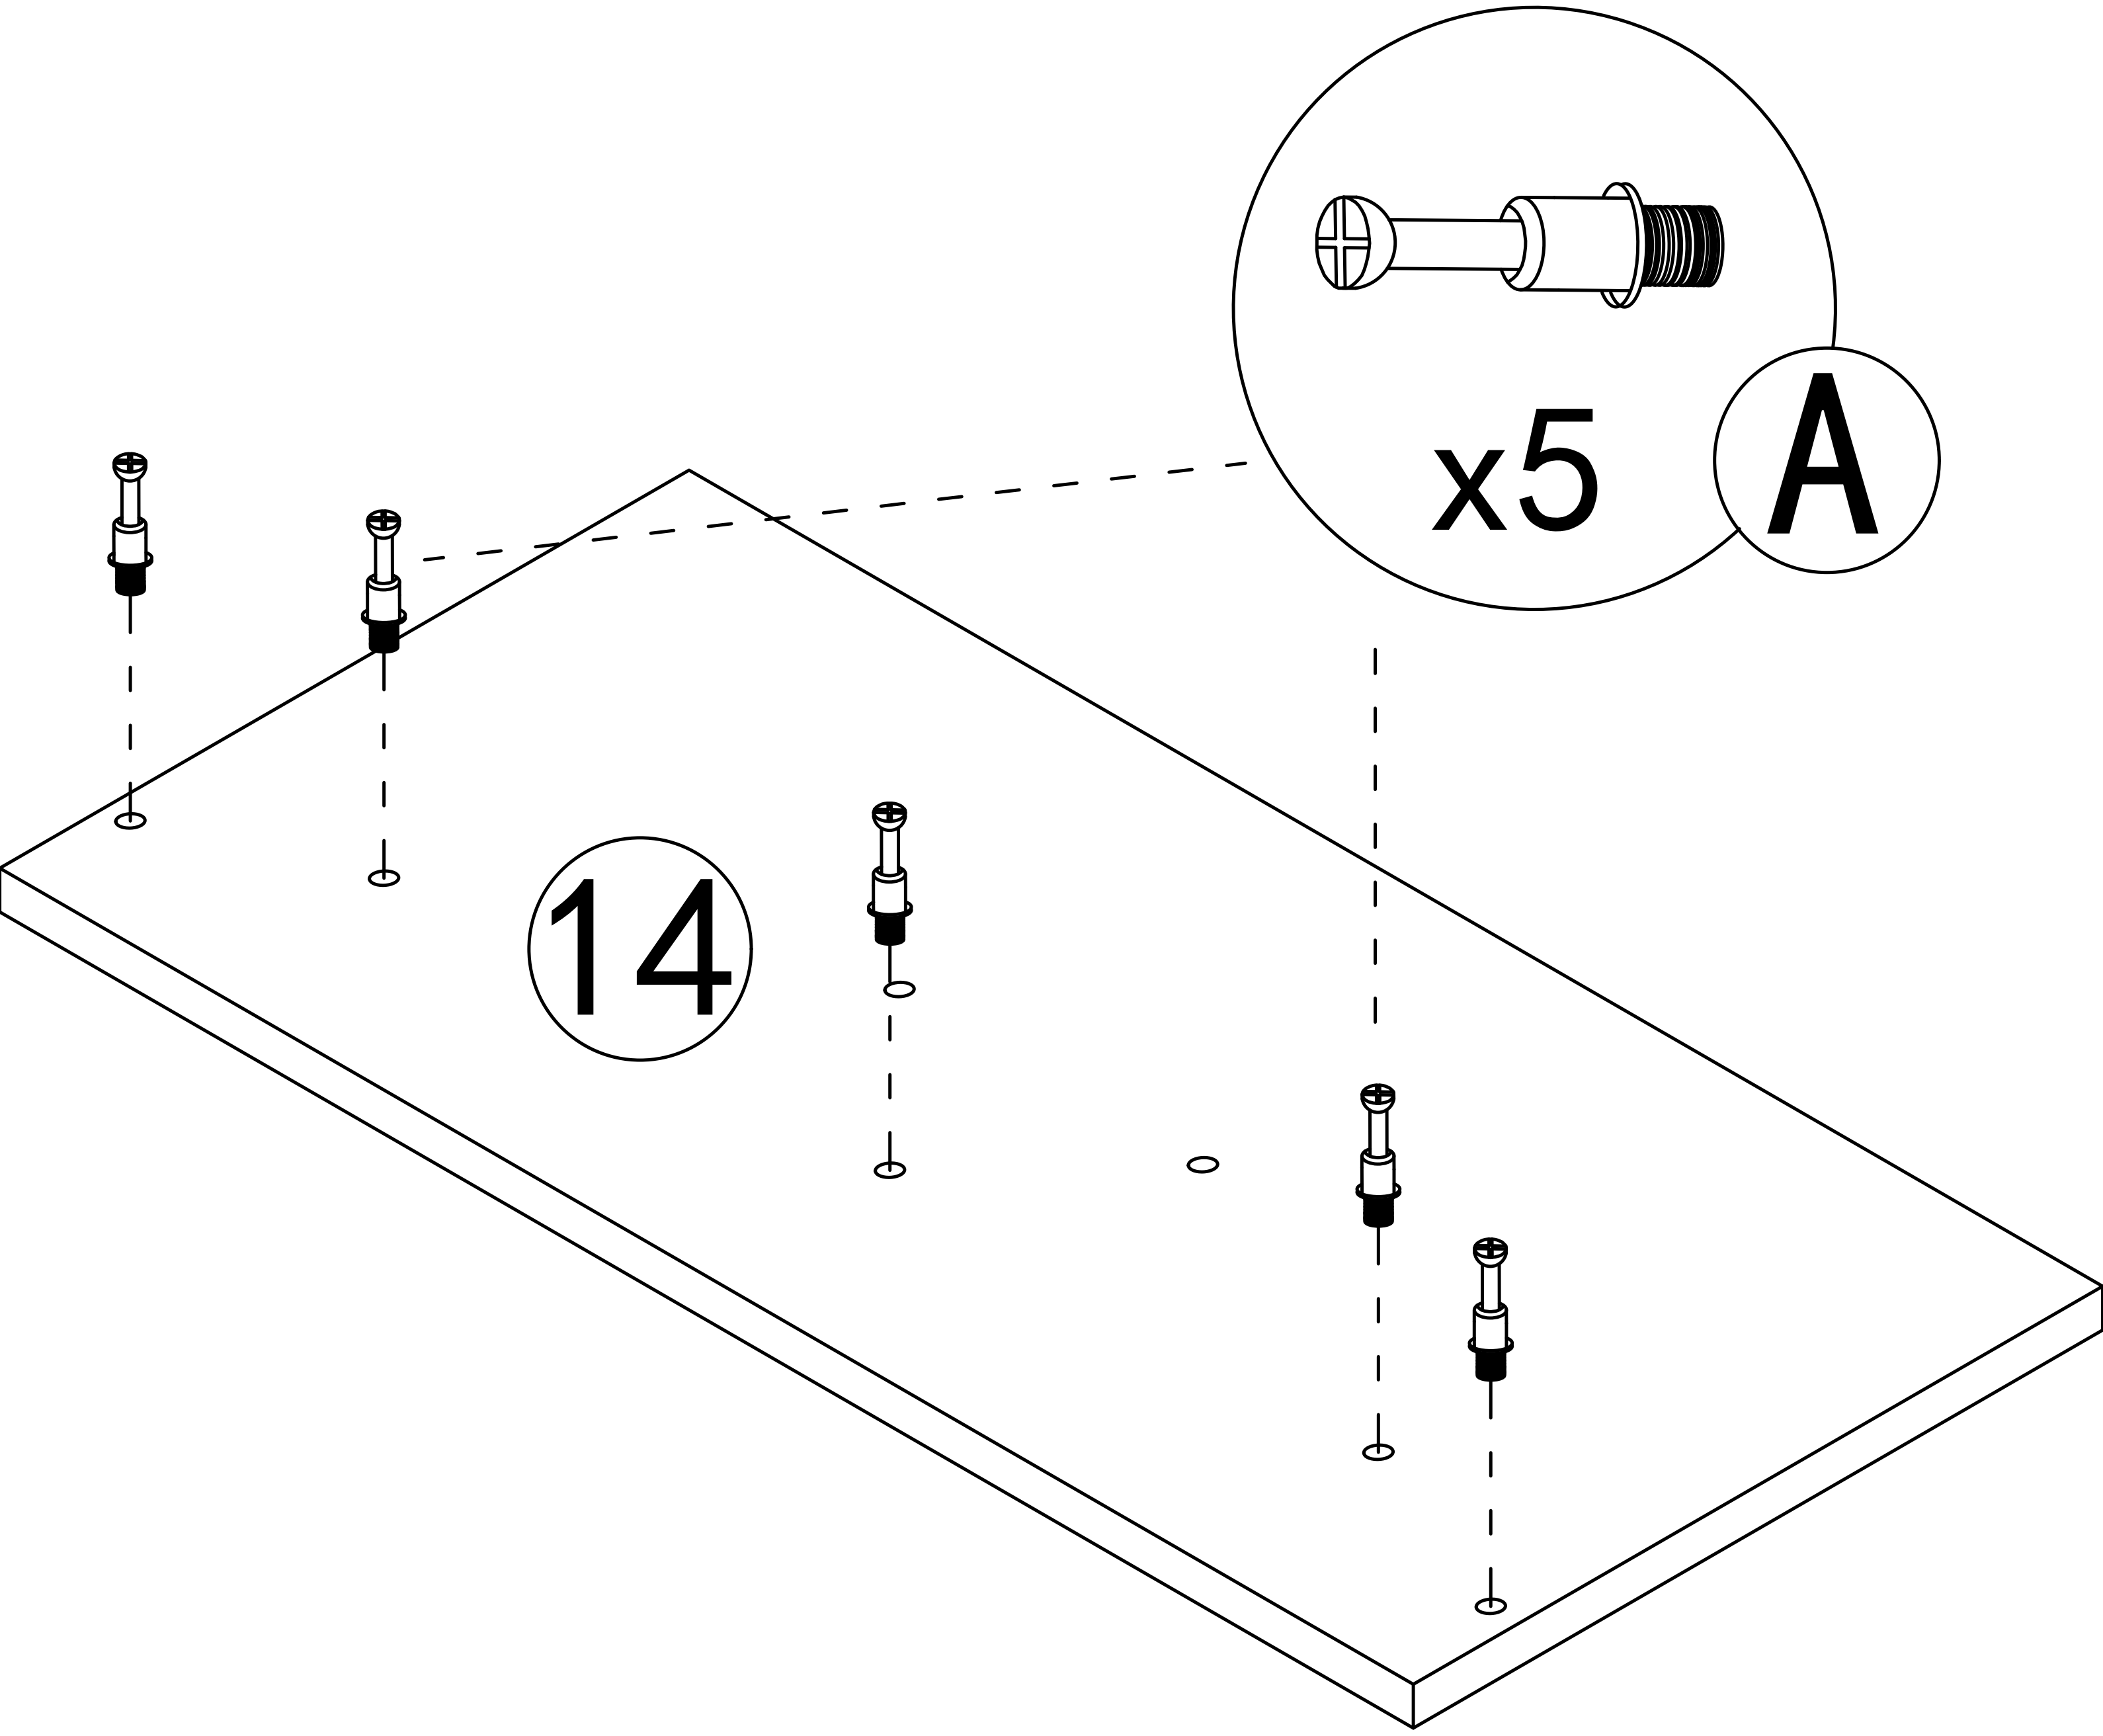


Step 26

B

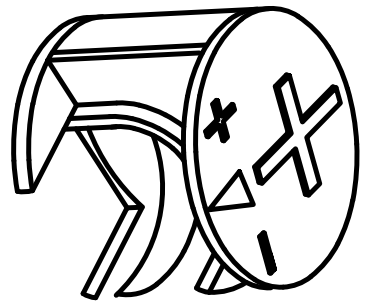


x5

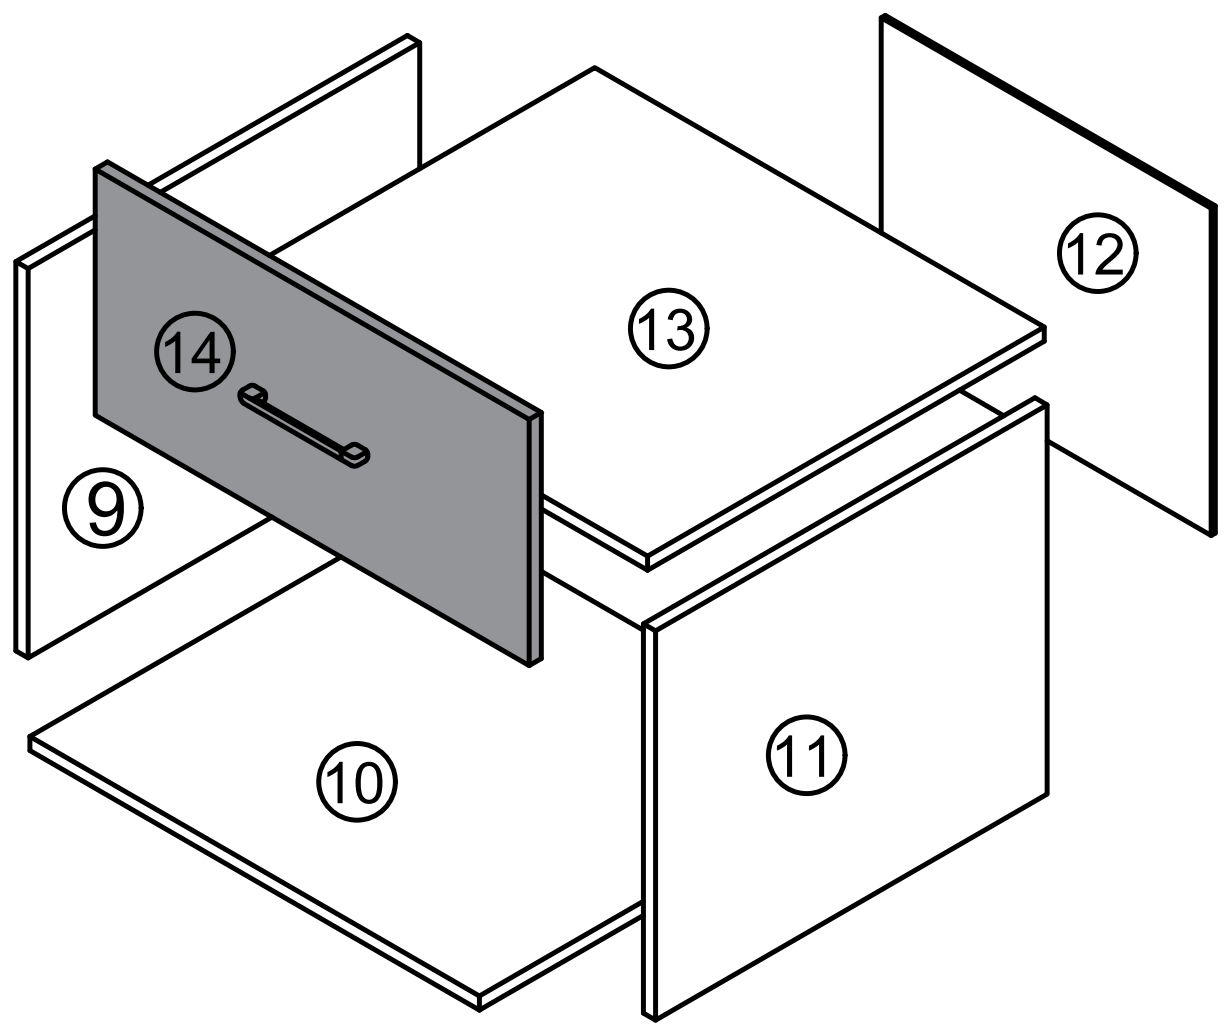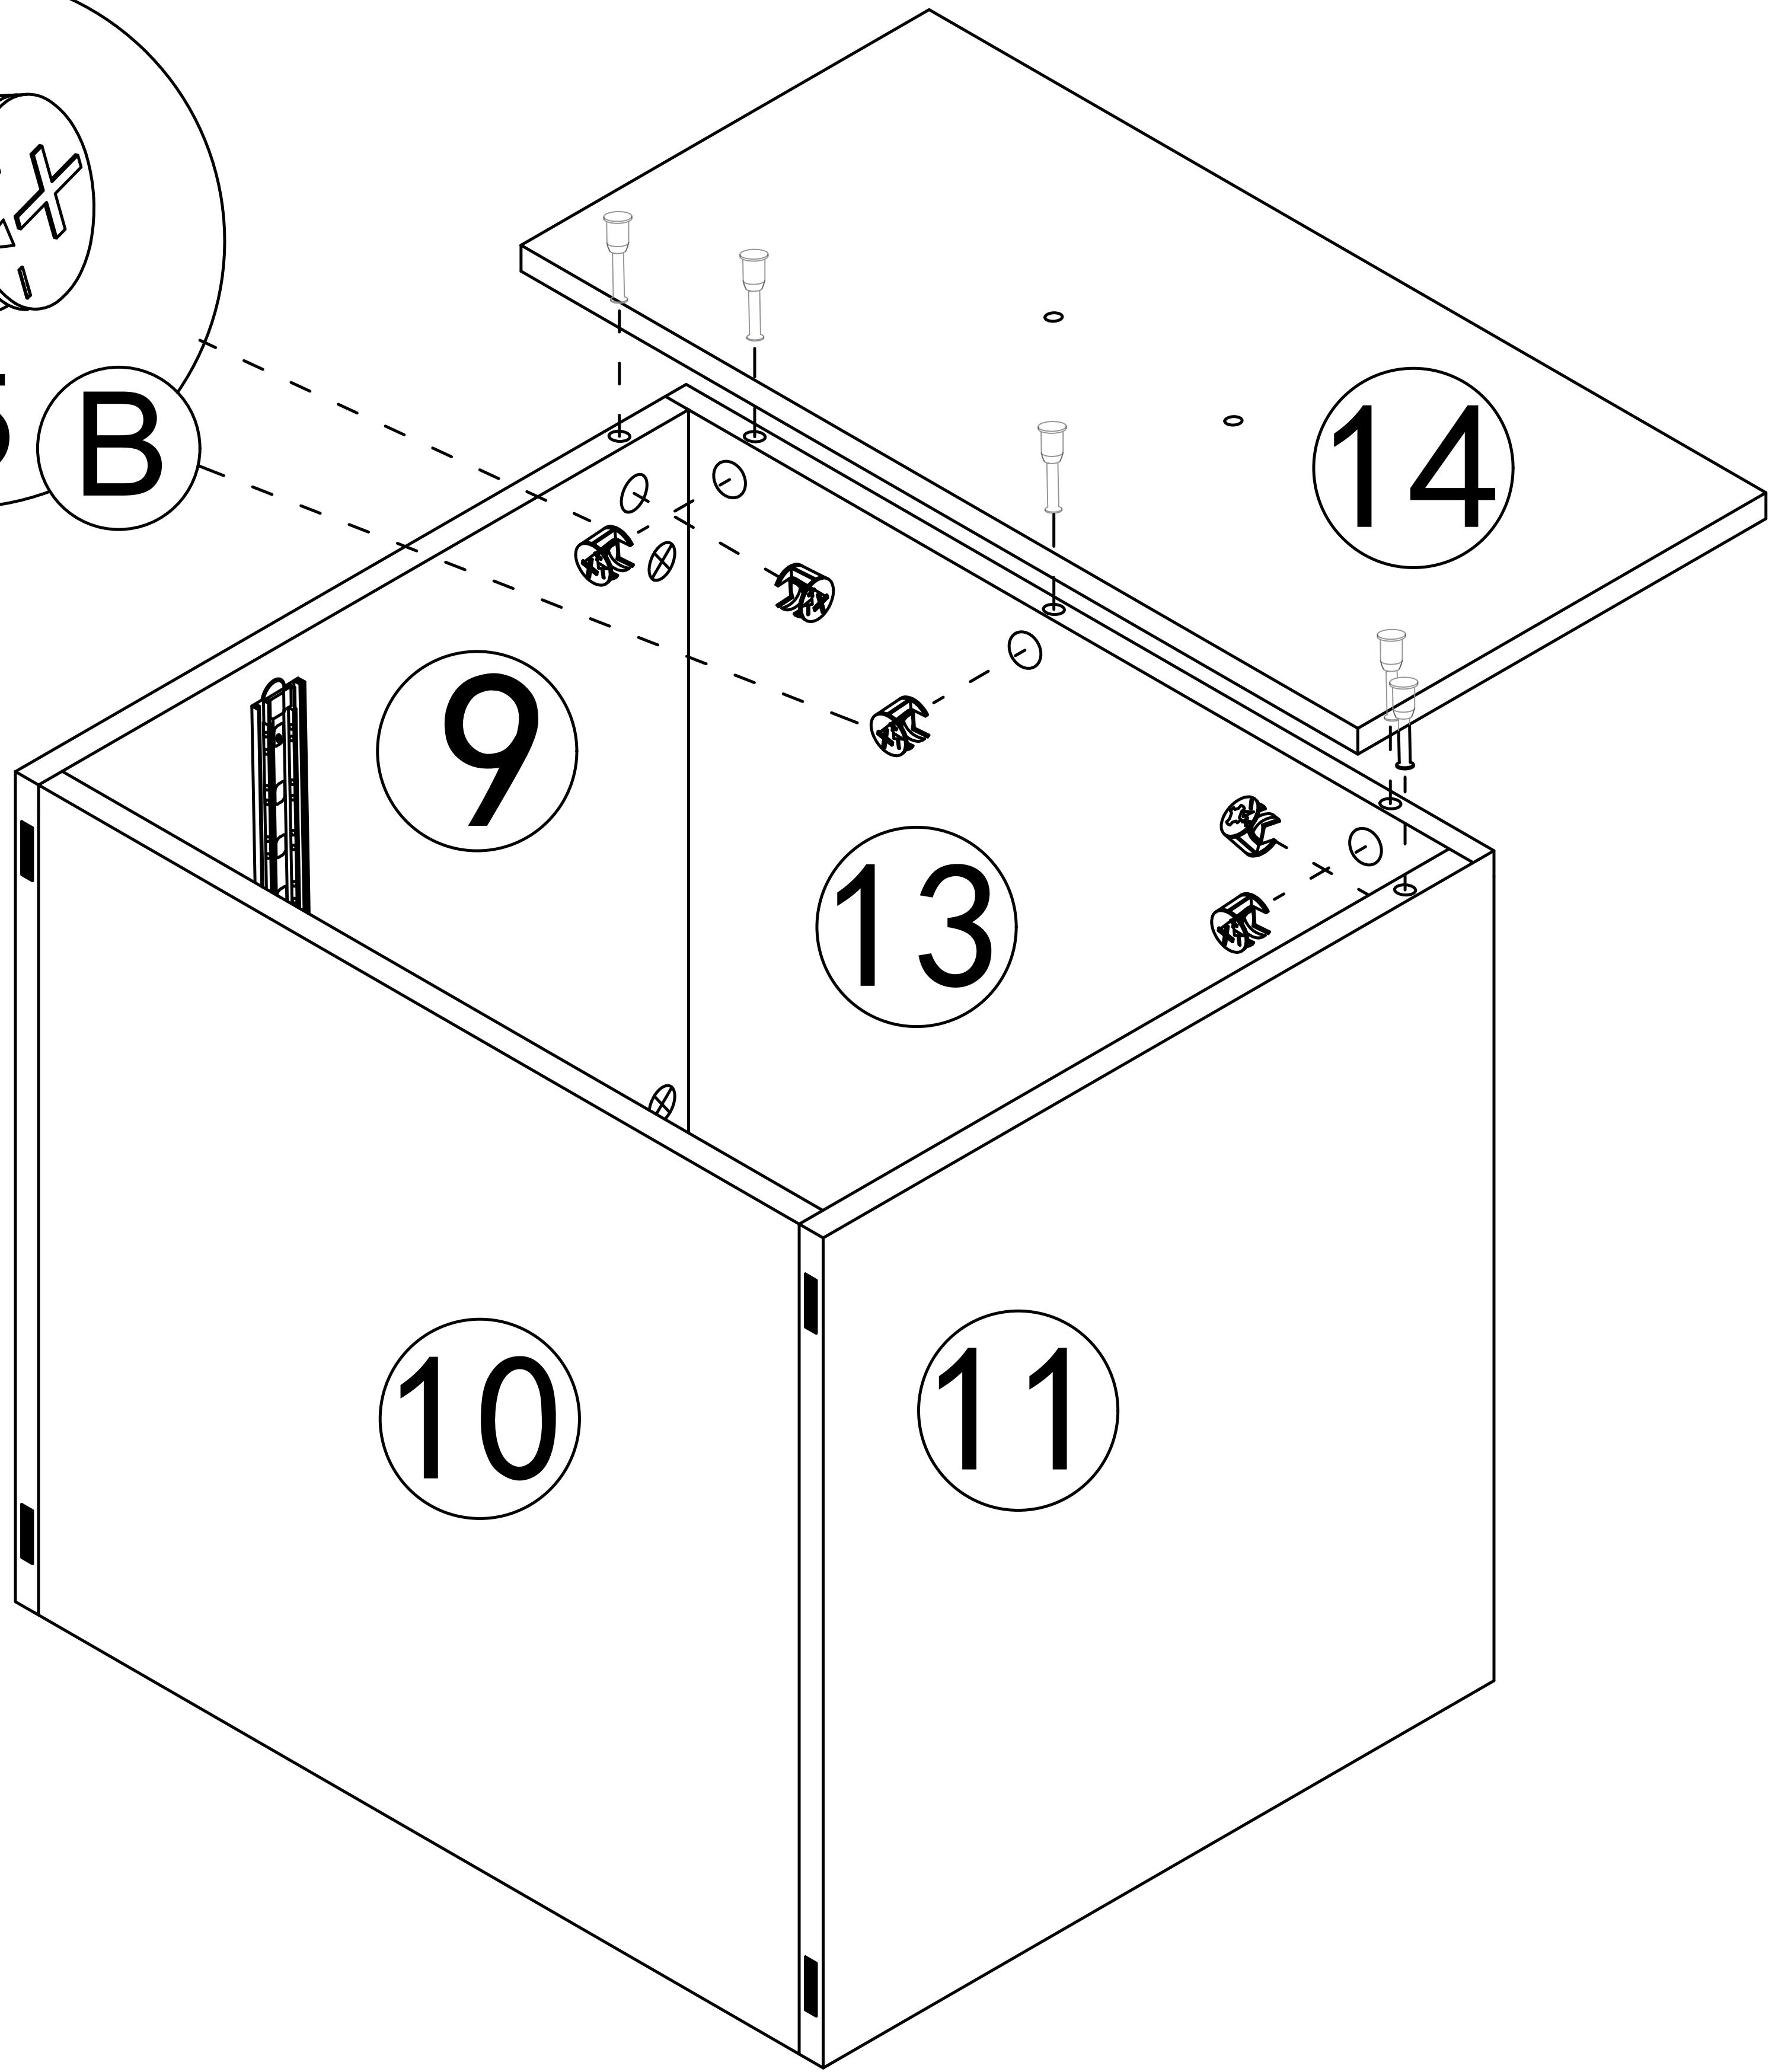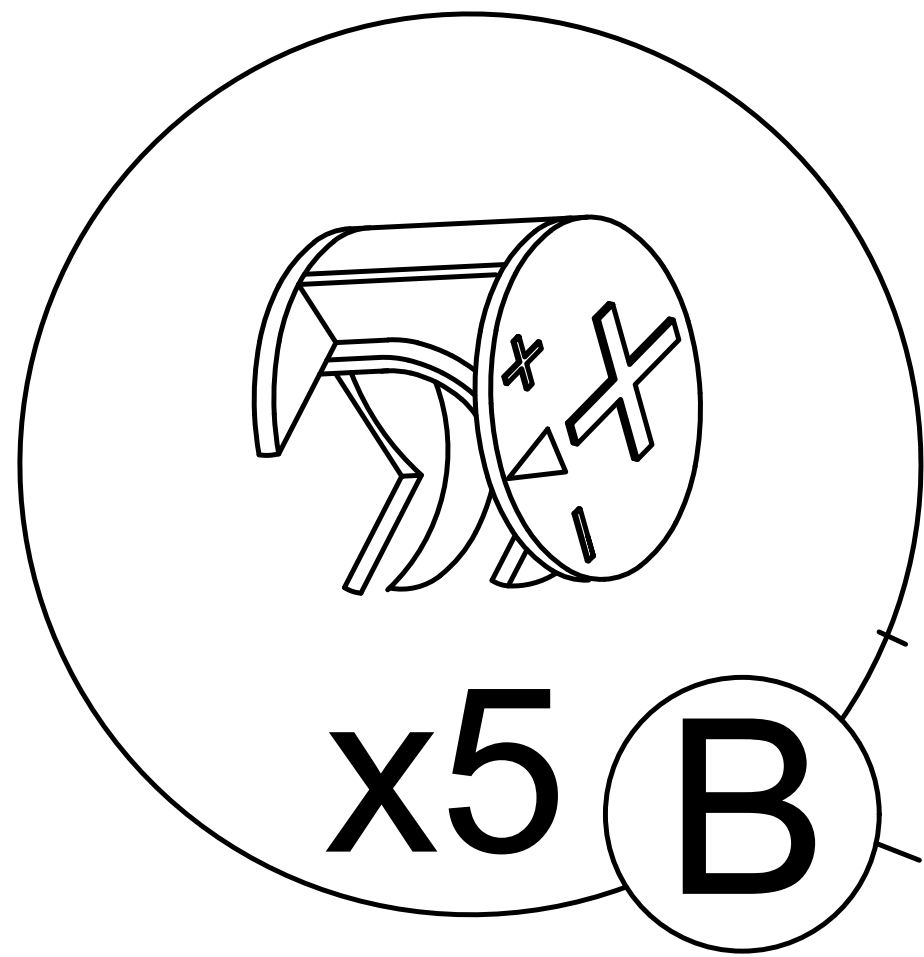


Step 27


D

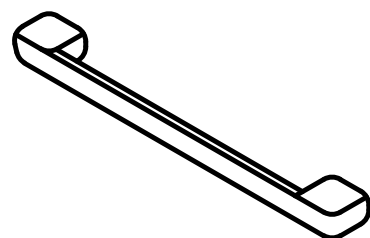



x1

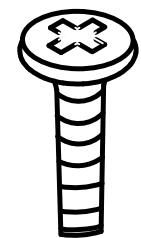

x2

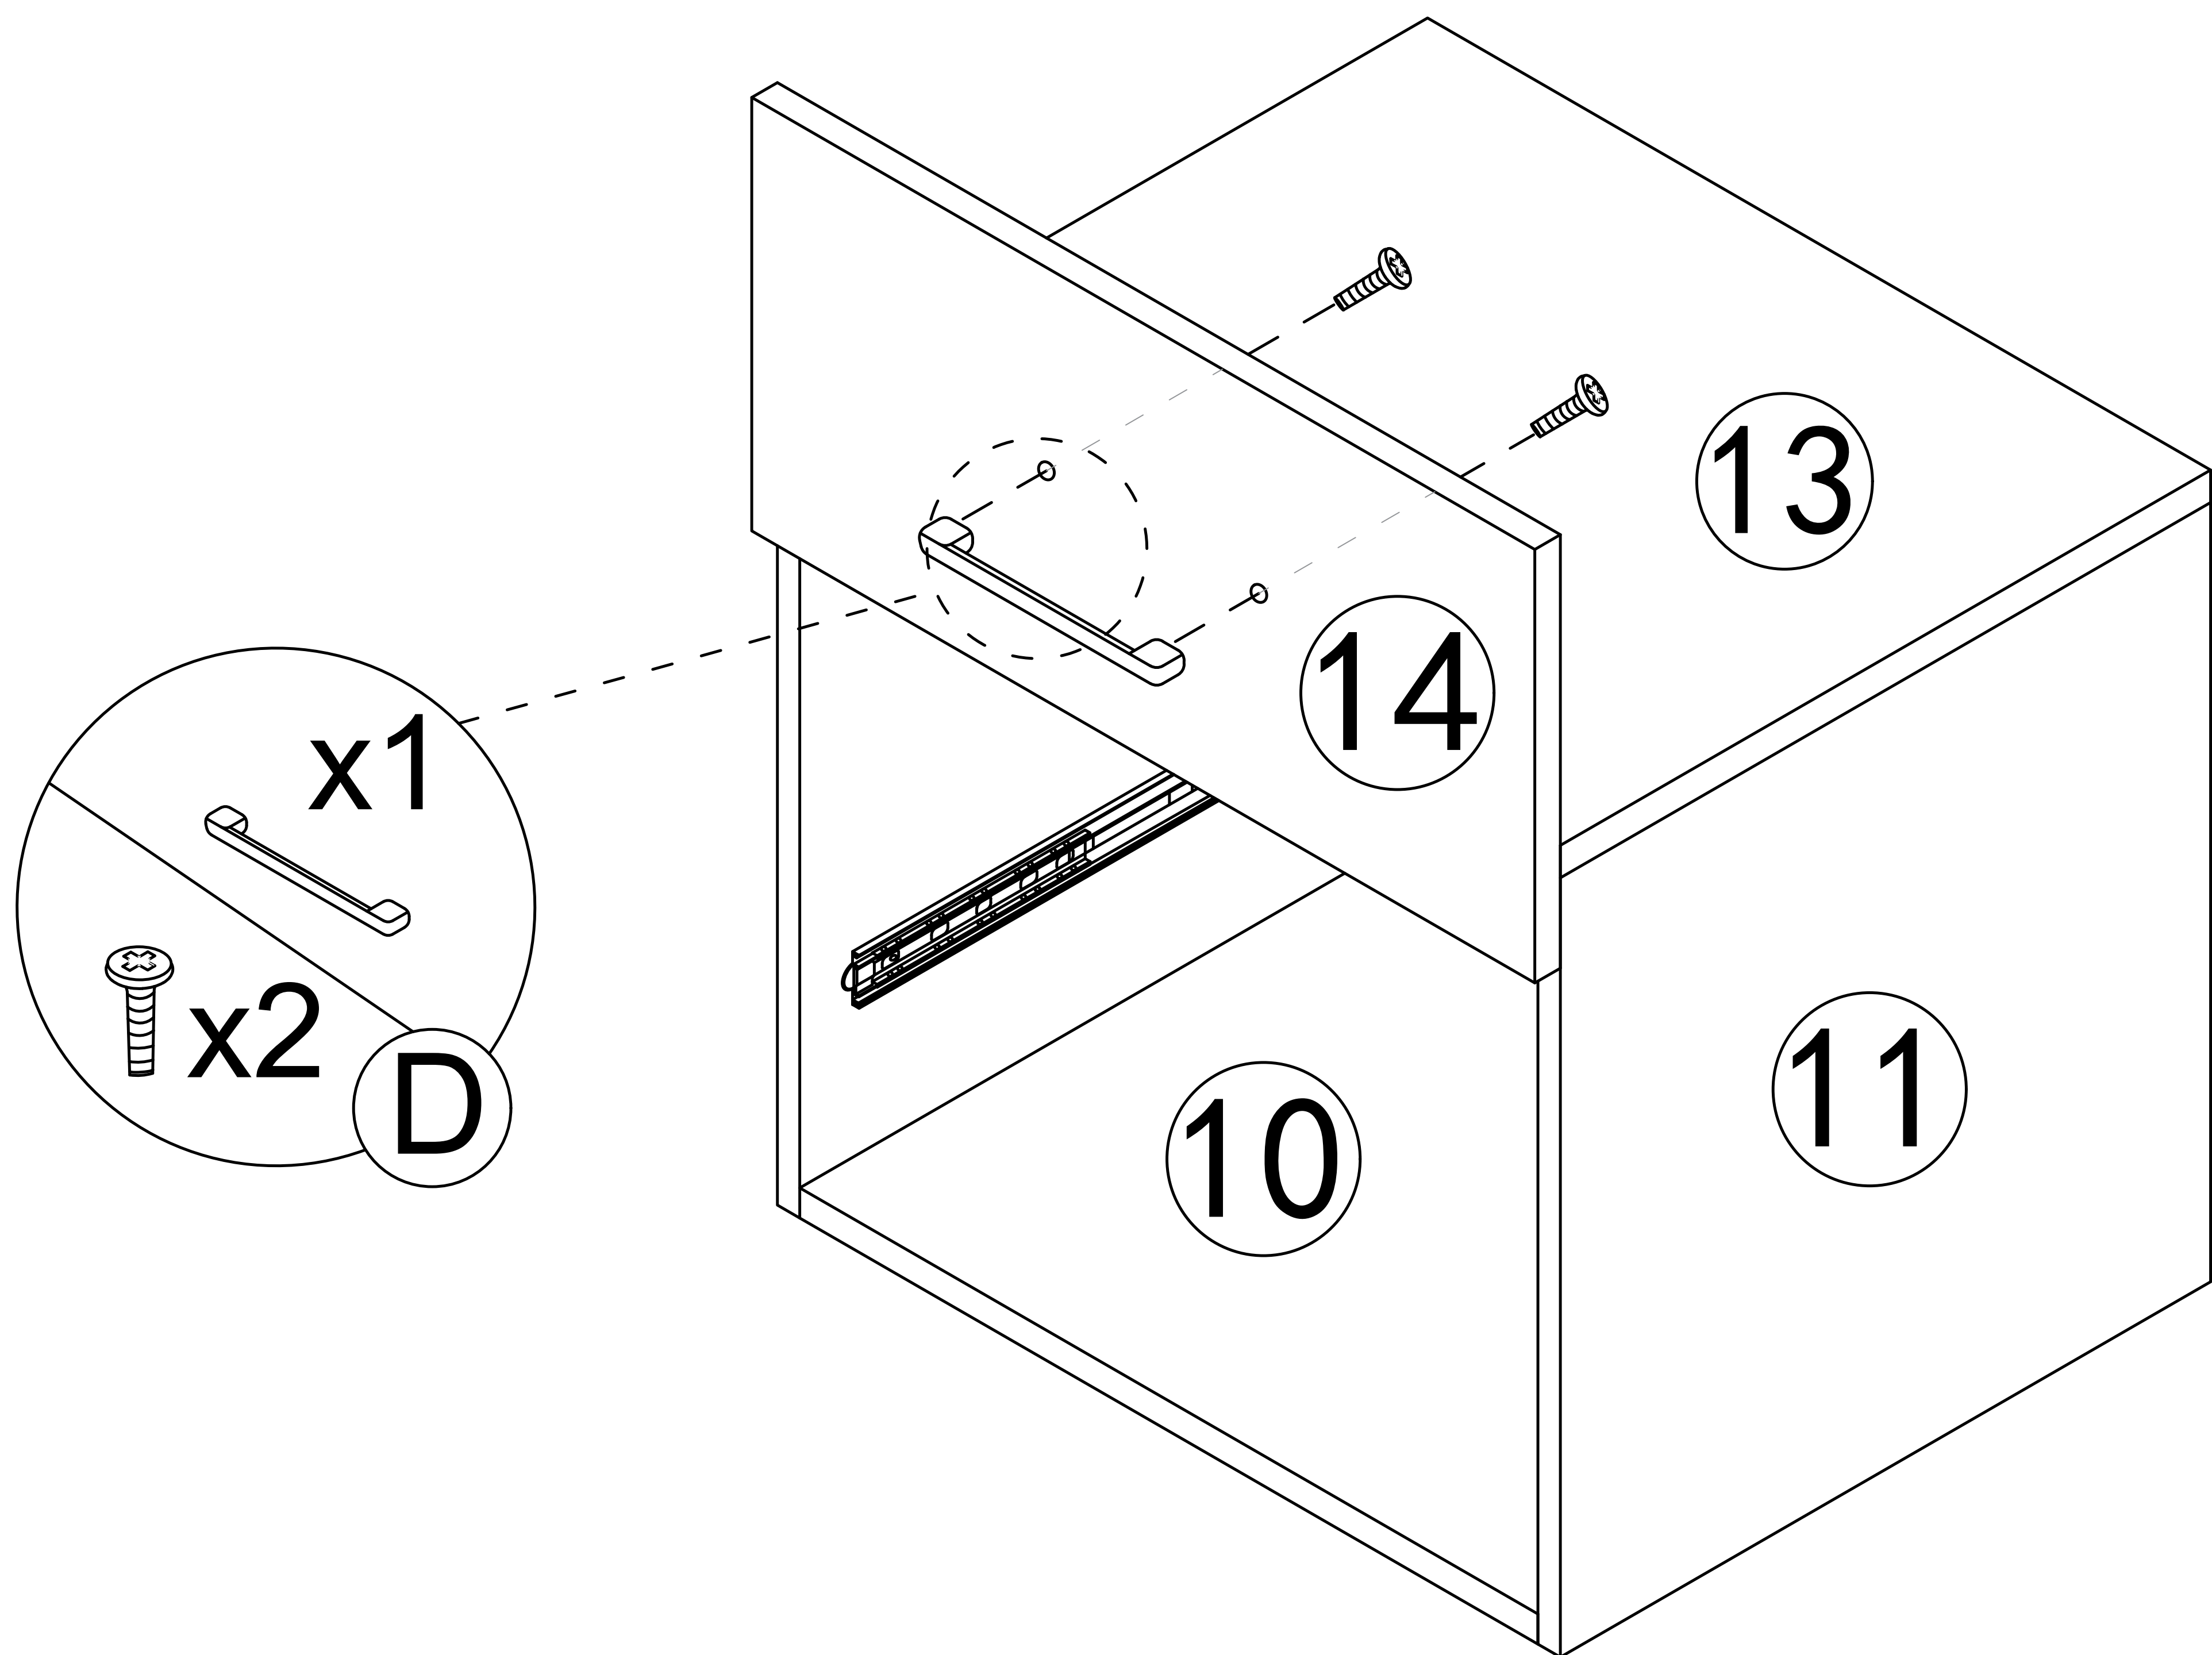


Step 28

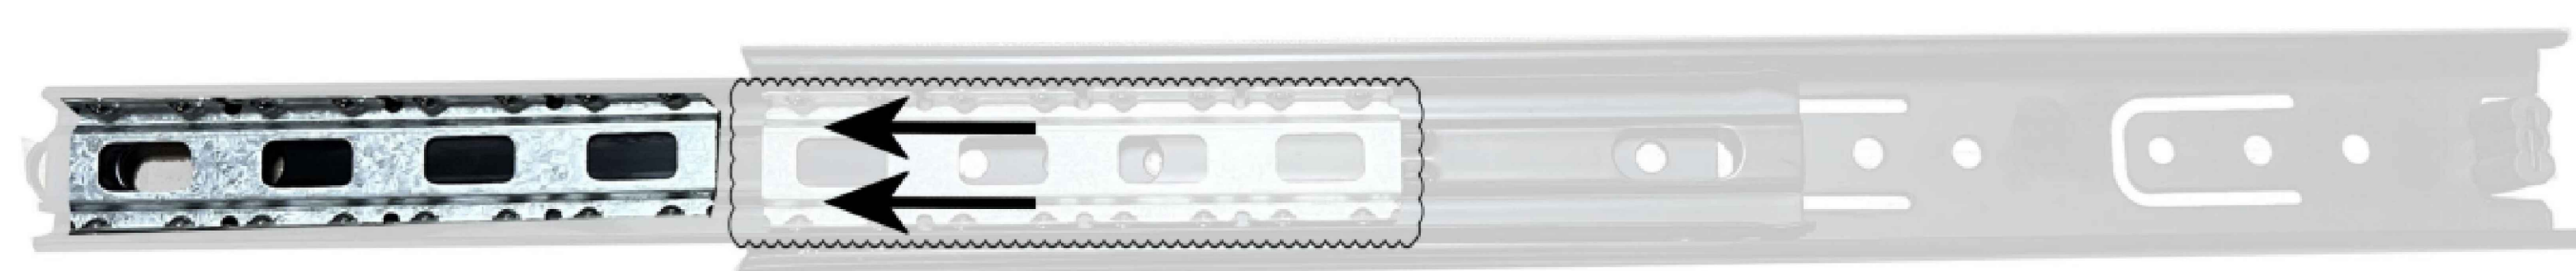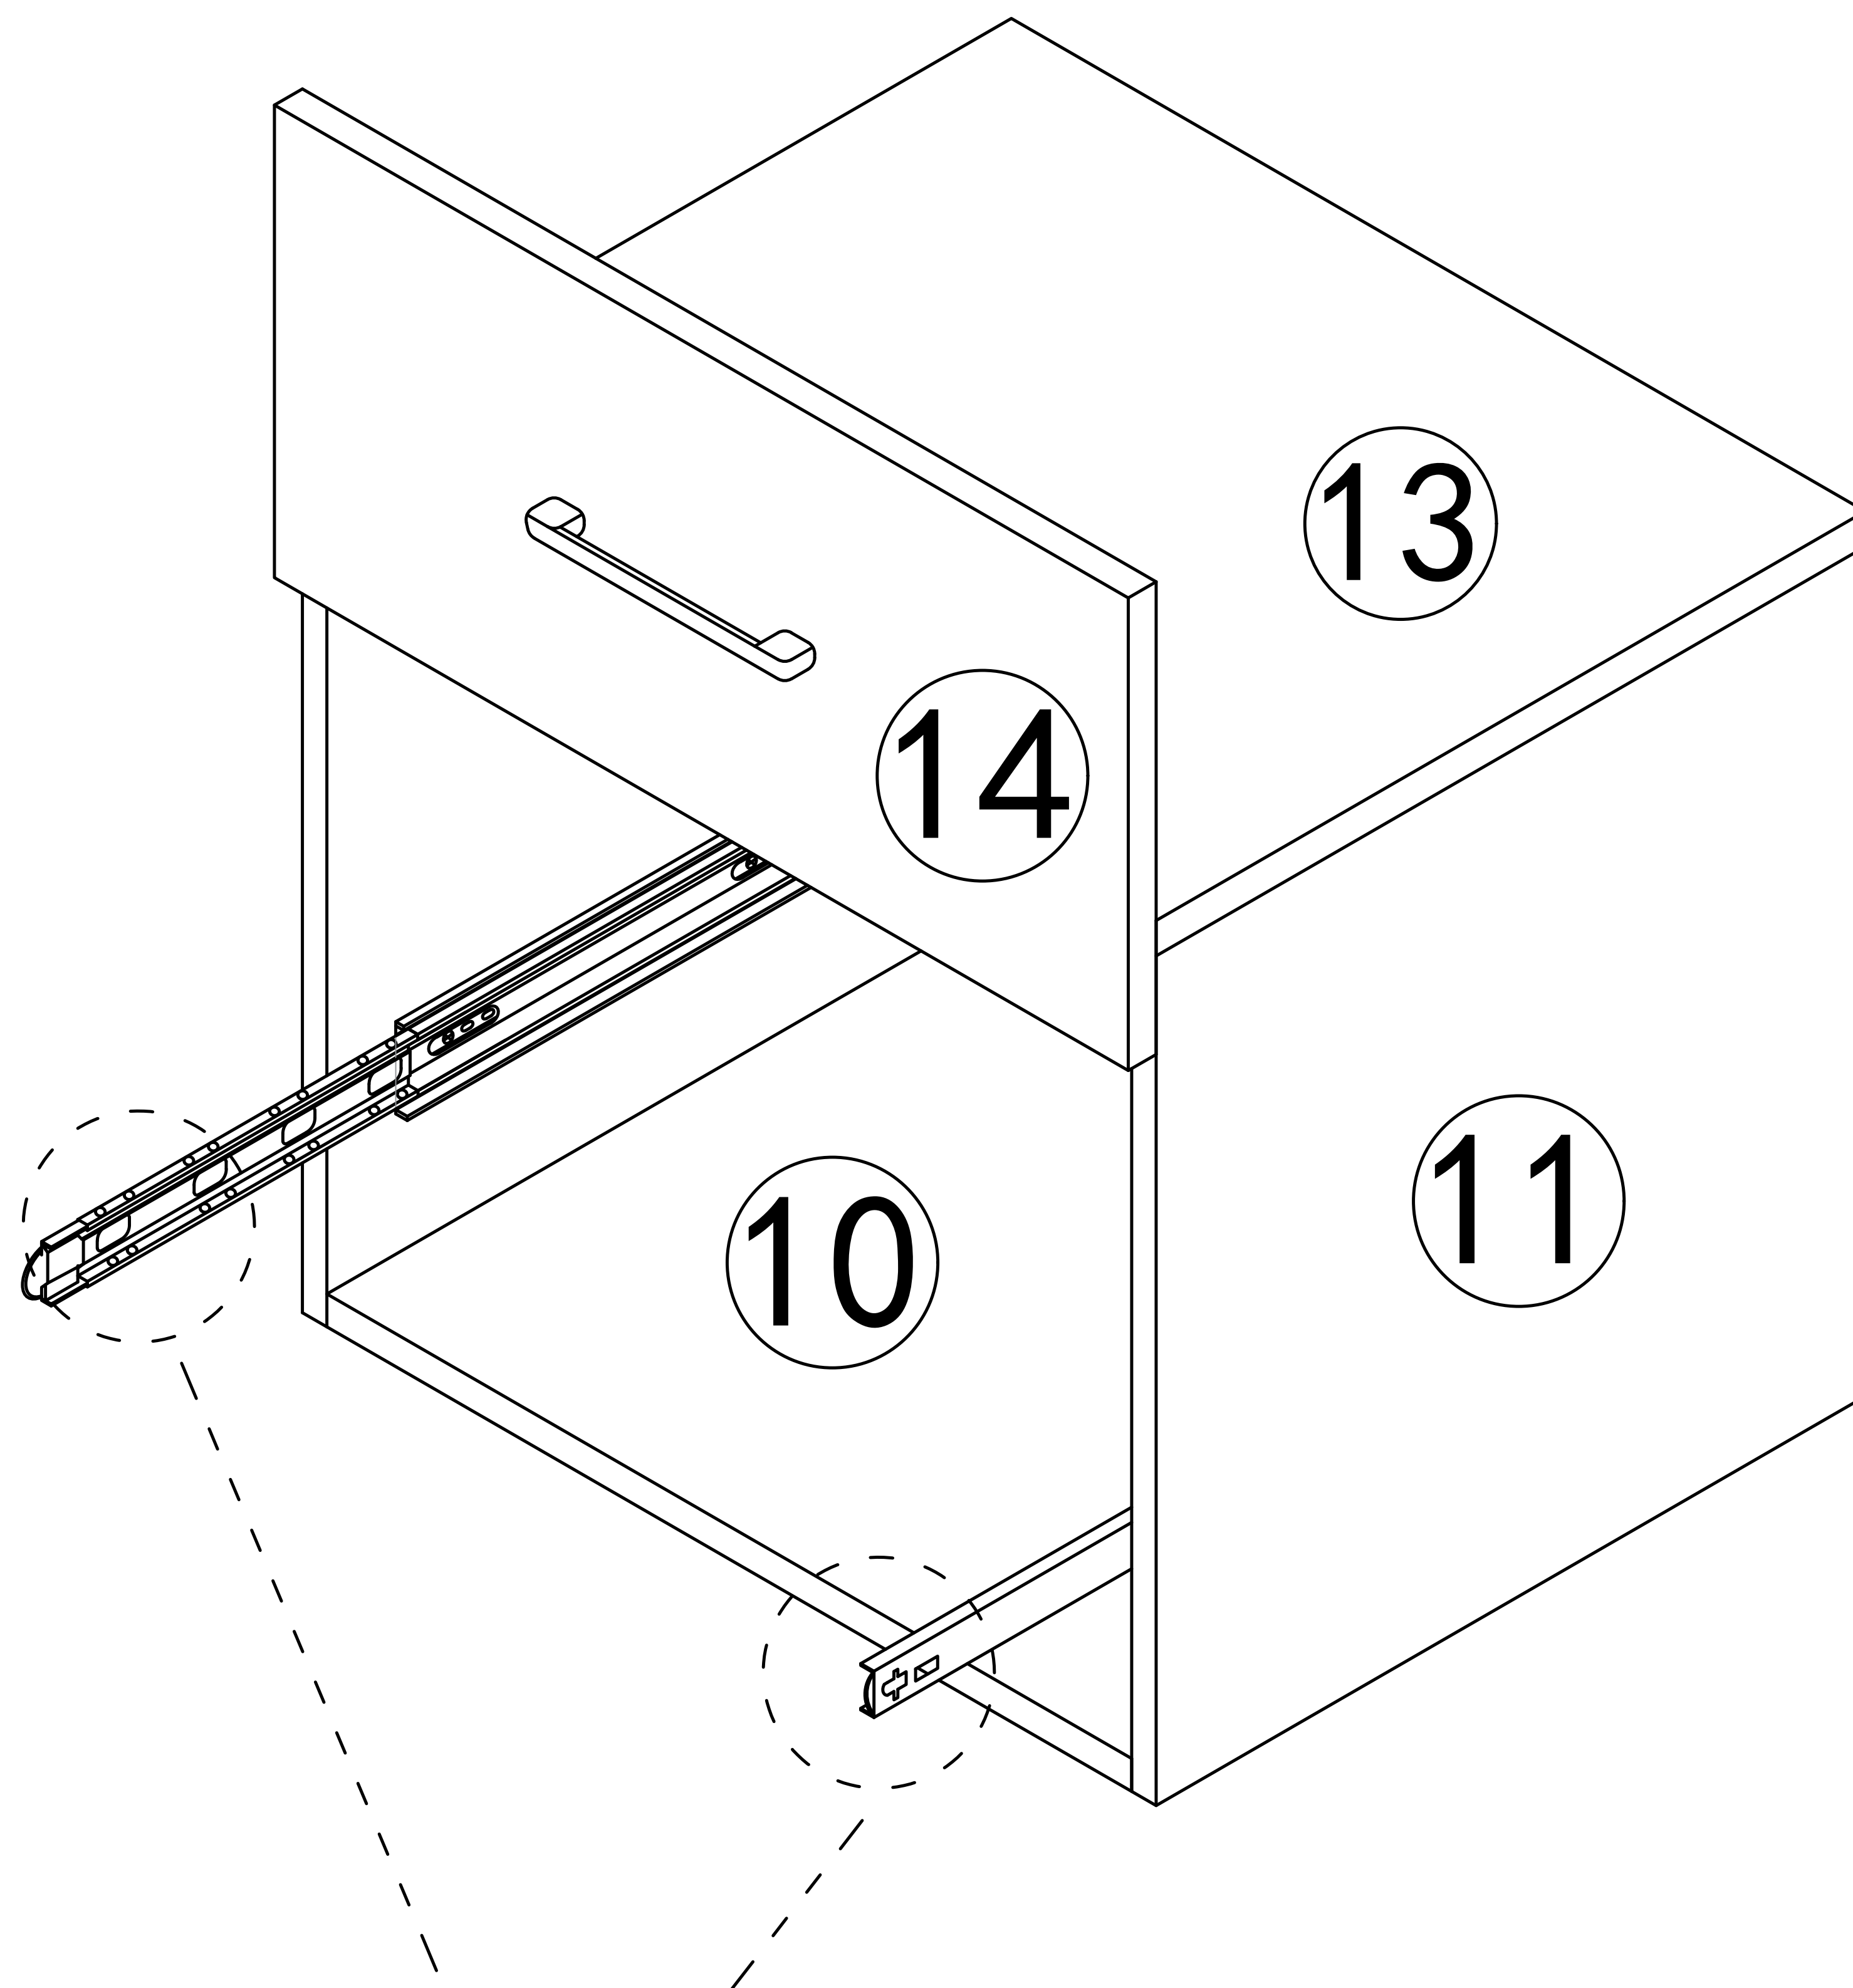


As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

Step 29

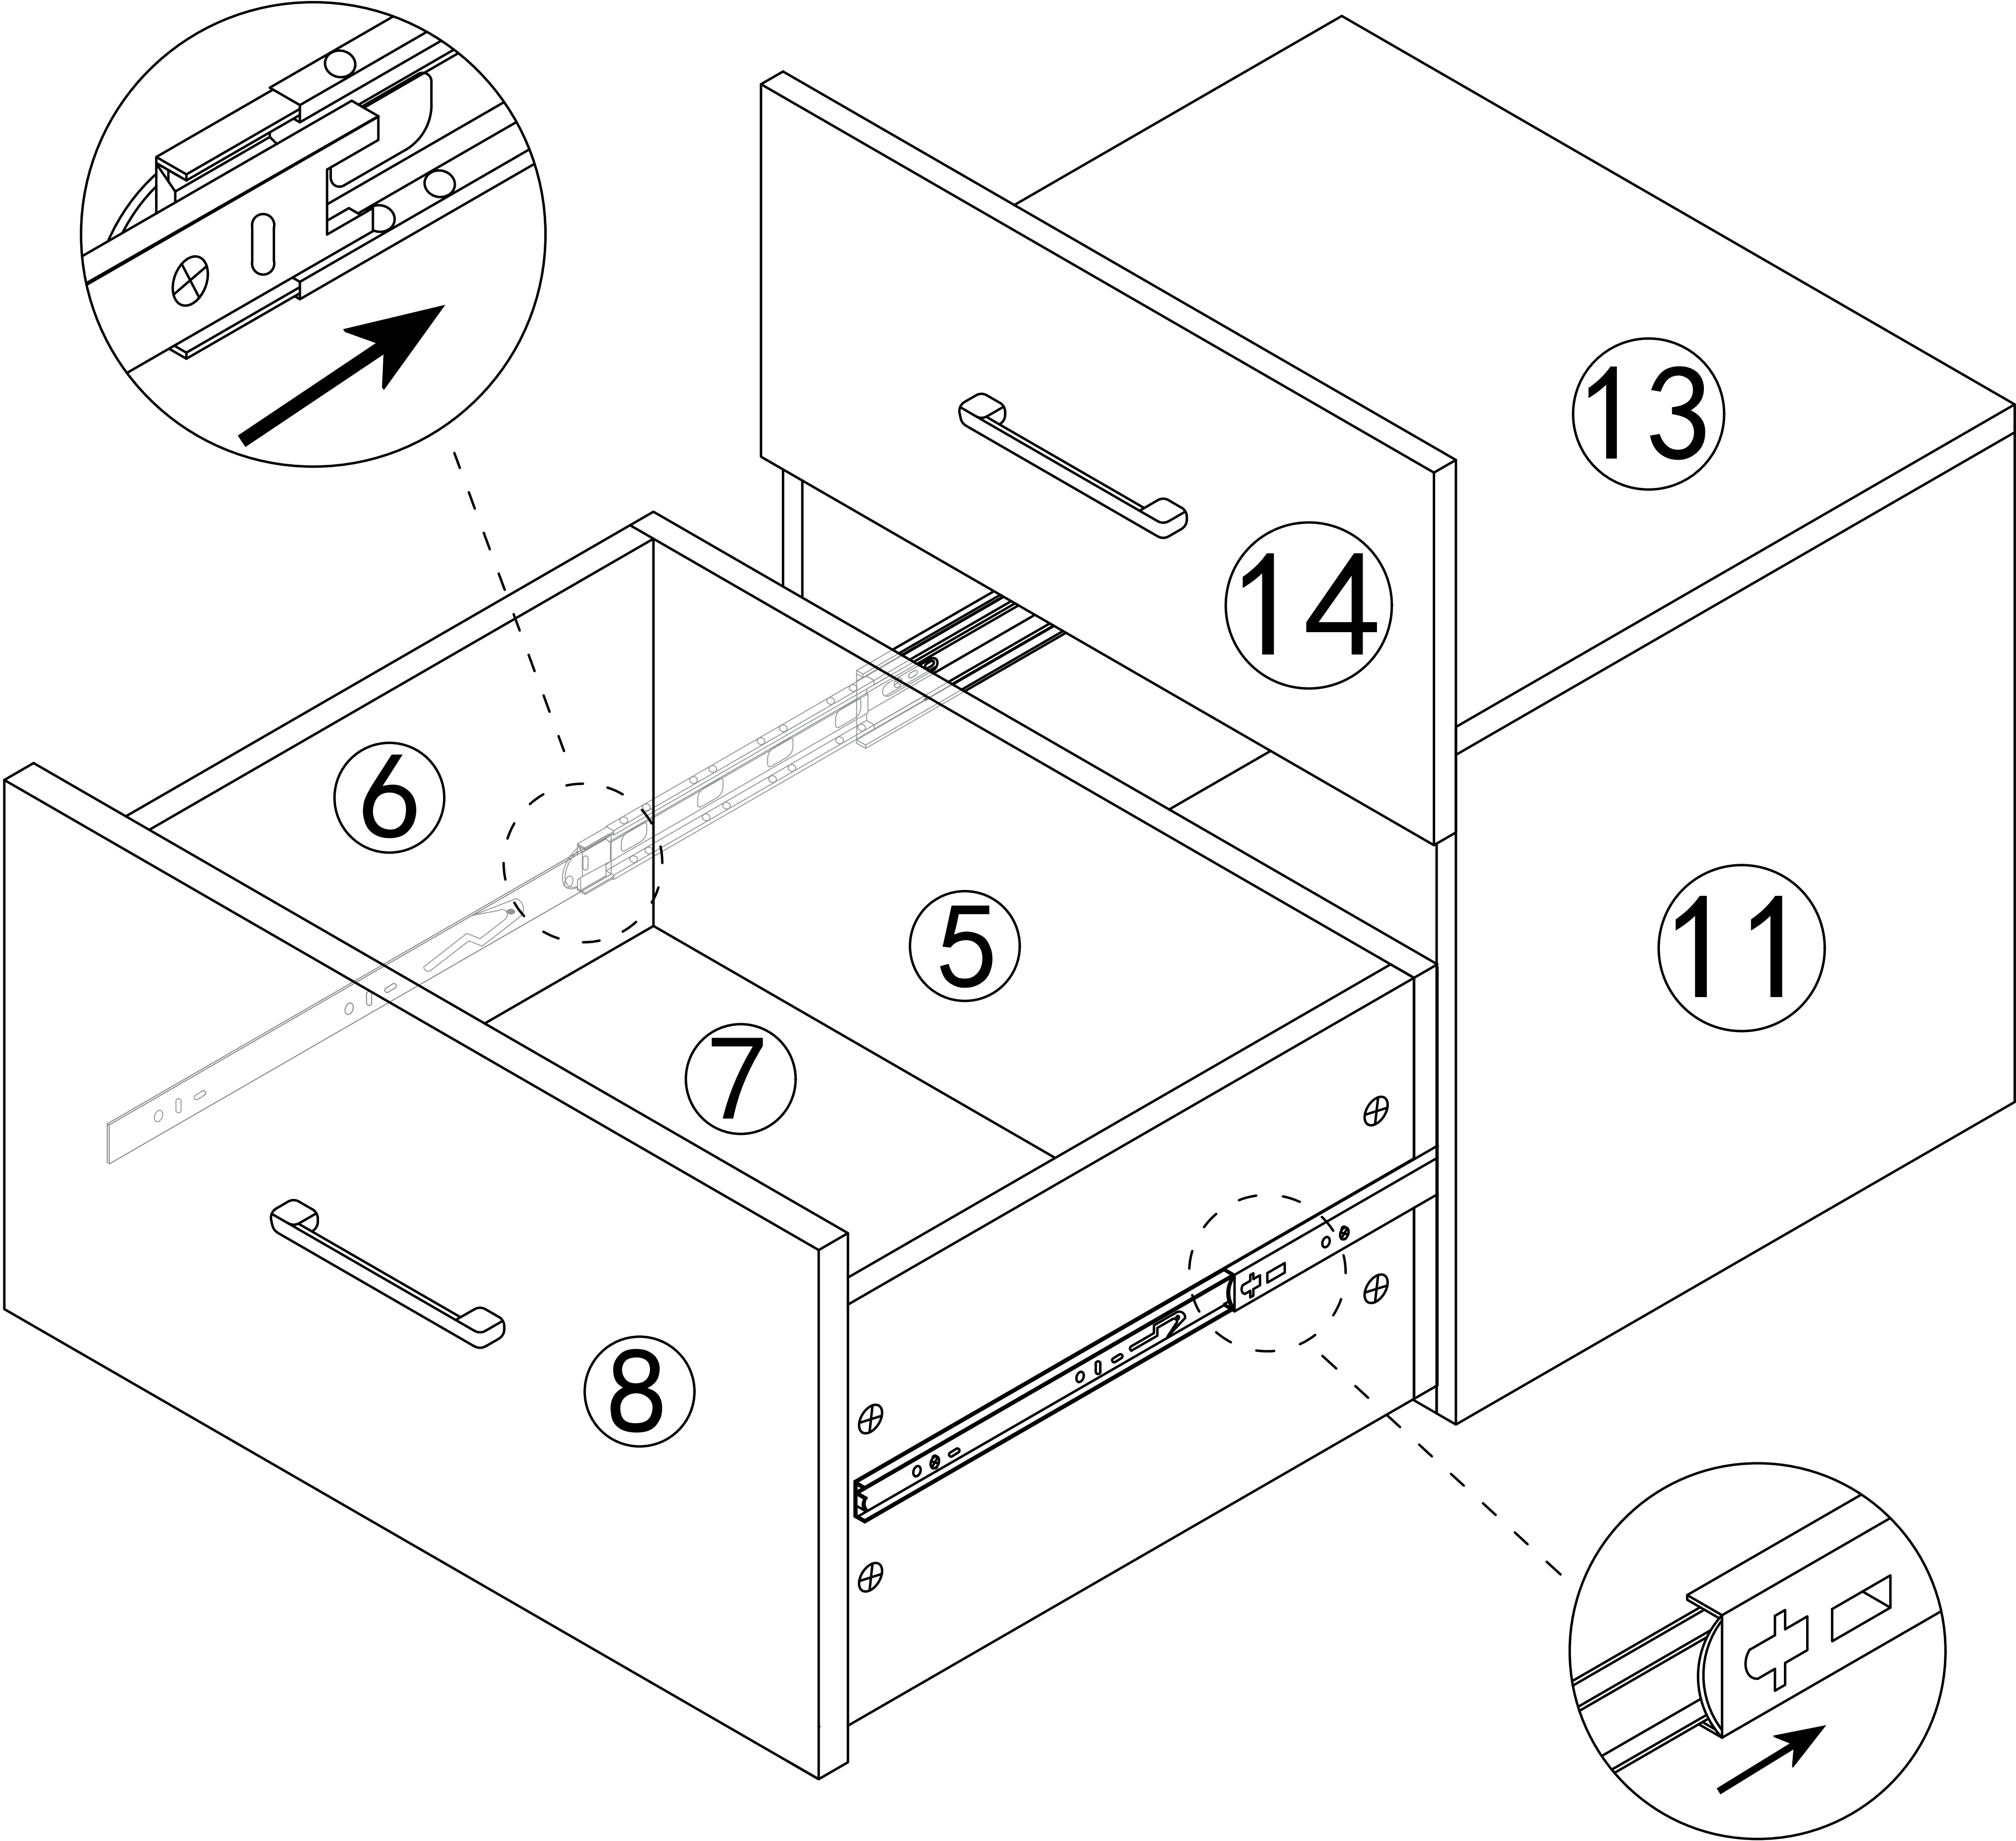



Step 30

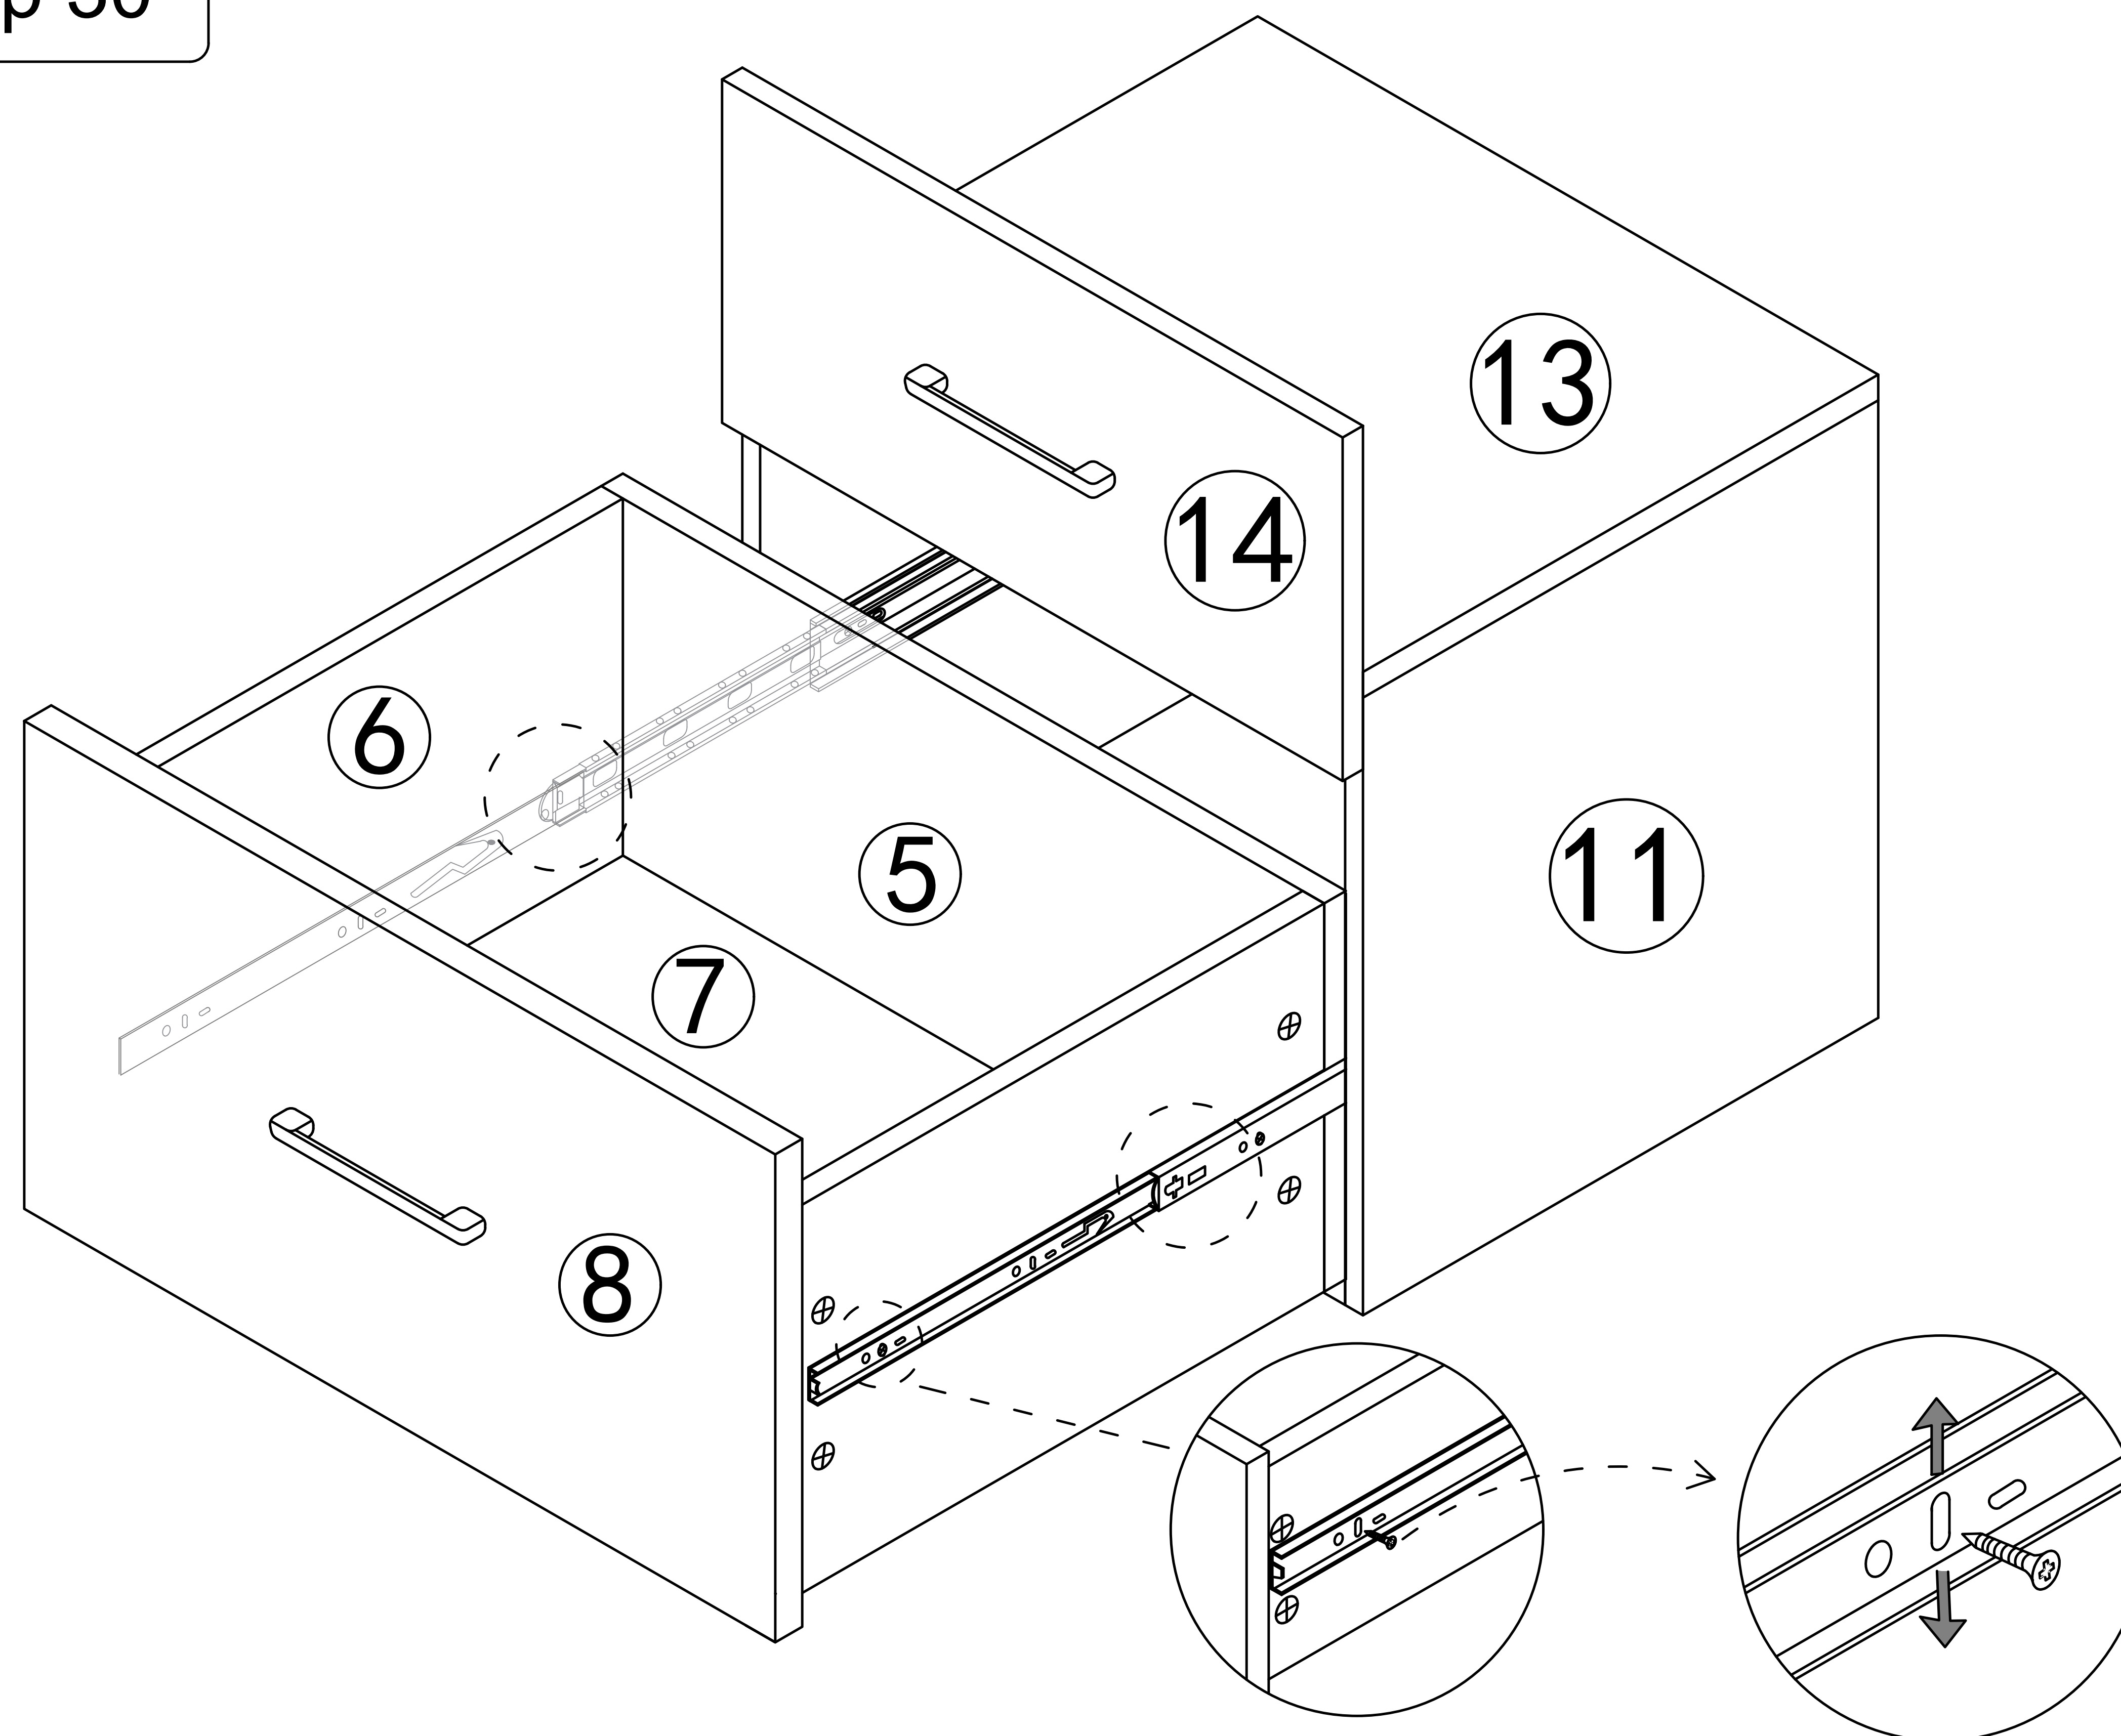



If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 31

K

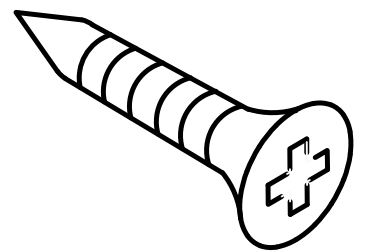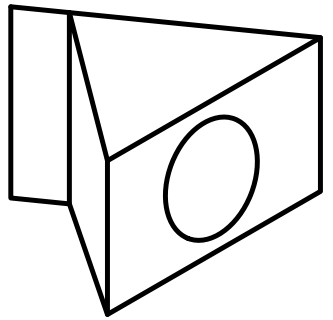


x4

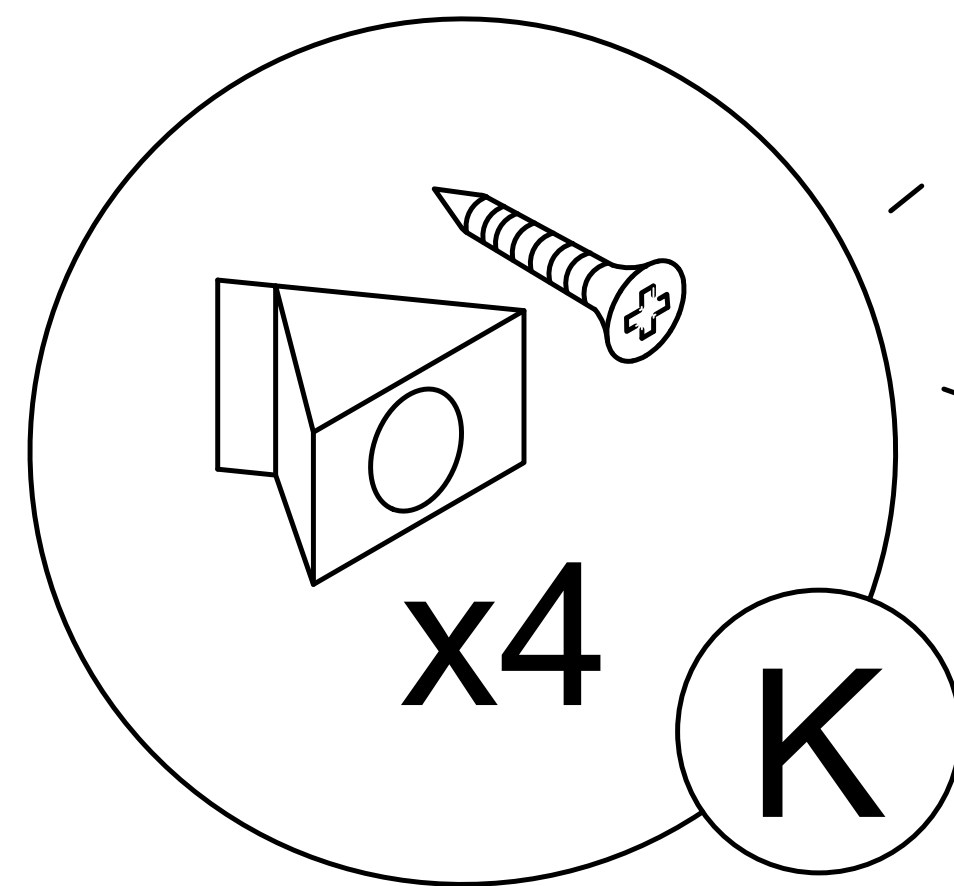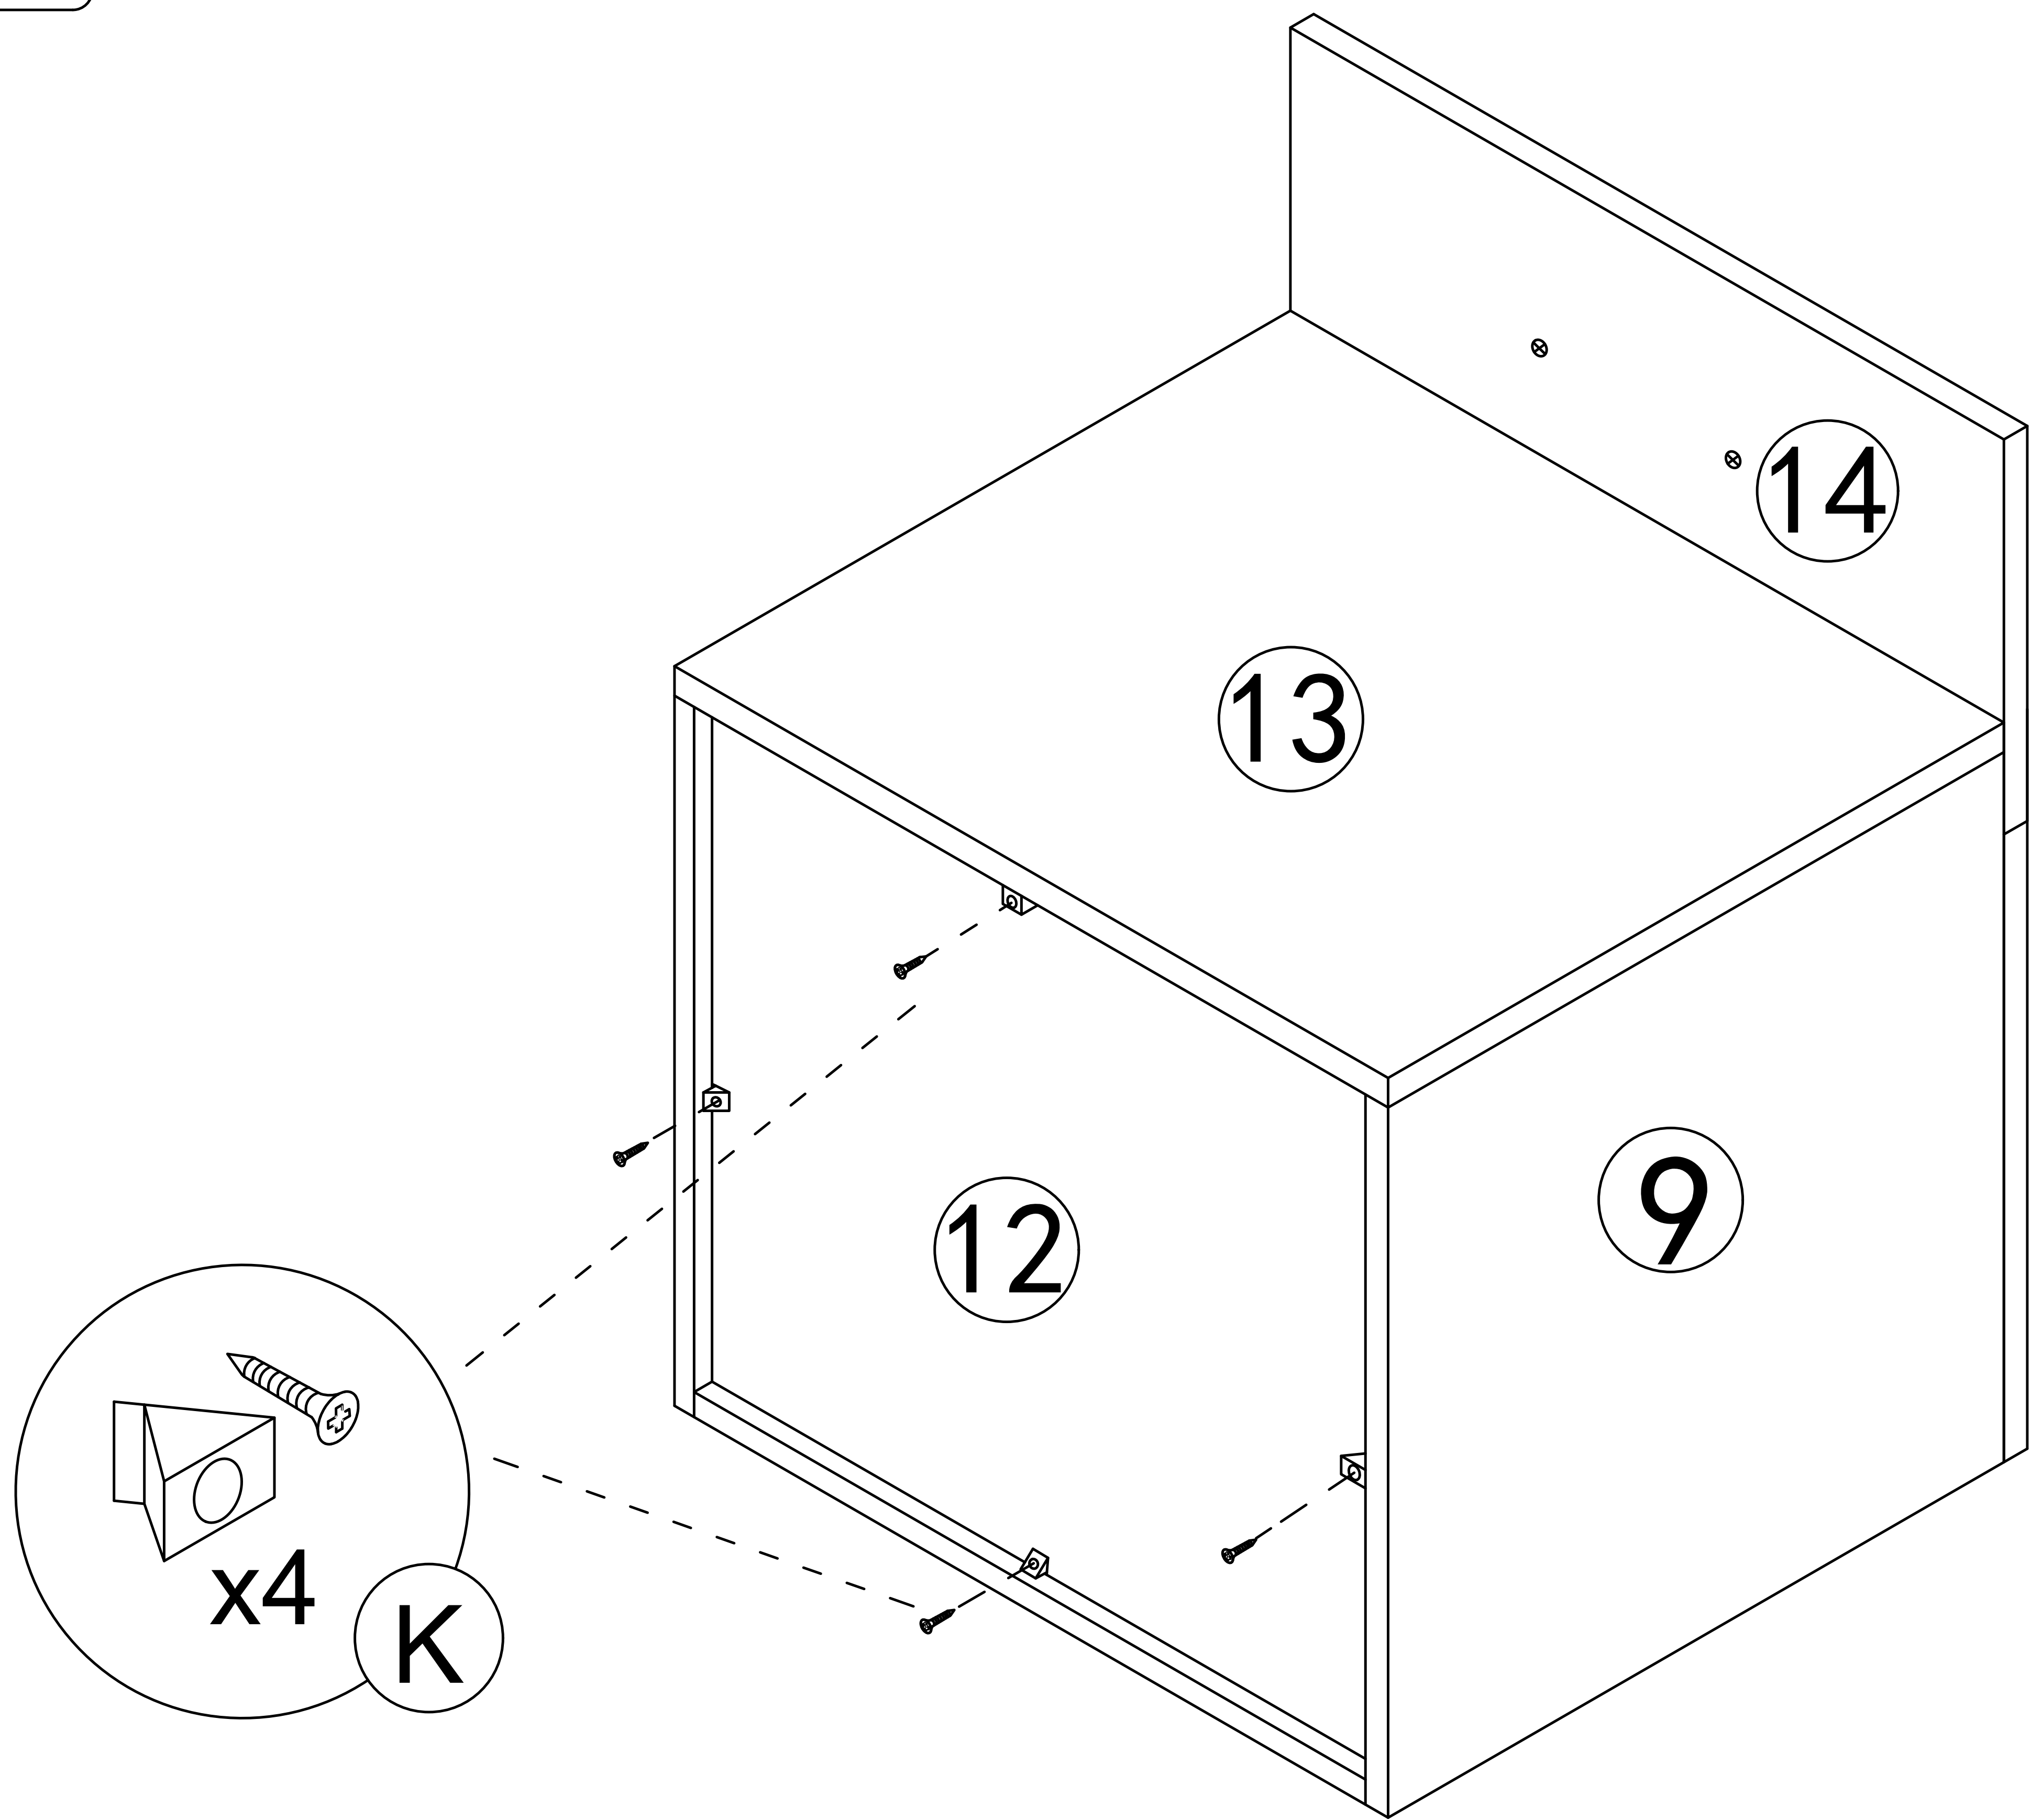


Step 32

N

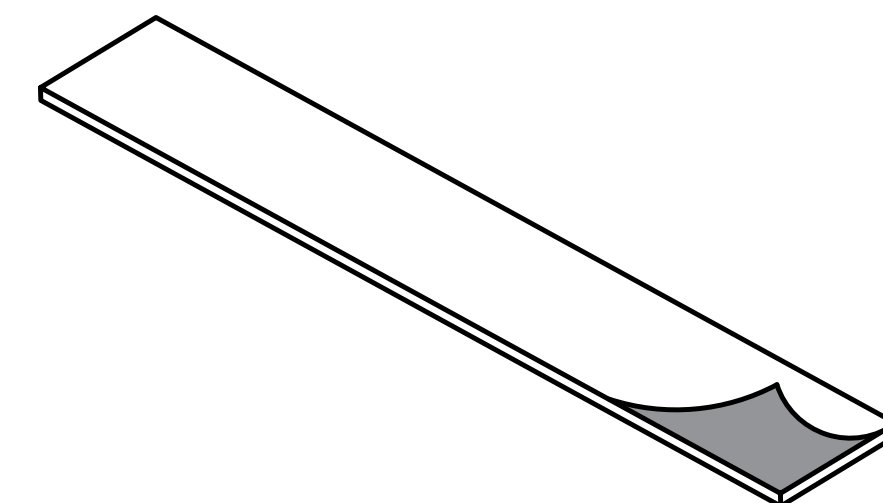



x2

Apply double-sided tape under the seat cushion to prevent it from moving



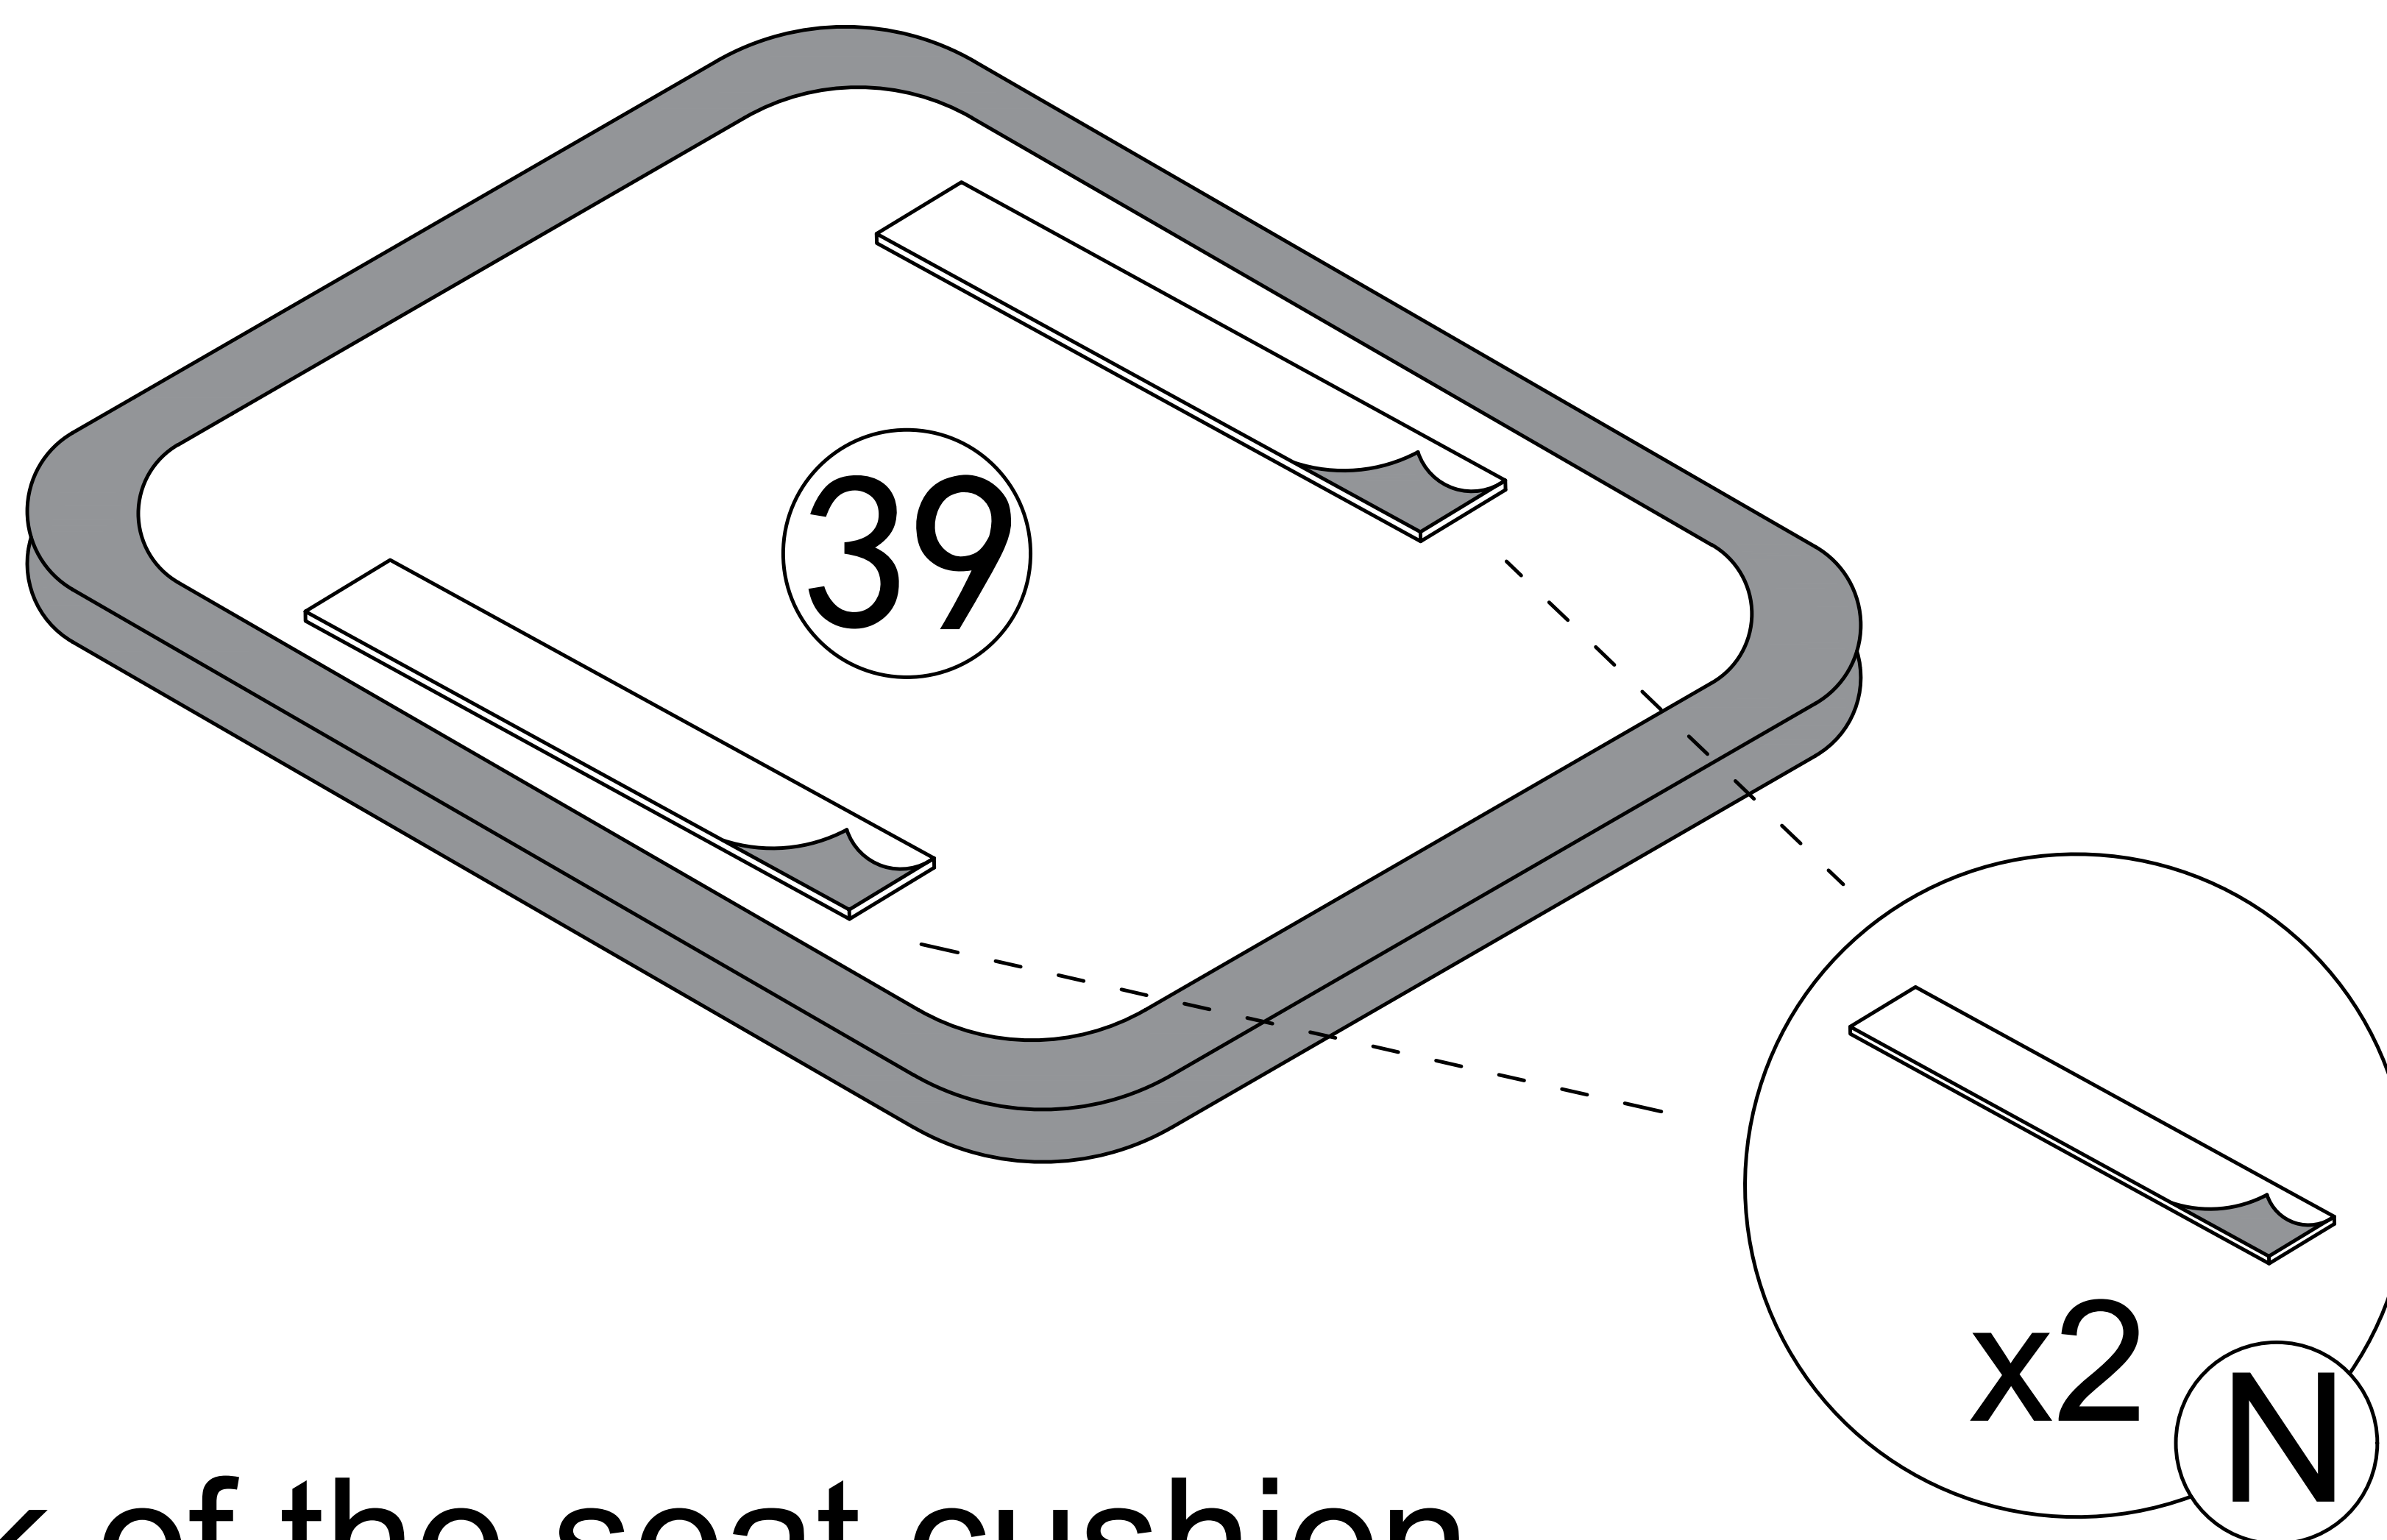




The back of the seat cushion

Step 33

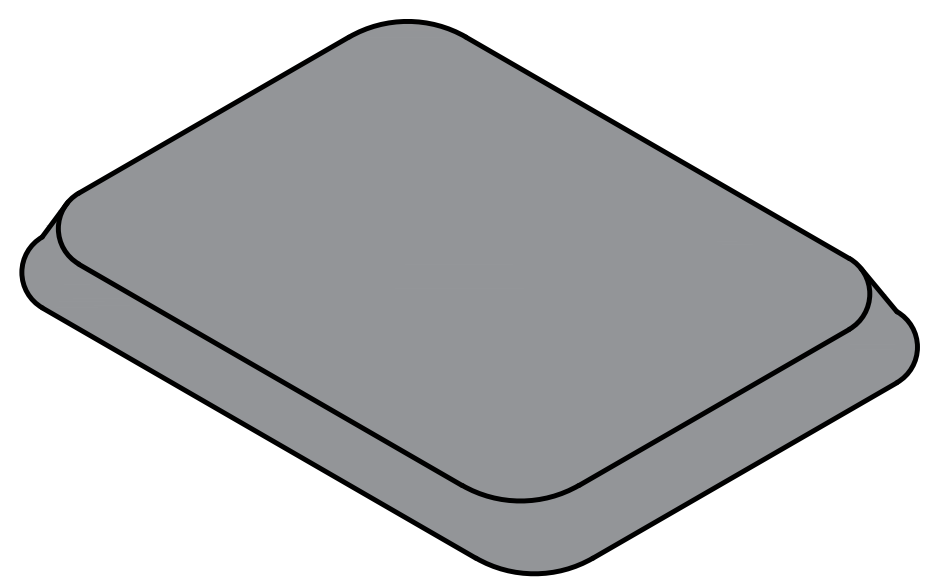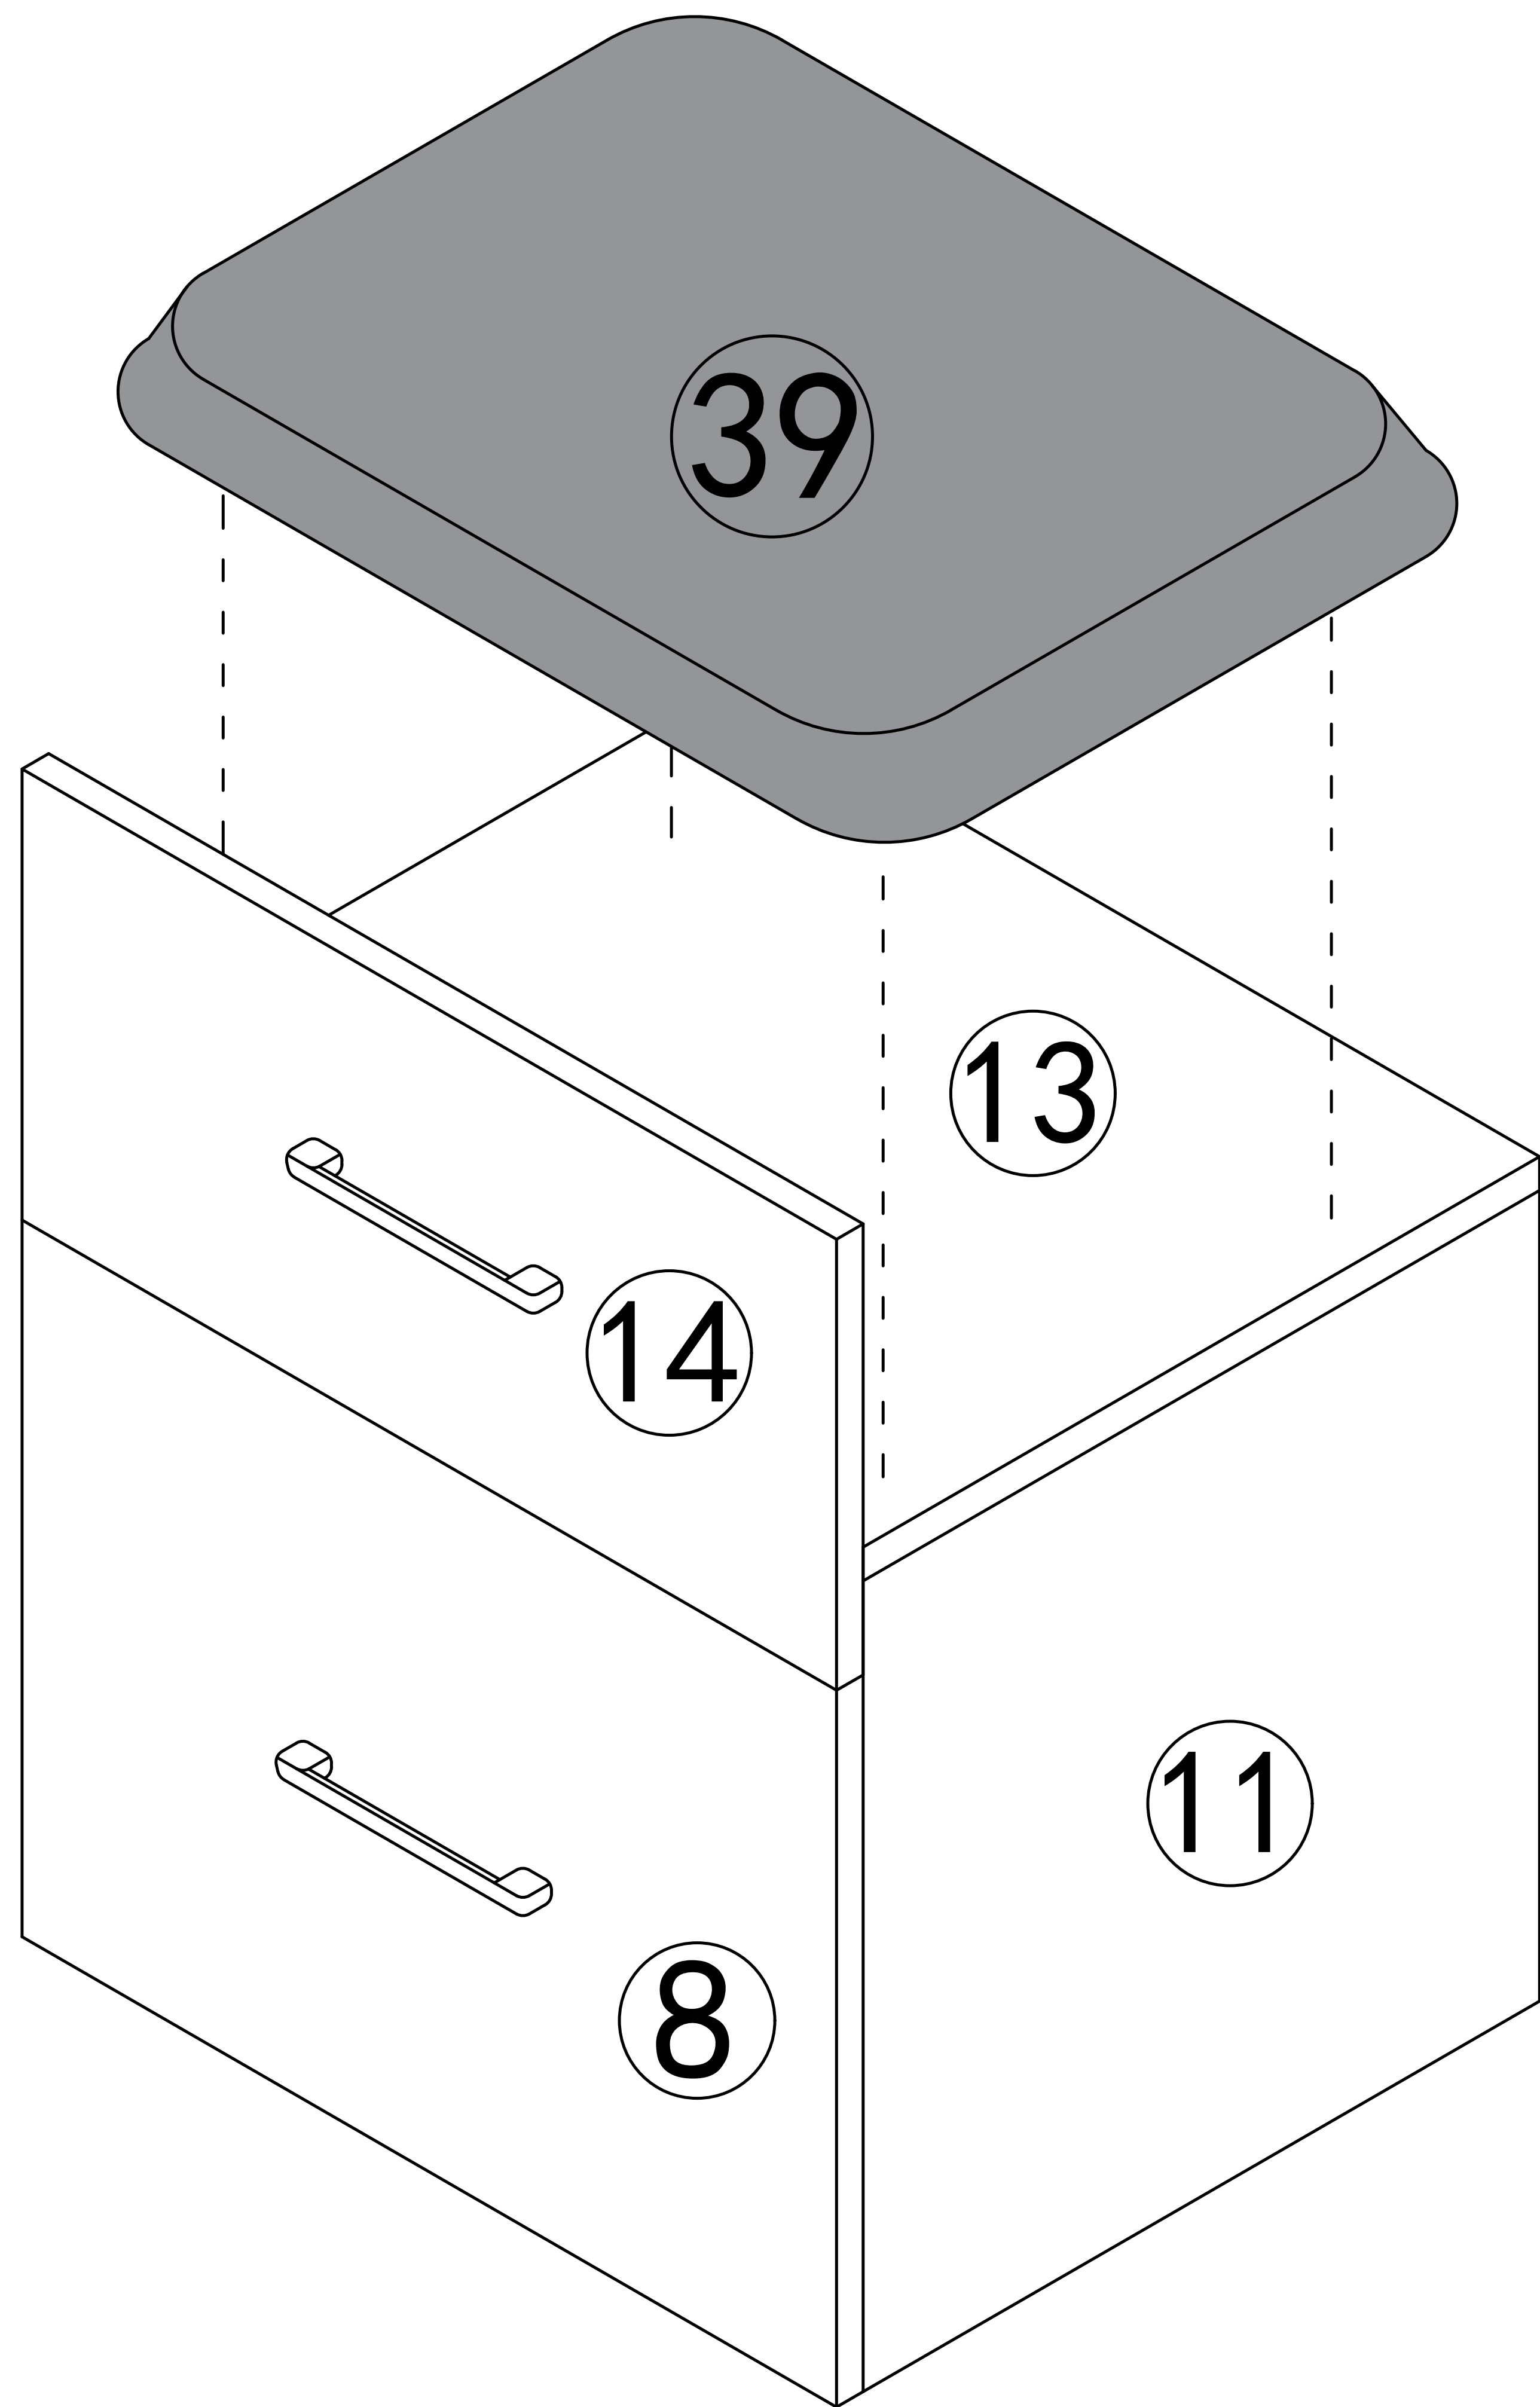




39 x1

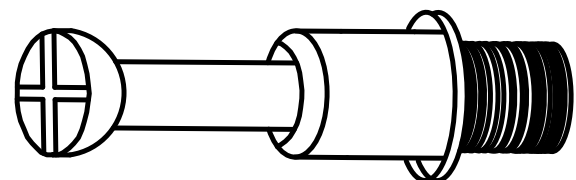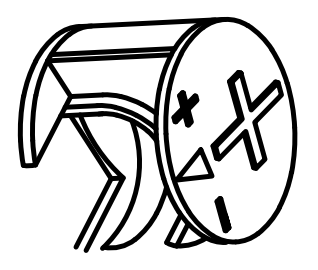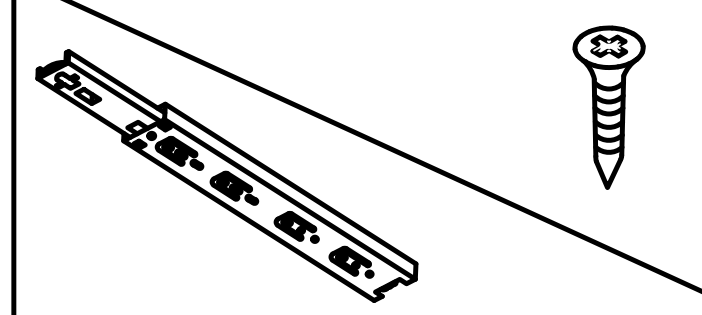A		30pcs
B		20pcs
C		8pcs
E		6pcs 2pcs
J		5pcs


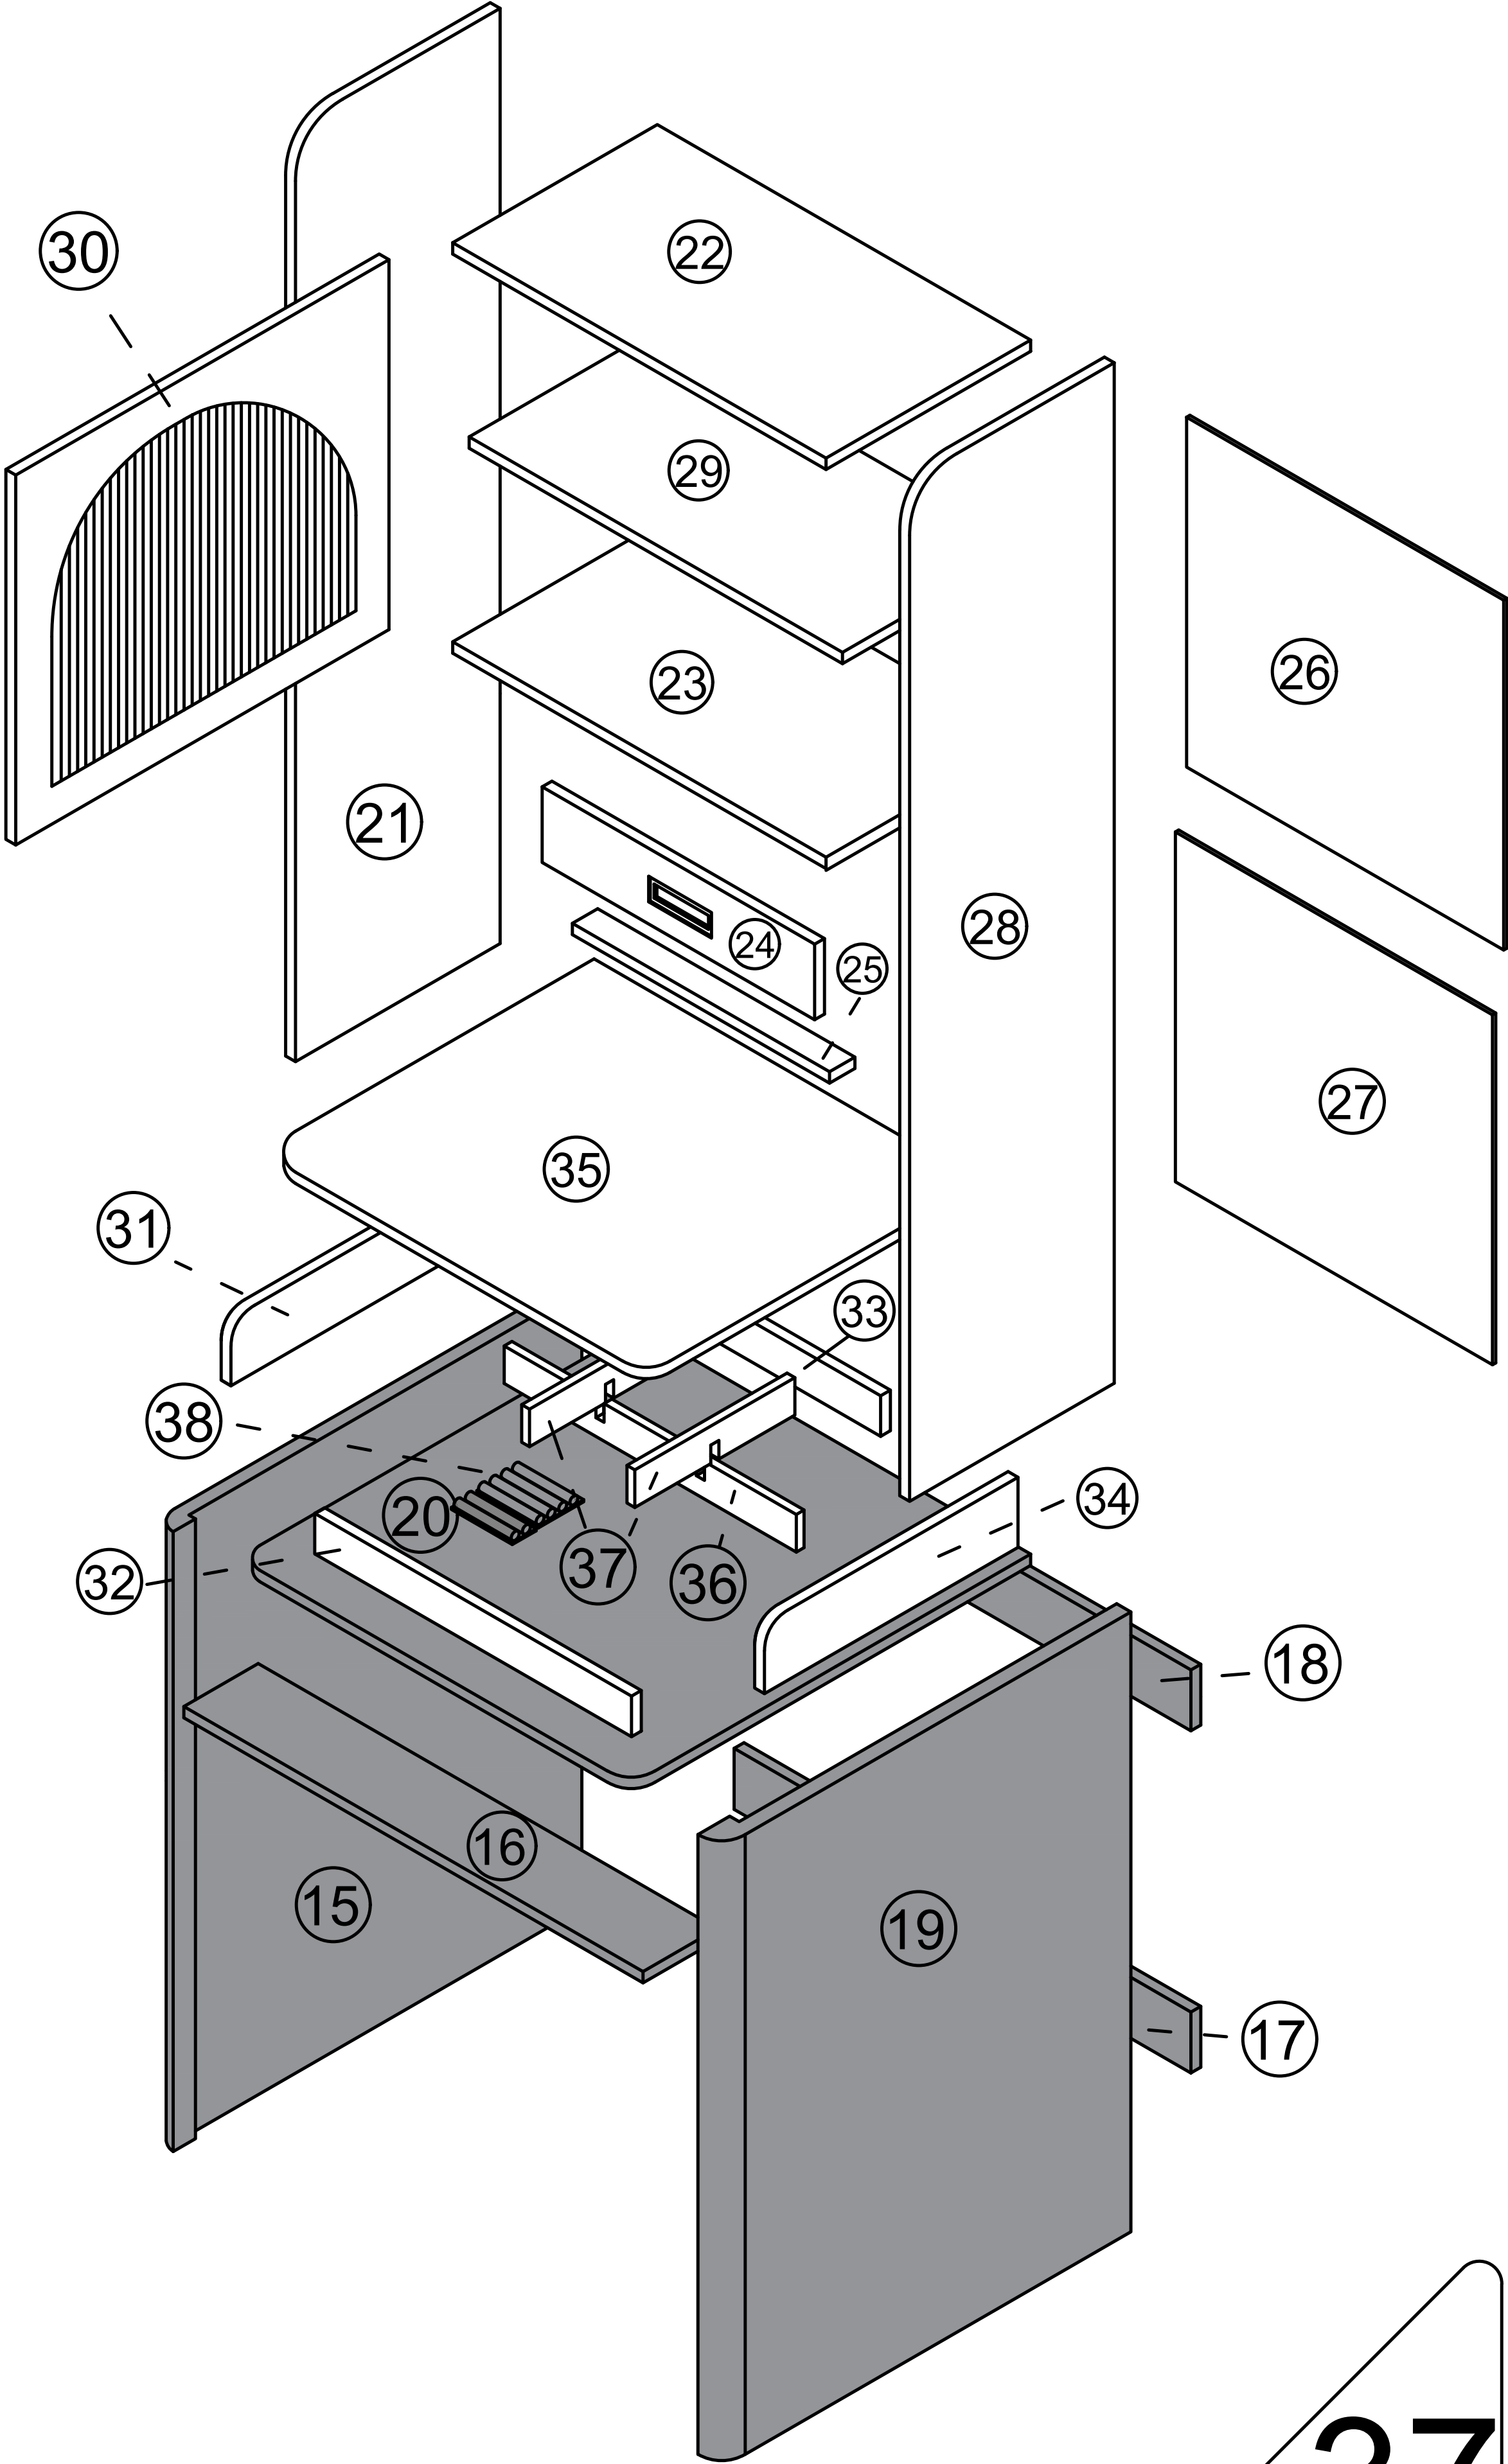
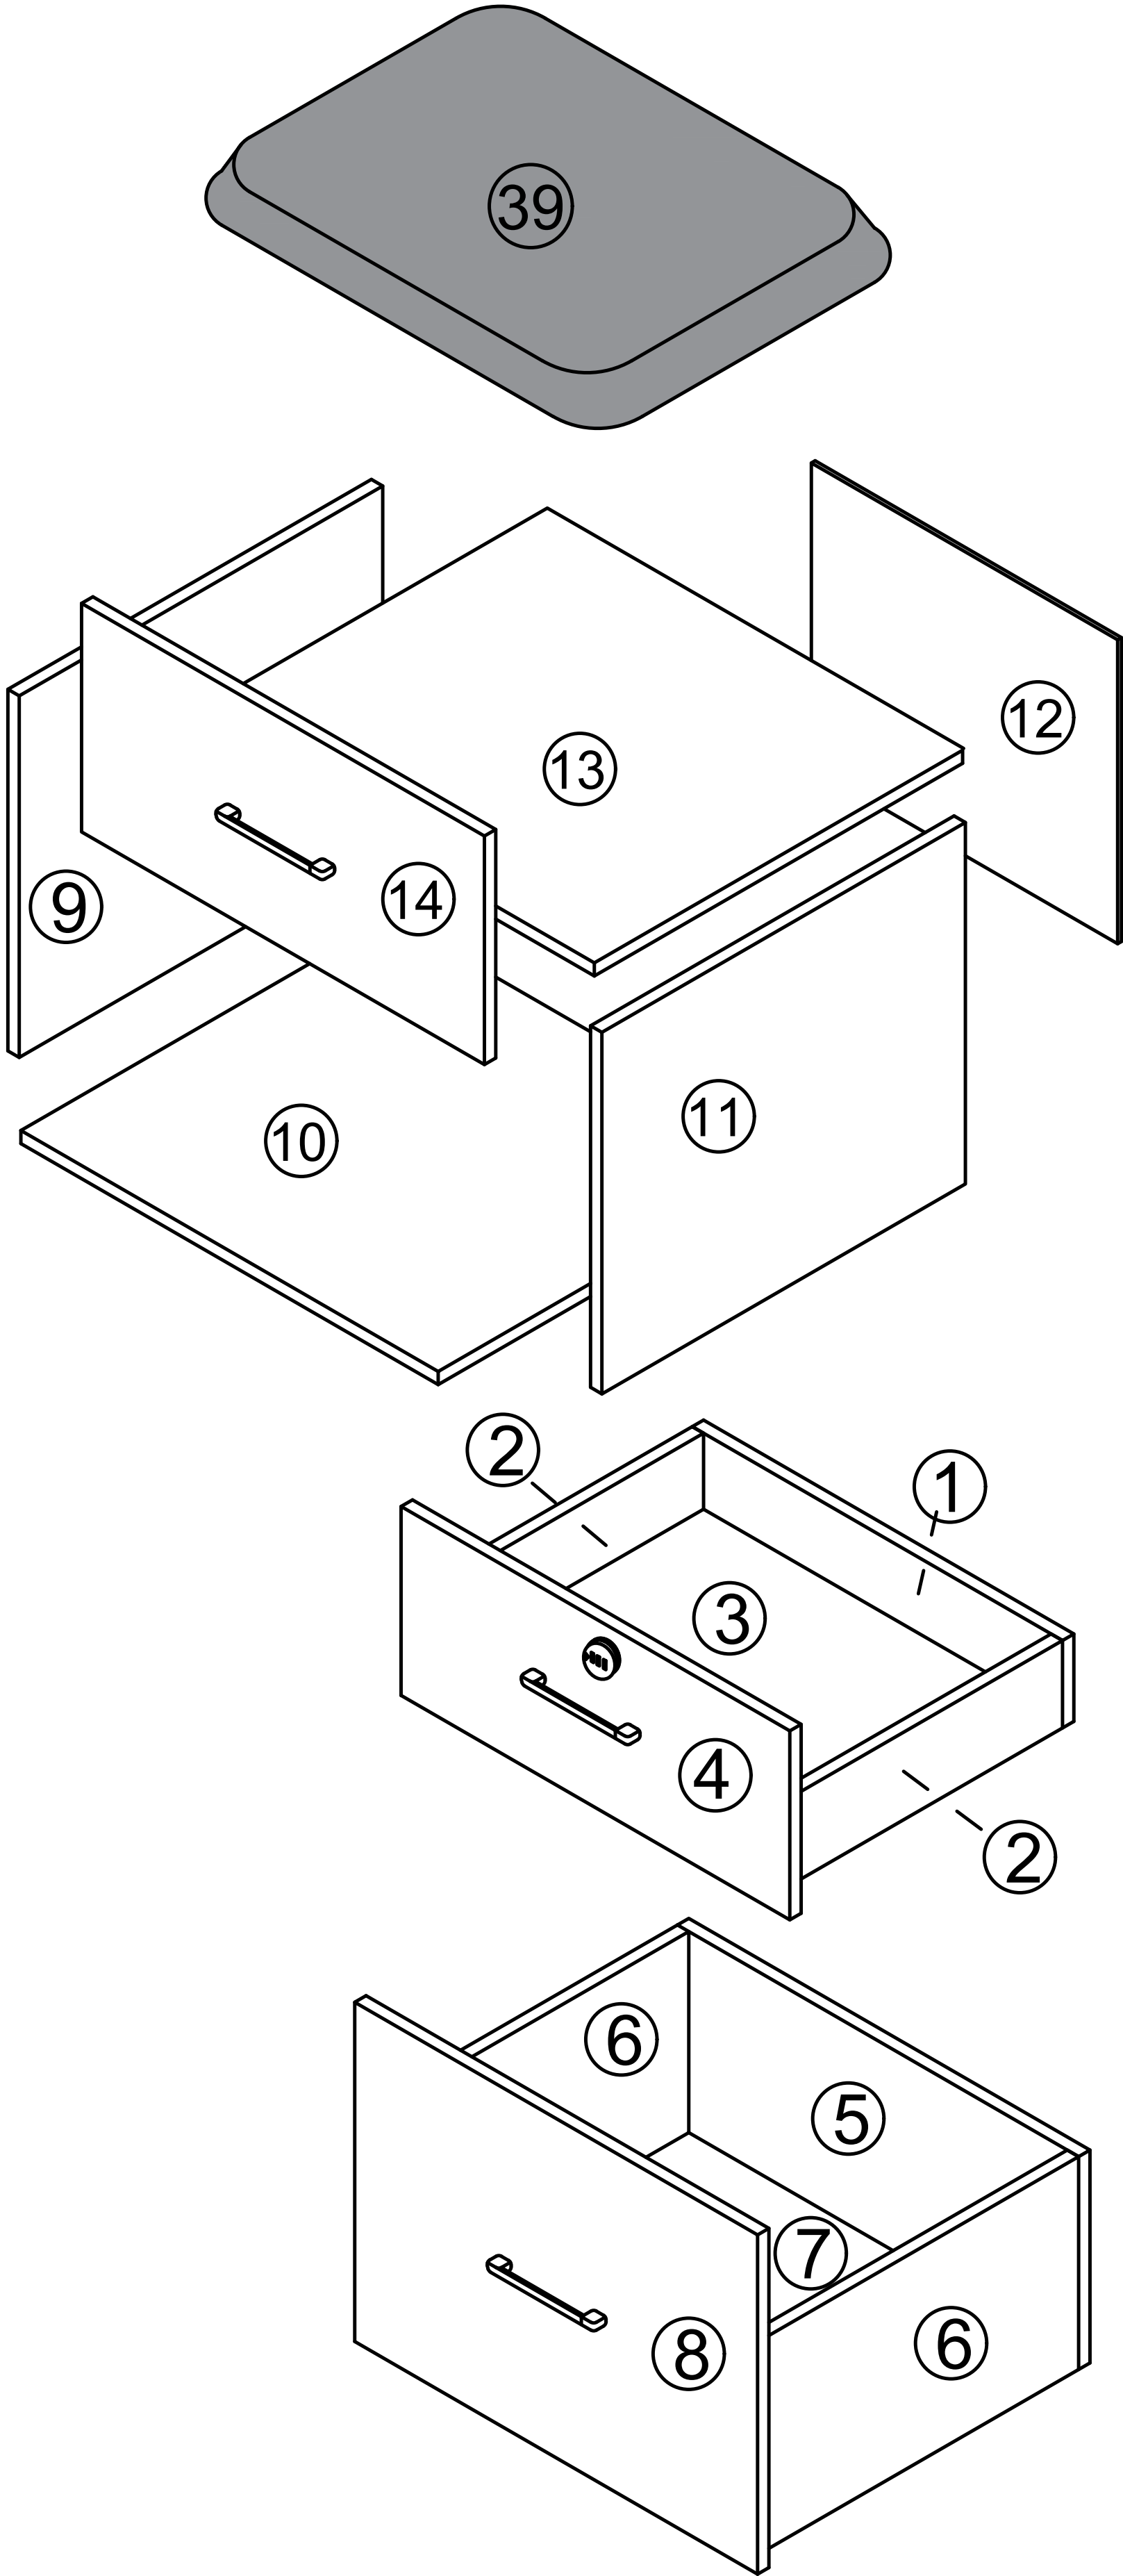


Step 34

A

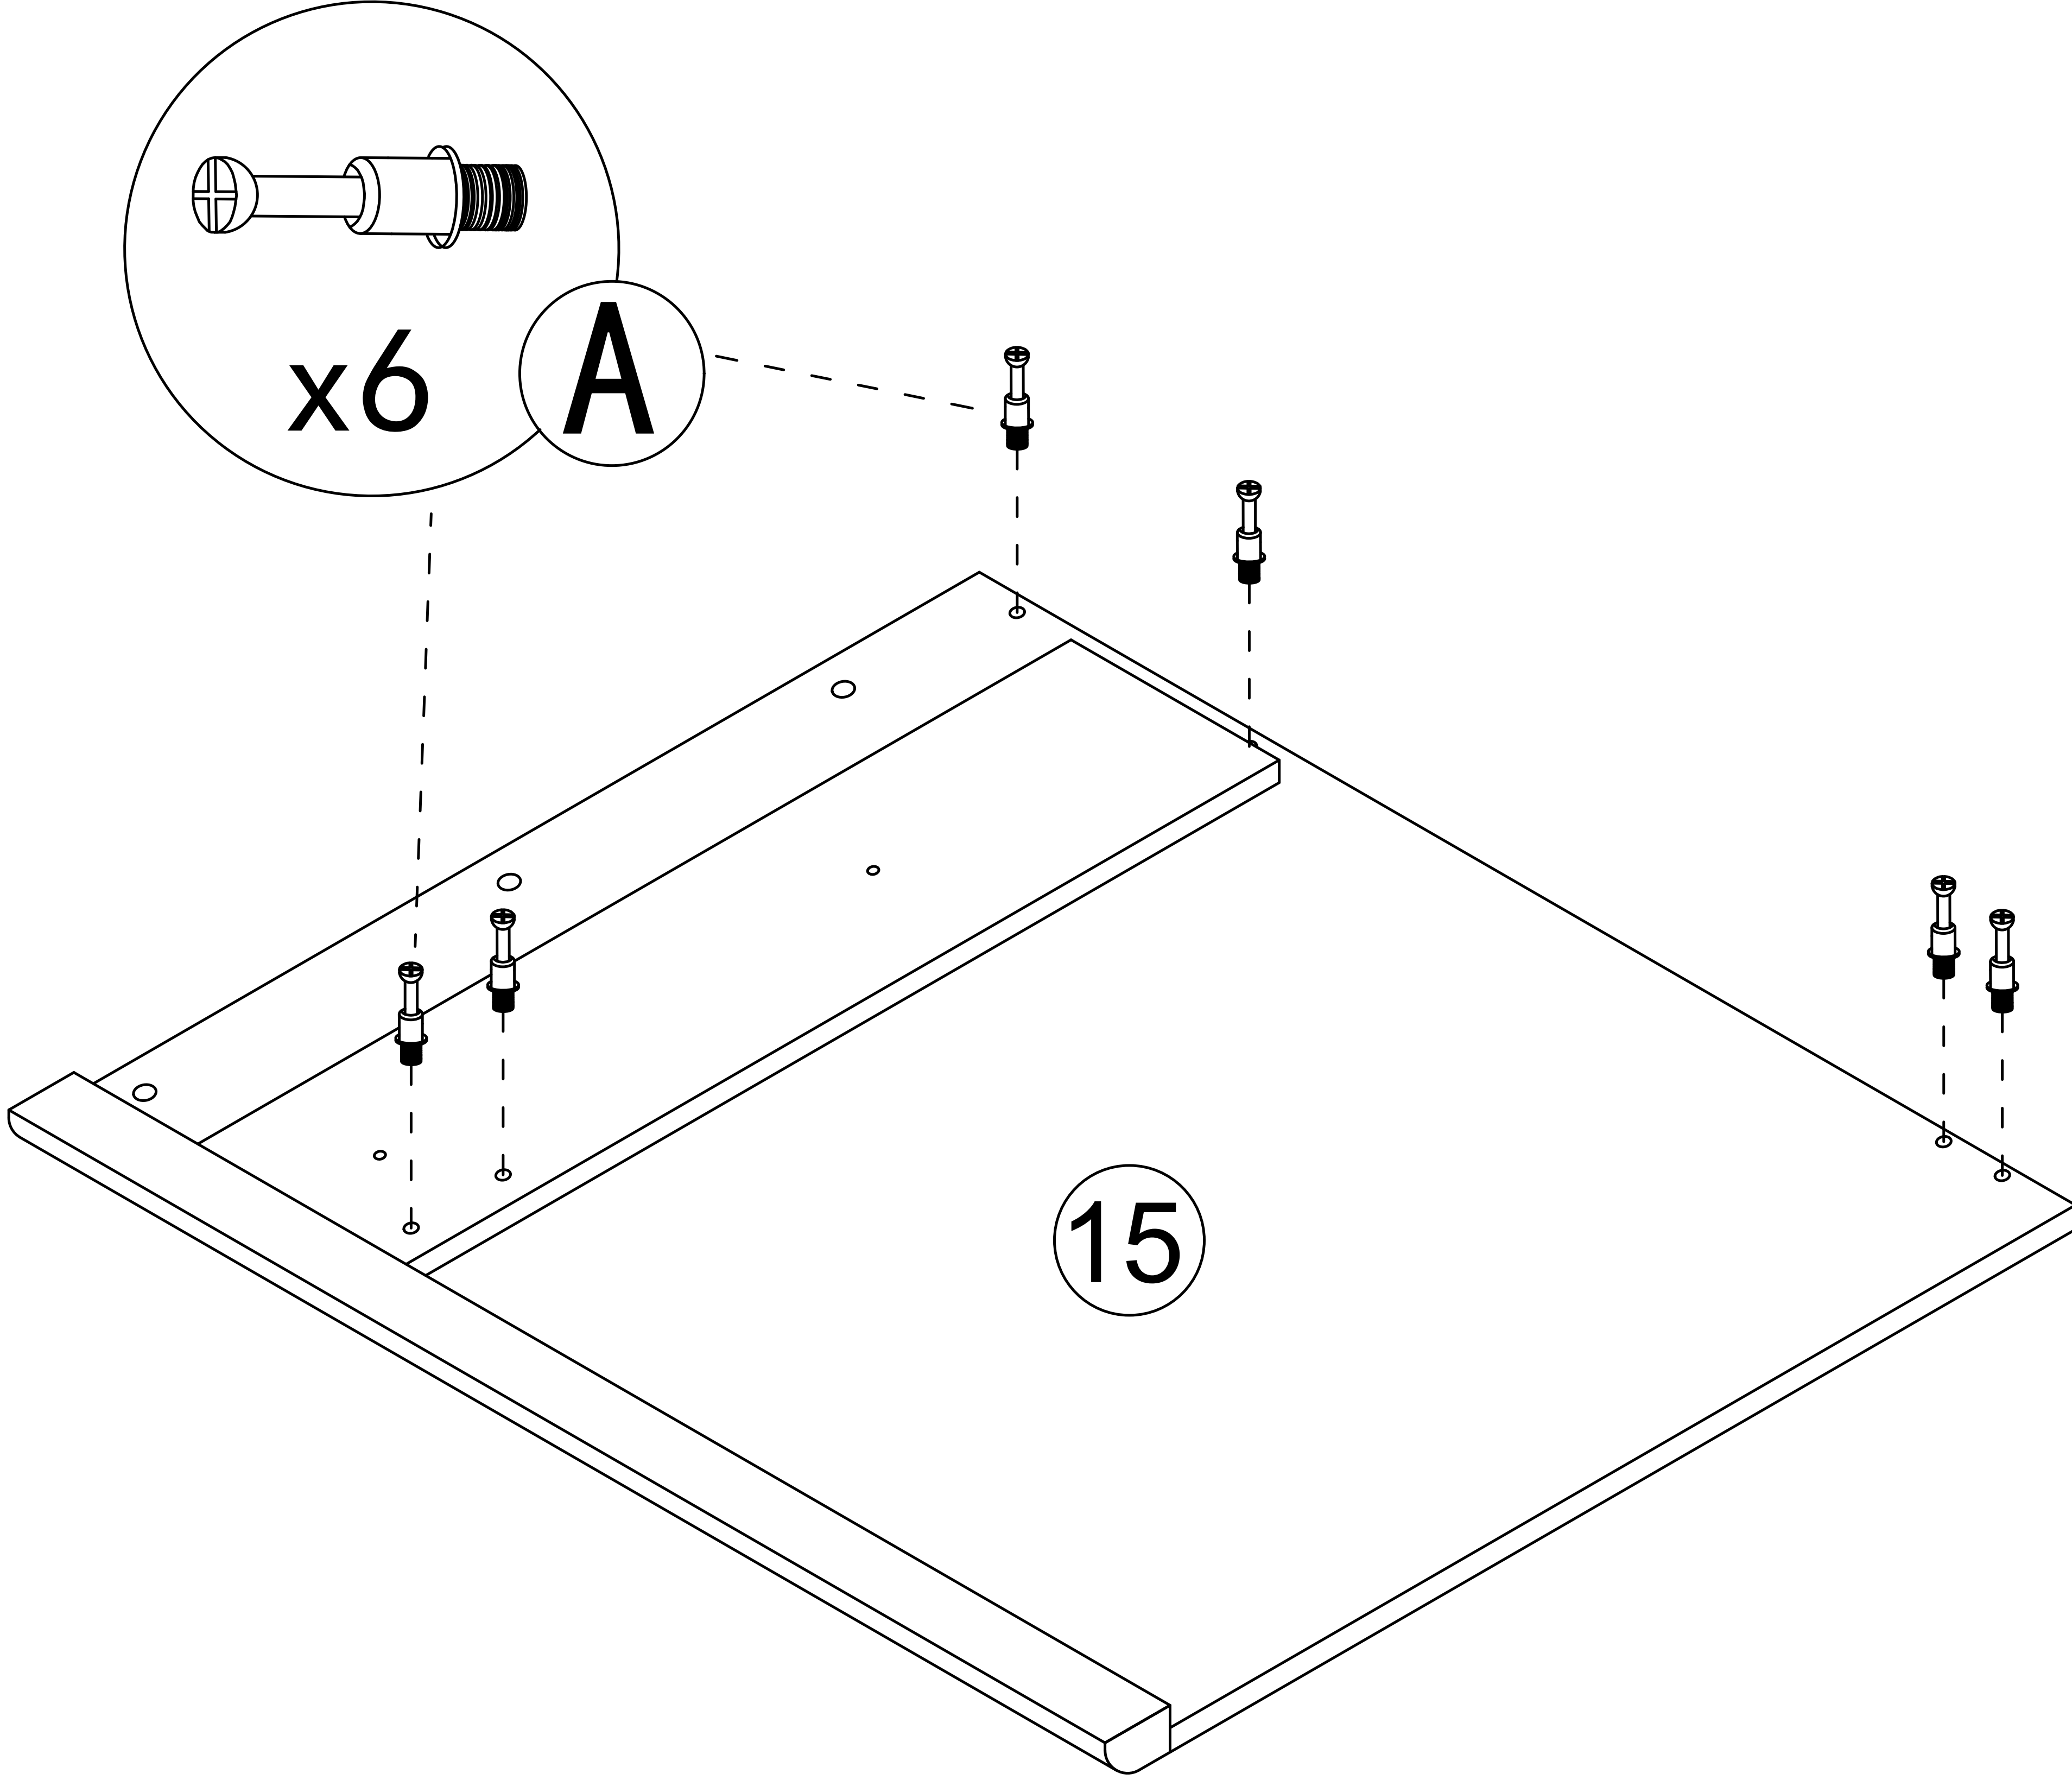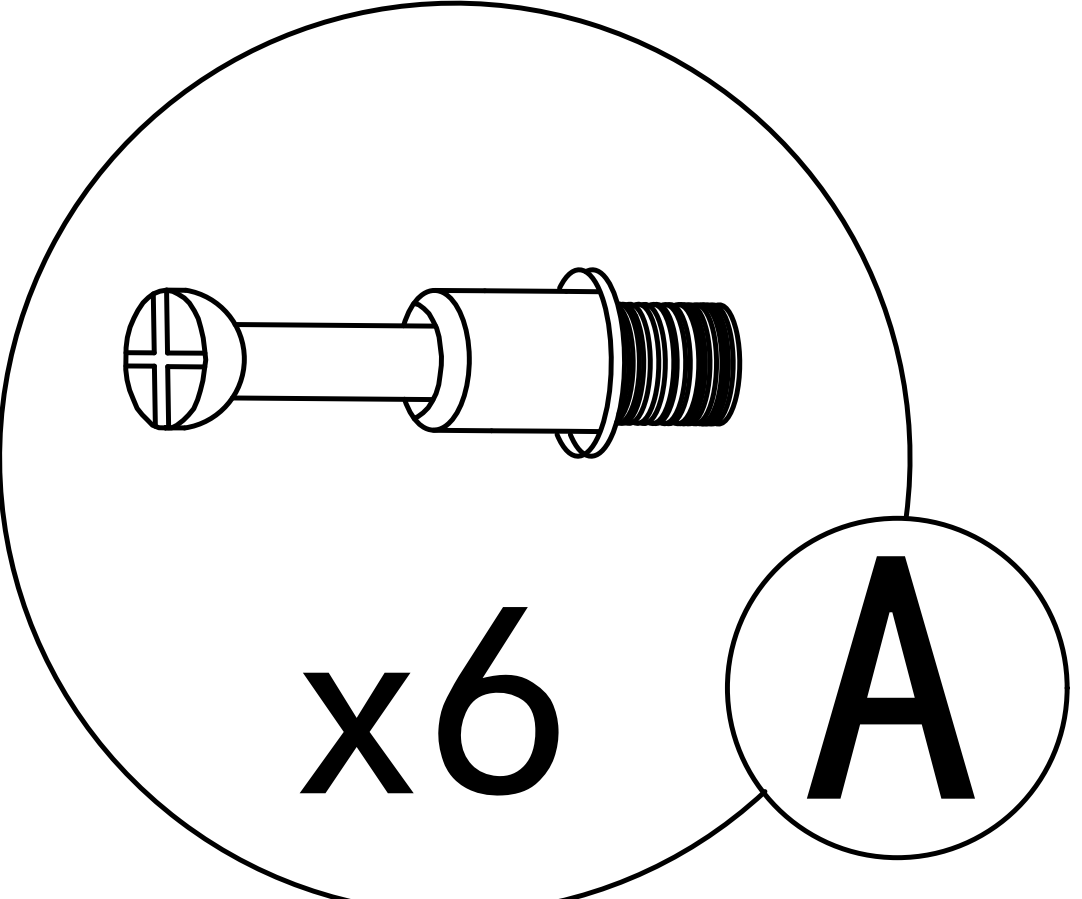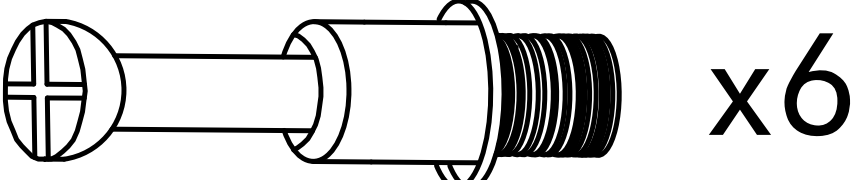


Step 35

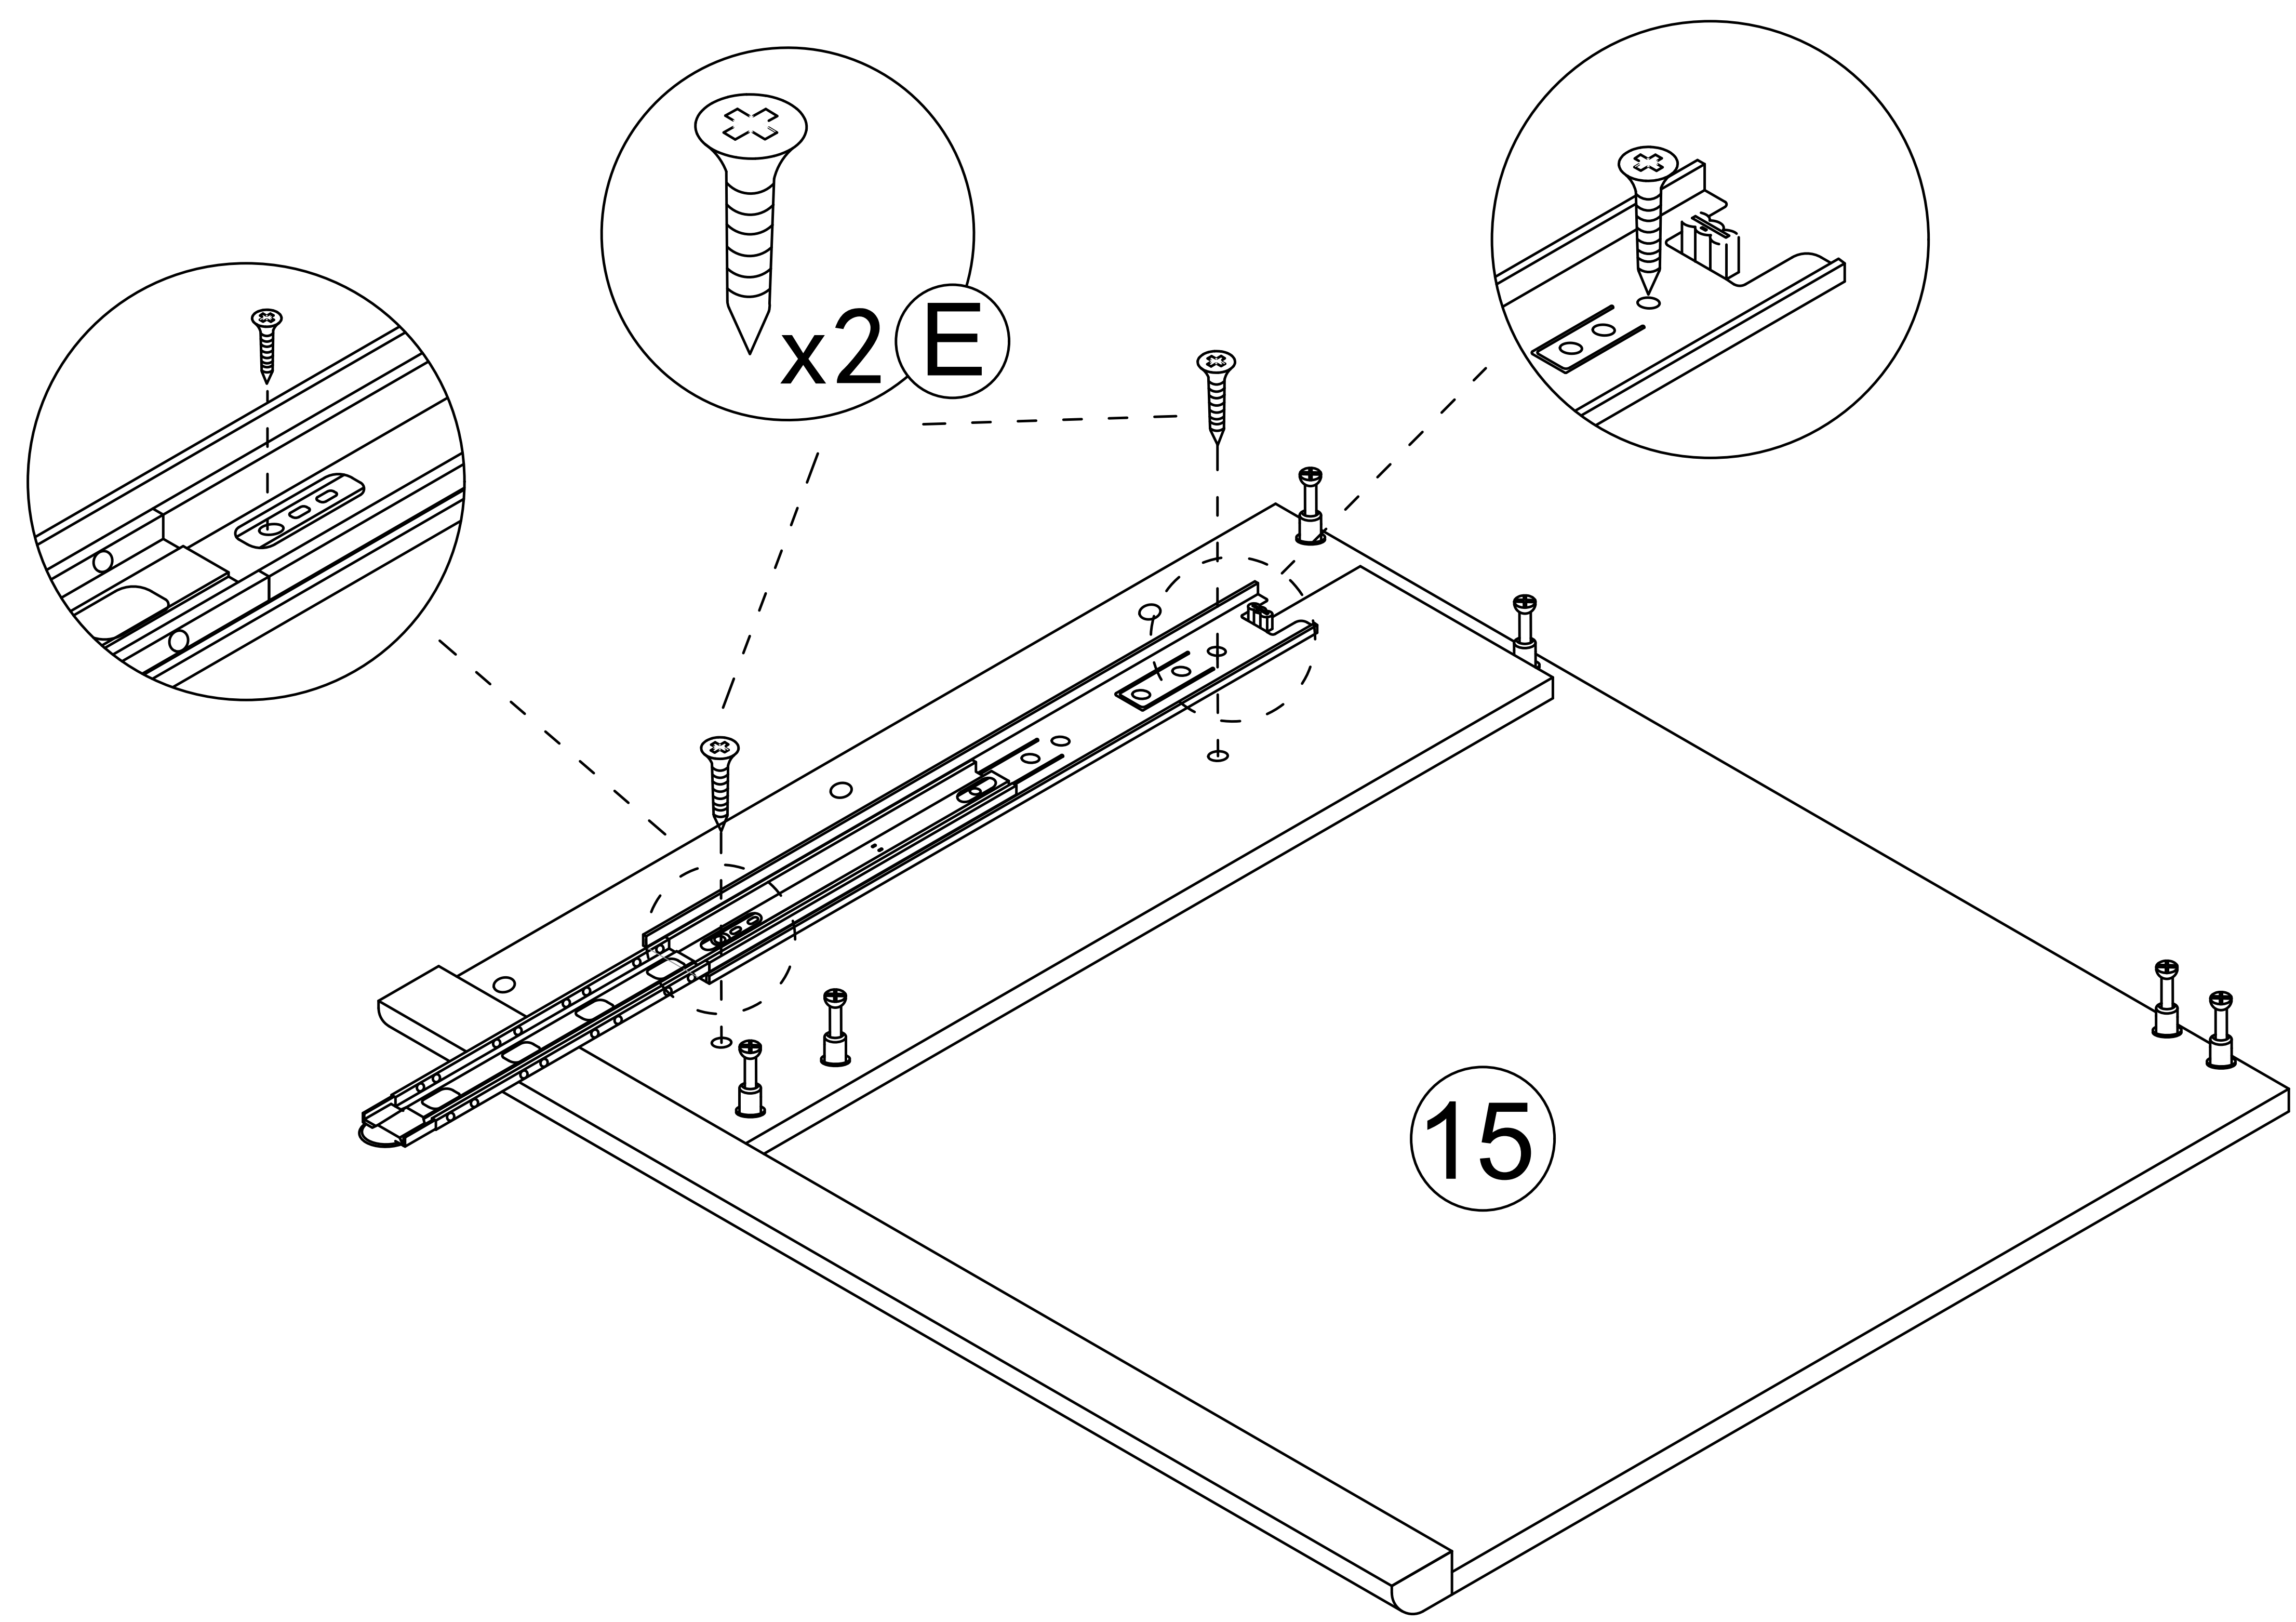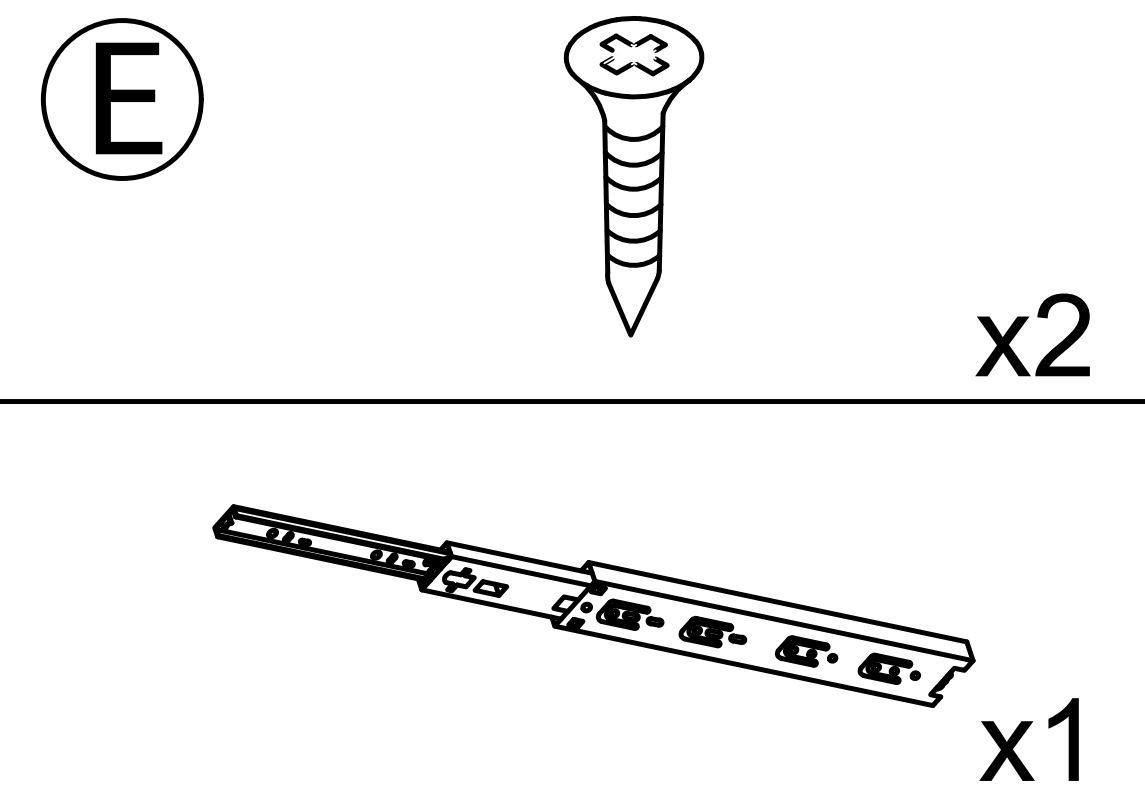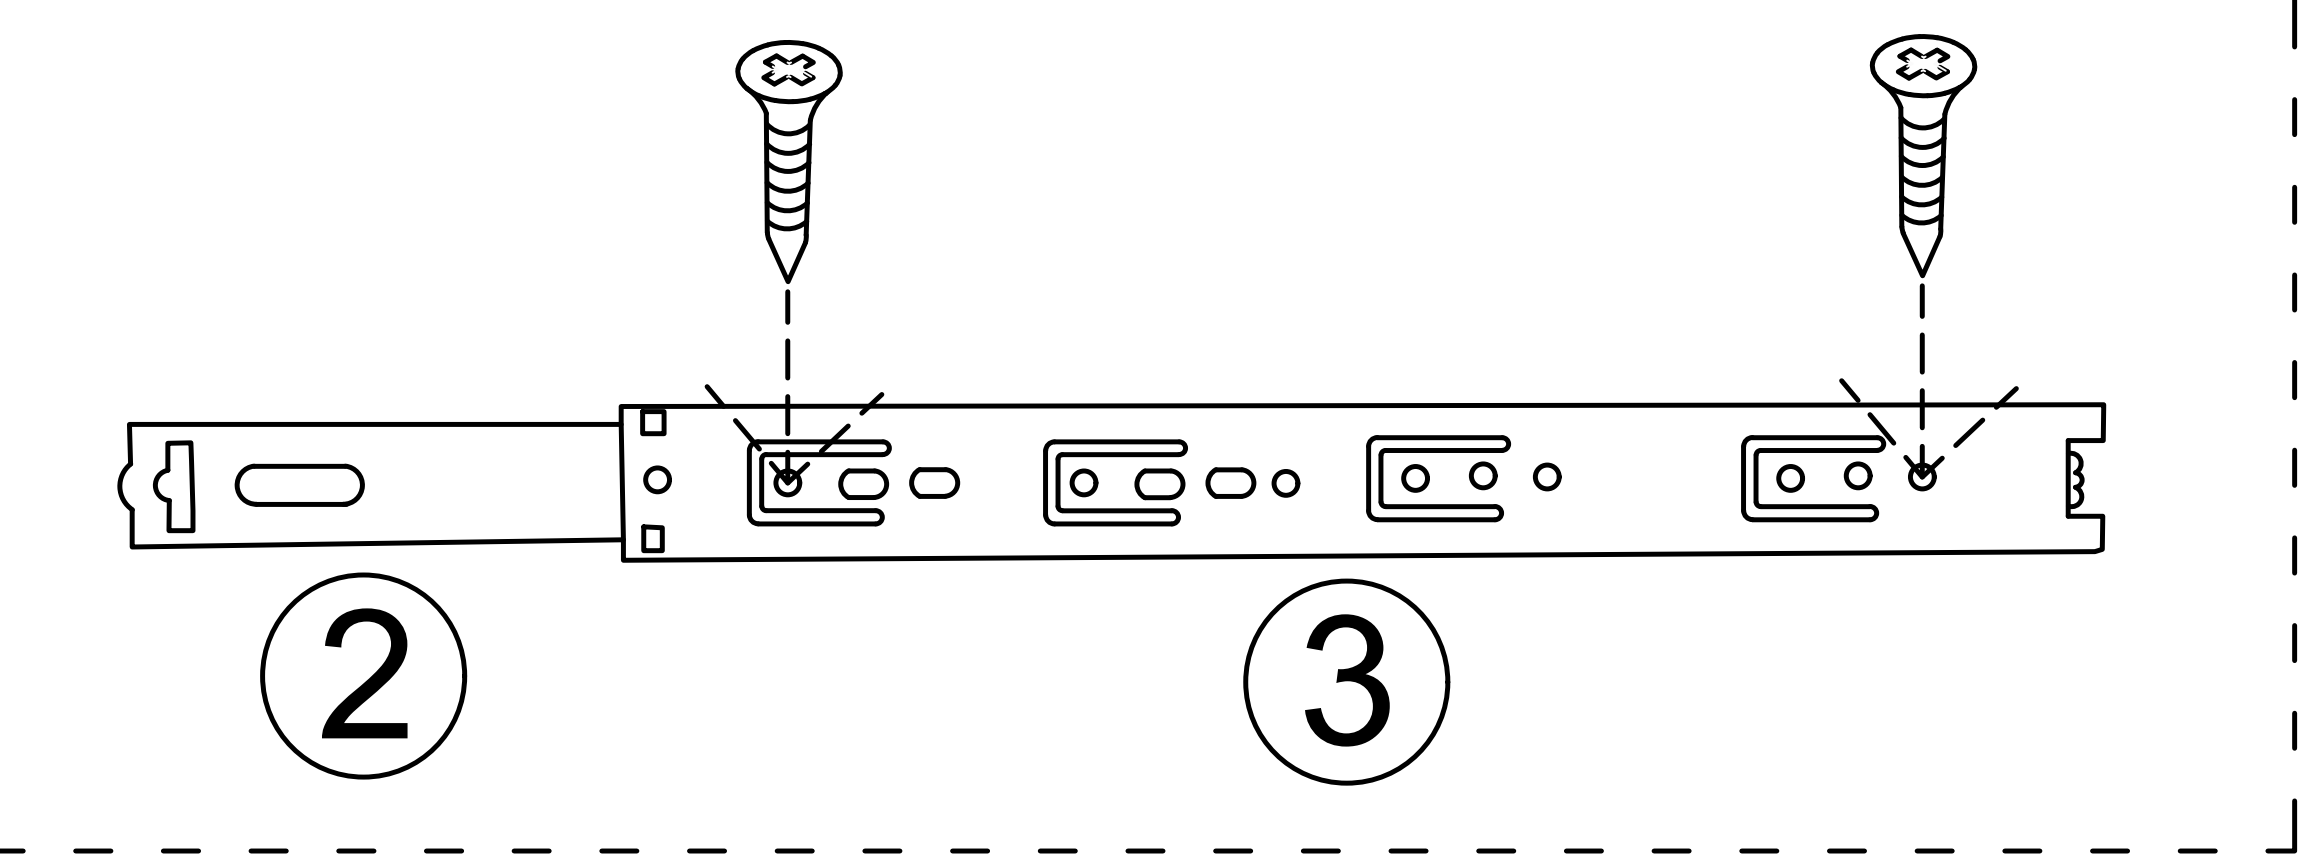


Step 36

E

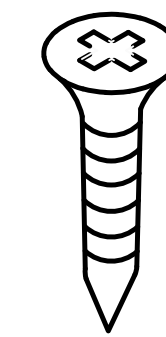


x1

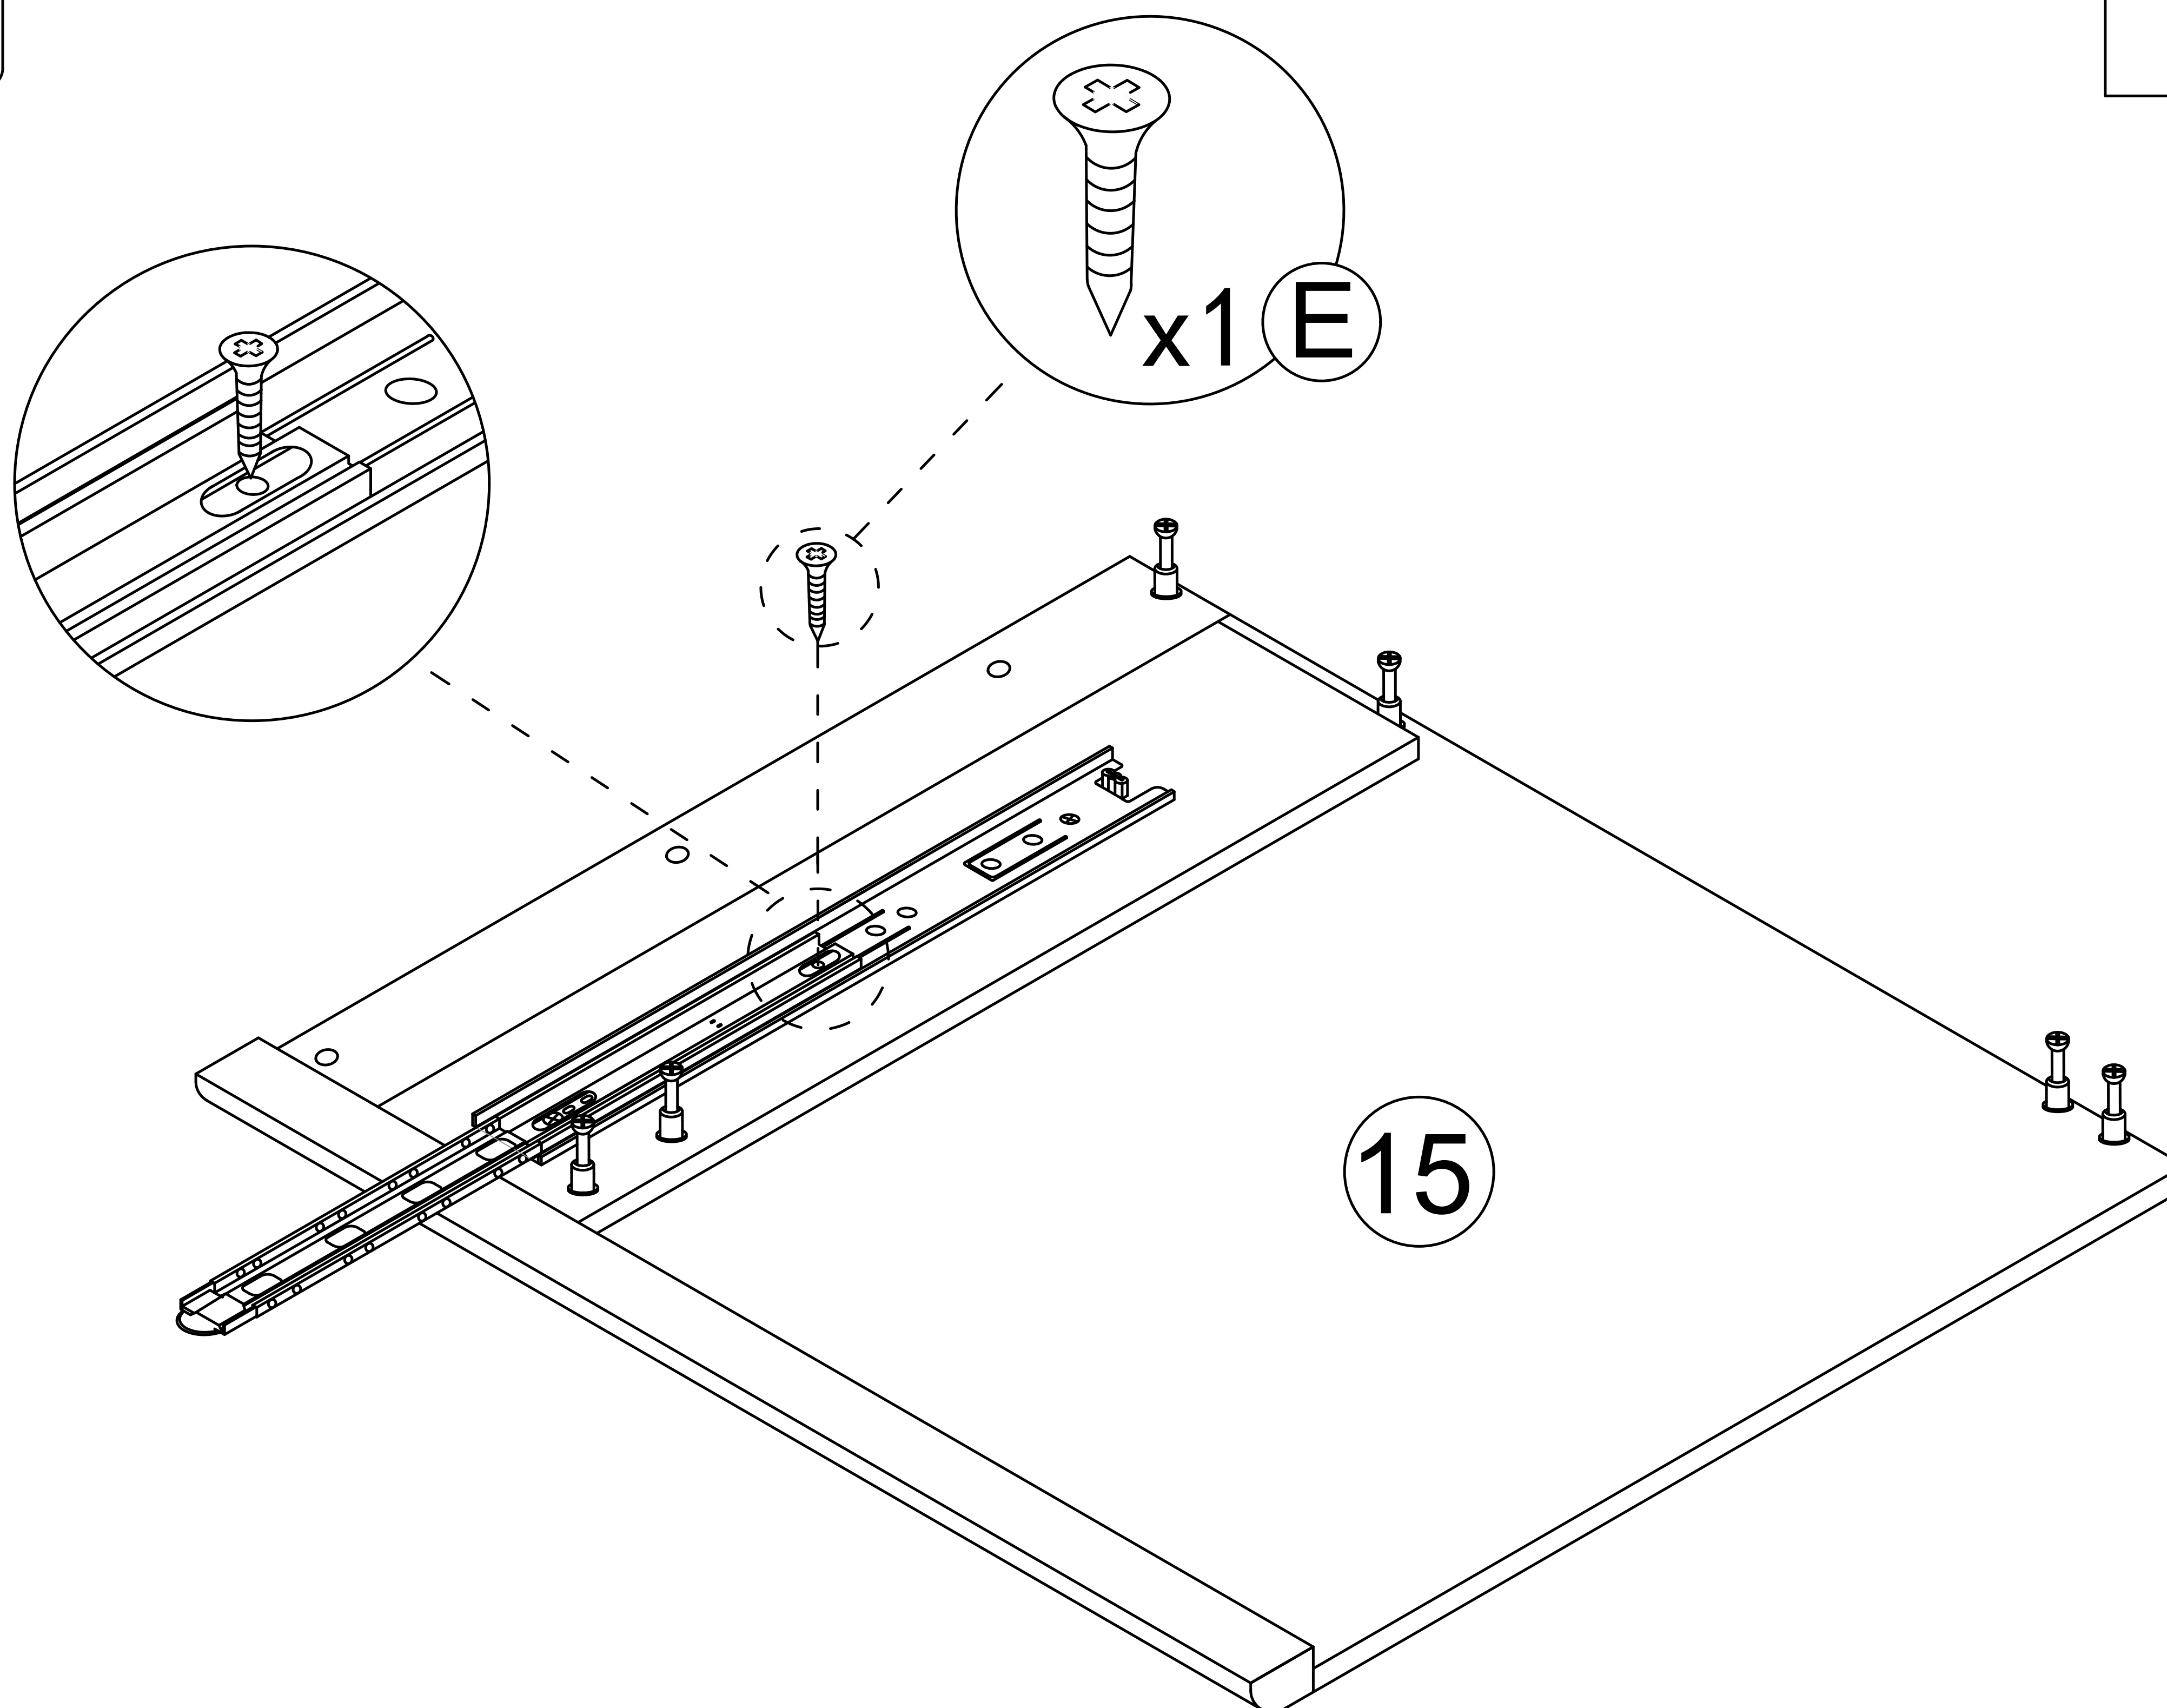


This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 37

B

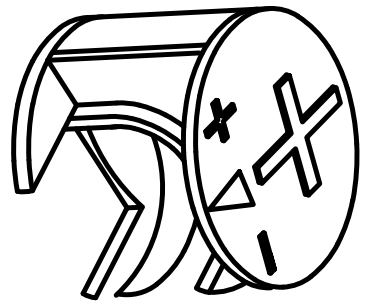


x2

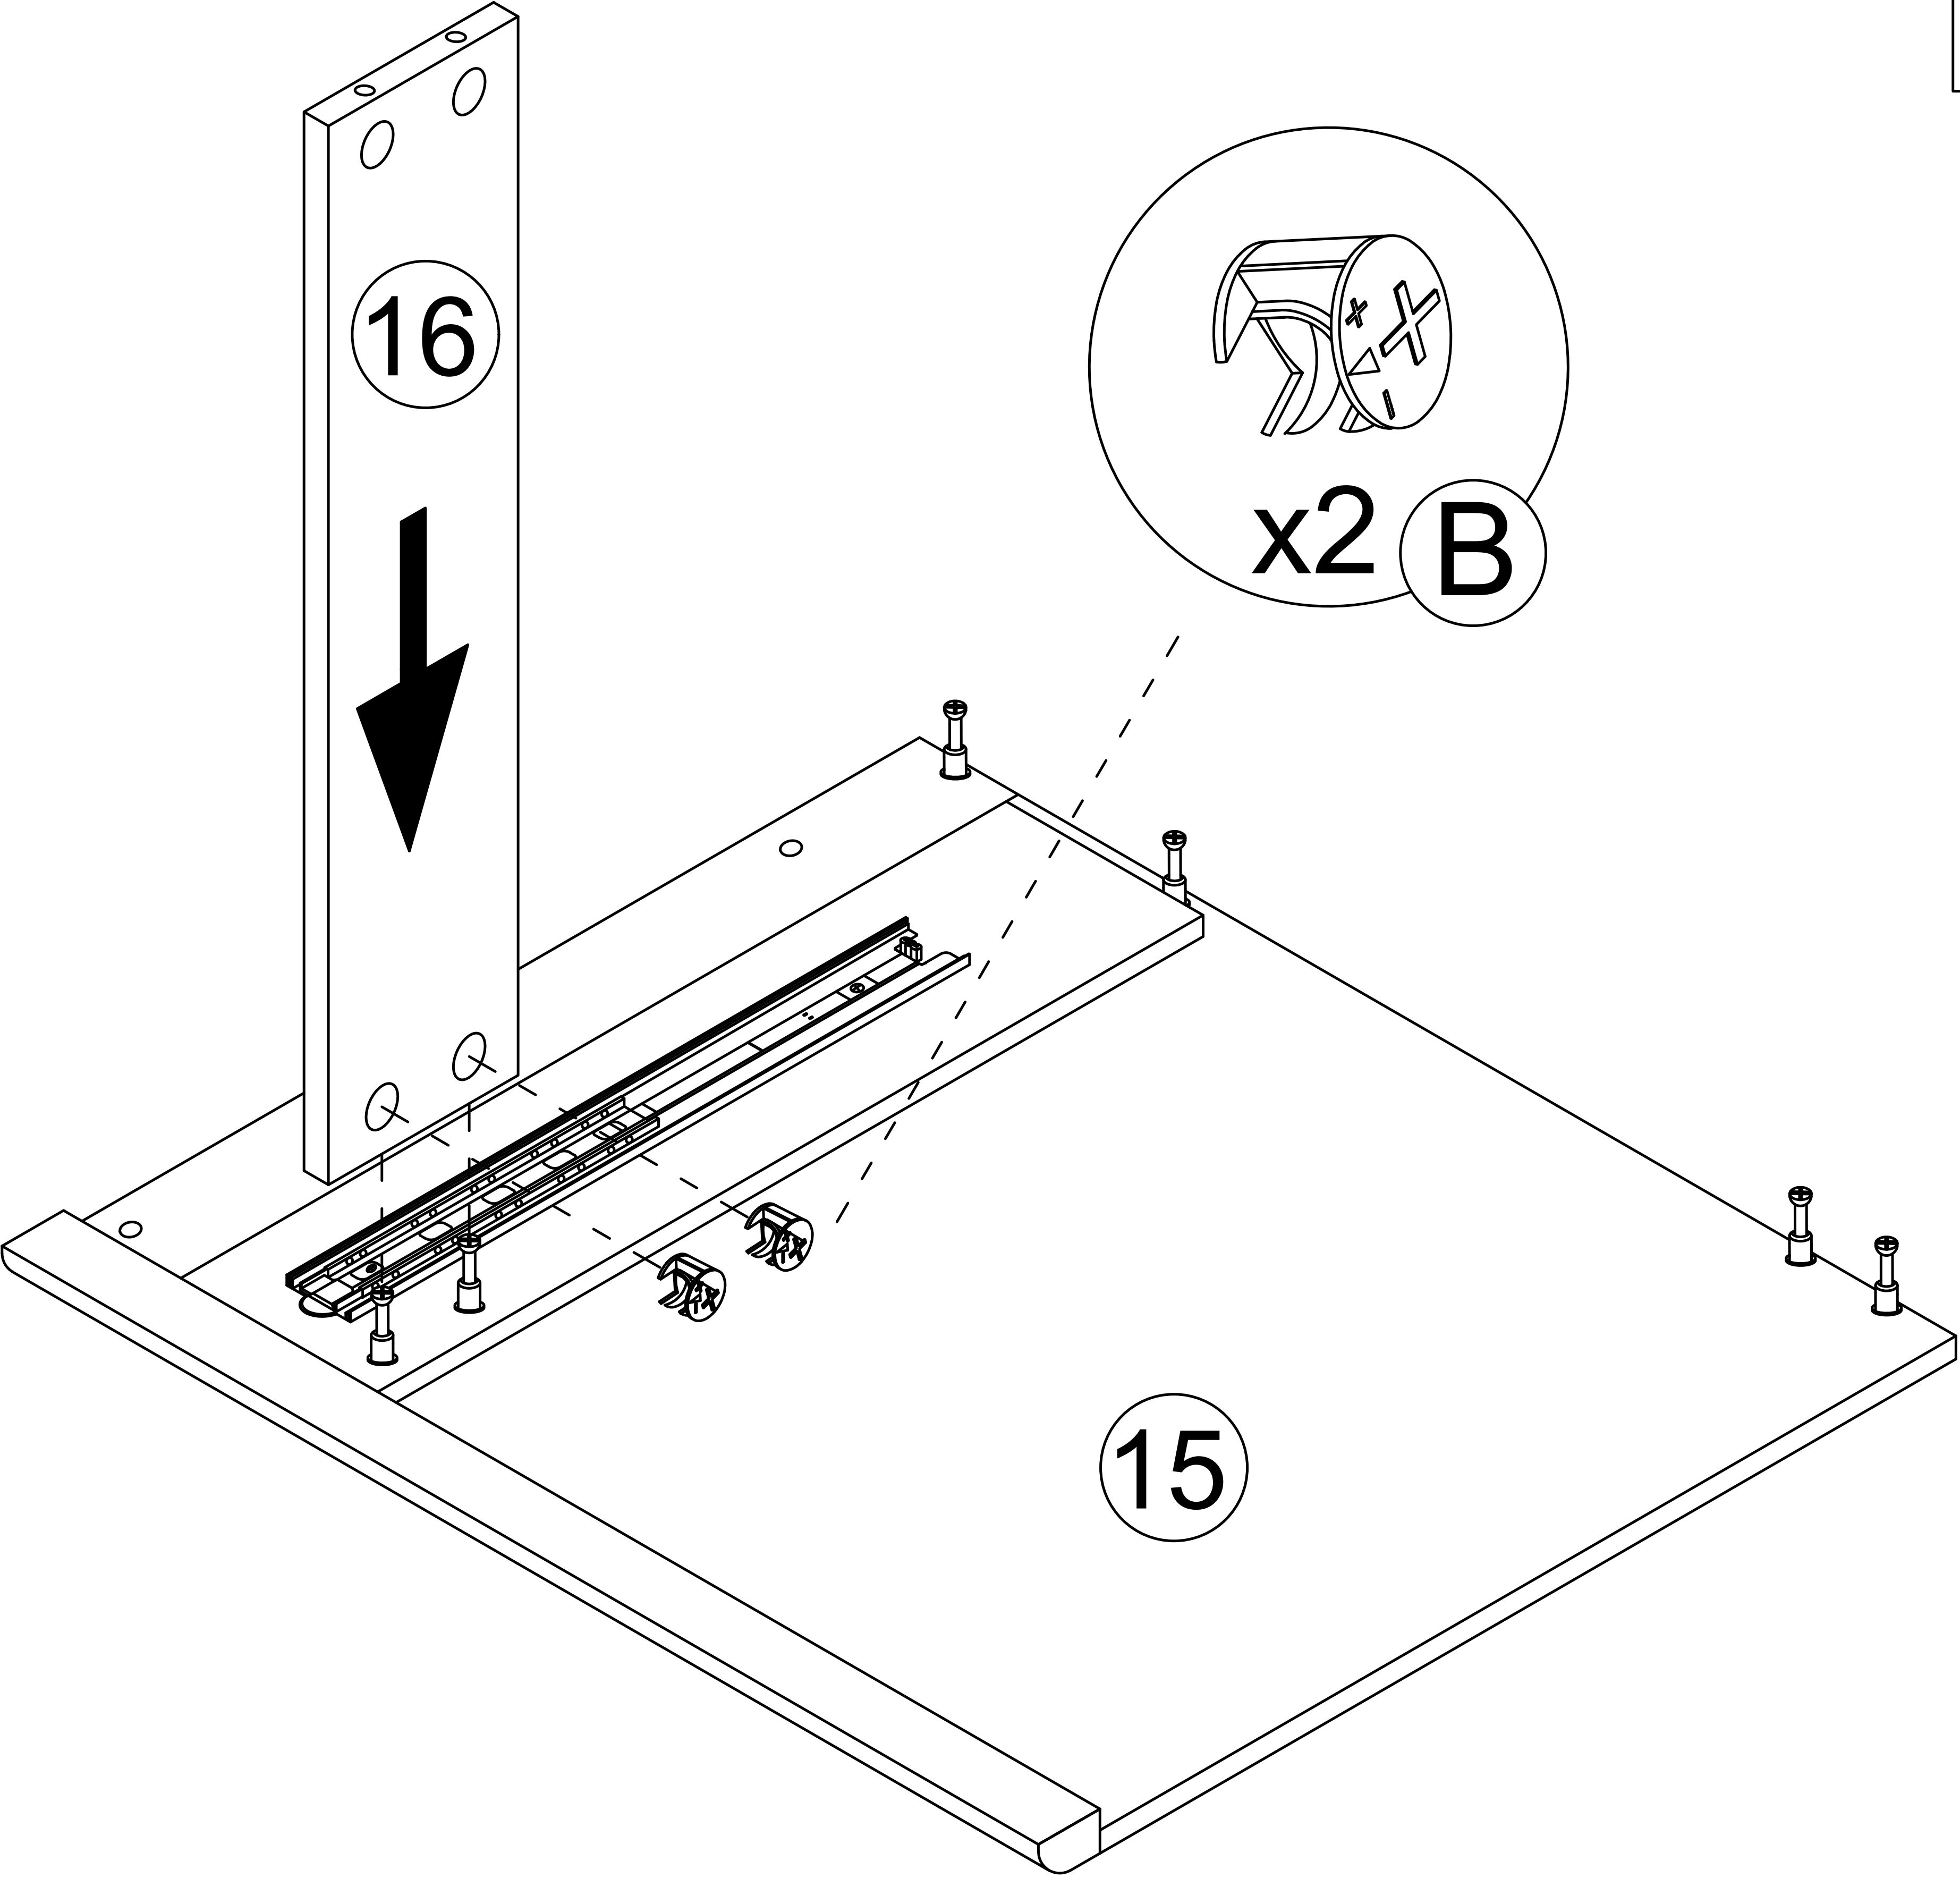


Step 38

B

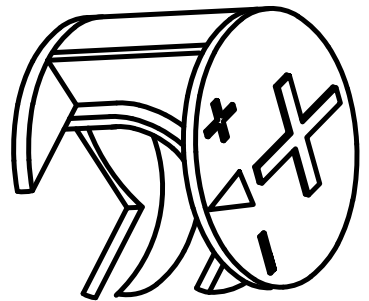


x2

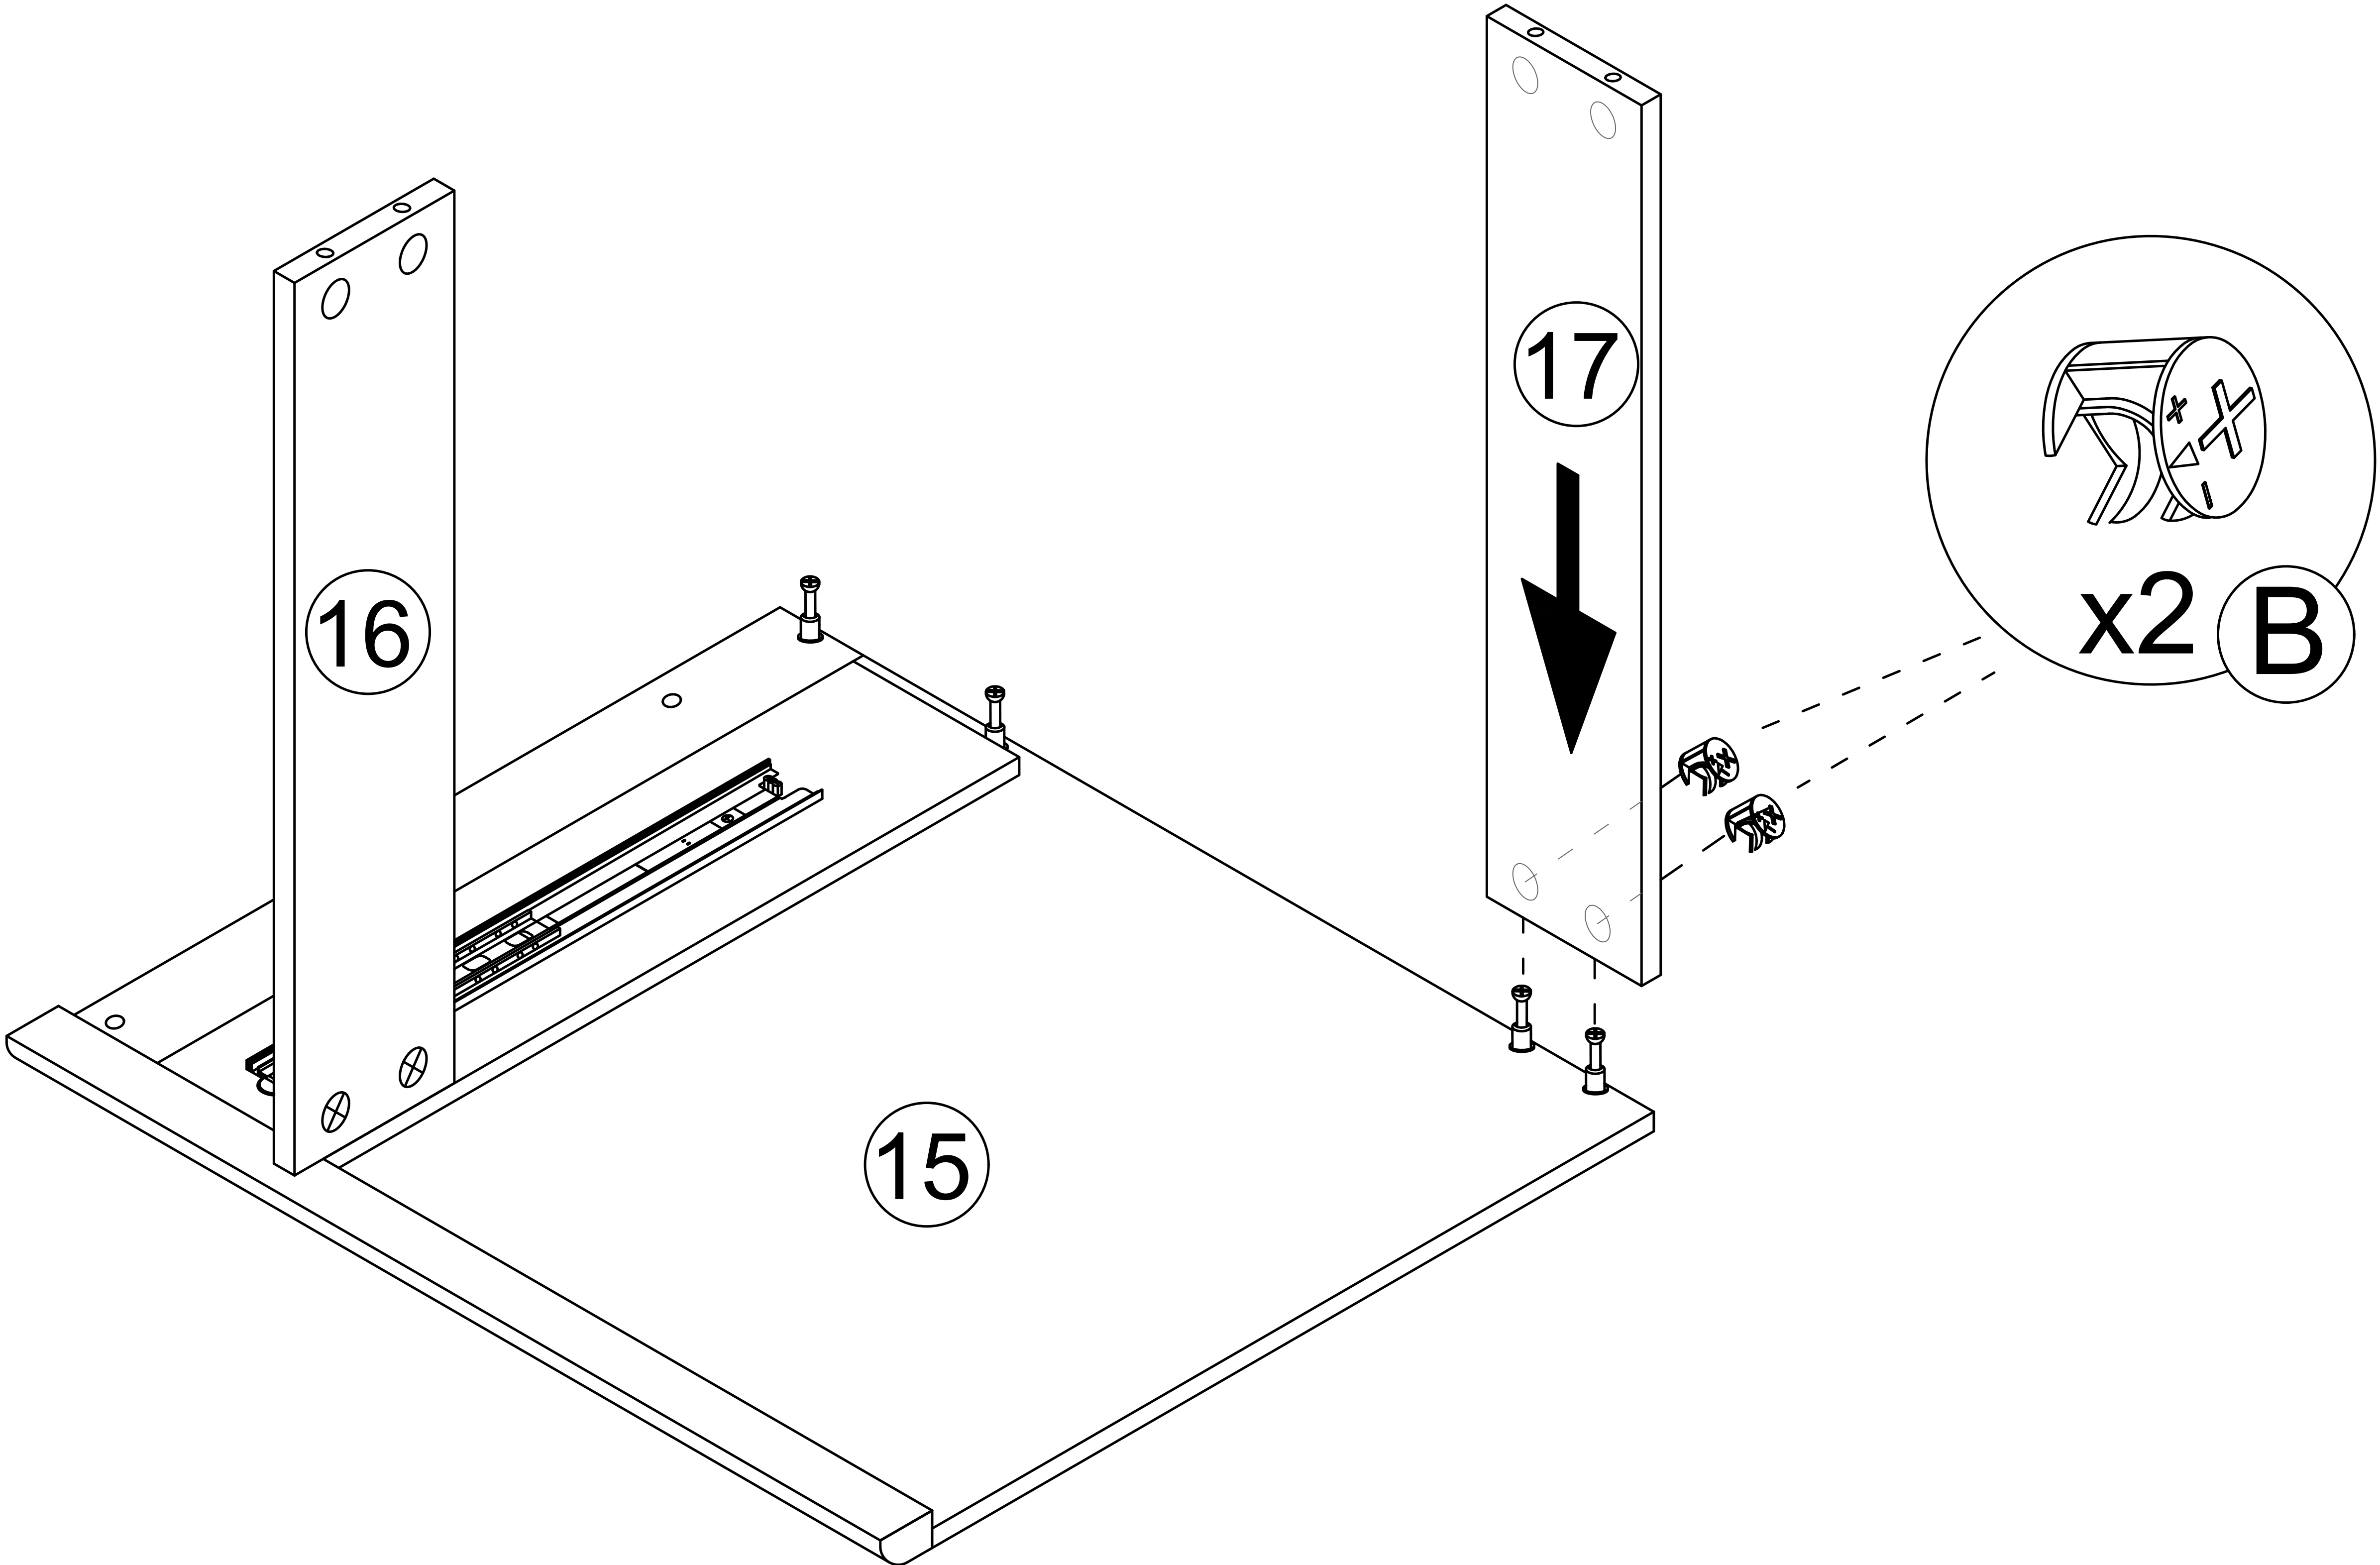


Step 39

B


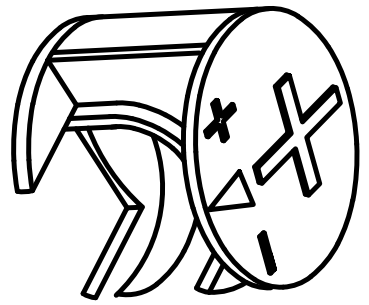


x2

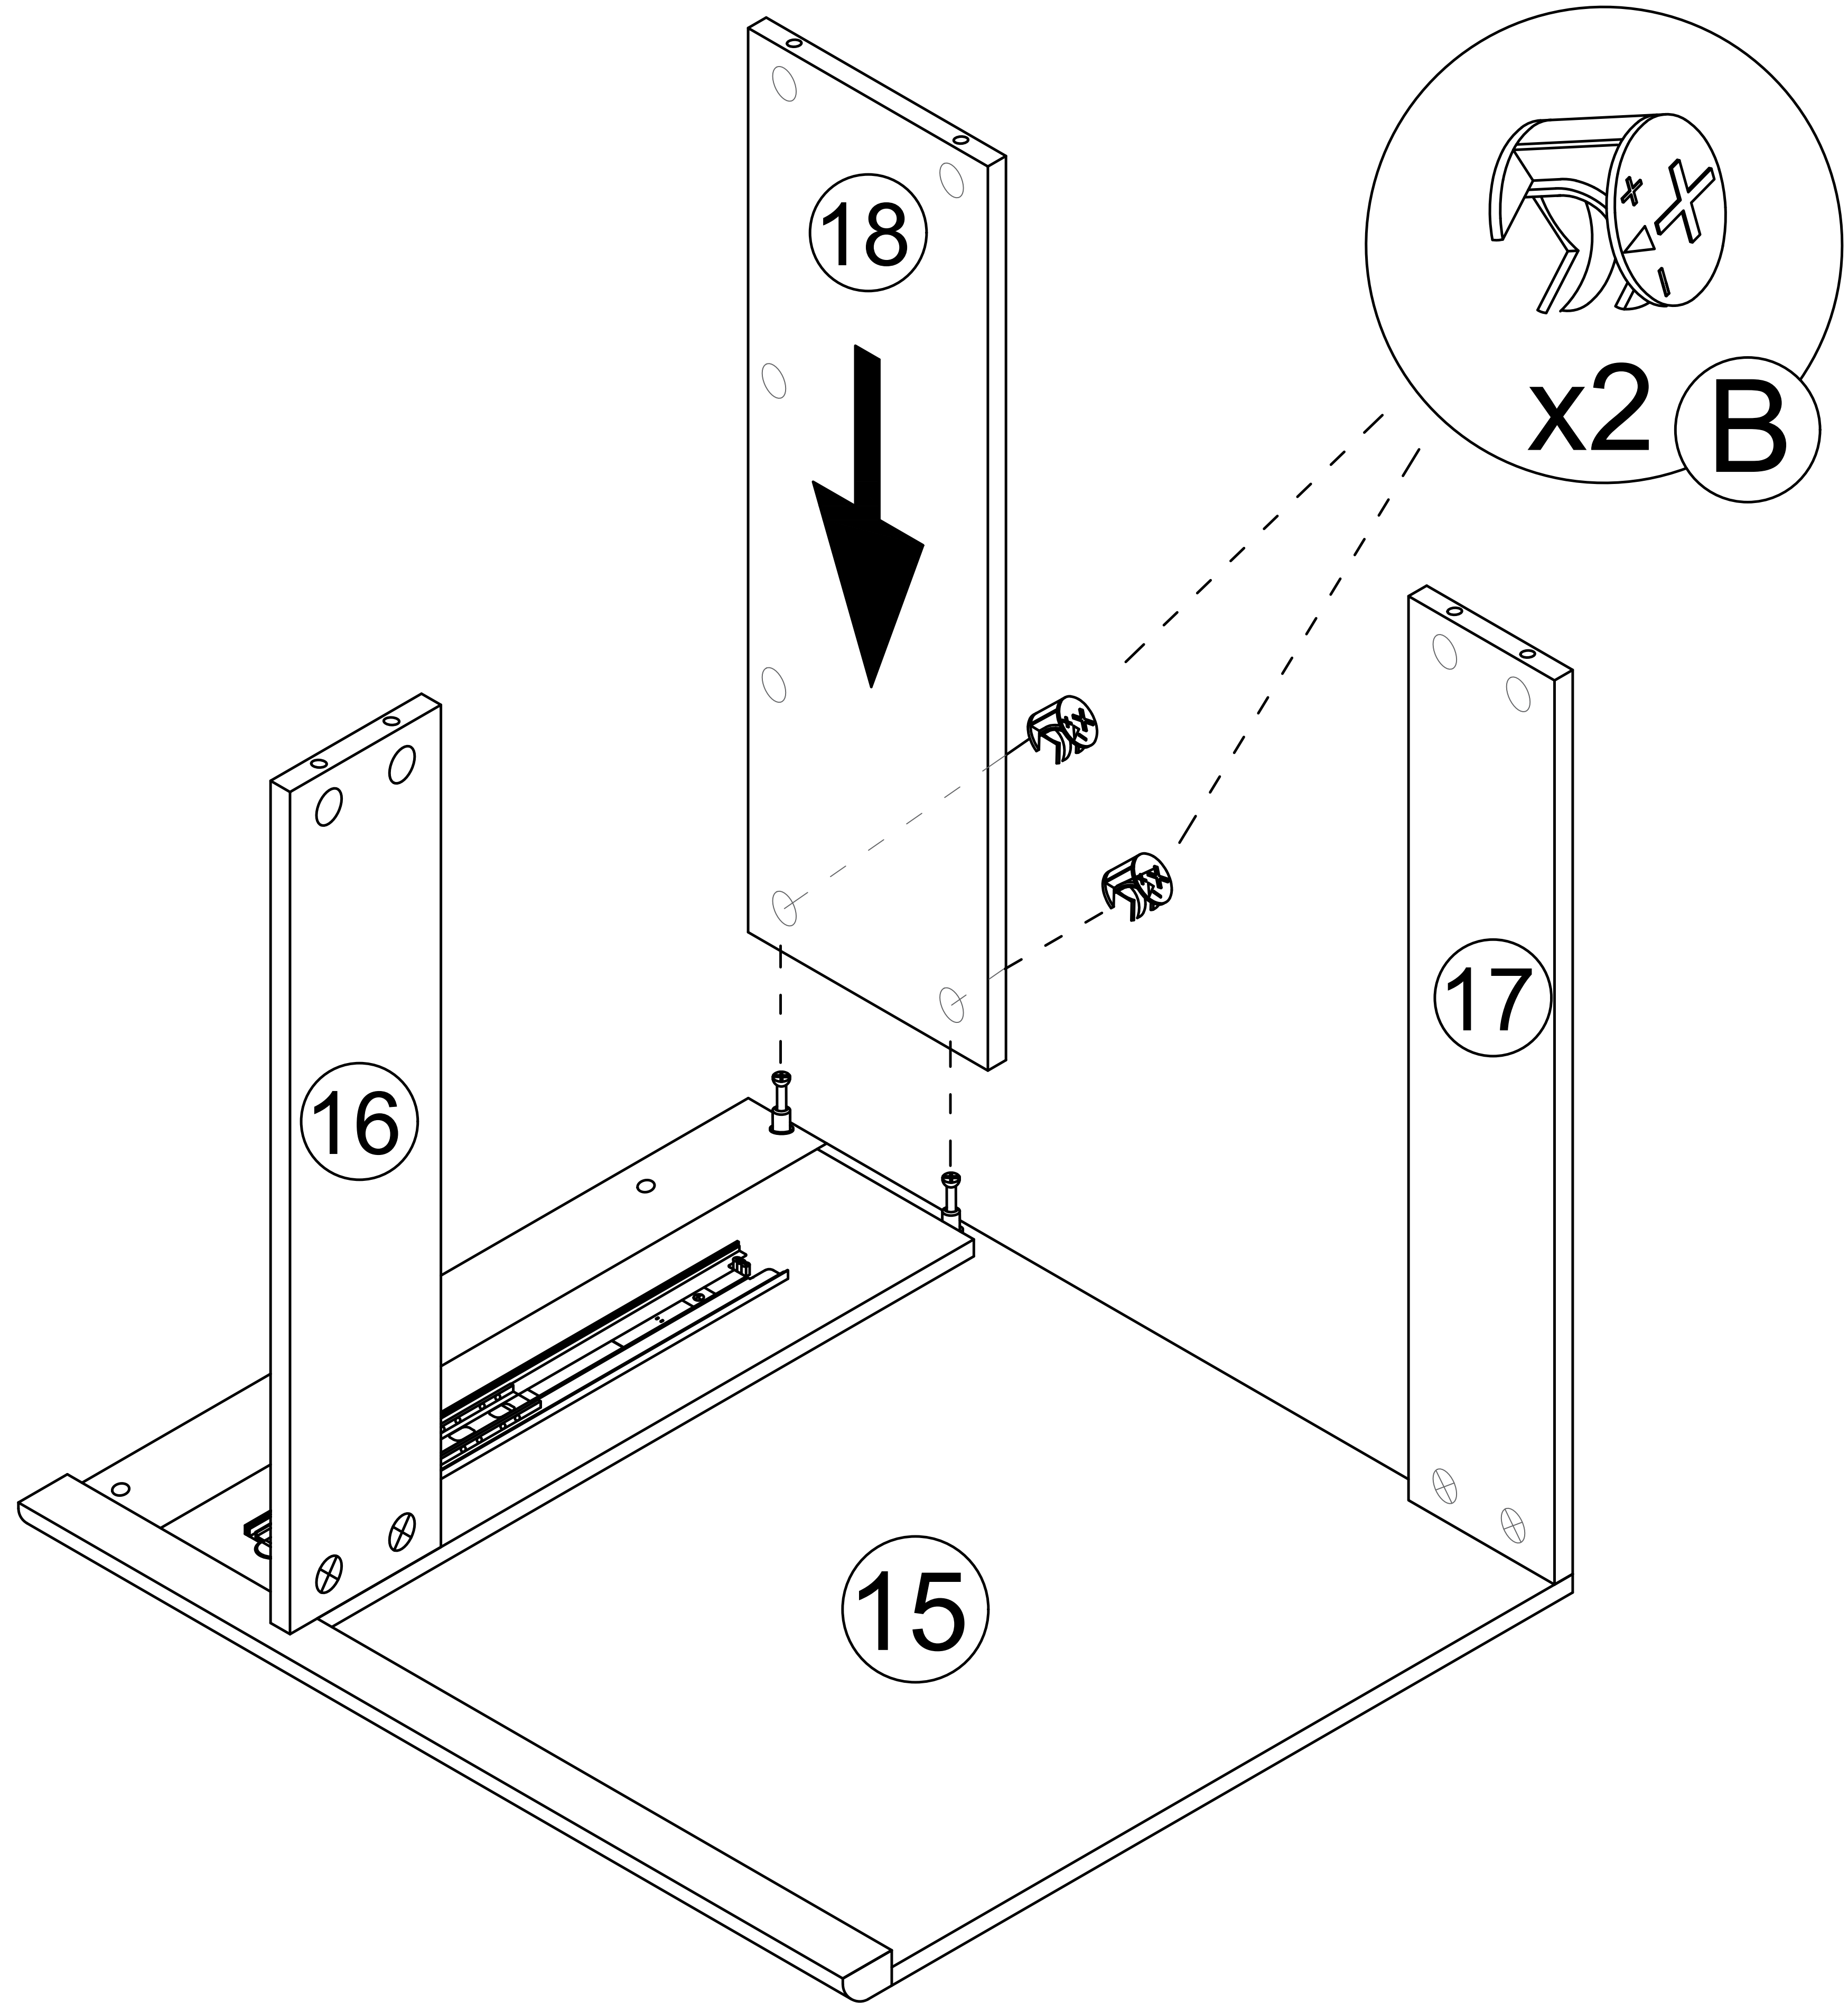

Step 40




A

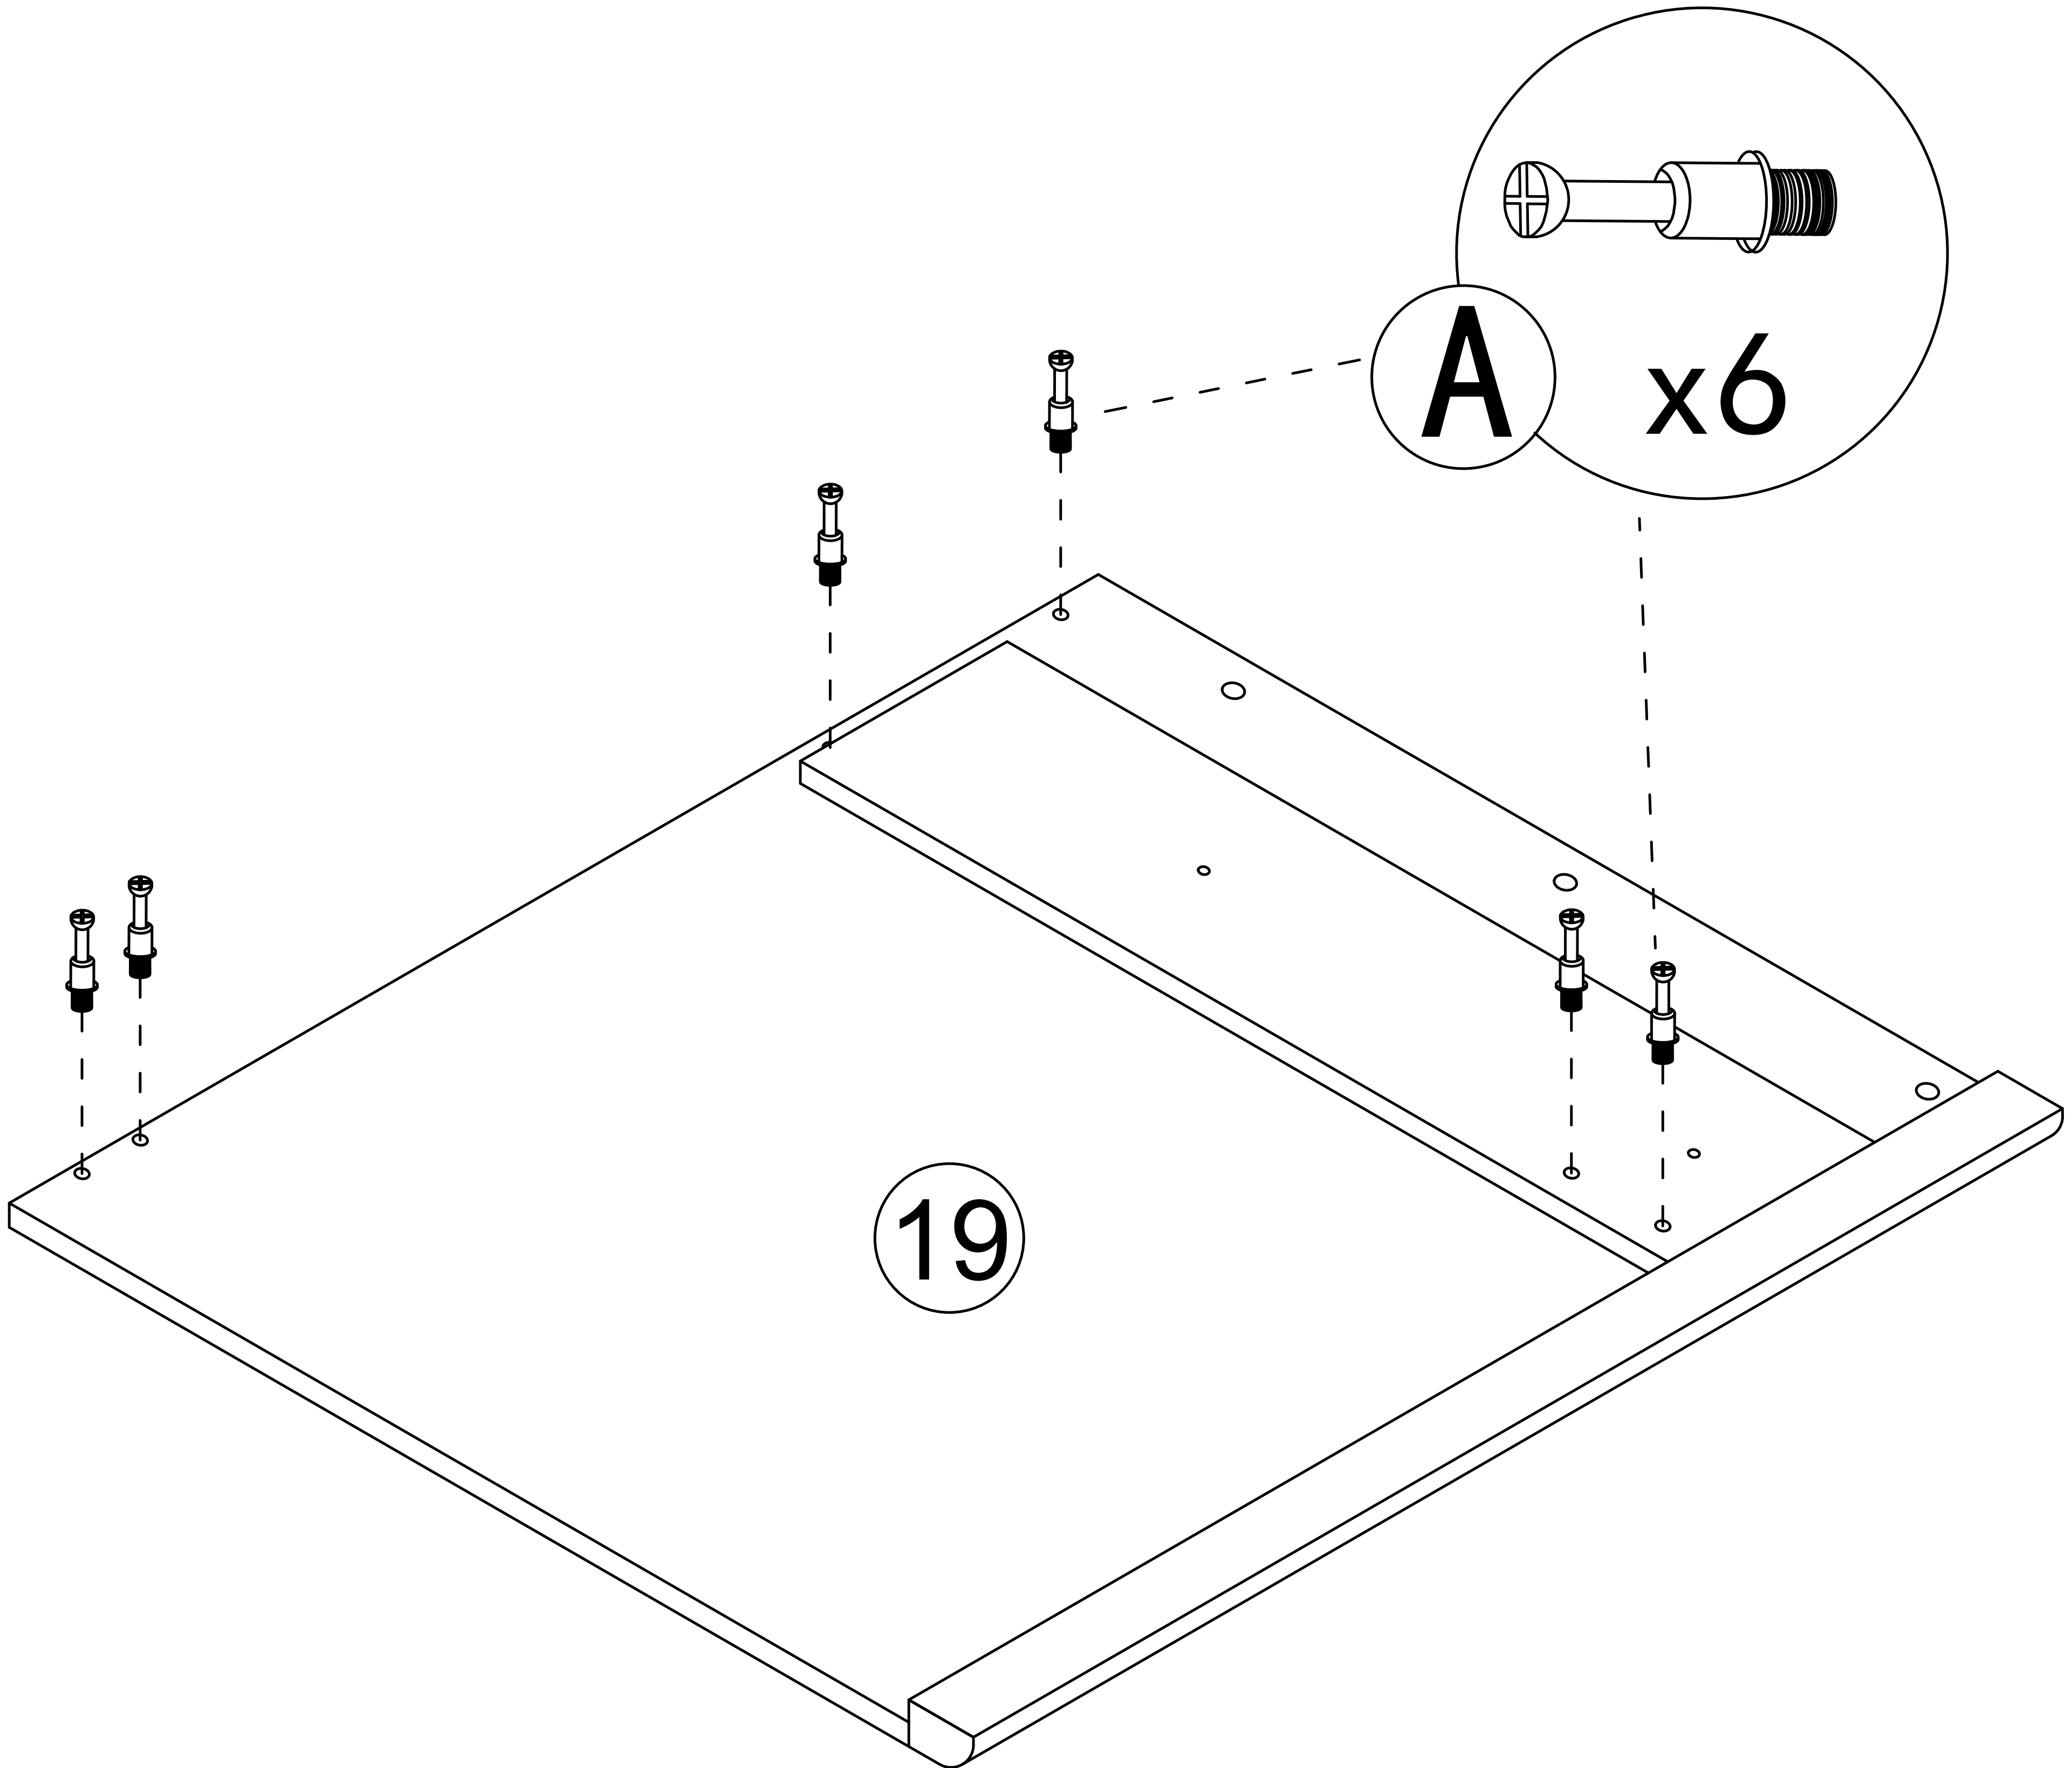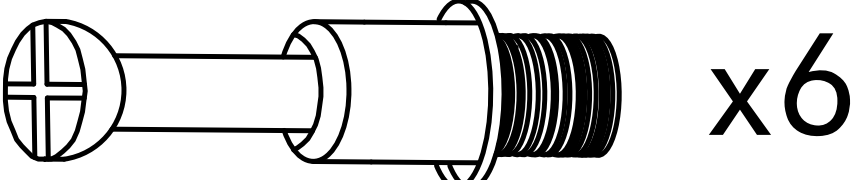

A


x6

Step 41

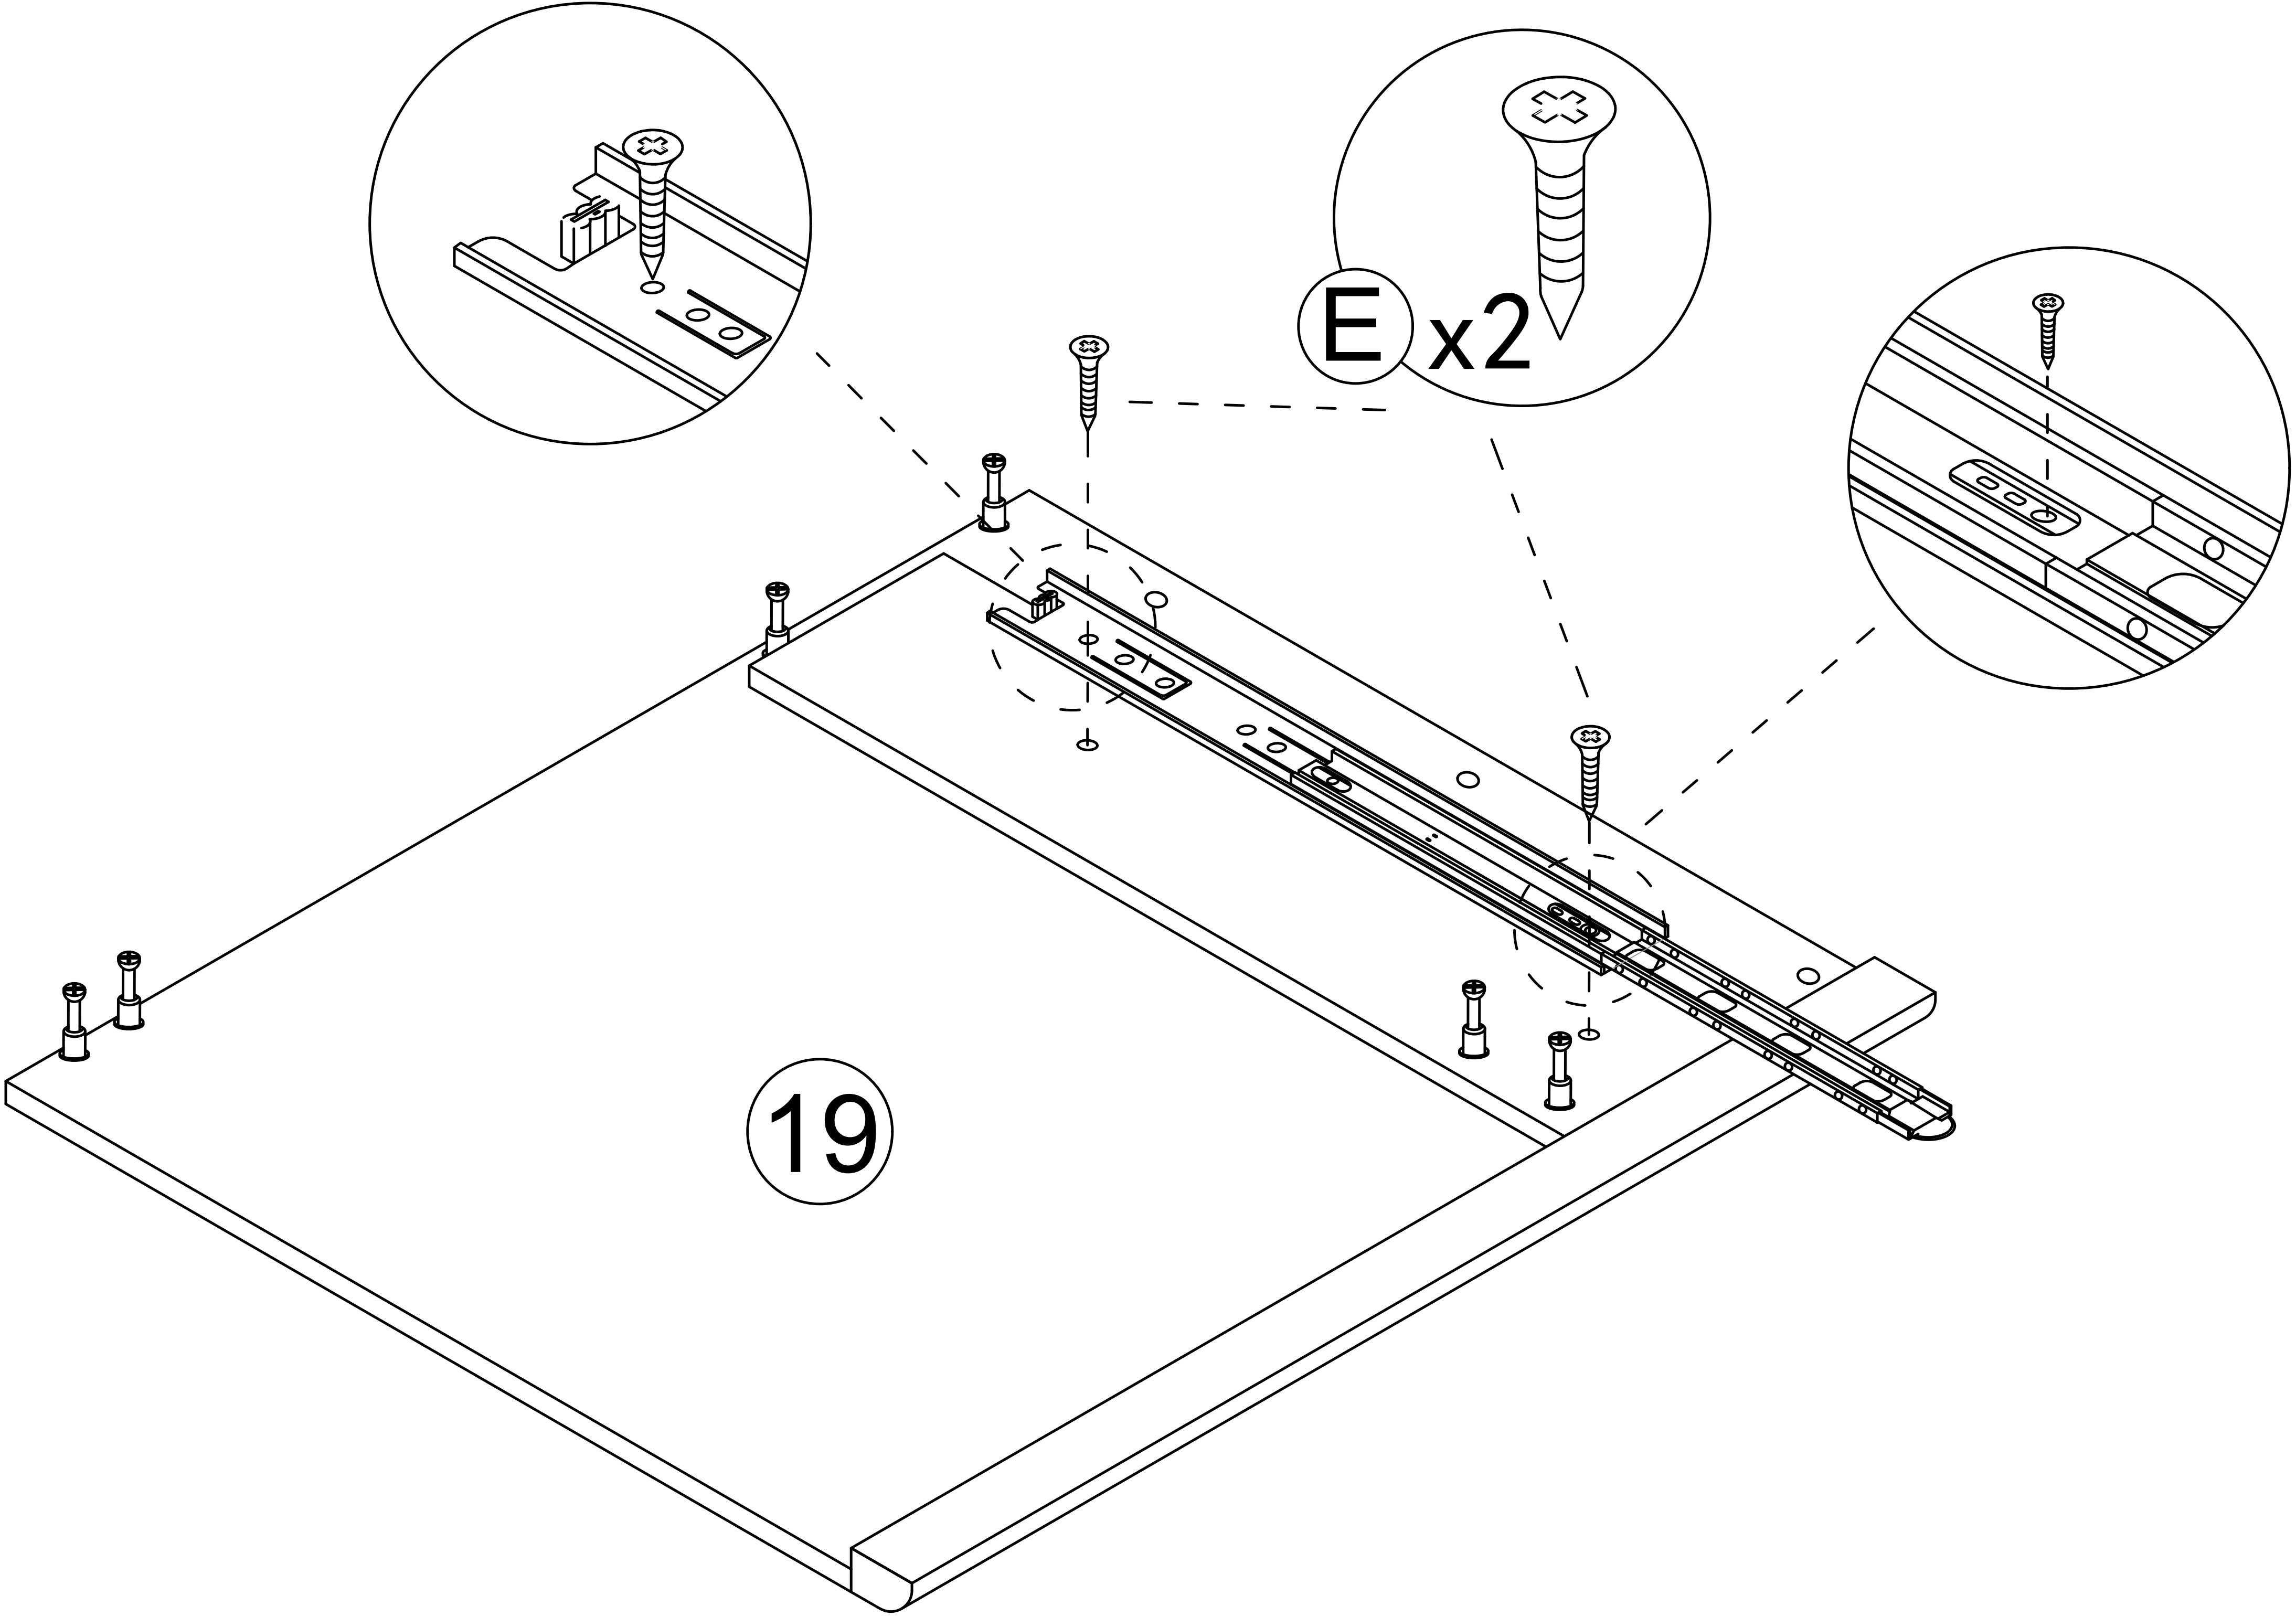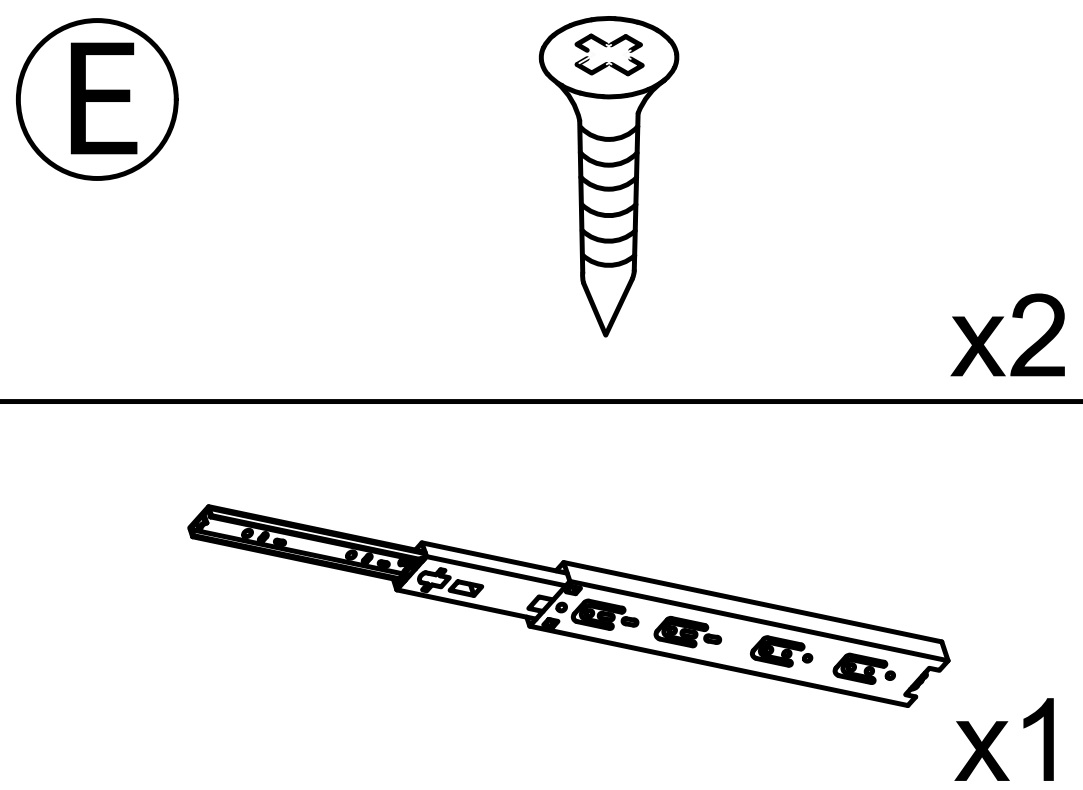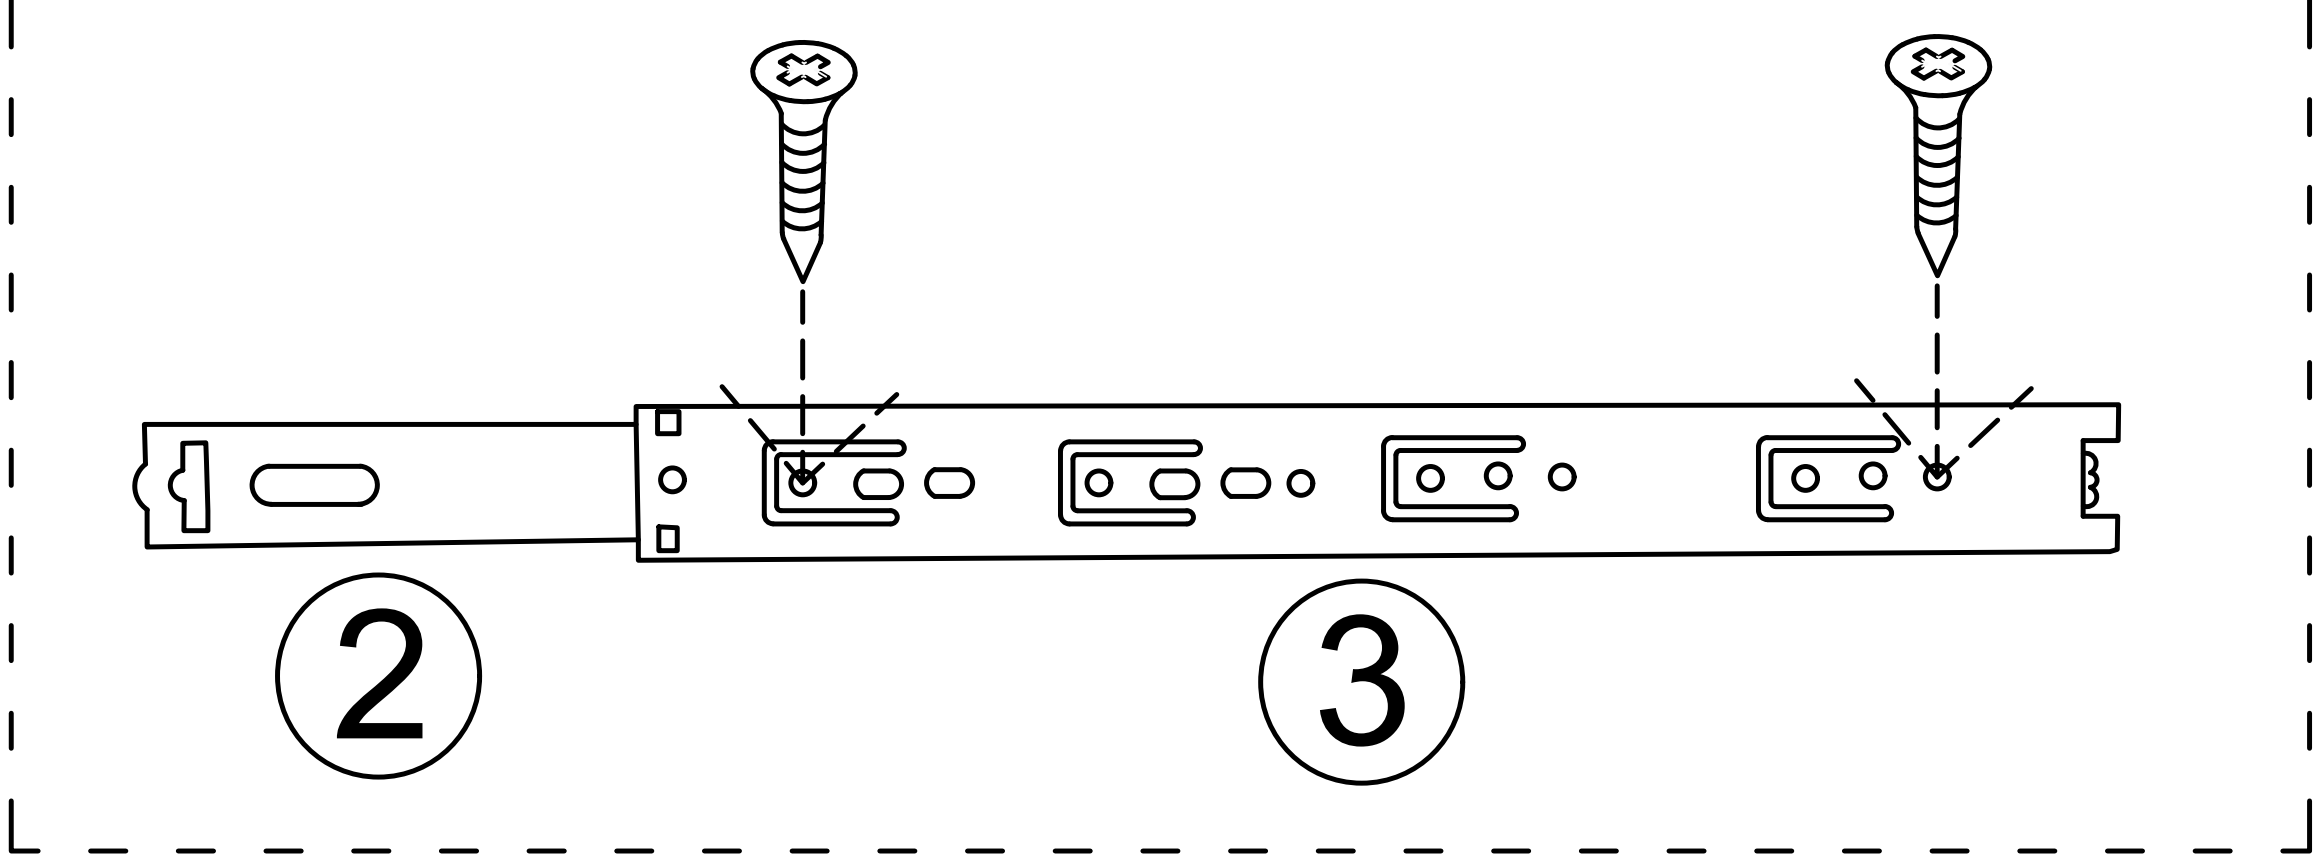


Step 42

E

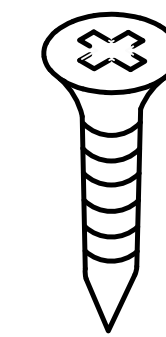


x1

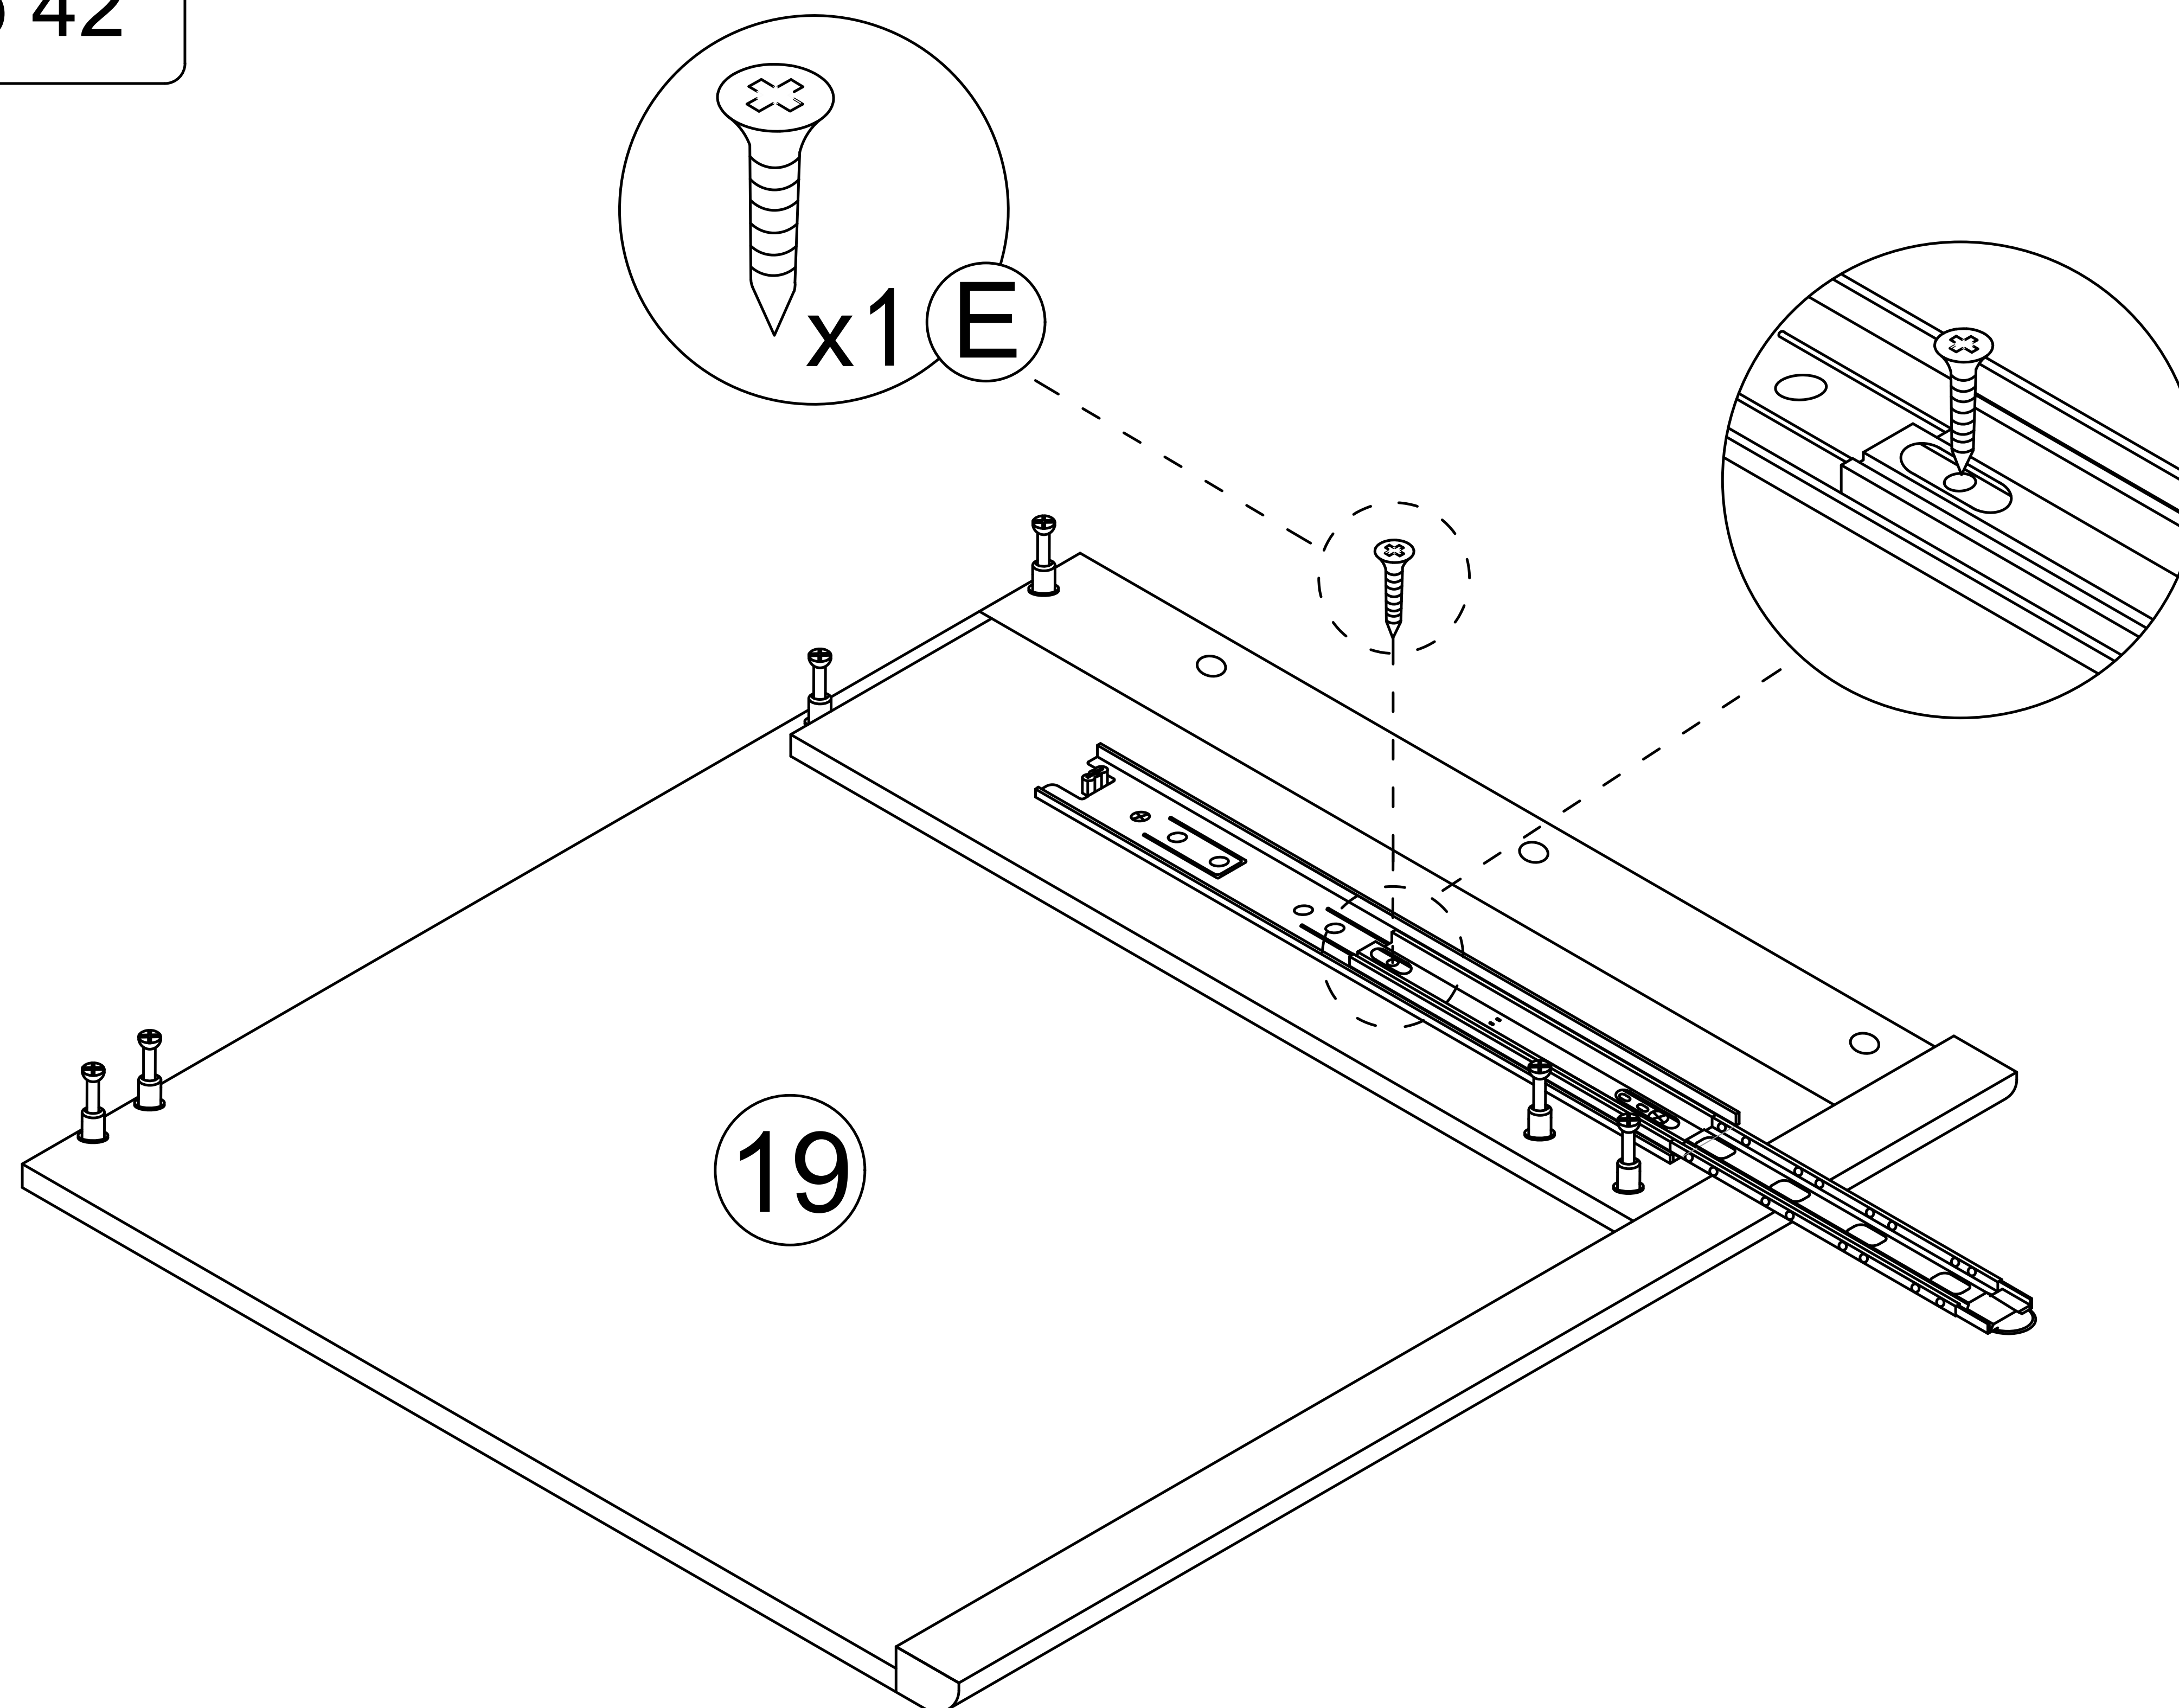


This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 43


B

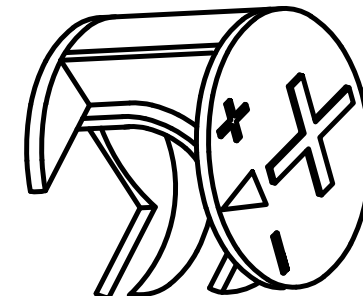


x6

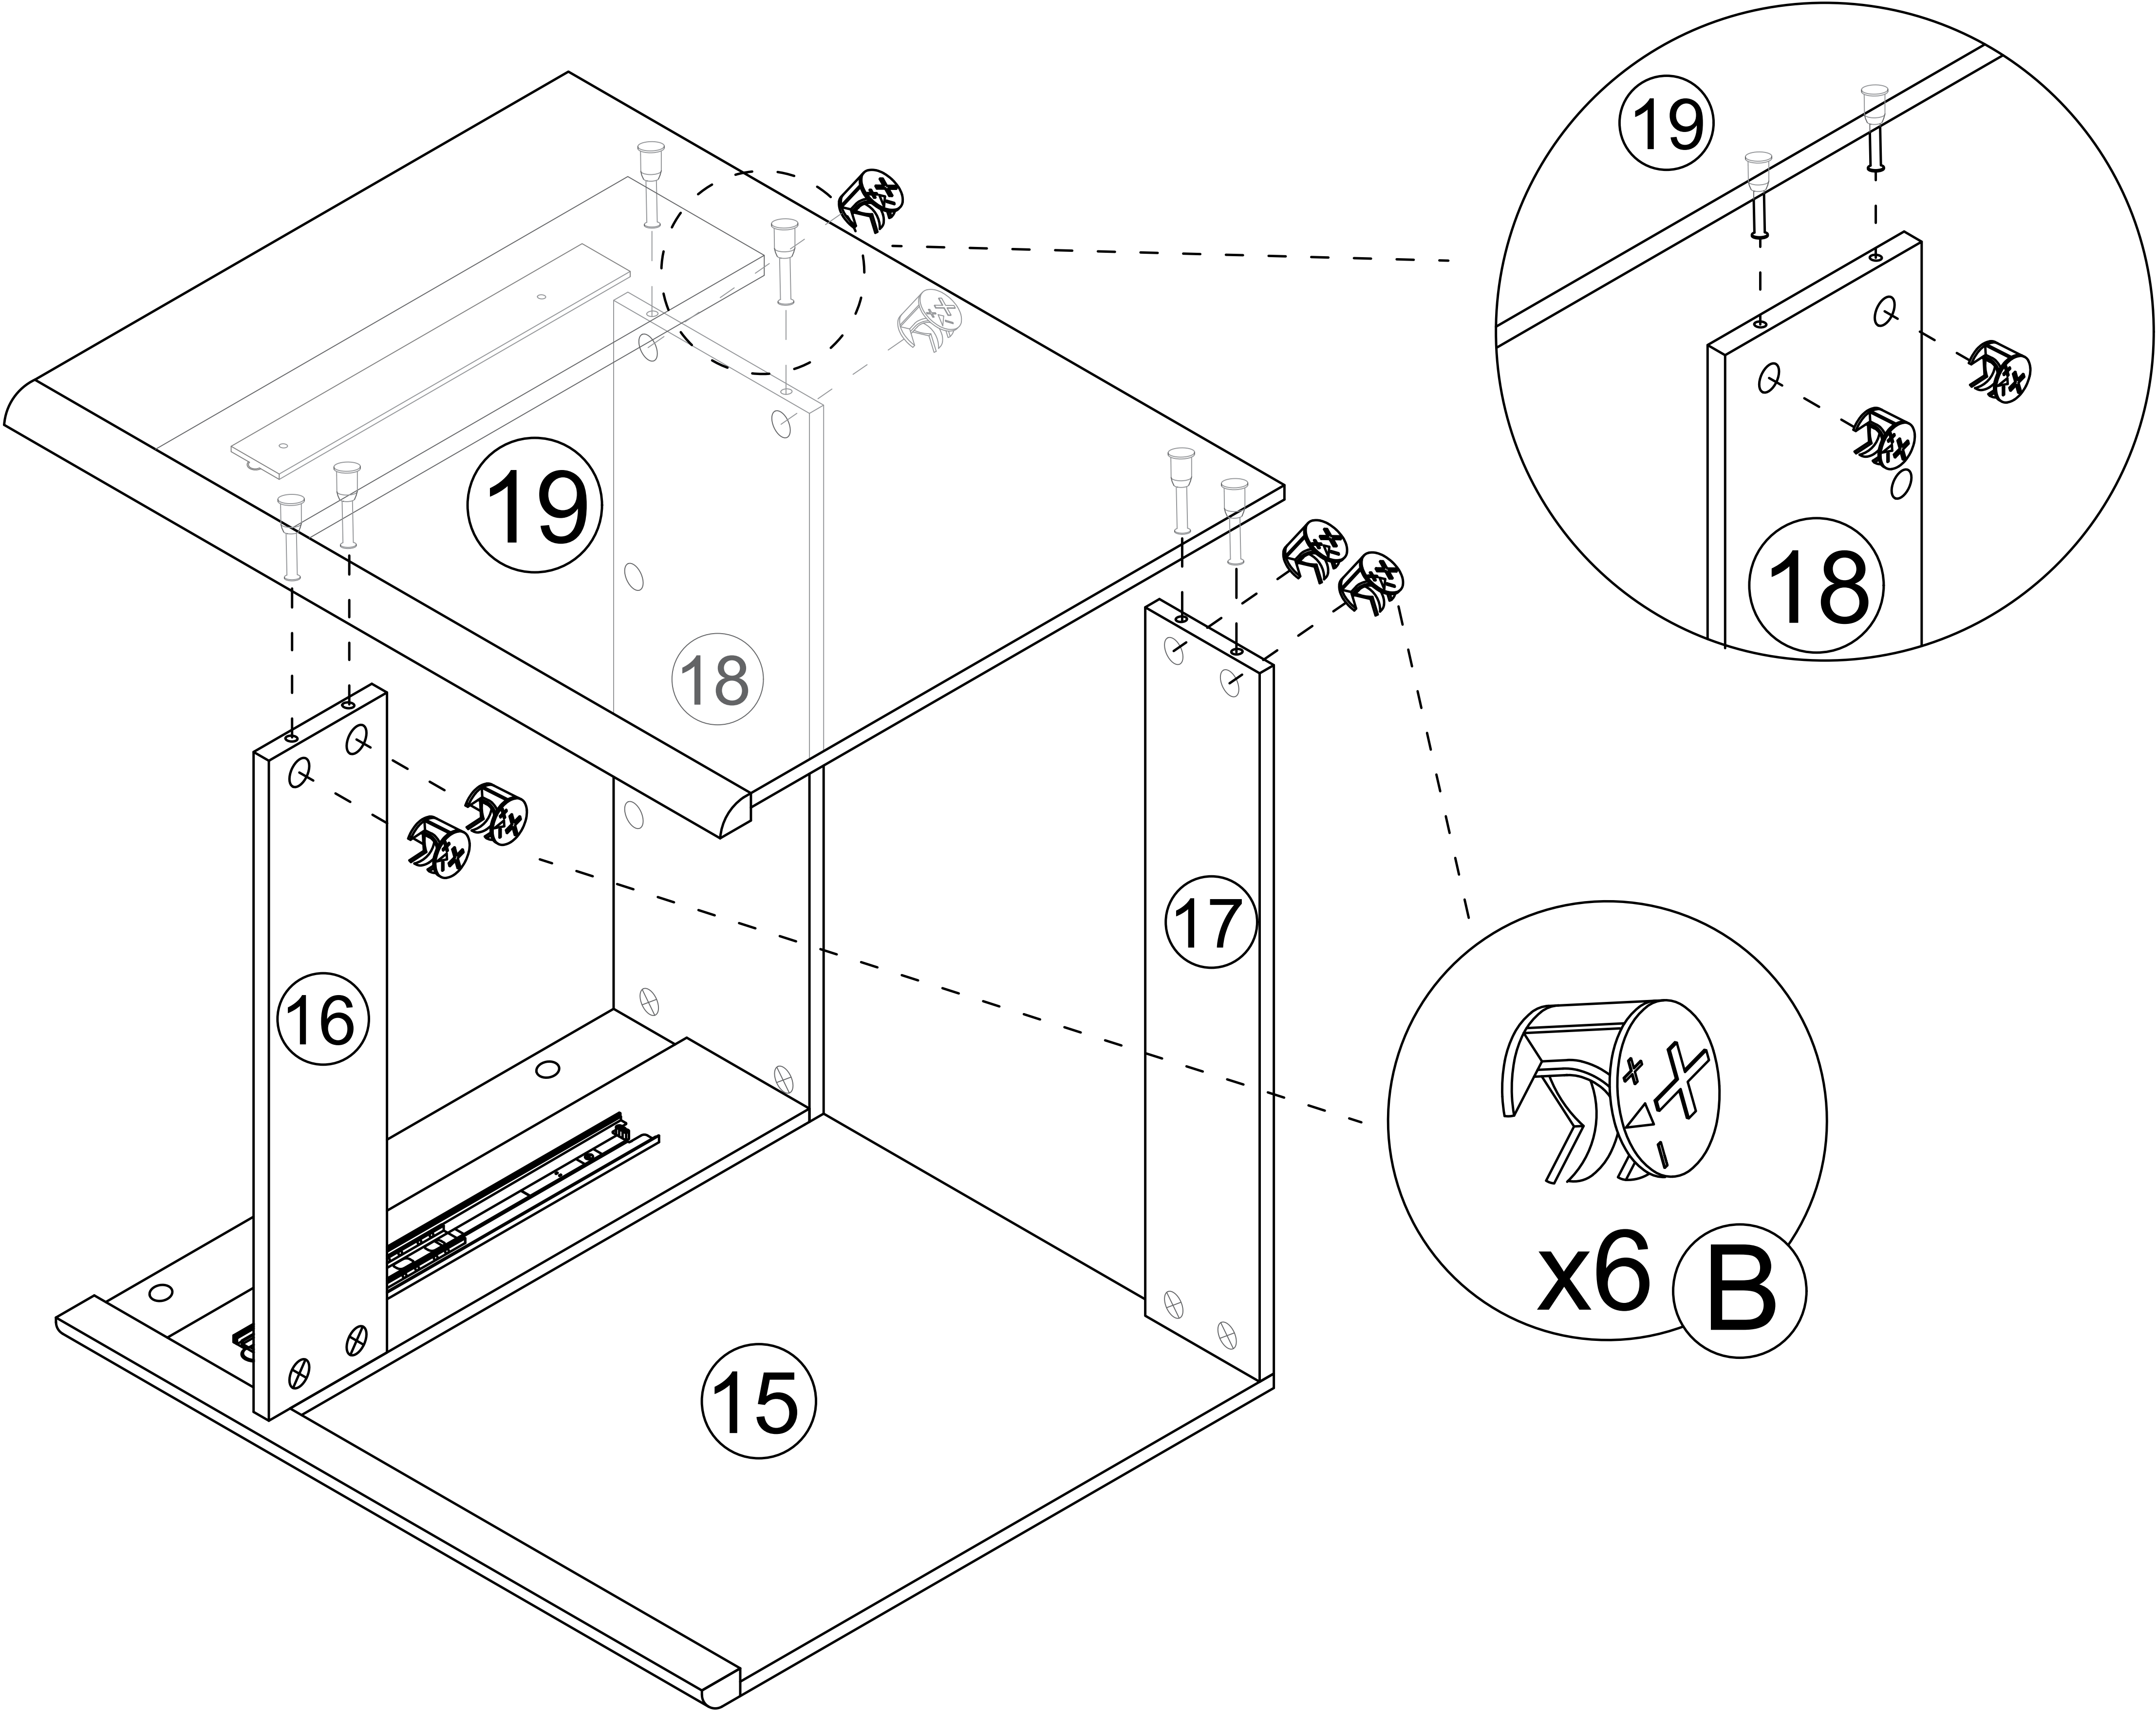

Step 44

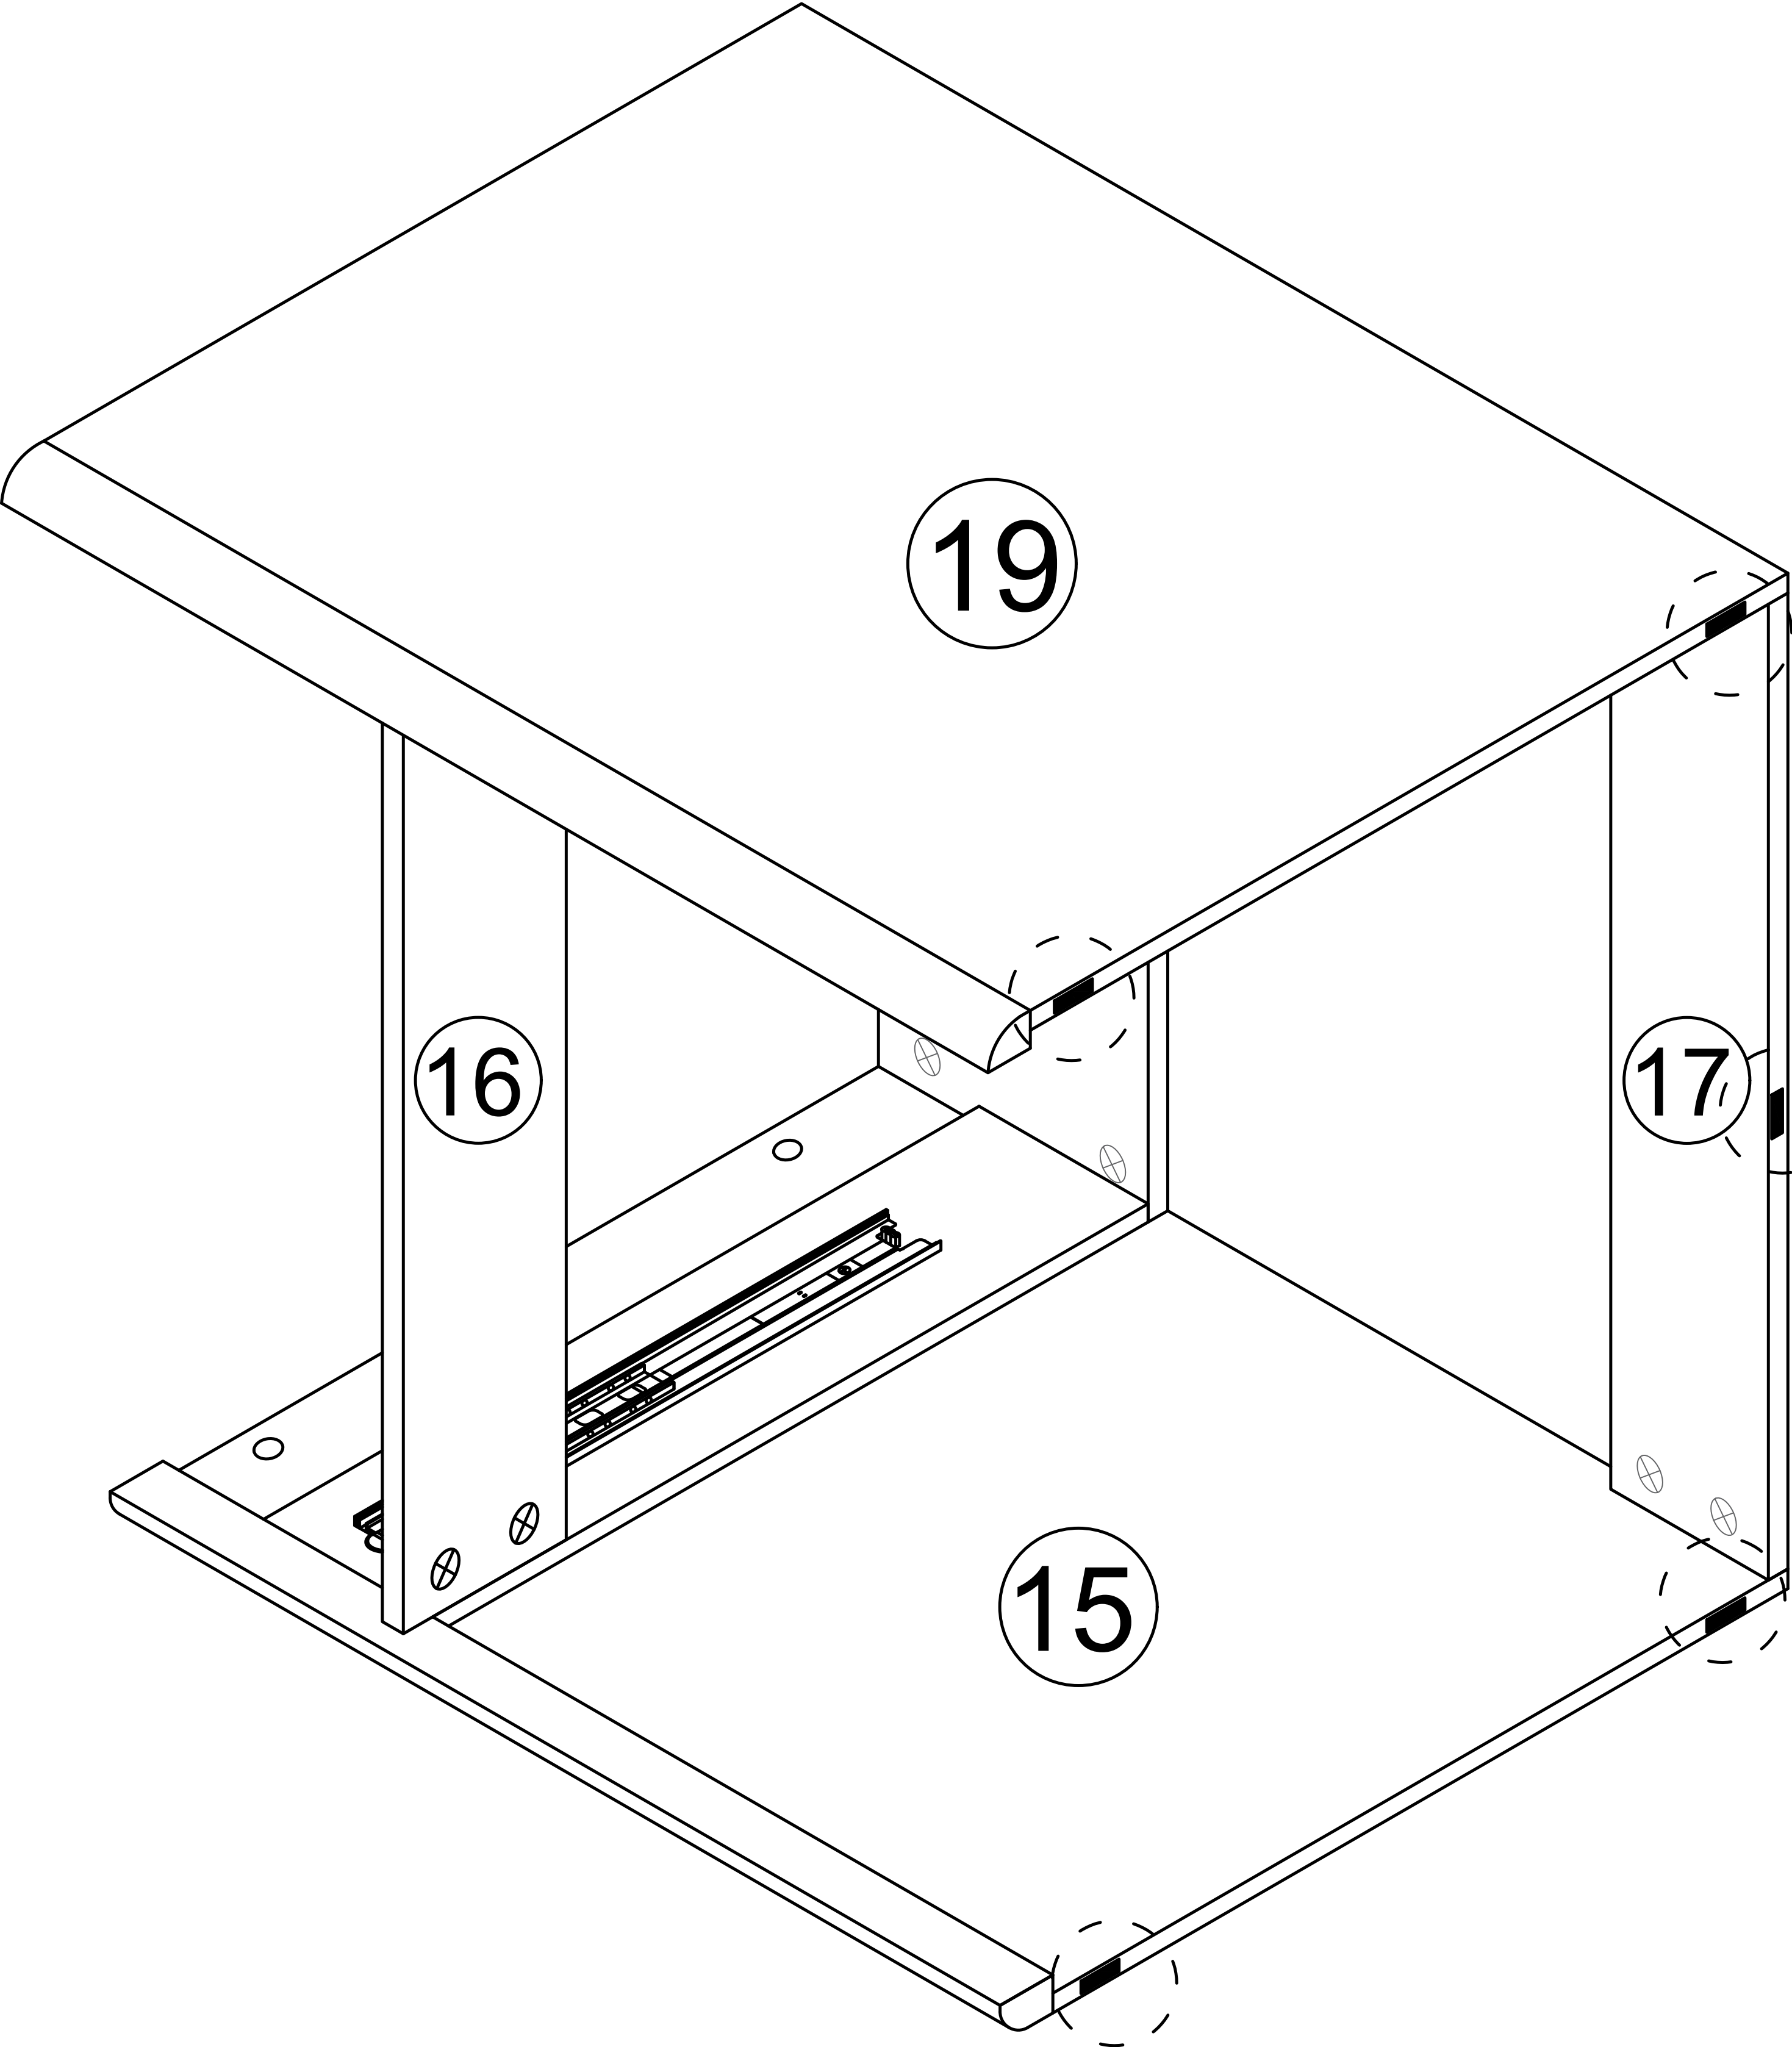


J

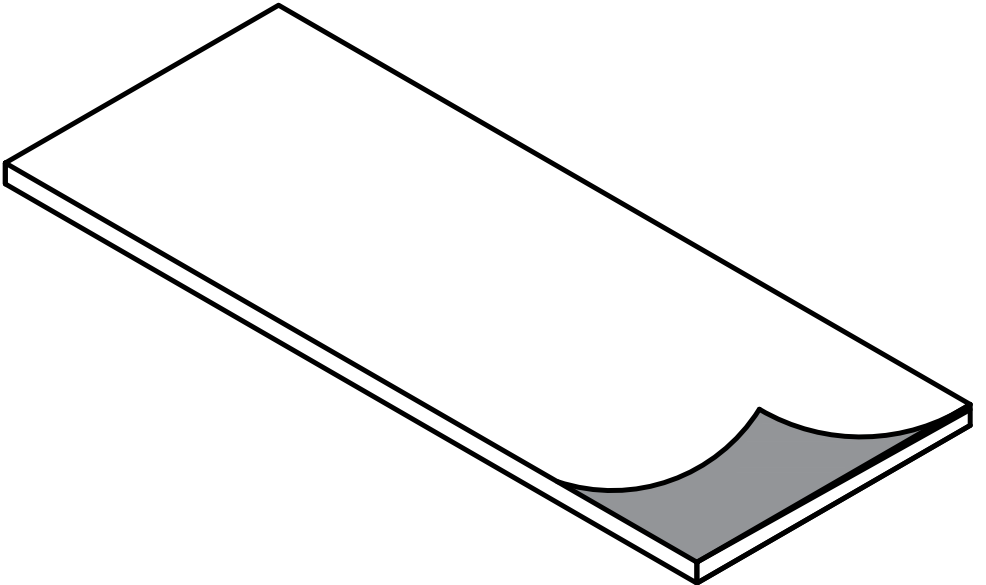


x5

Tear off release paper and stick the black foot pad on the board

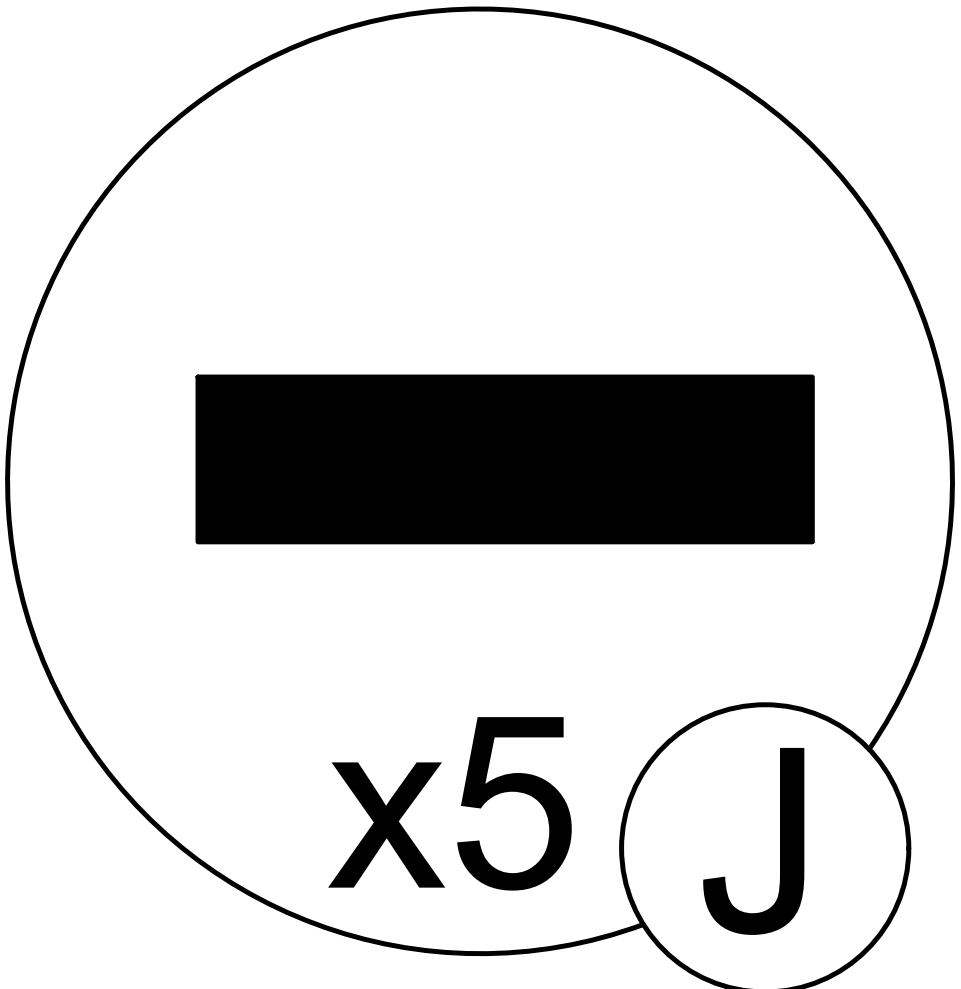


Step 45

A

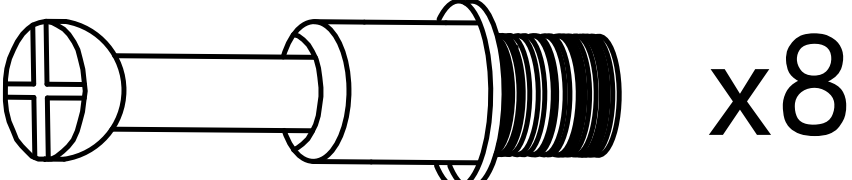


A

x8


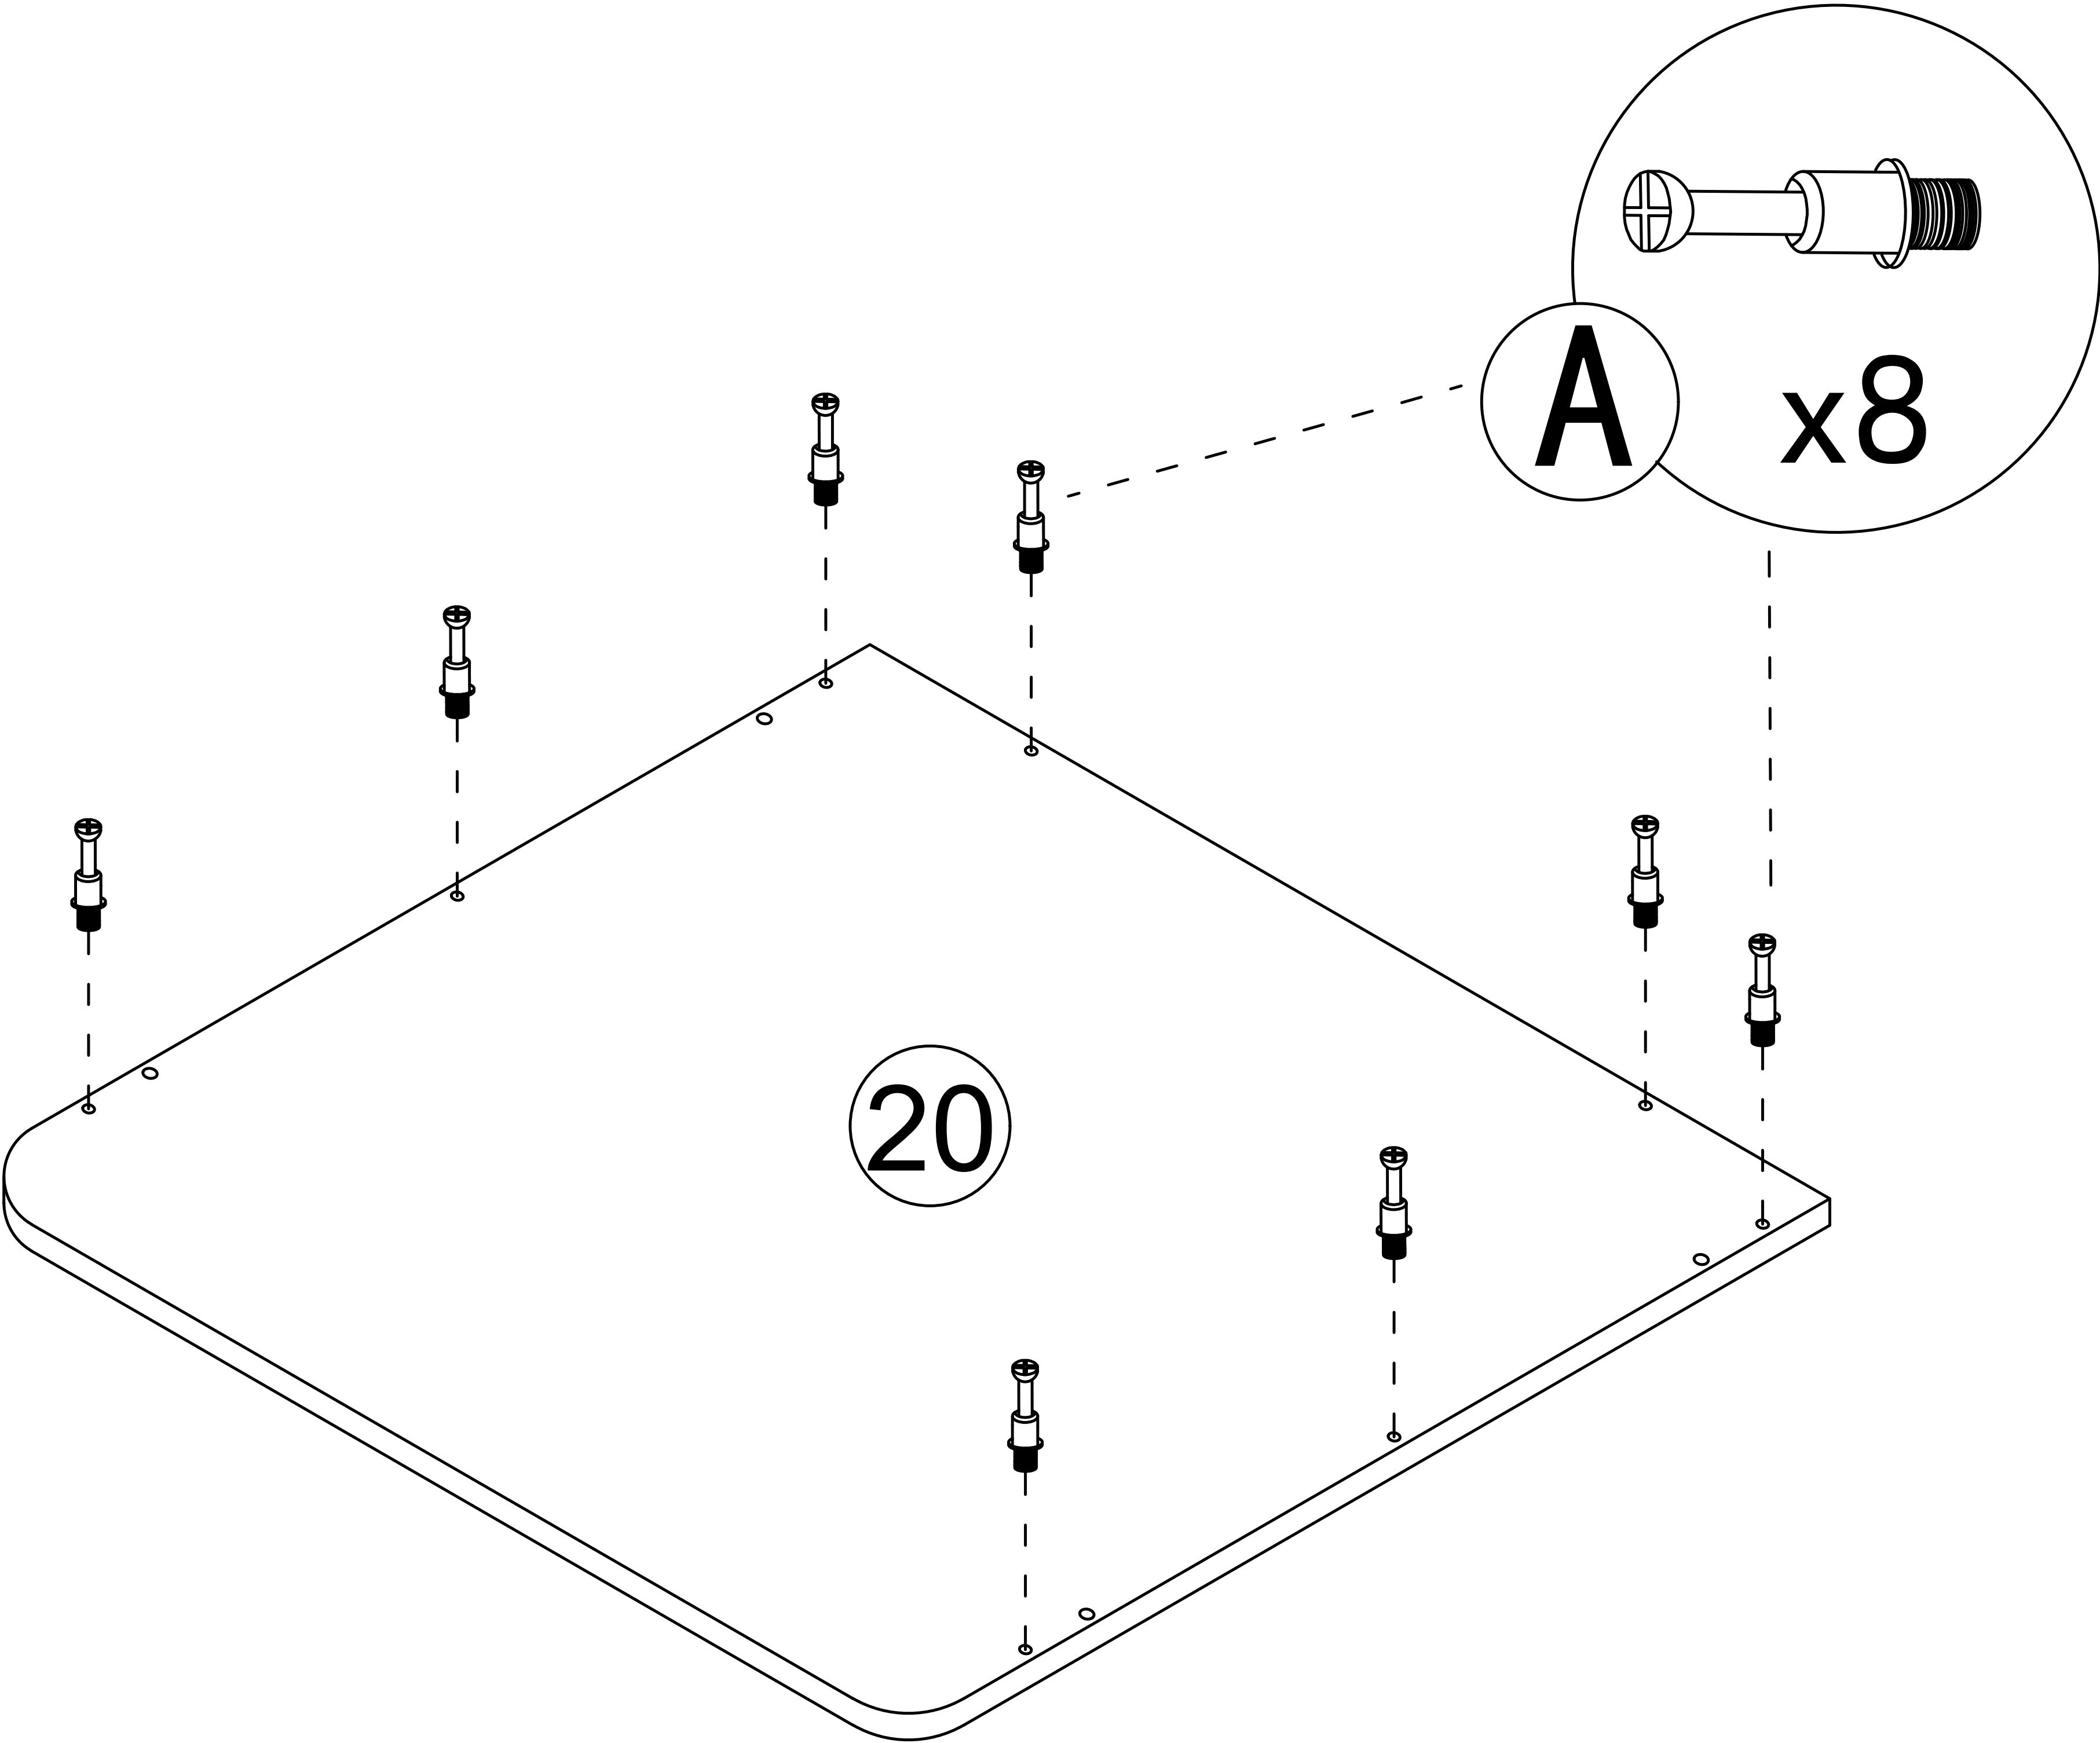


Step 46

C

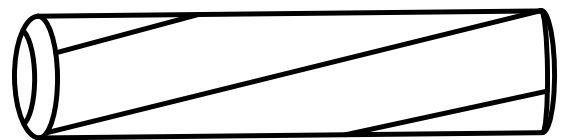


x4

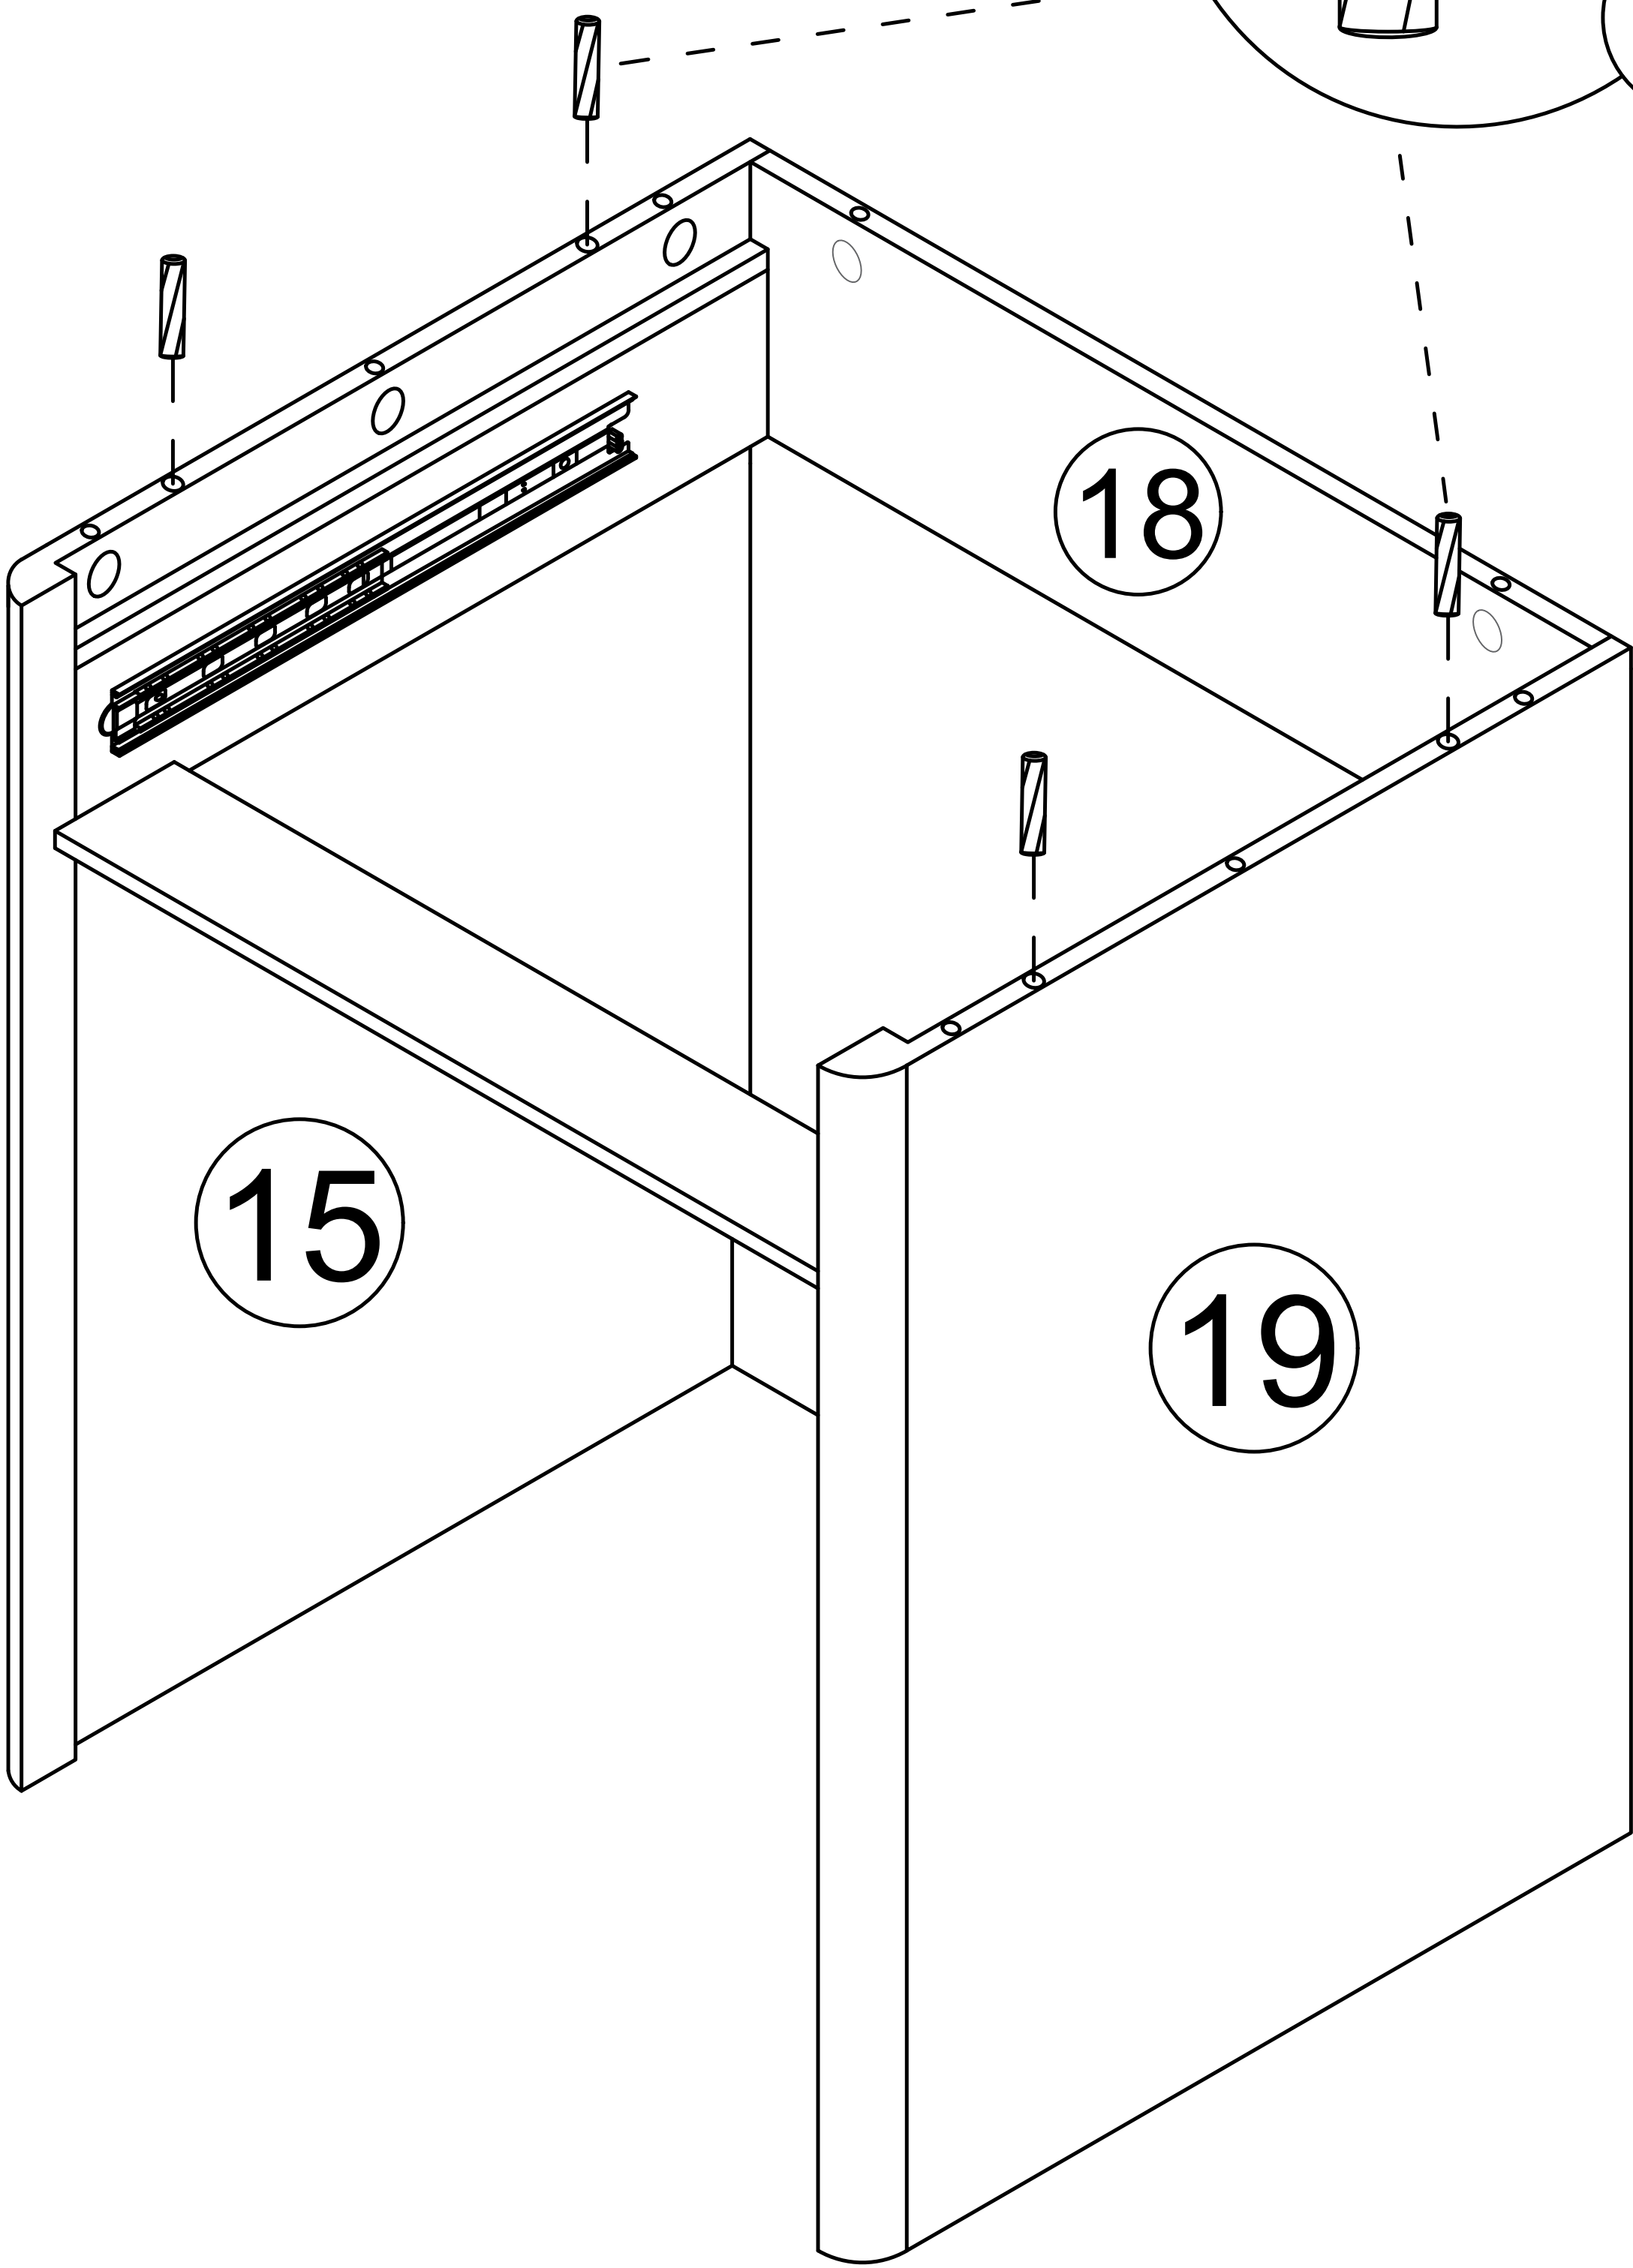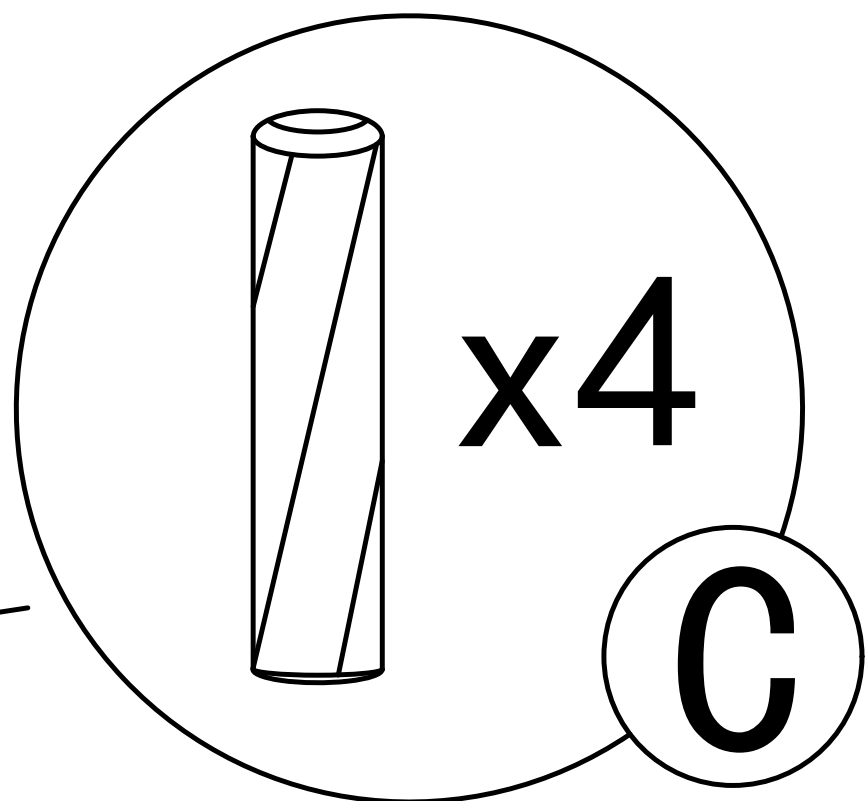


Step 47





B










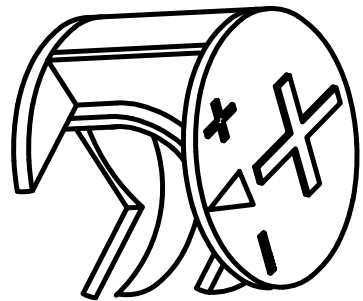






x8

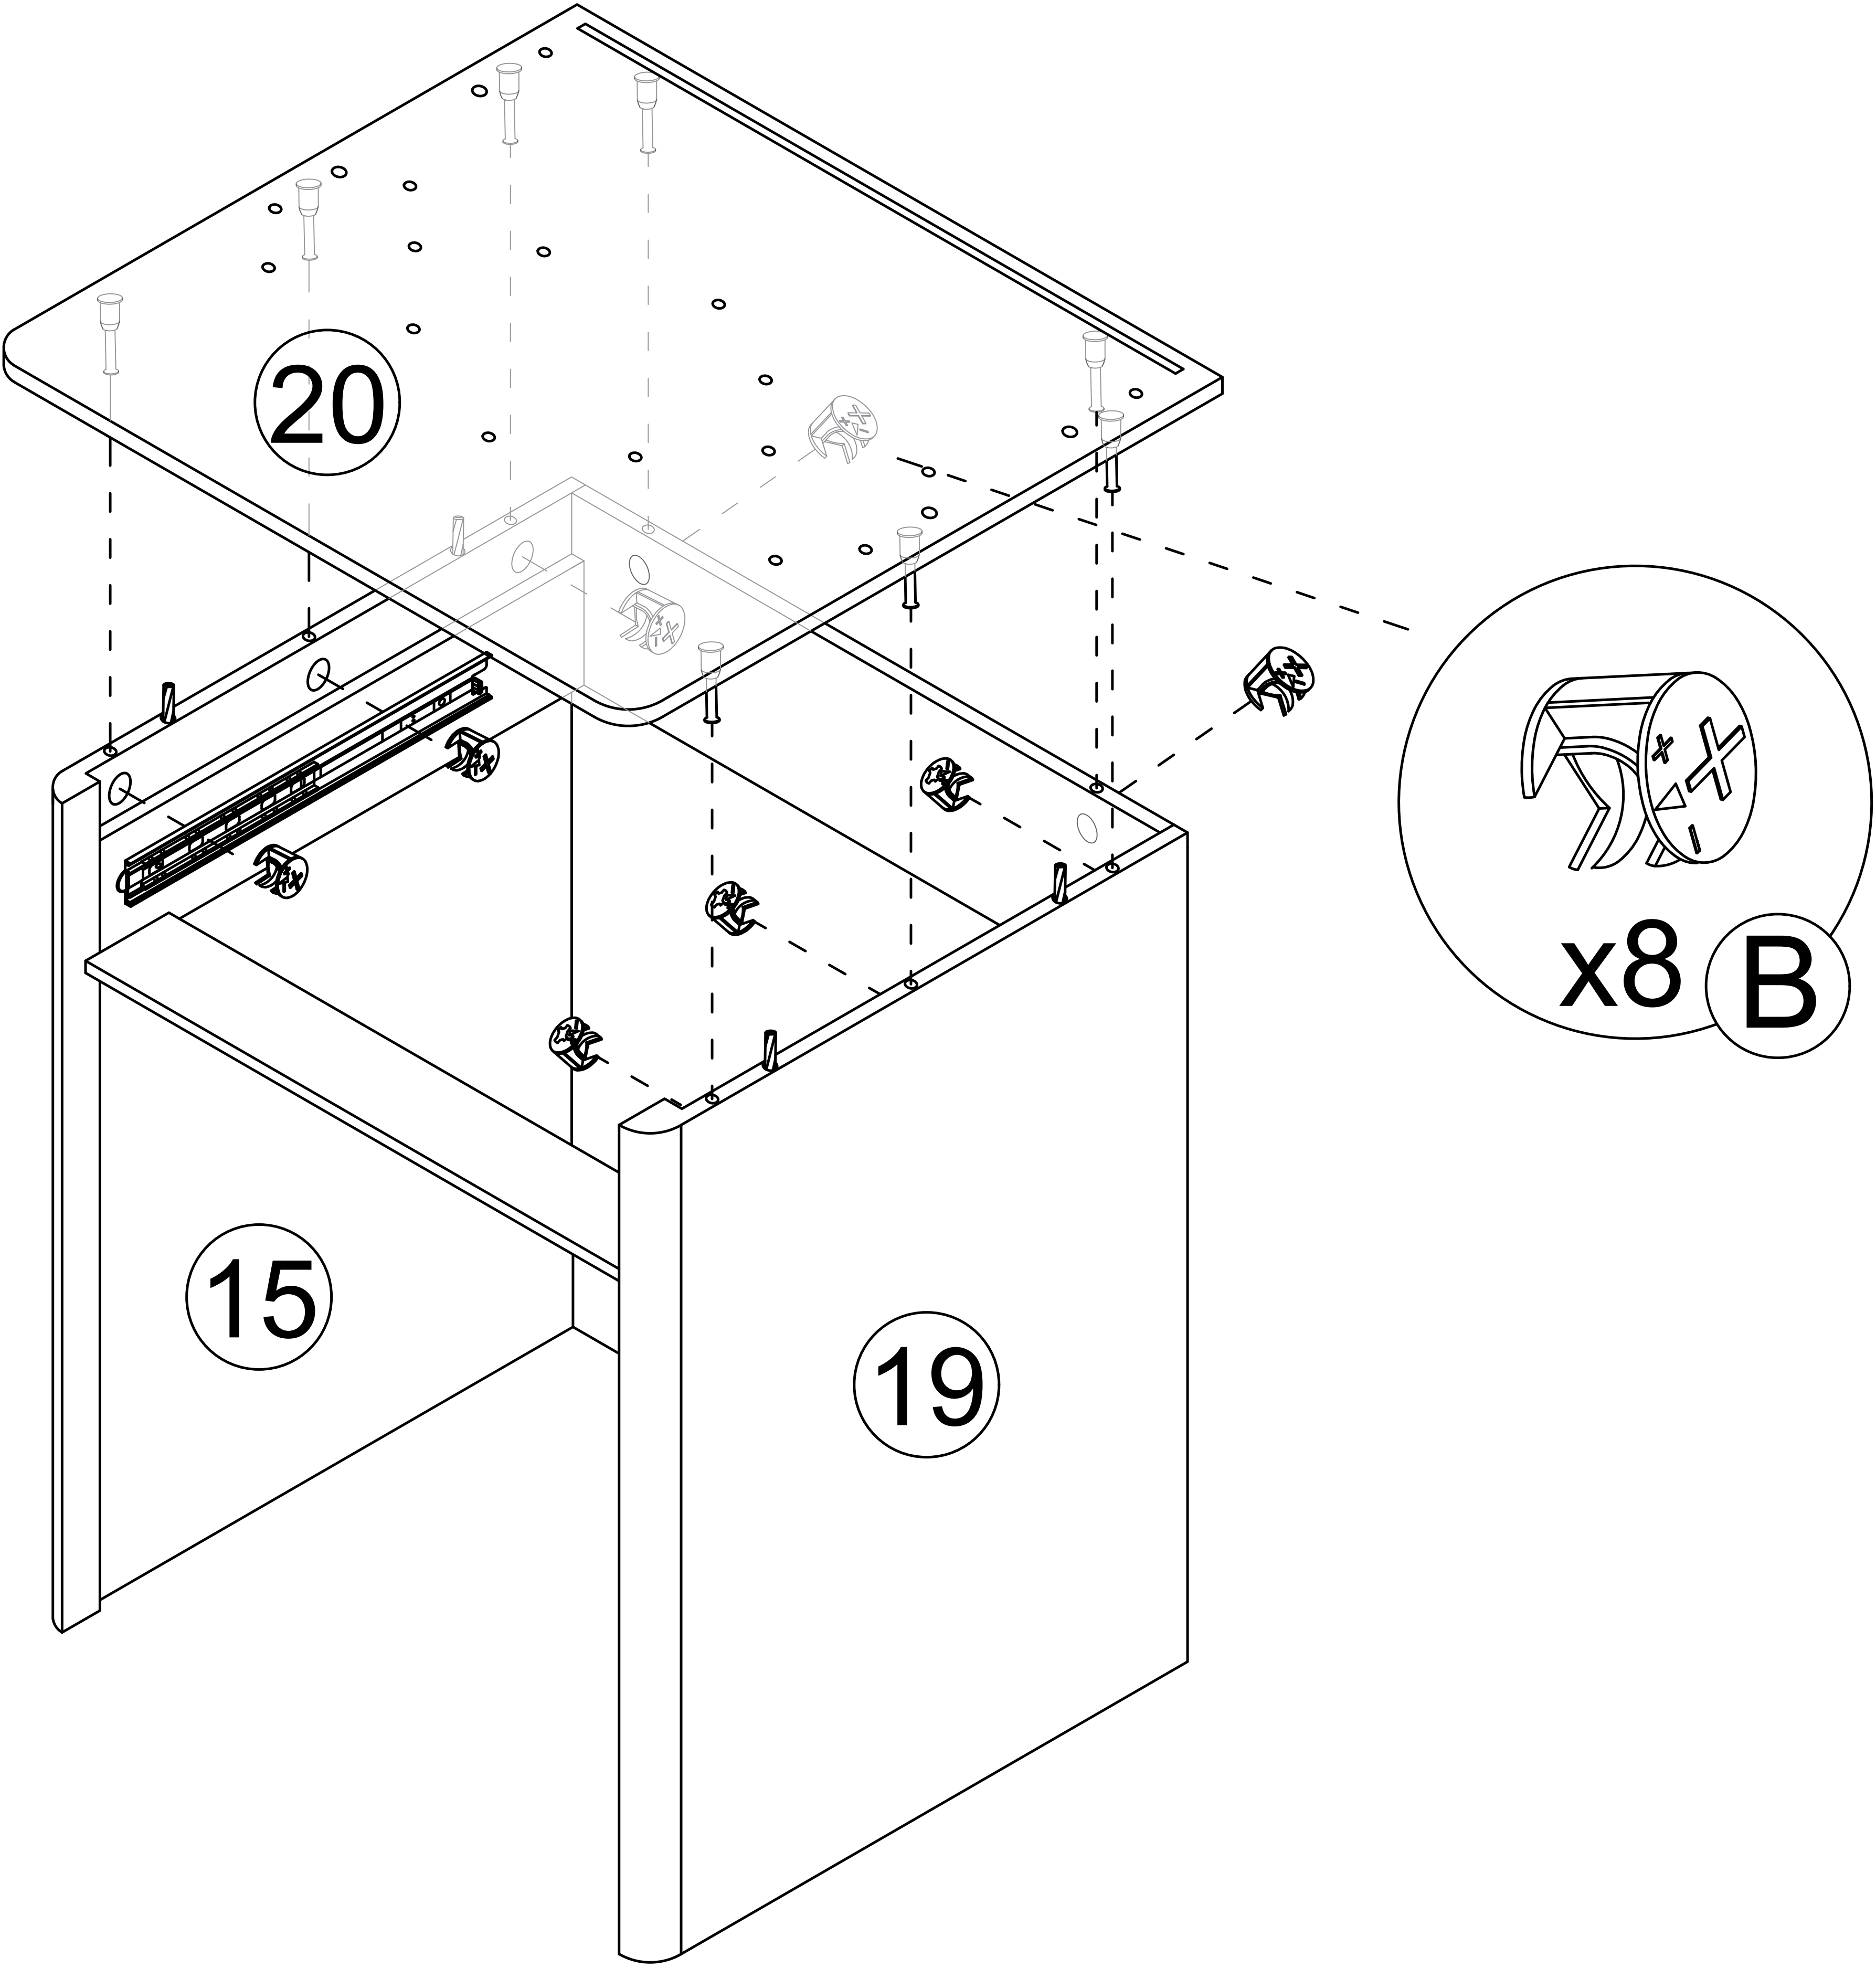

Step 48

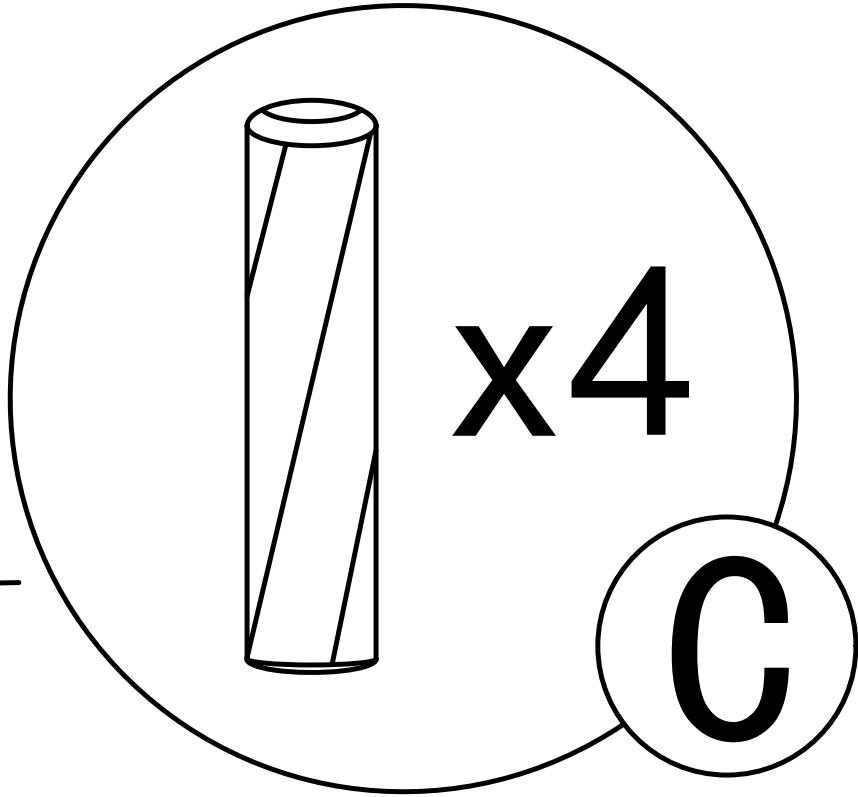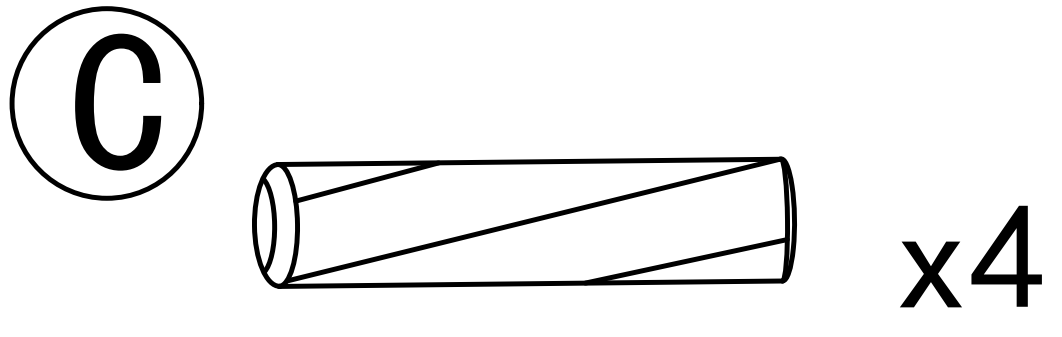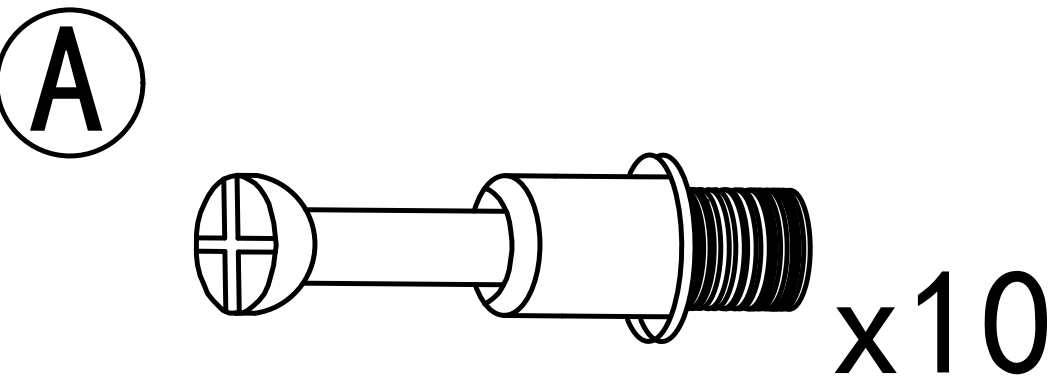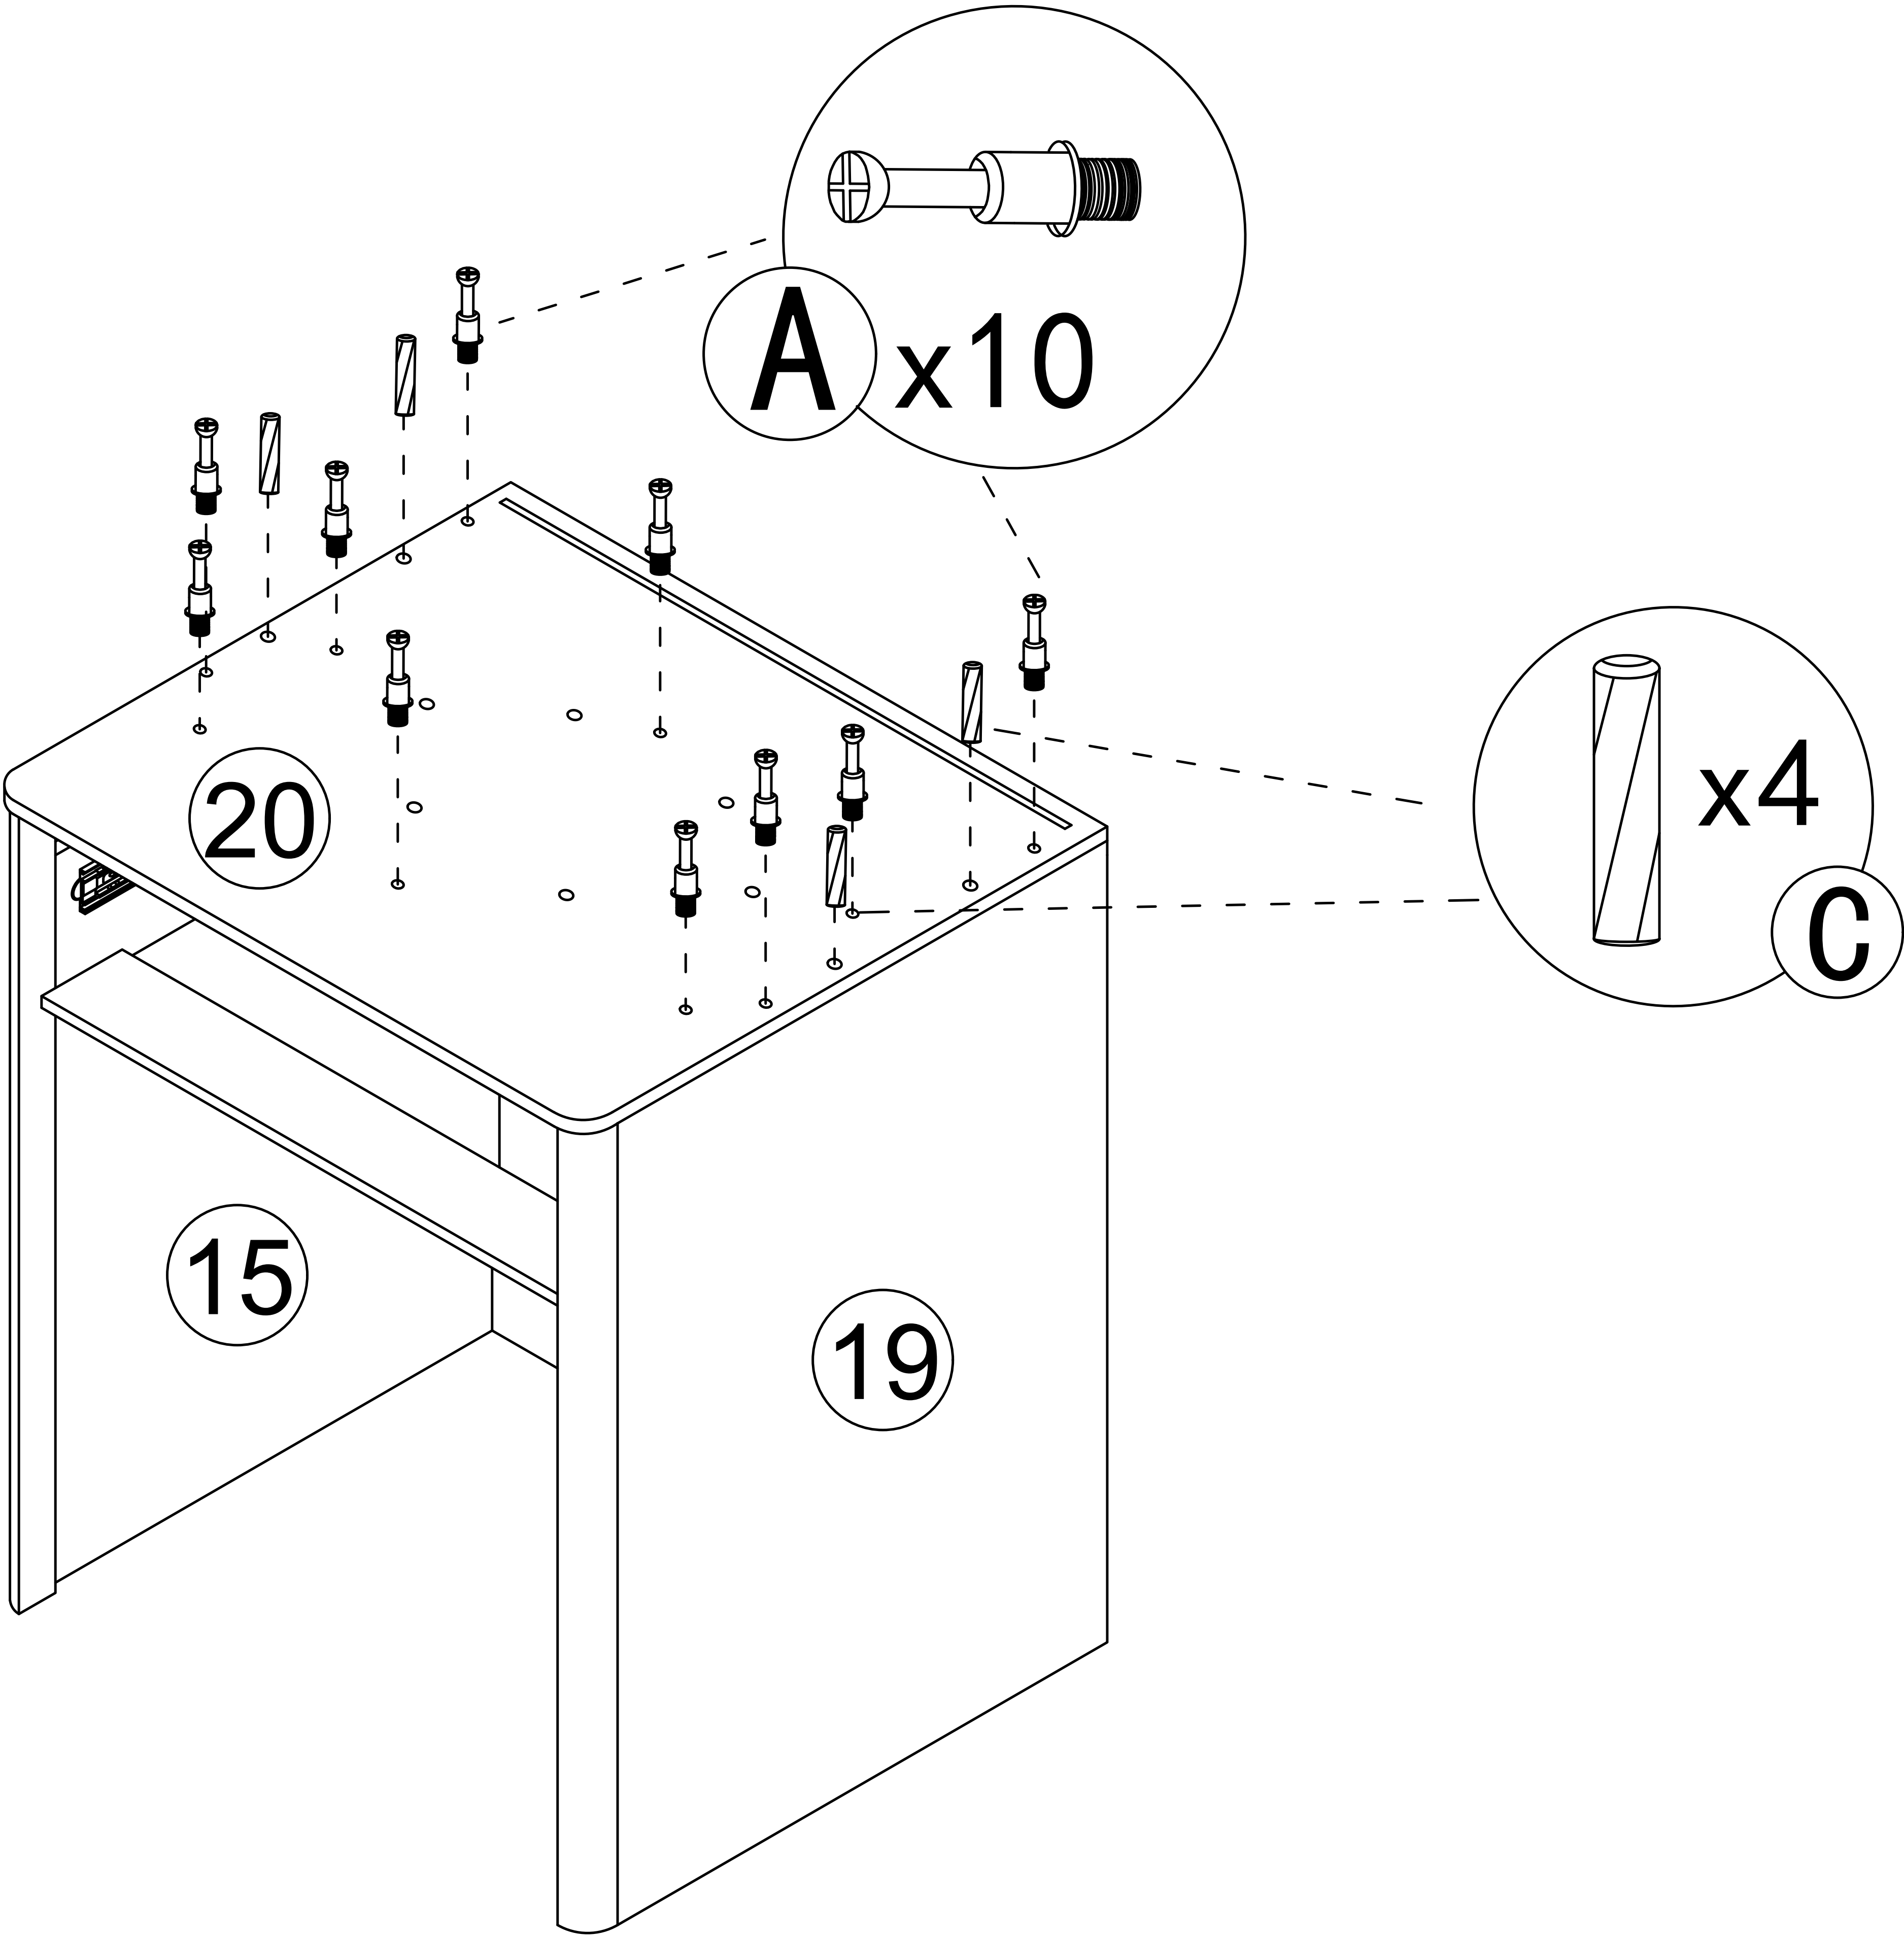


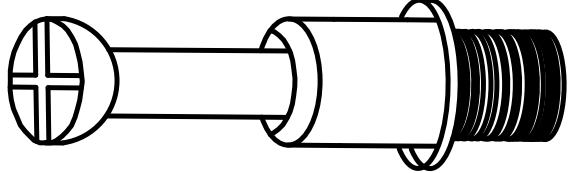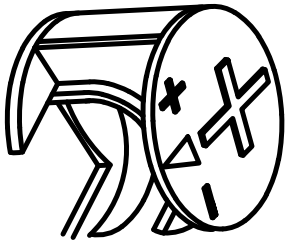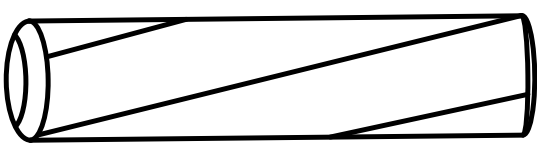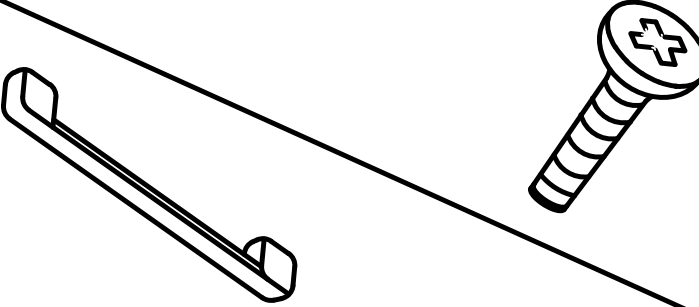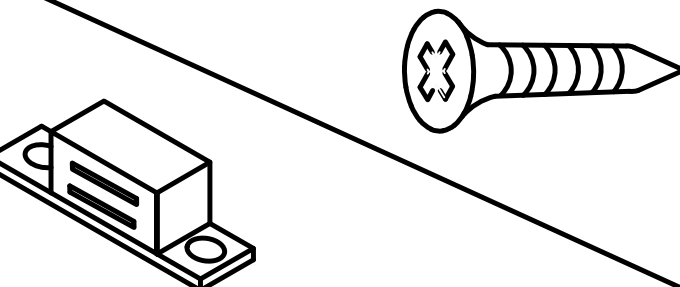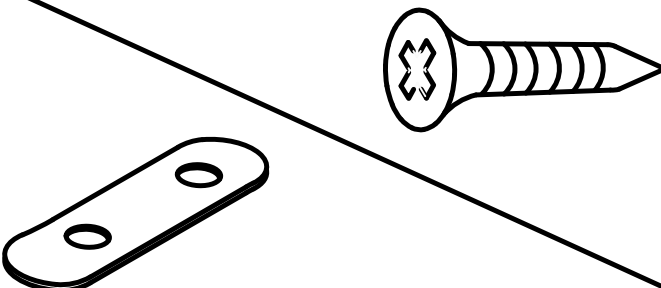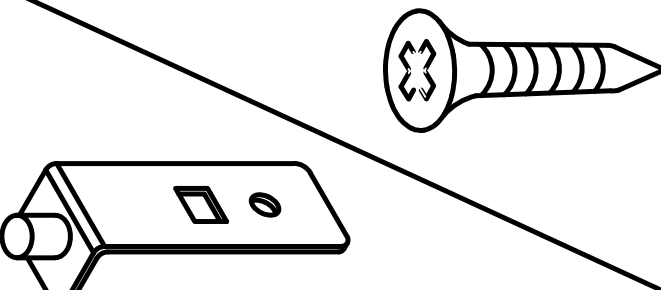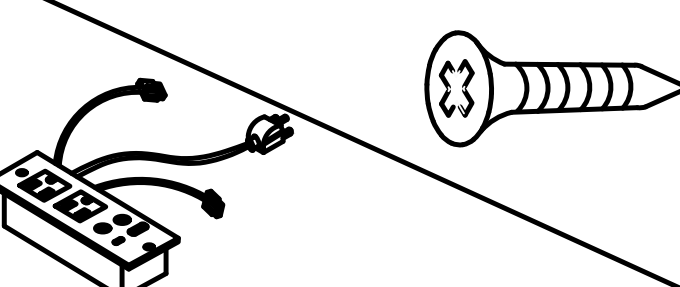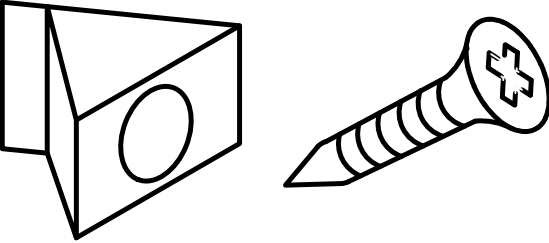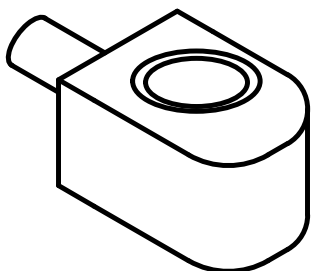A		18pcs
B		22pcs
C		8pcs
D		2pcs
F		1pcs
G		2pcs
H		4pcs
I		2pcs
K		8pcs
M		4pcs

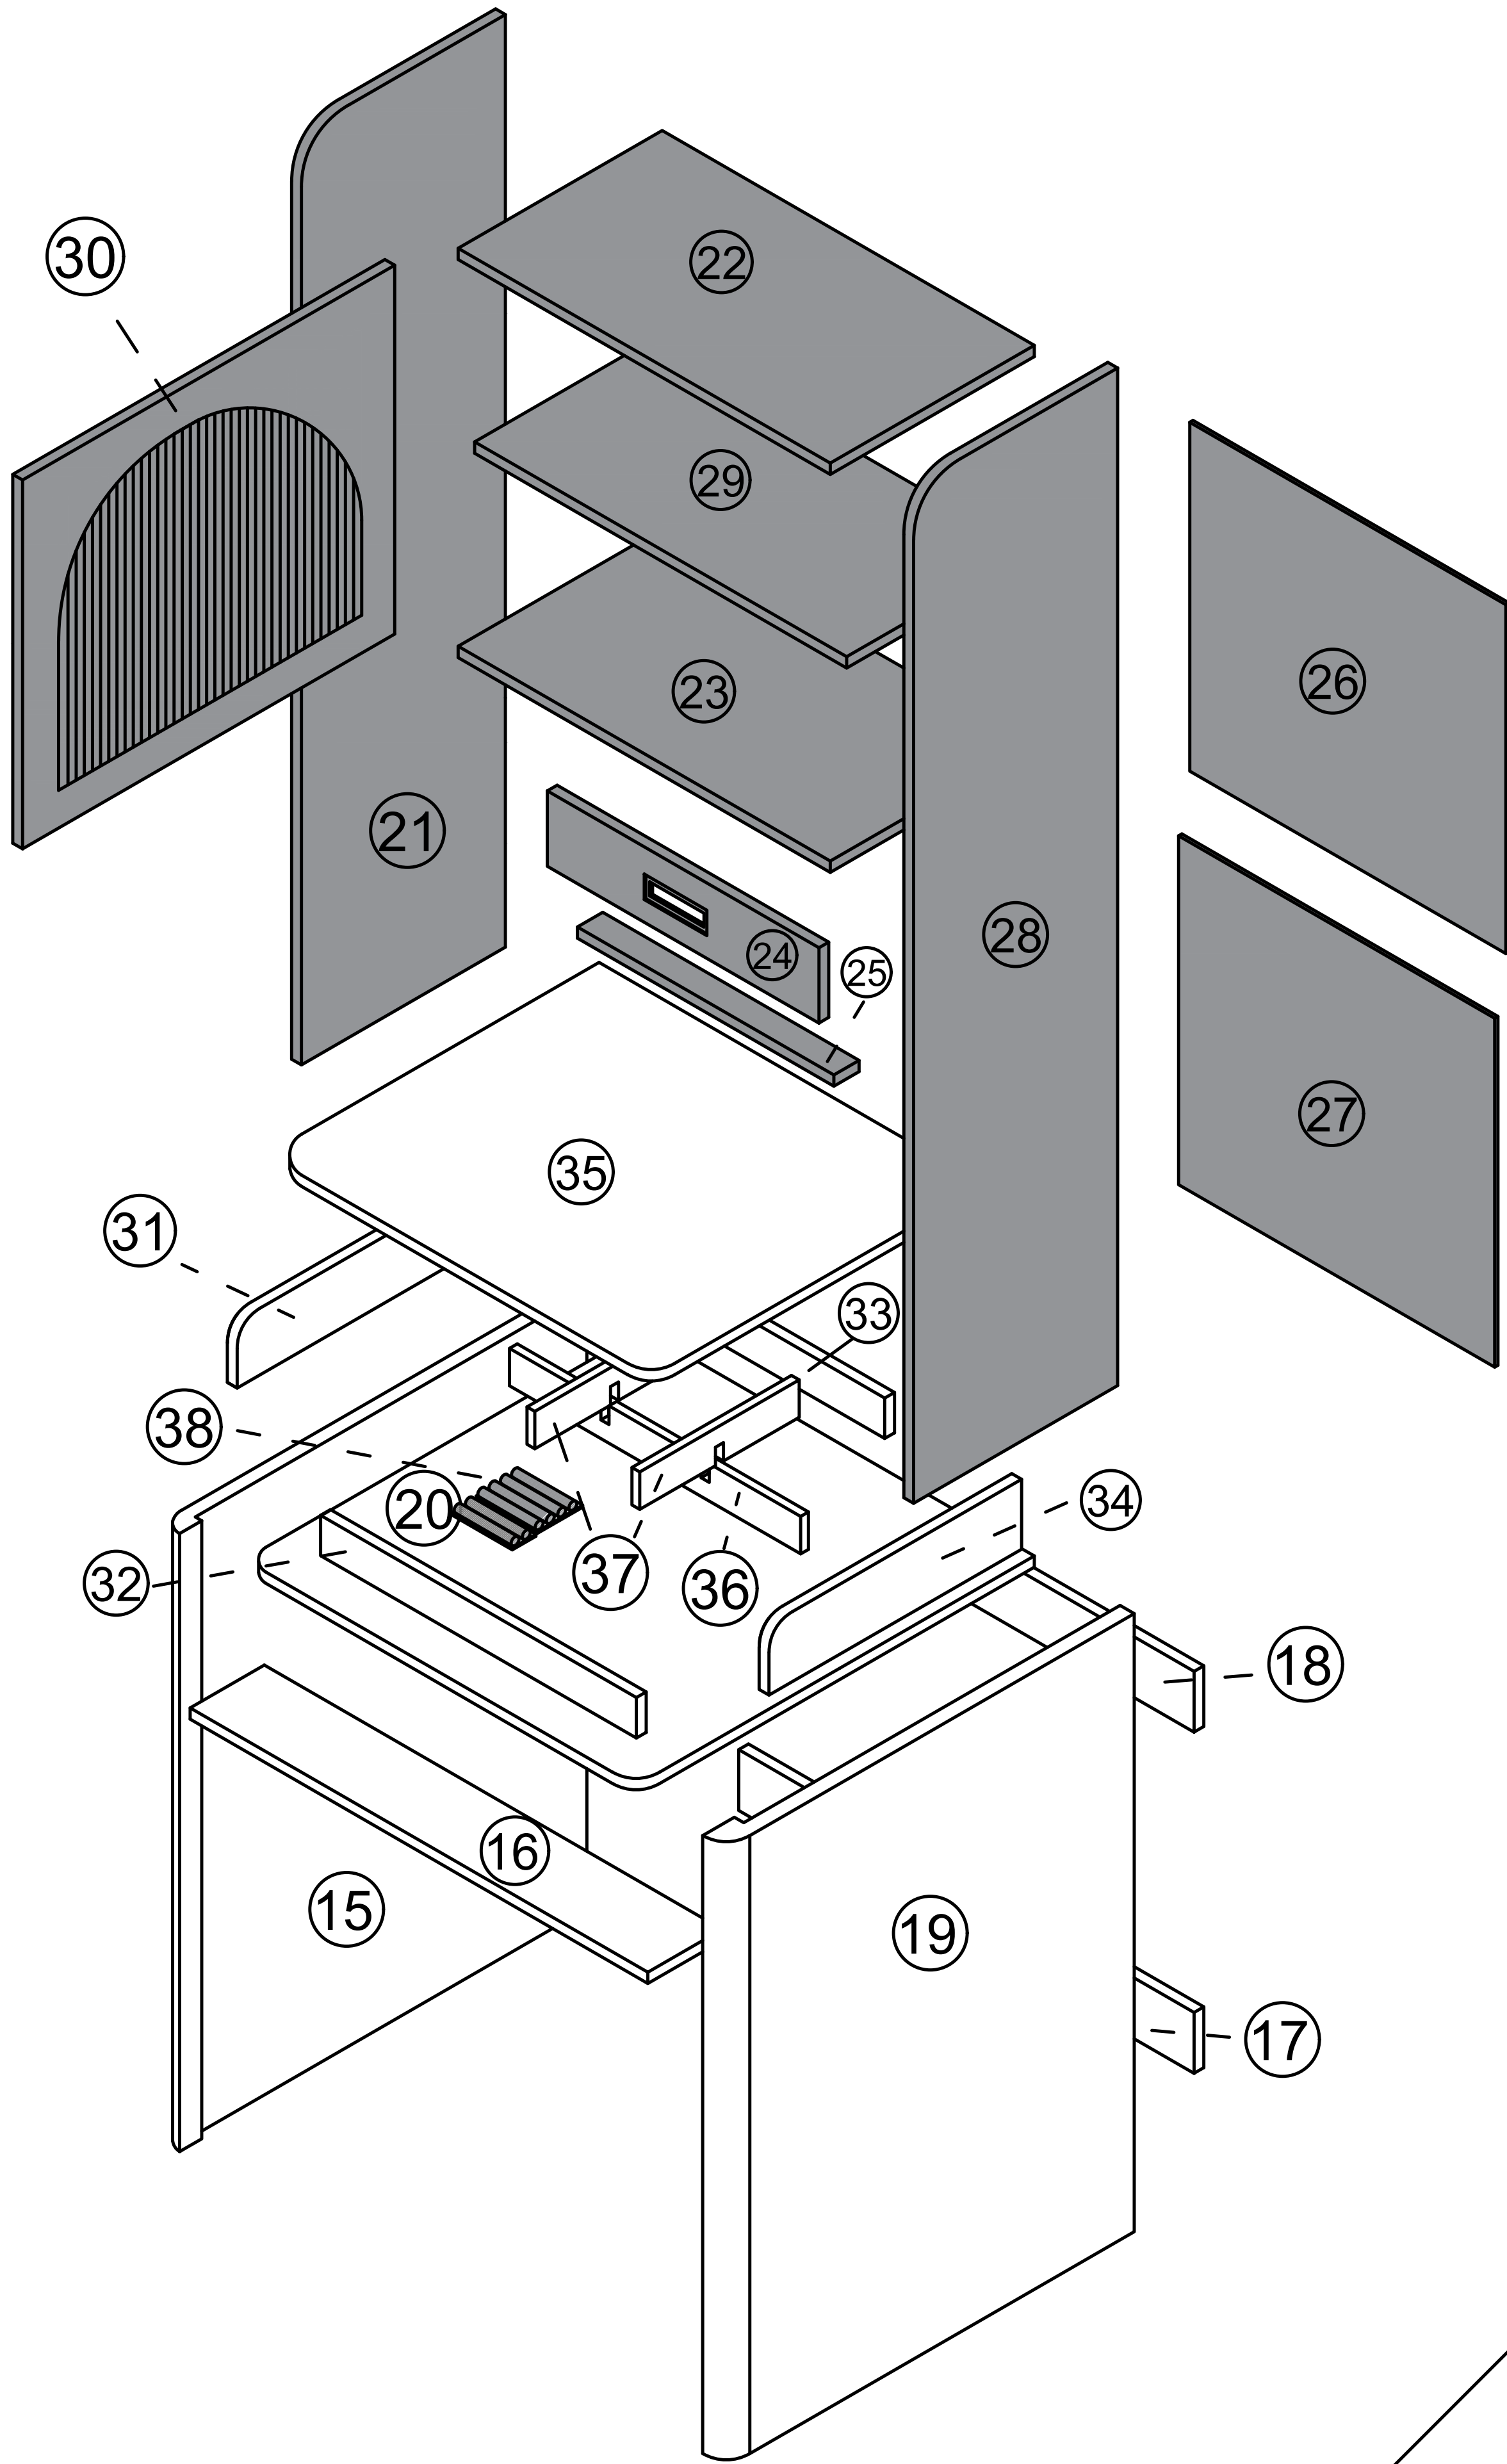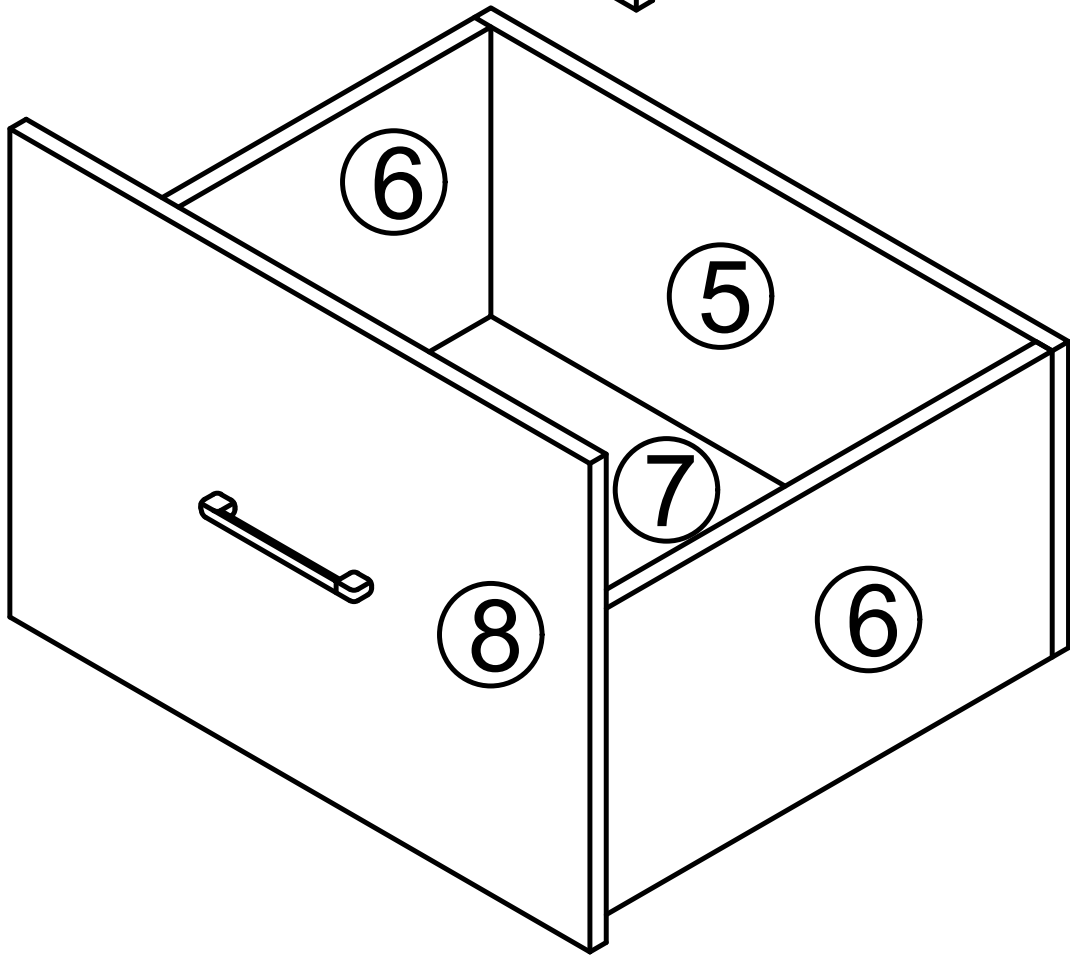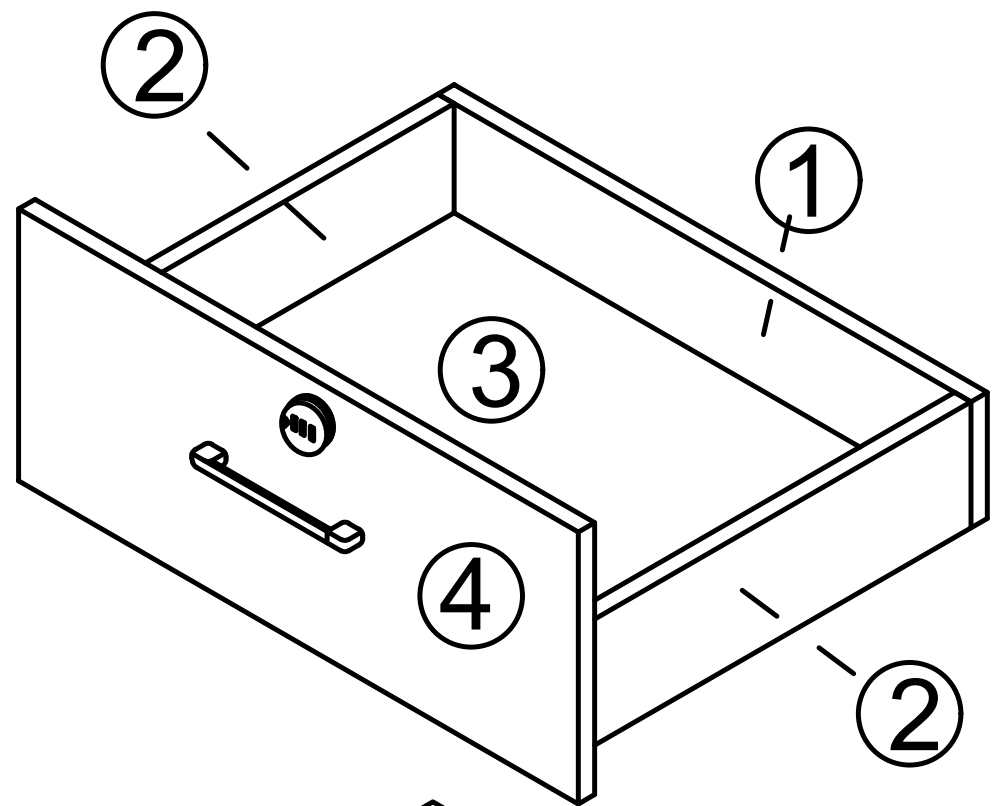
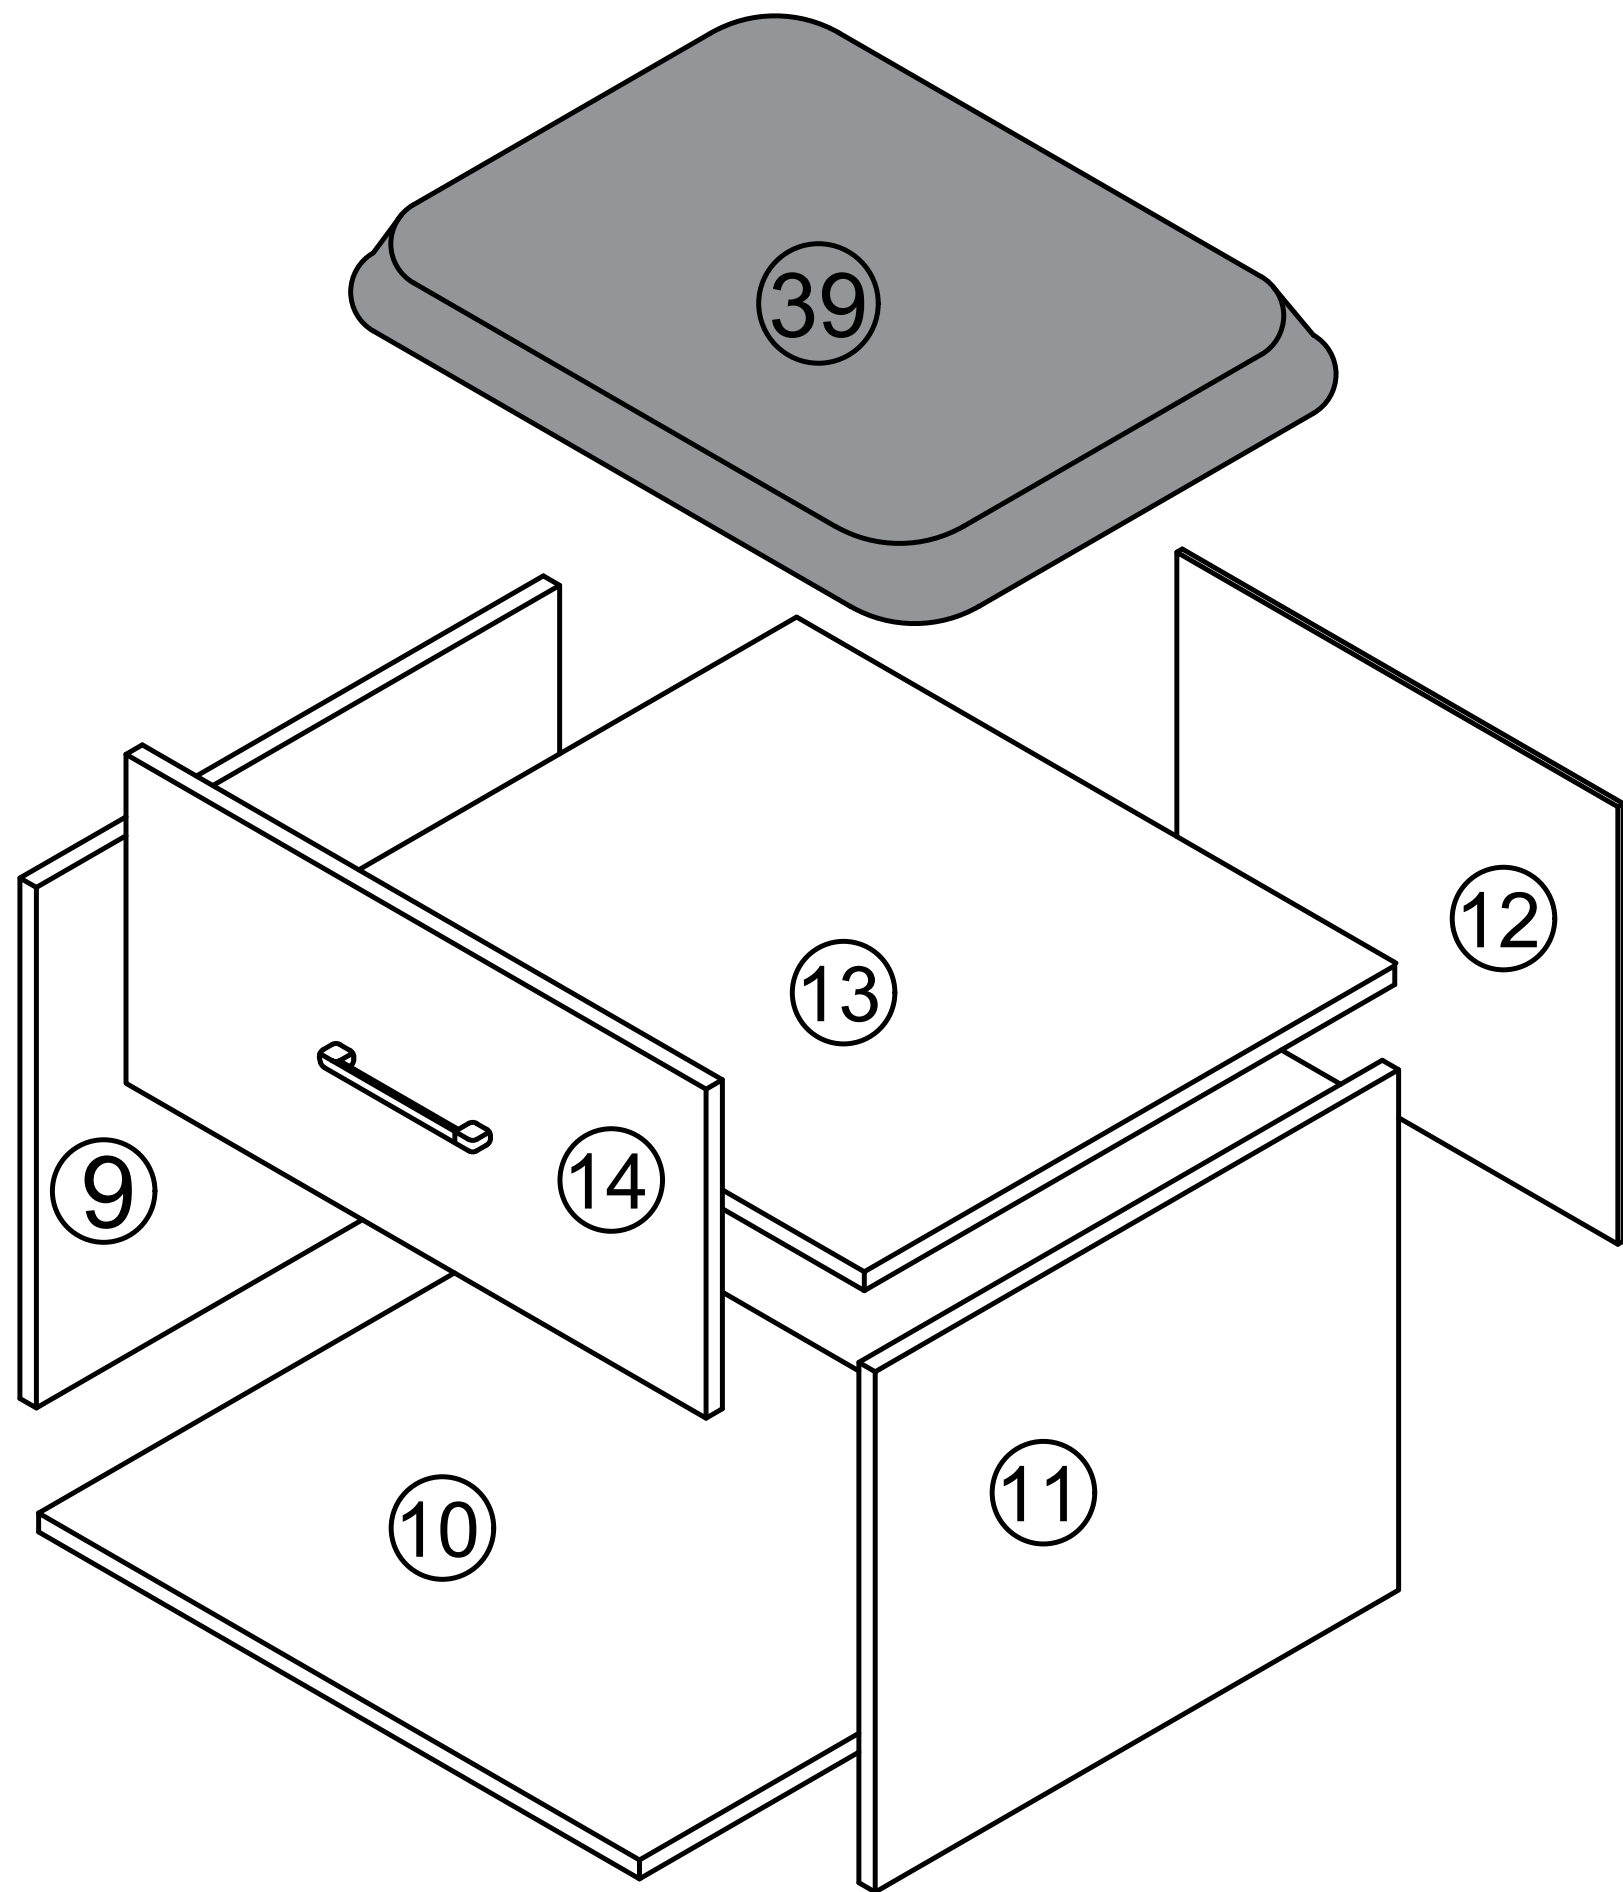


Step 49


A

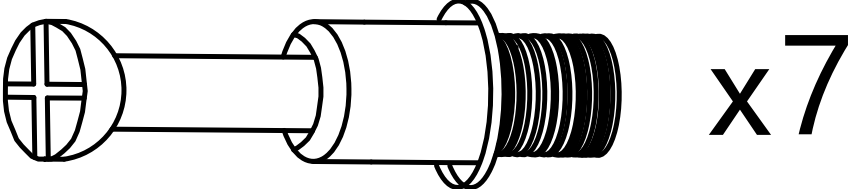

C

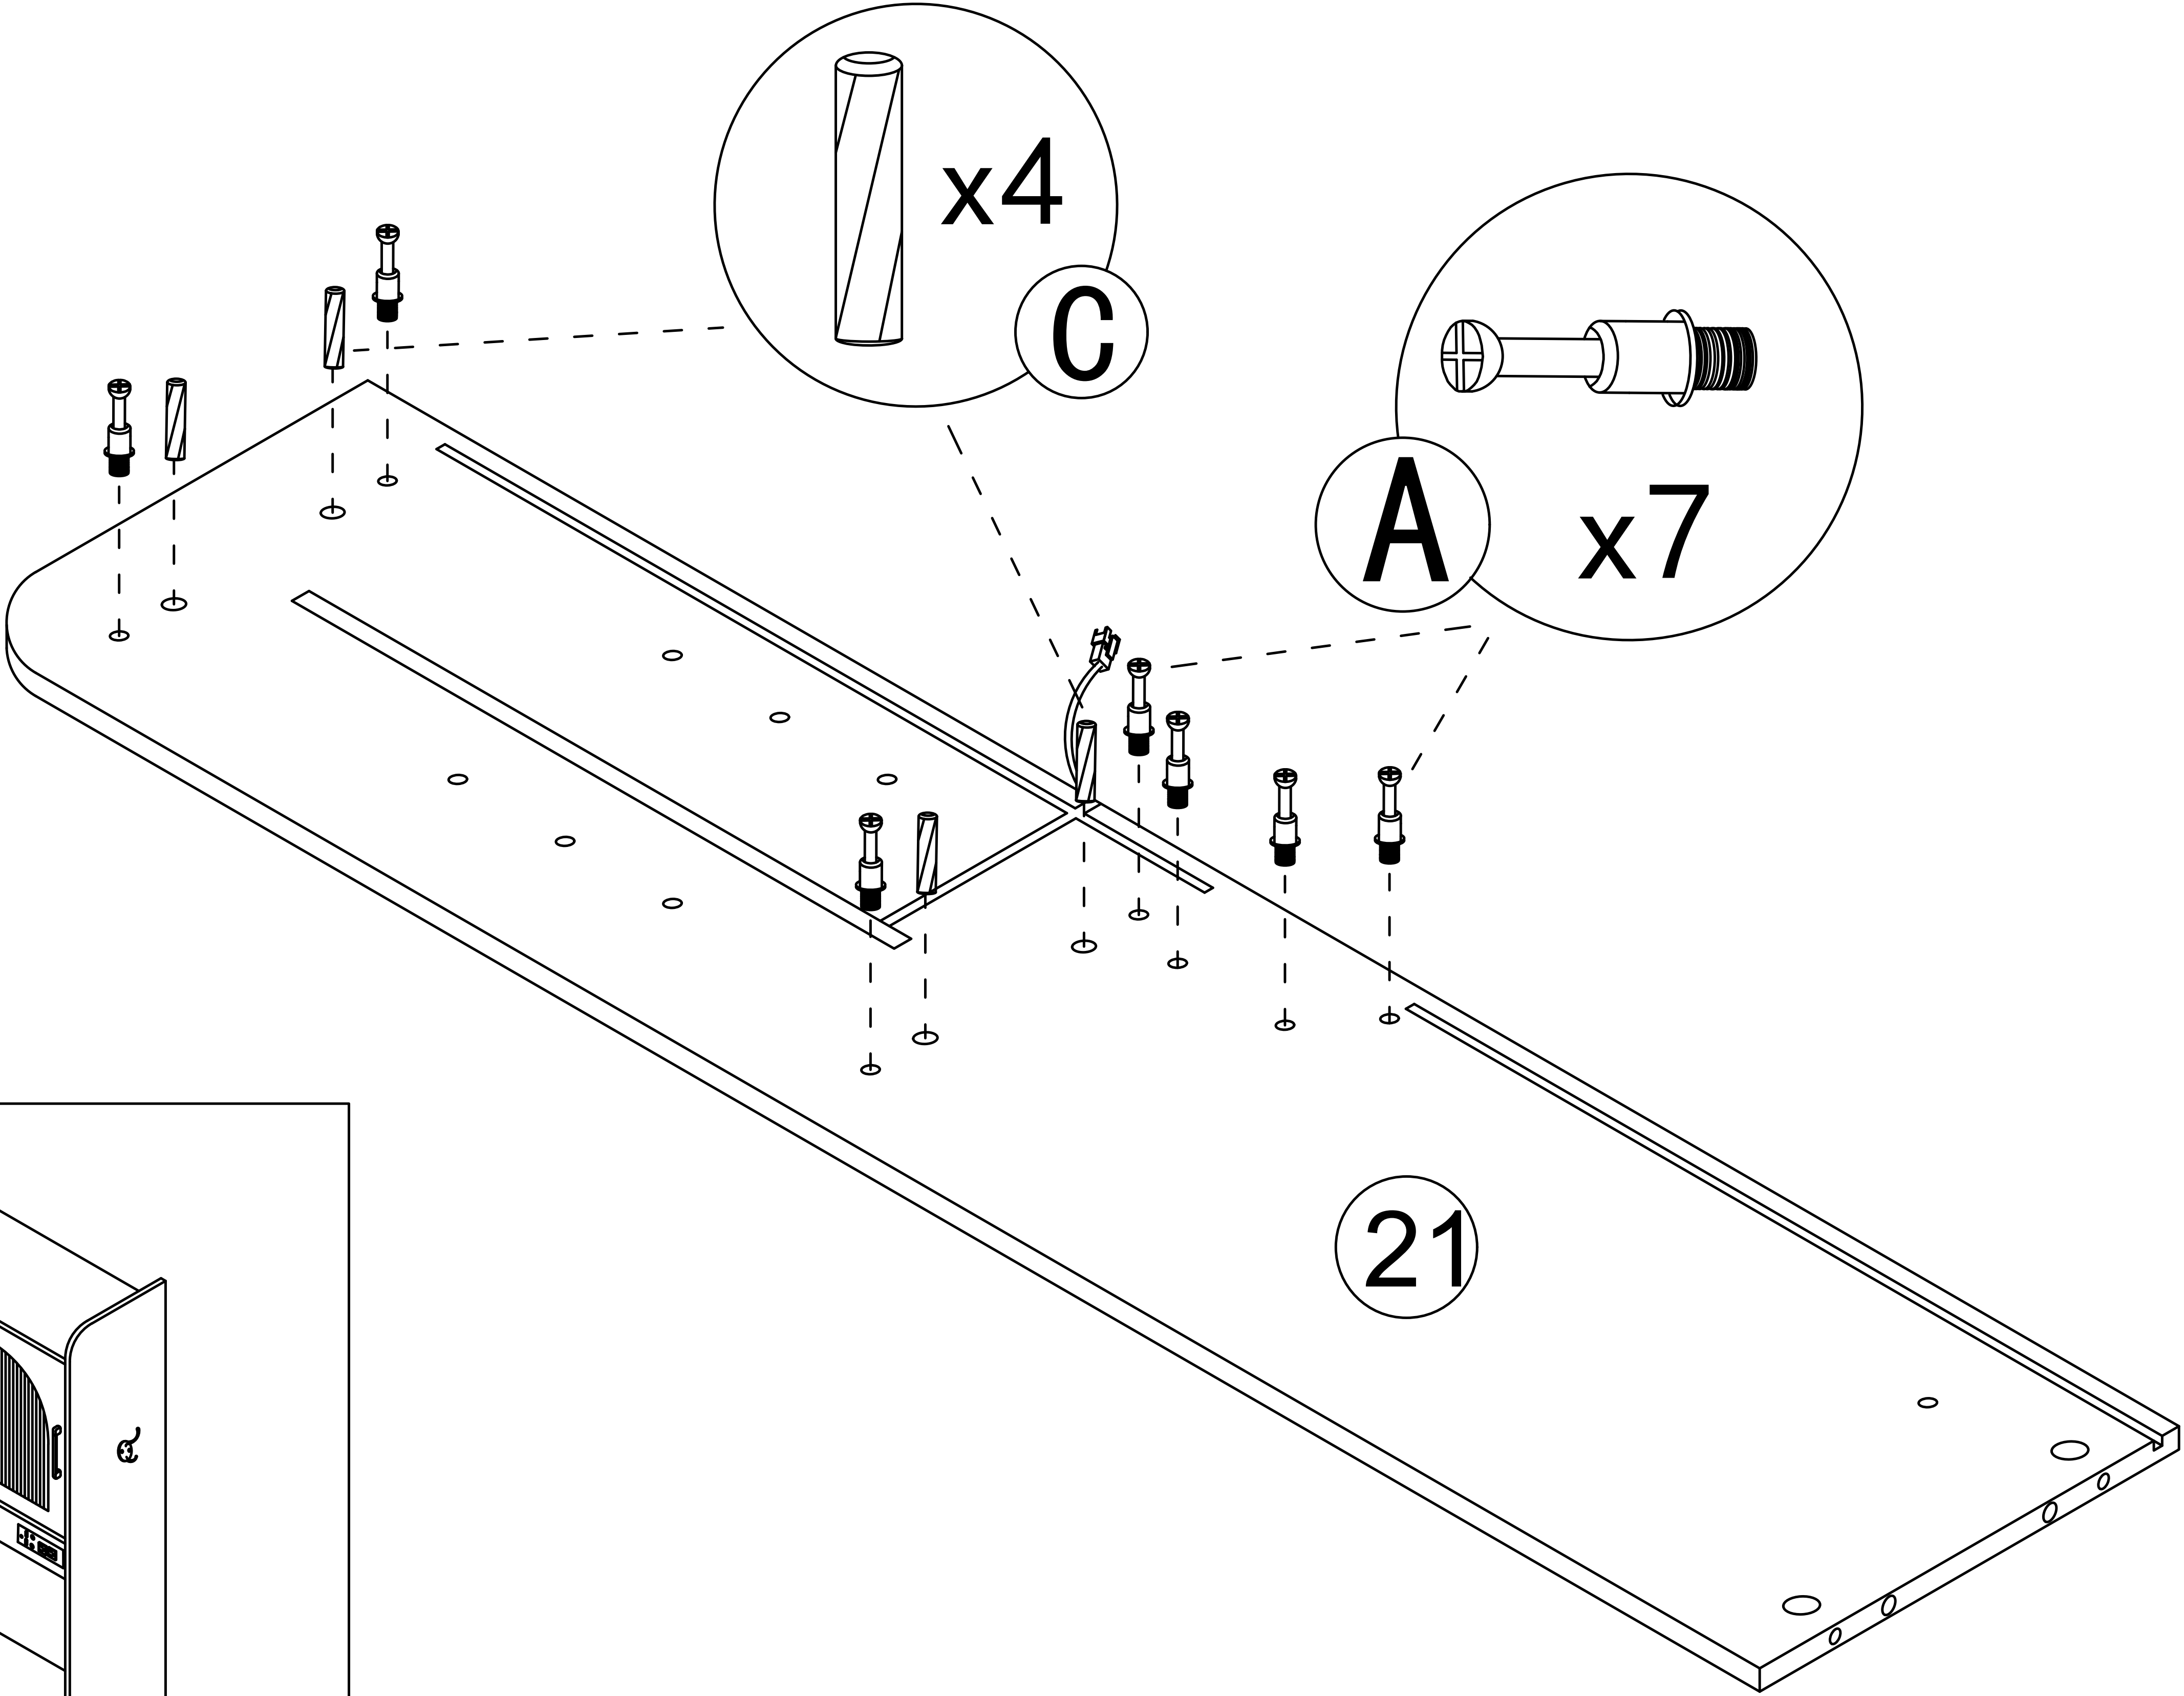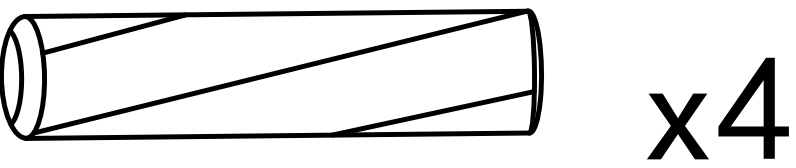


21

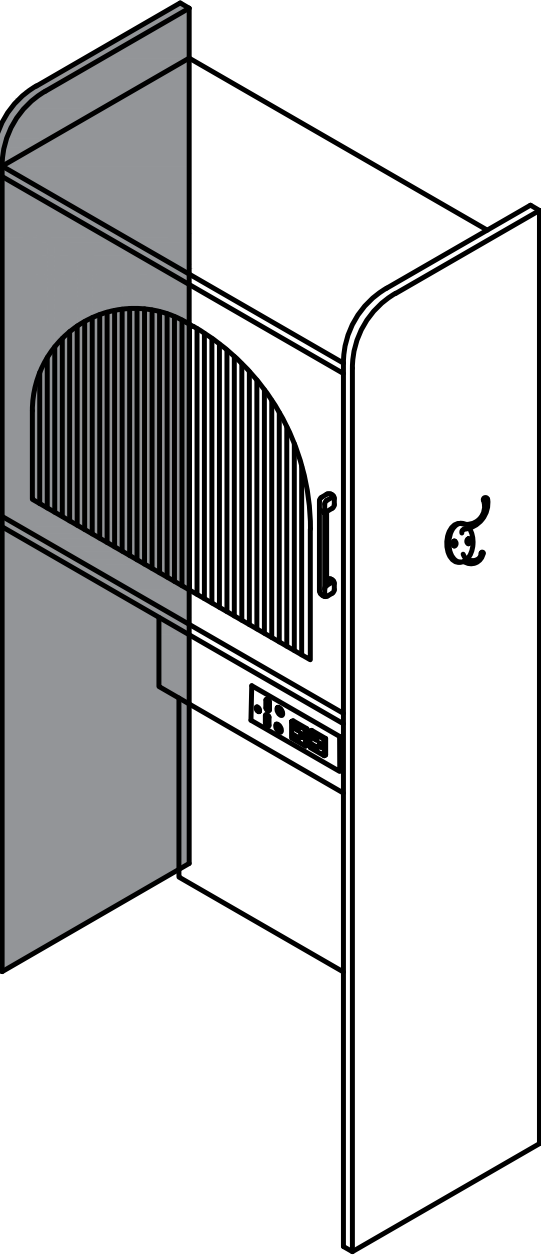


Step 50



F

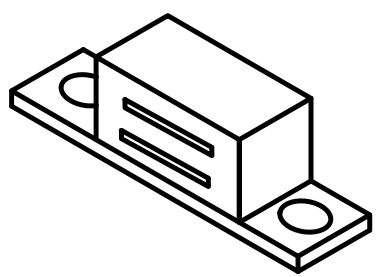

x1

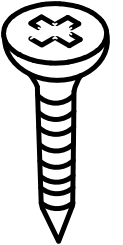


x2

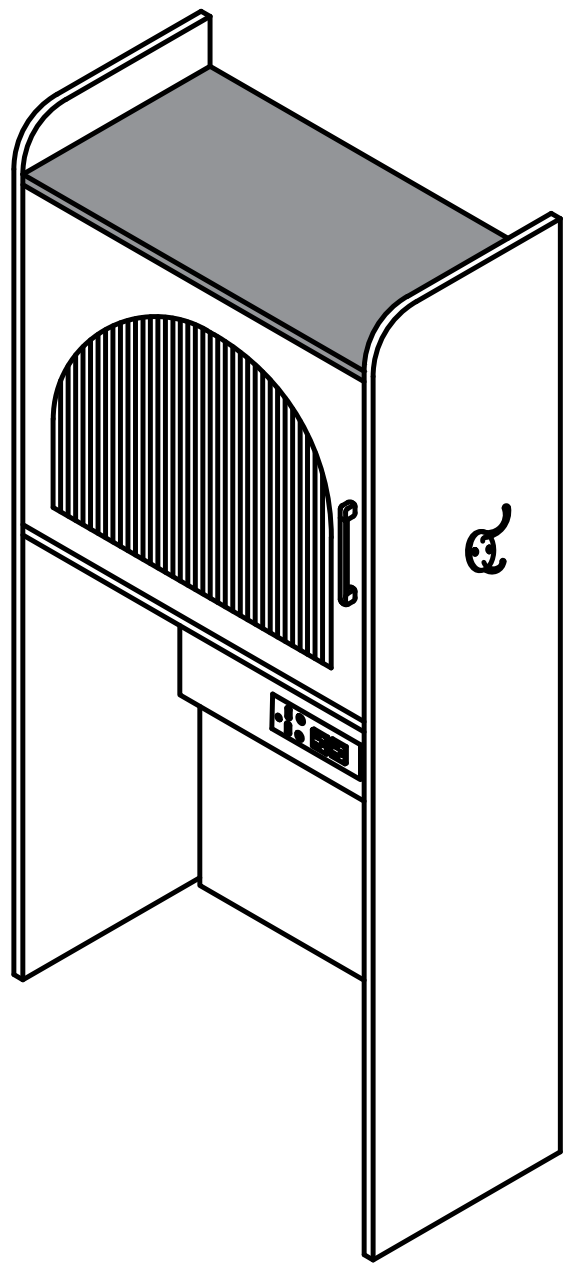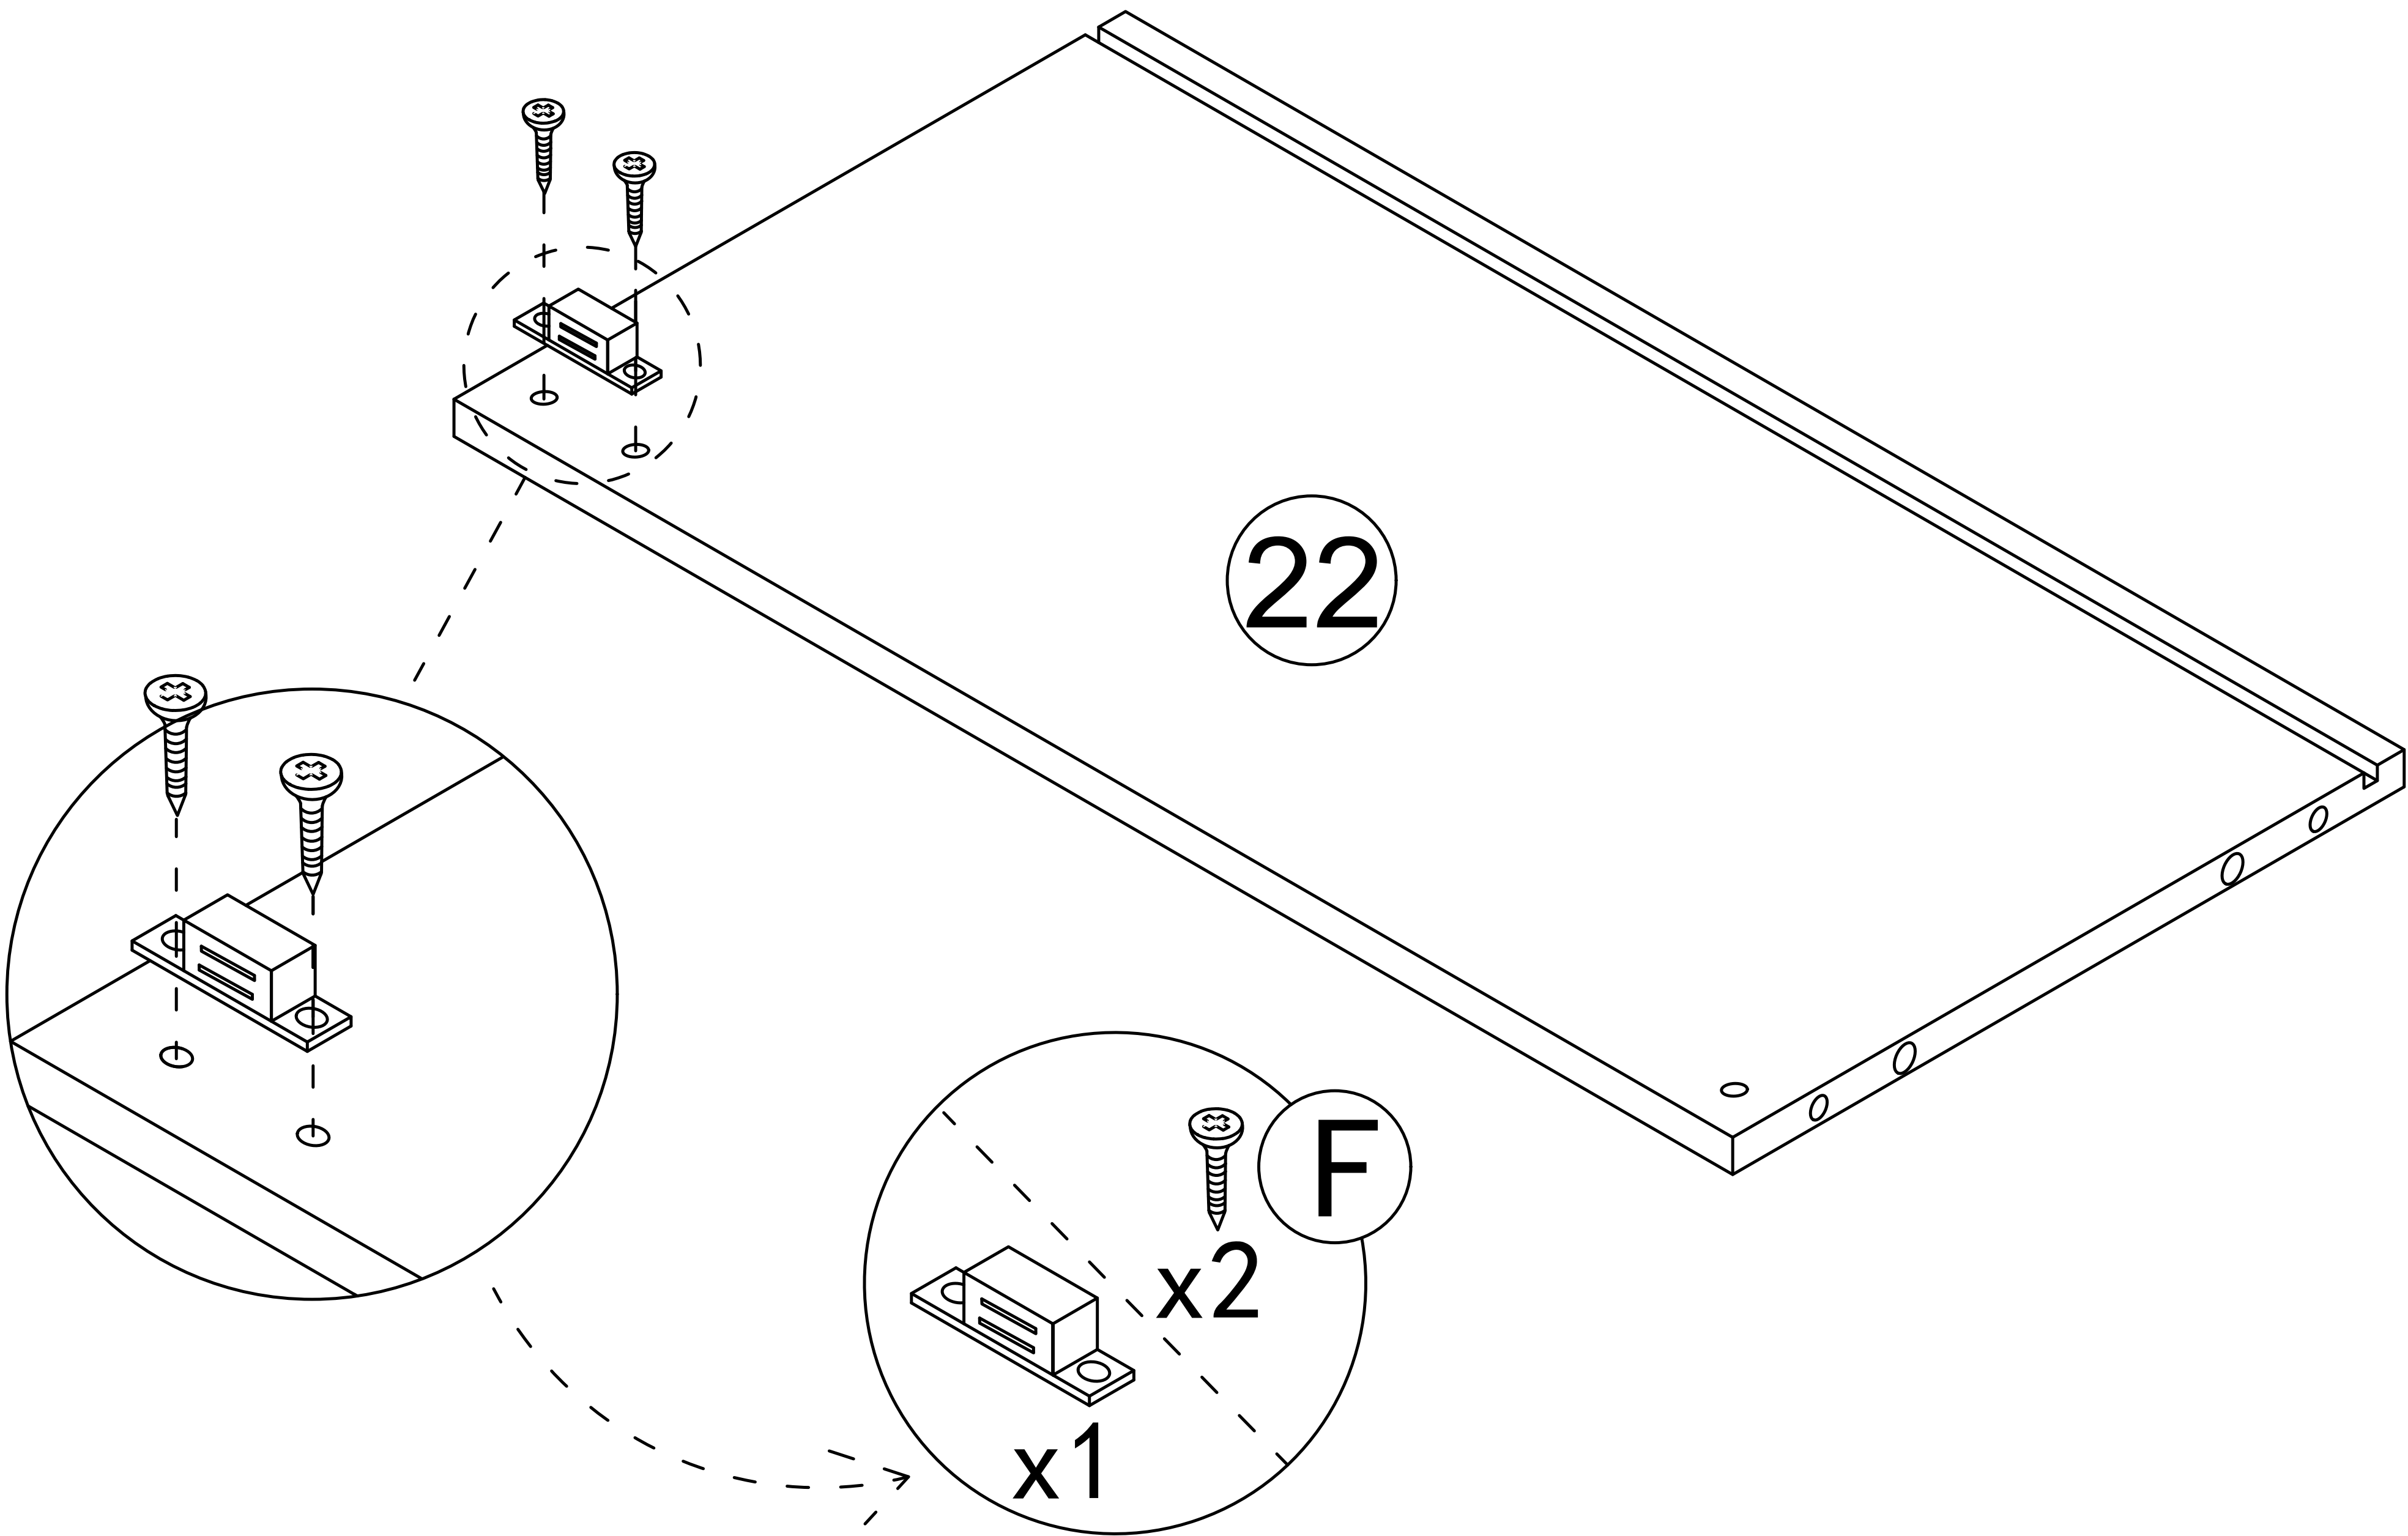


Step 51

B



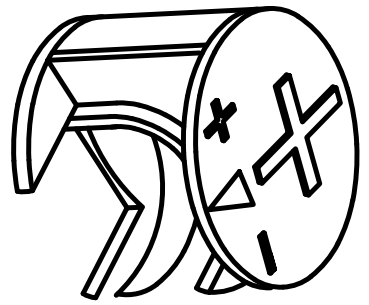


x2

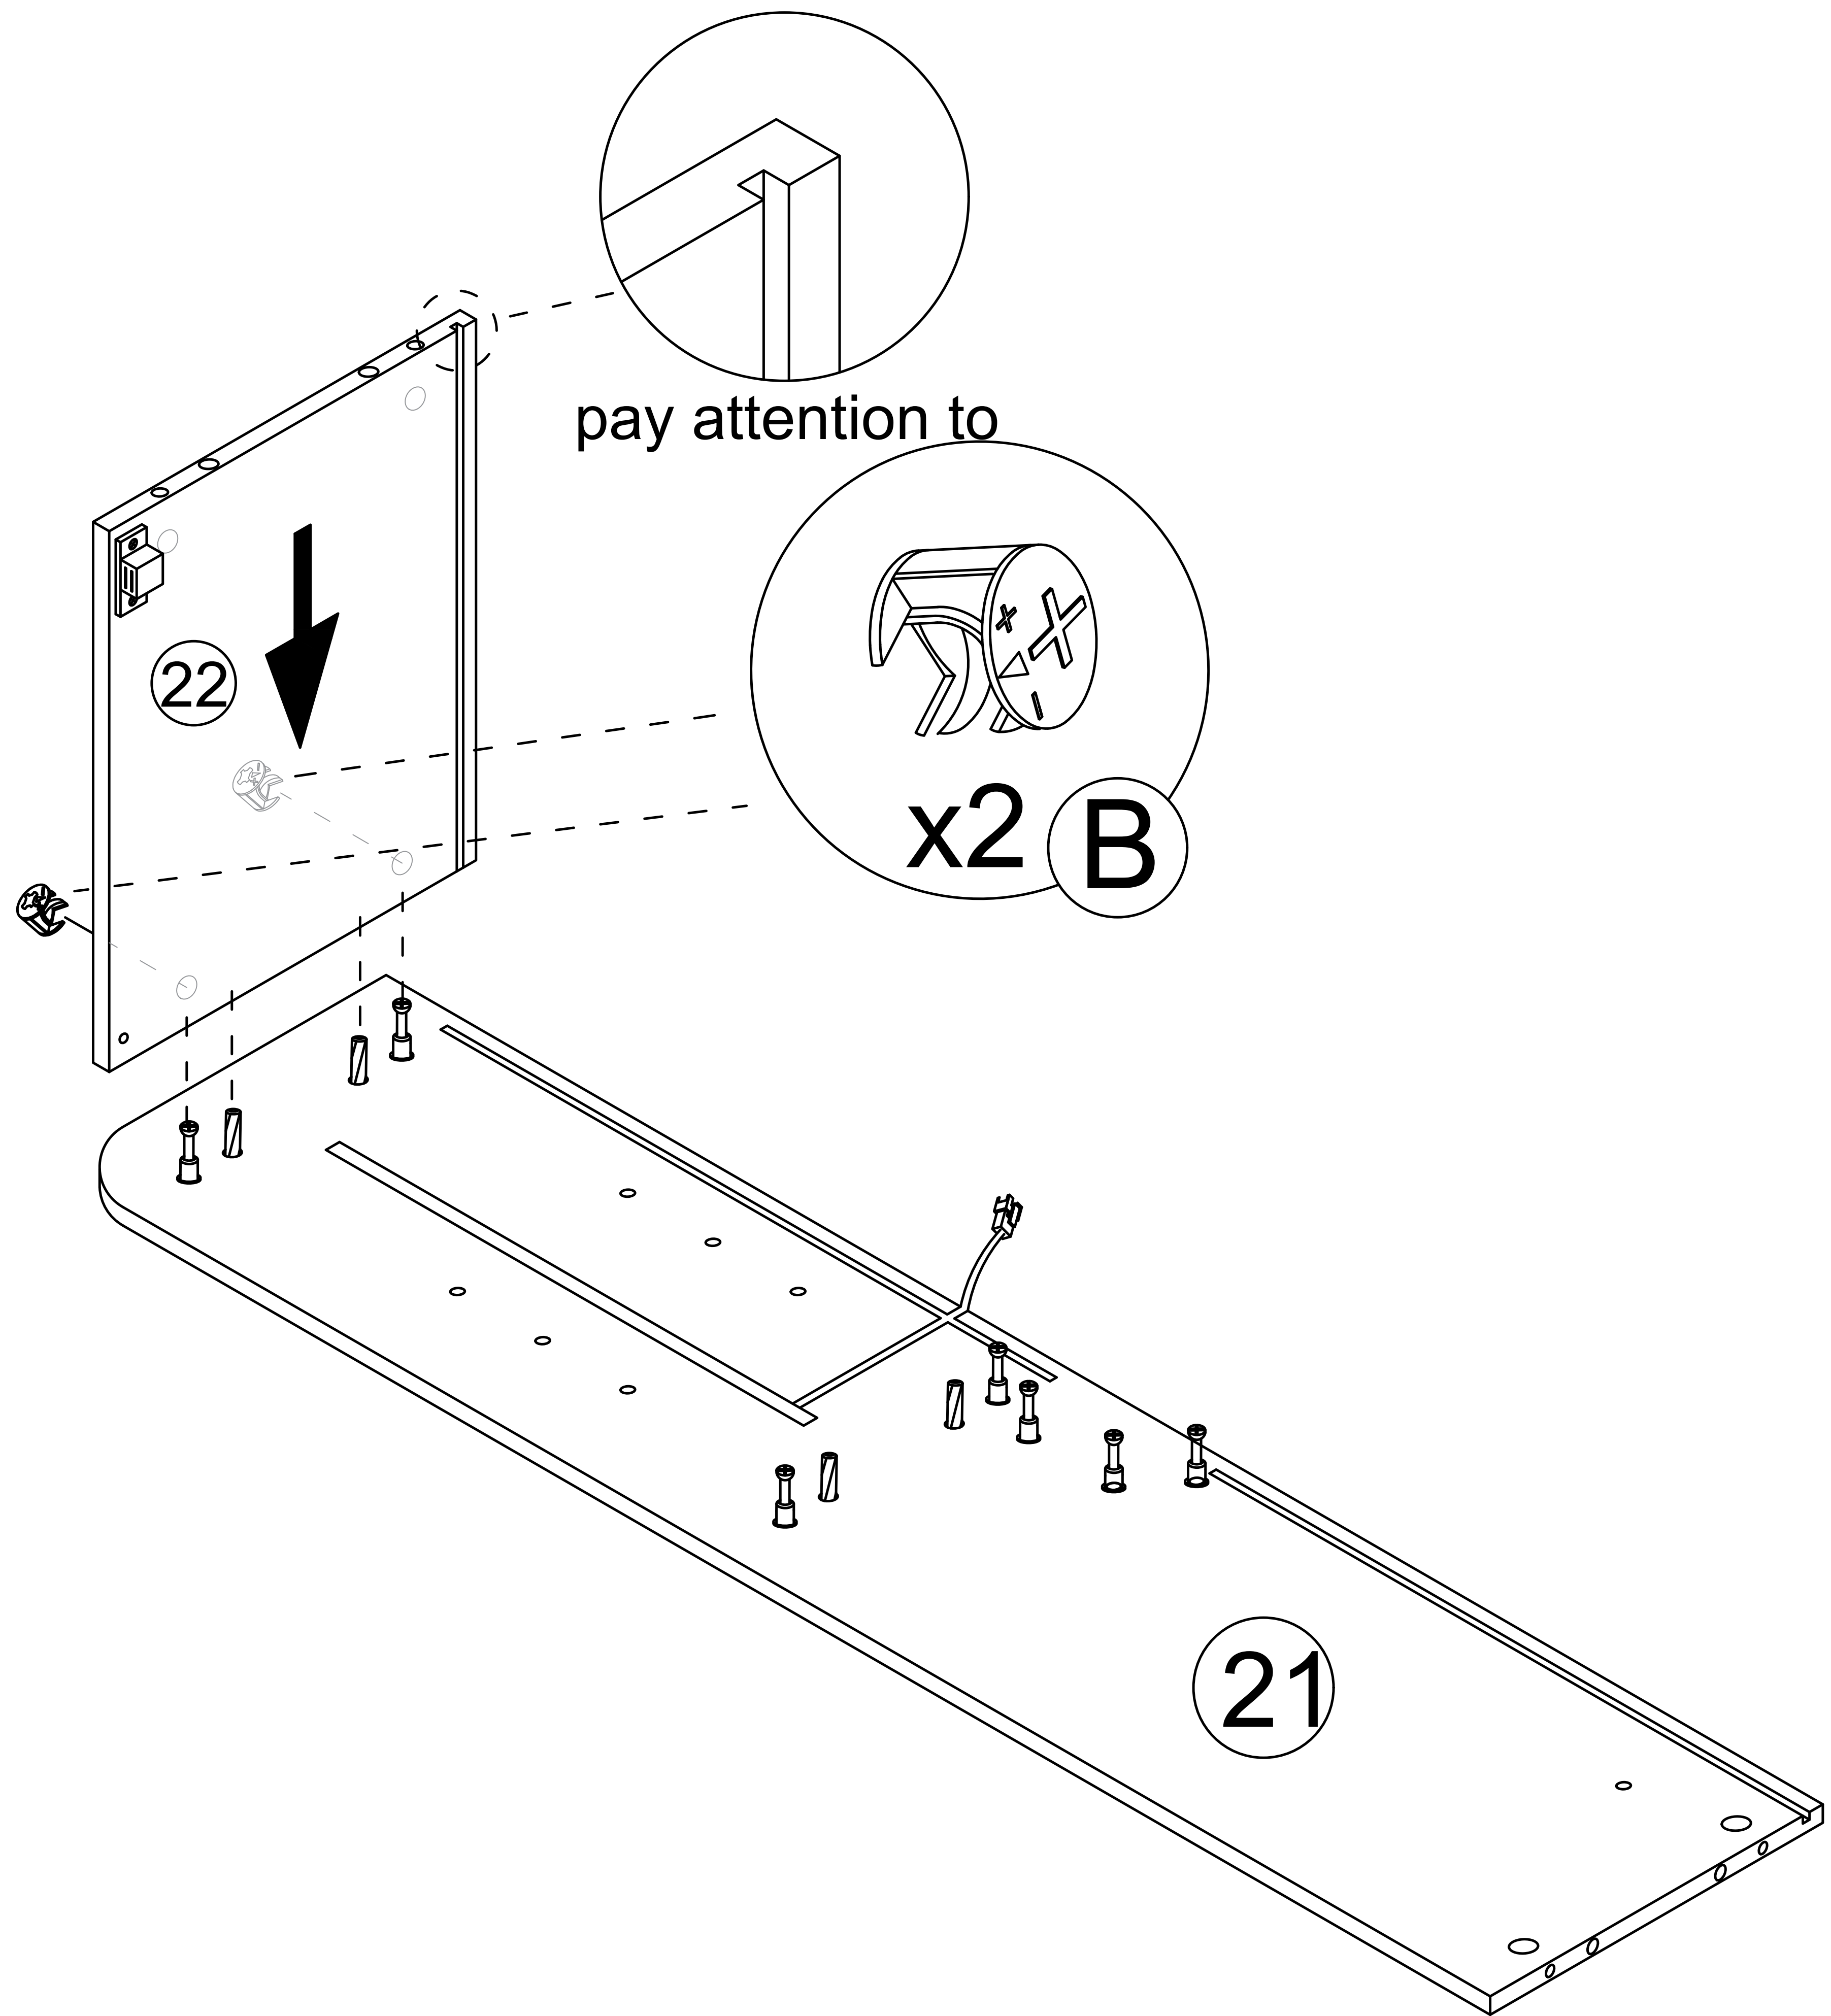


Step 52

A

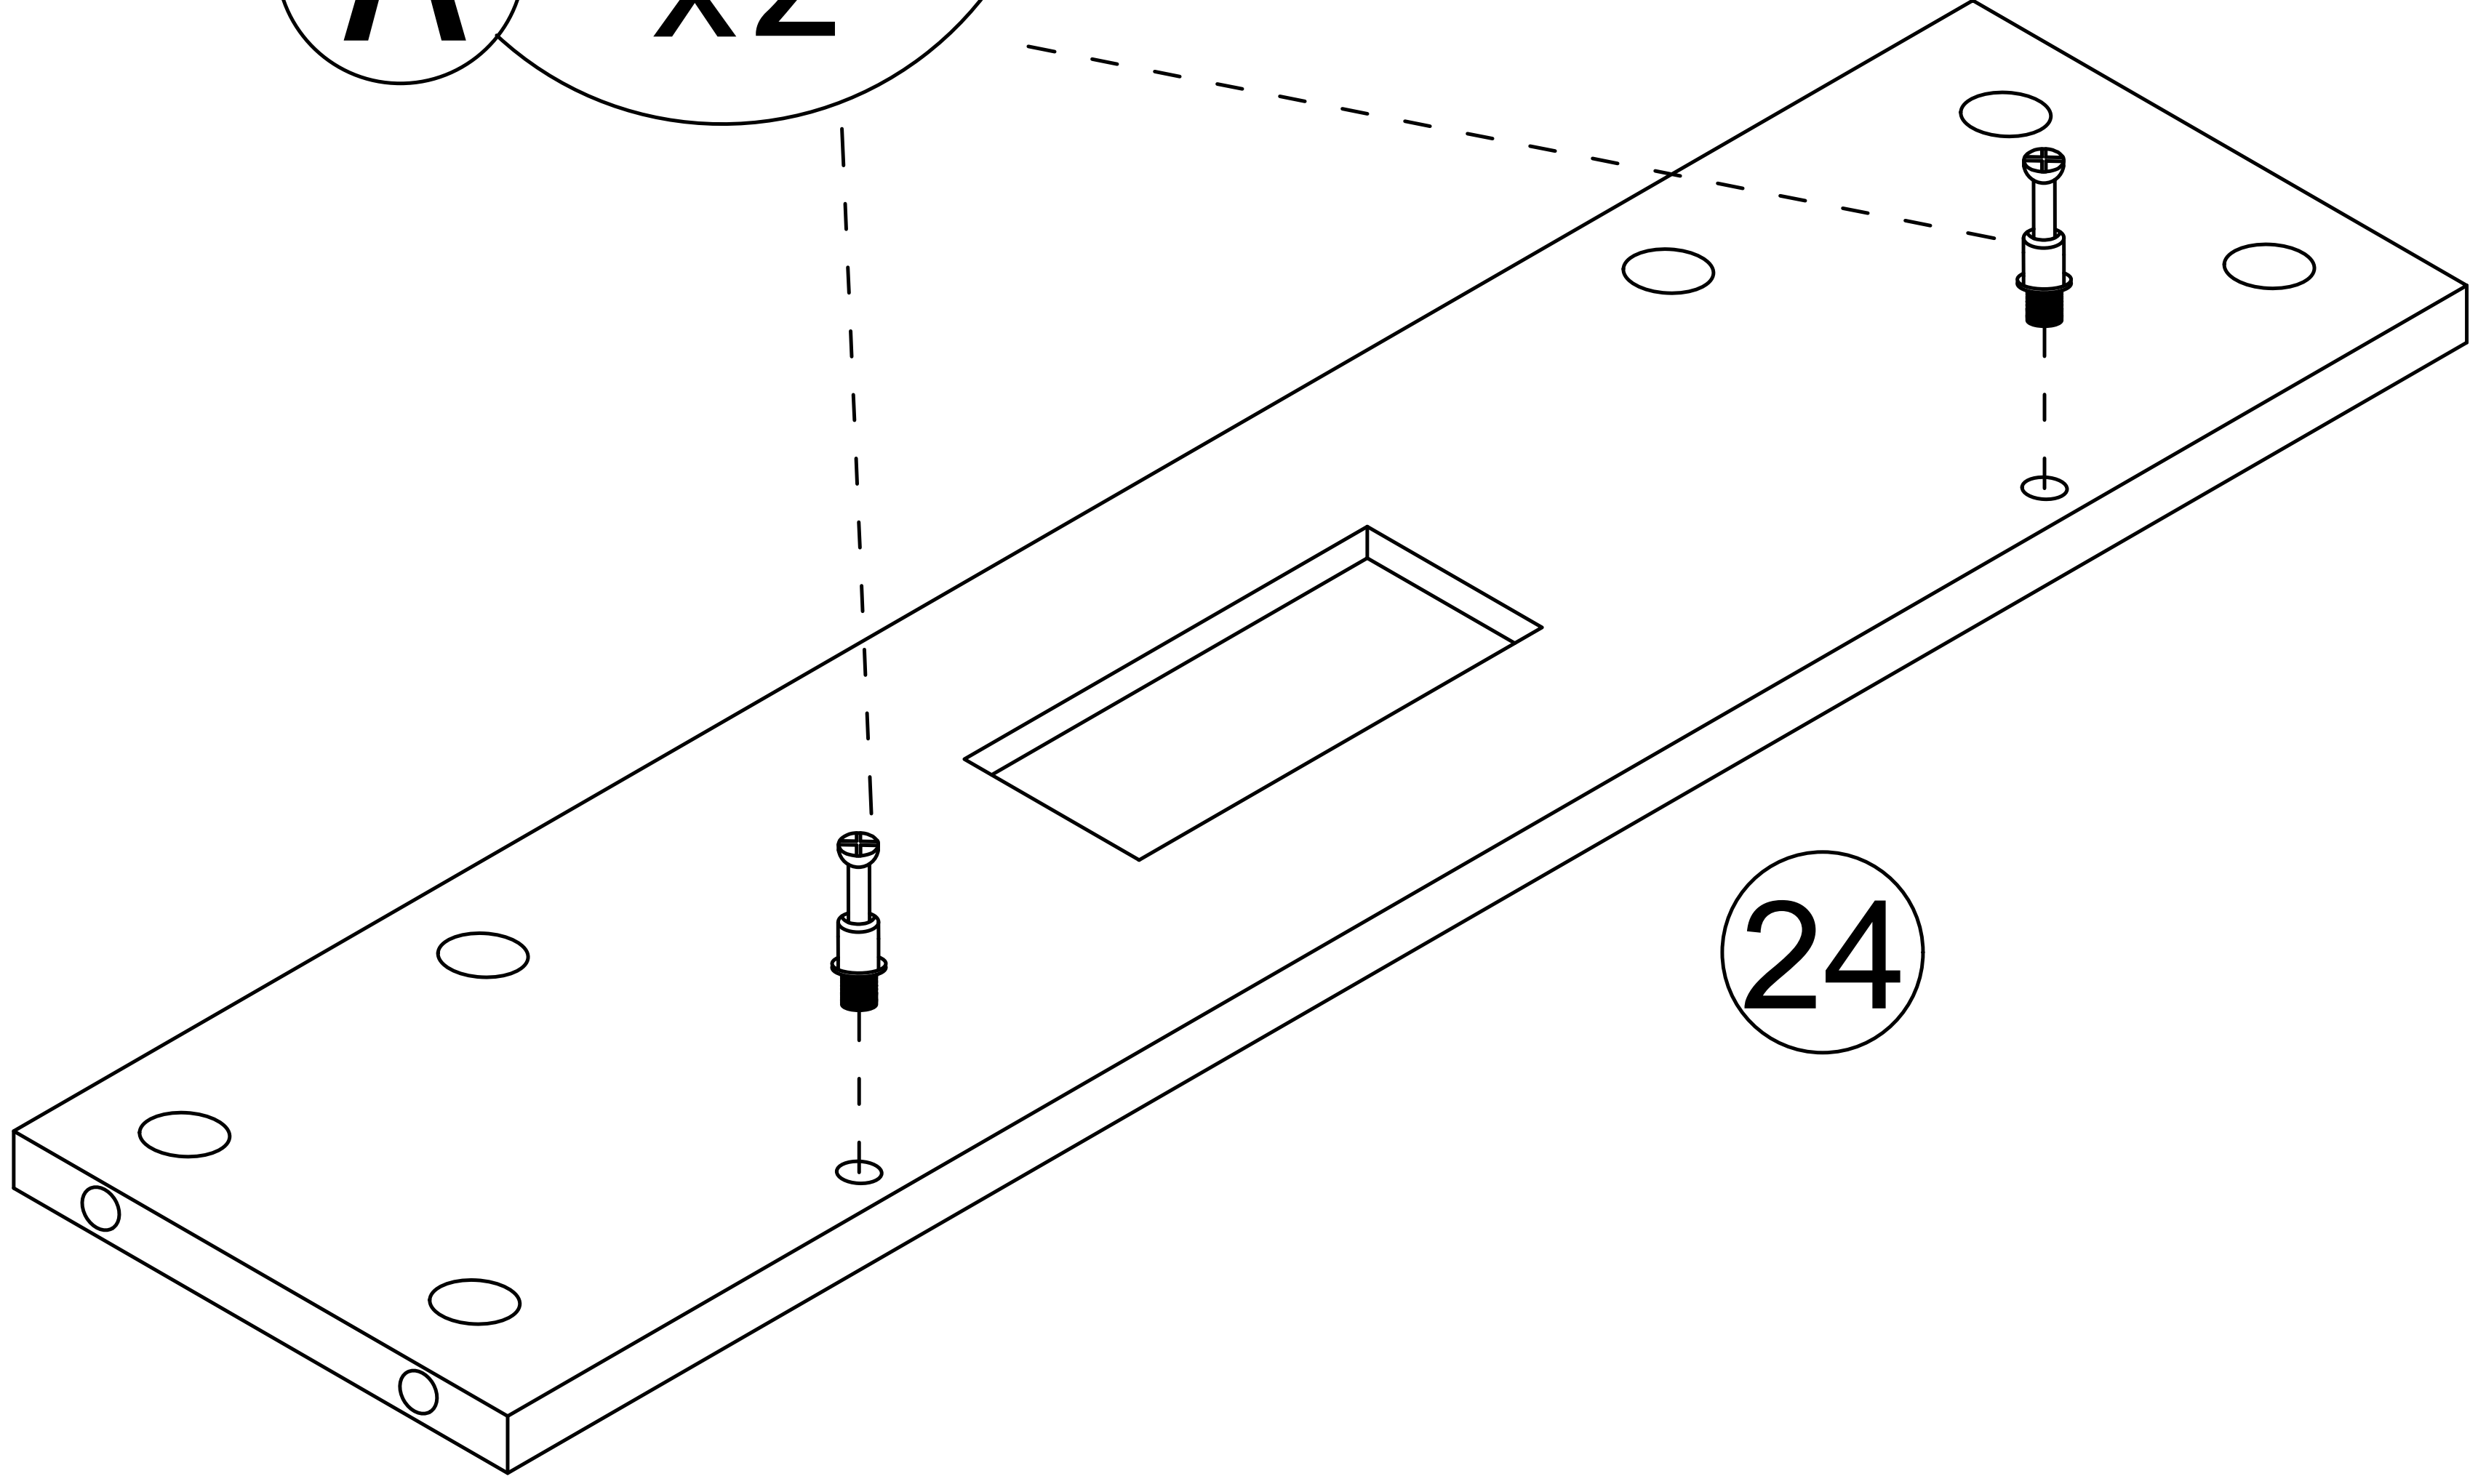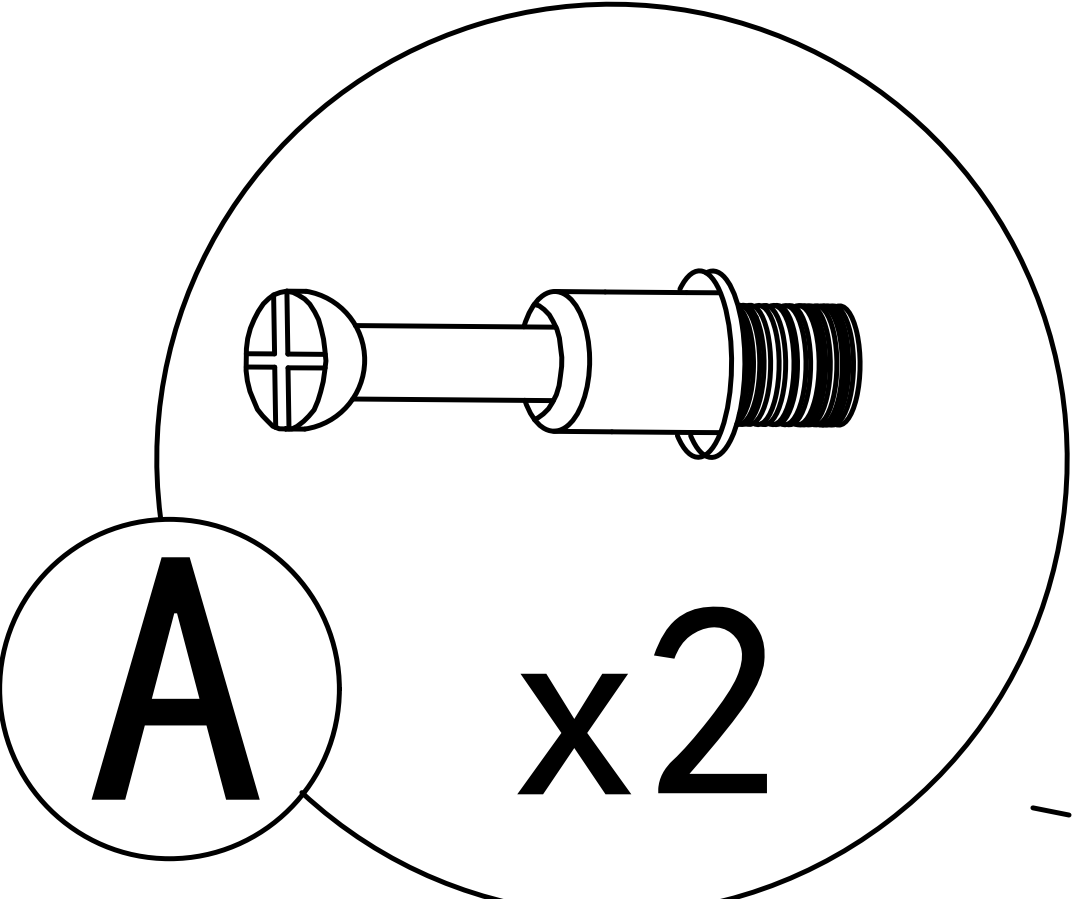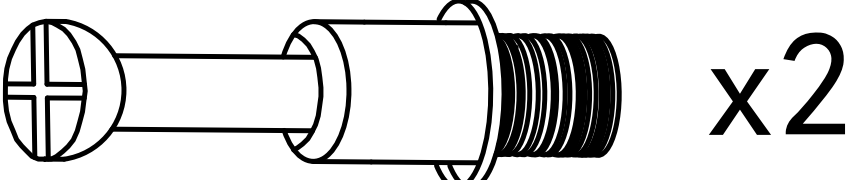


24

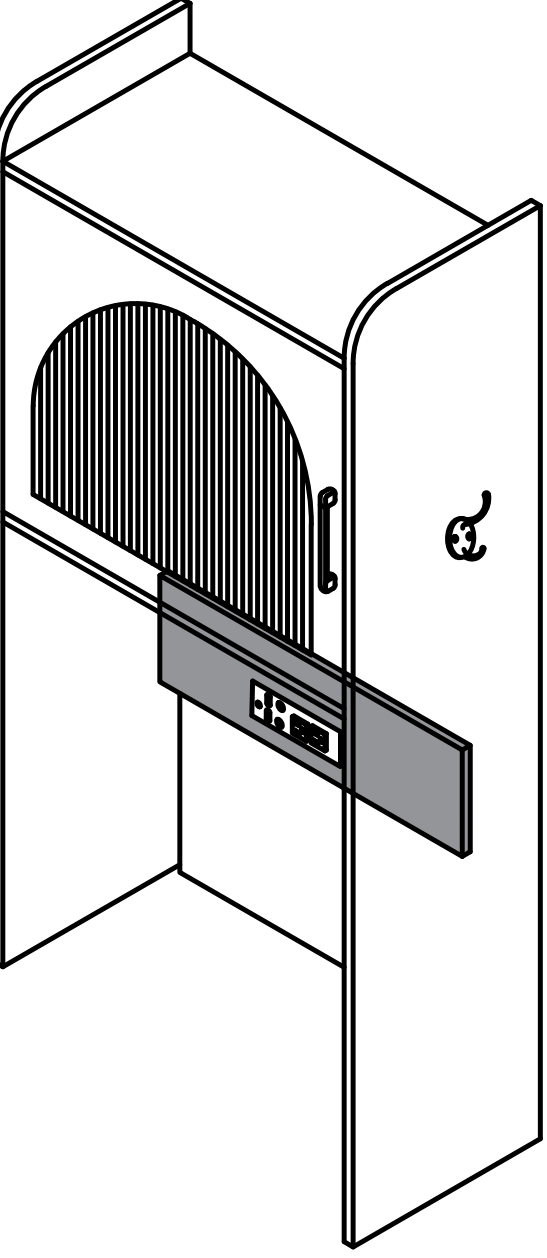


Step 53




B

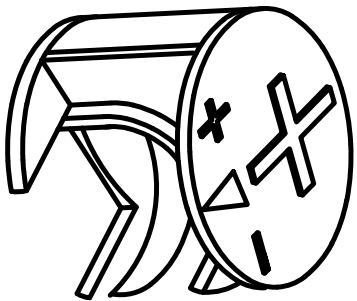

x2







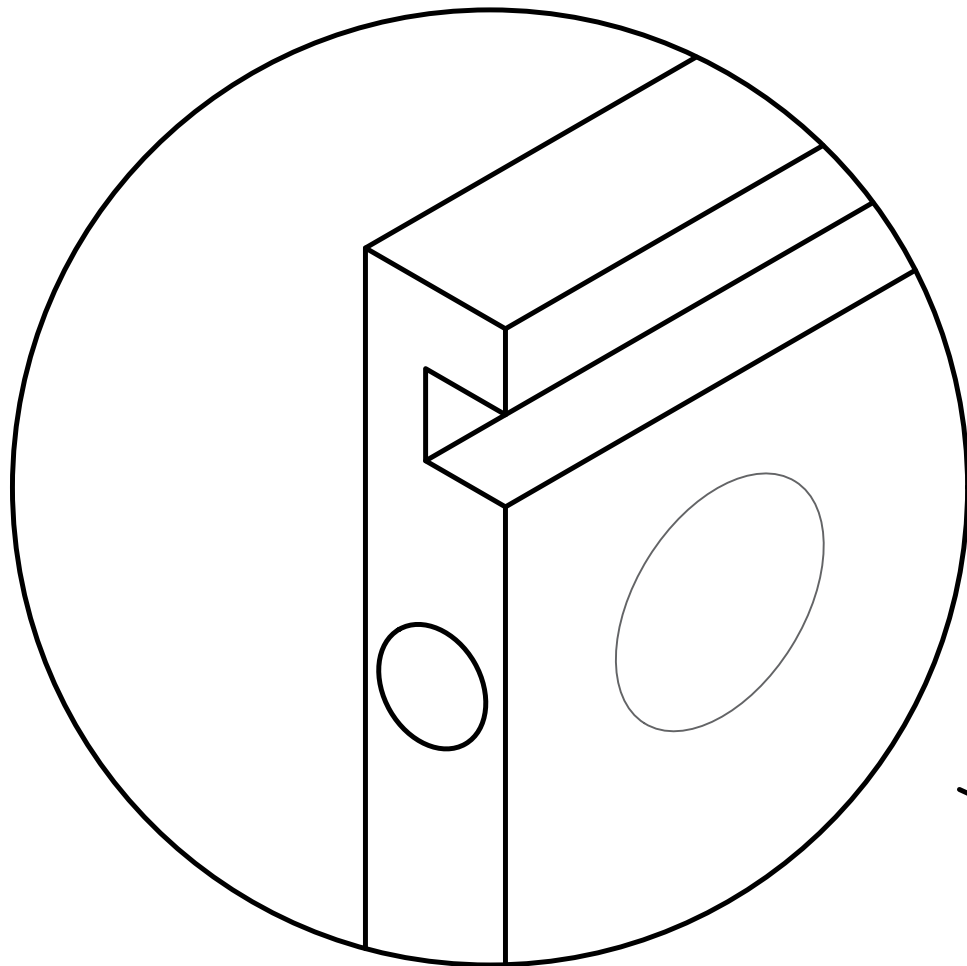


pay attention to

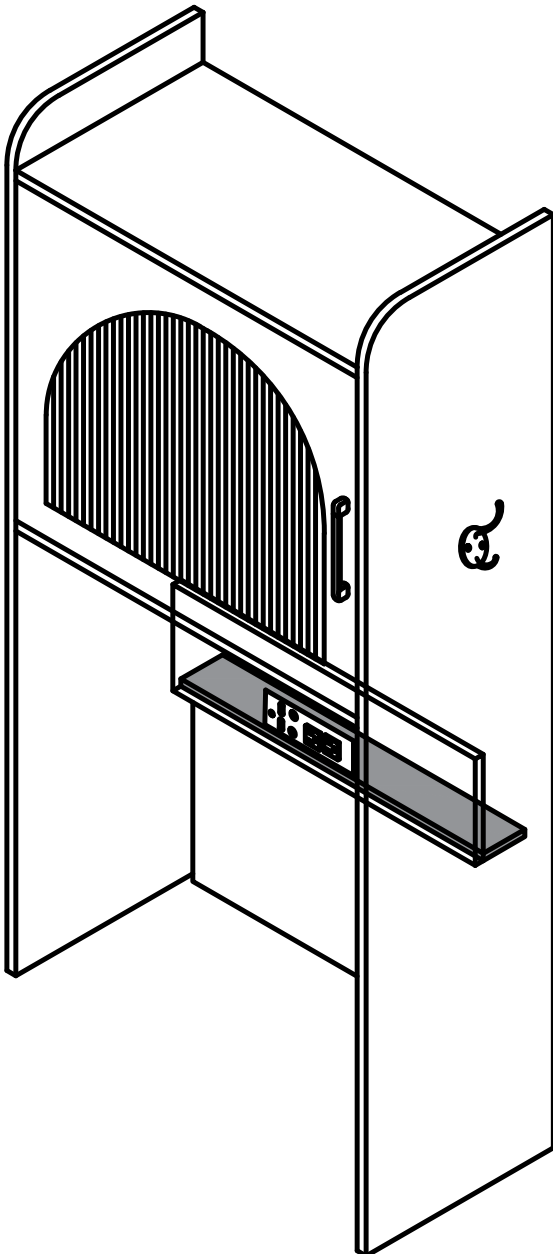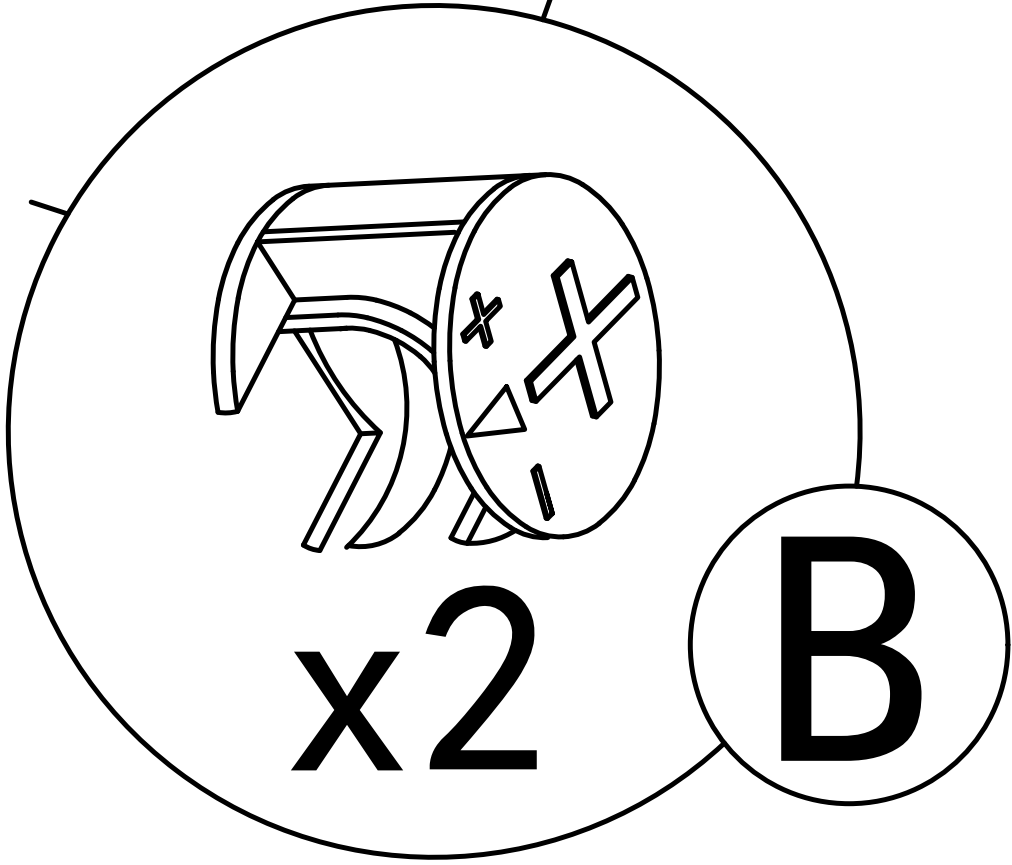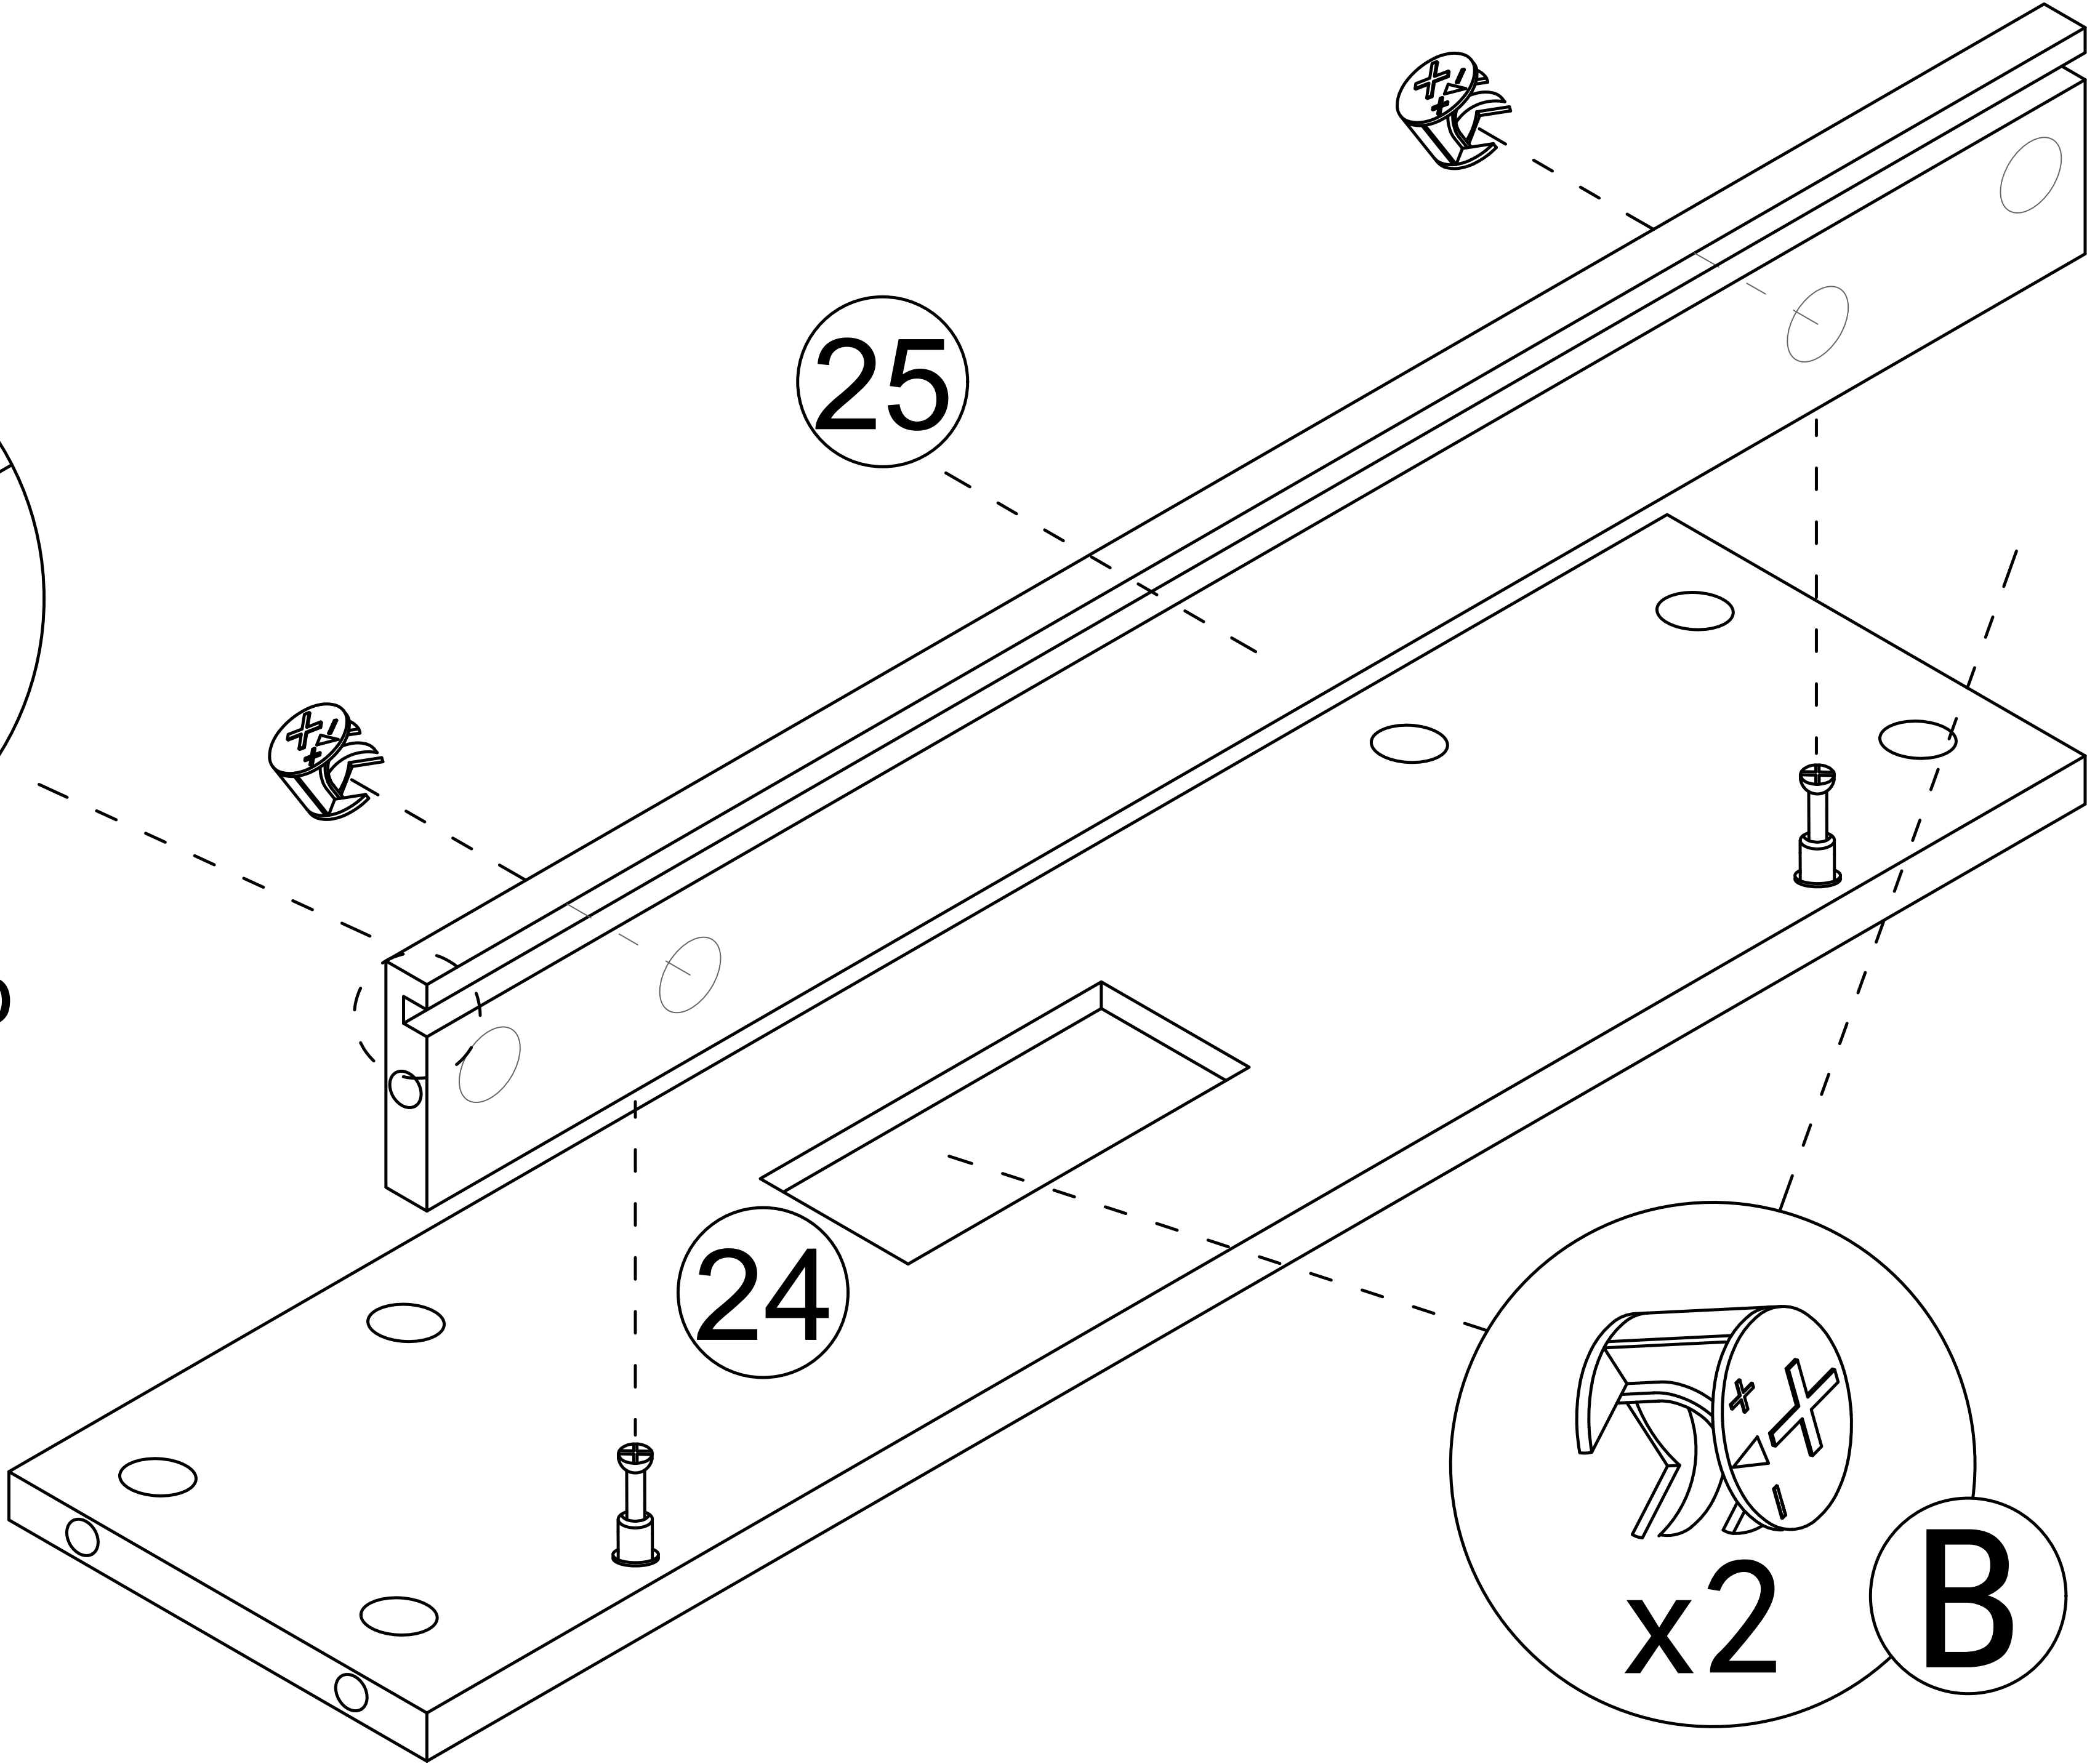


Step 54

Number B hardware accessory,
the triangular shape on top should
face the edge of the panel

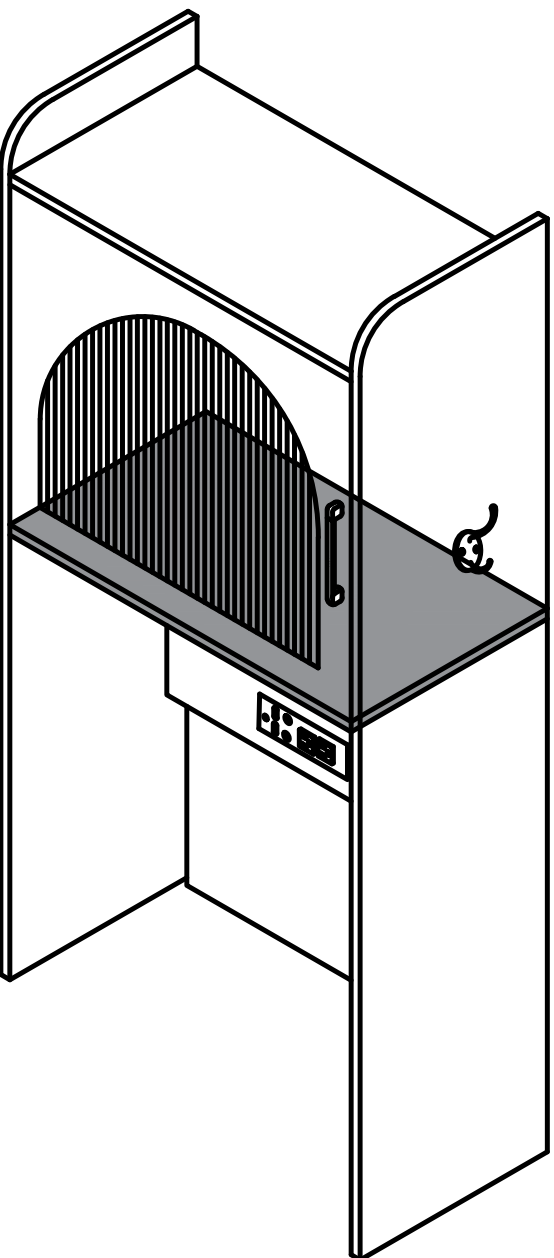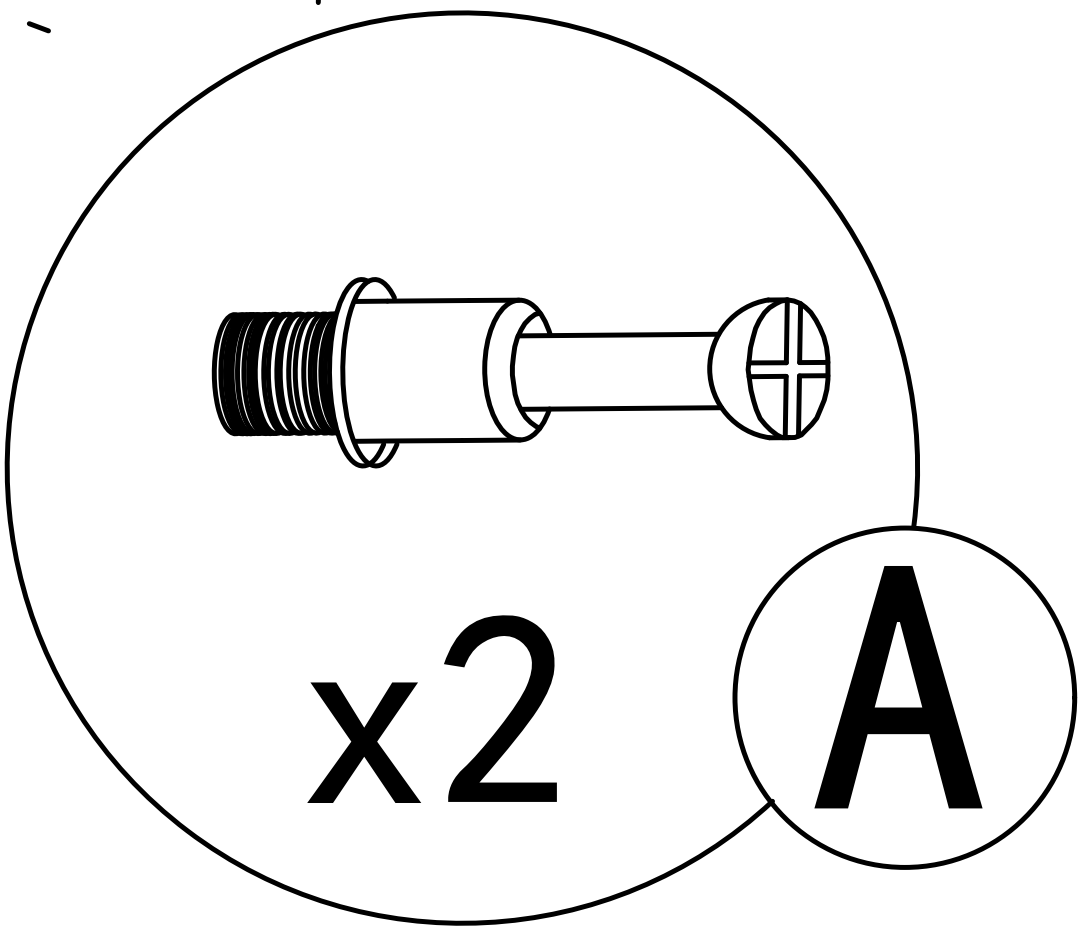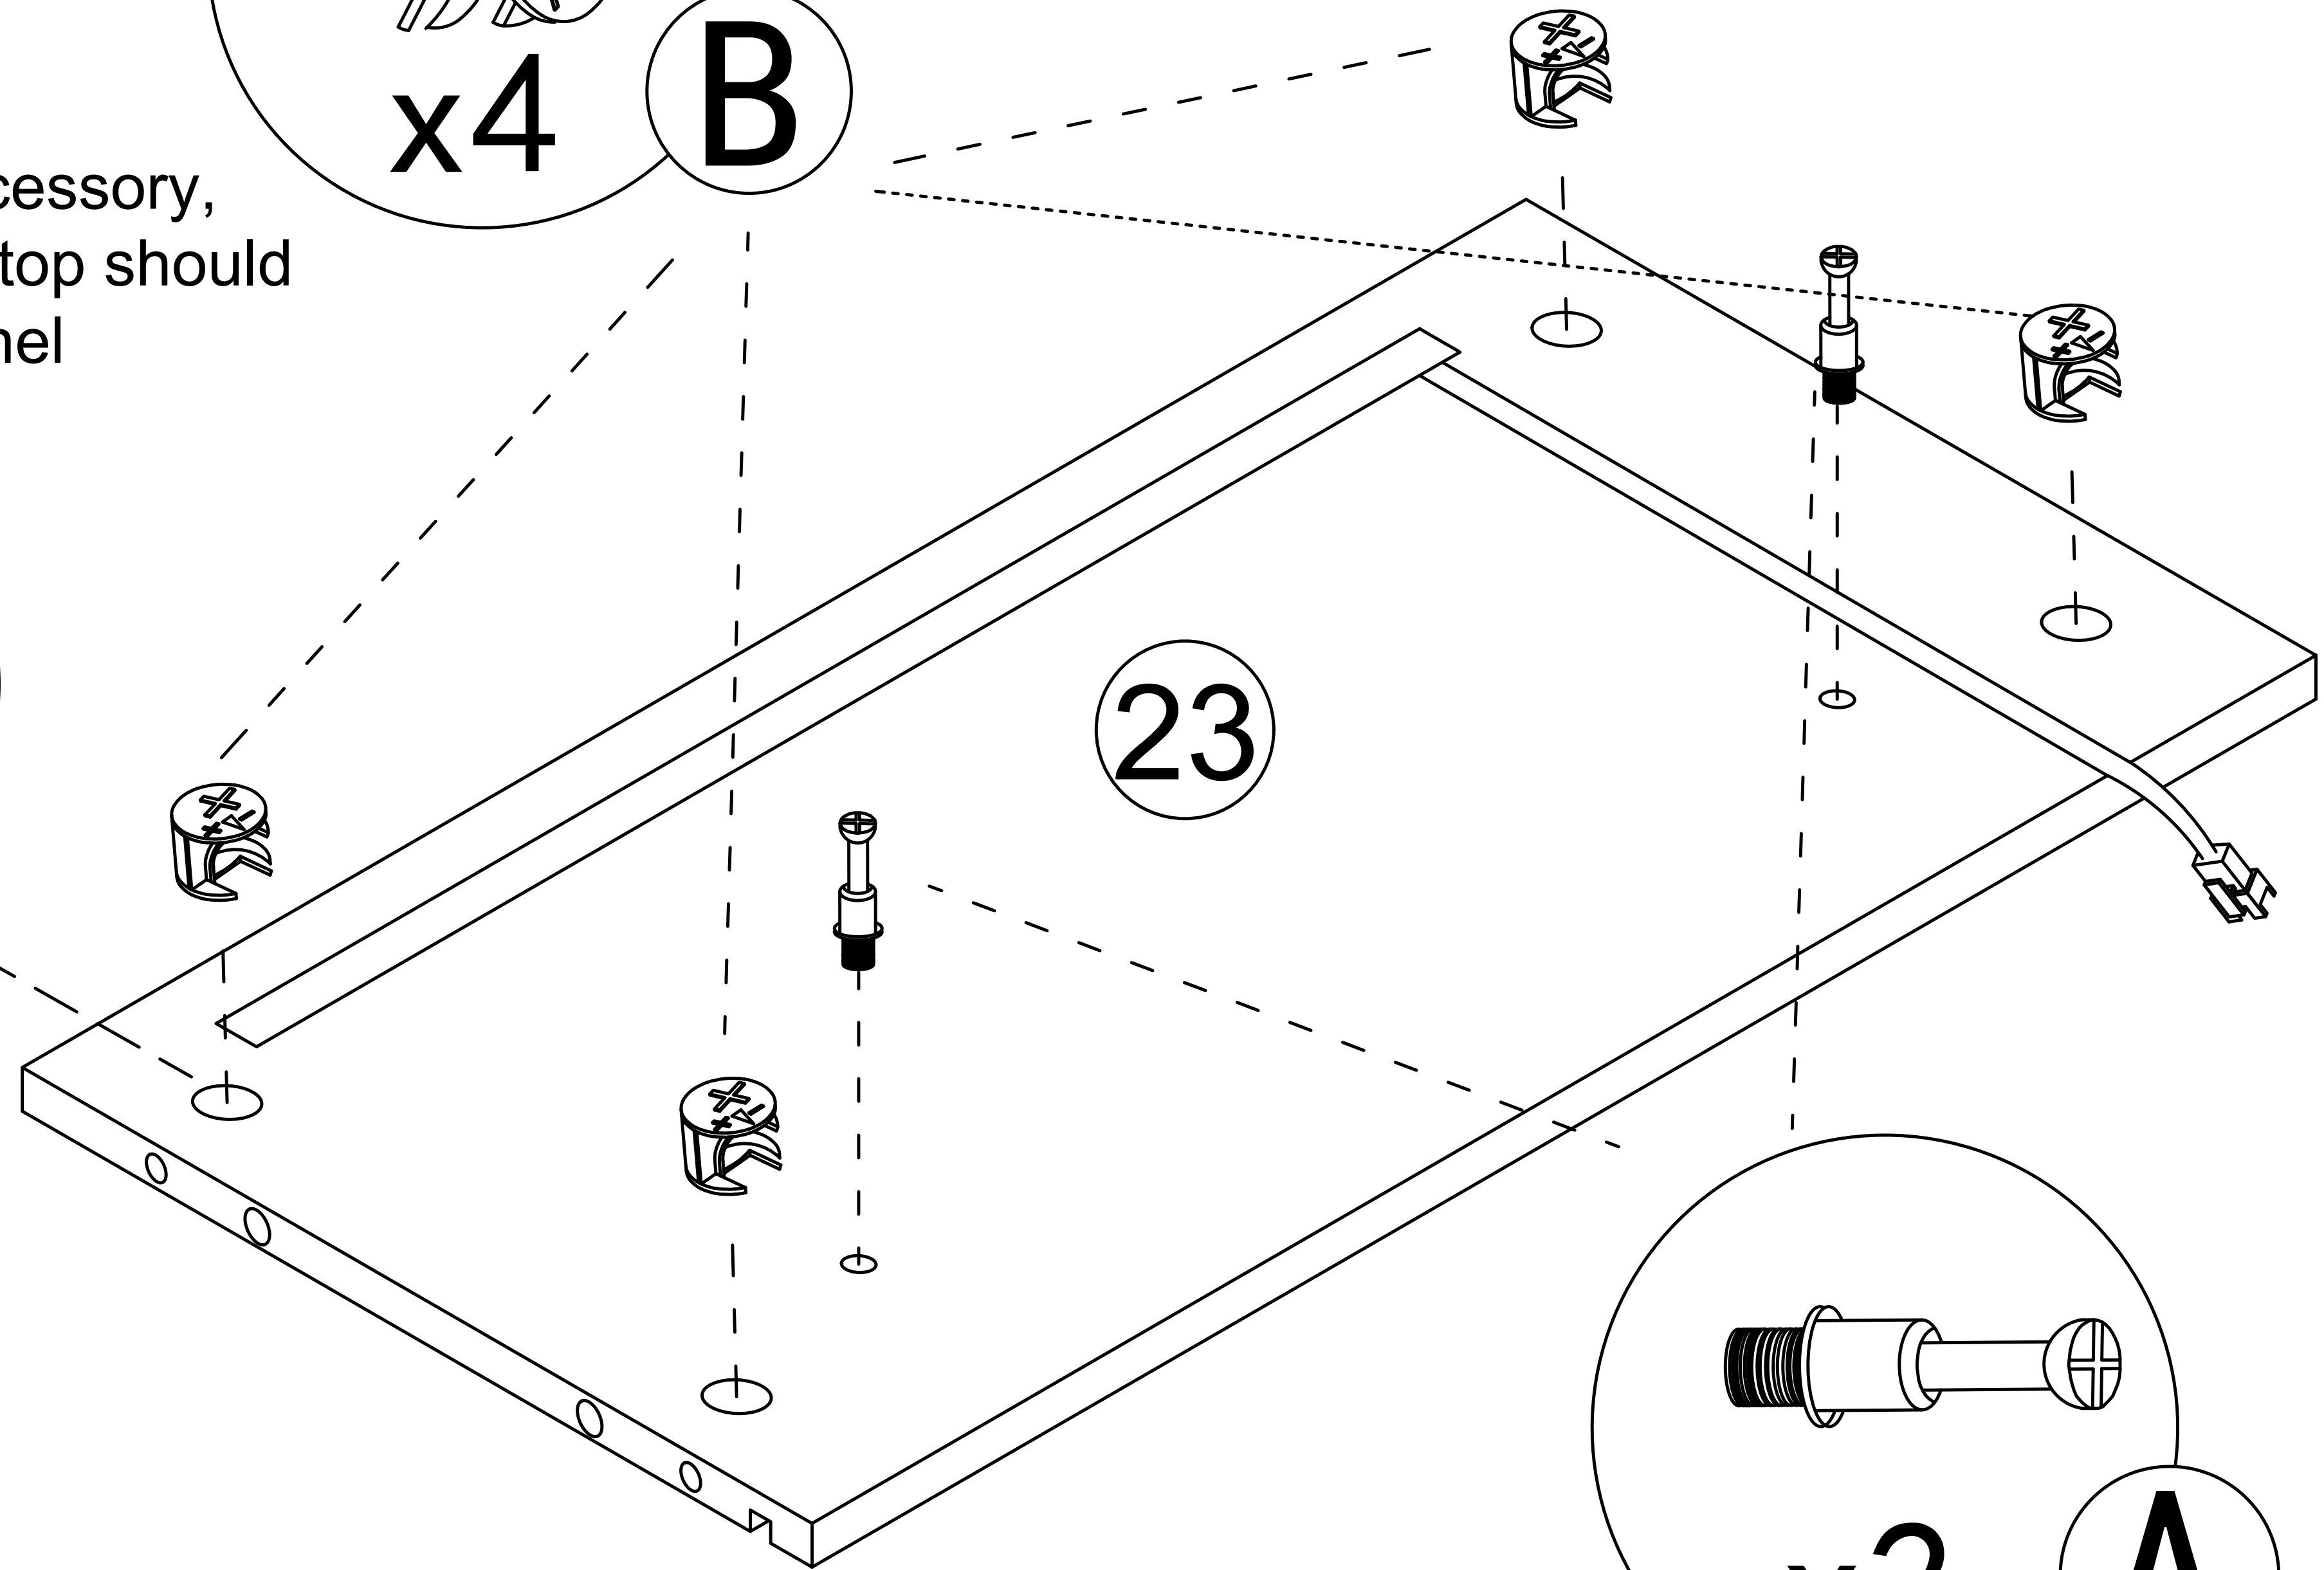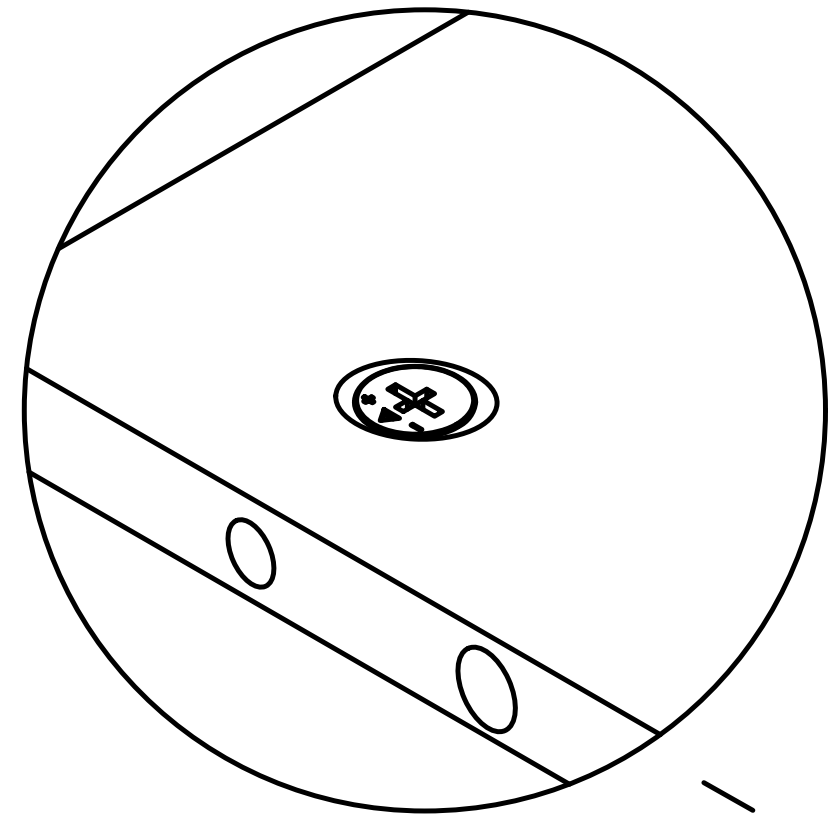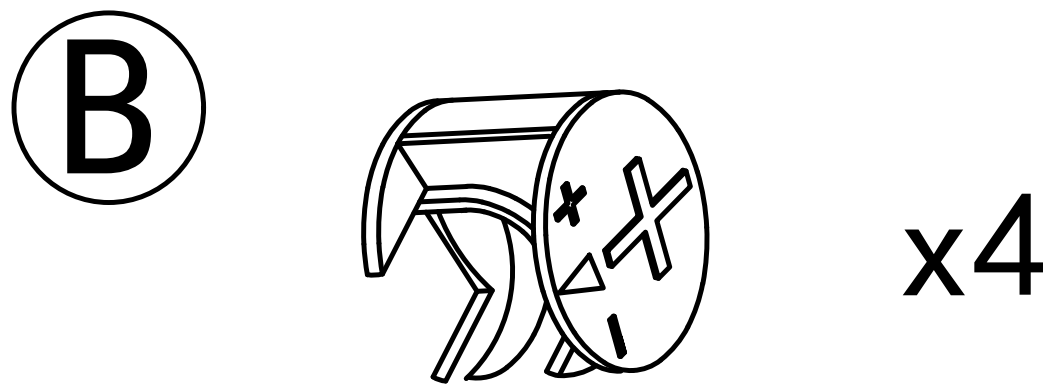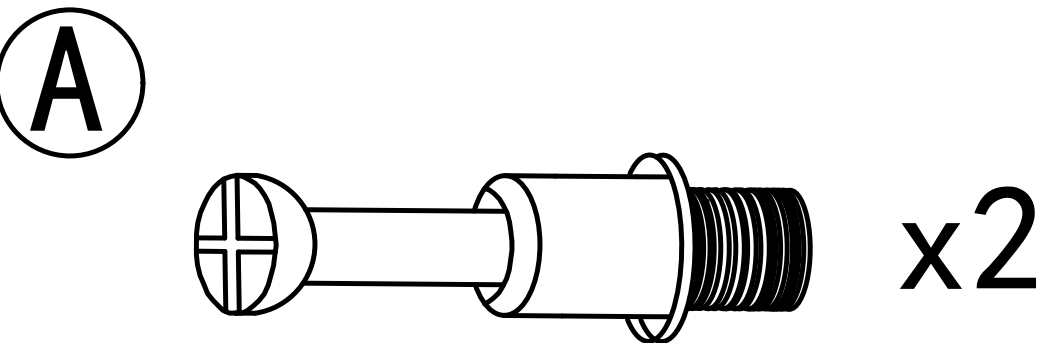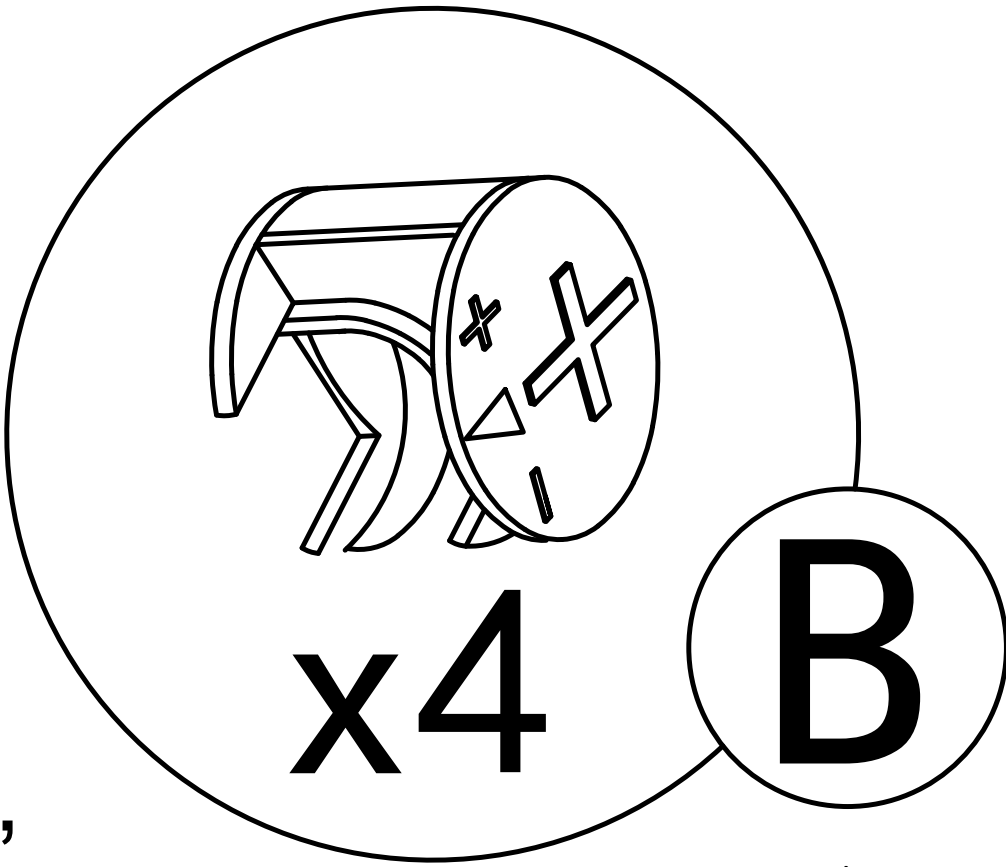


Step 55


B

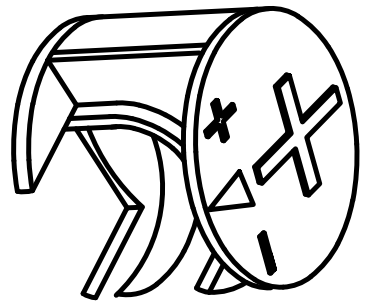


x2

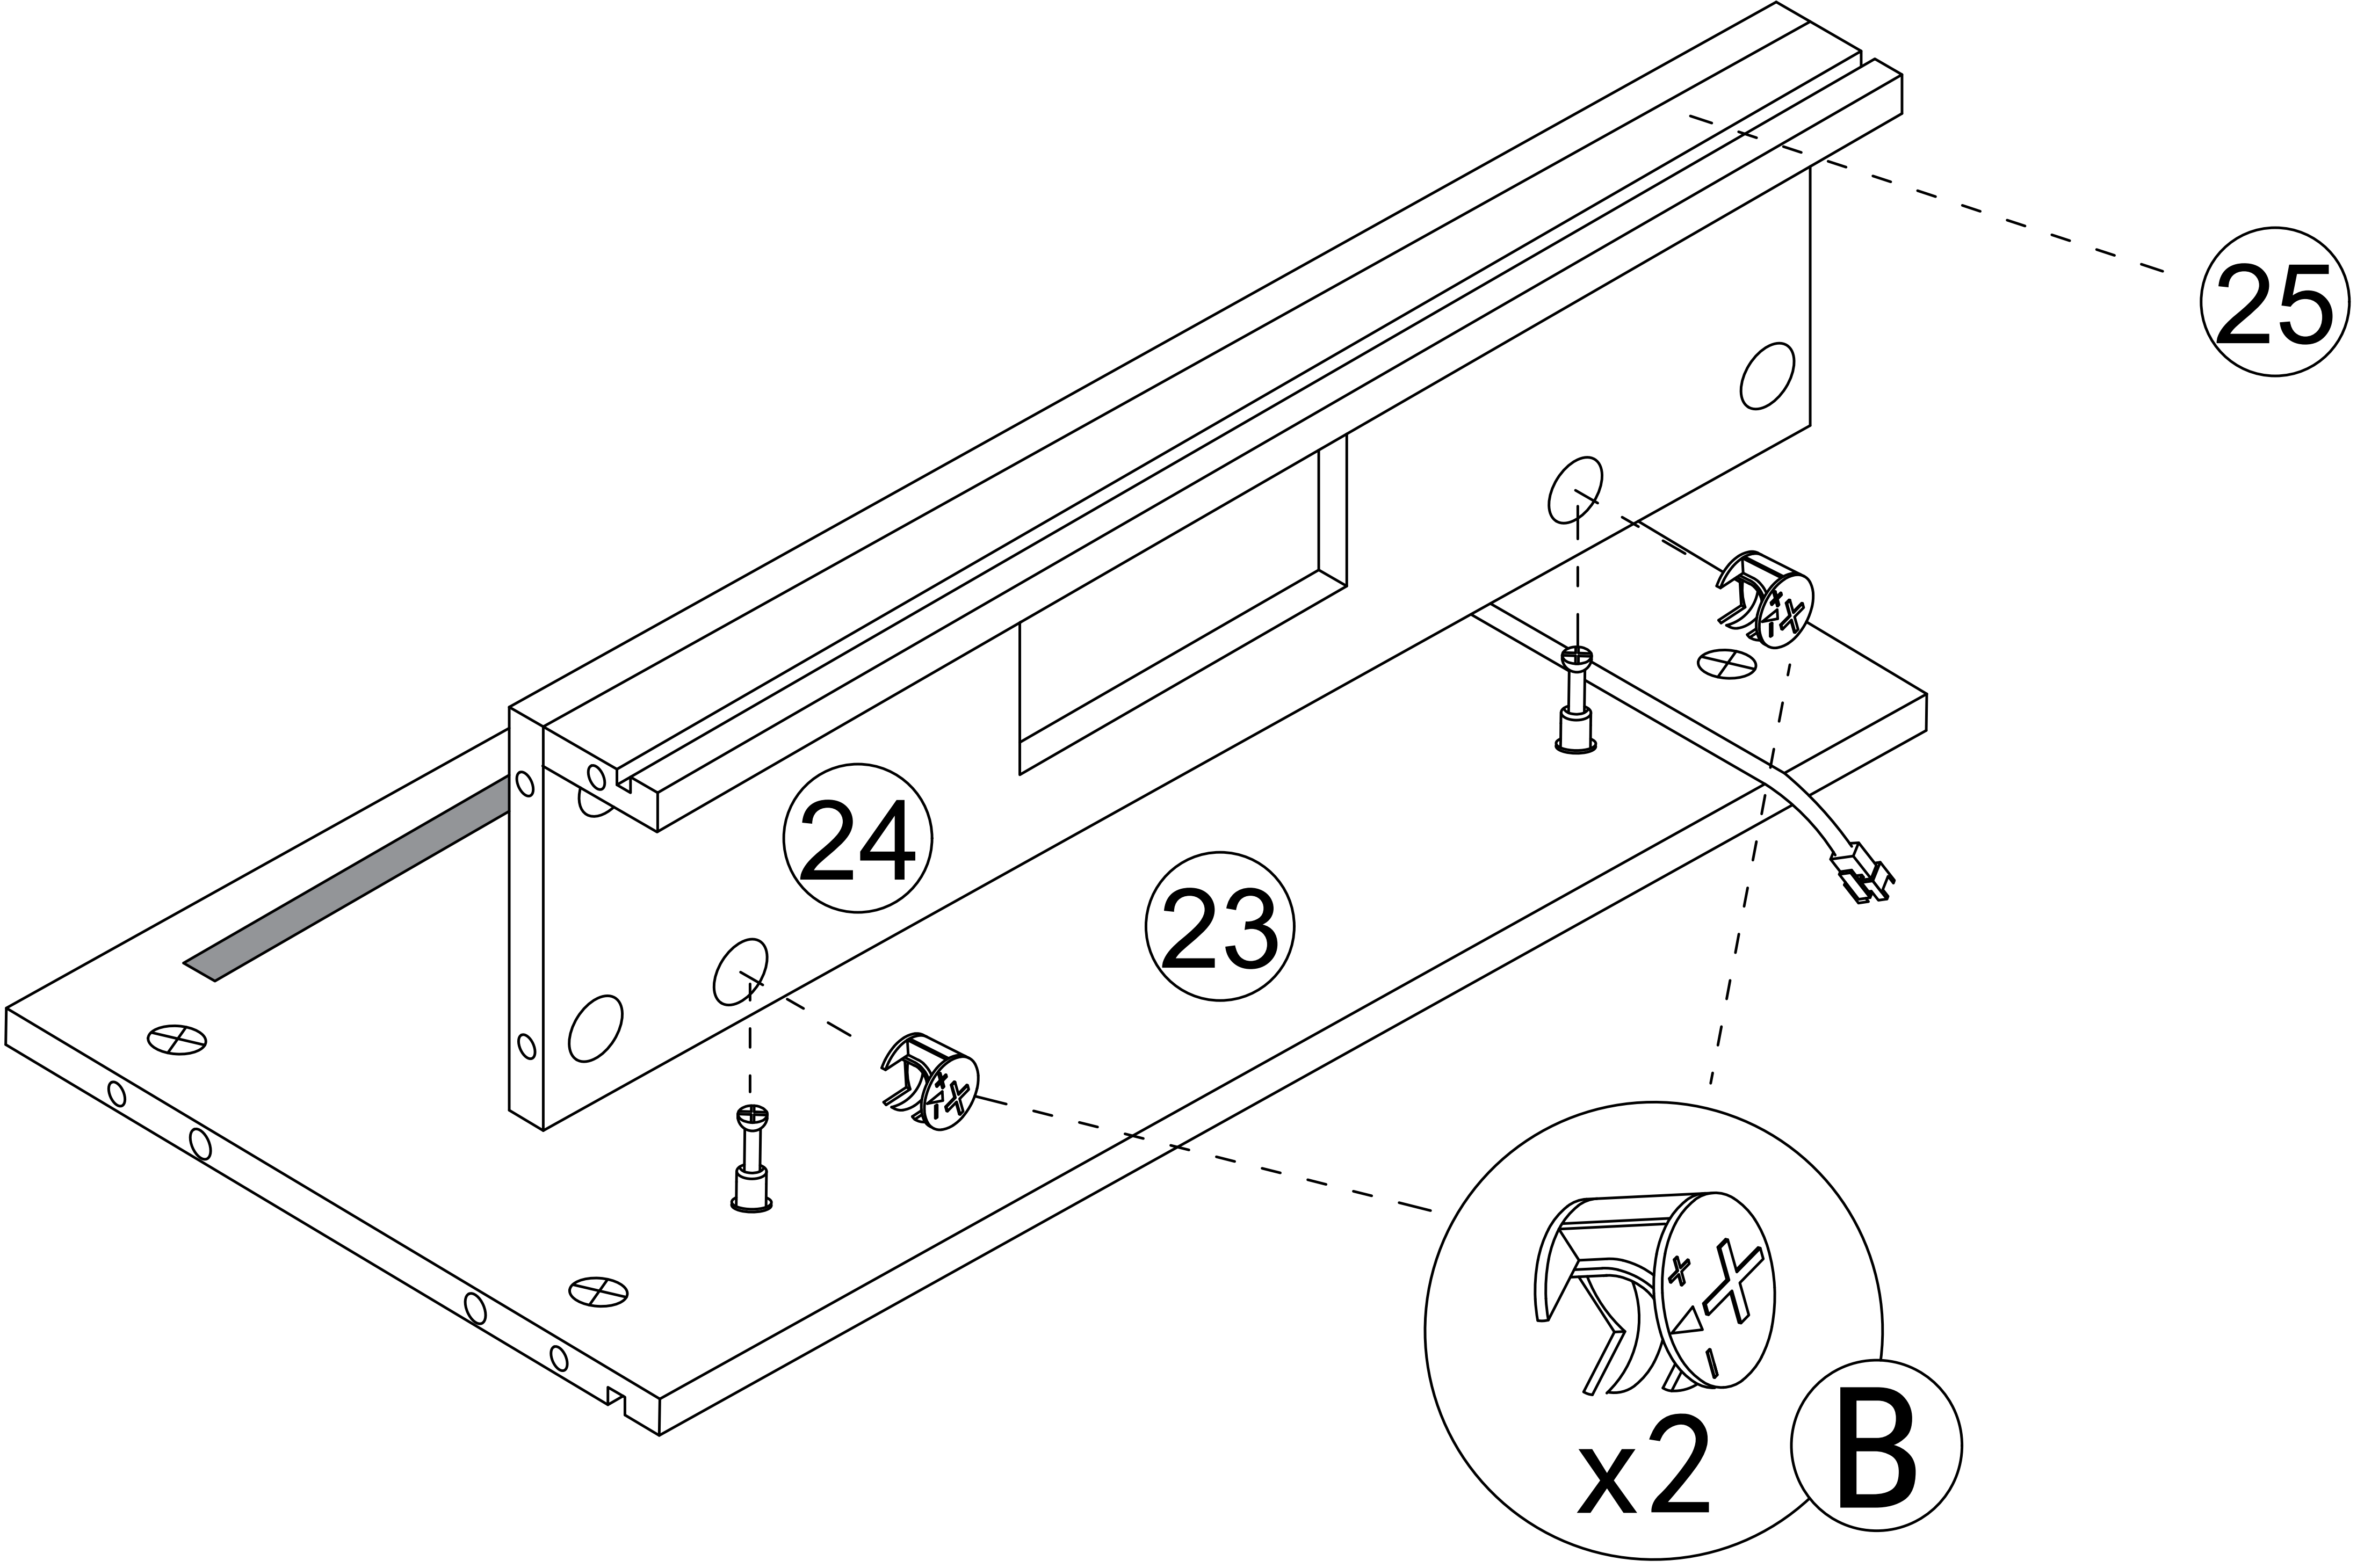

Step 56

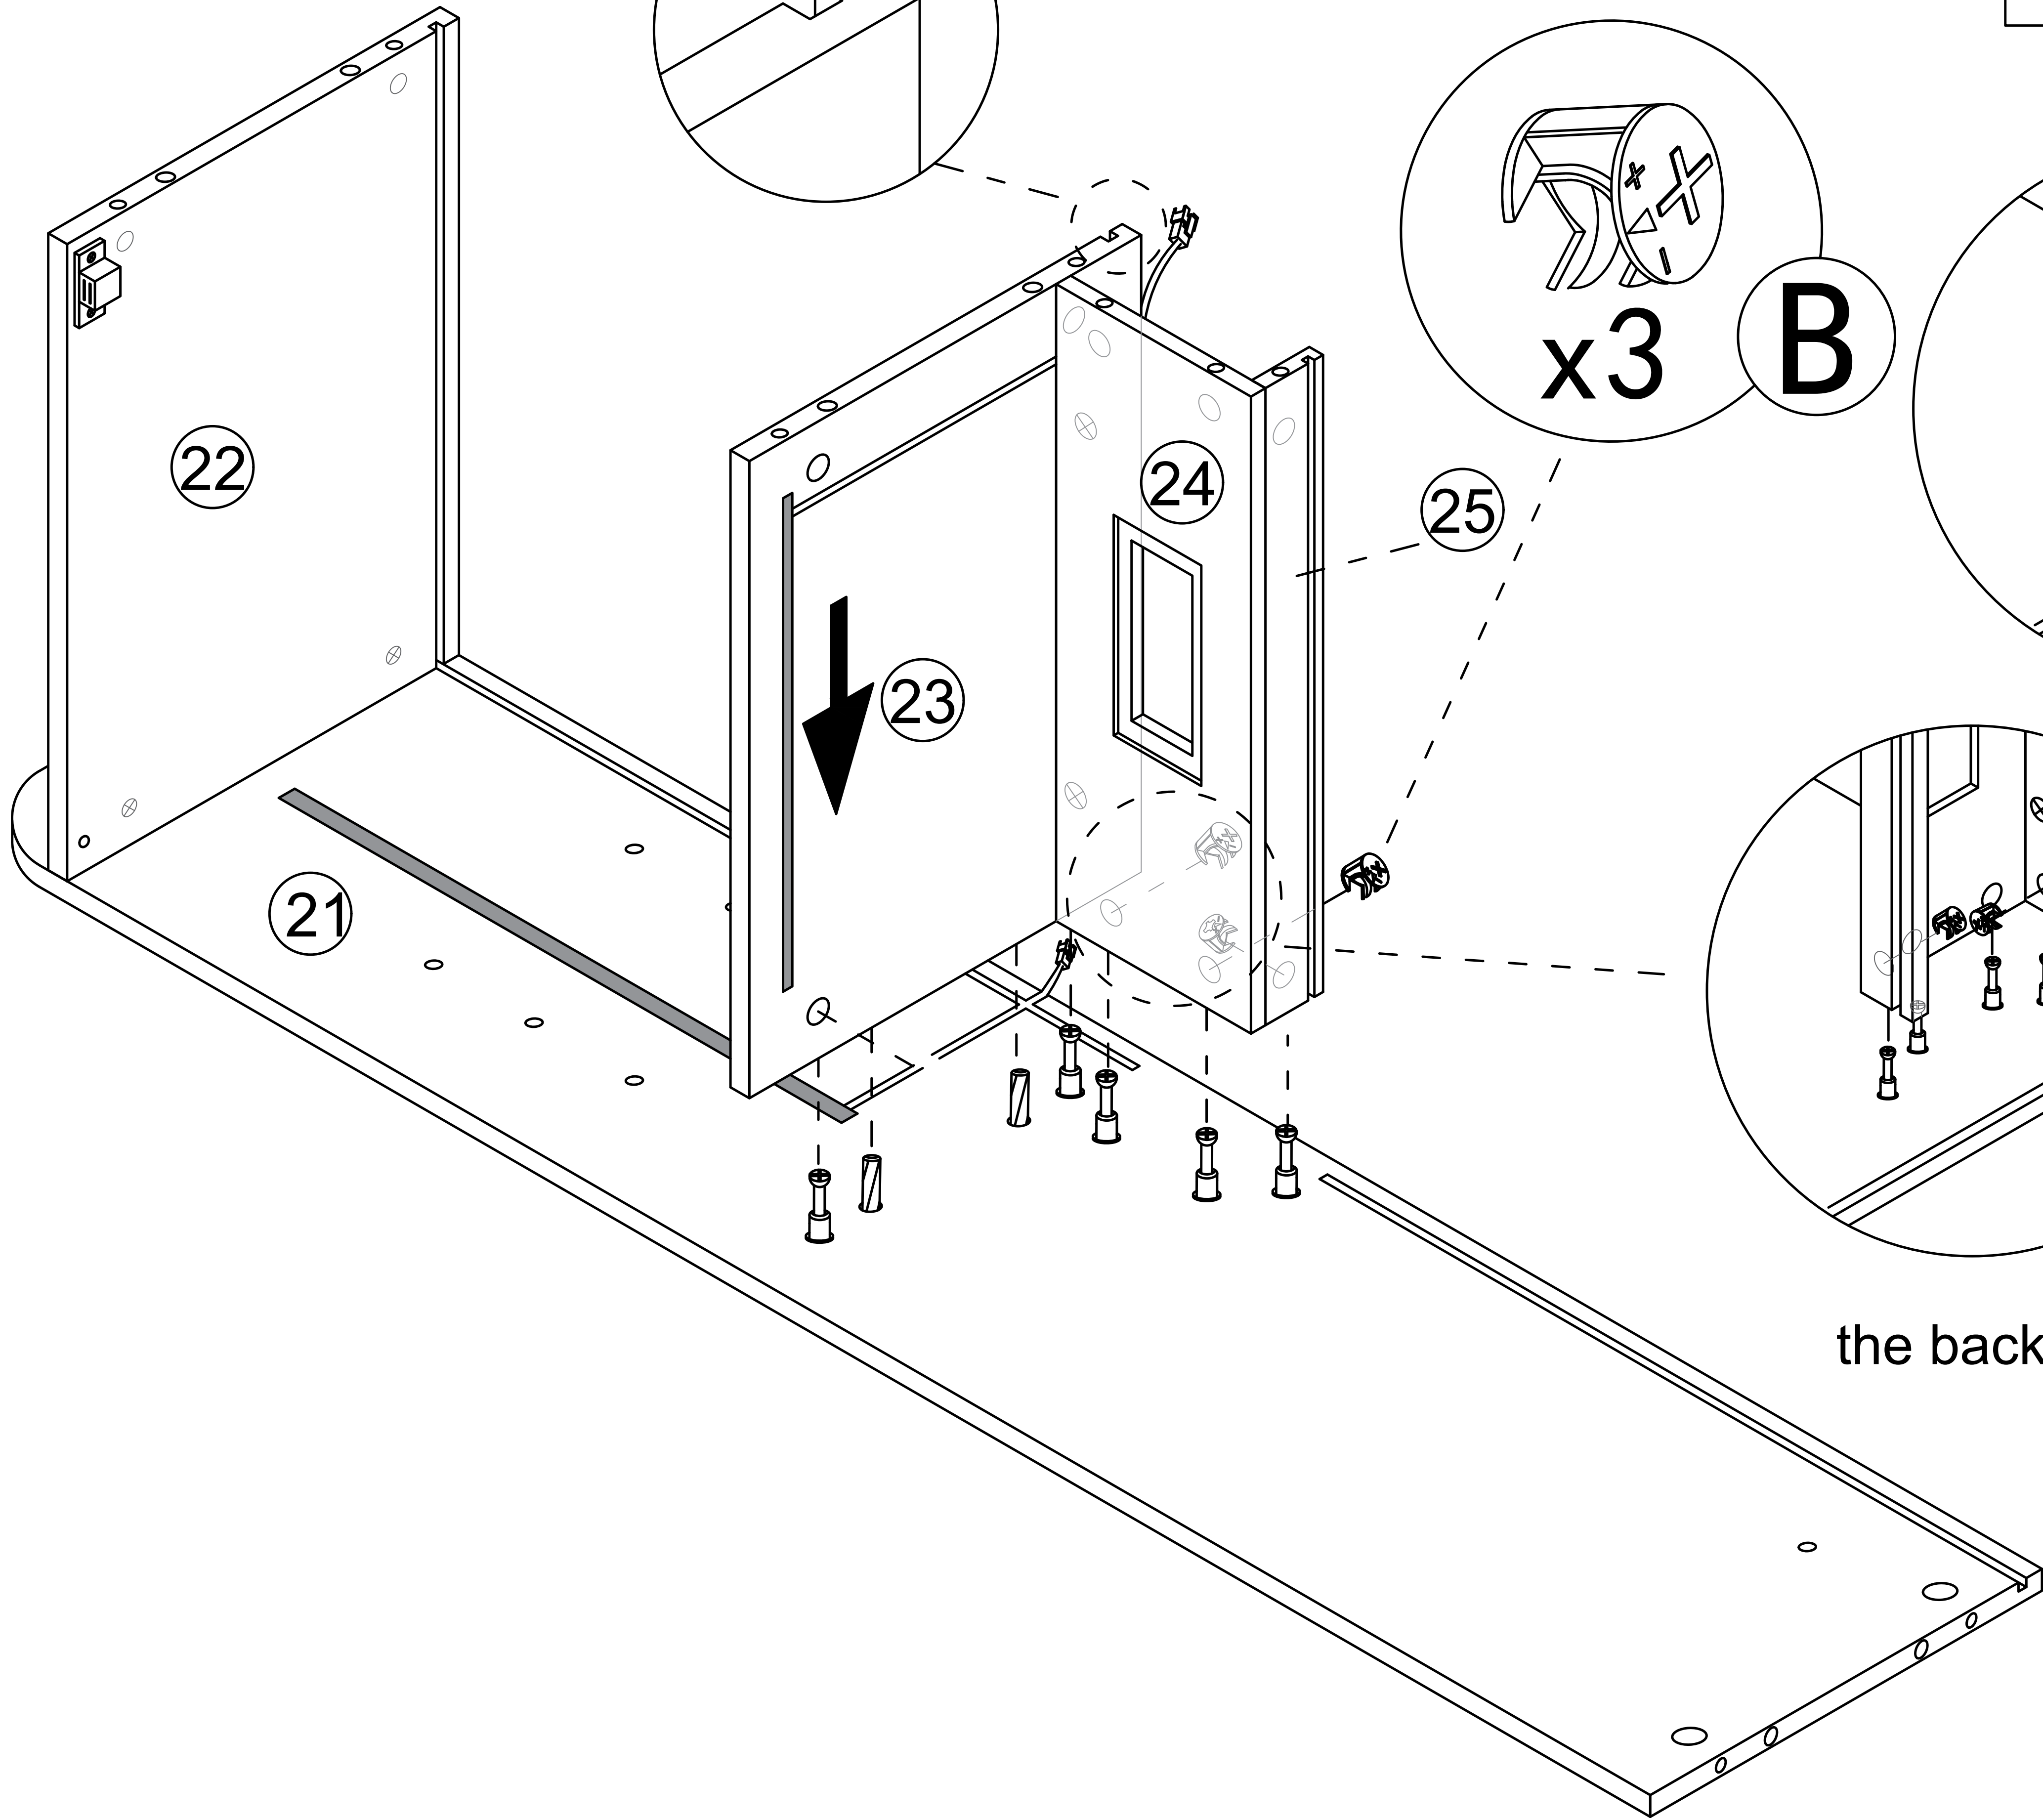

B

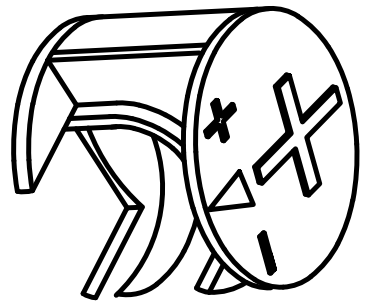


x3

x3


B

Step 57


C

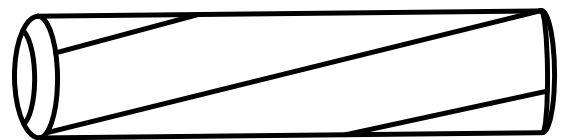

x4

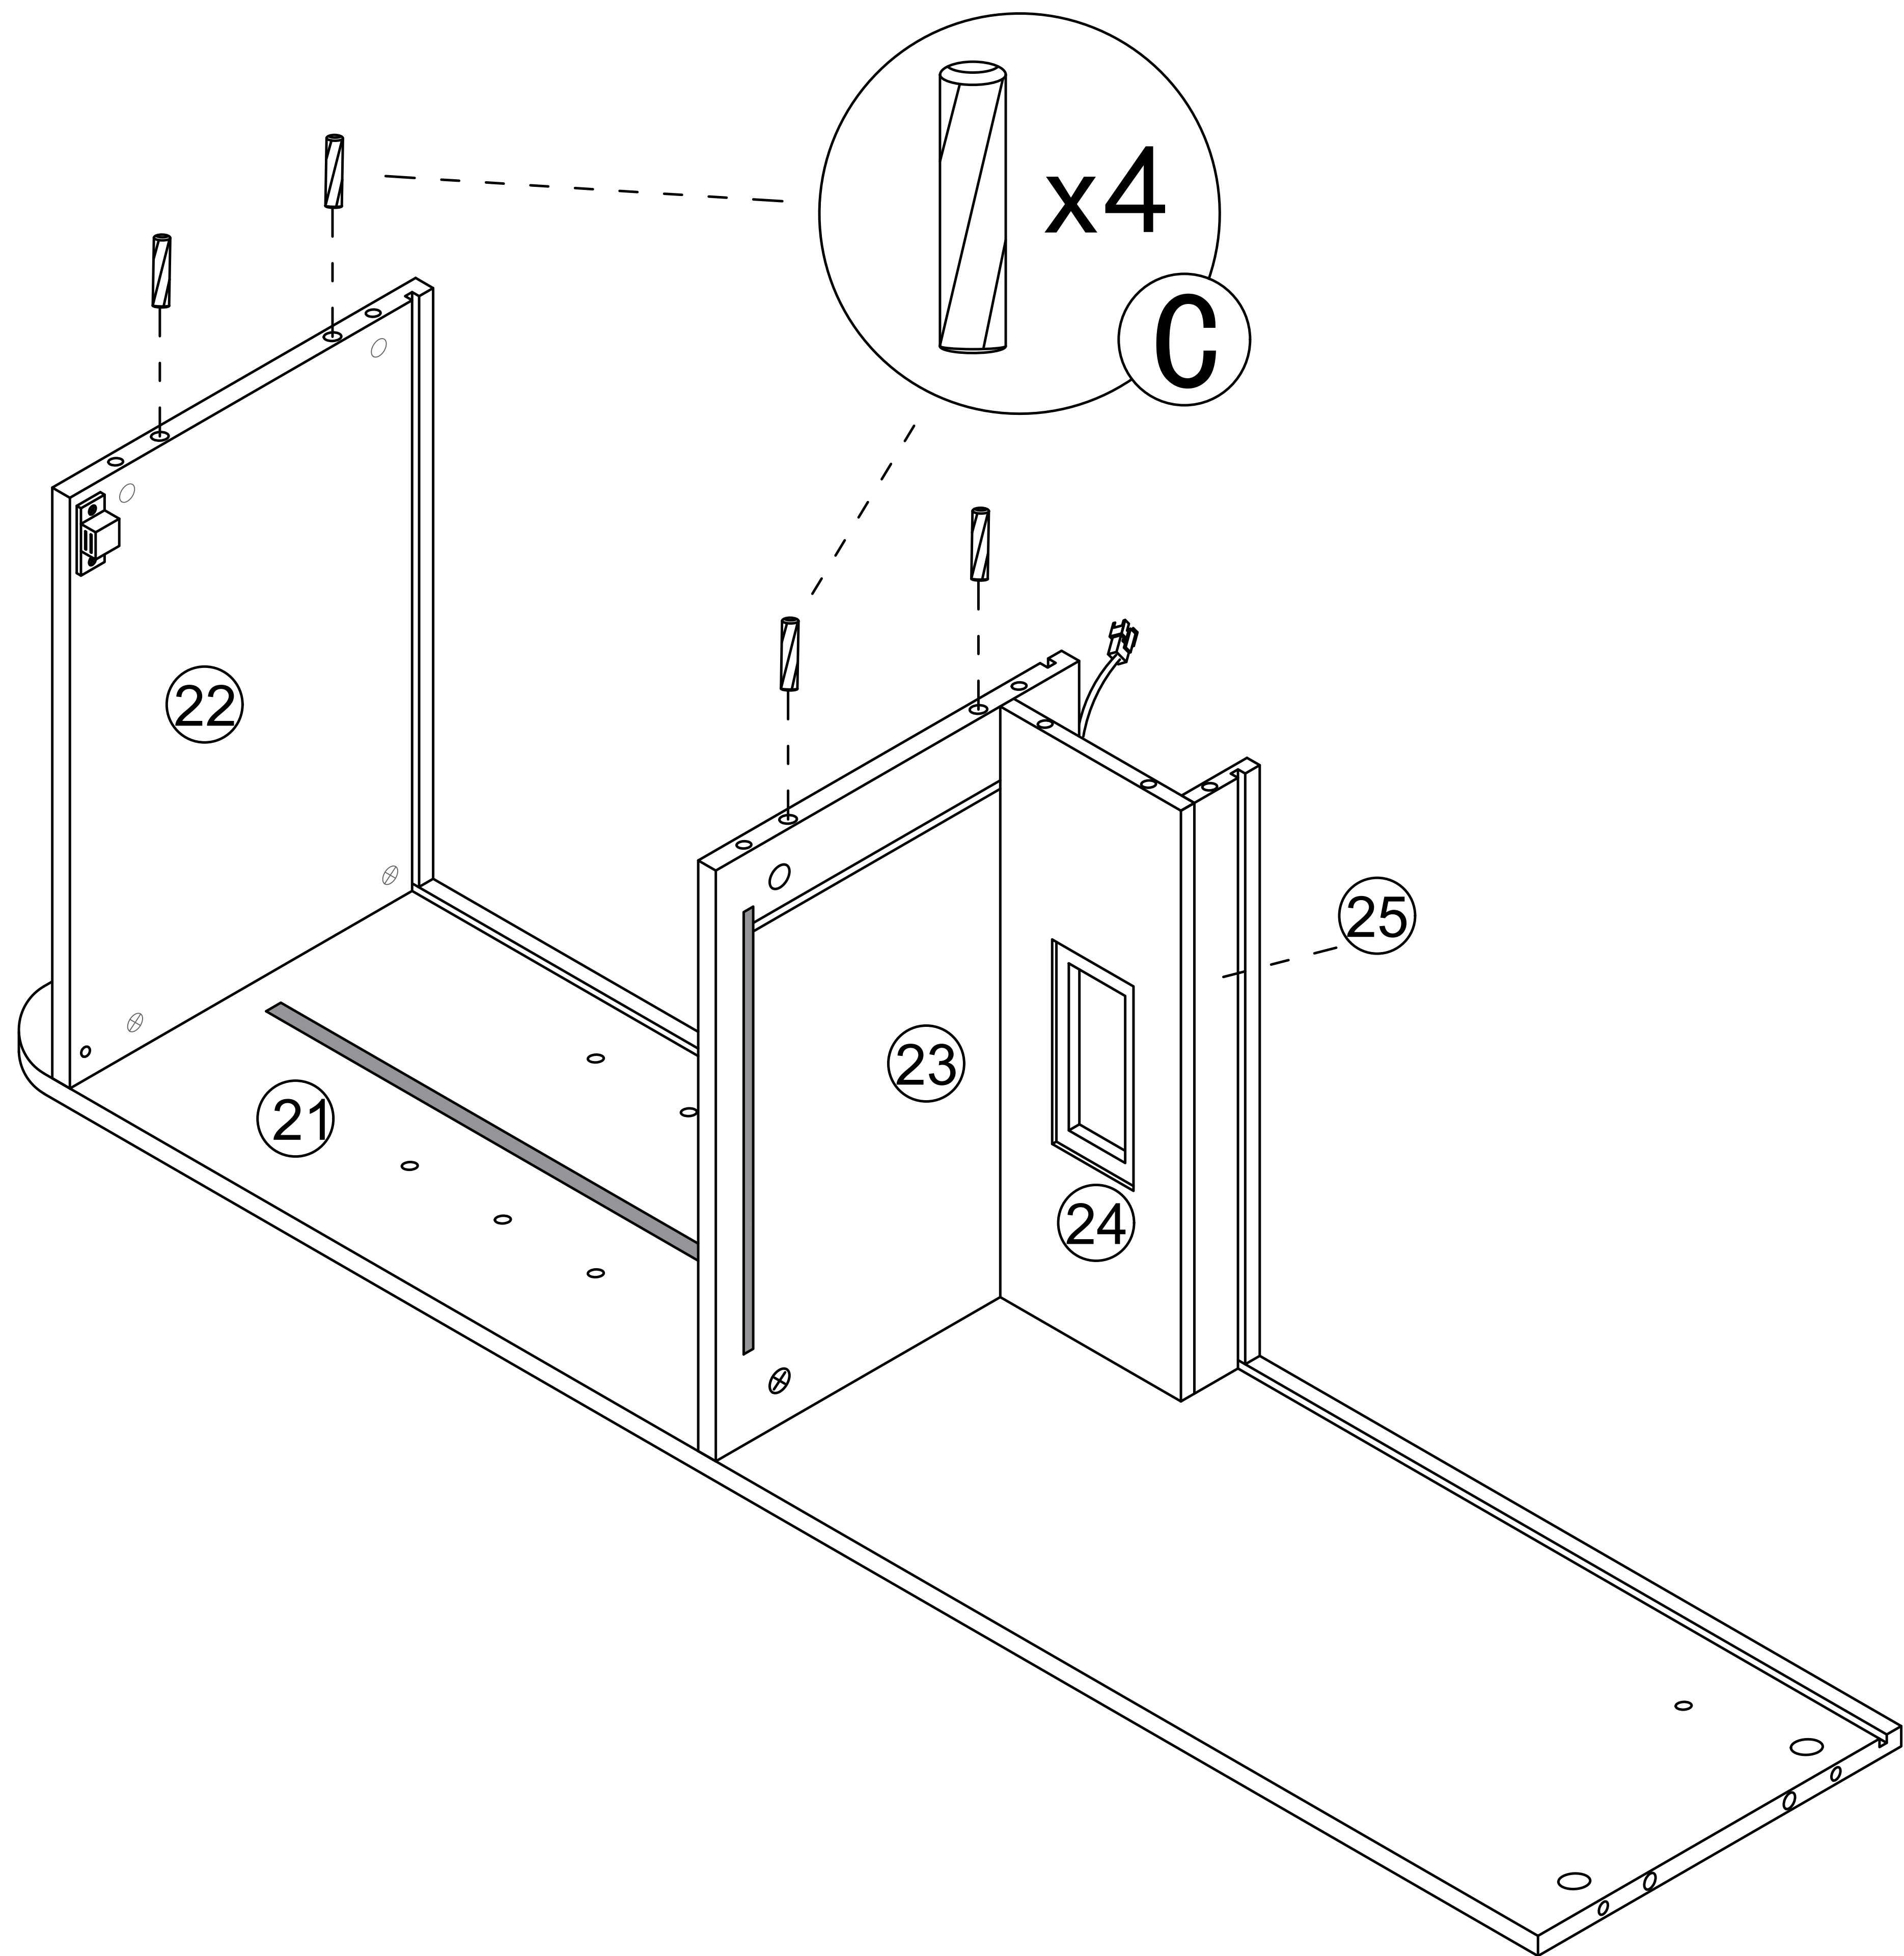


Step 58

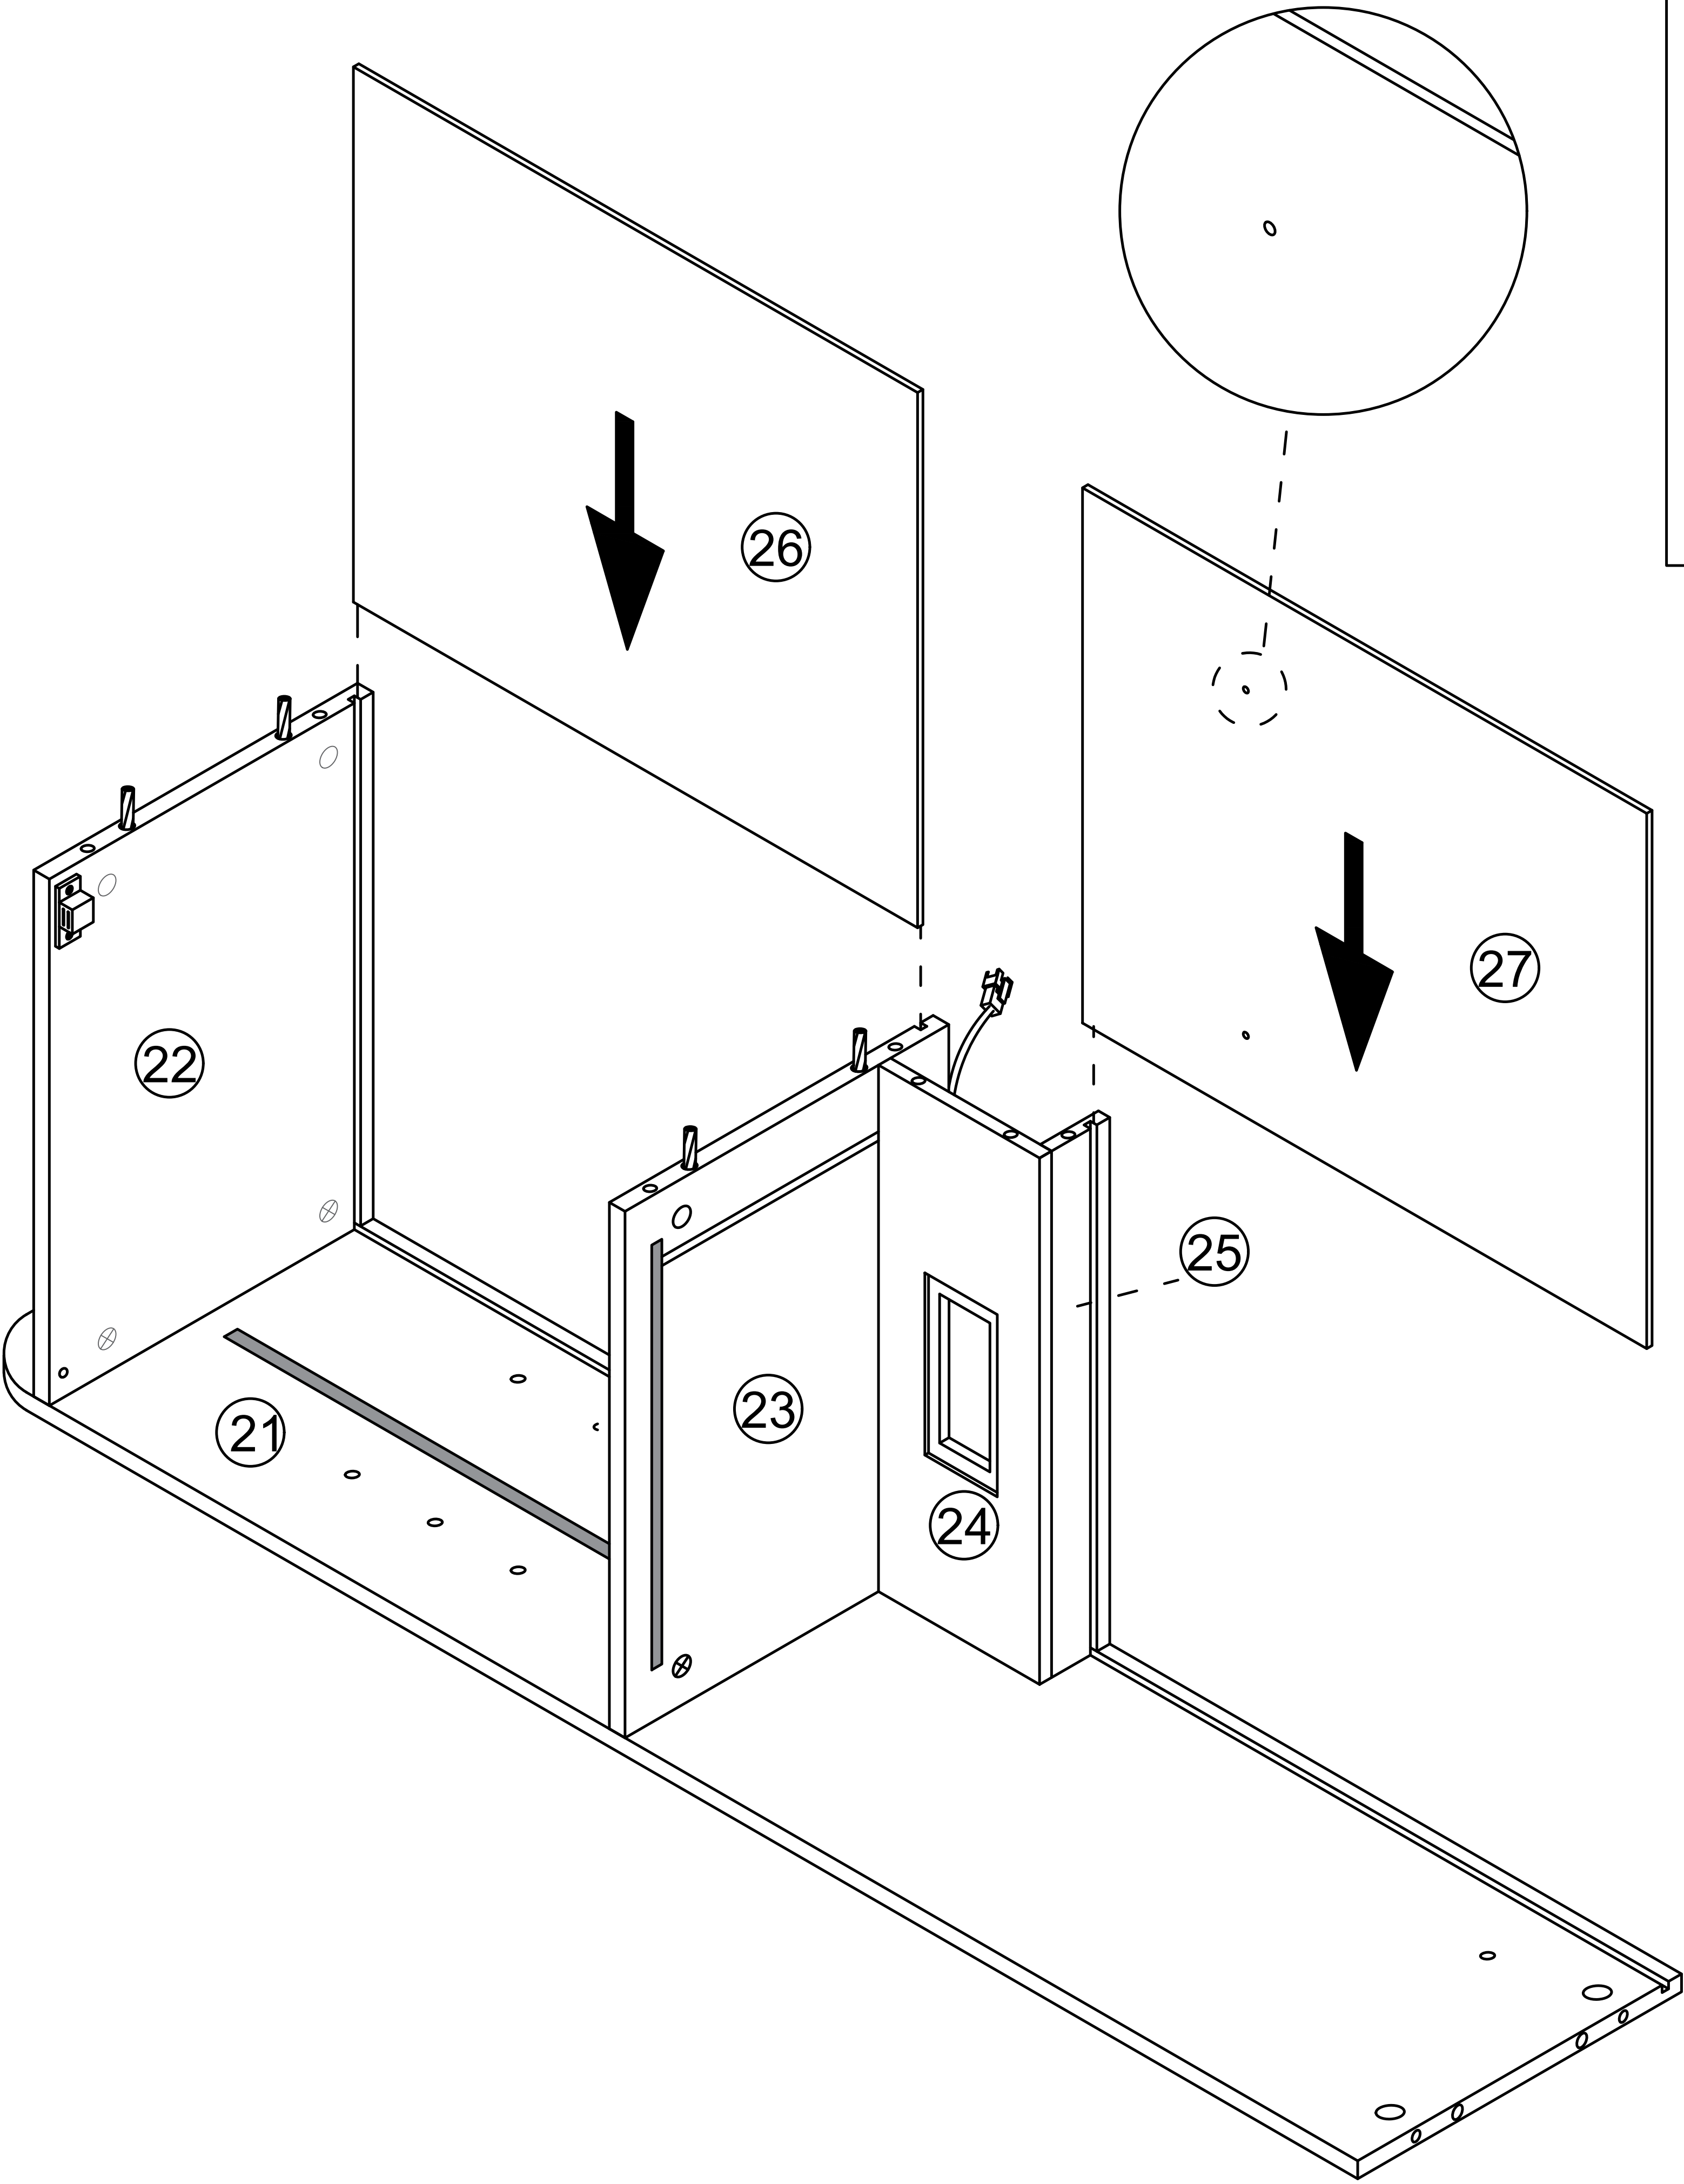



②⑥x1

②⑦x1

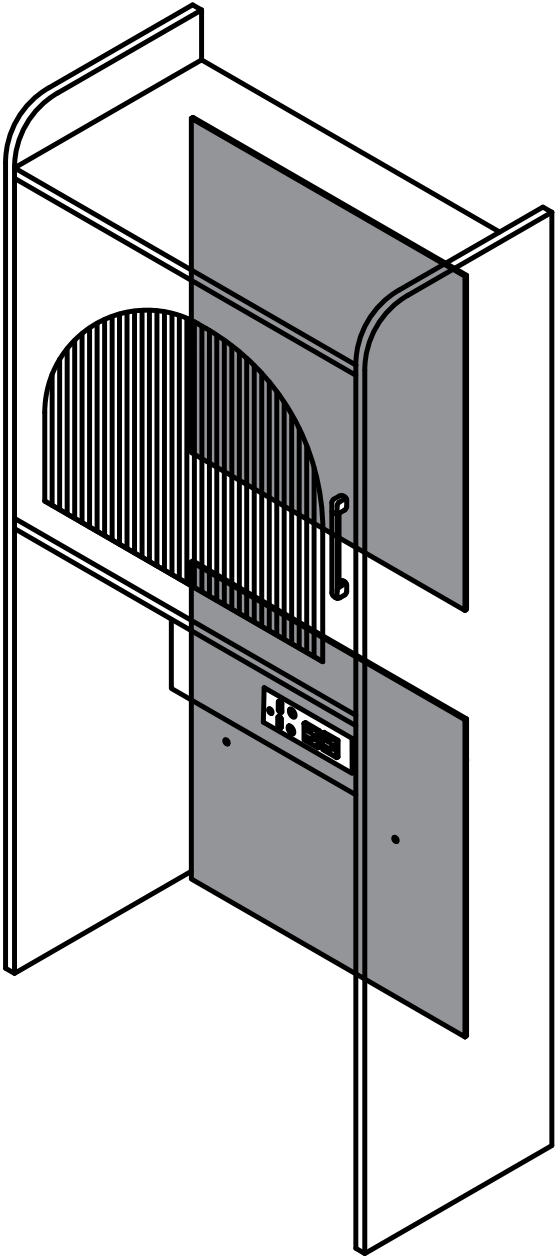

Step 59



A

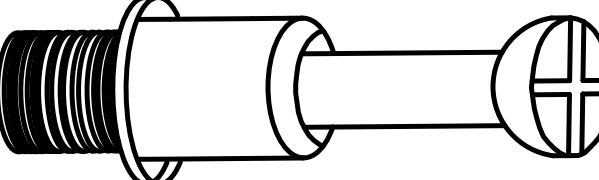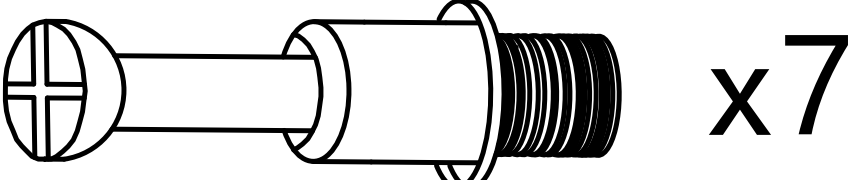

x7


A

28


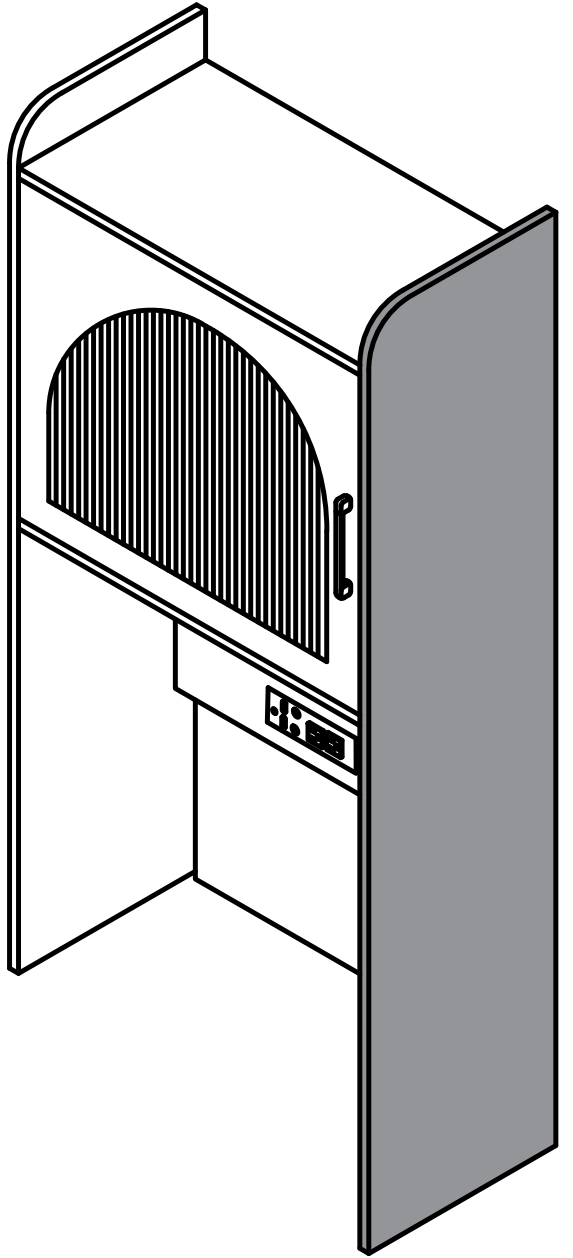
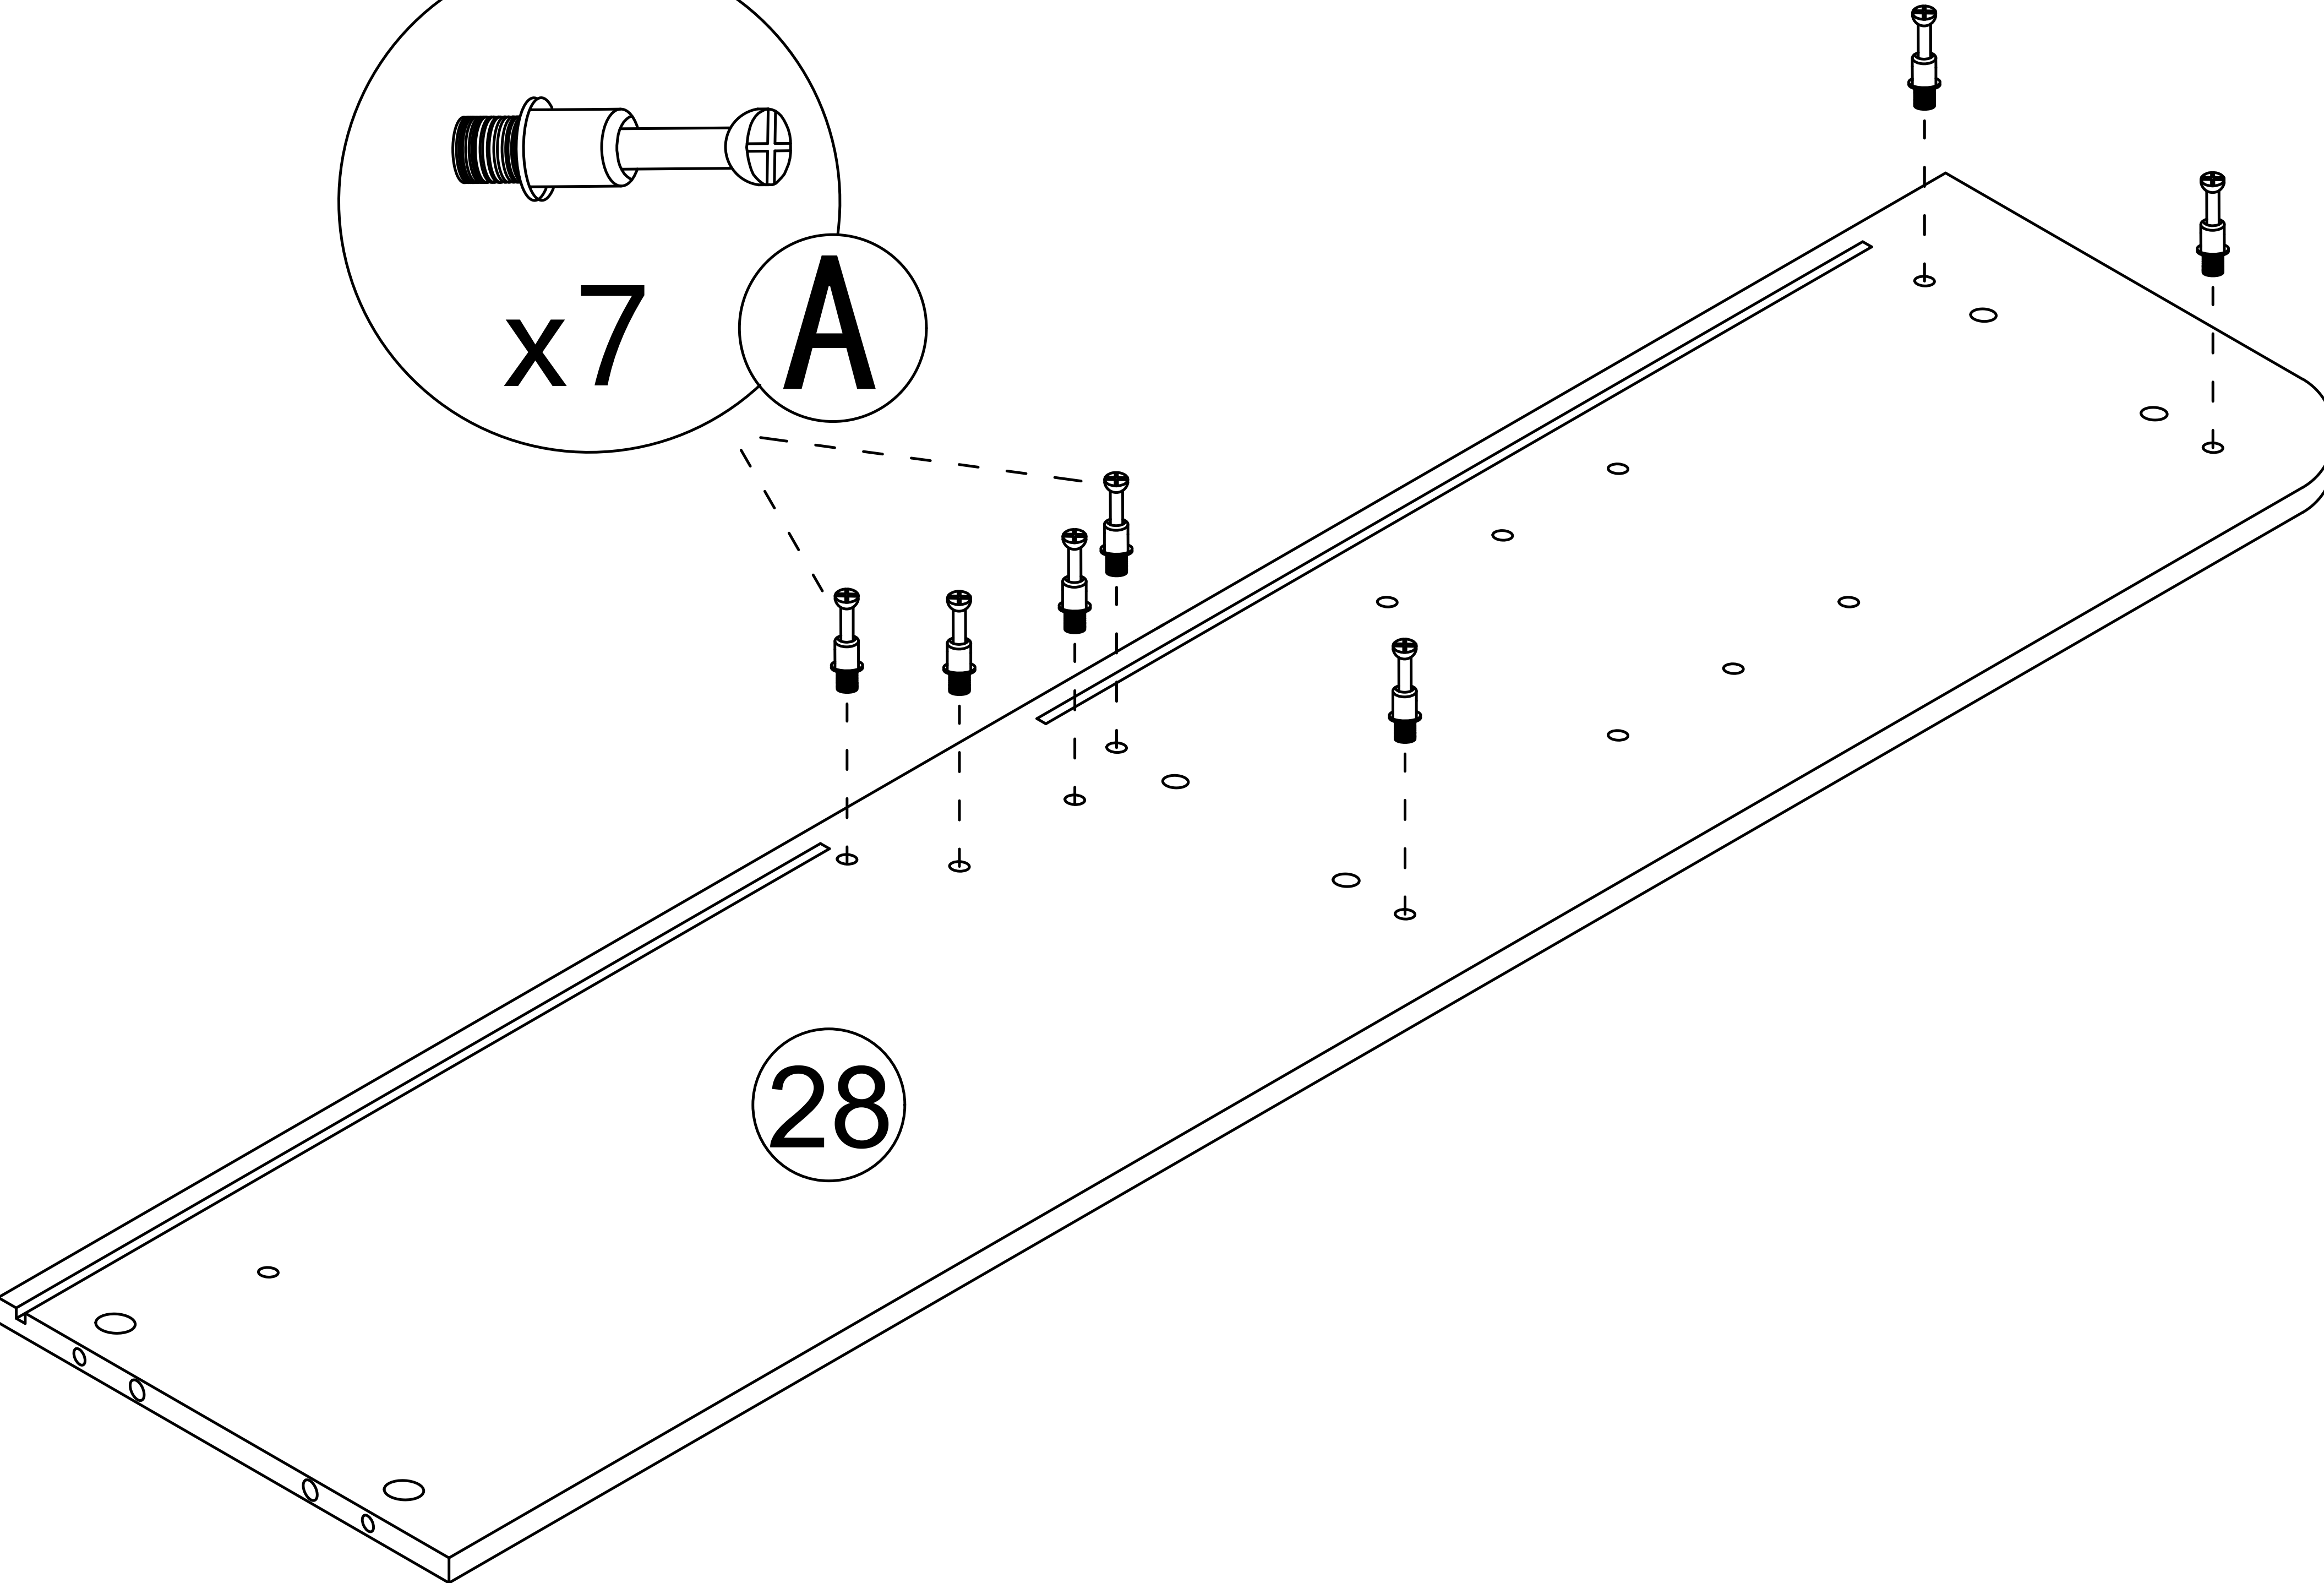


Step 60

B

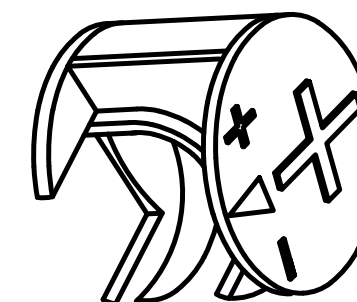


x5

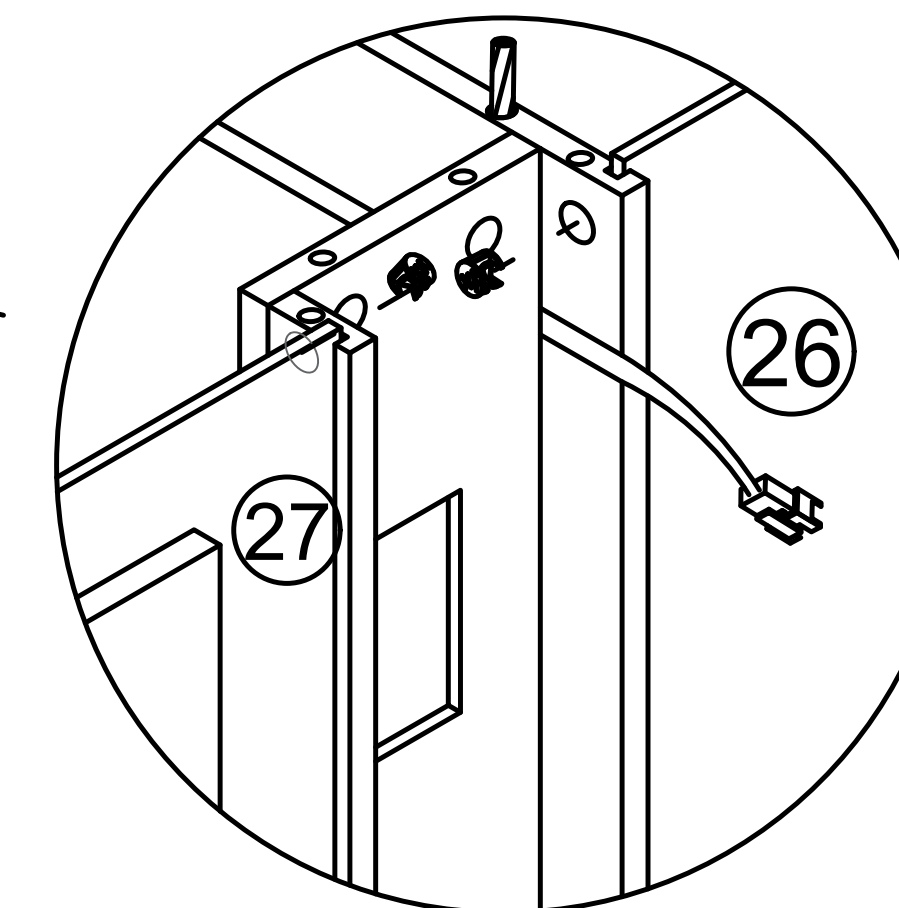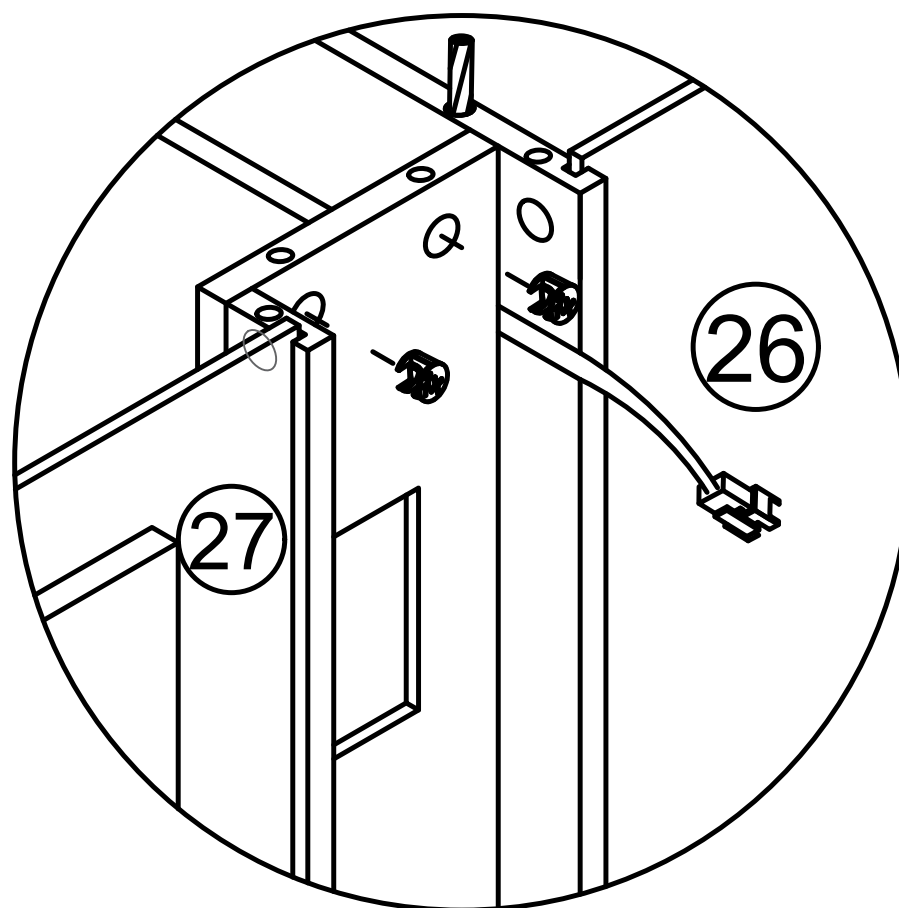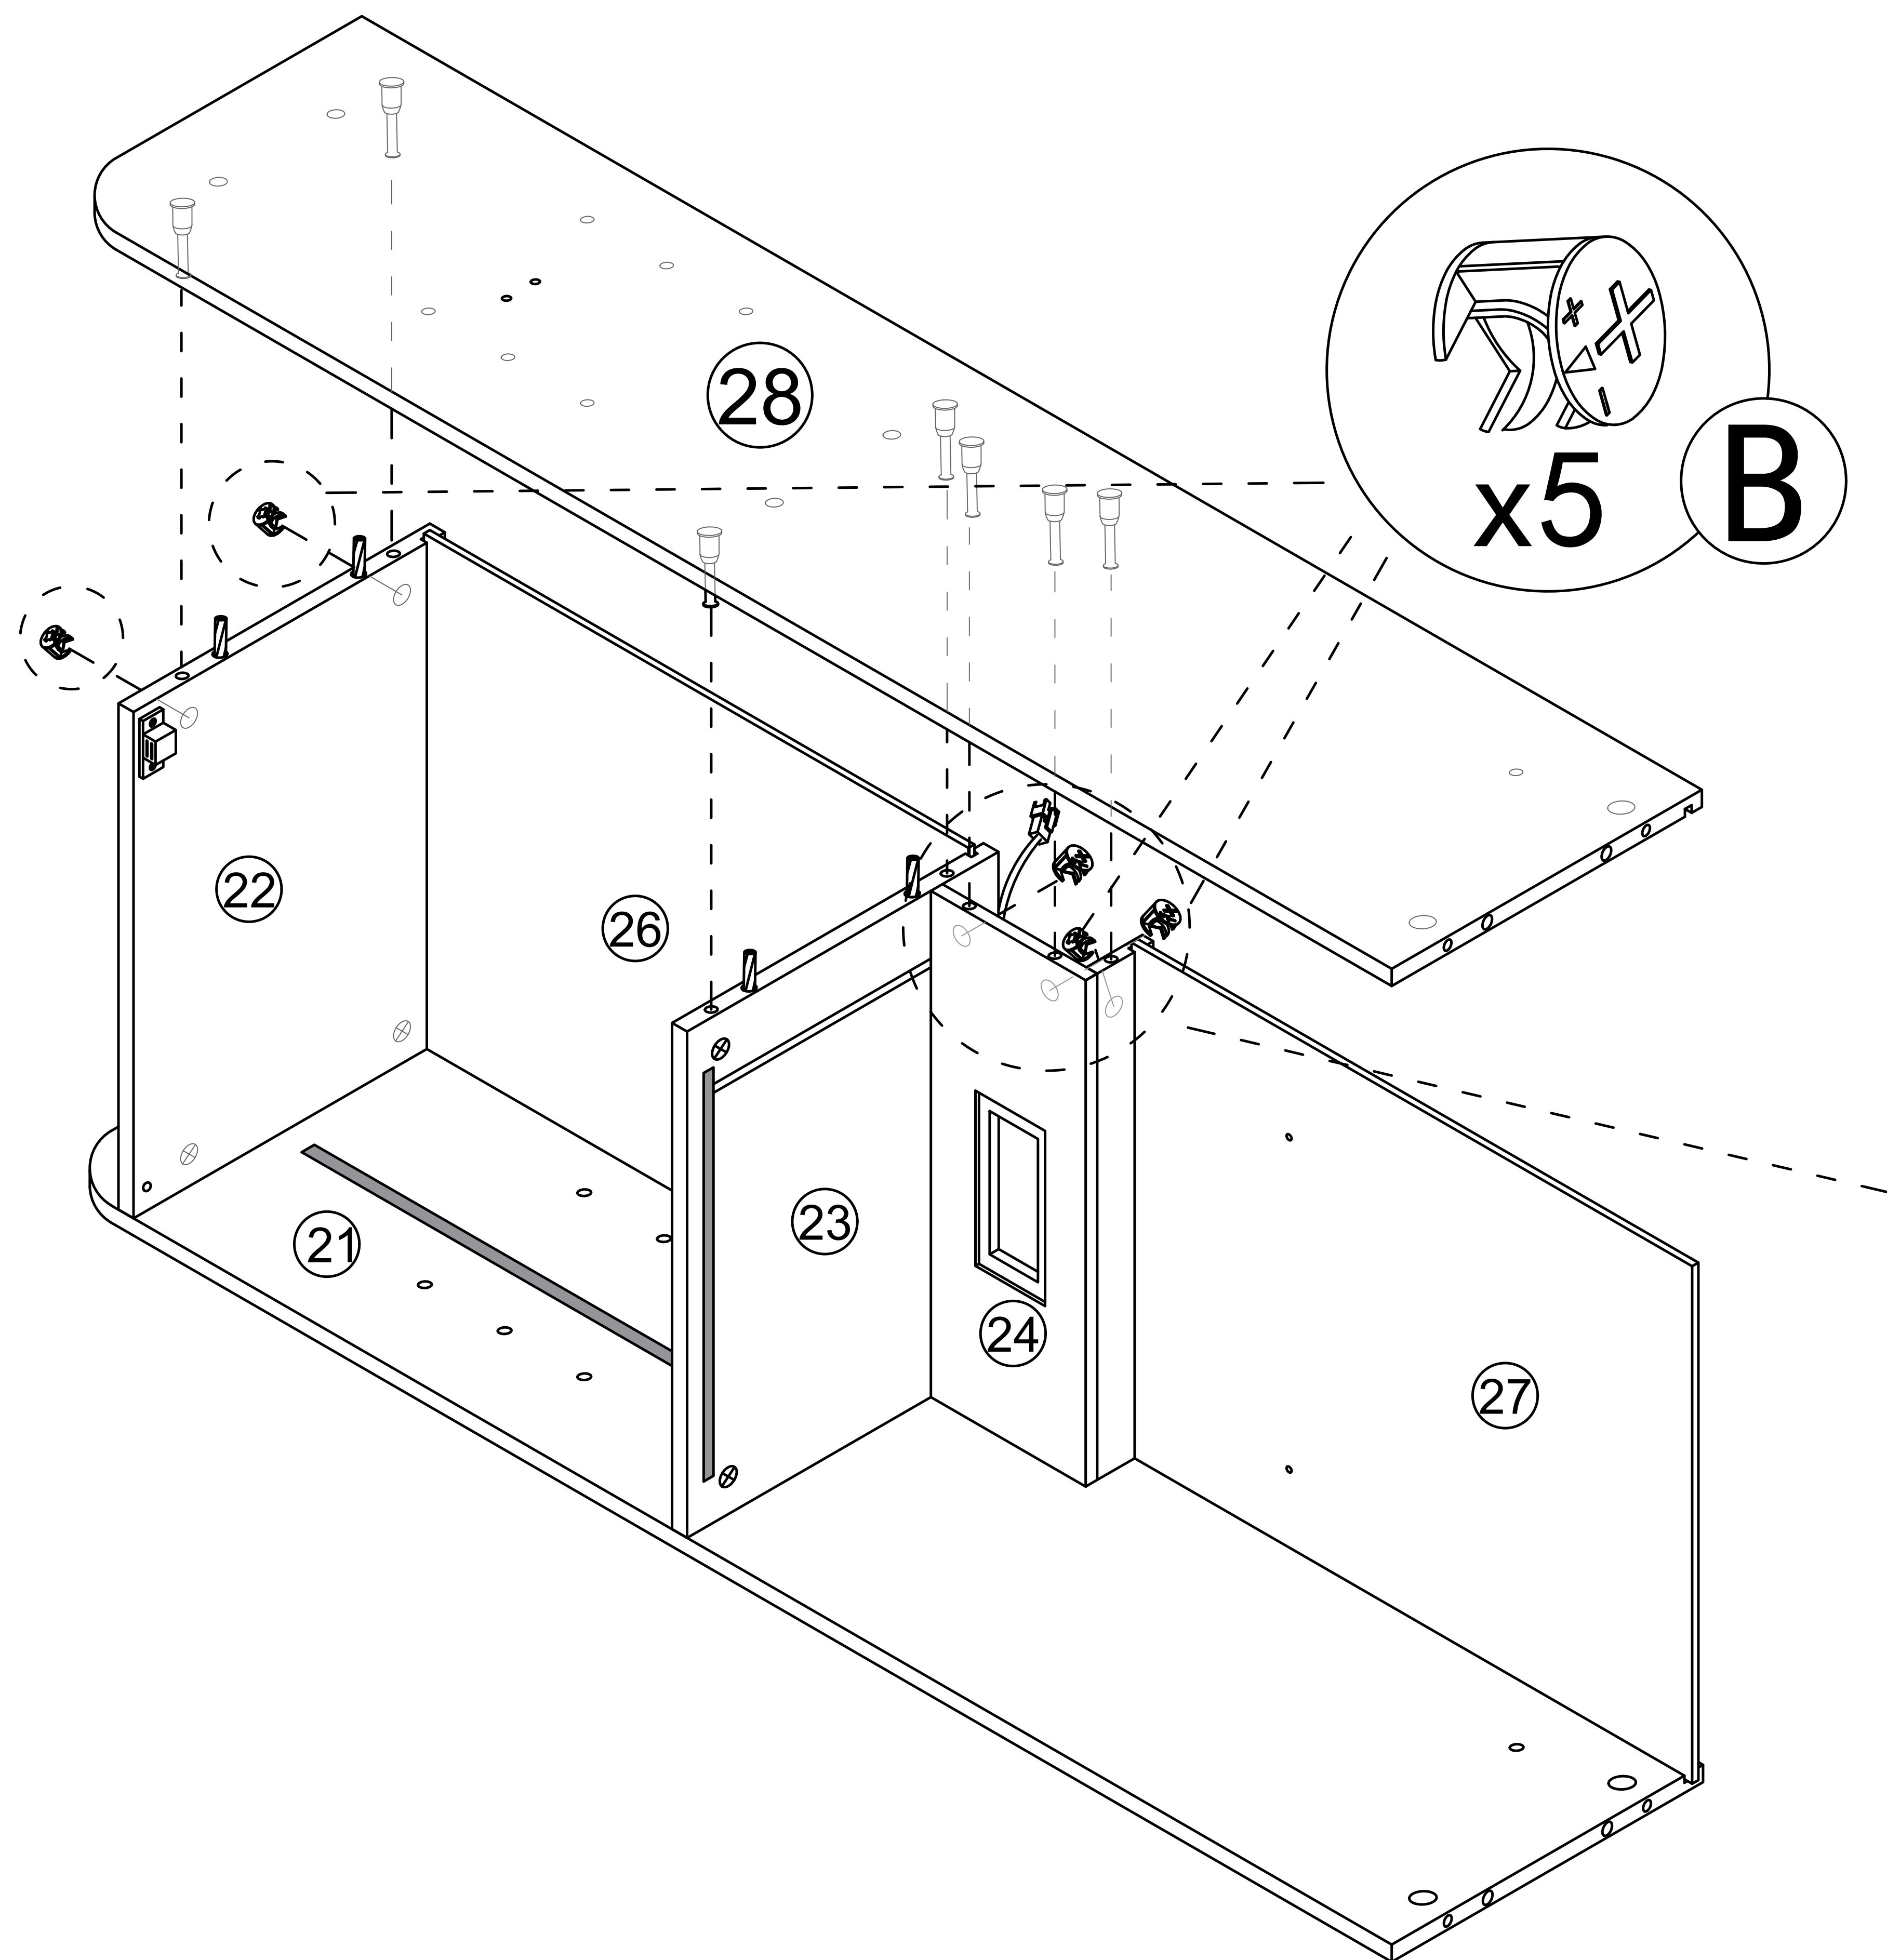


the back

Step 61


B

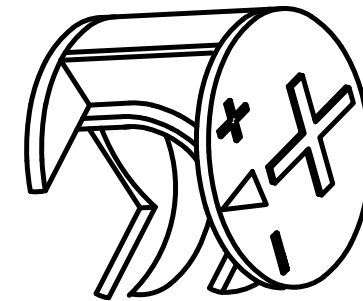


x4

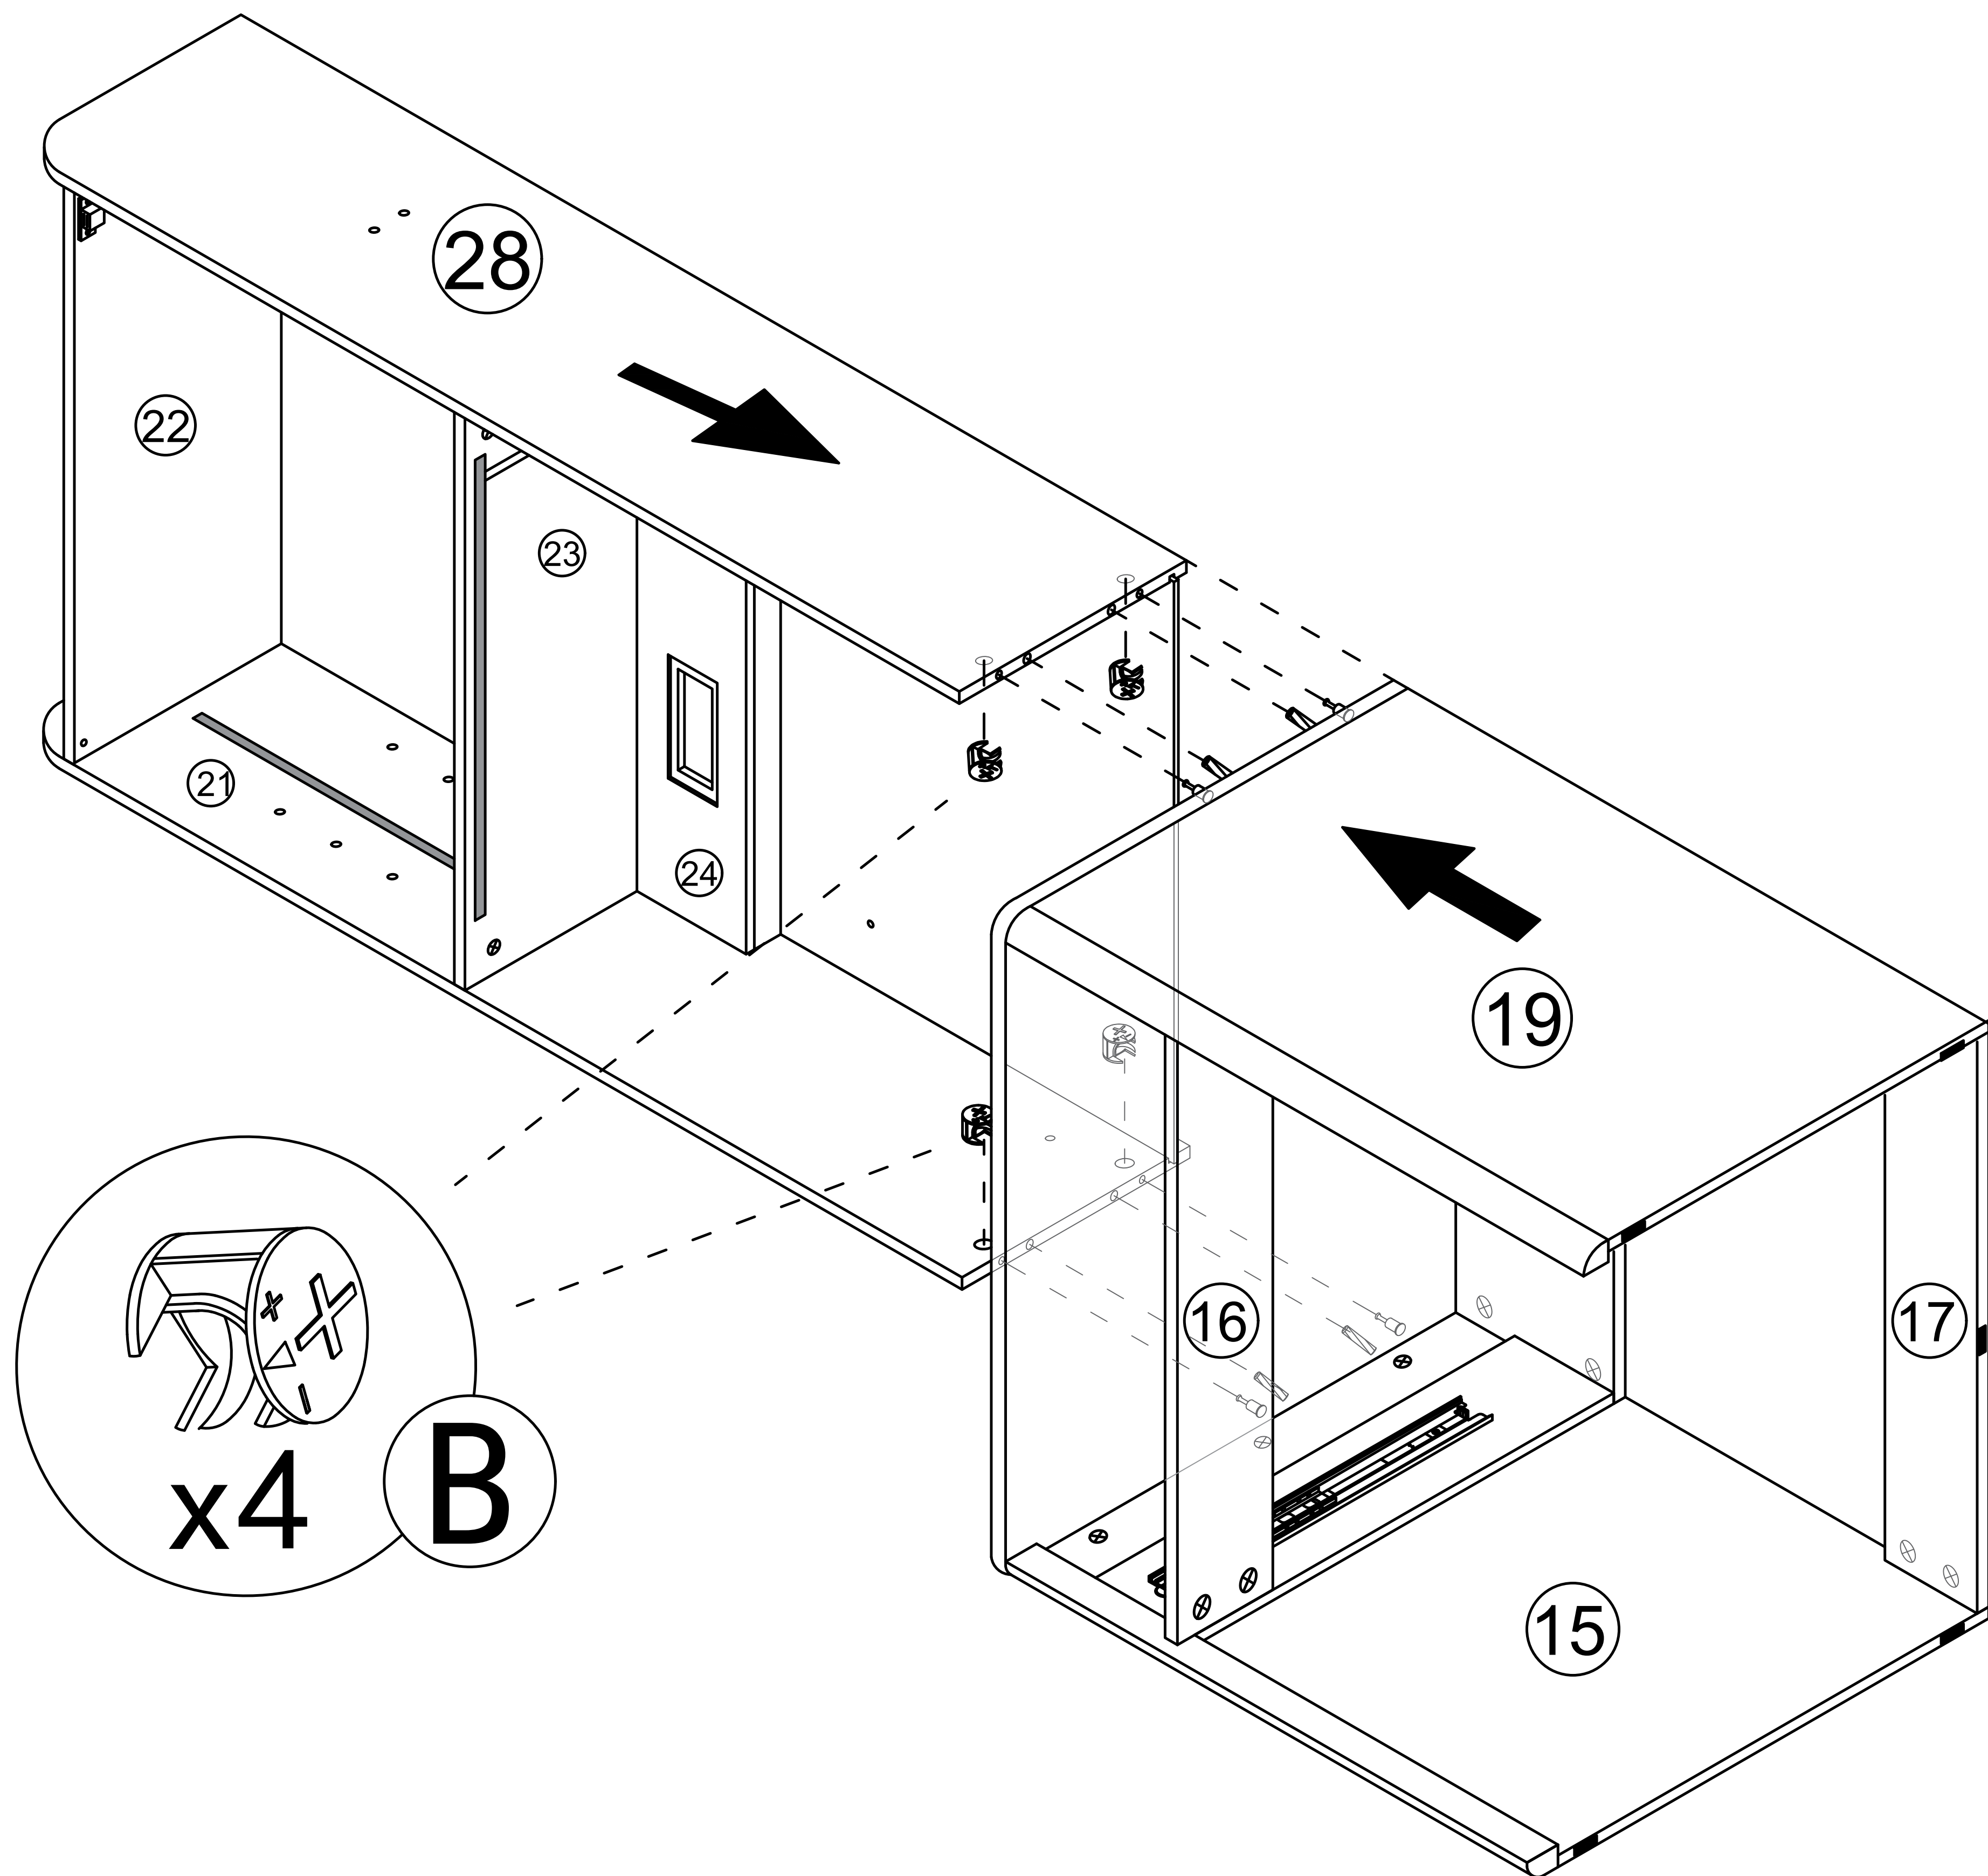


Step 62

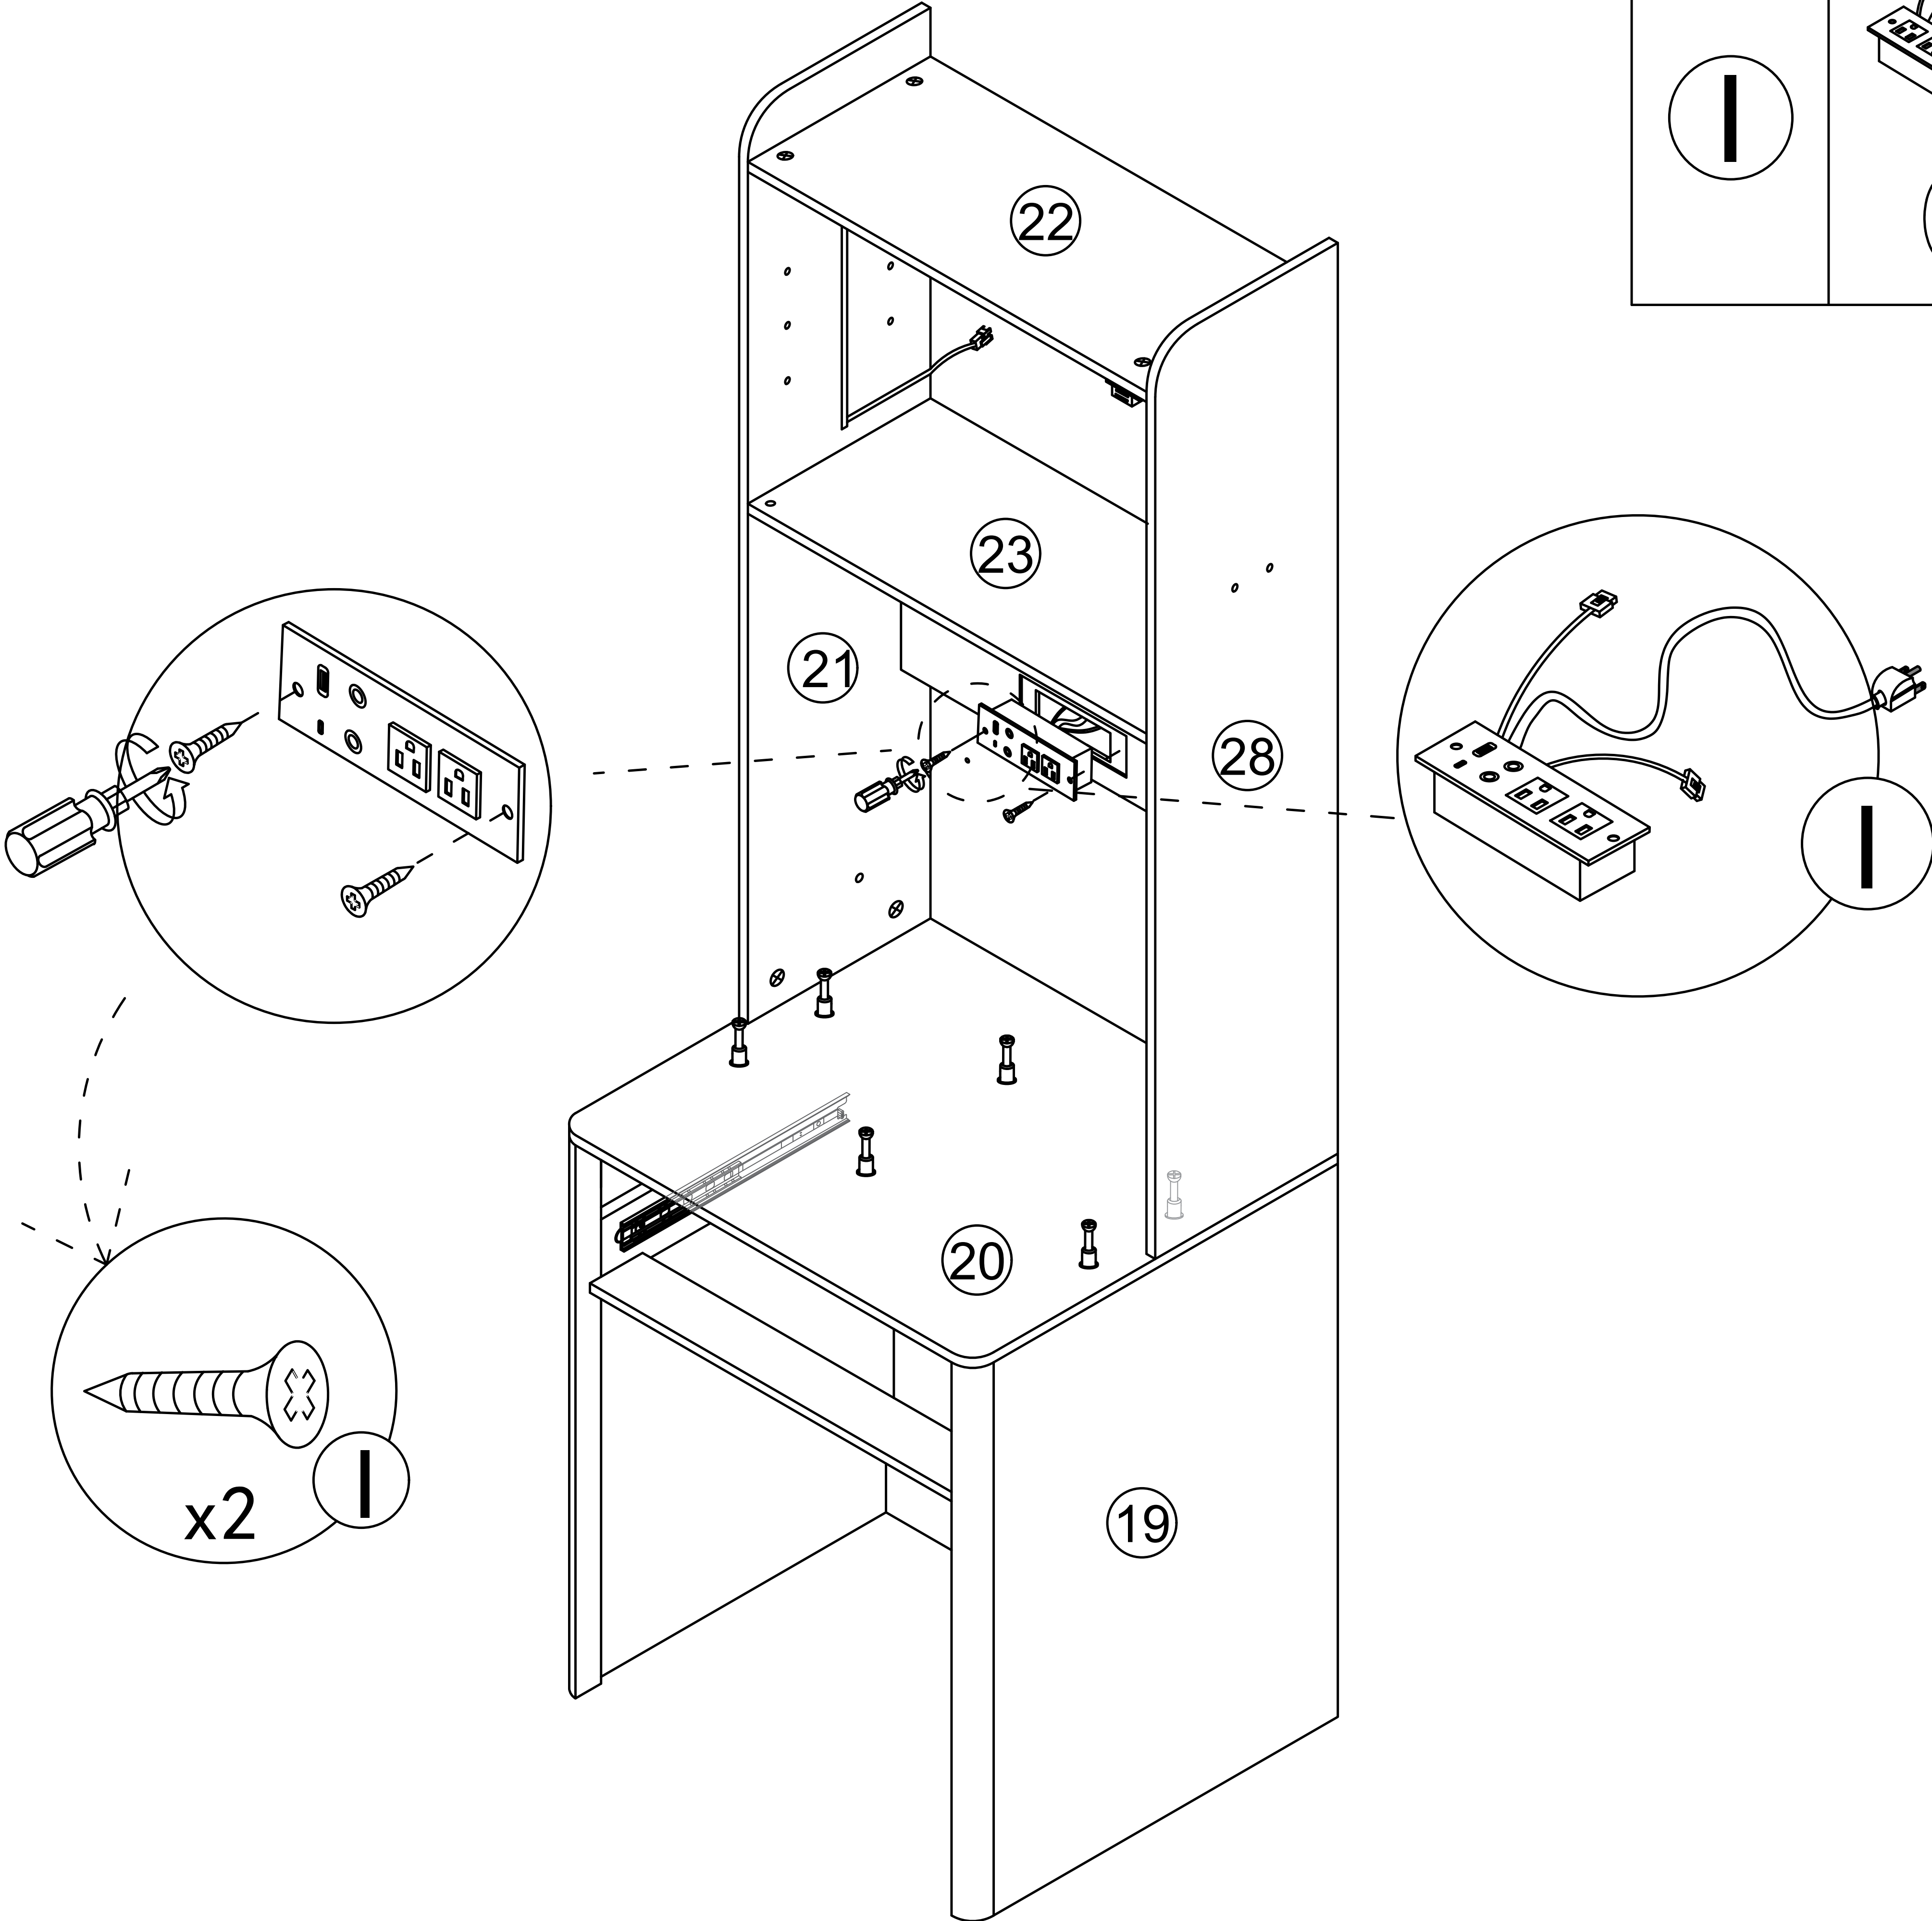

1

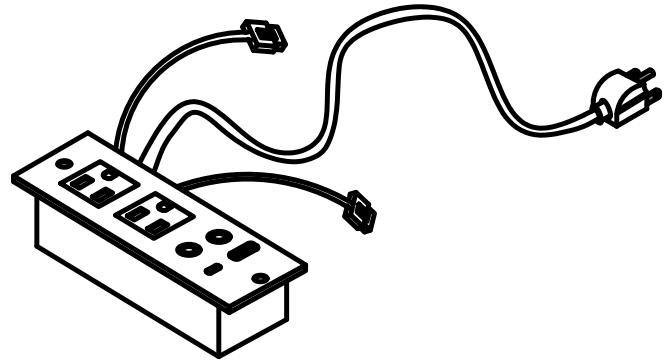


1pcs

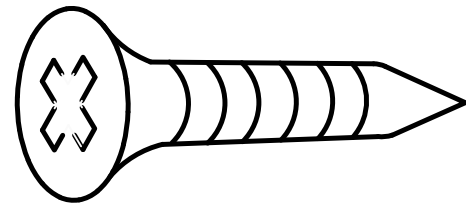


2pcs

1

Step 63

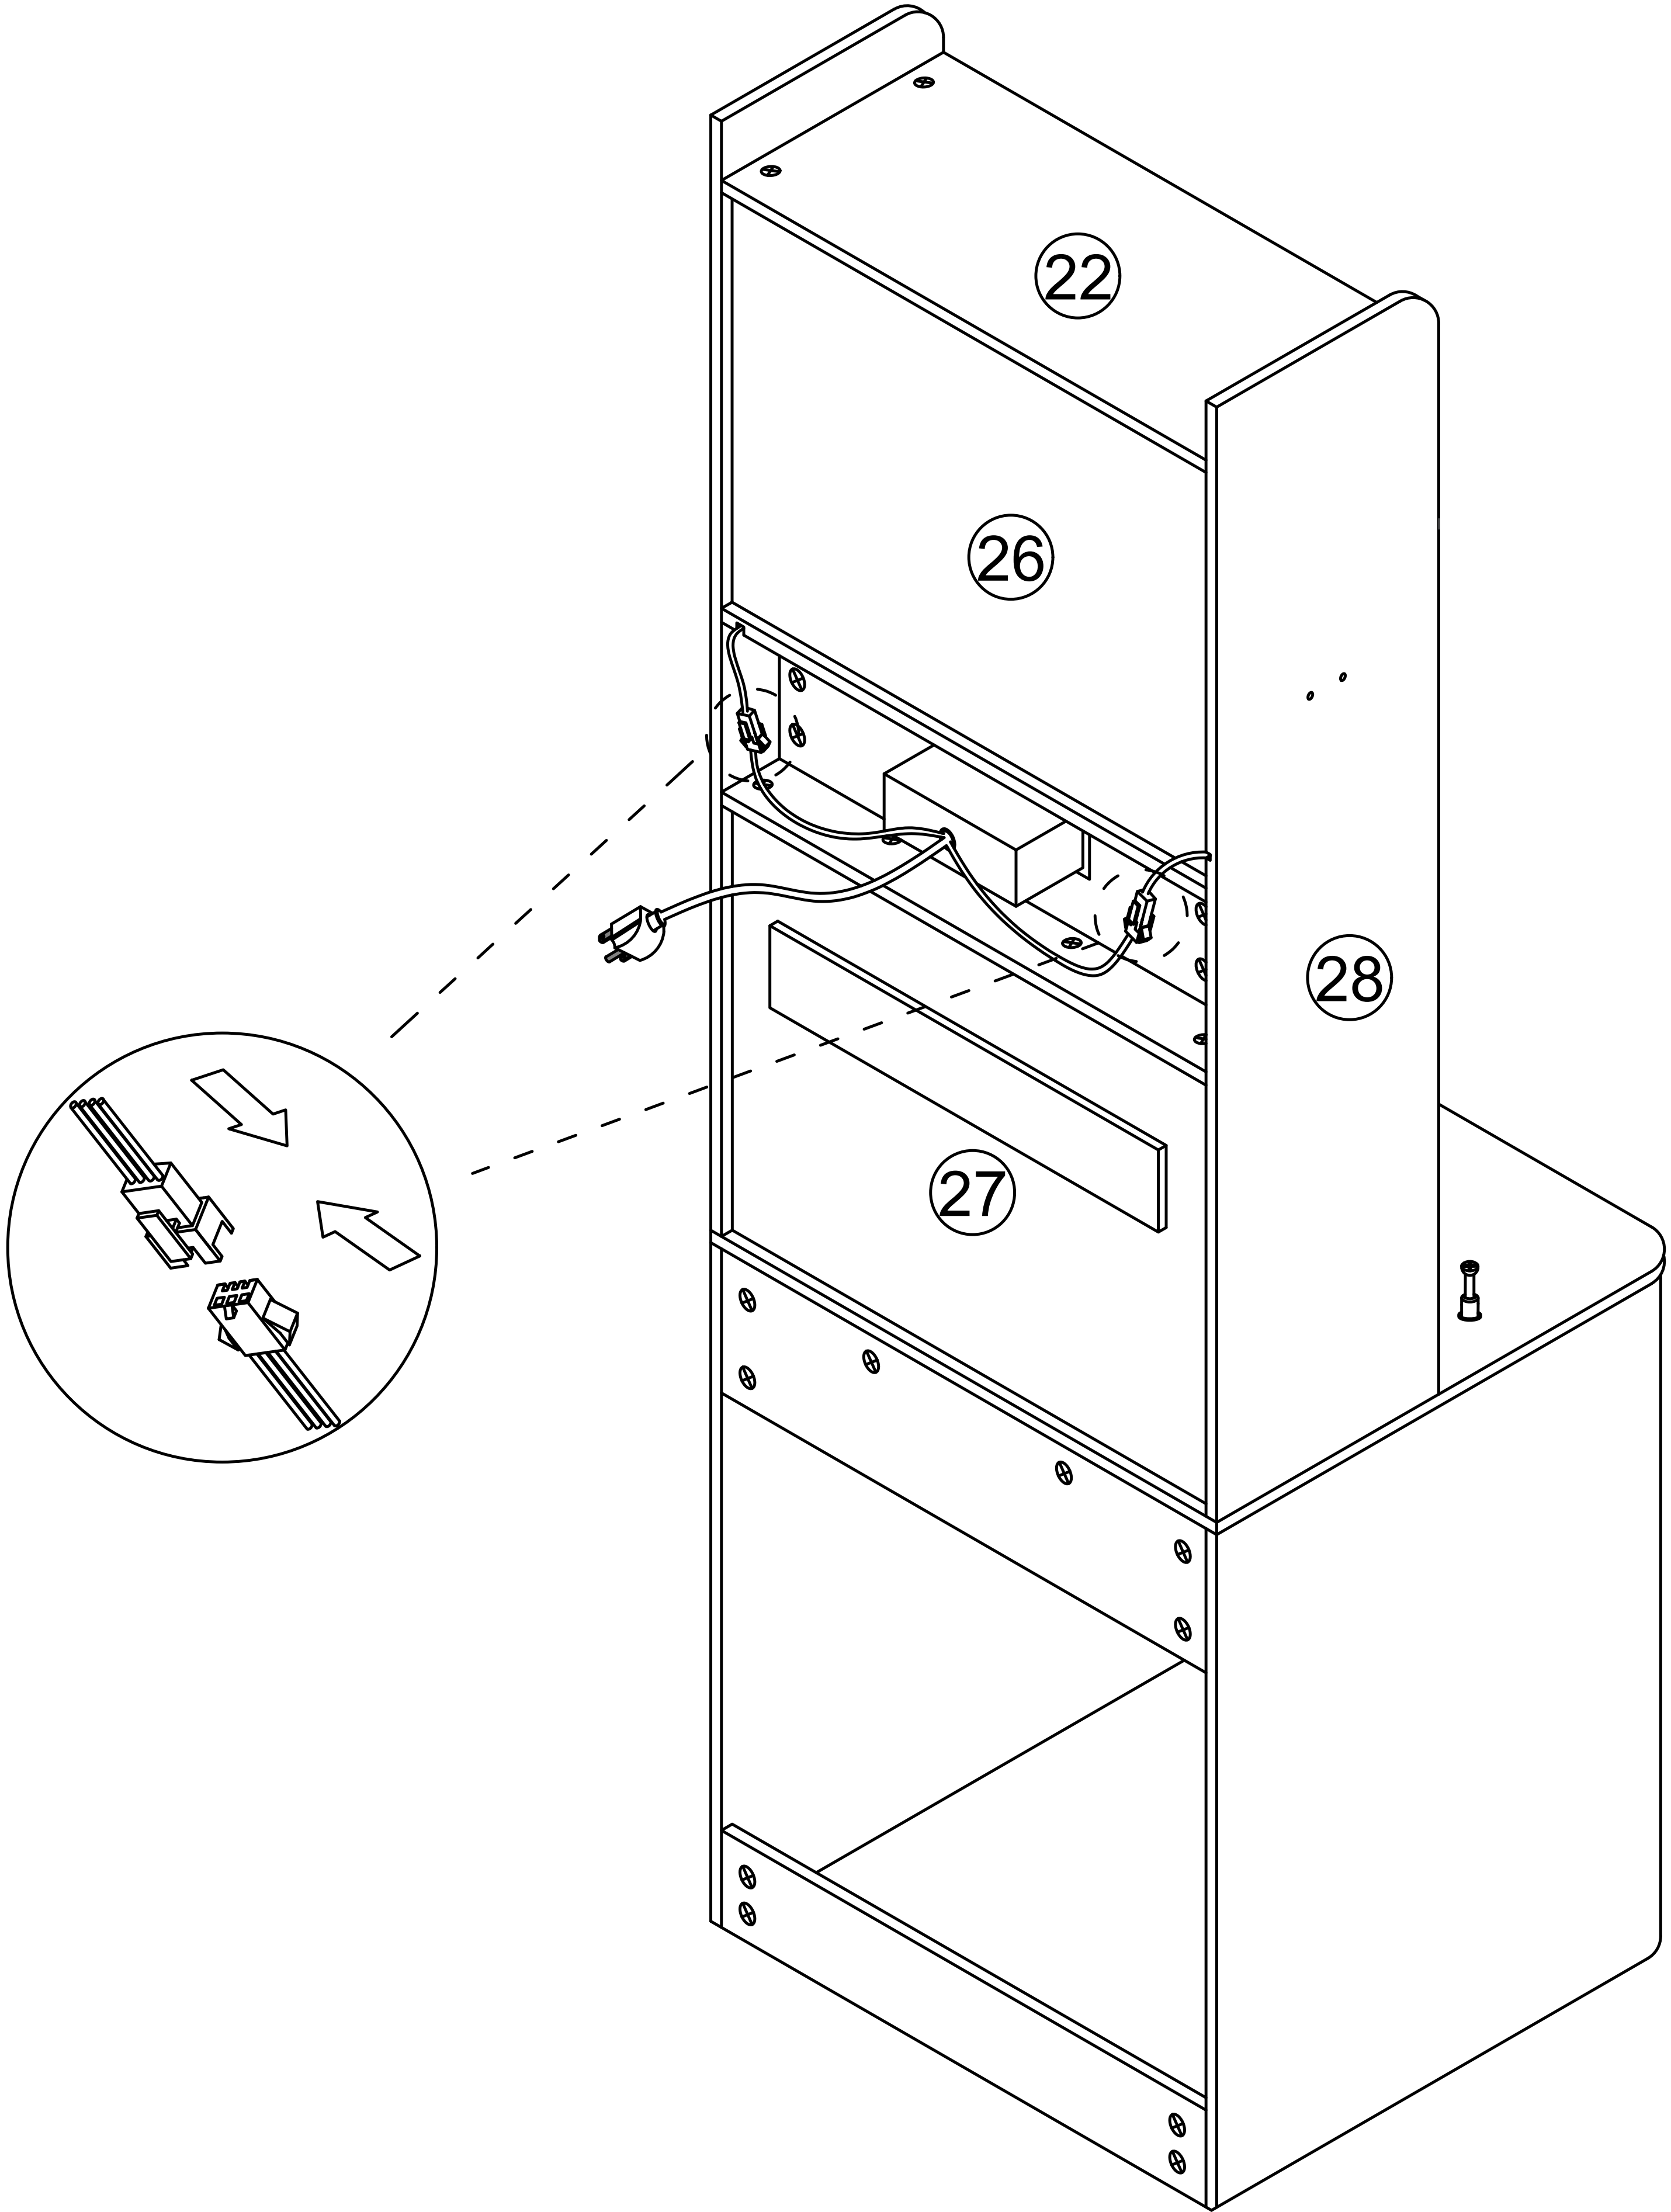


Step 64

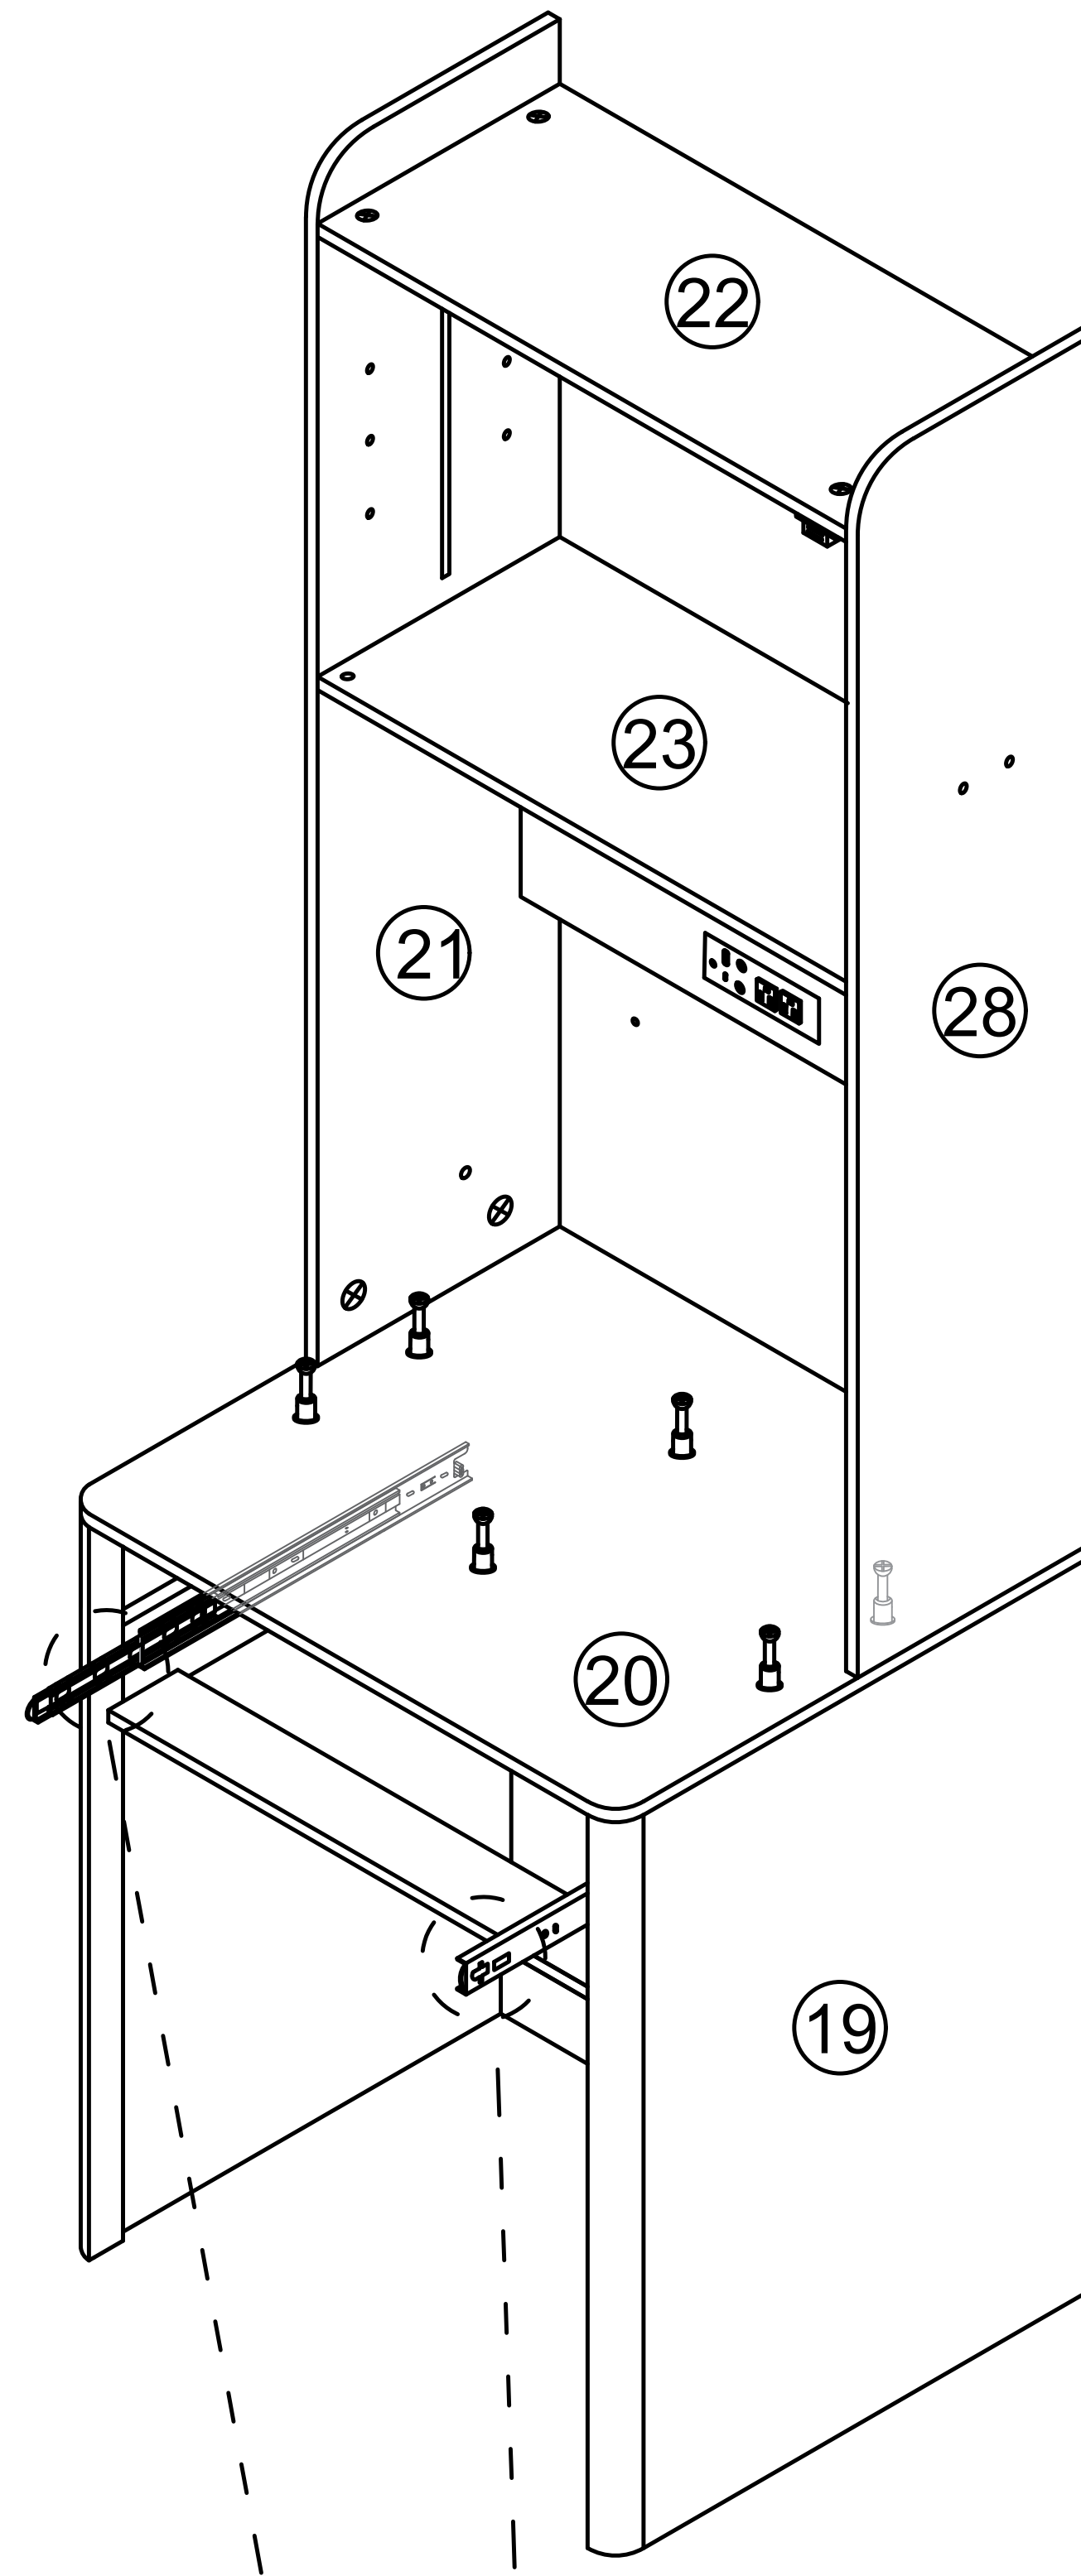


As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

Step 65

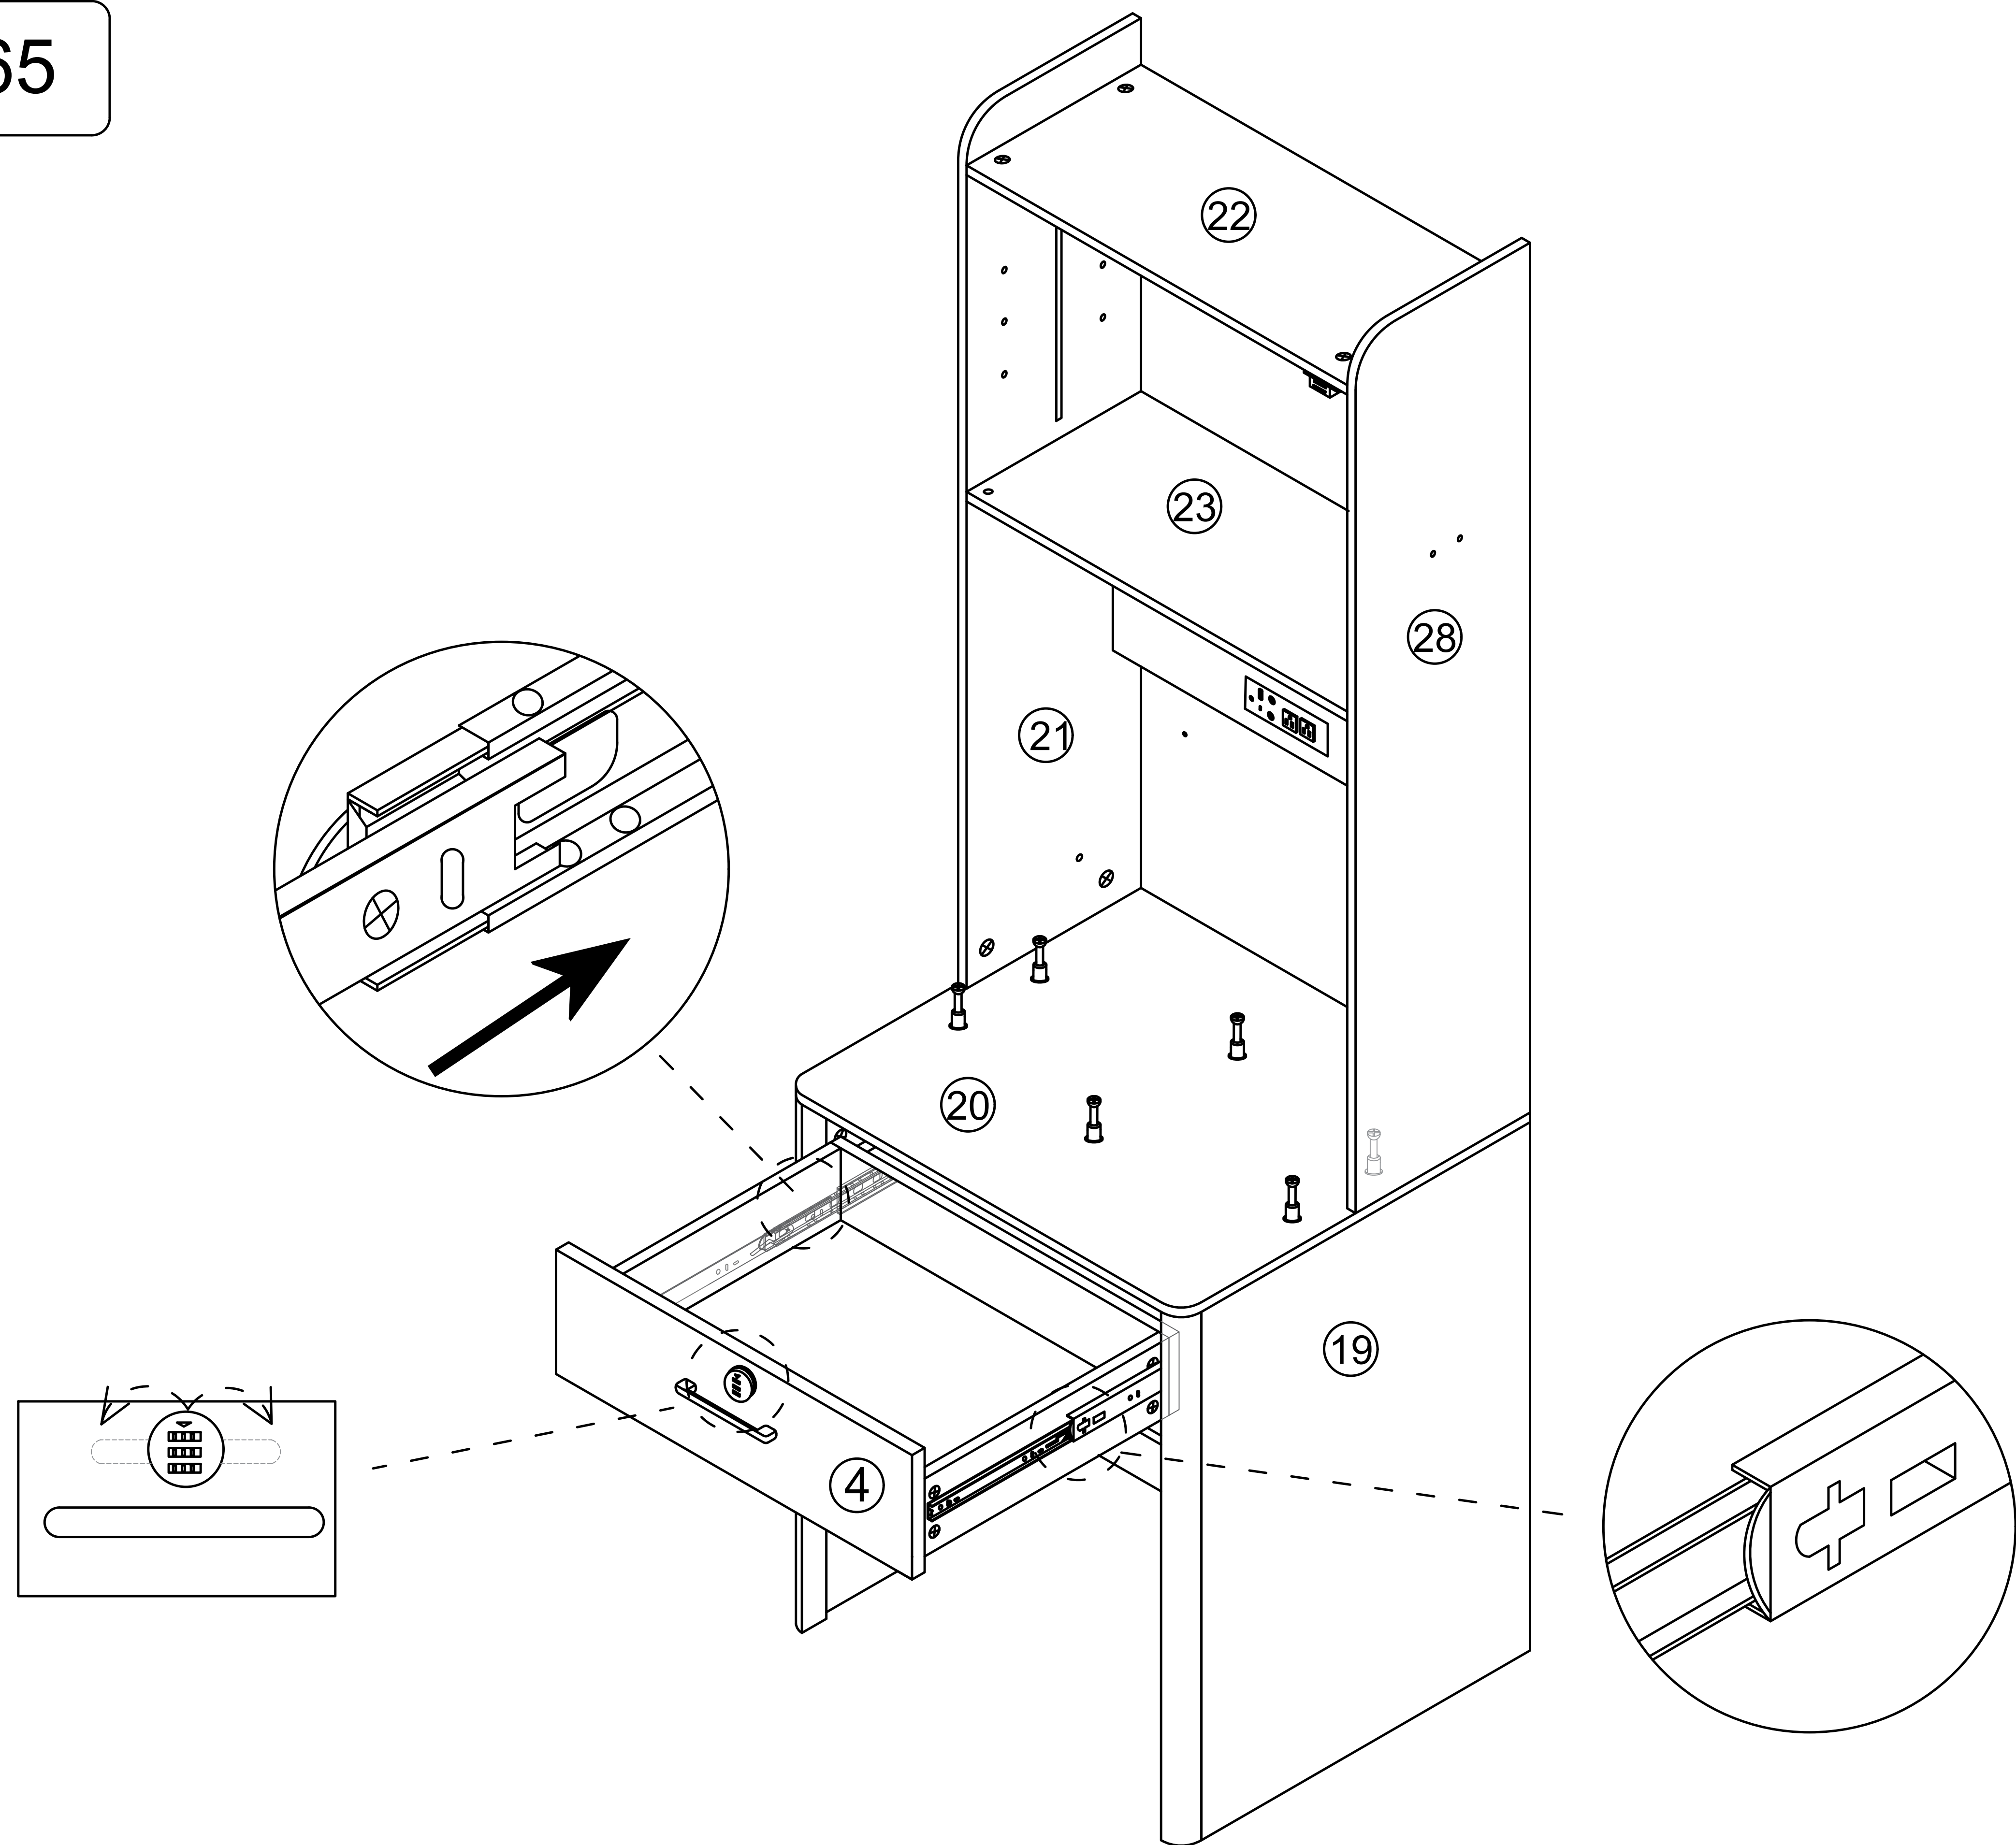


Step 66

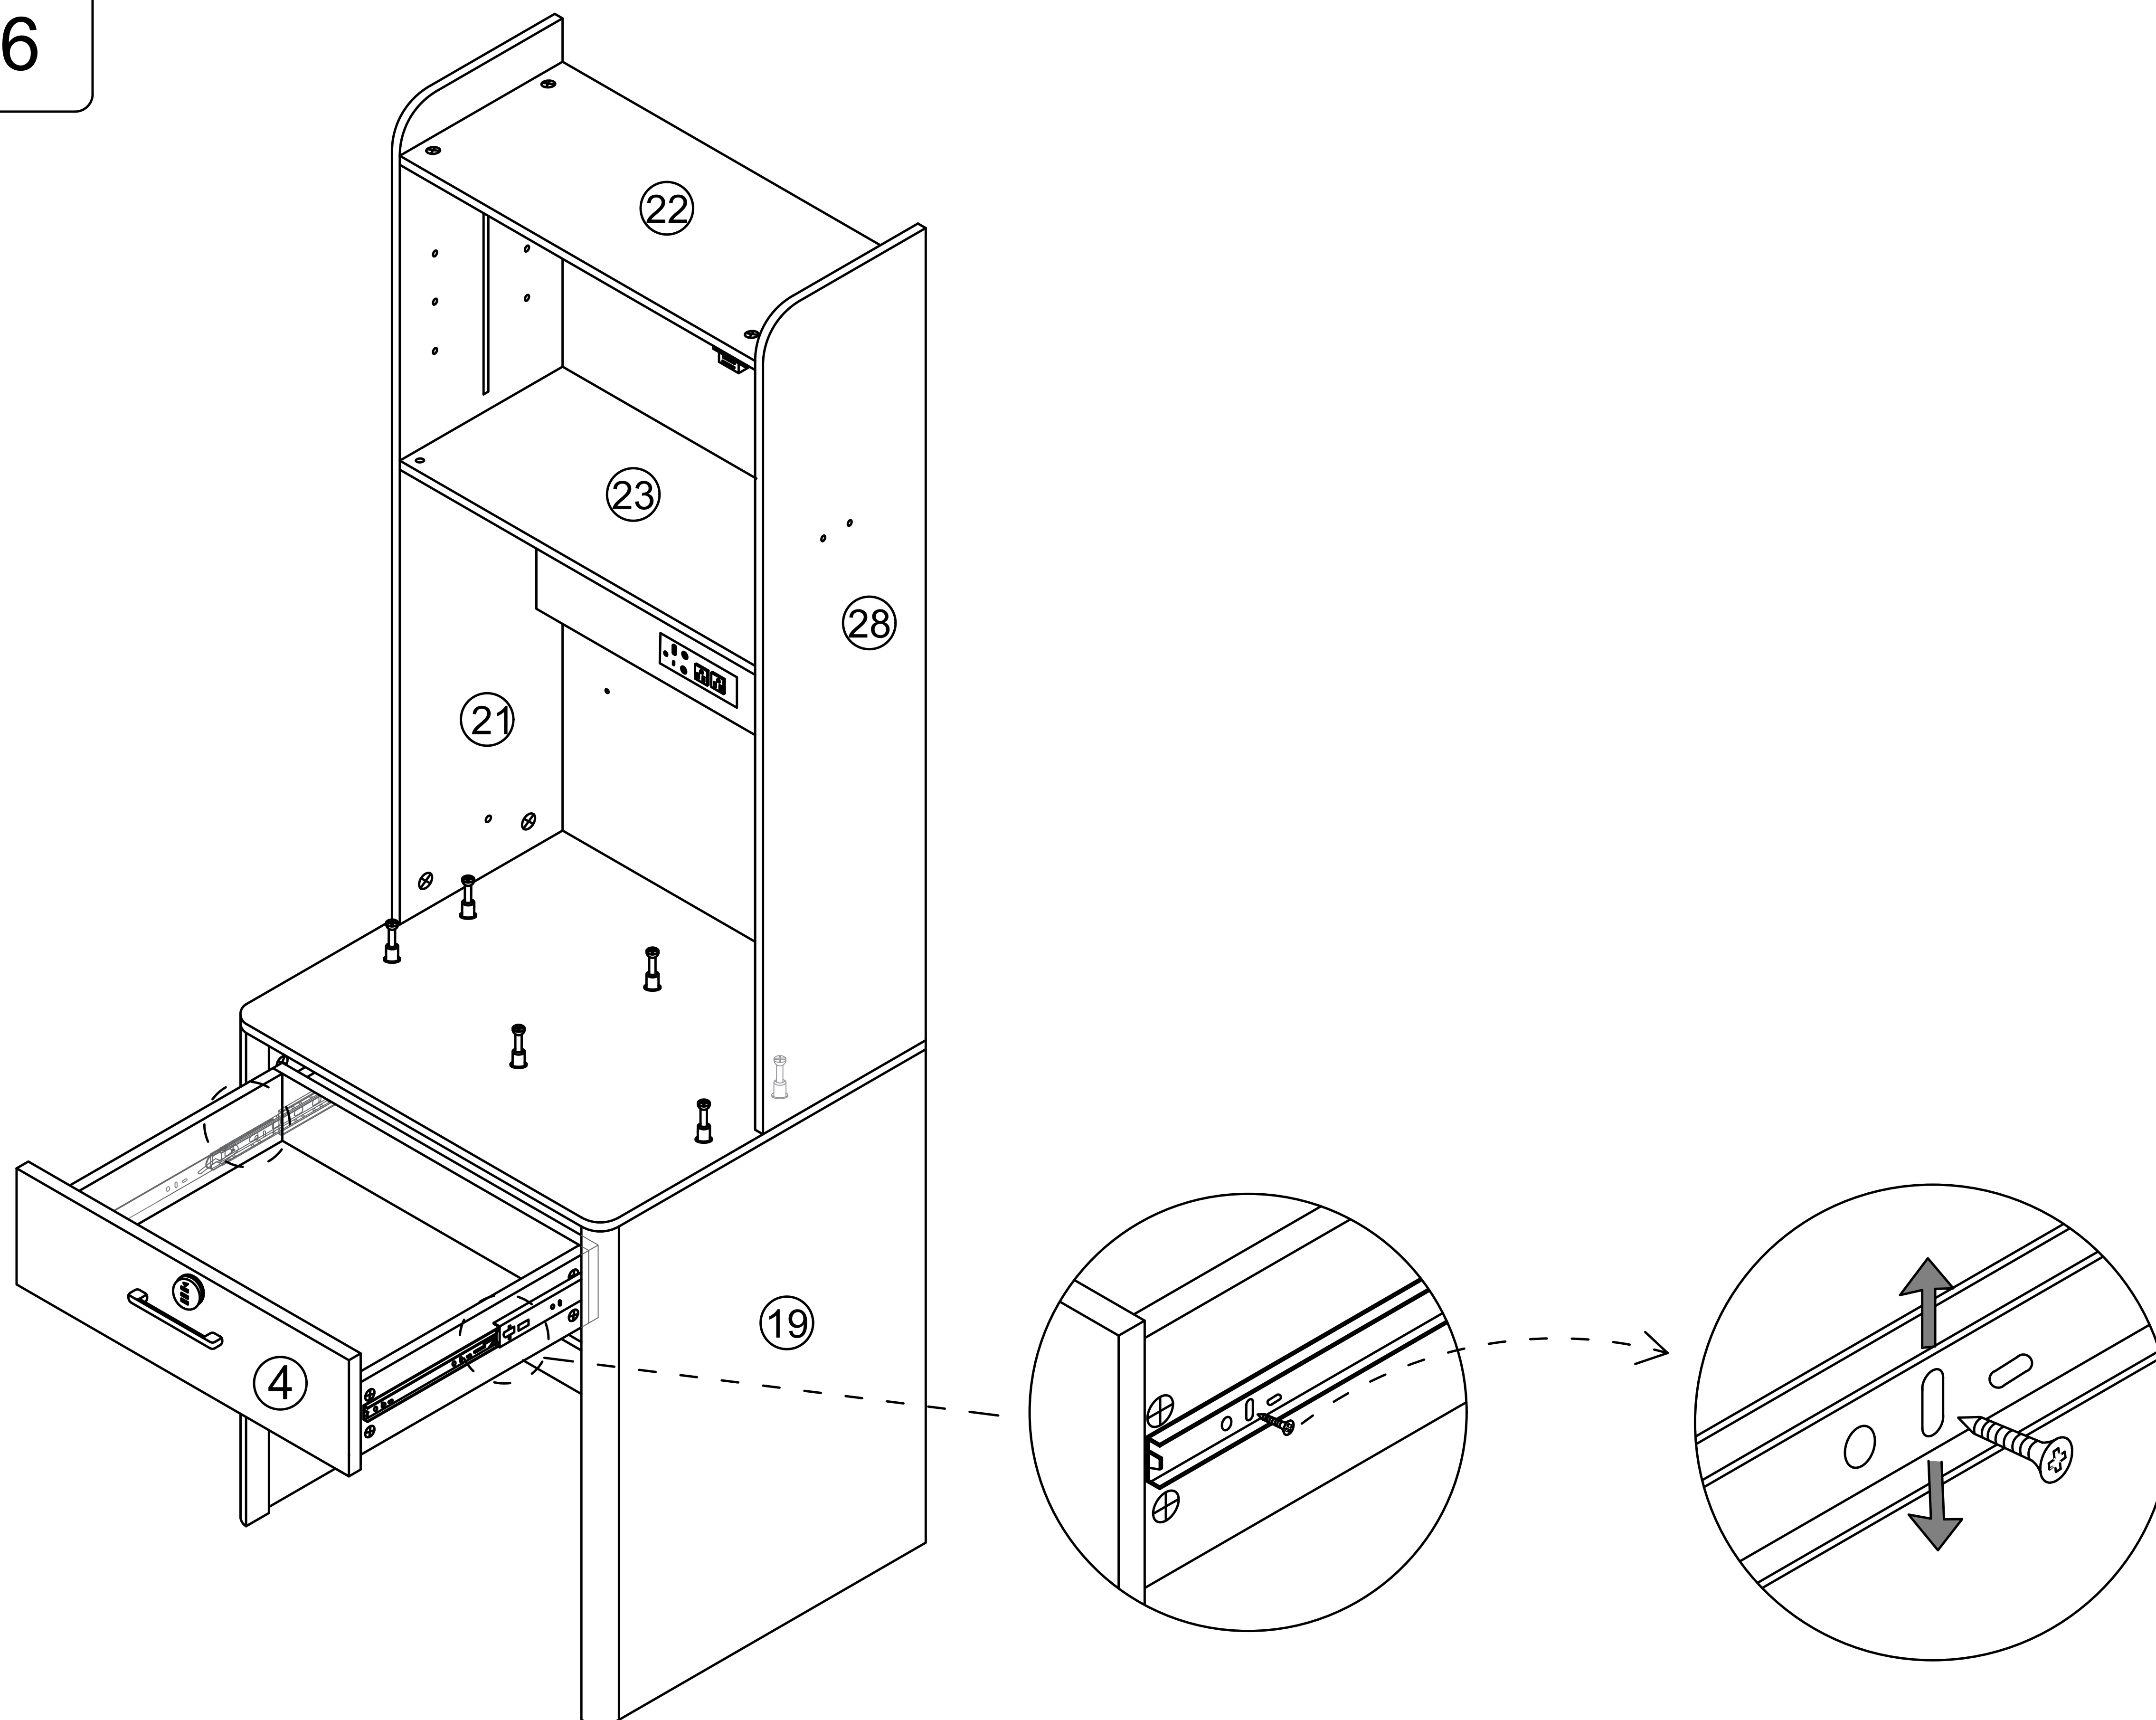


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 67



M

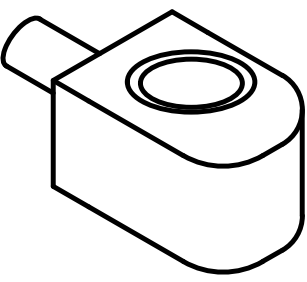

x4



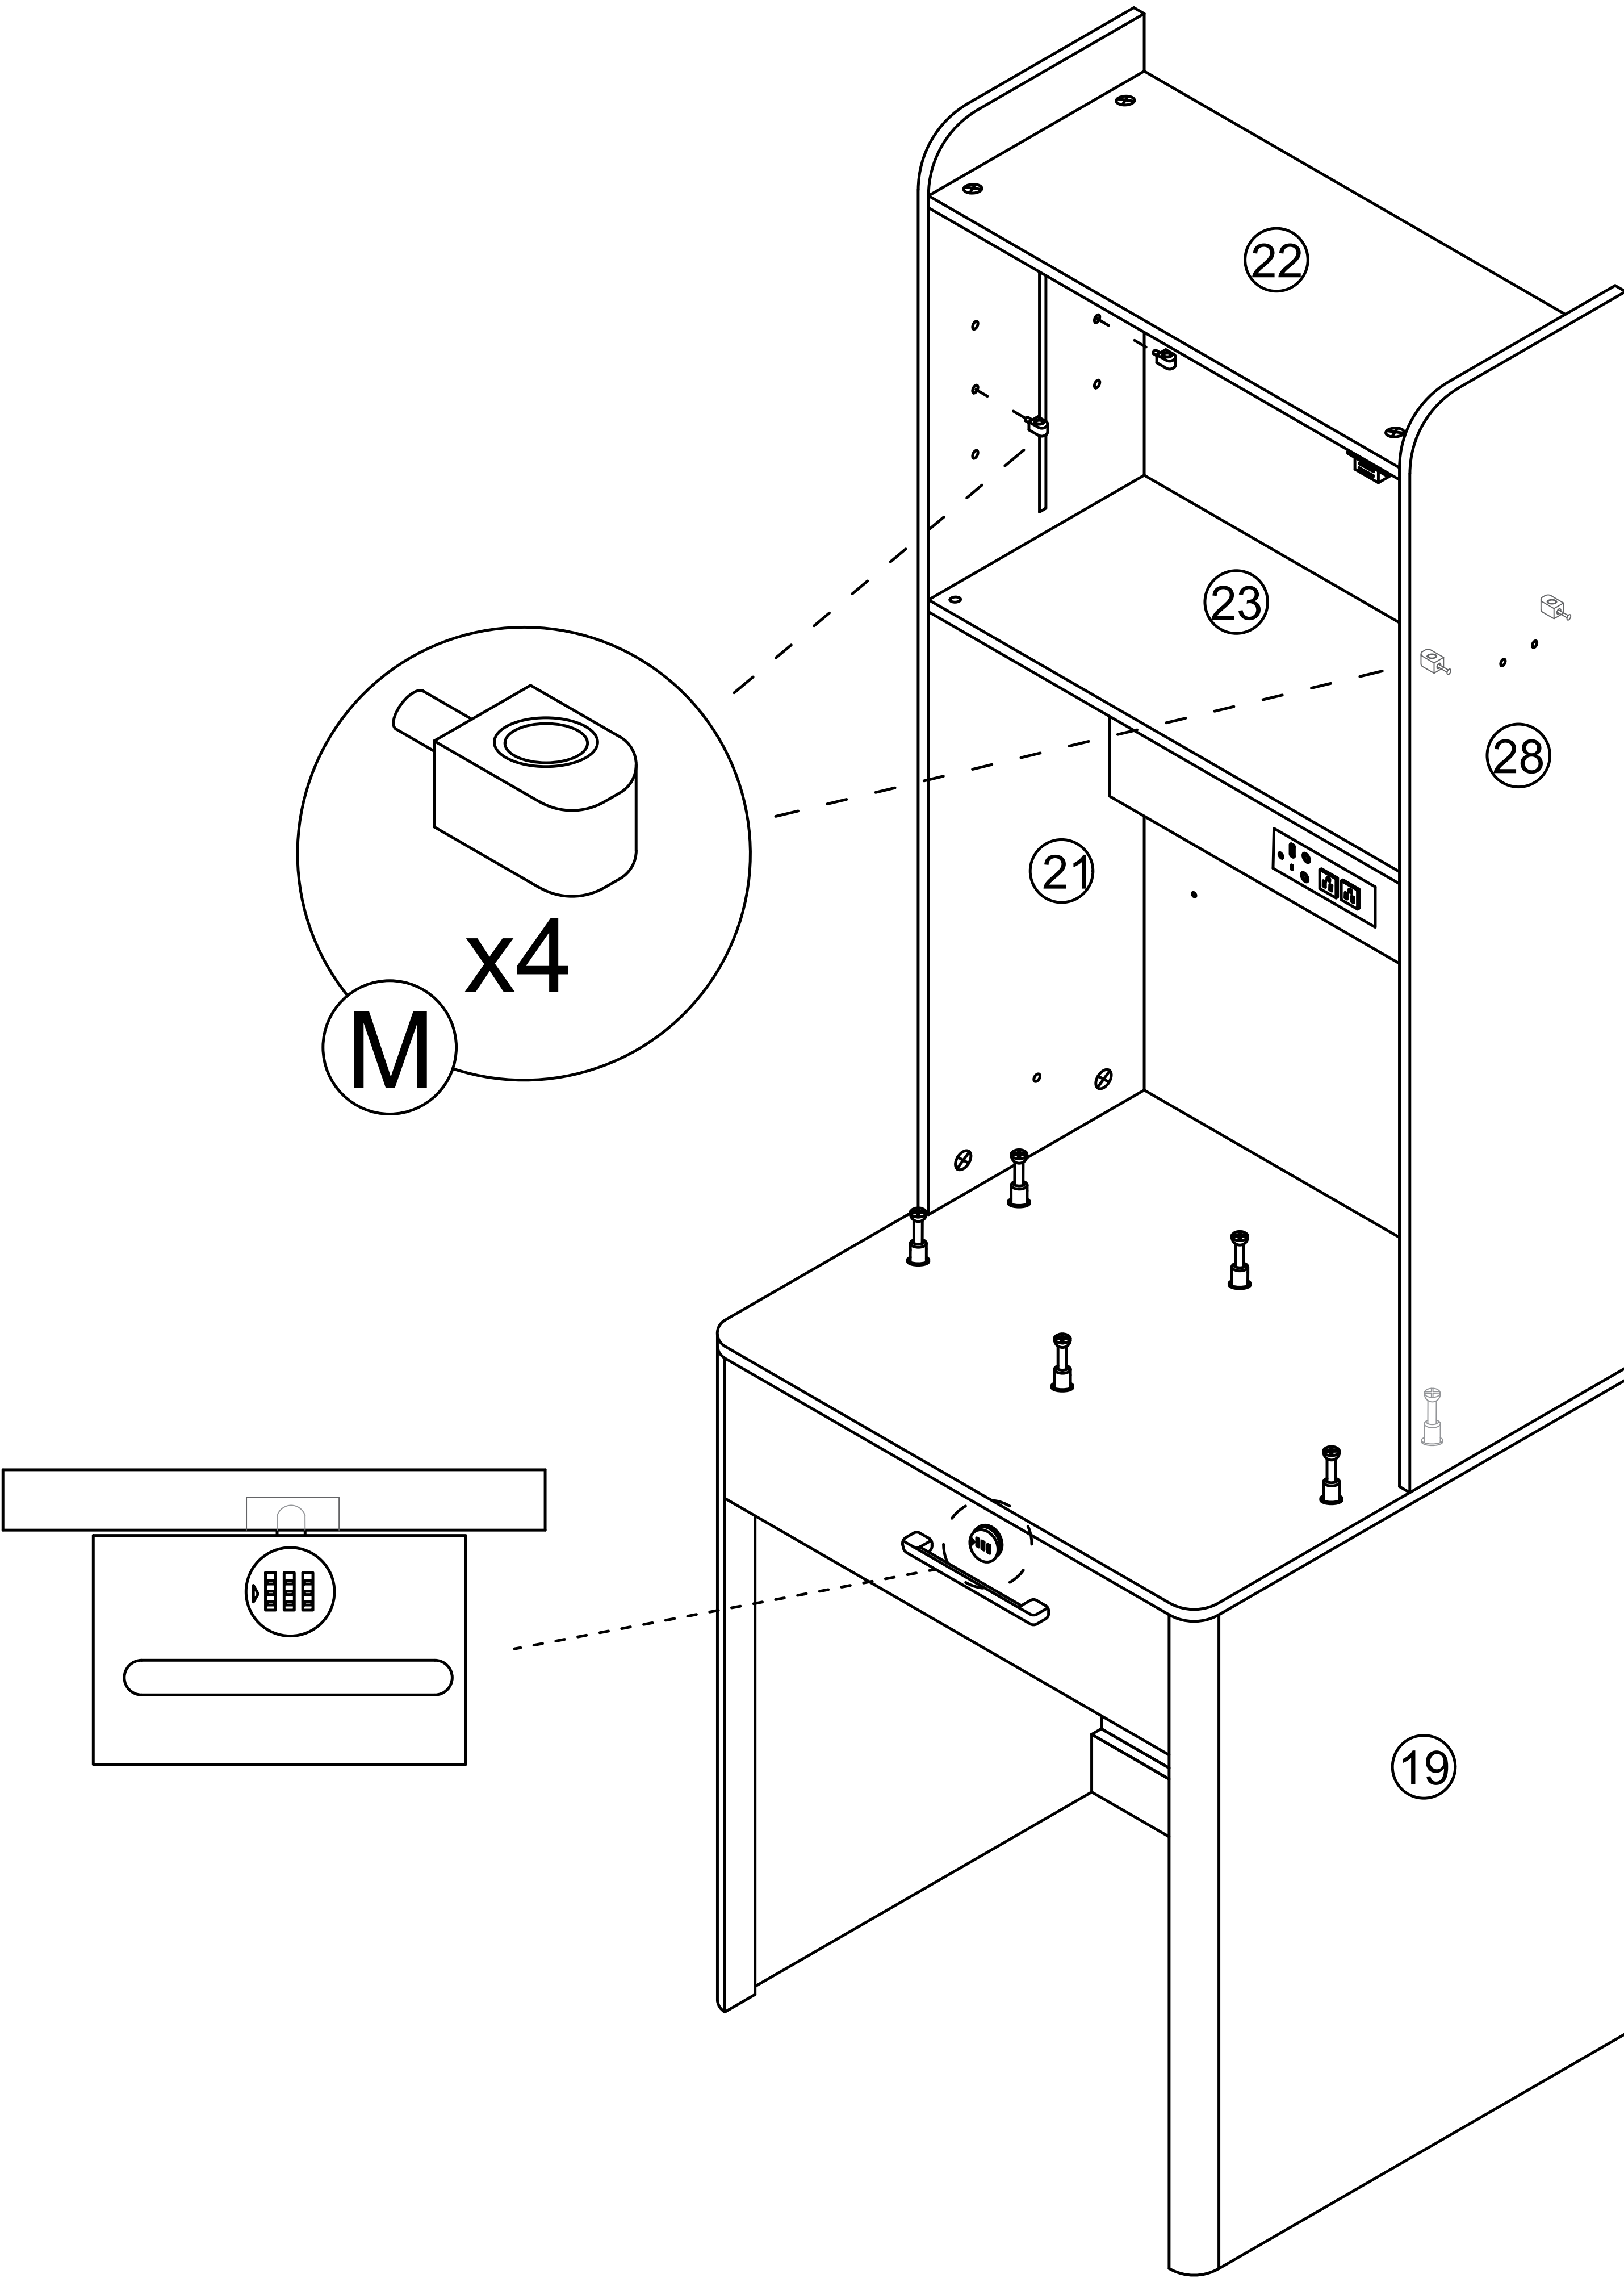



Step 68

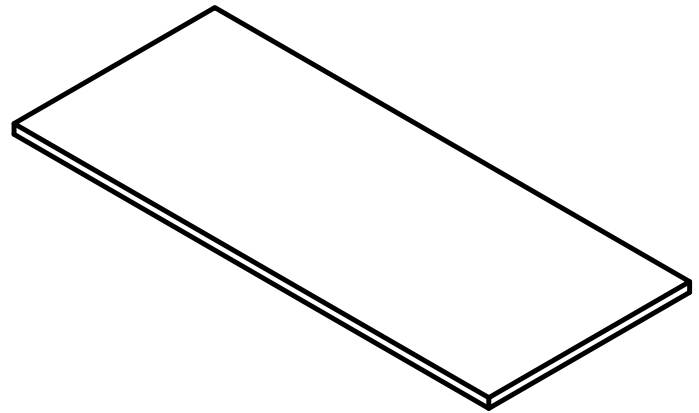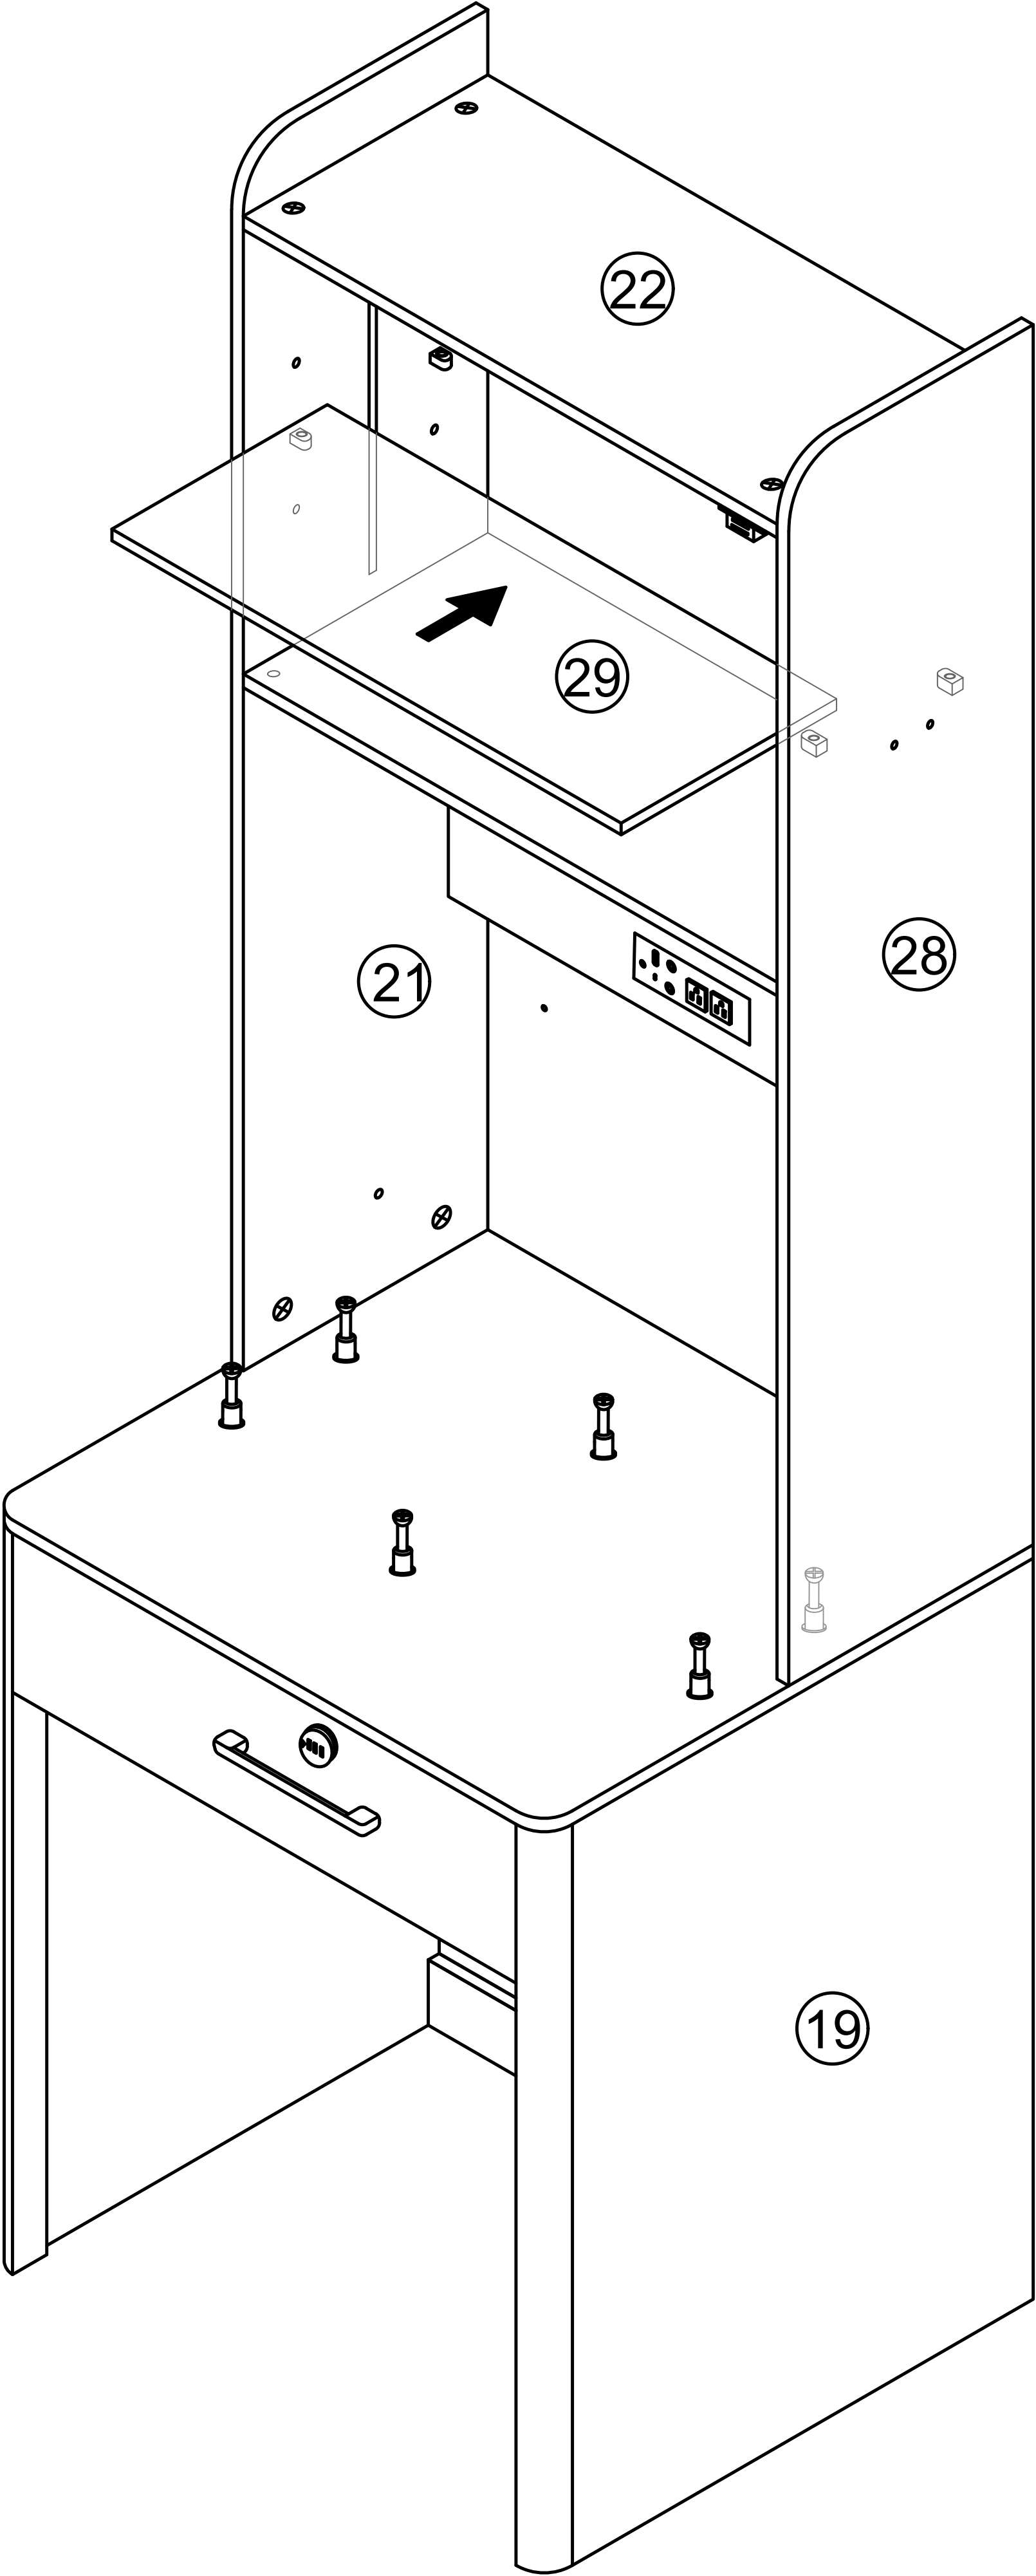


29 x1

Step 69

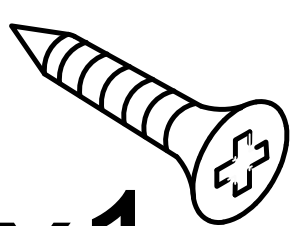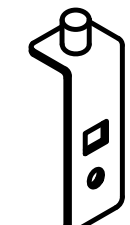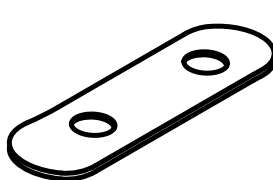
H		
	x1	x1
G		
	x1	x2

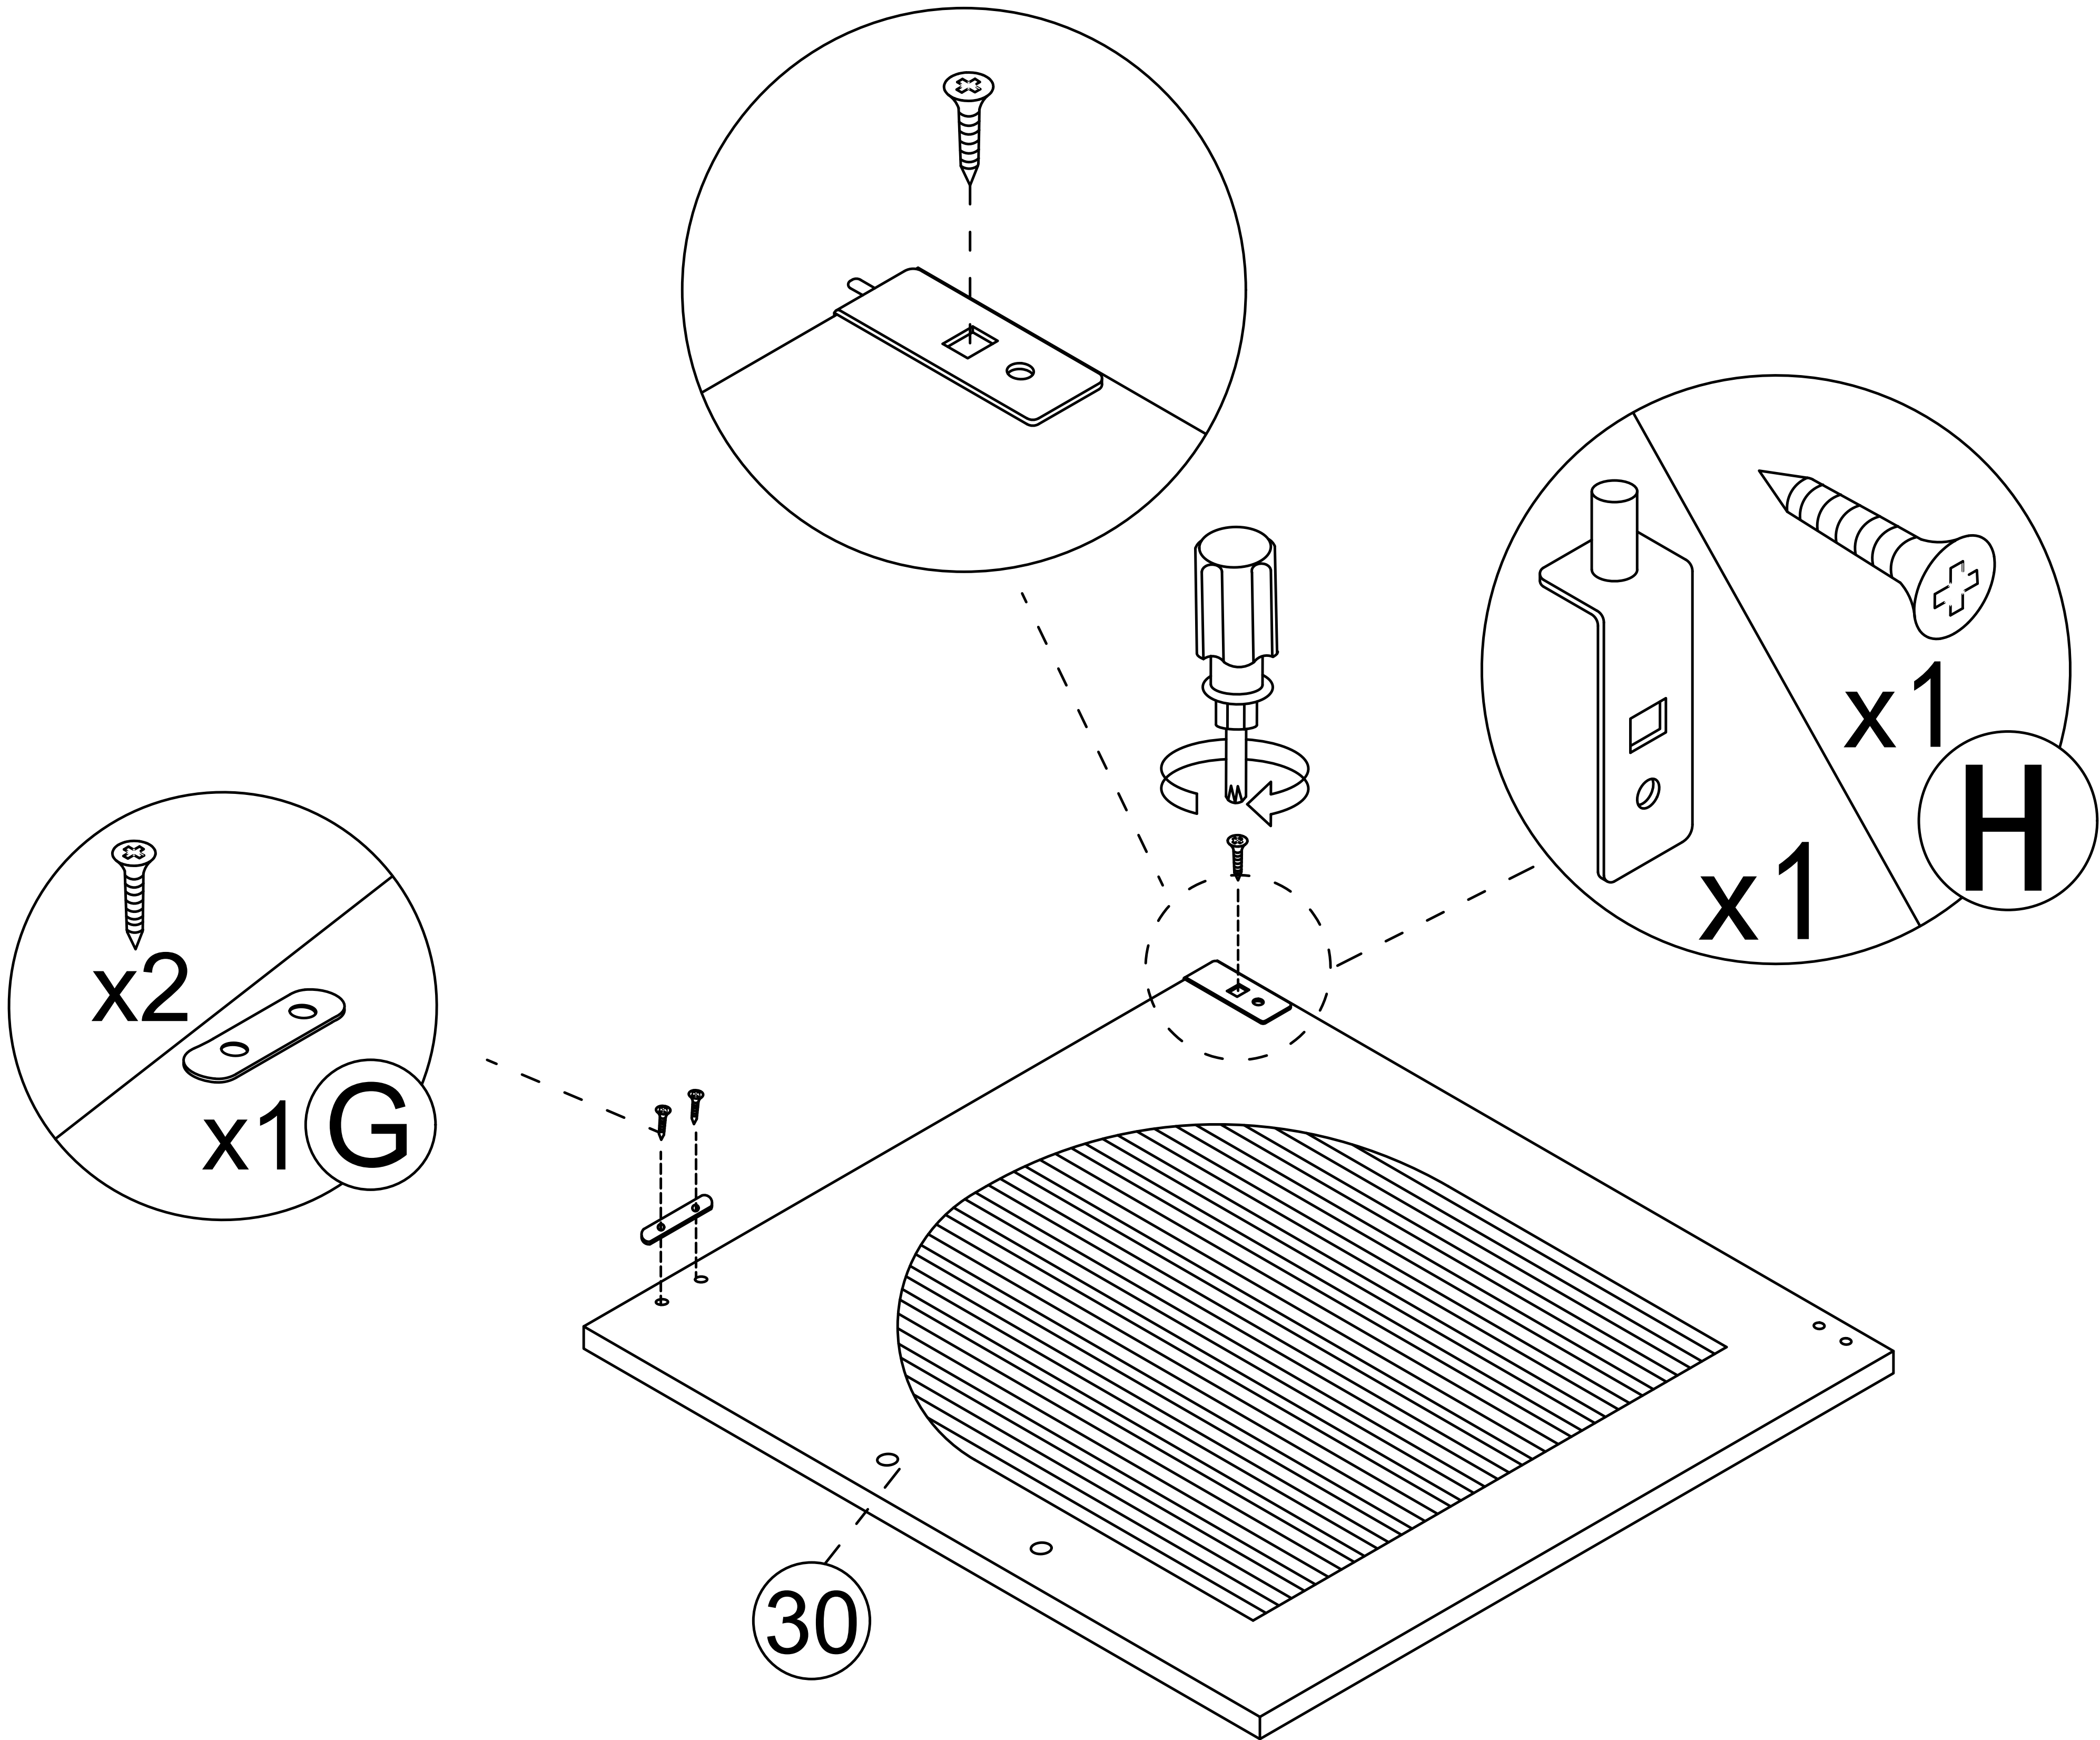


Step 70

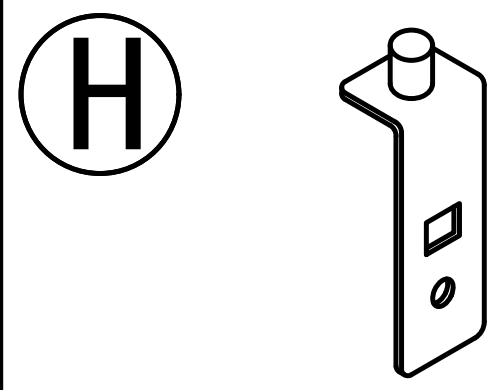


x1

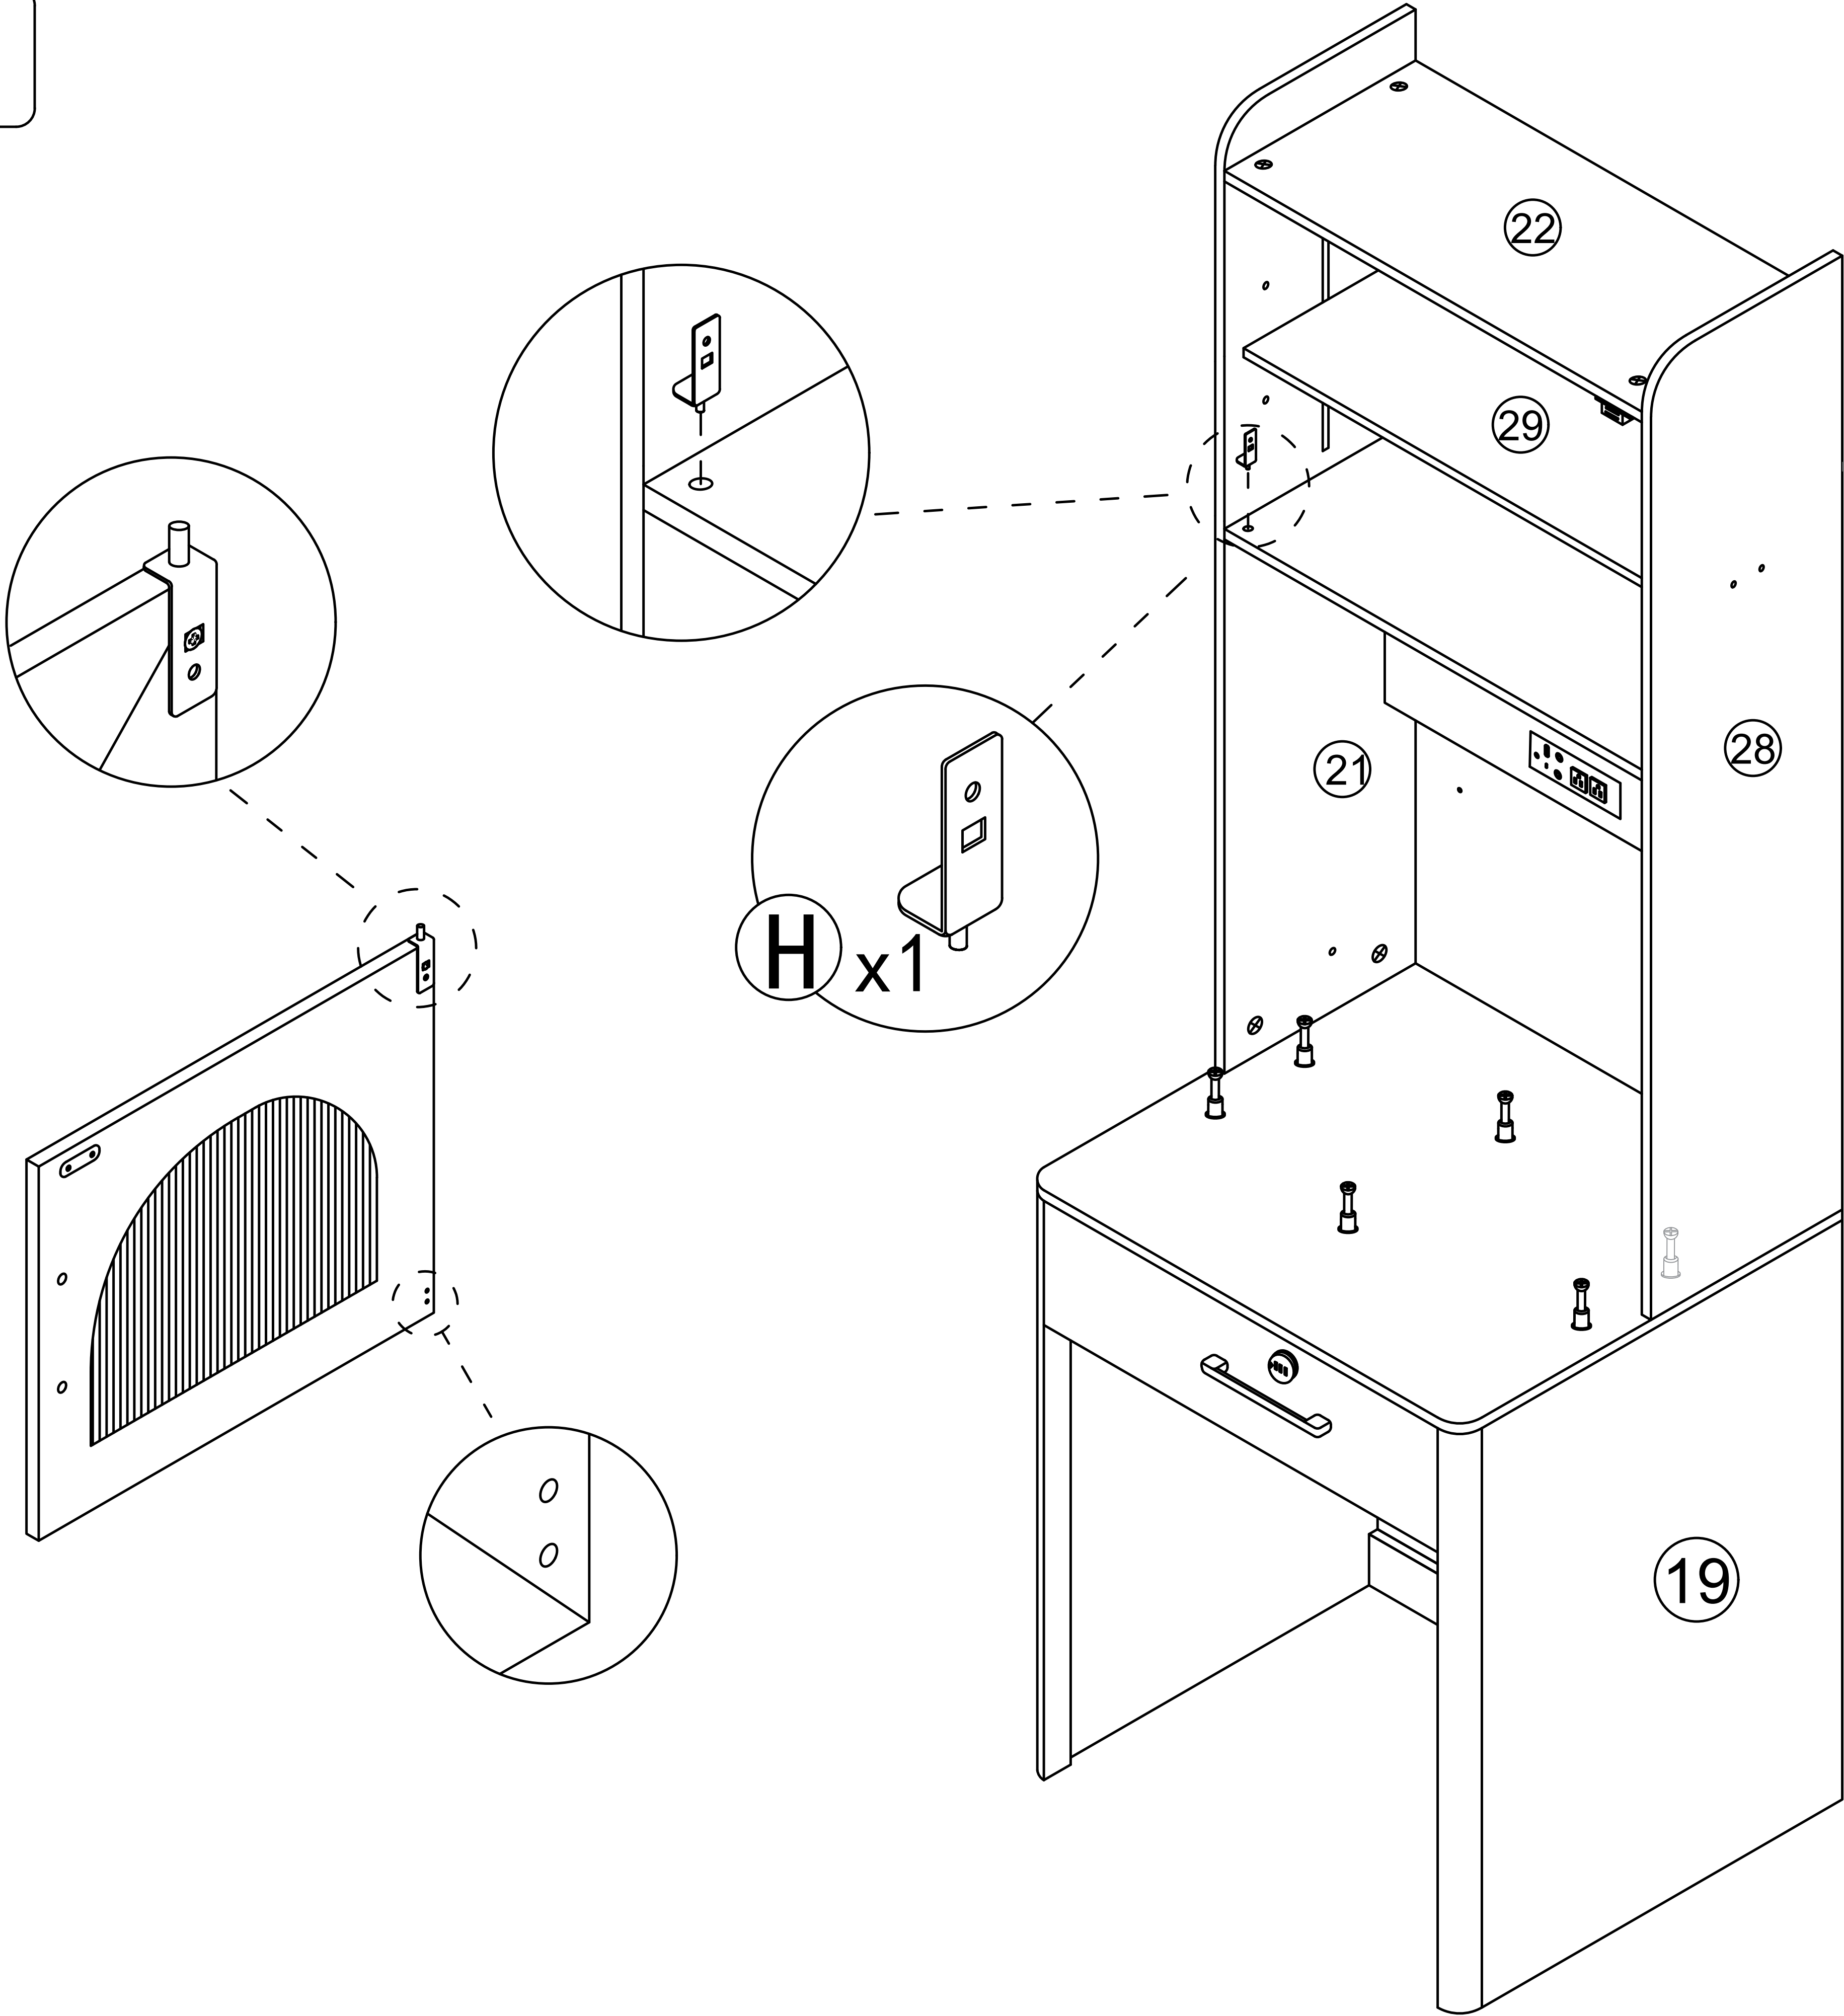



Step 71

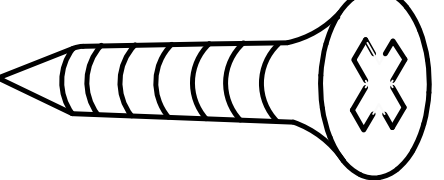H  x1

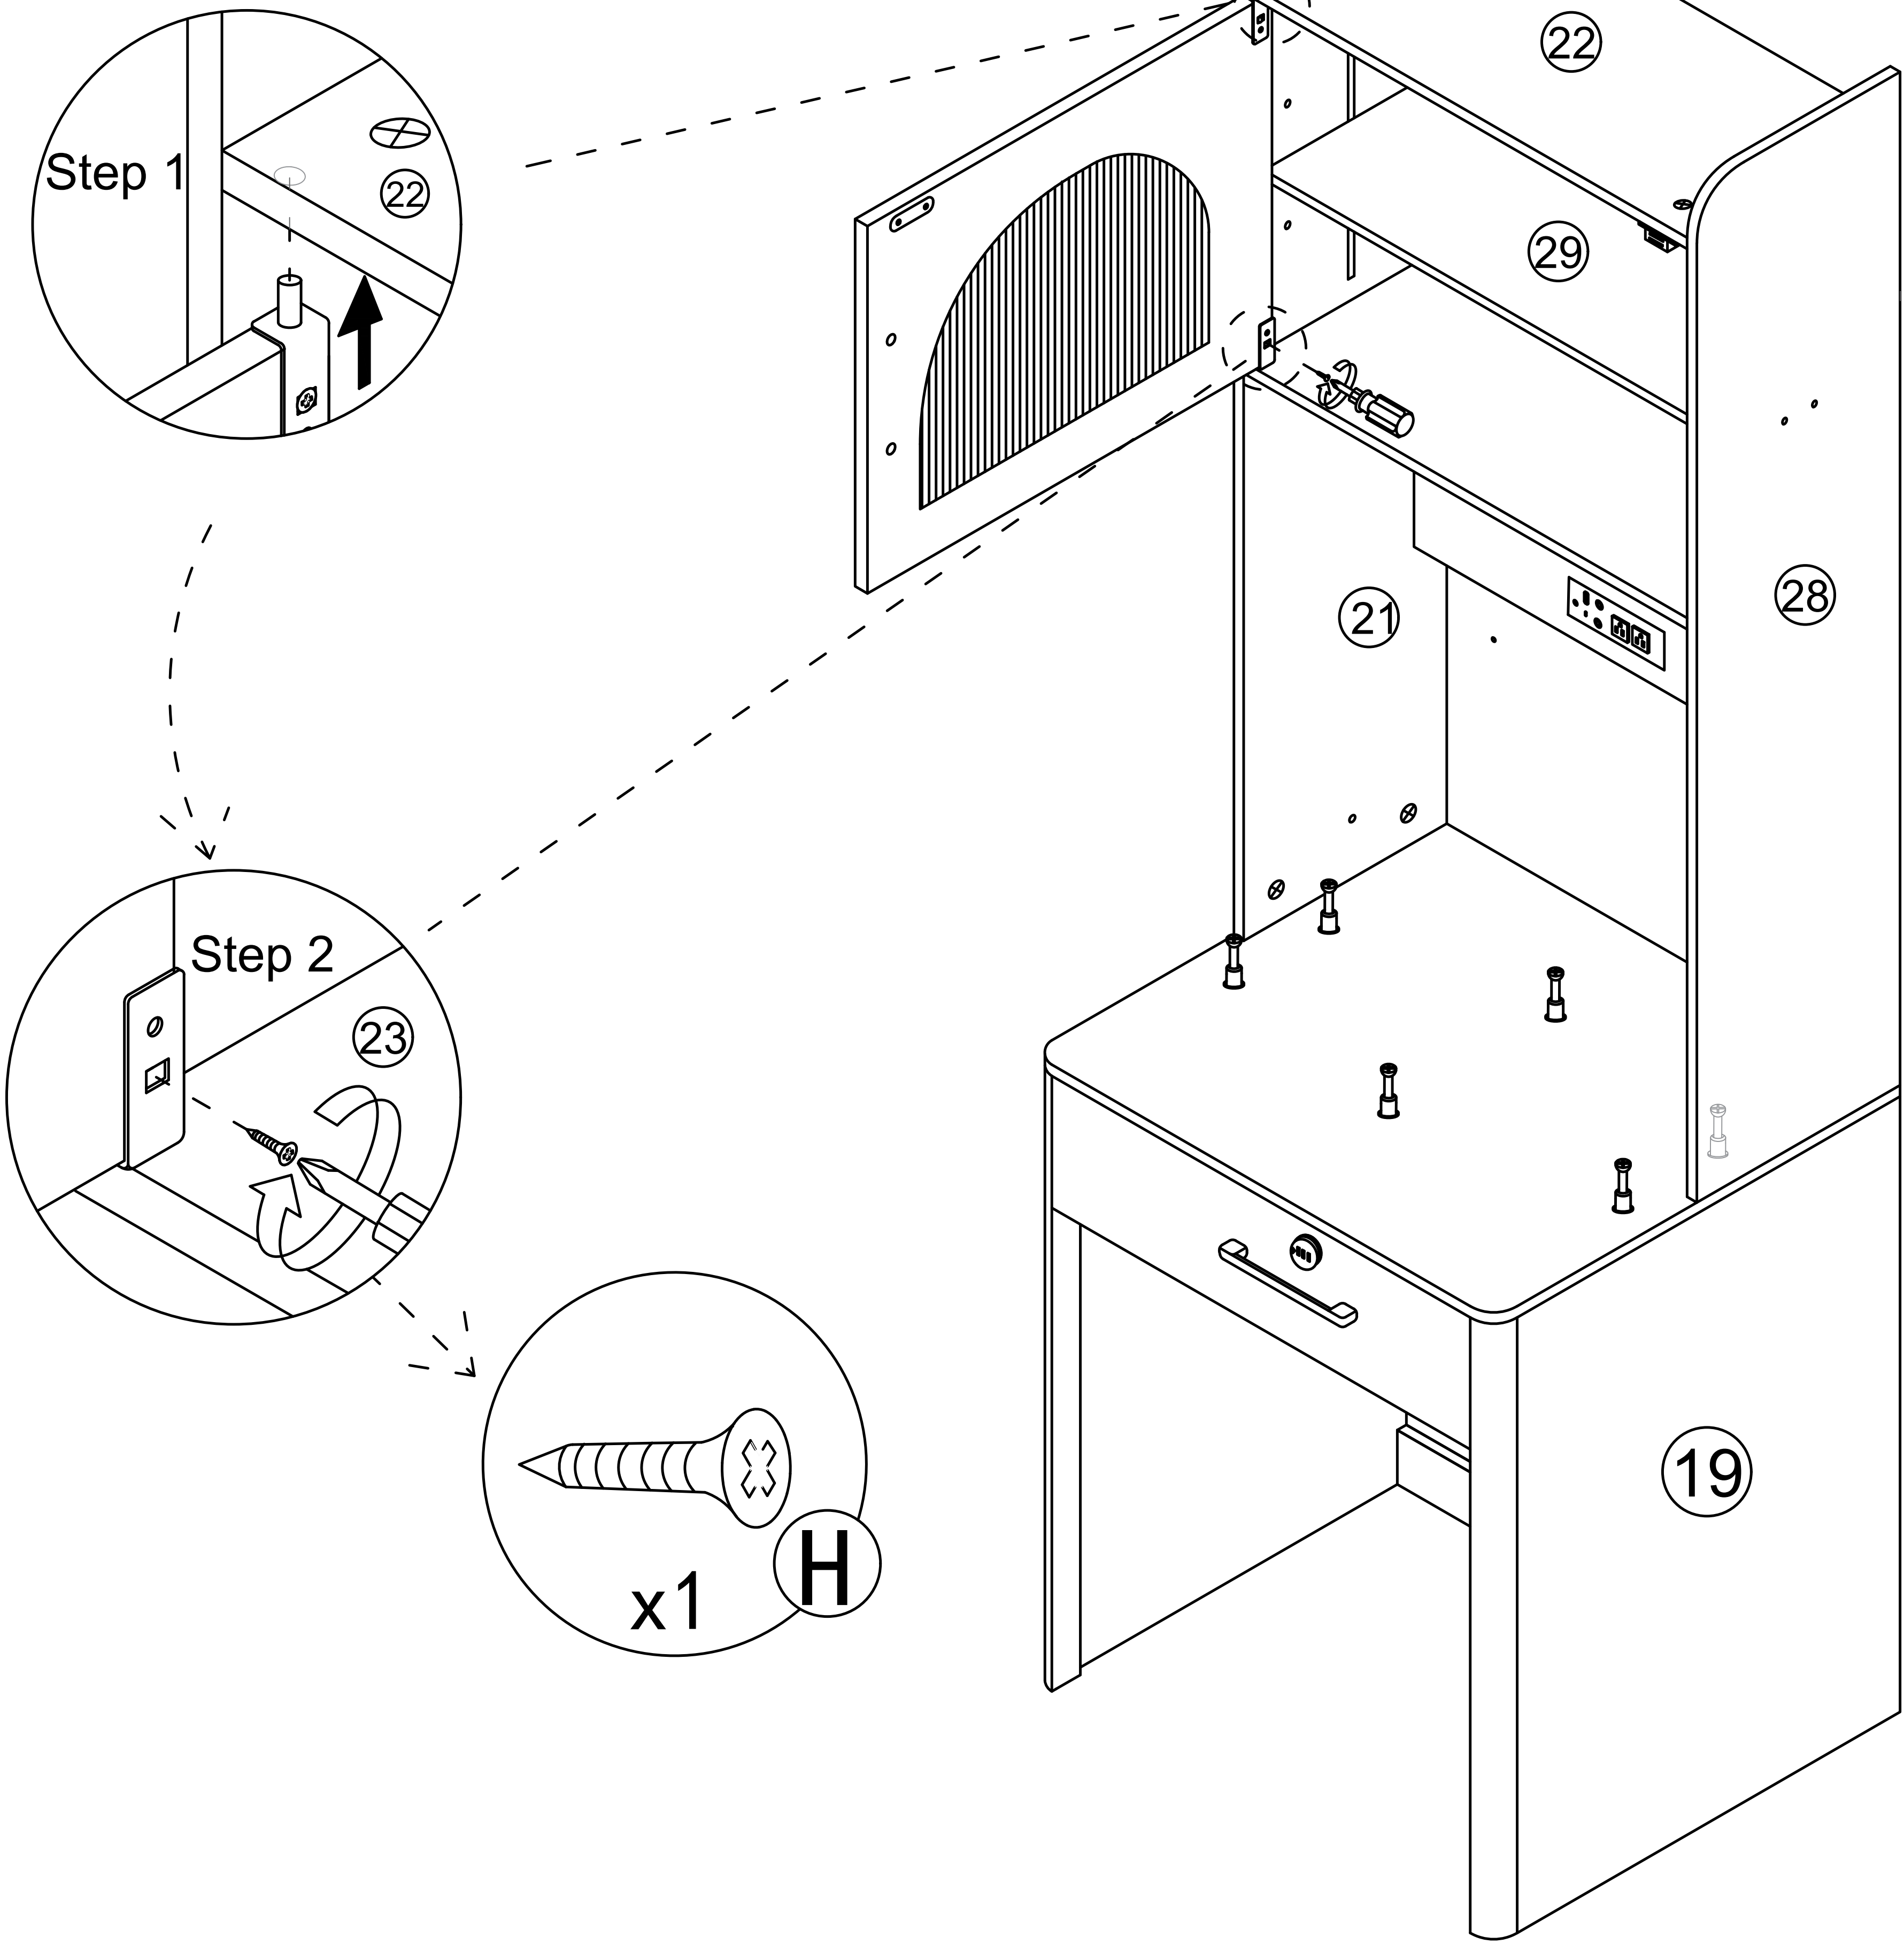

Step 72

Tighten the screw into the fixing hole

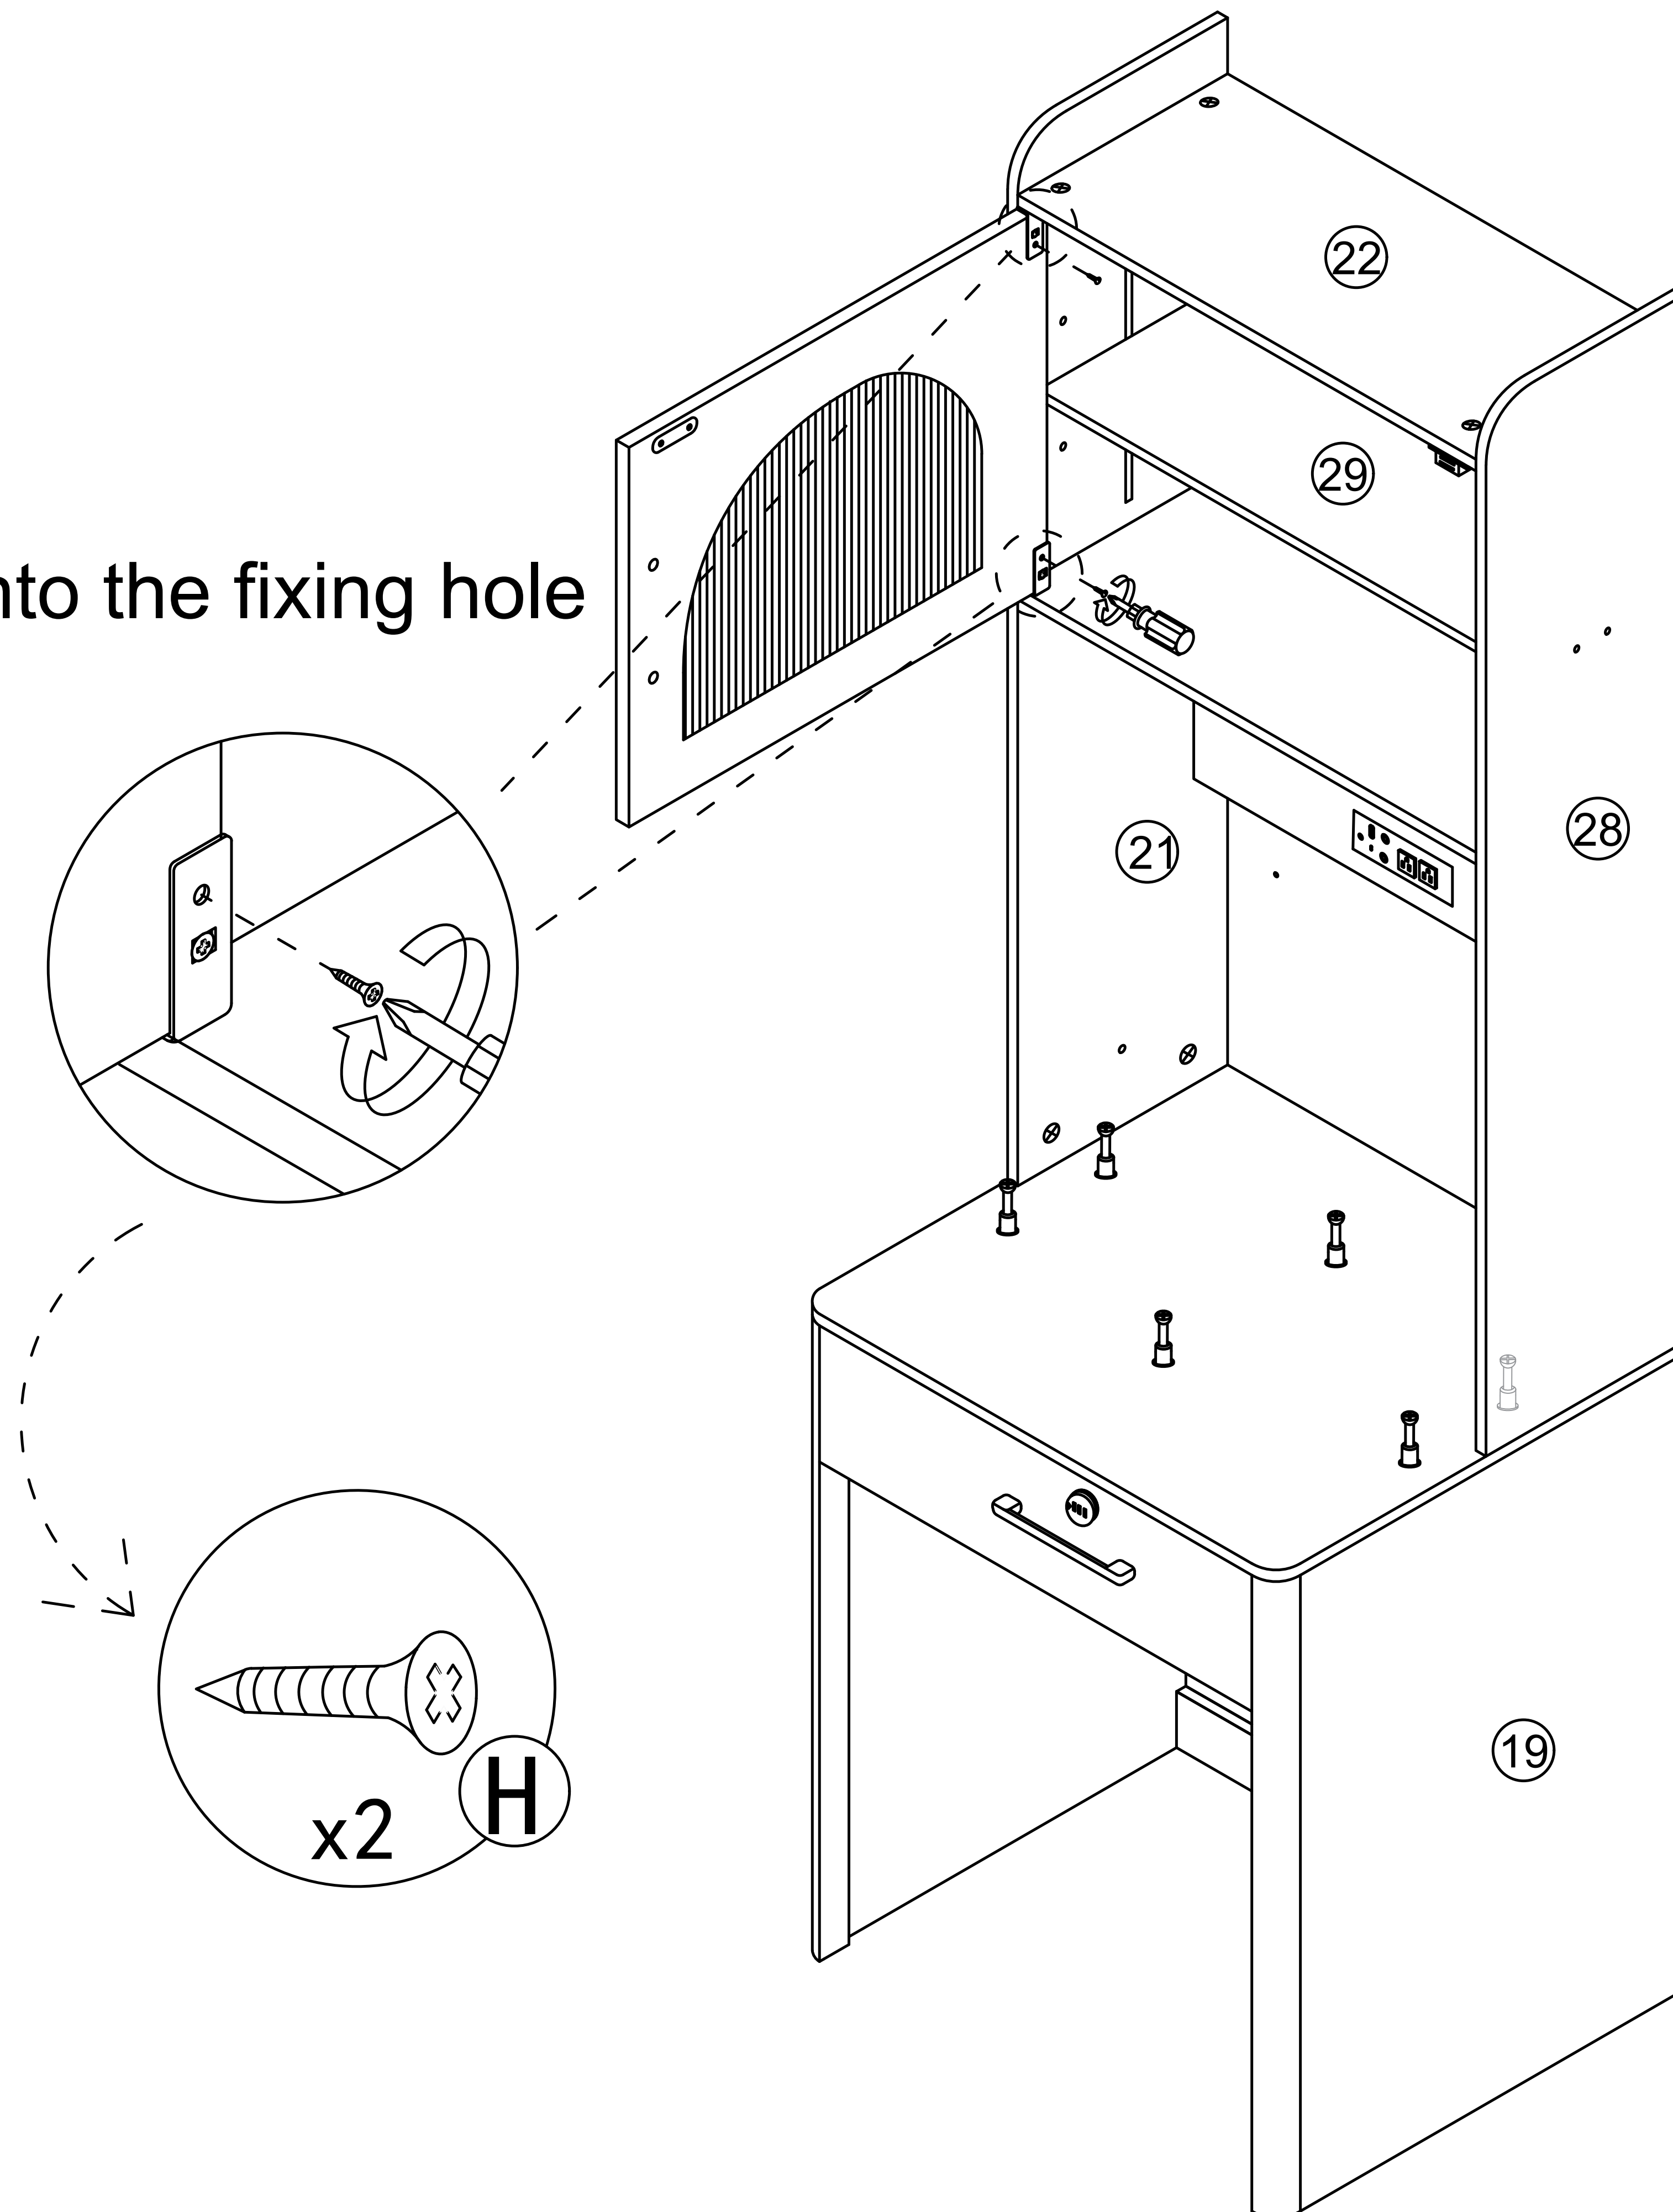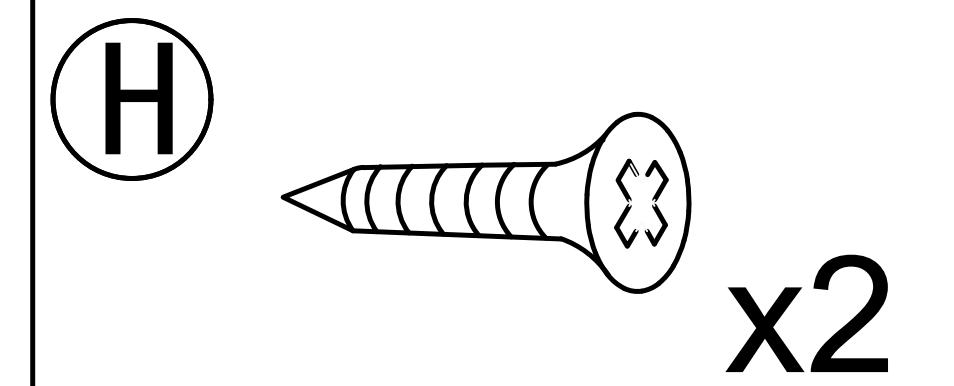



Step 73

D

x1





x2

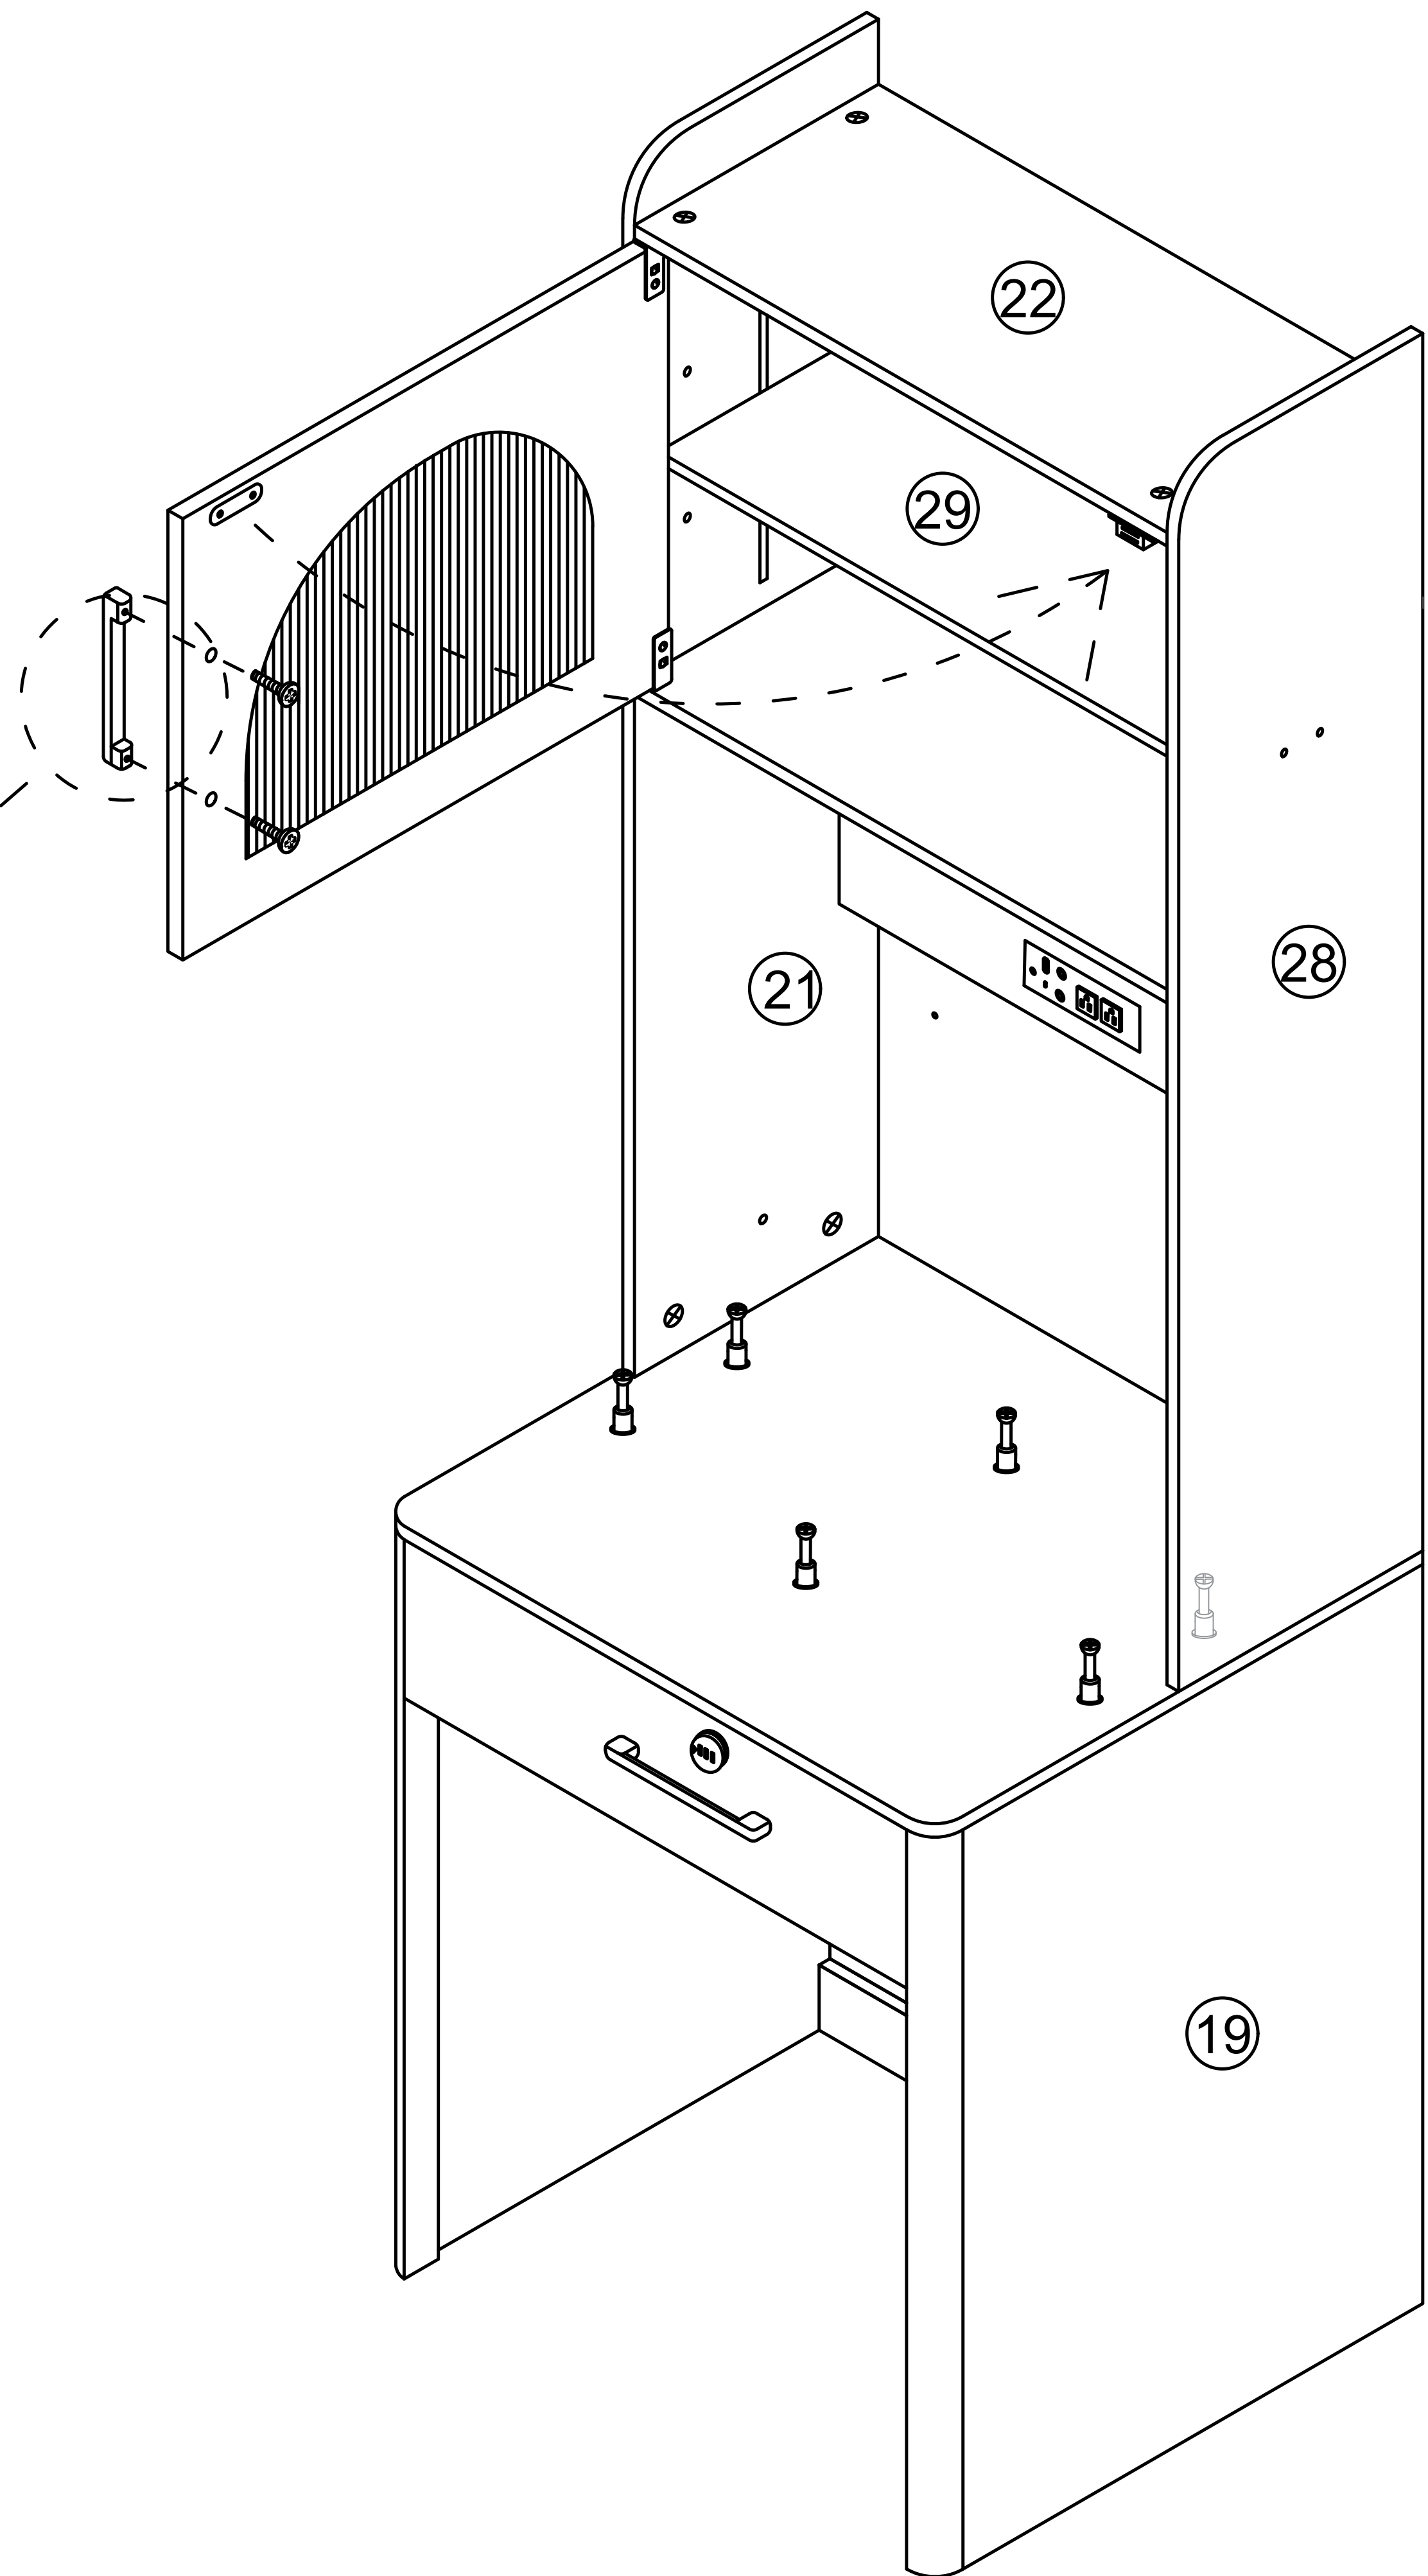
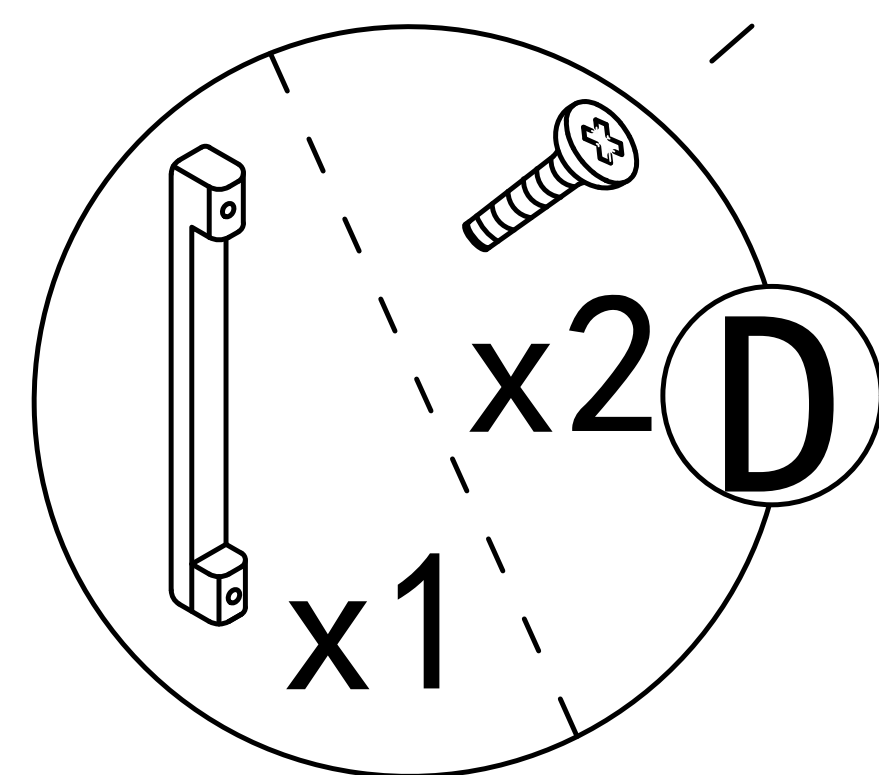














Step 74





K

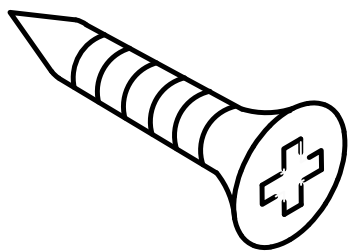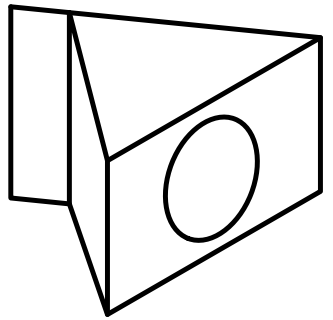

x8

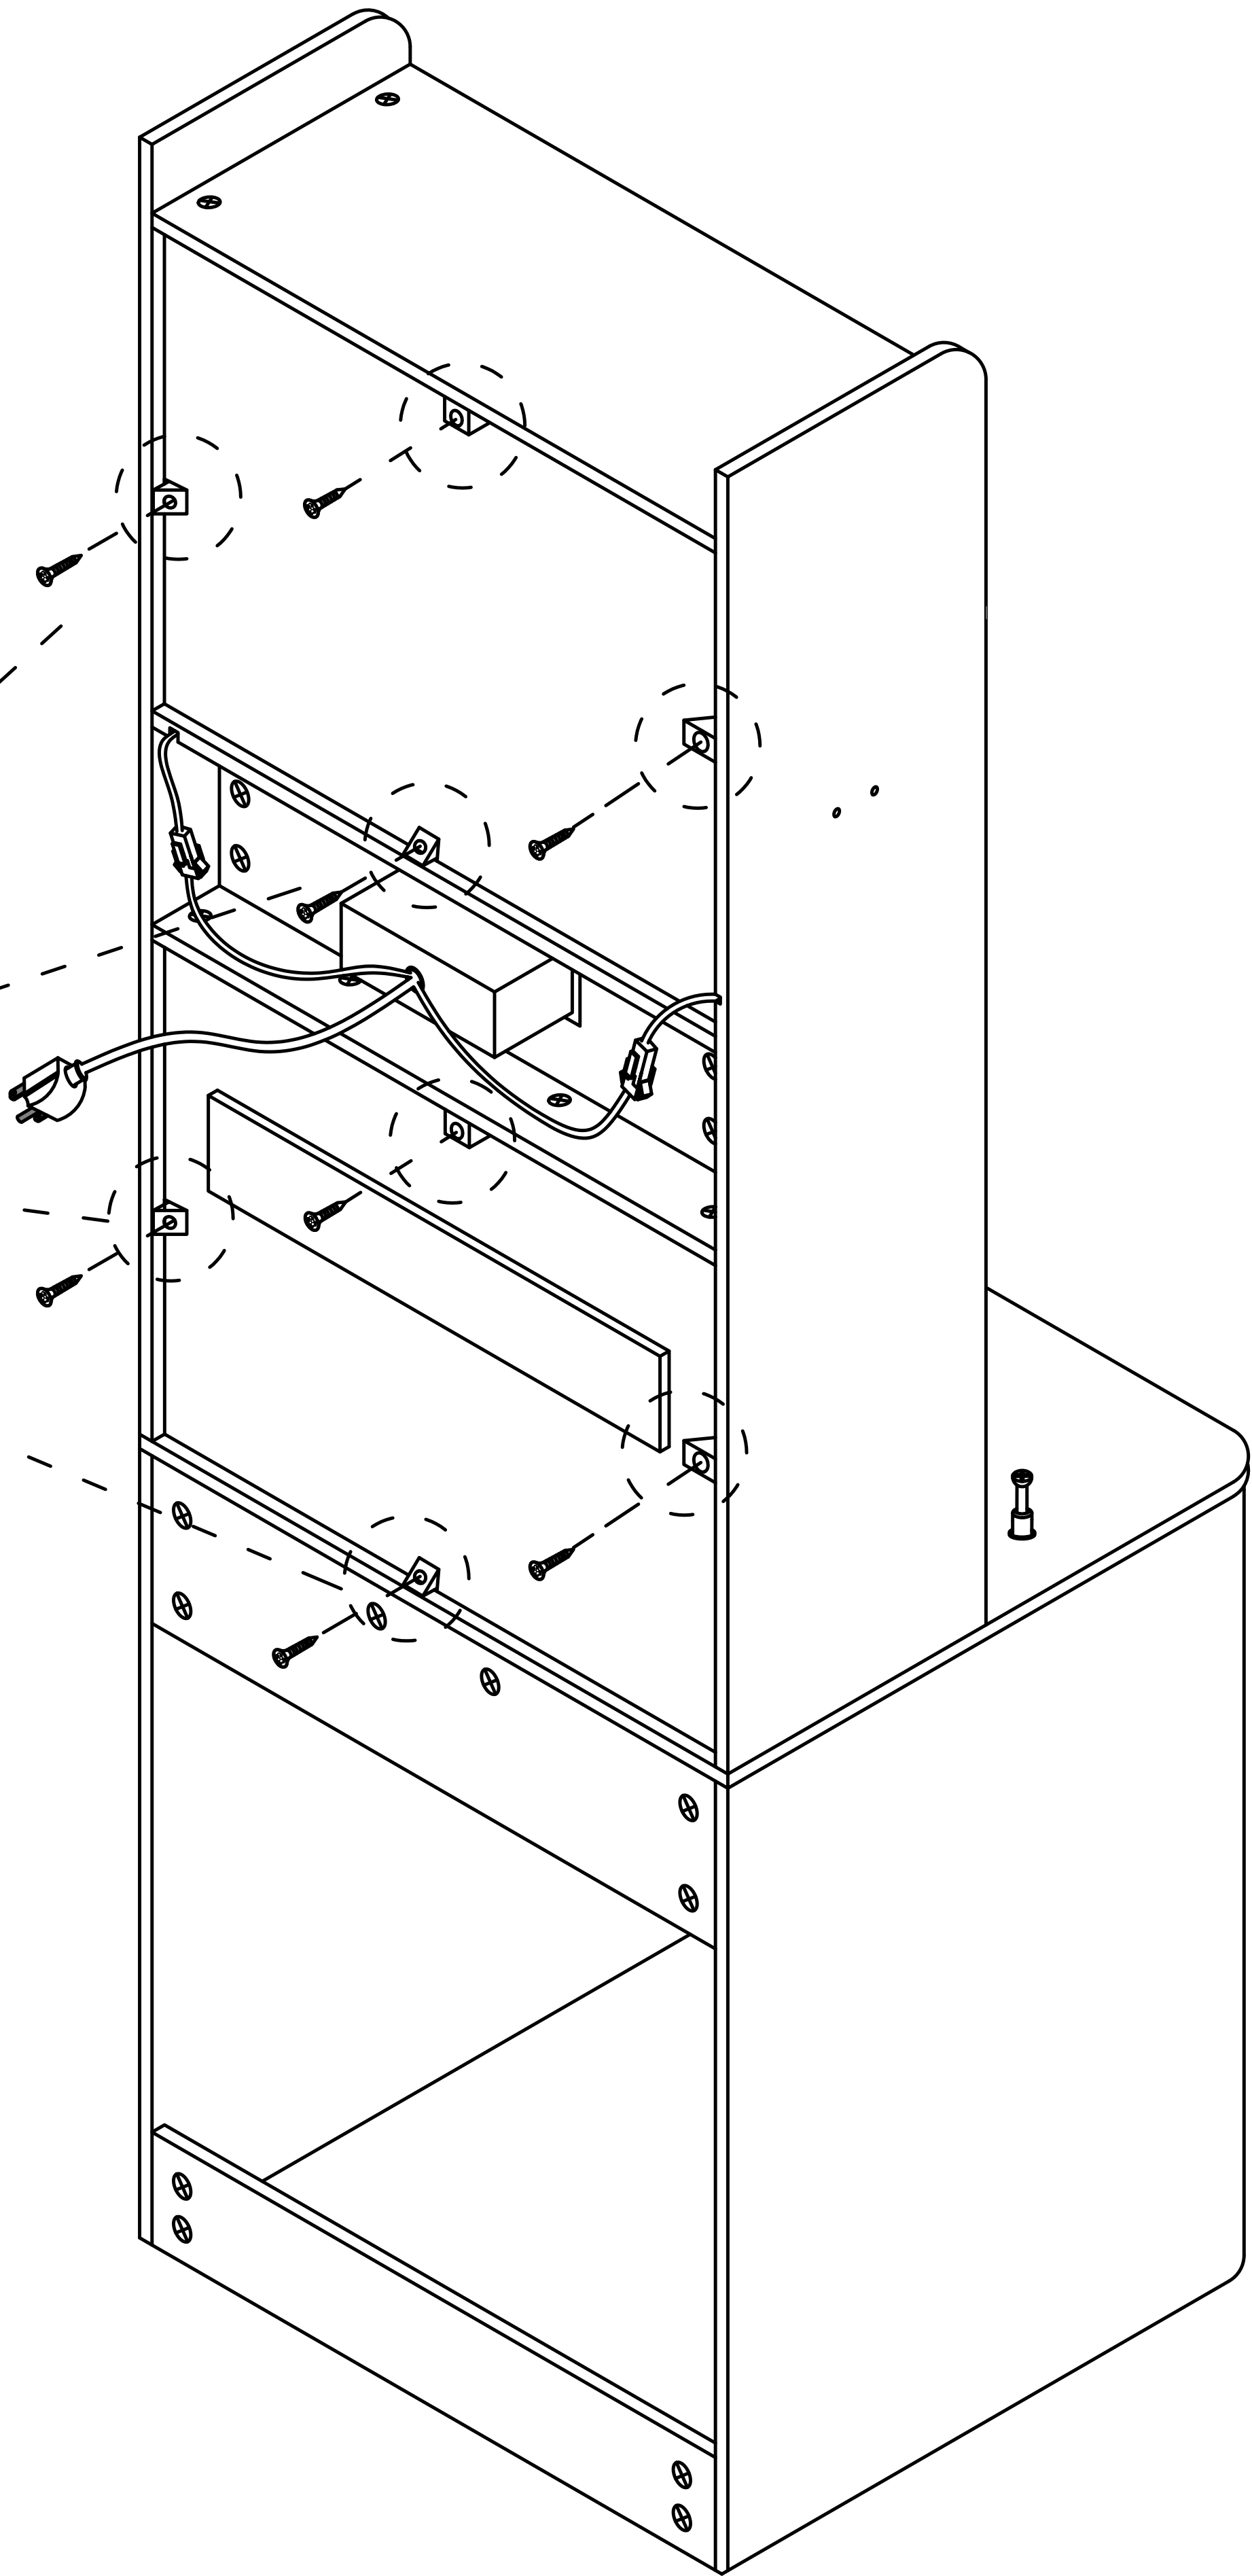
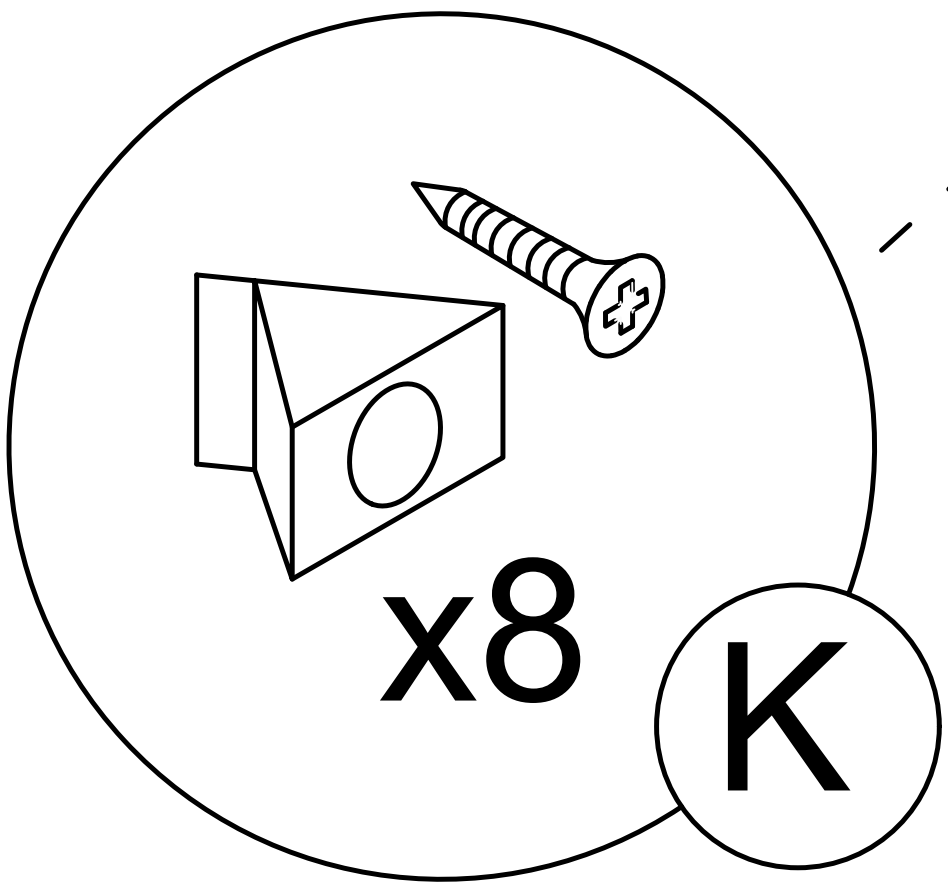


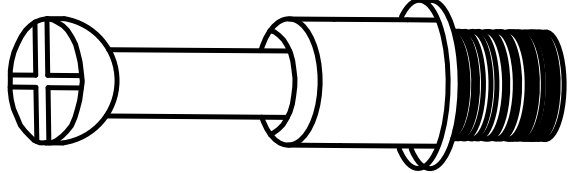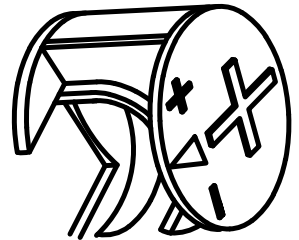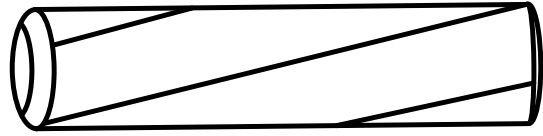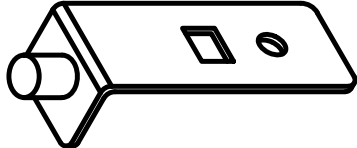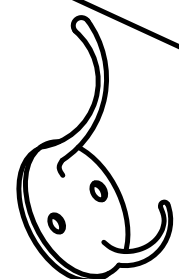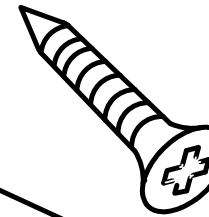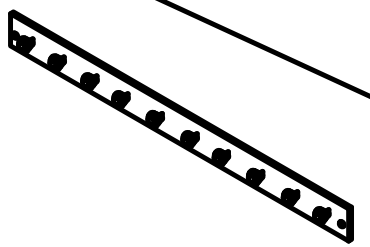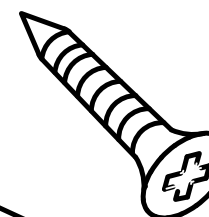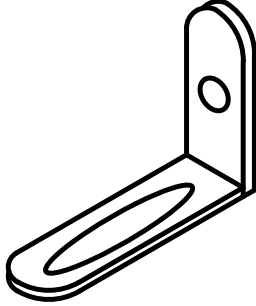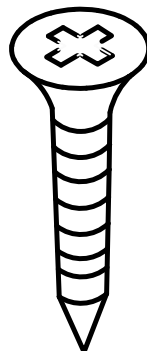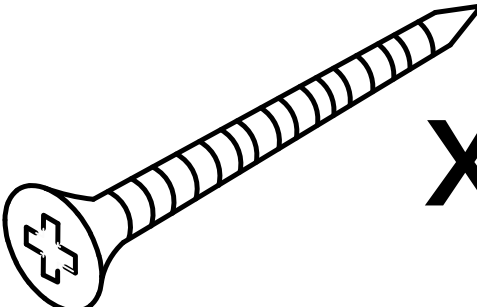A		6pcs
B		12pcs
C		6pcs
H	 	4pcs 2pcs
J		2pcs
L	 	4pcs 2pcs
O	 	2pcs 1pcs
Q	 x2  x2  x2  x2  x4	

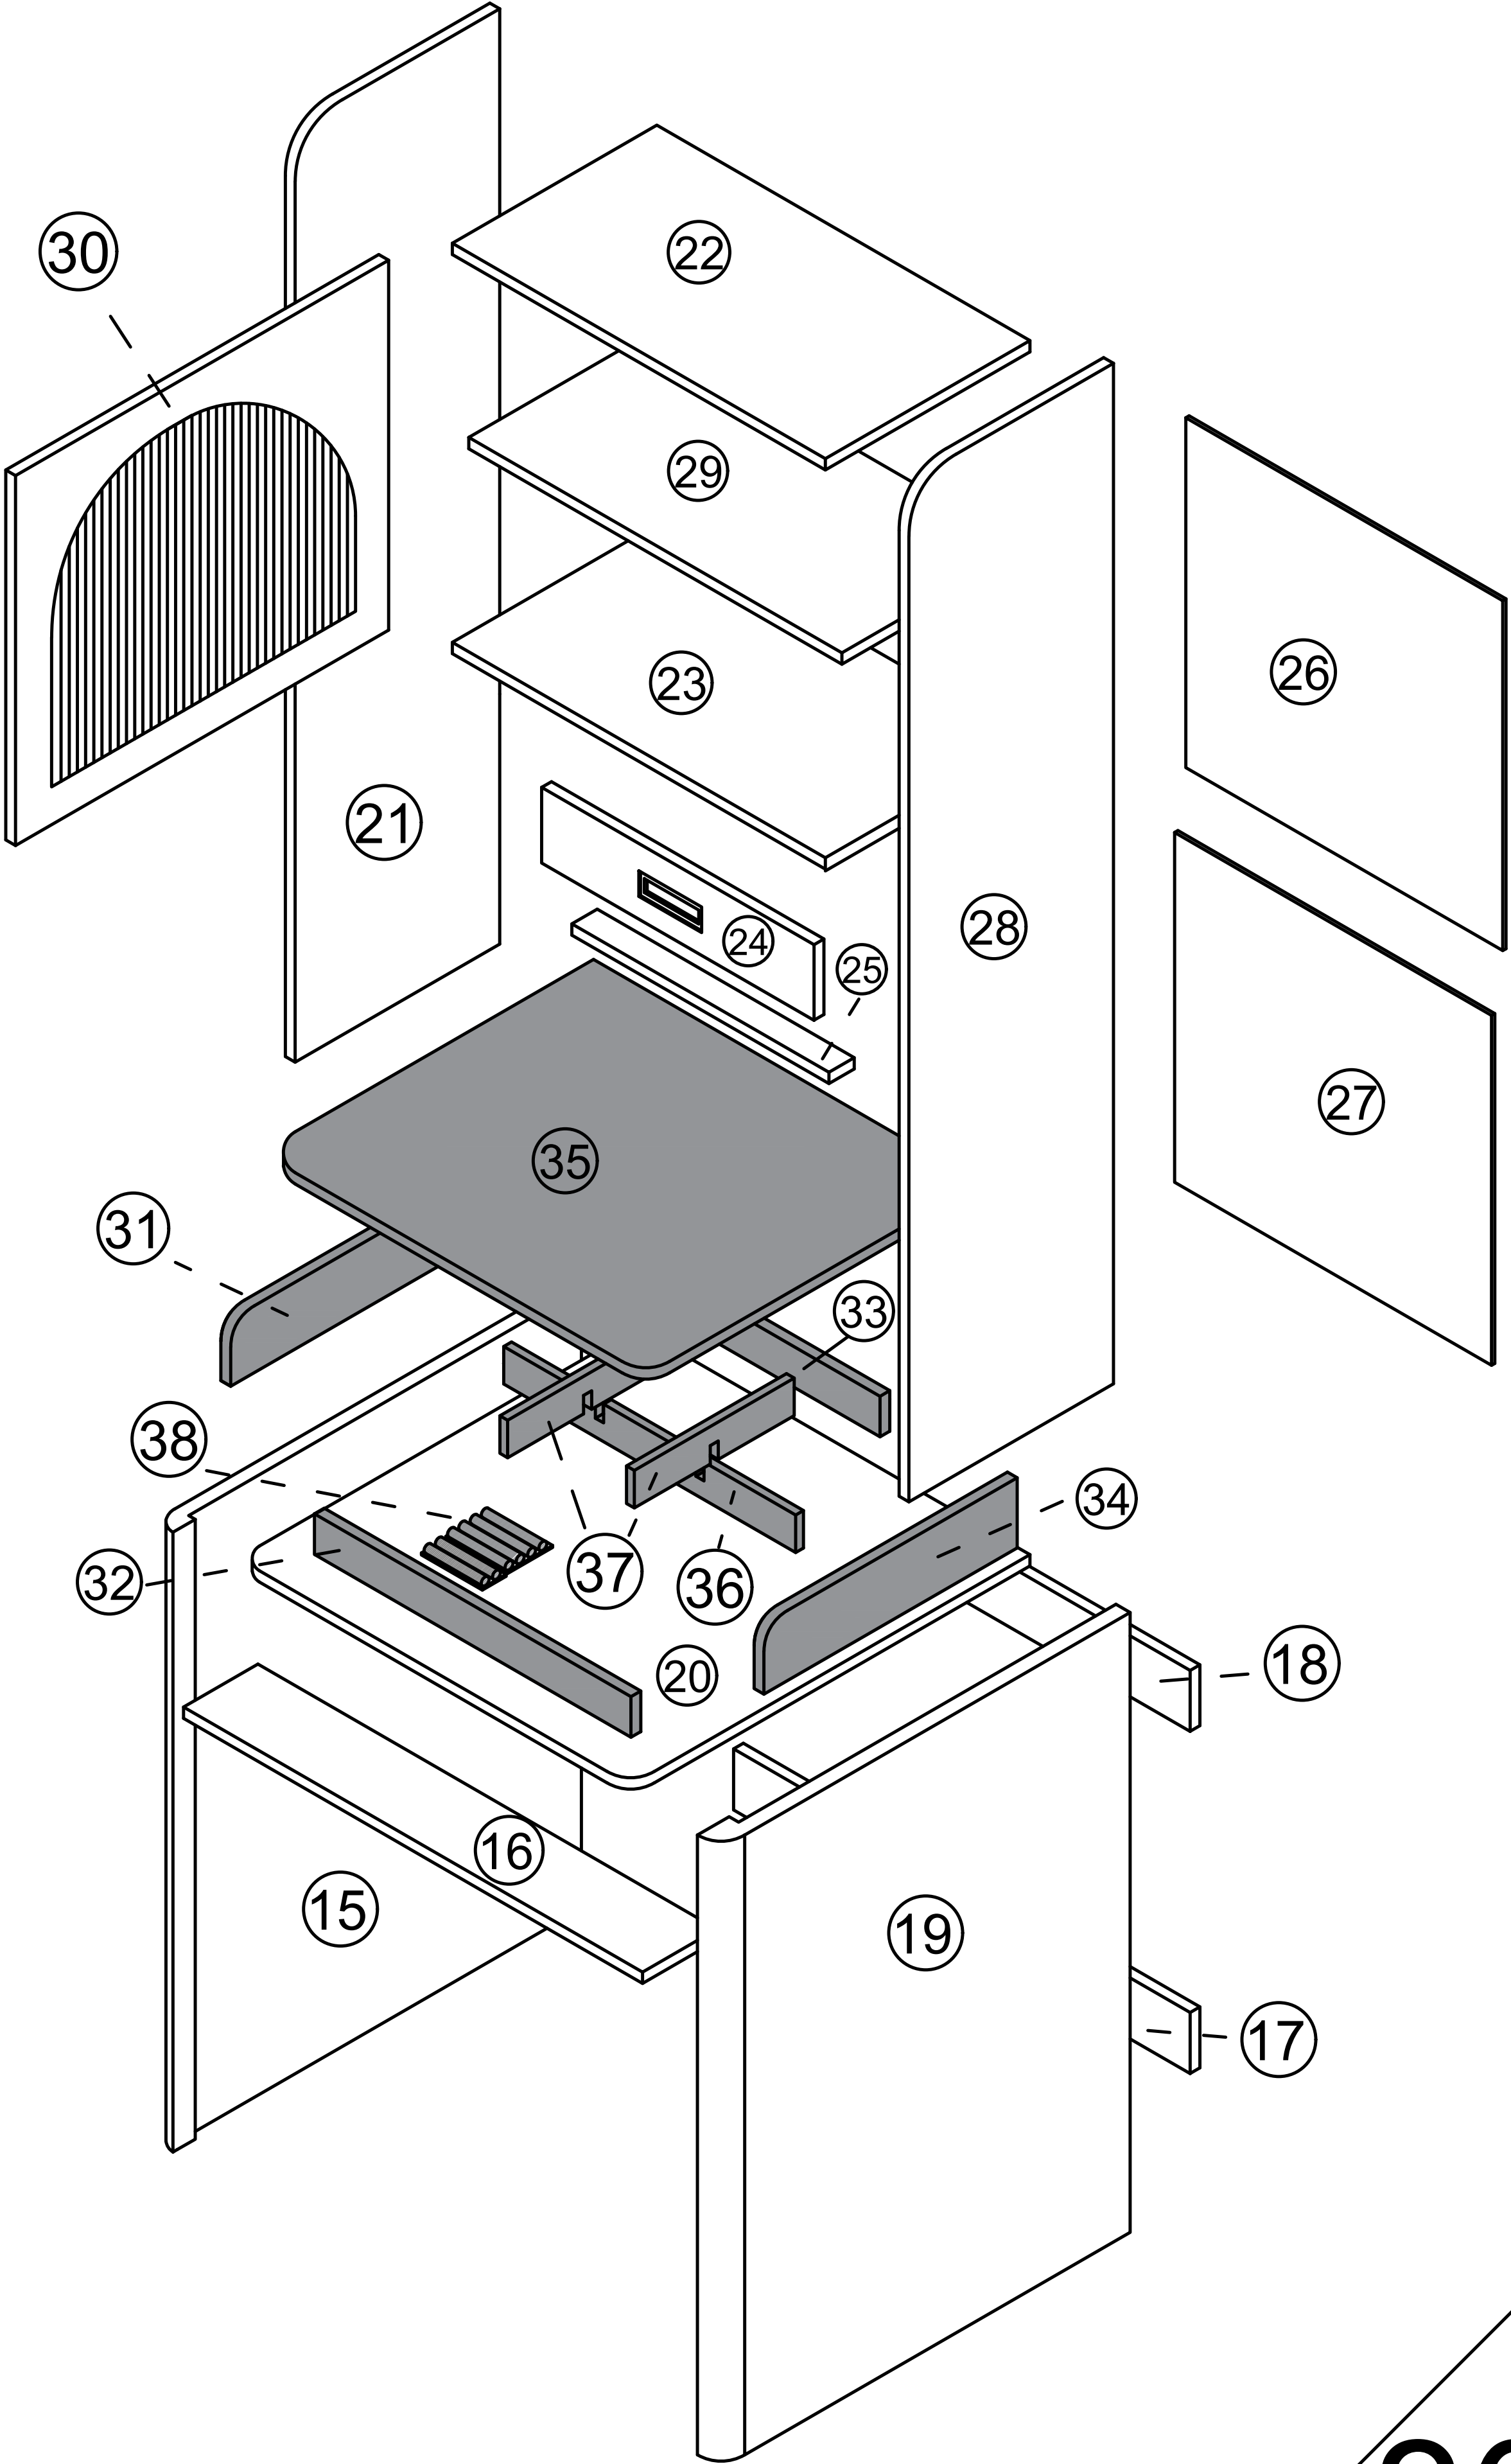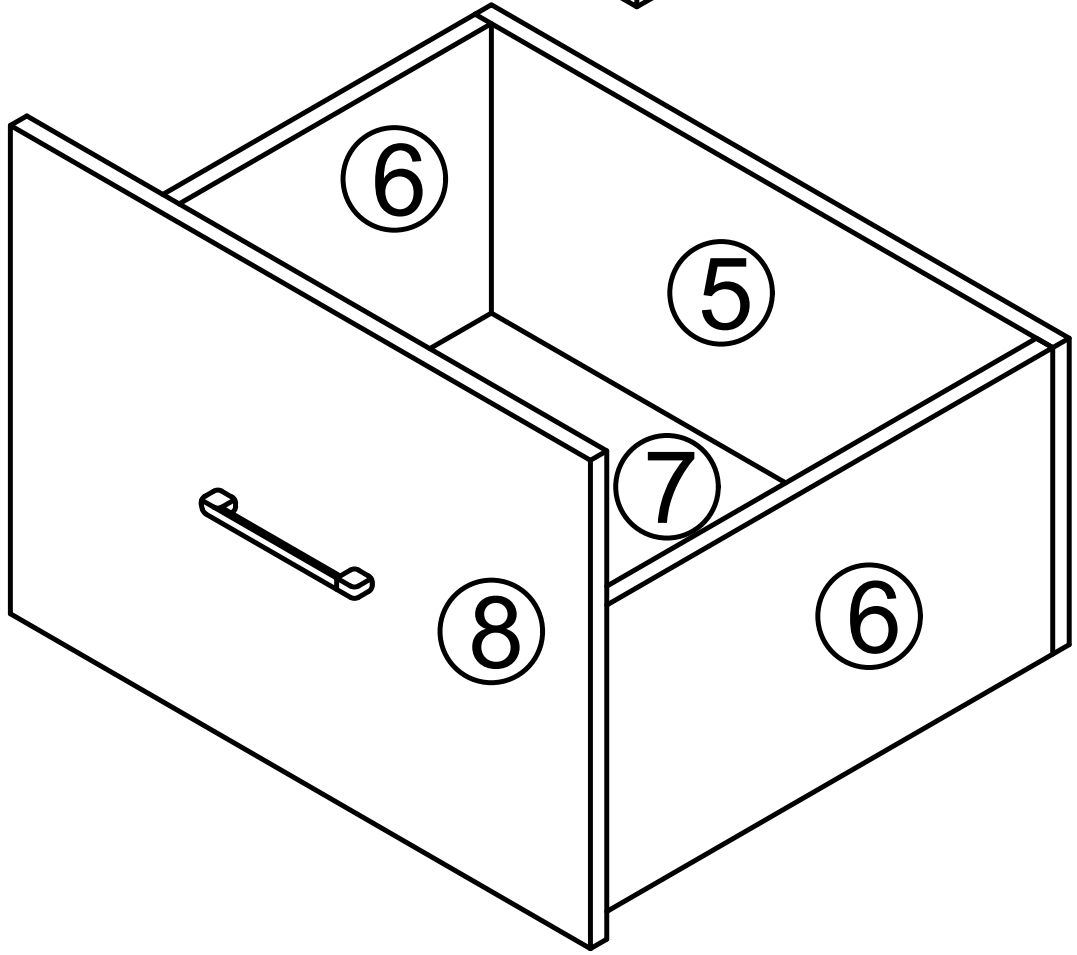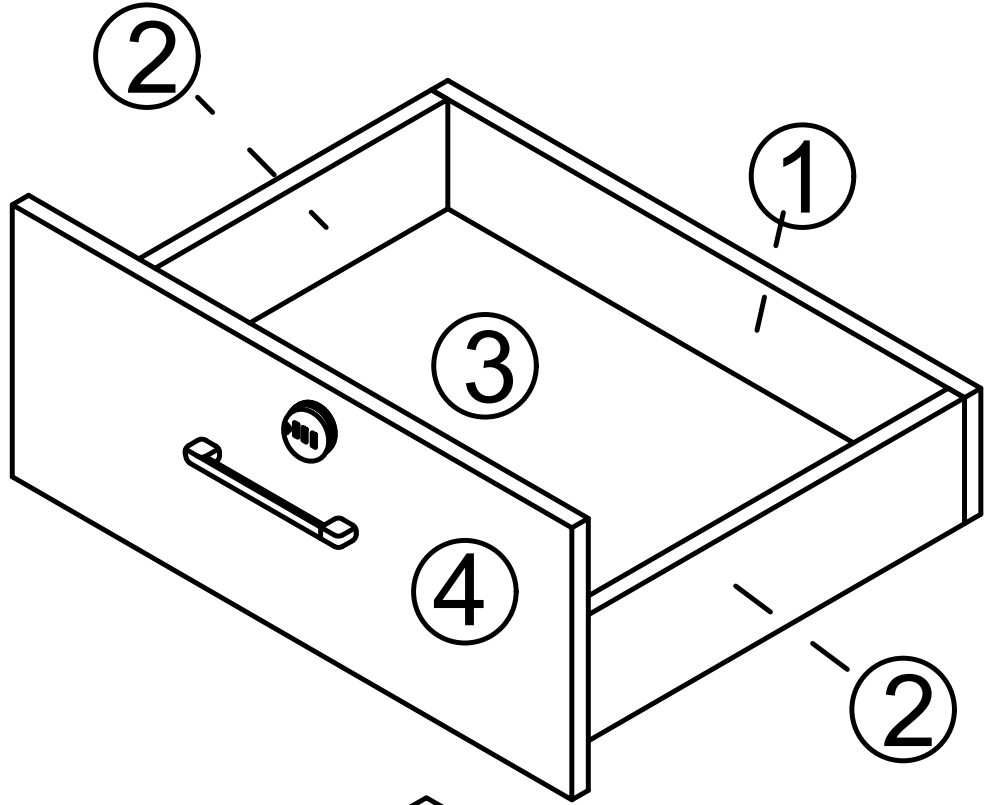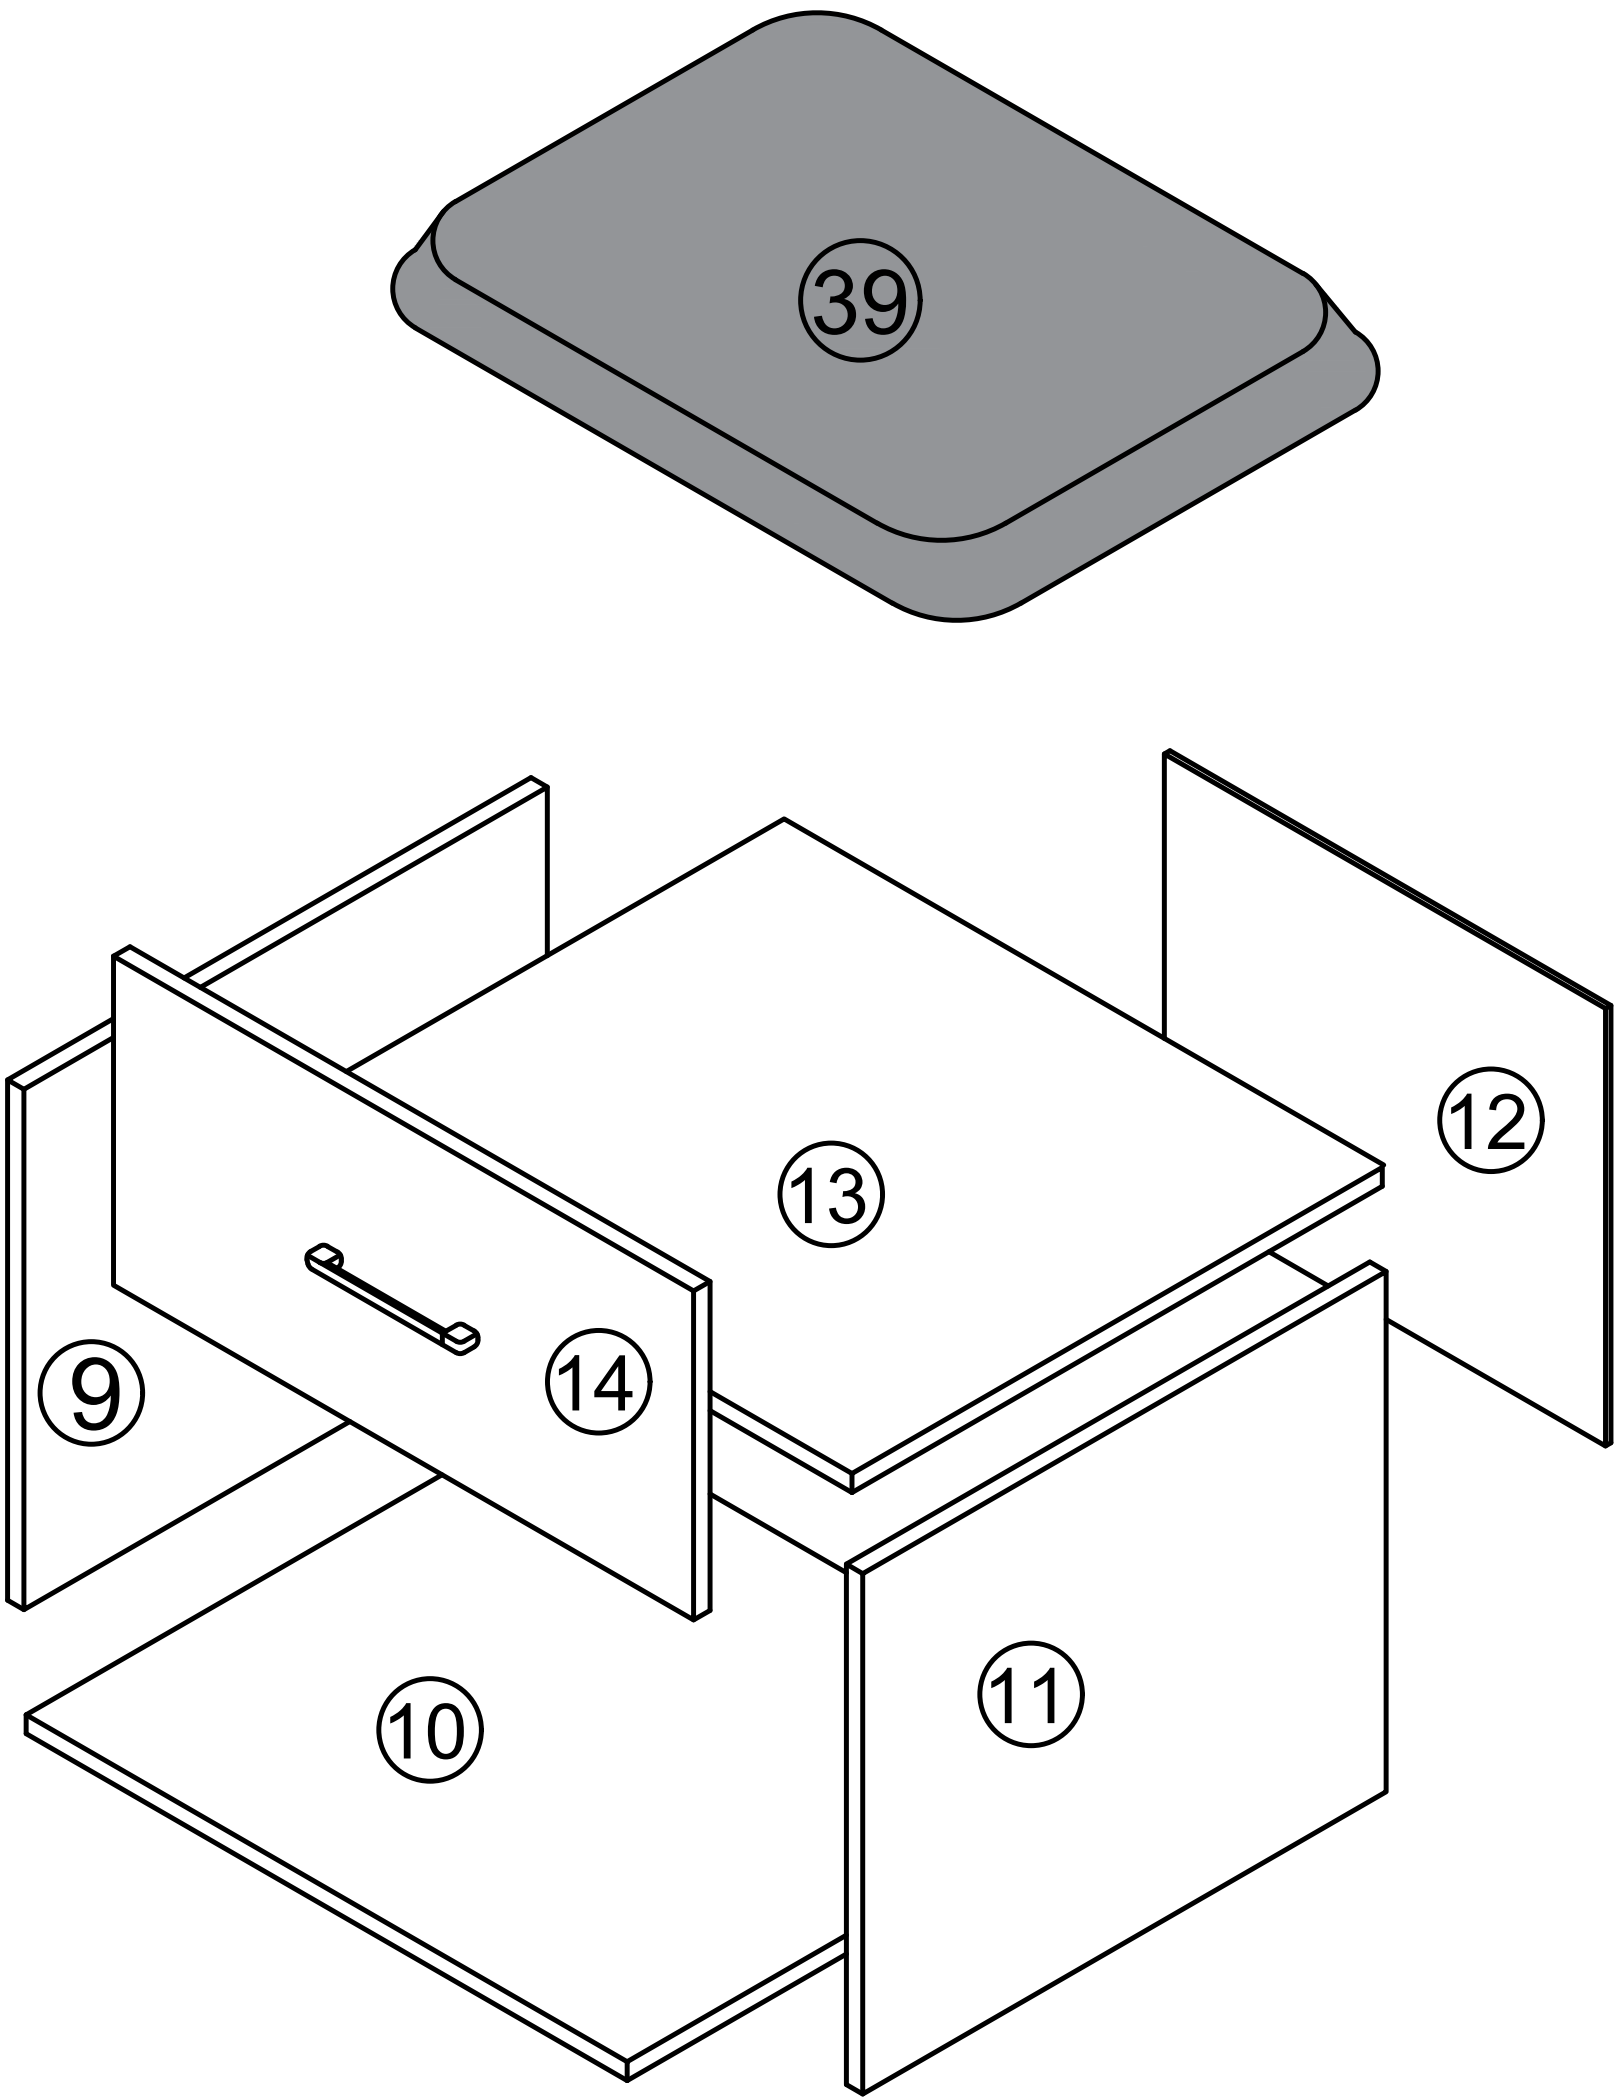


Step 75

A

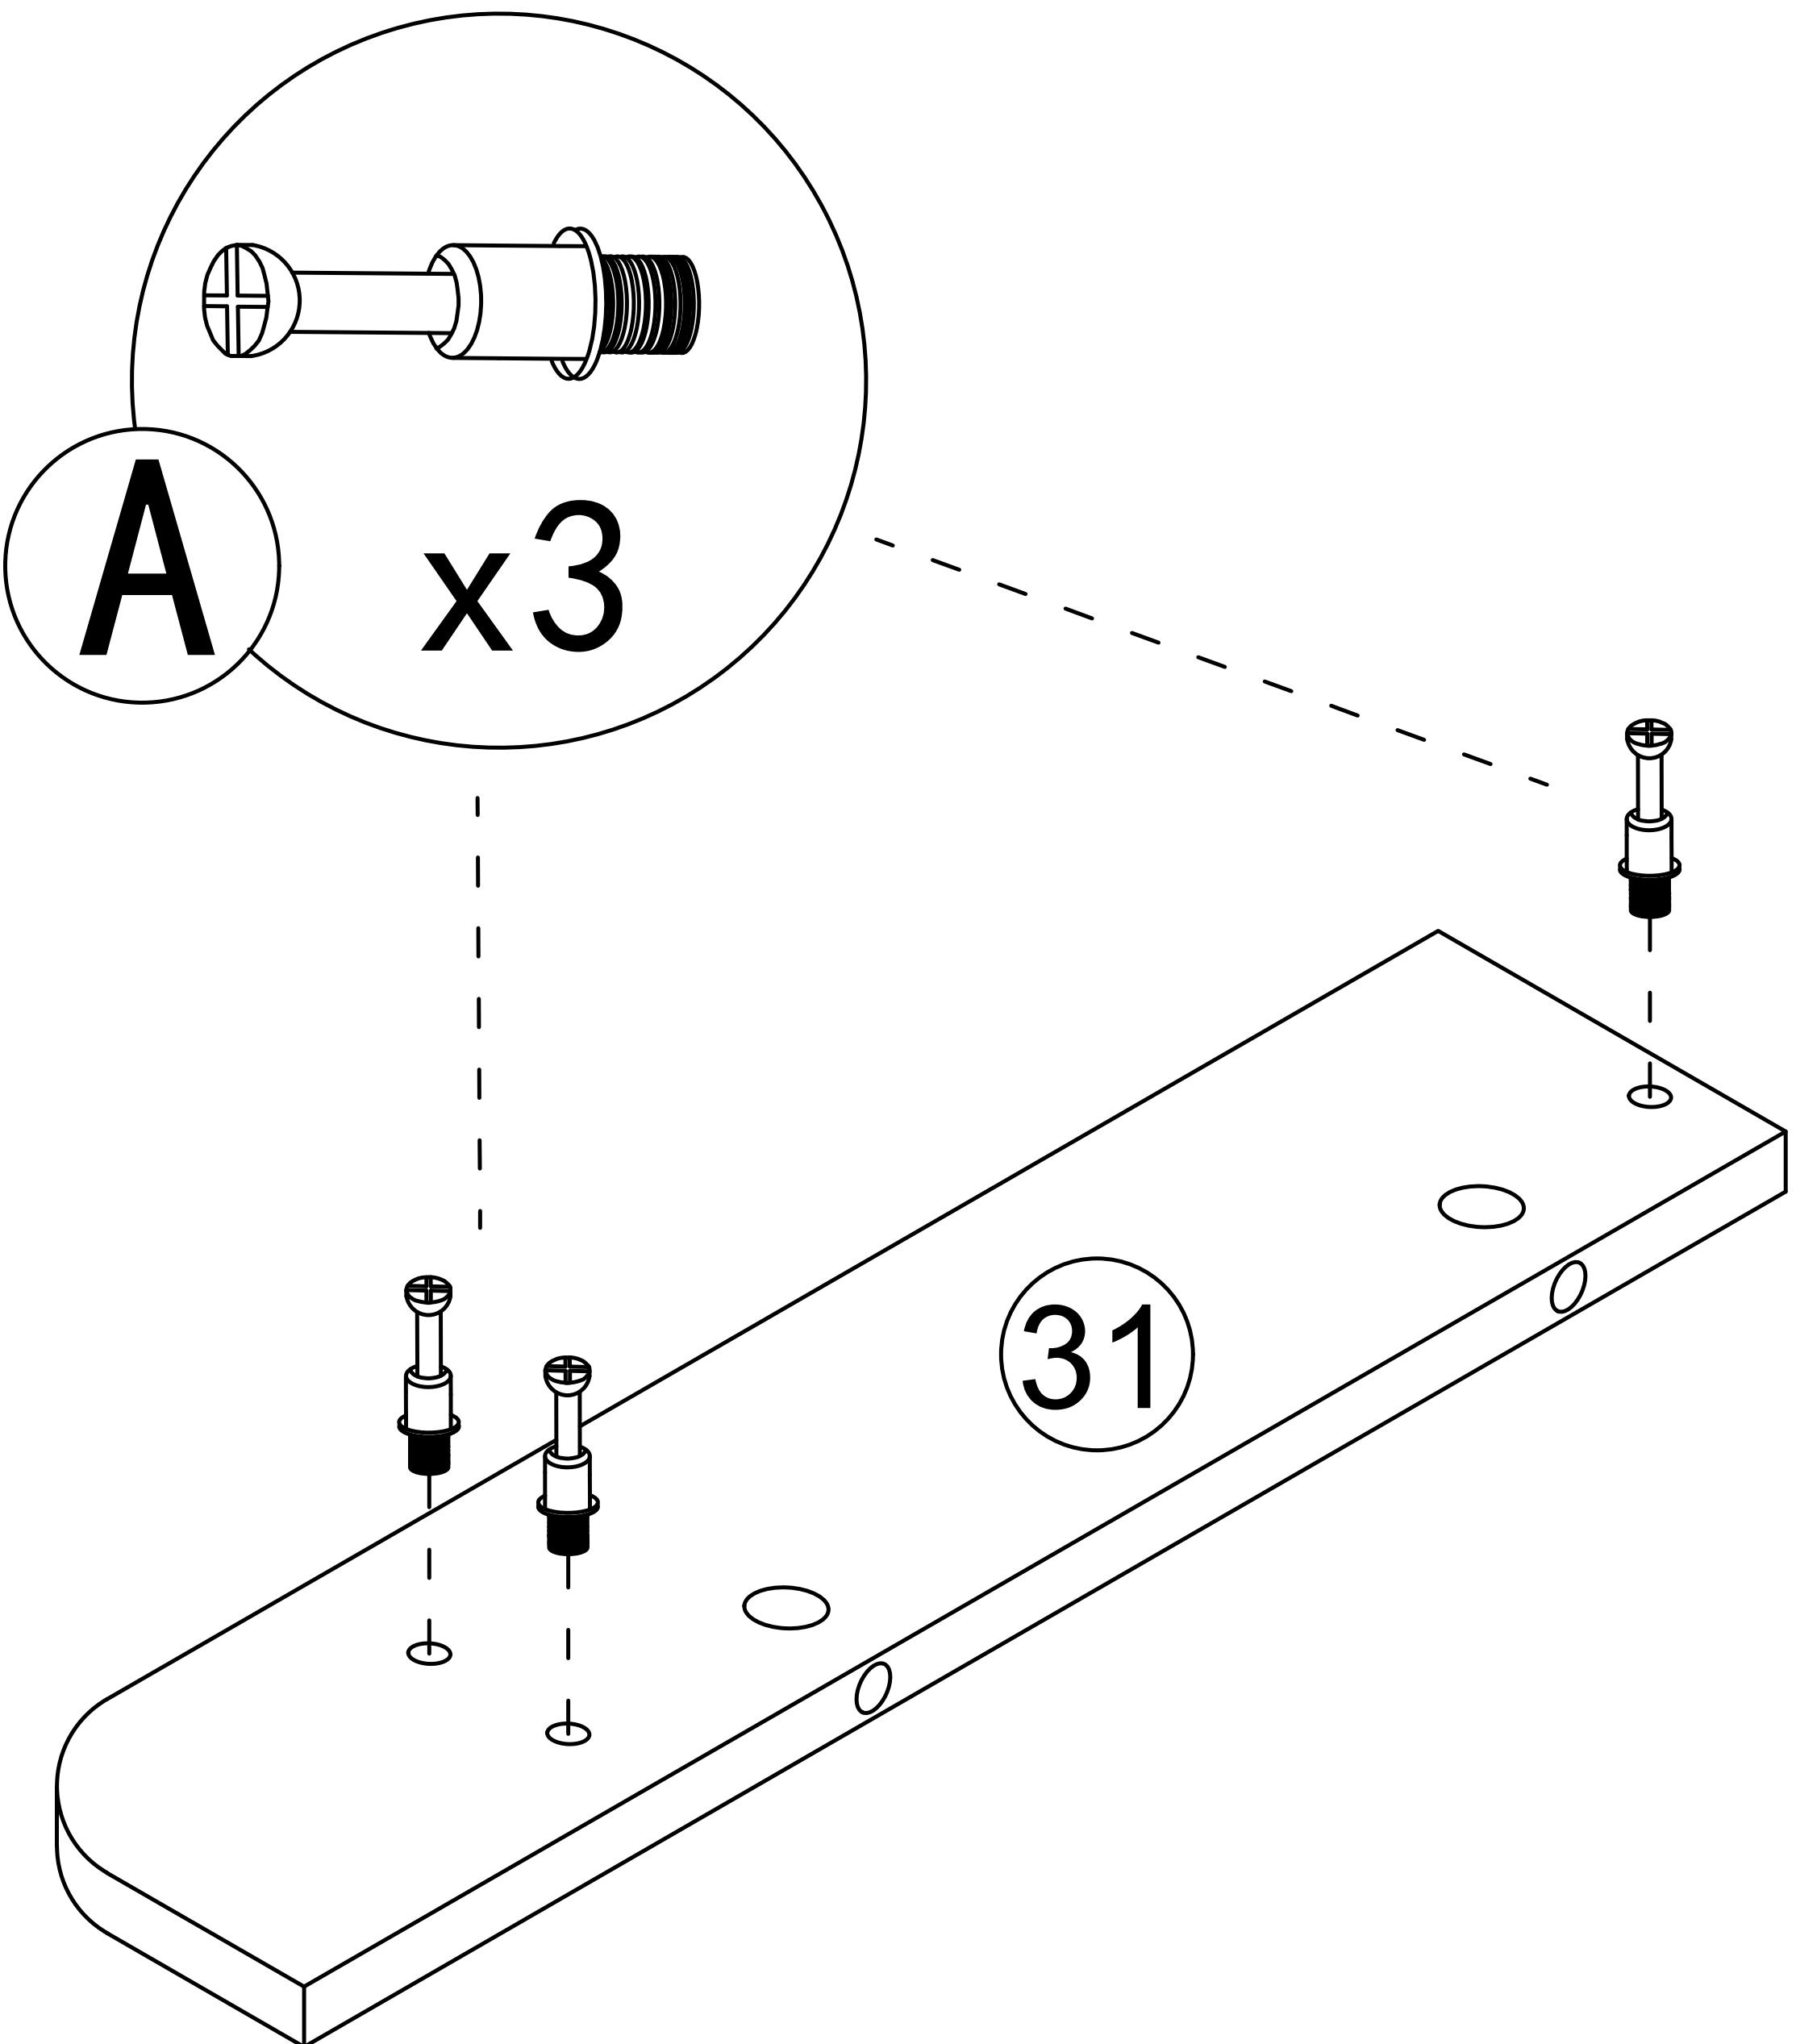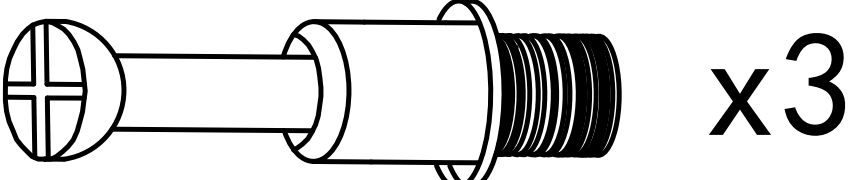


Step 76

B

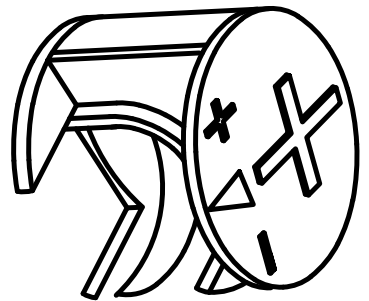


x2


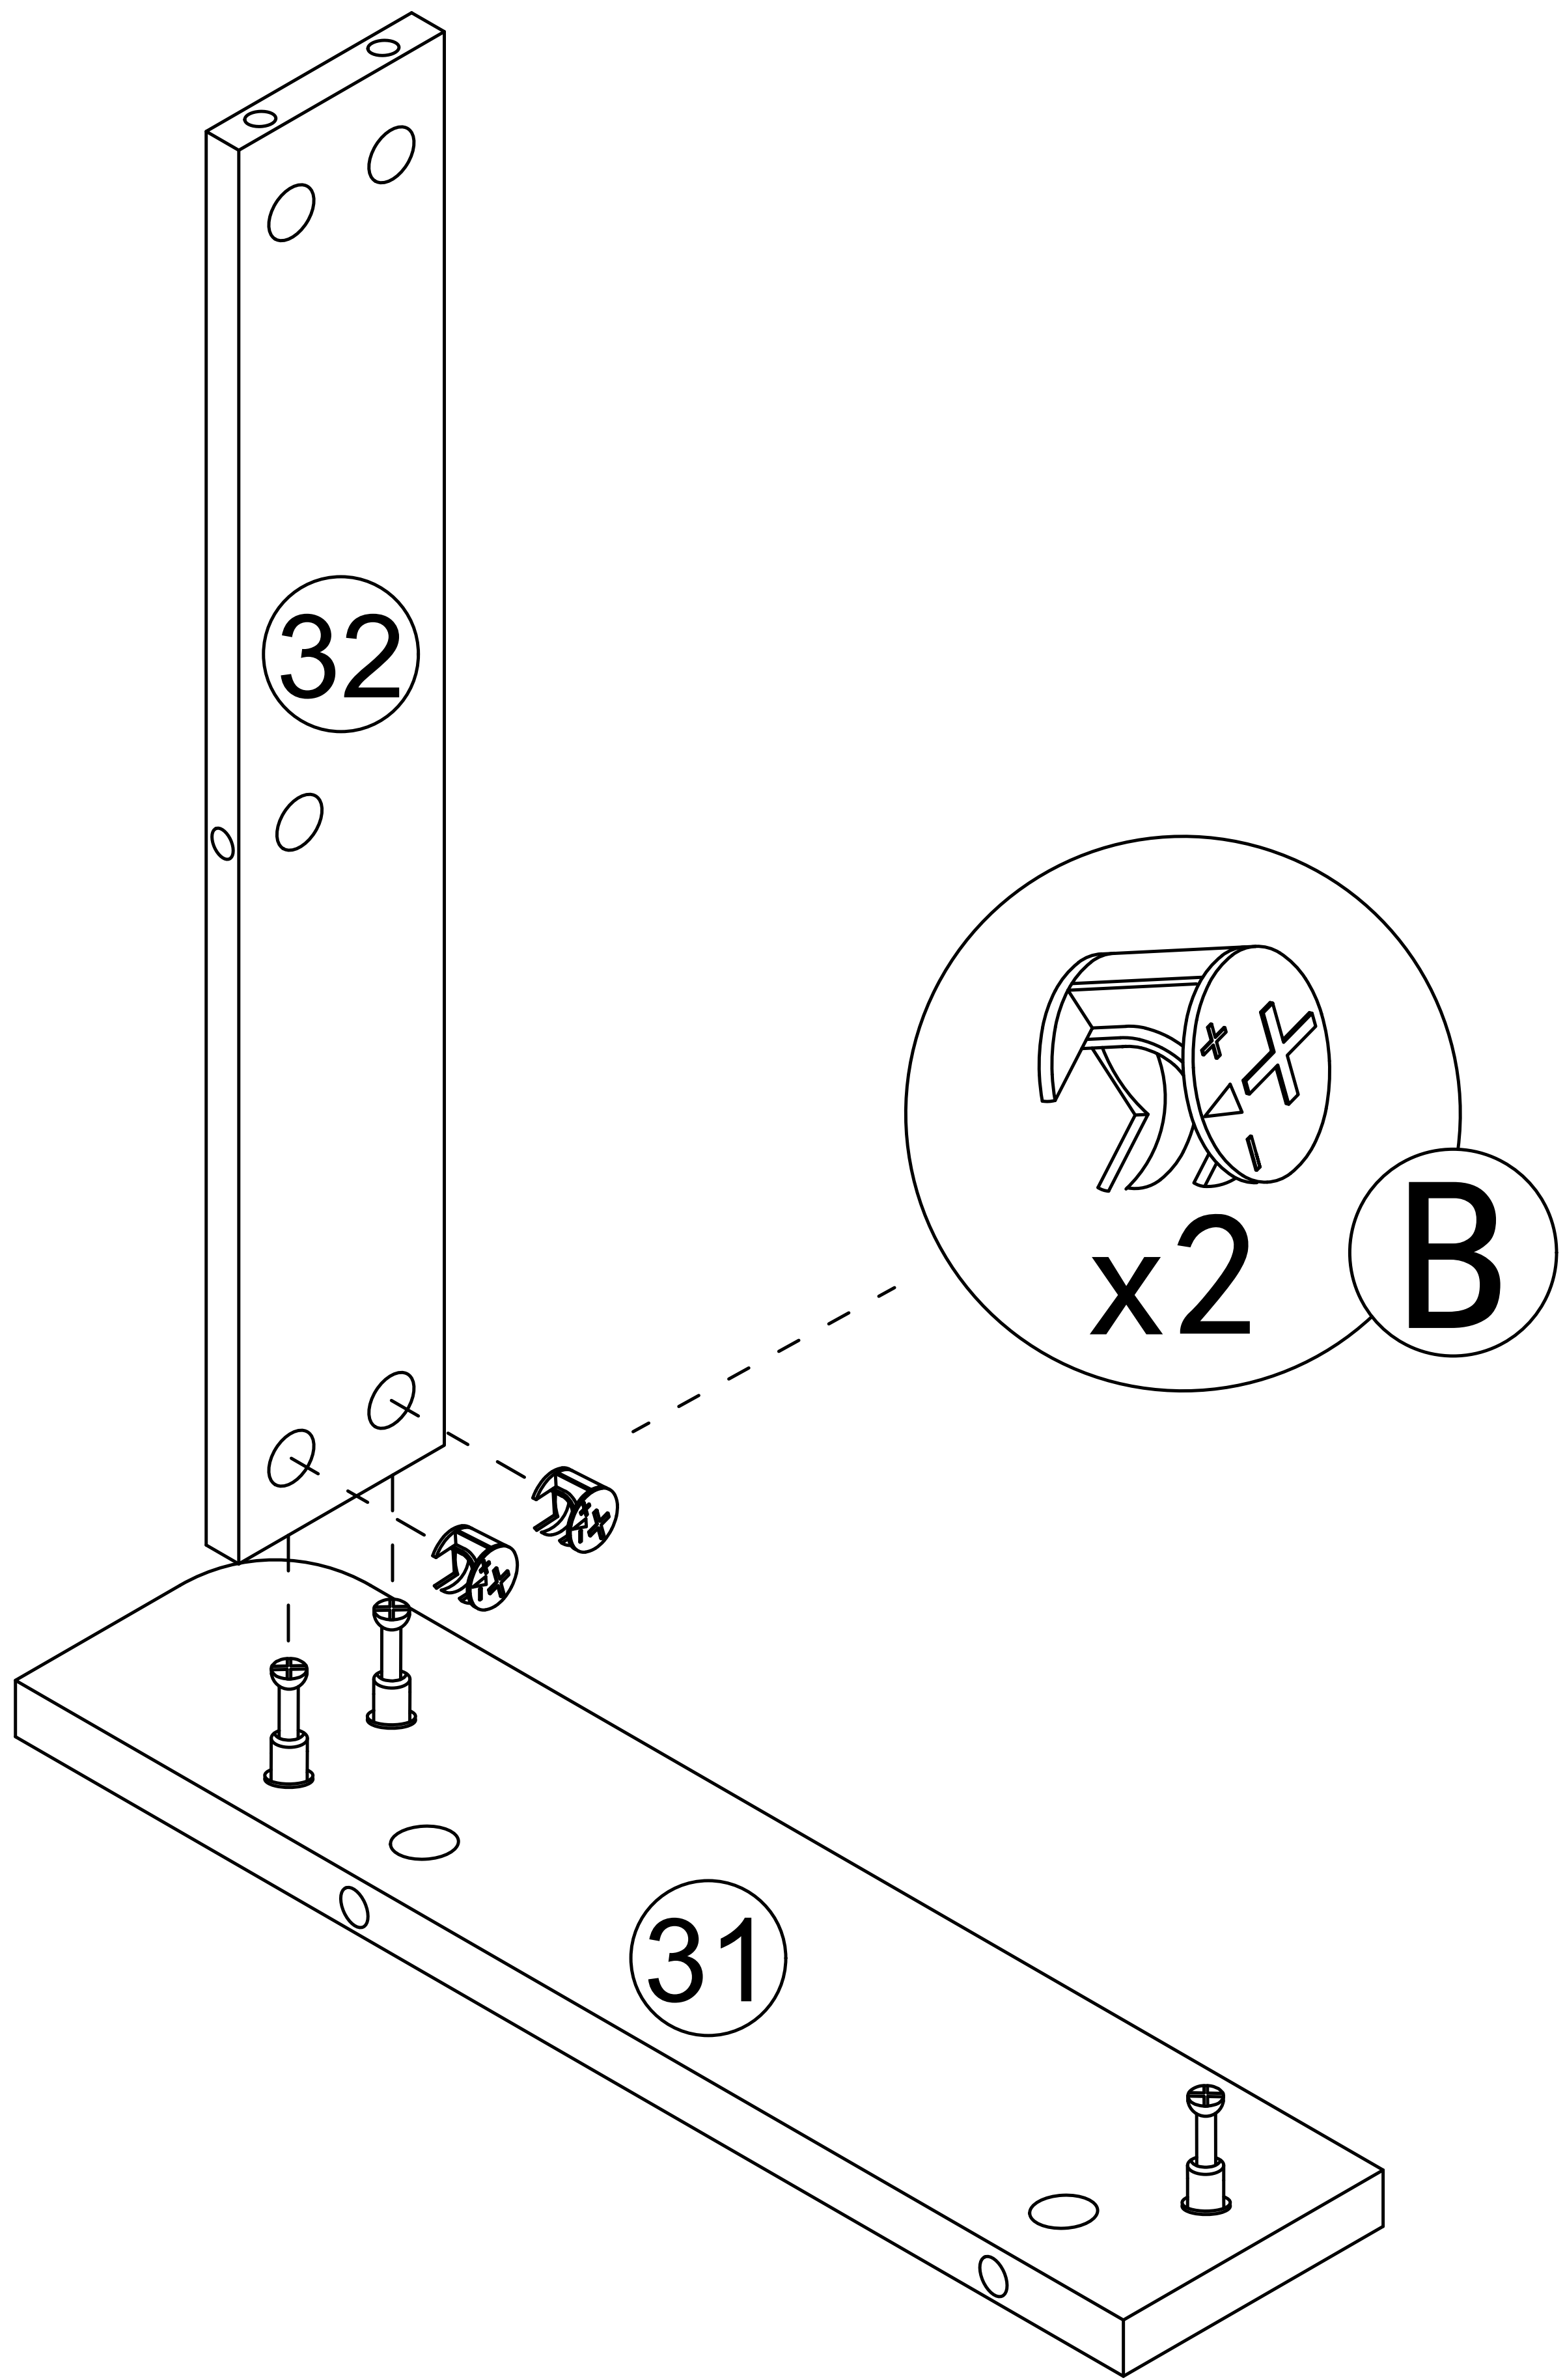


Step 77

B


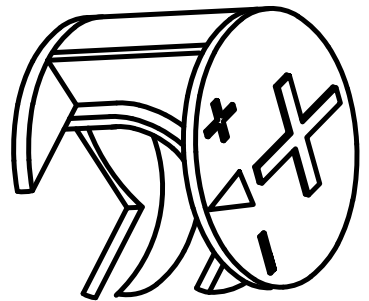


x1

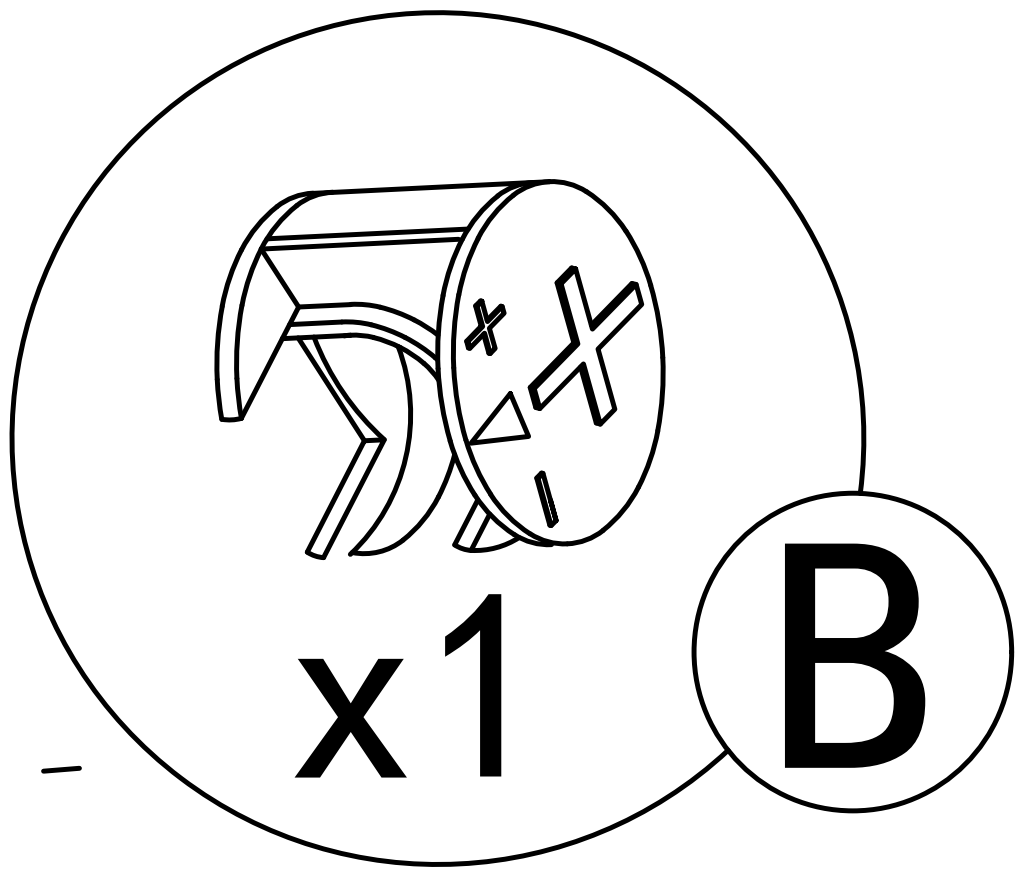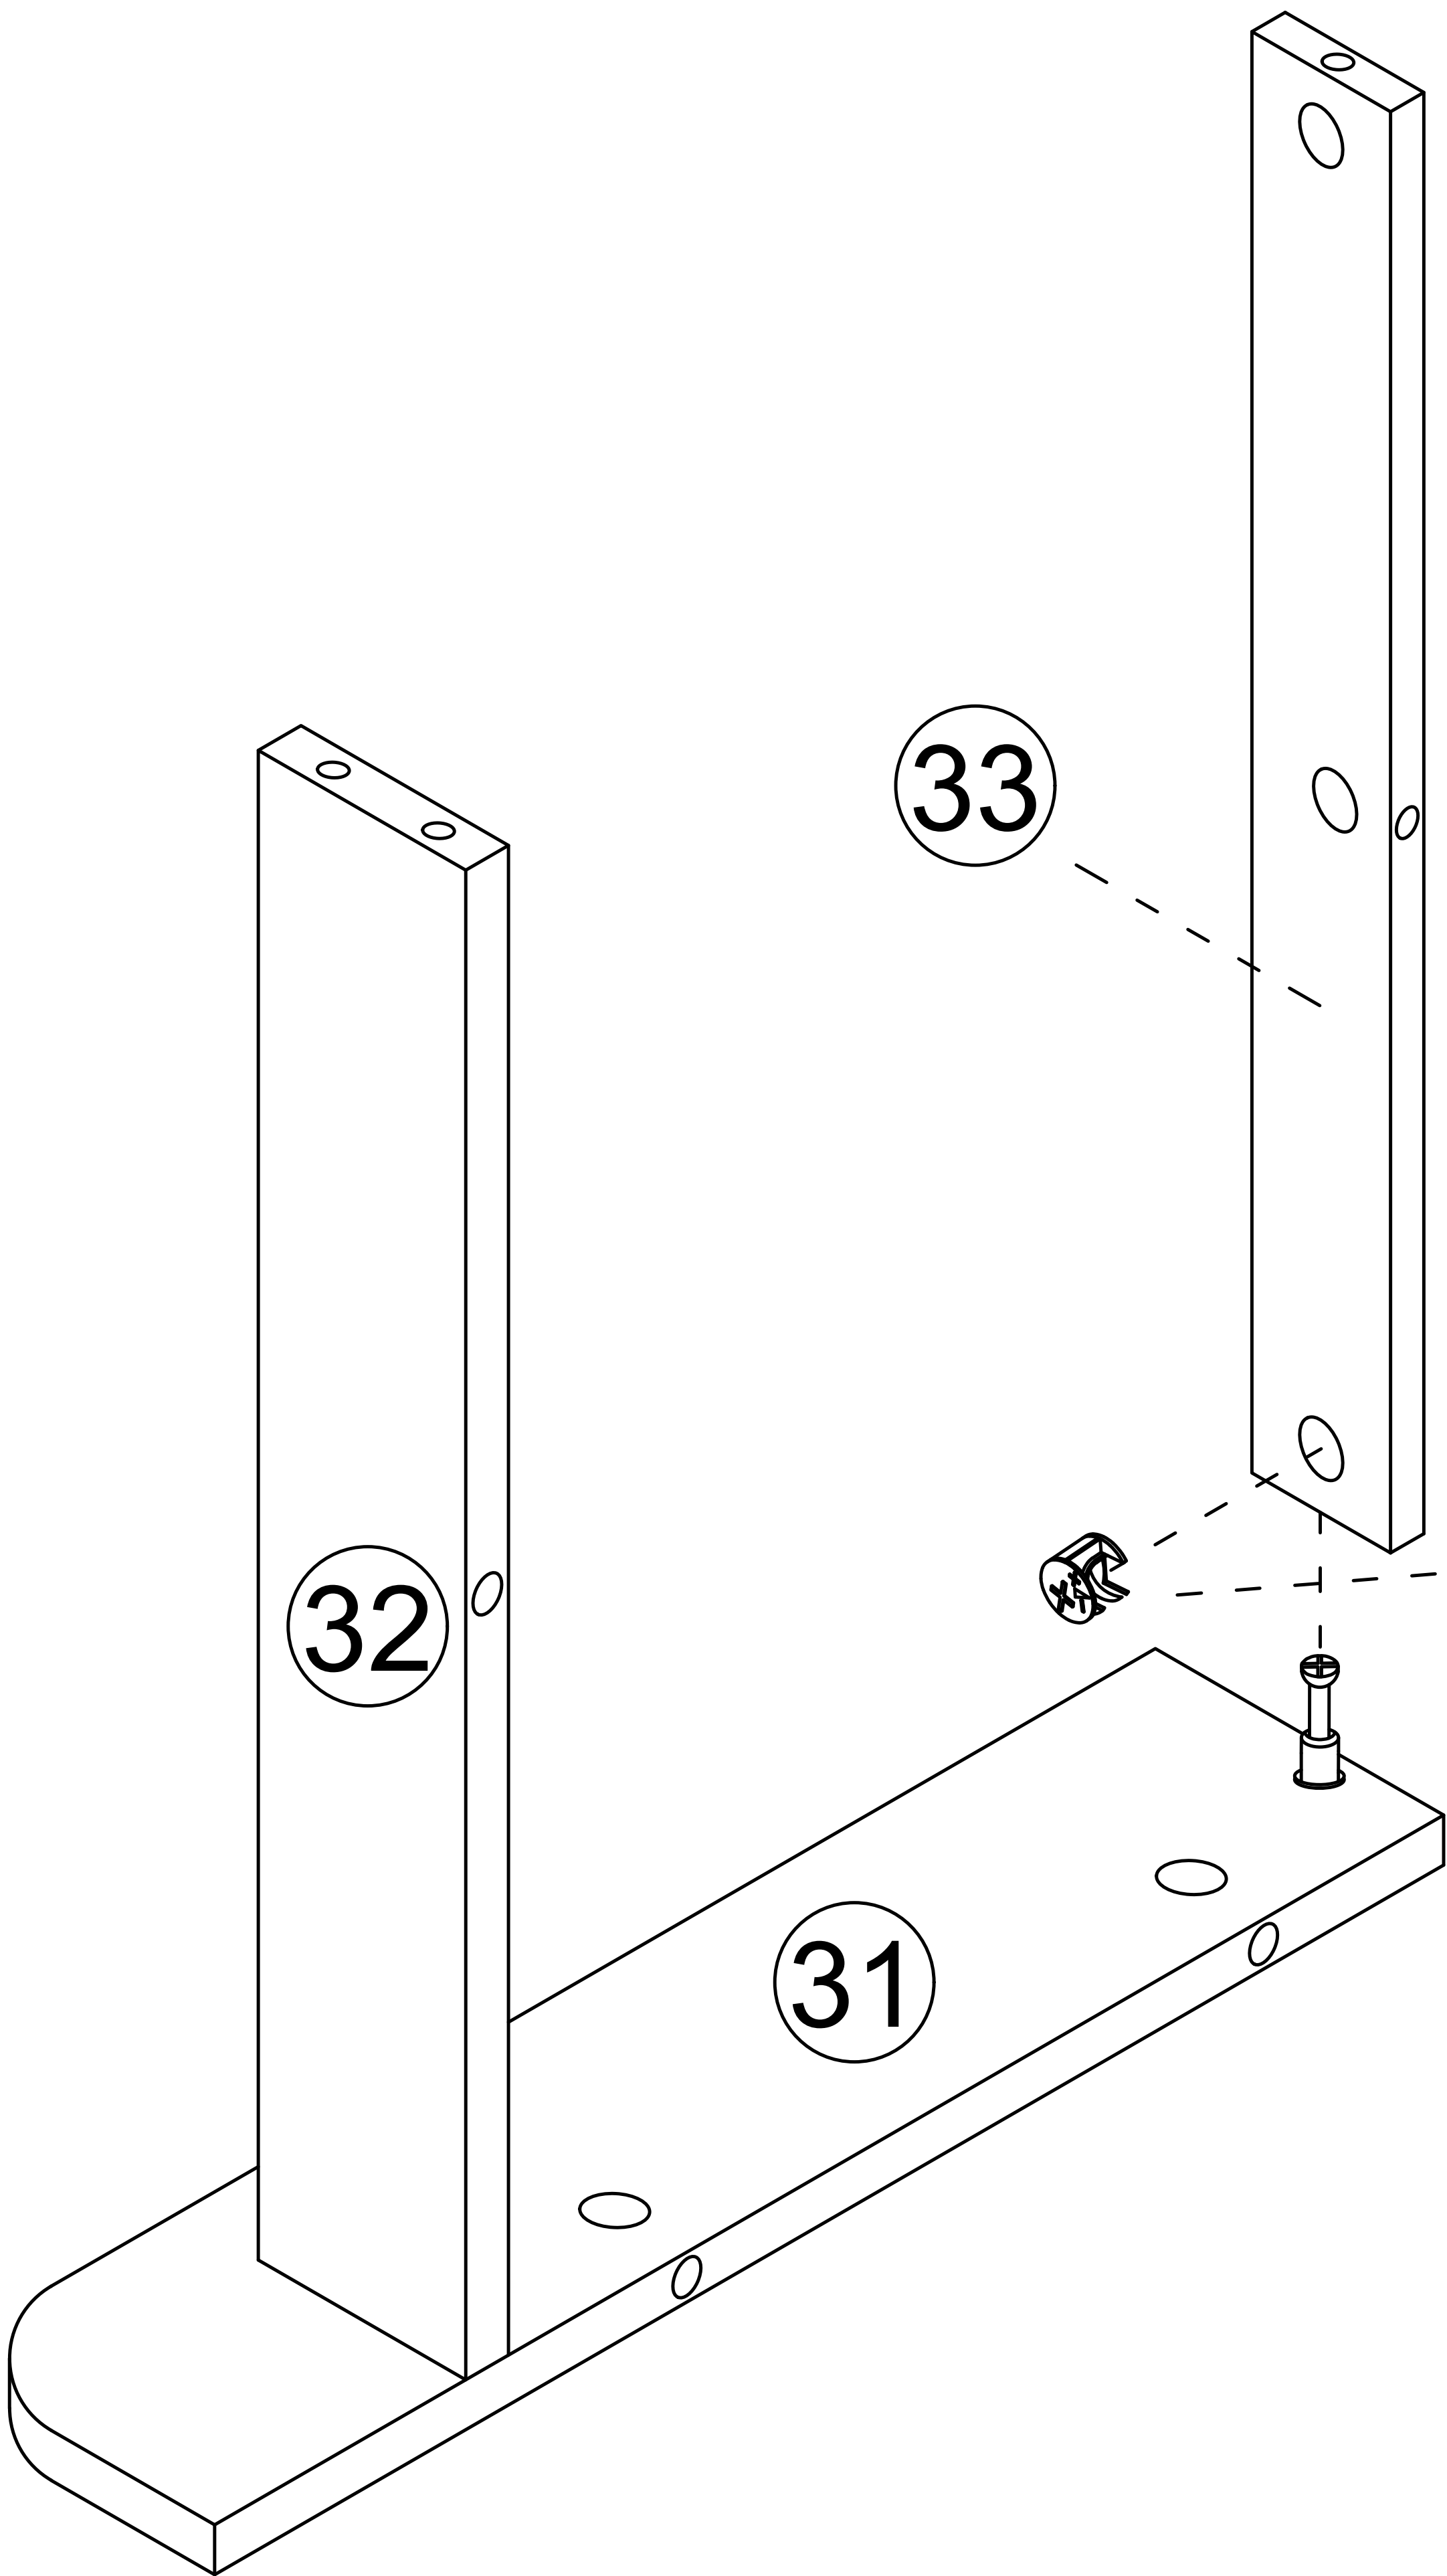


Step 78

A

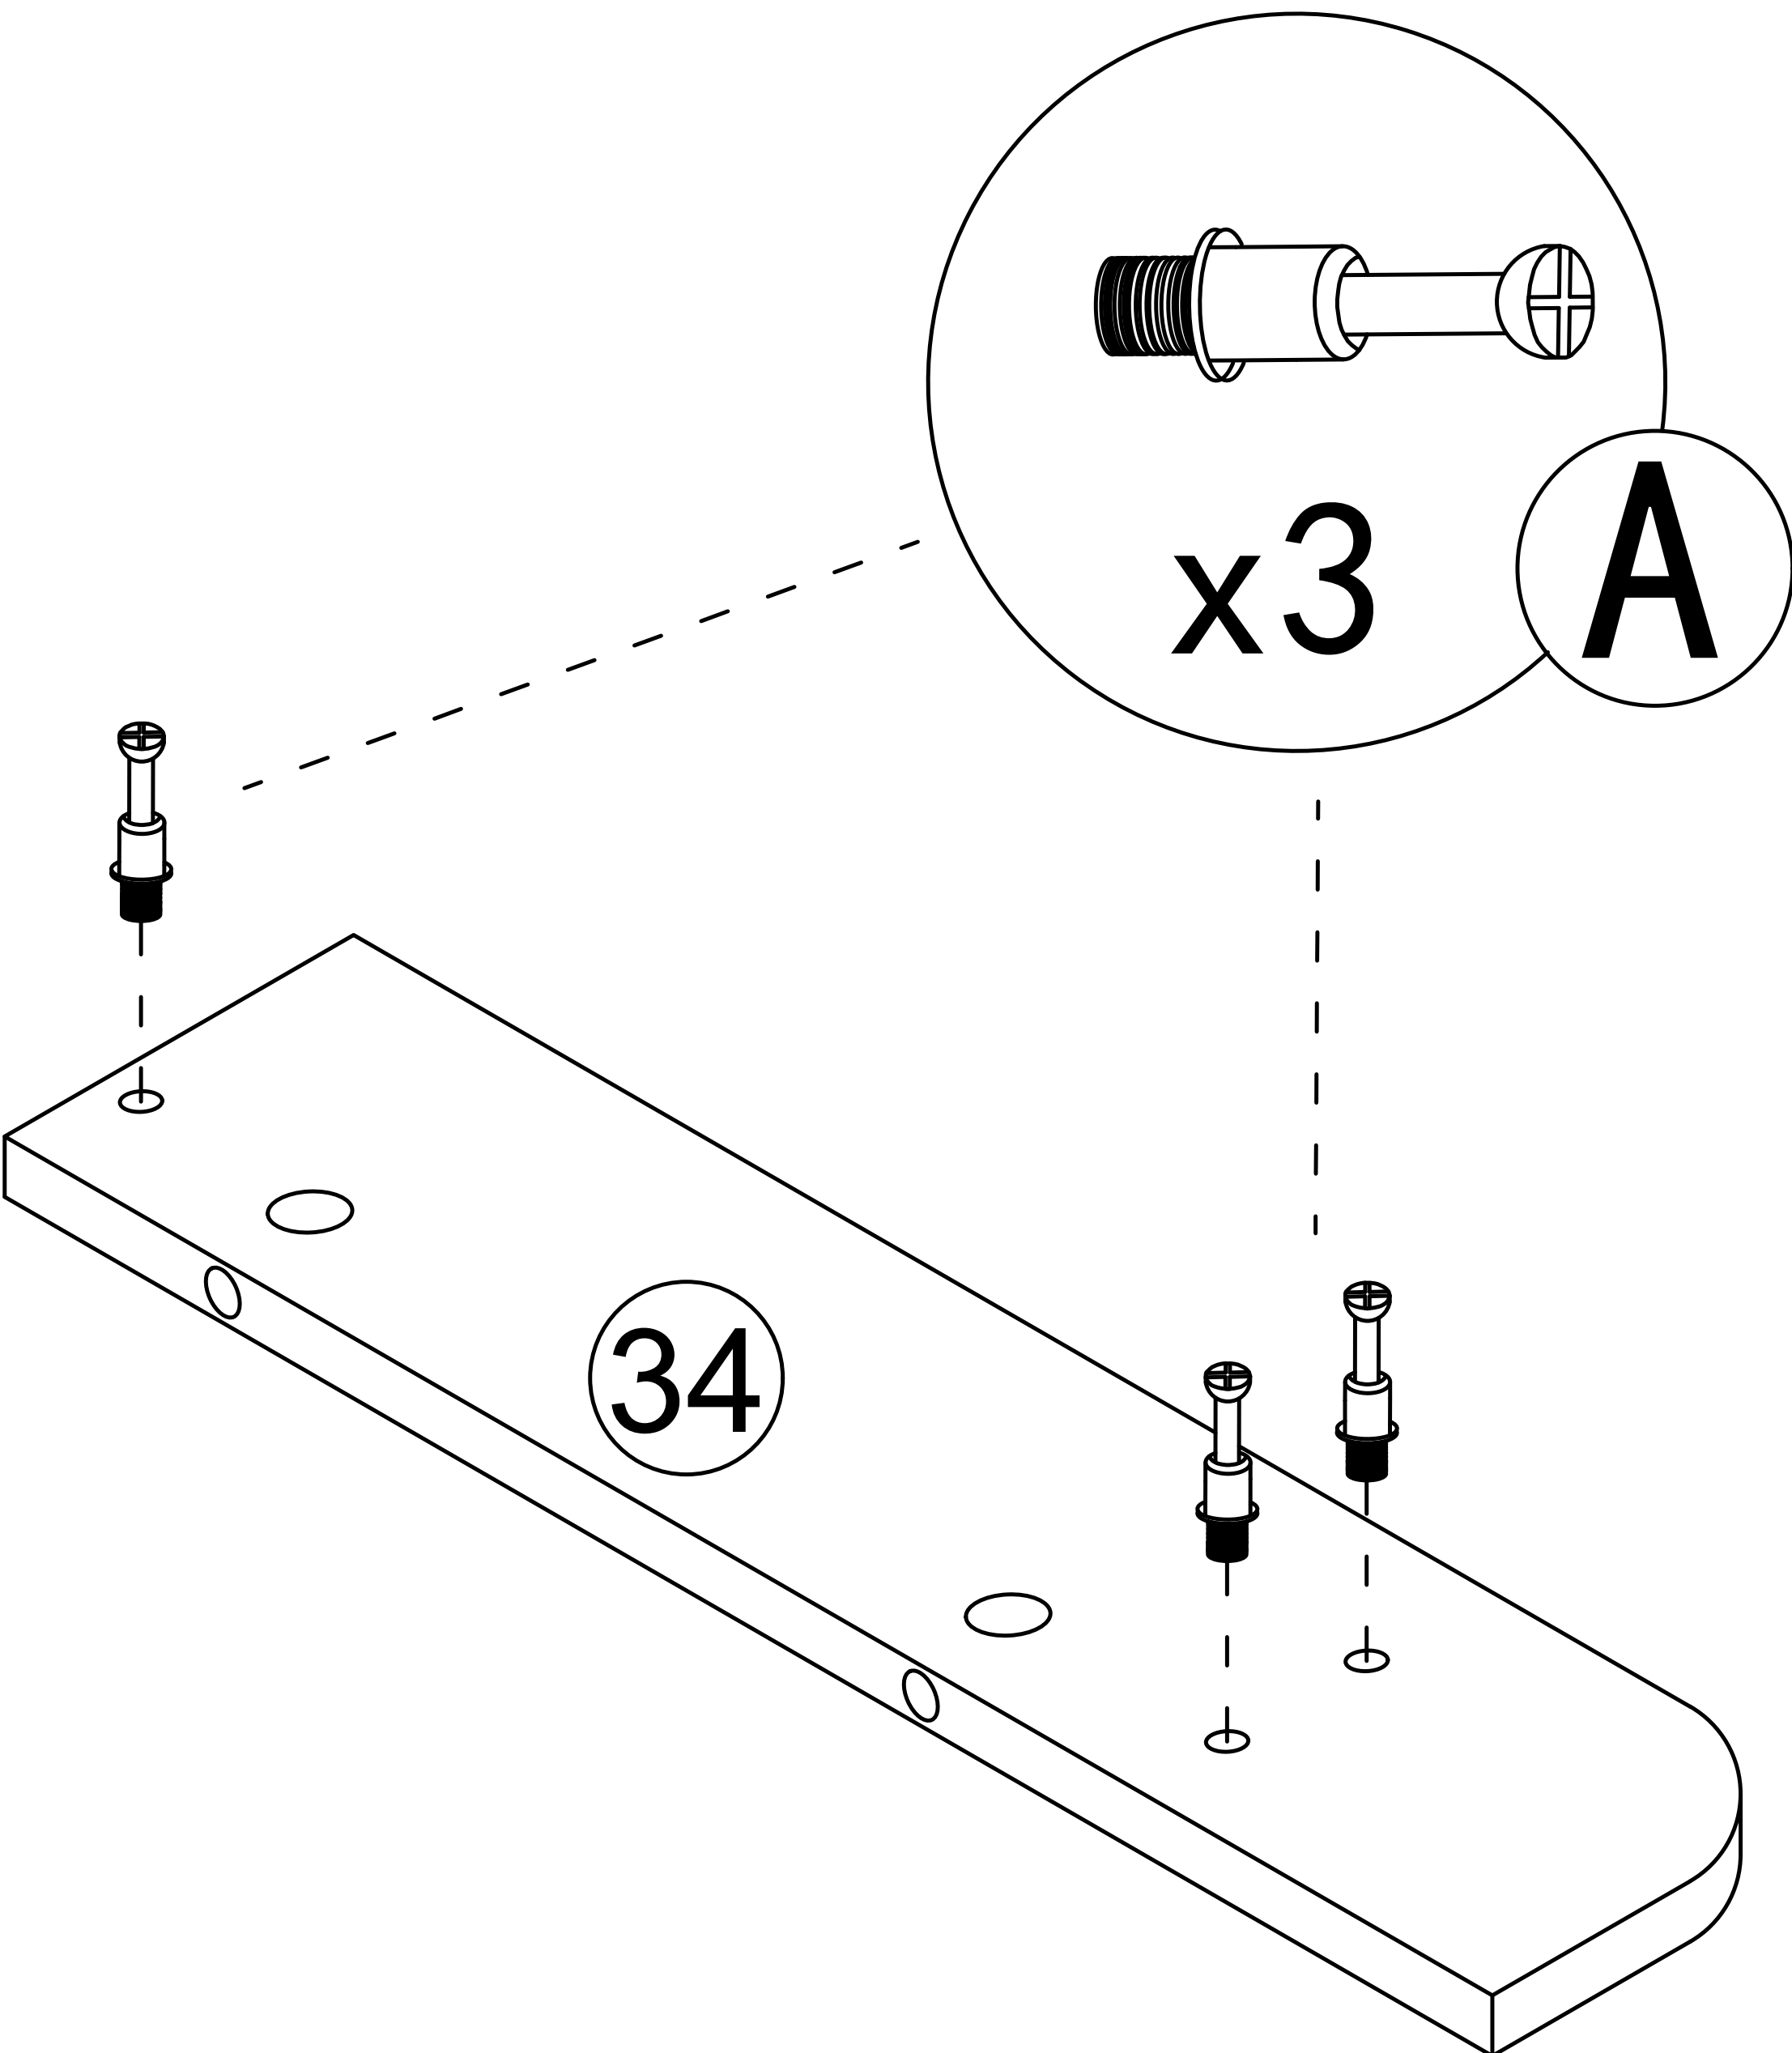
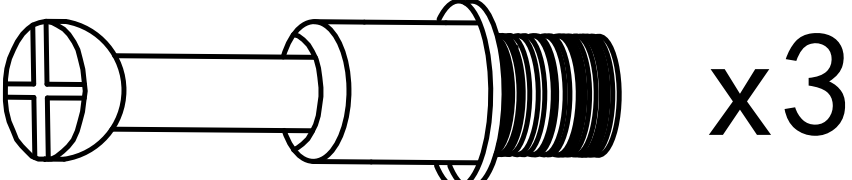


Step 79

B

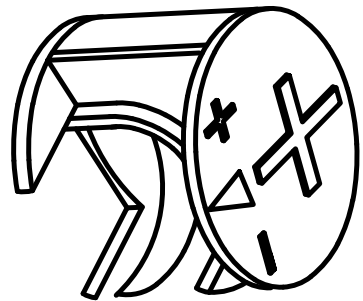


x3

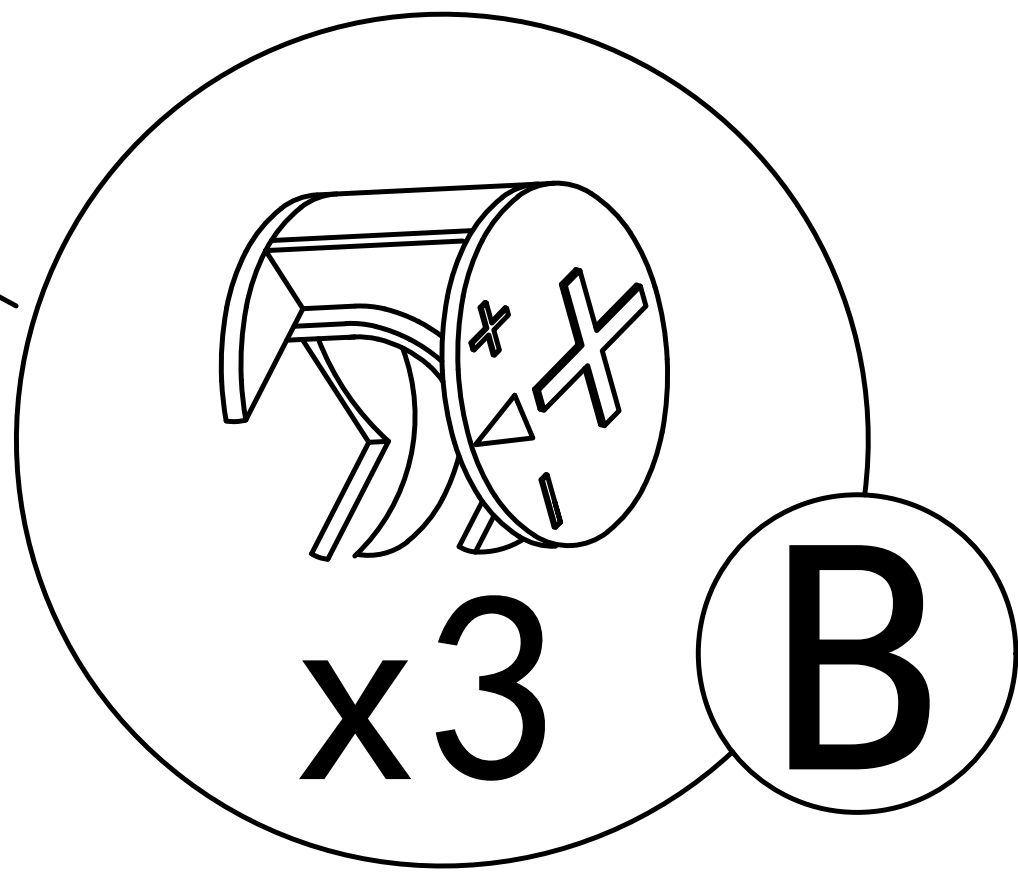
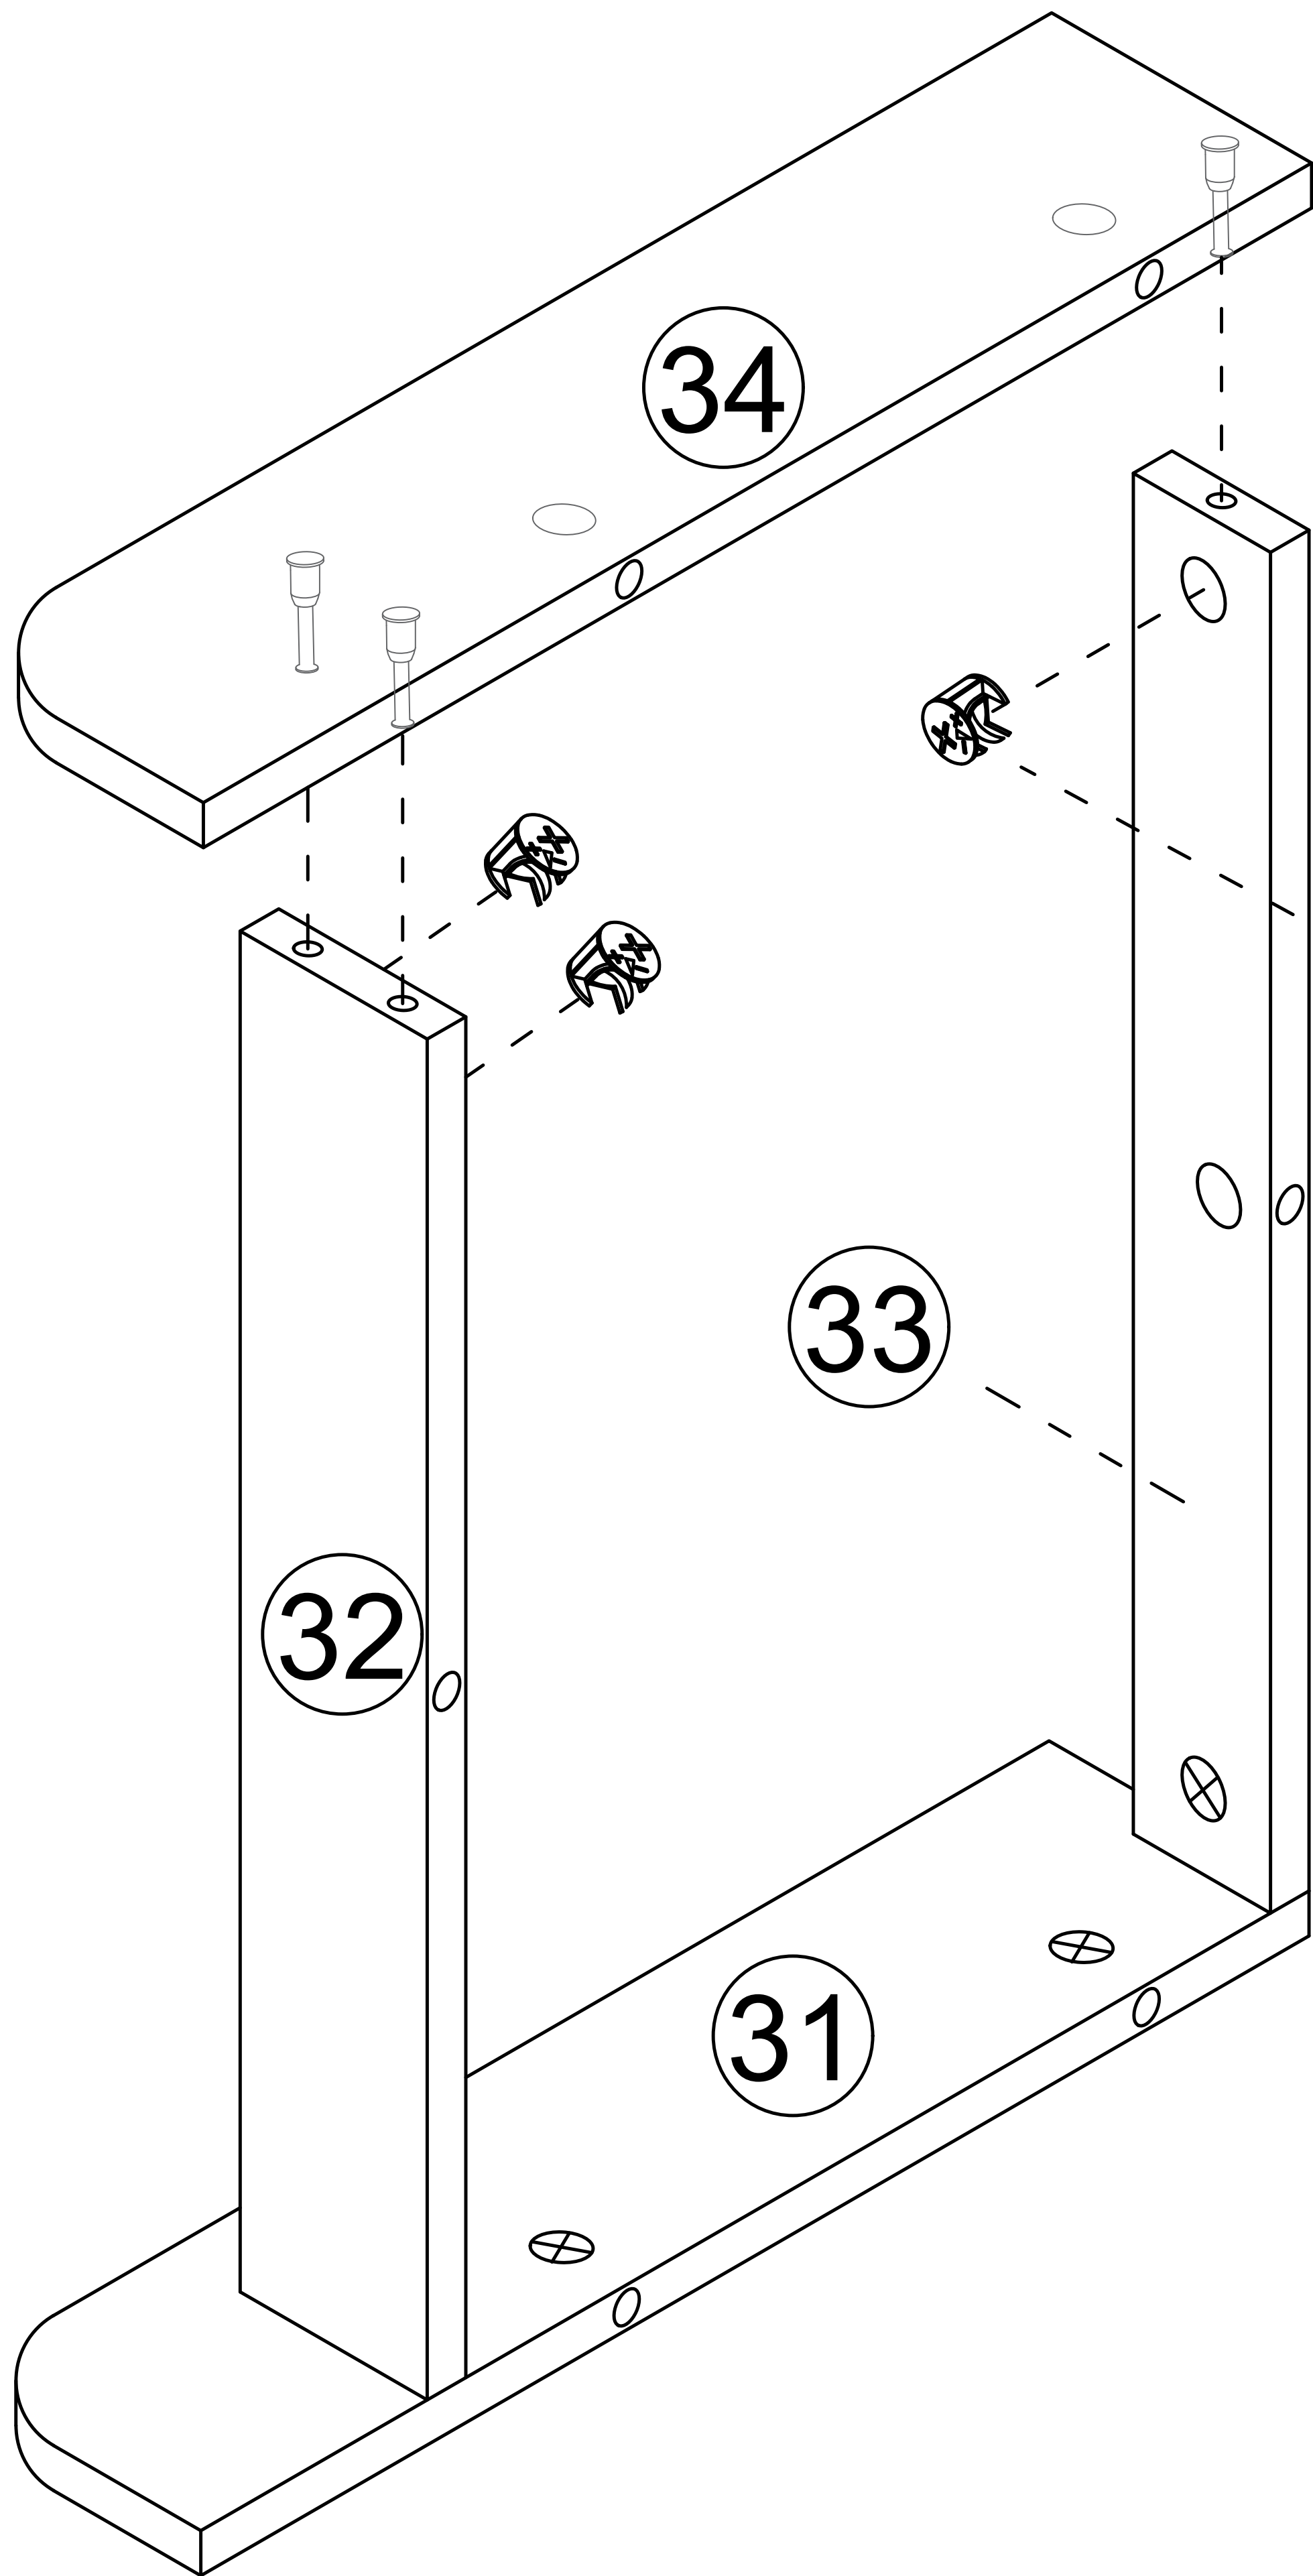


Step 80


B

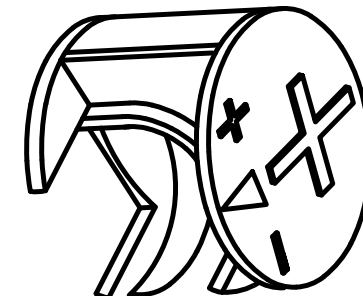


x6

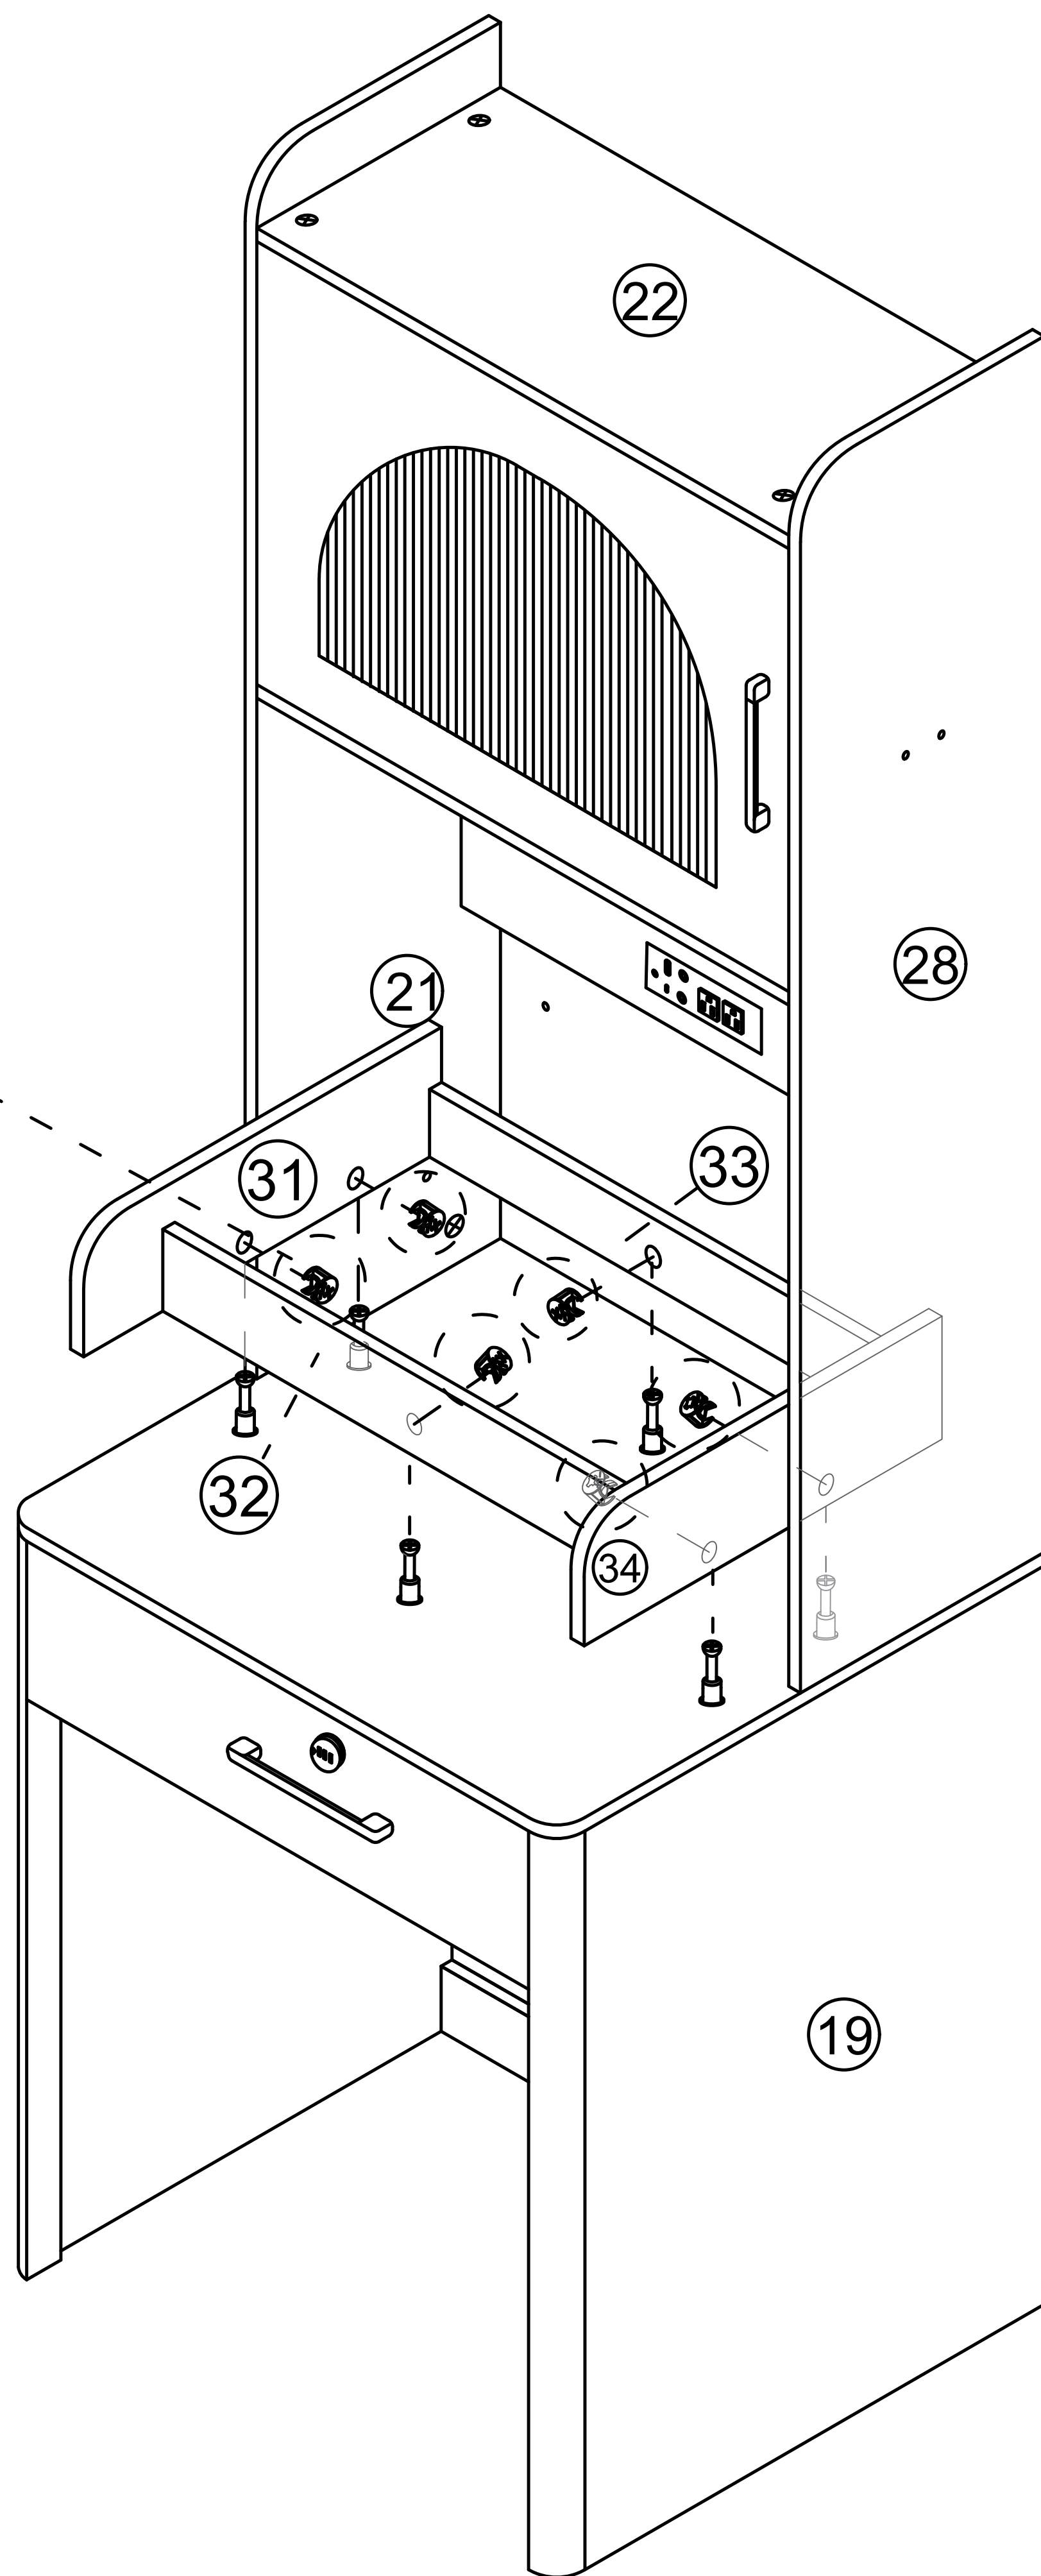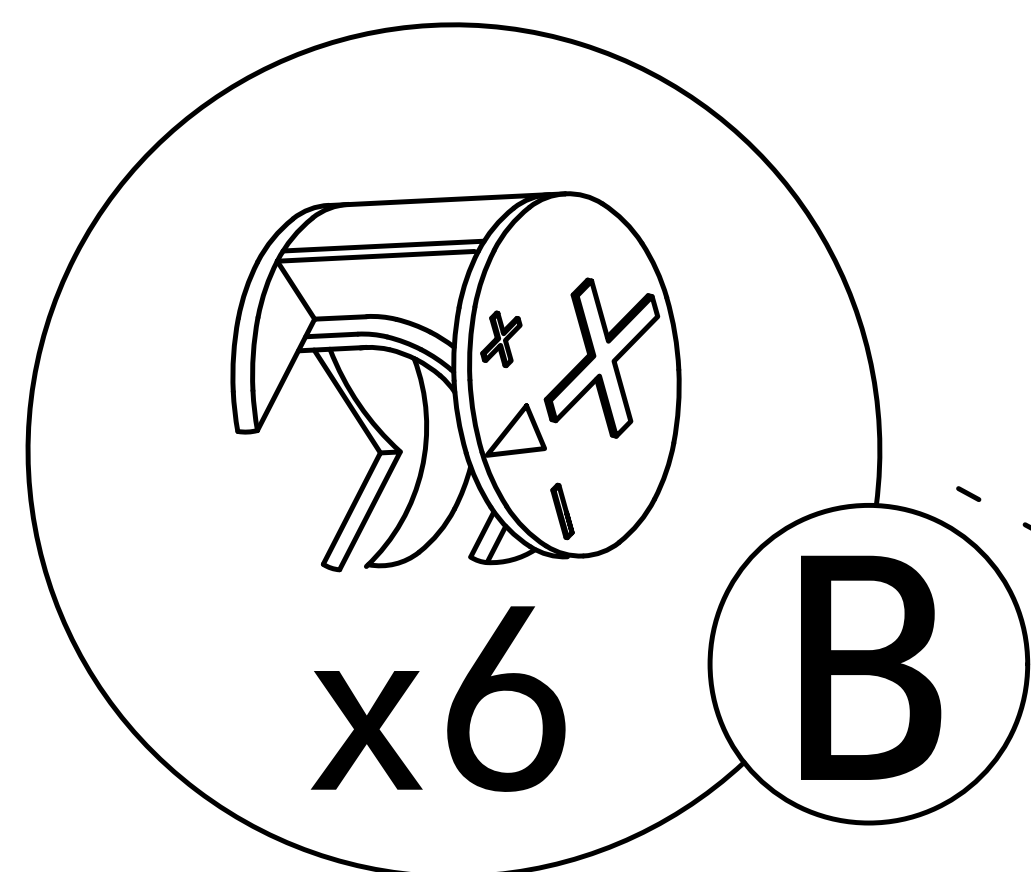

Step 81

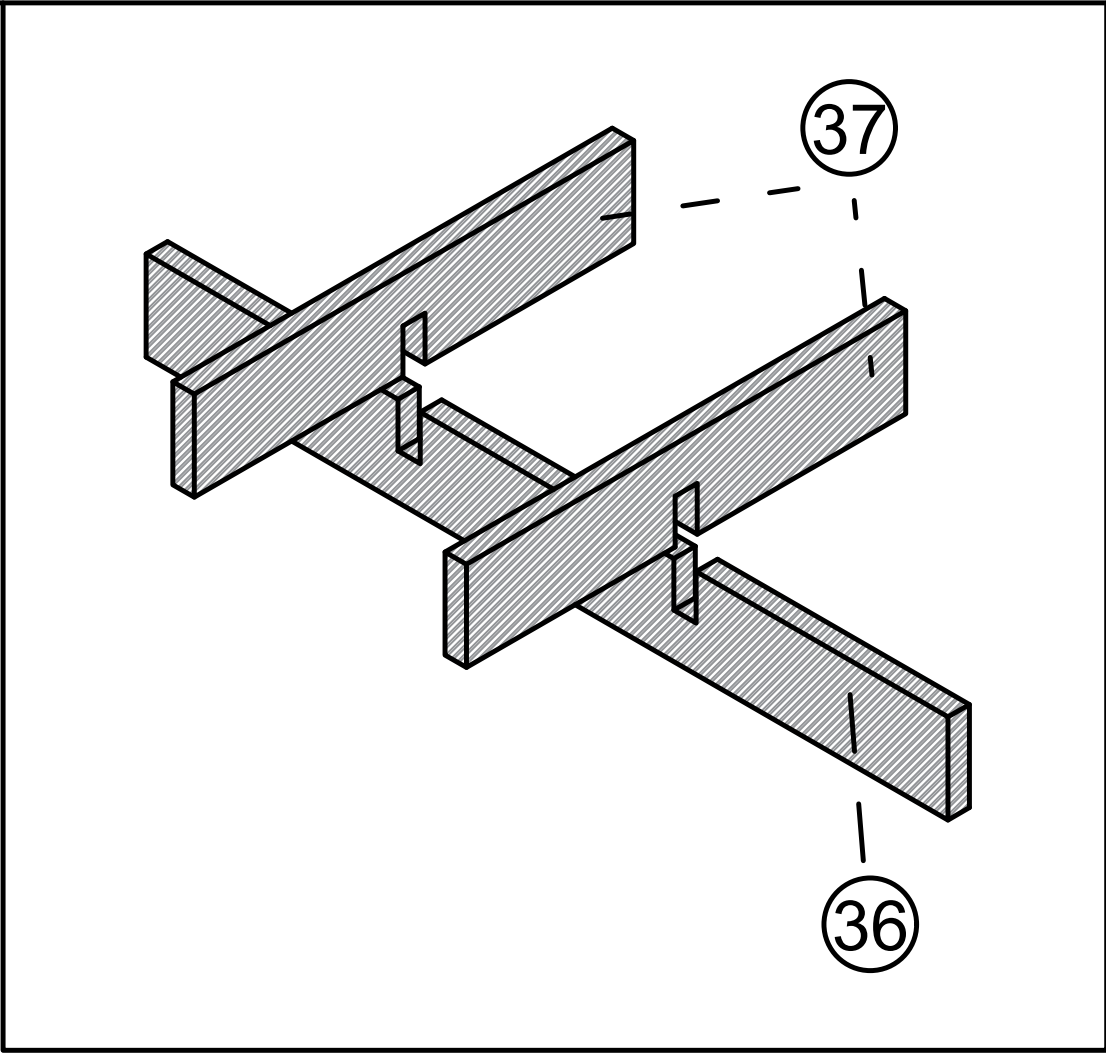




Insert board number 37 onto board number 36

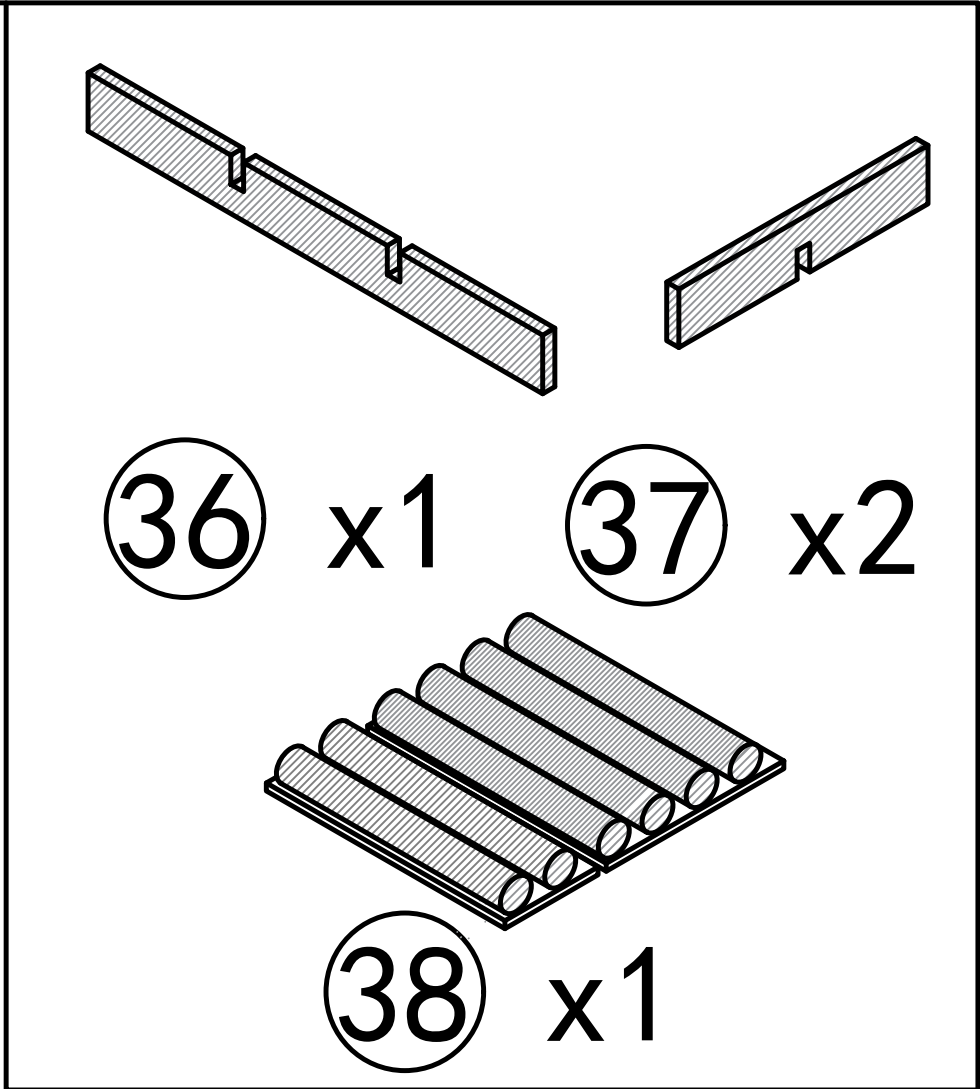


Step 1

Step 2


Step 3

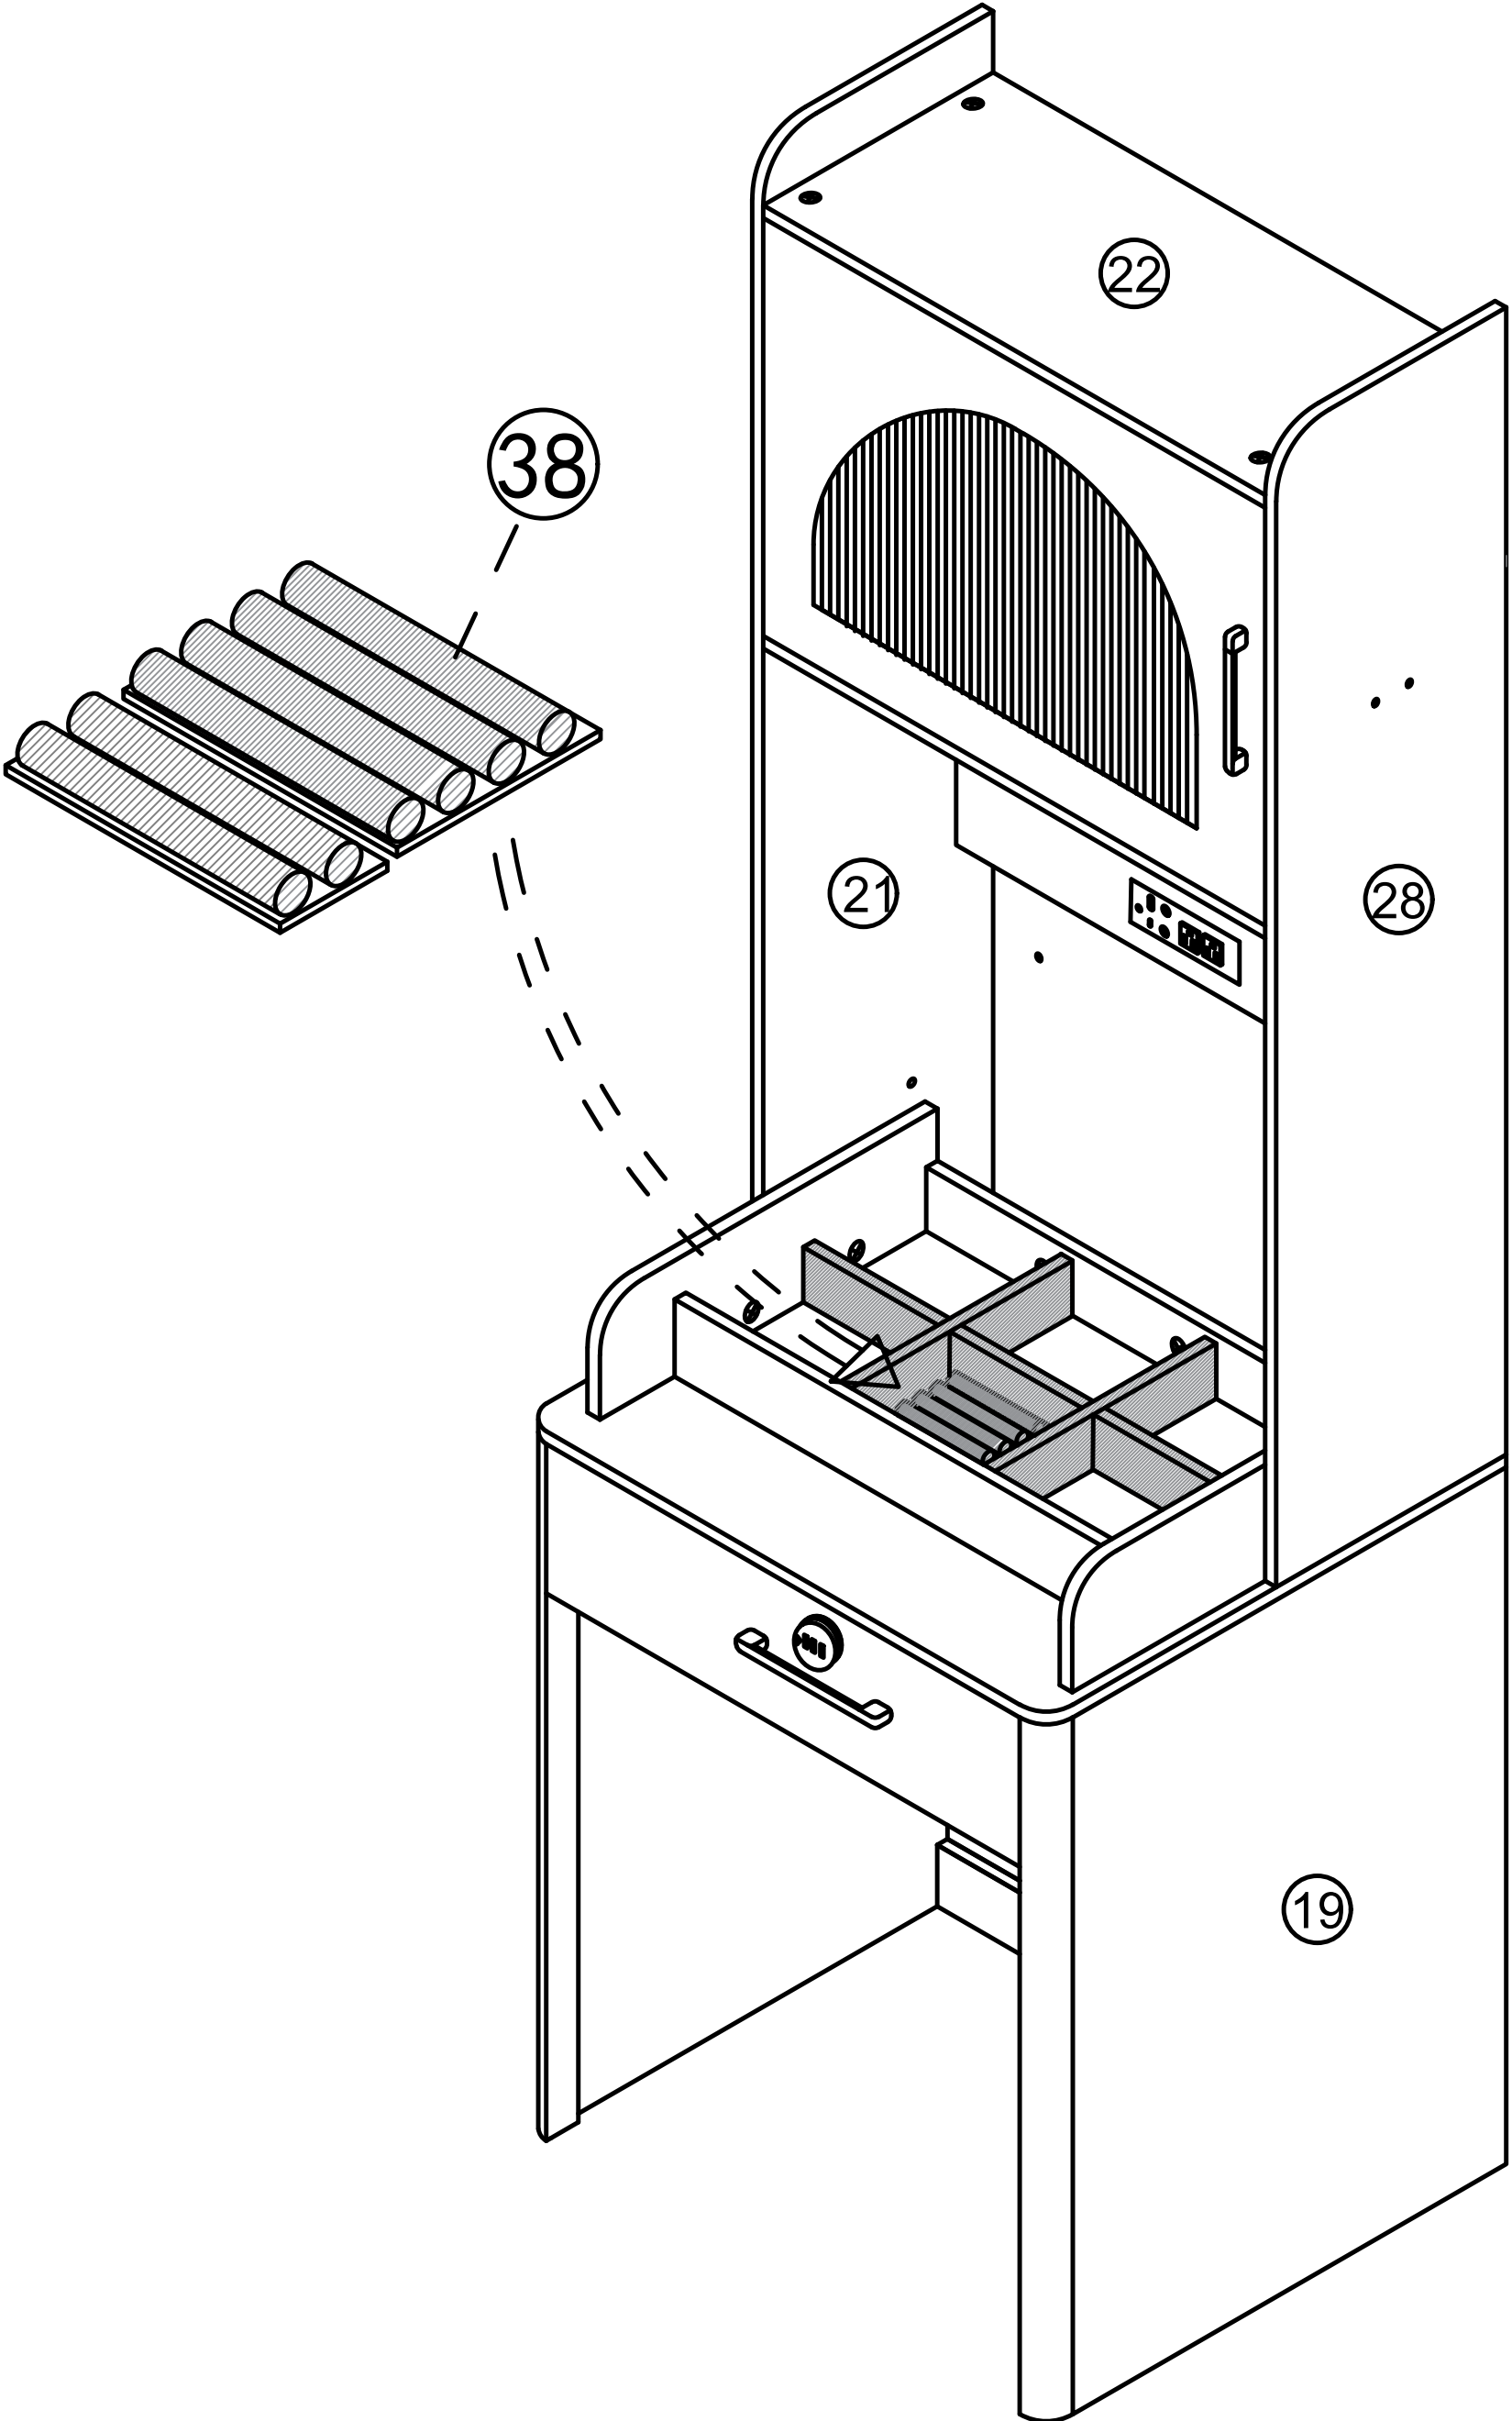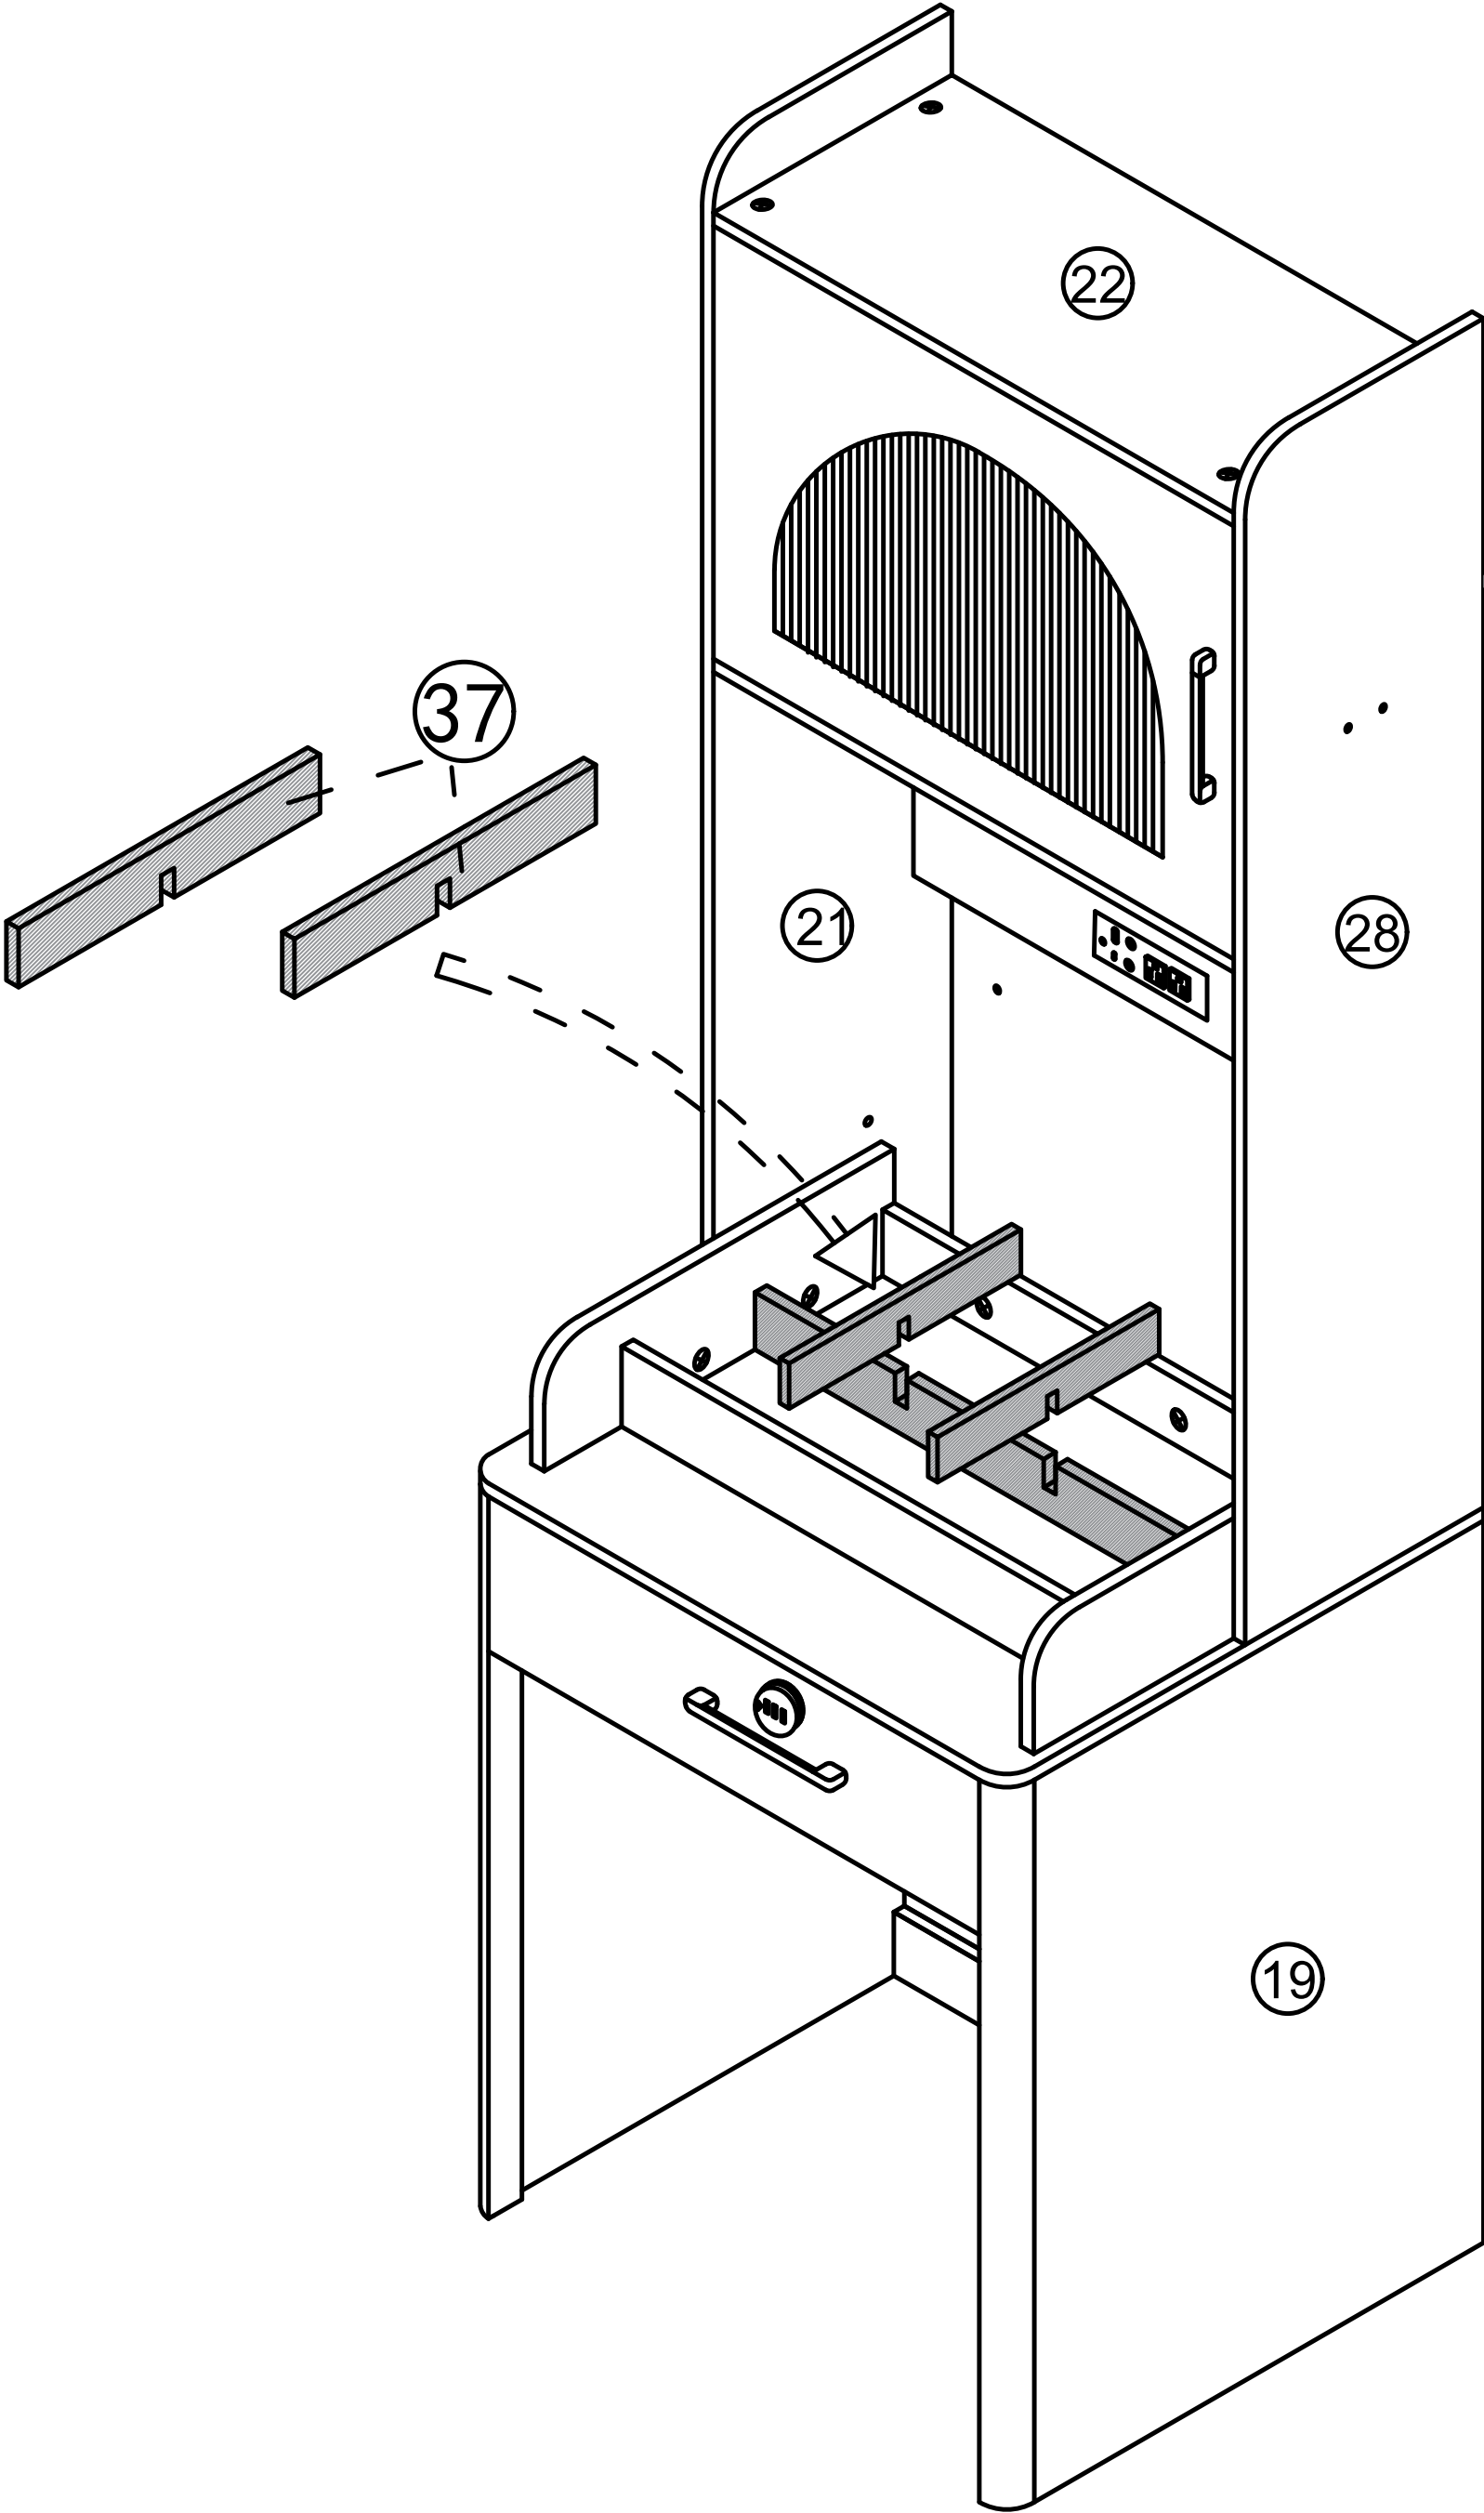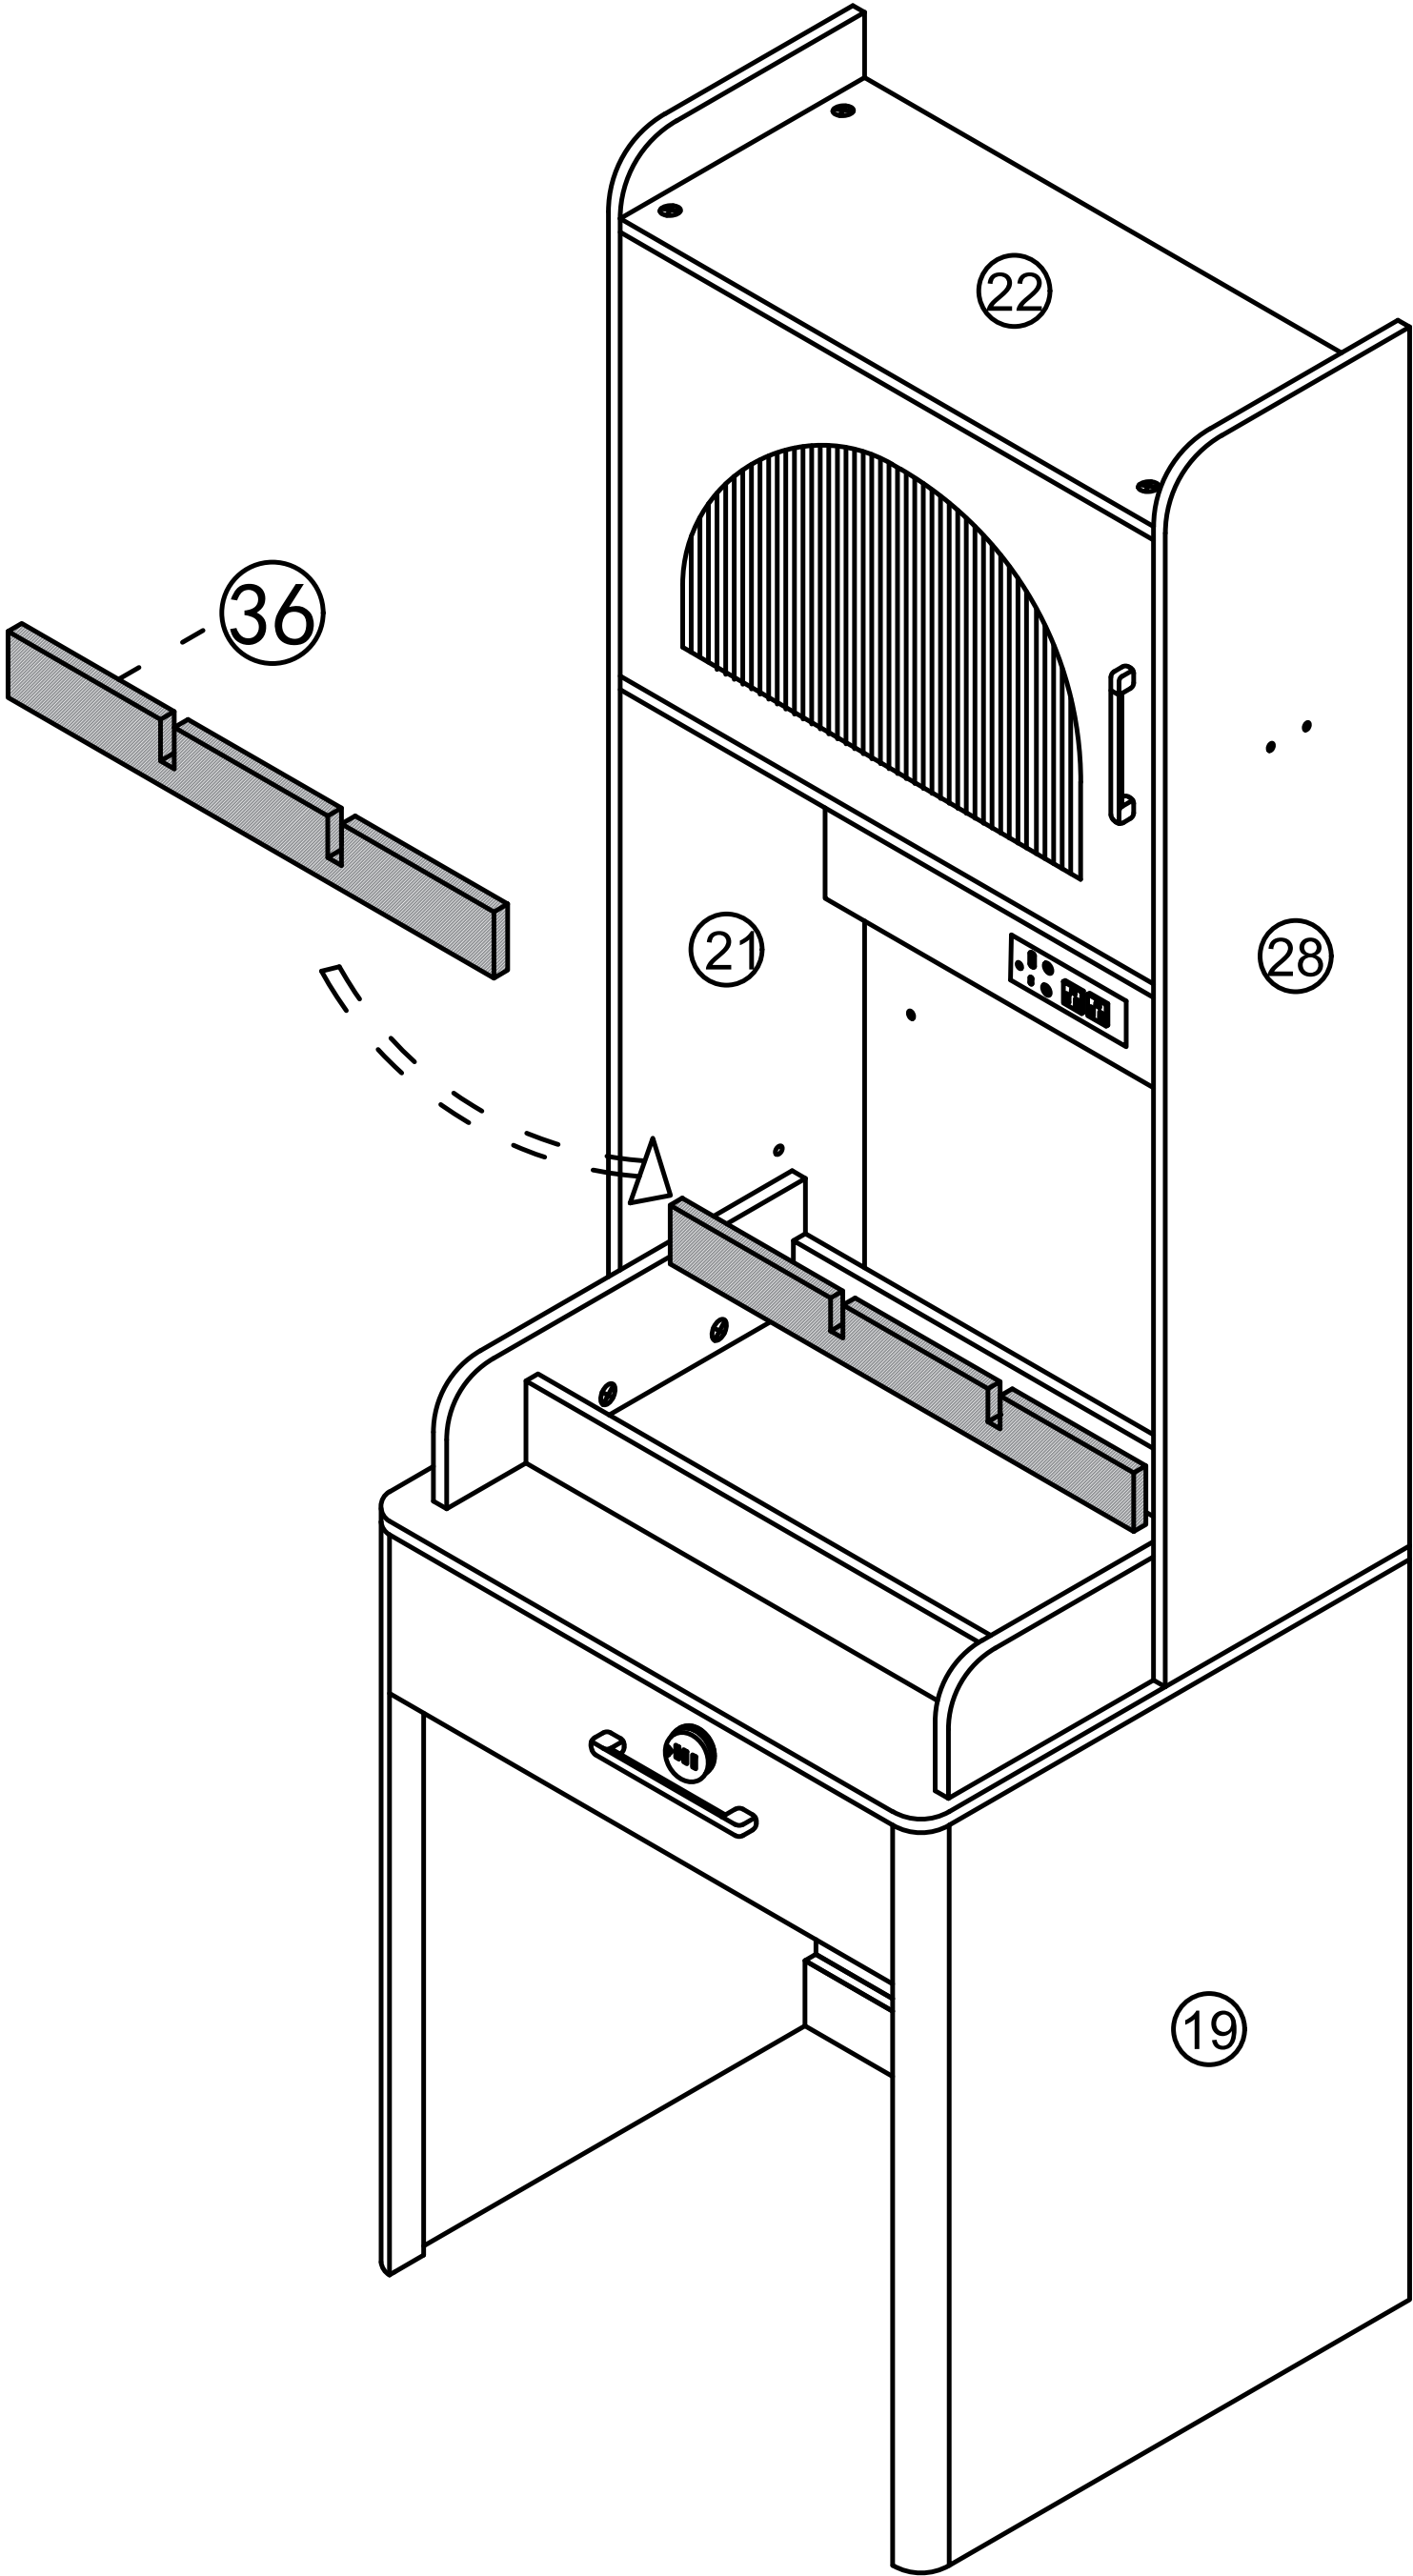

Step 82

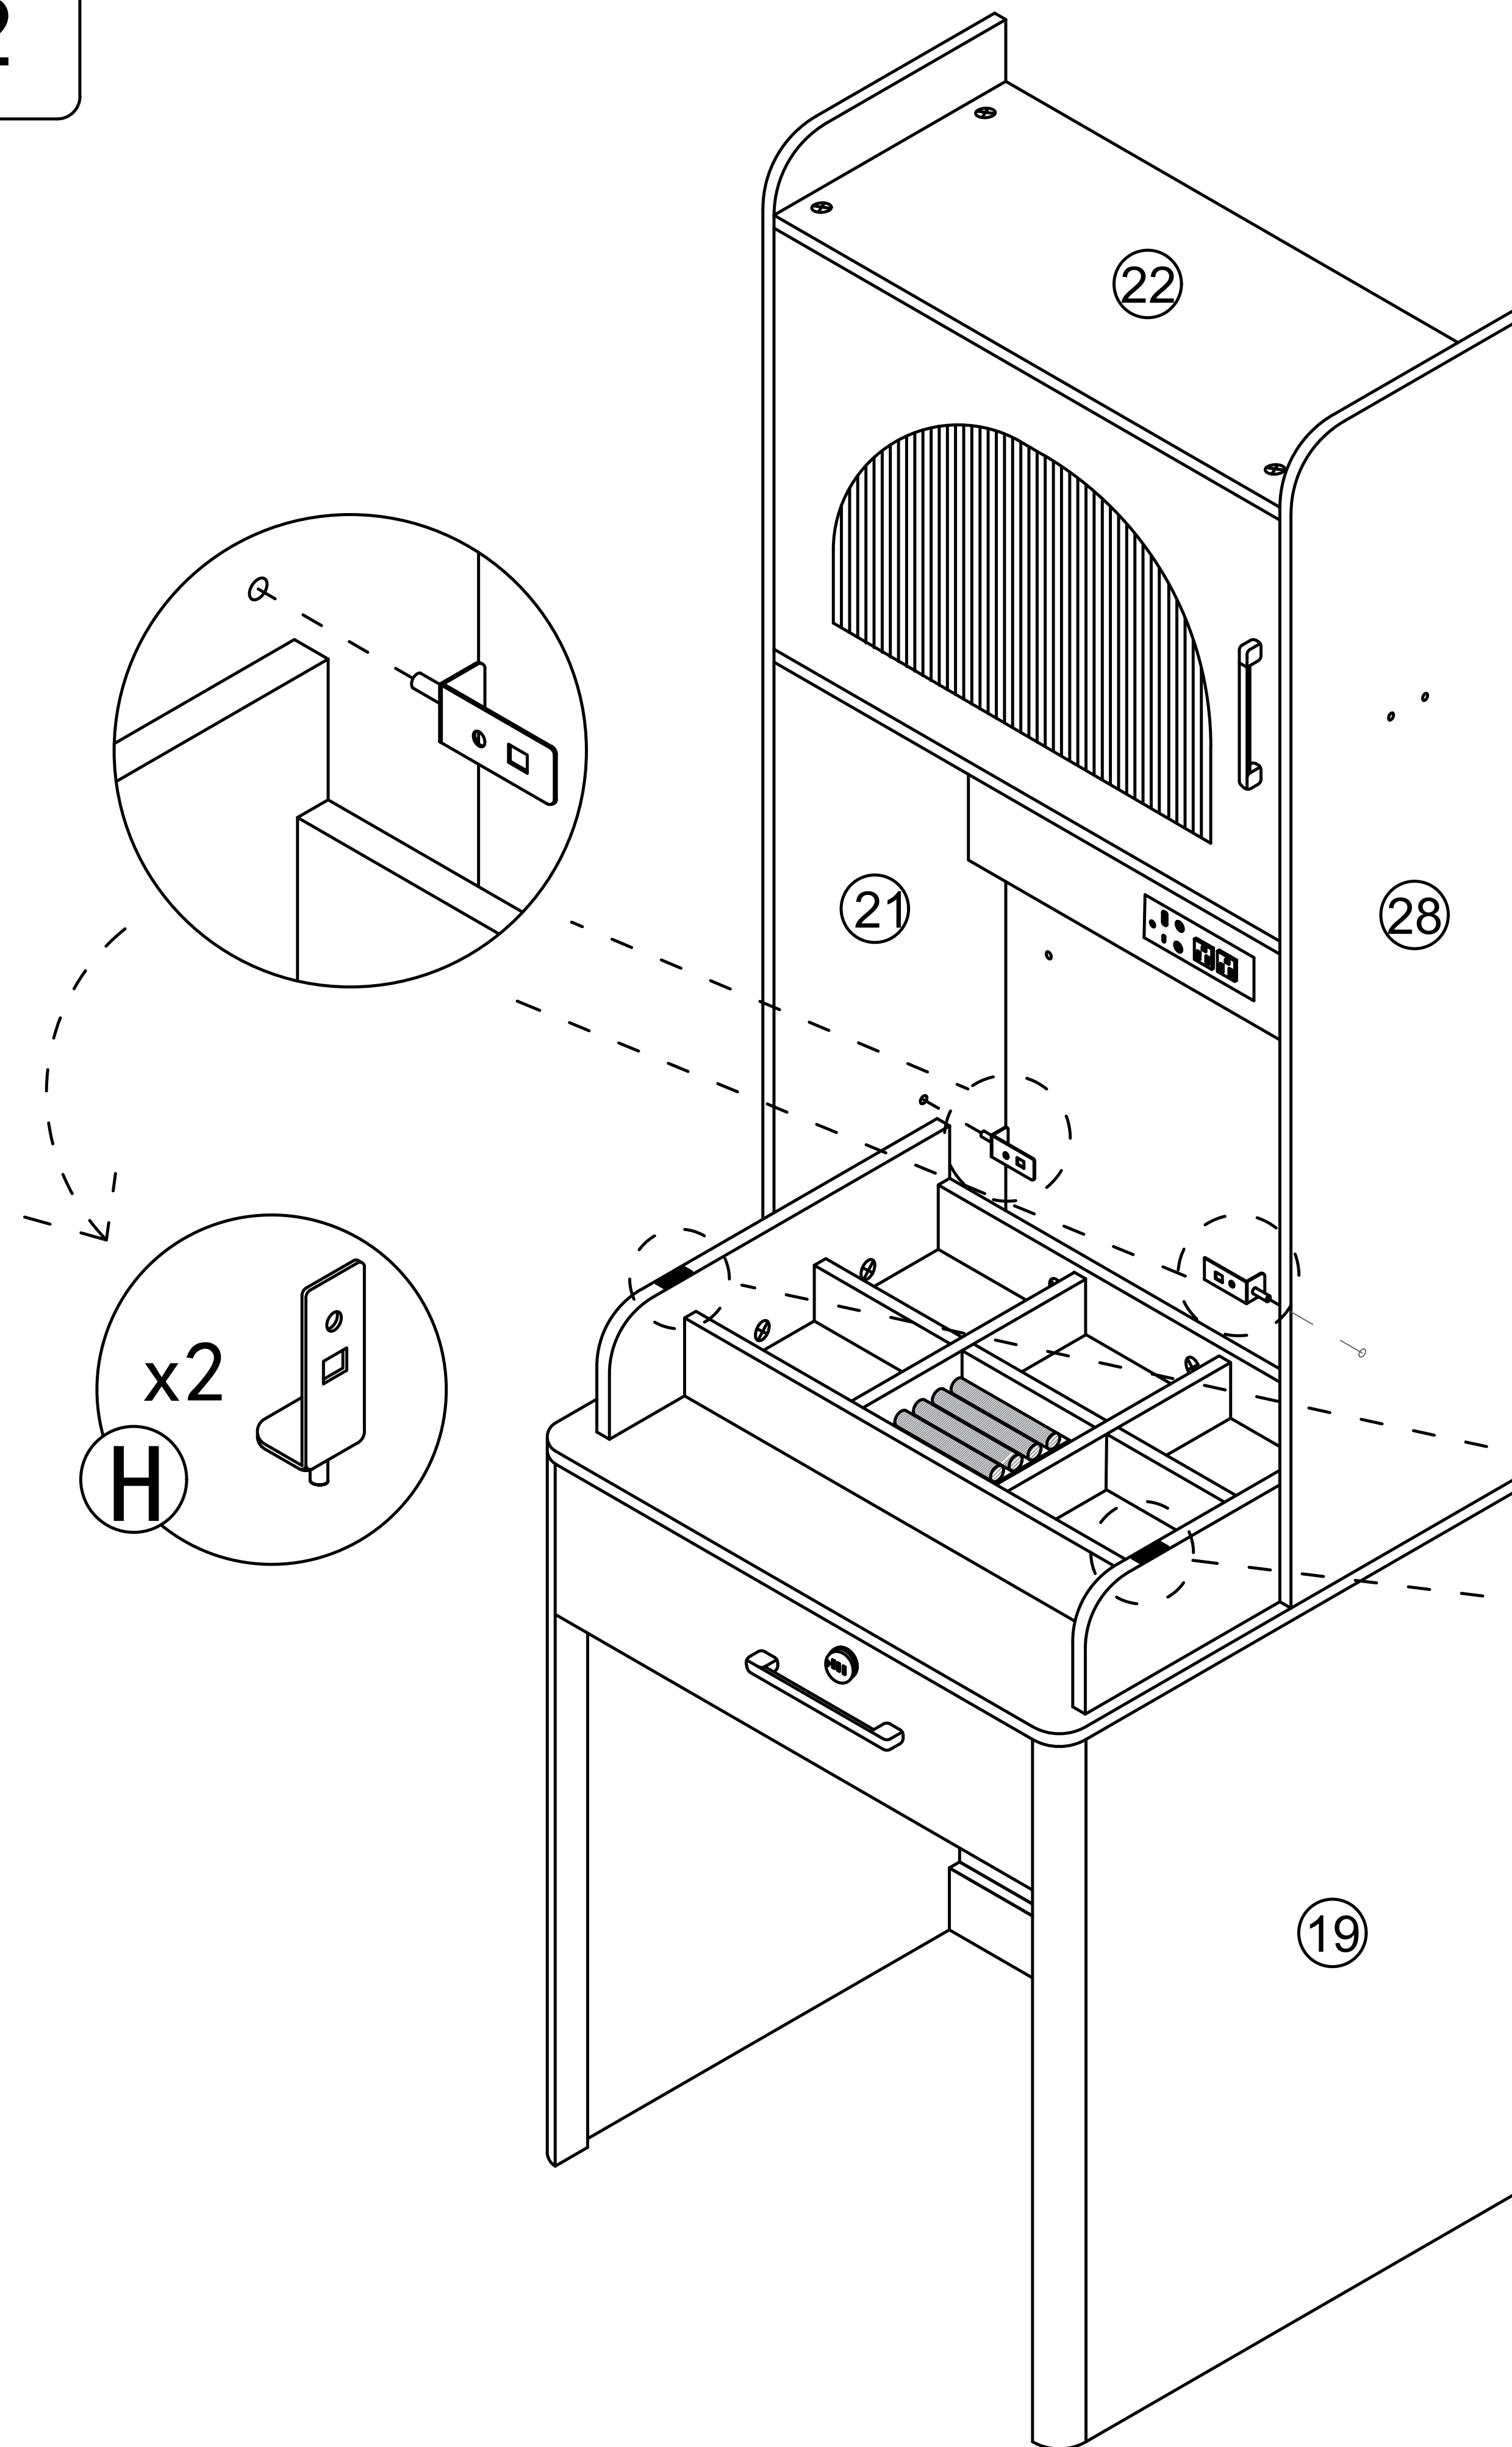


H

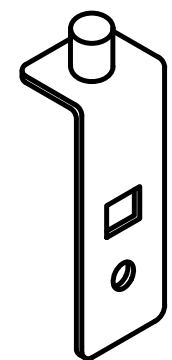

x2


J

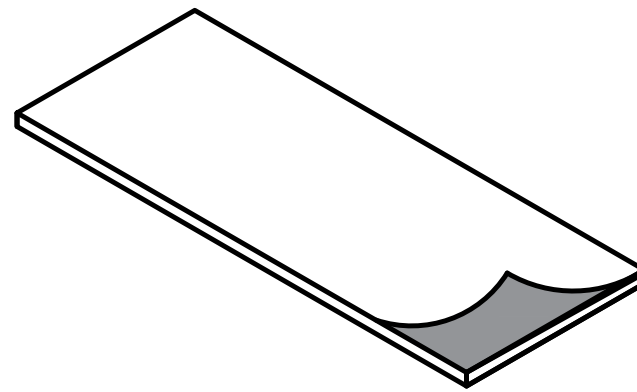


x2

Tear off the foot pad sticker and stick it on the board


Step 83

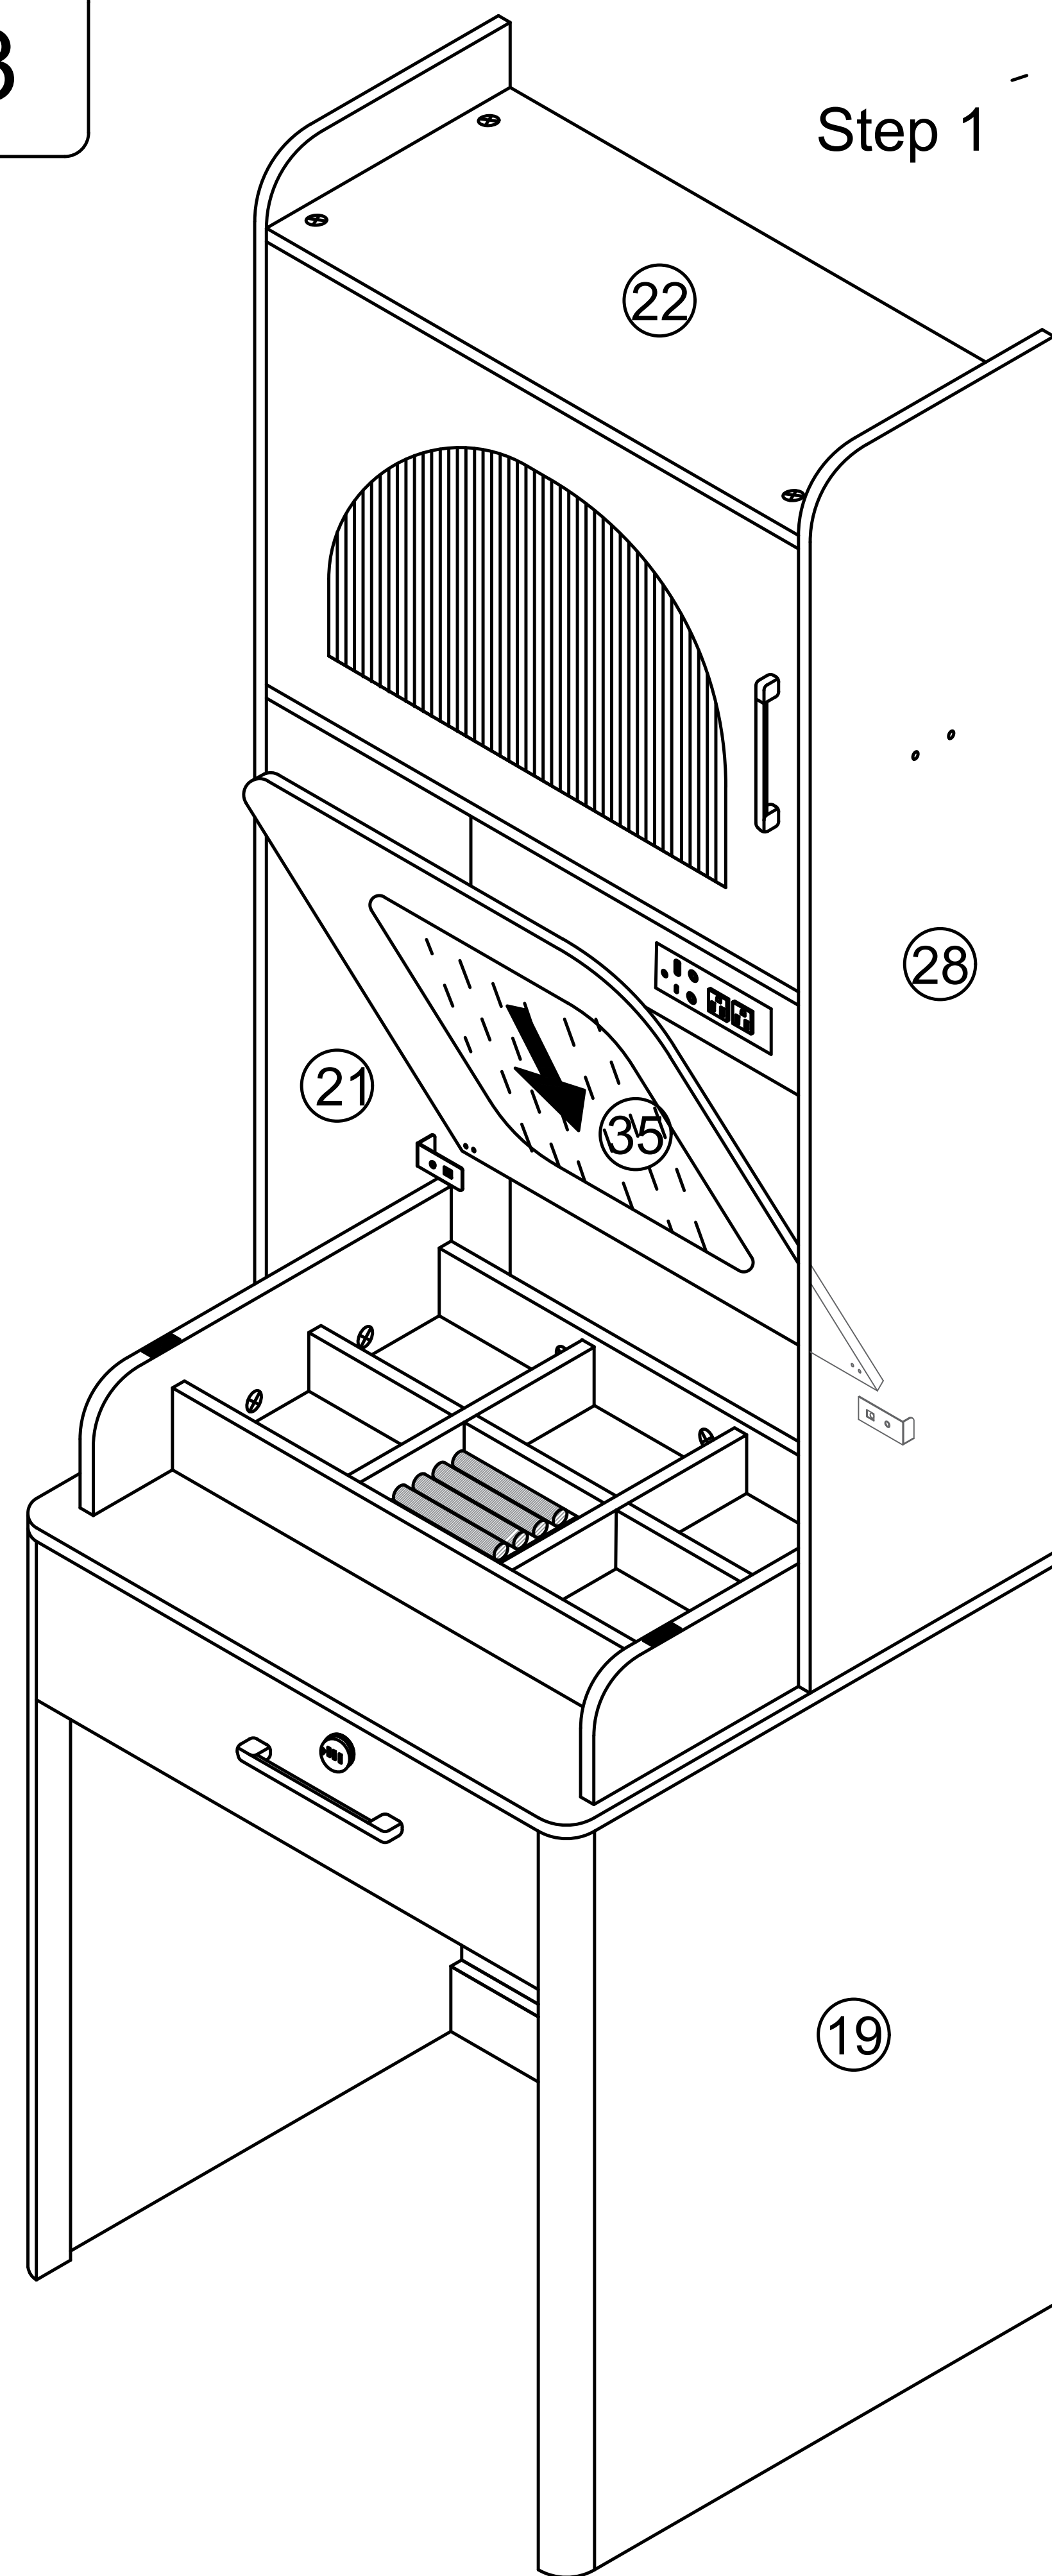

Step 1

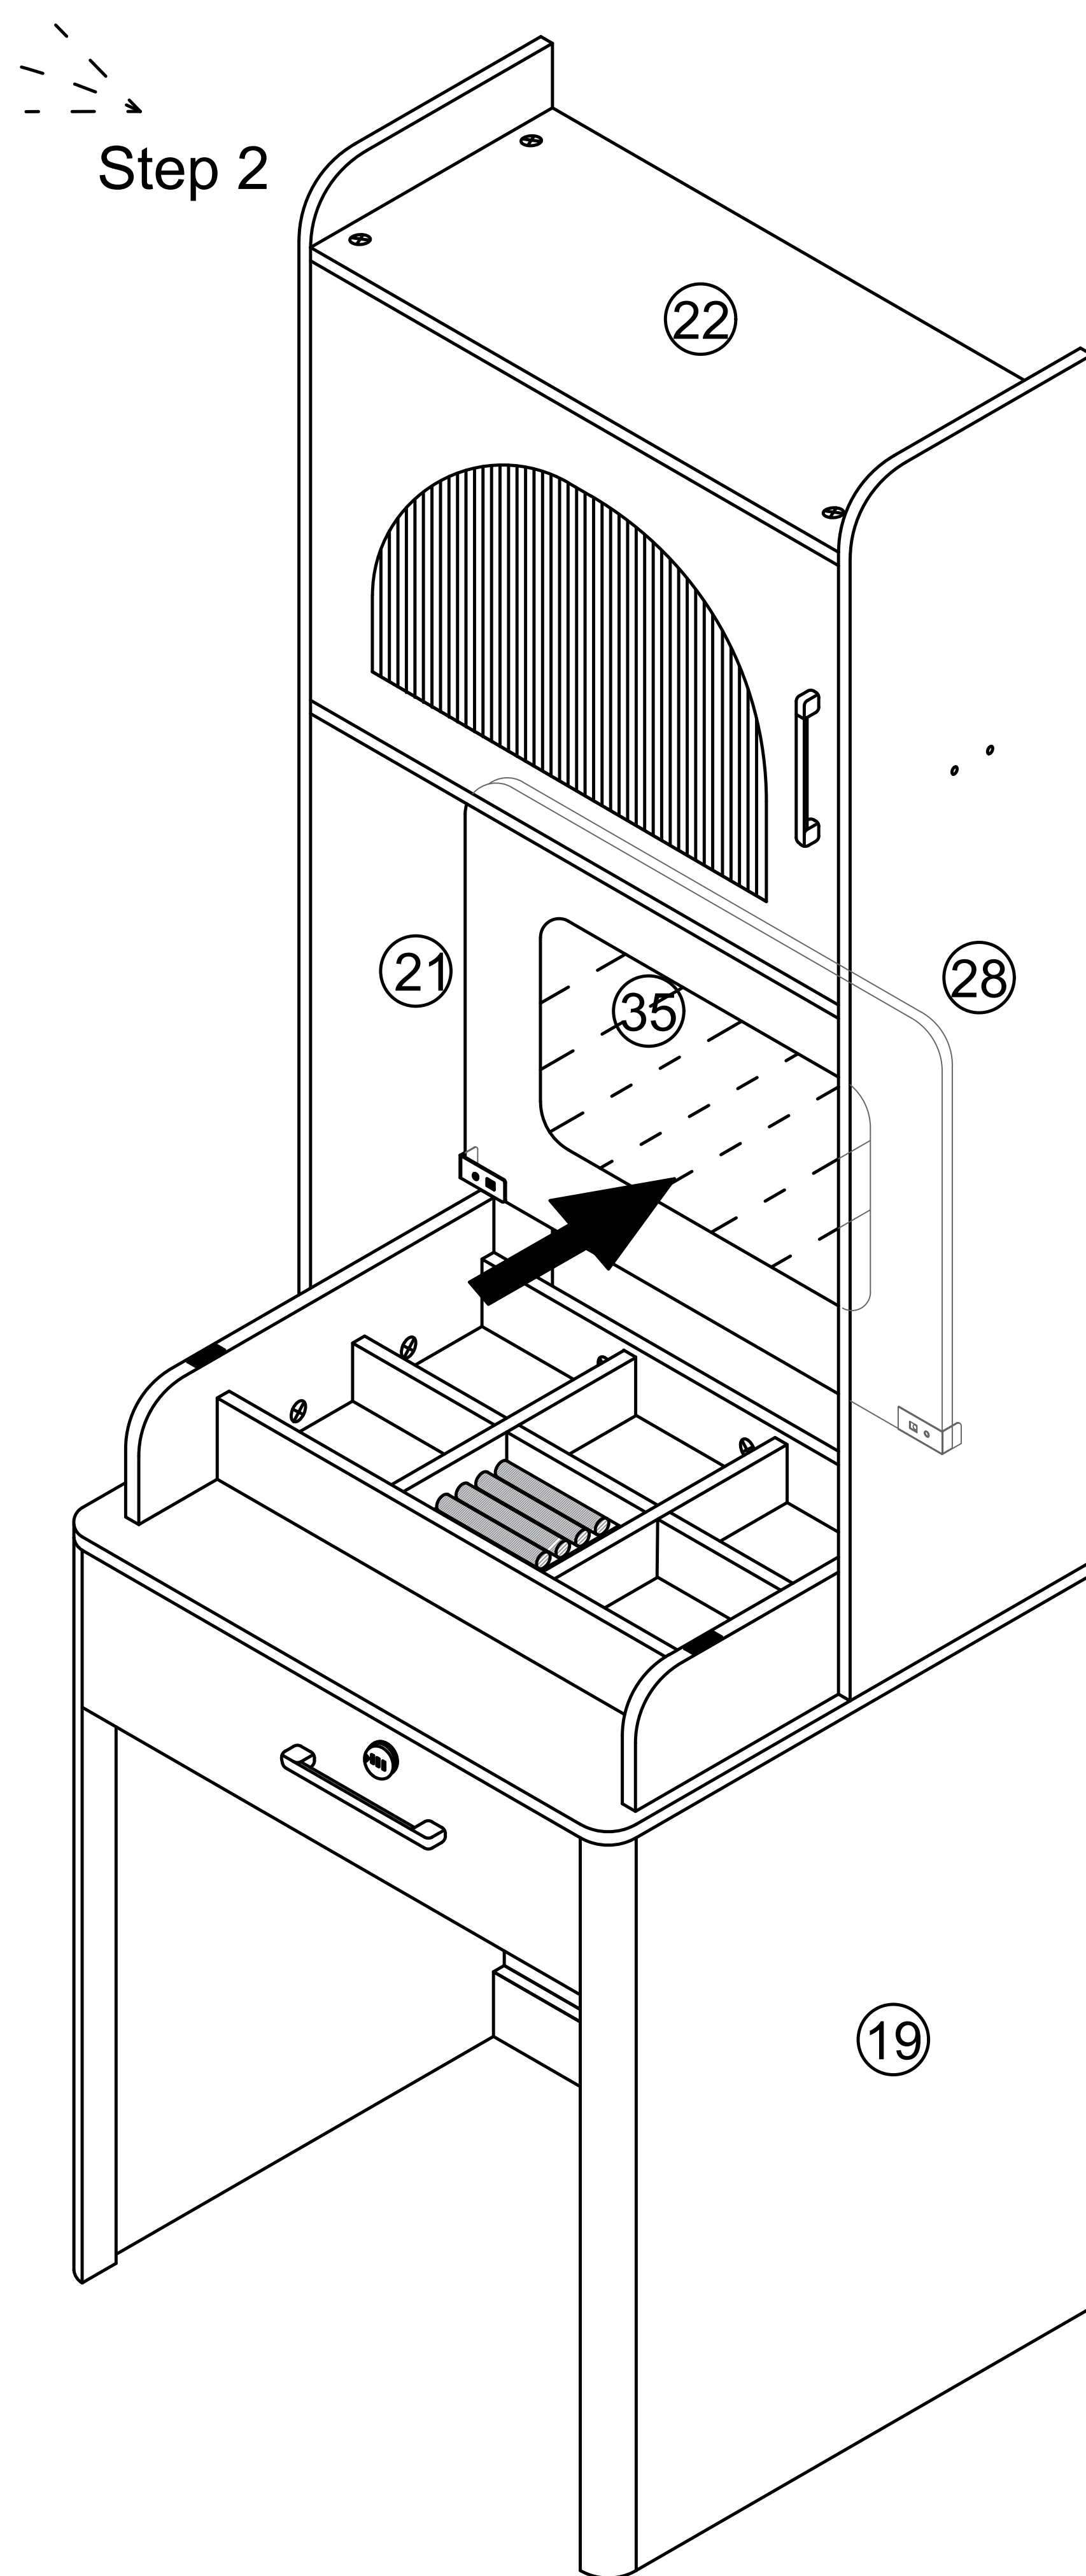


Step 2

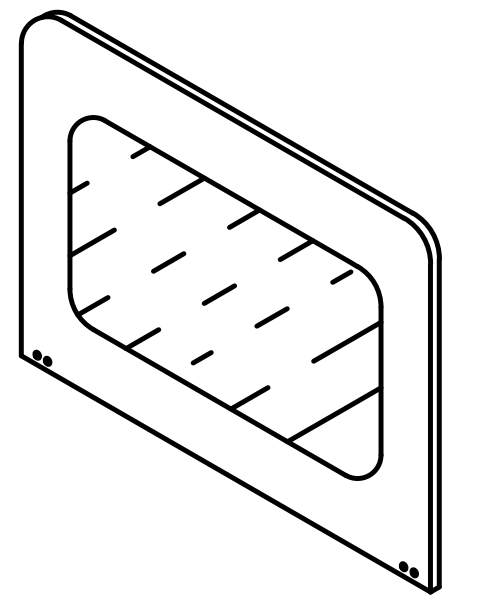


(35)x1

Step 84

H

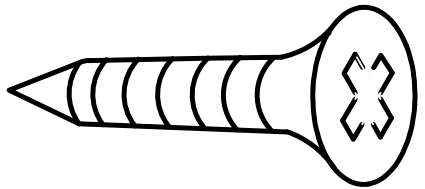


x4

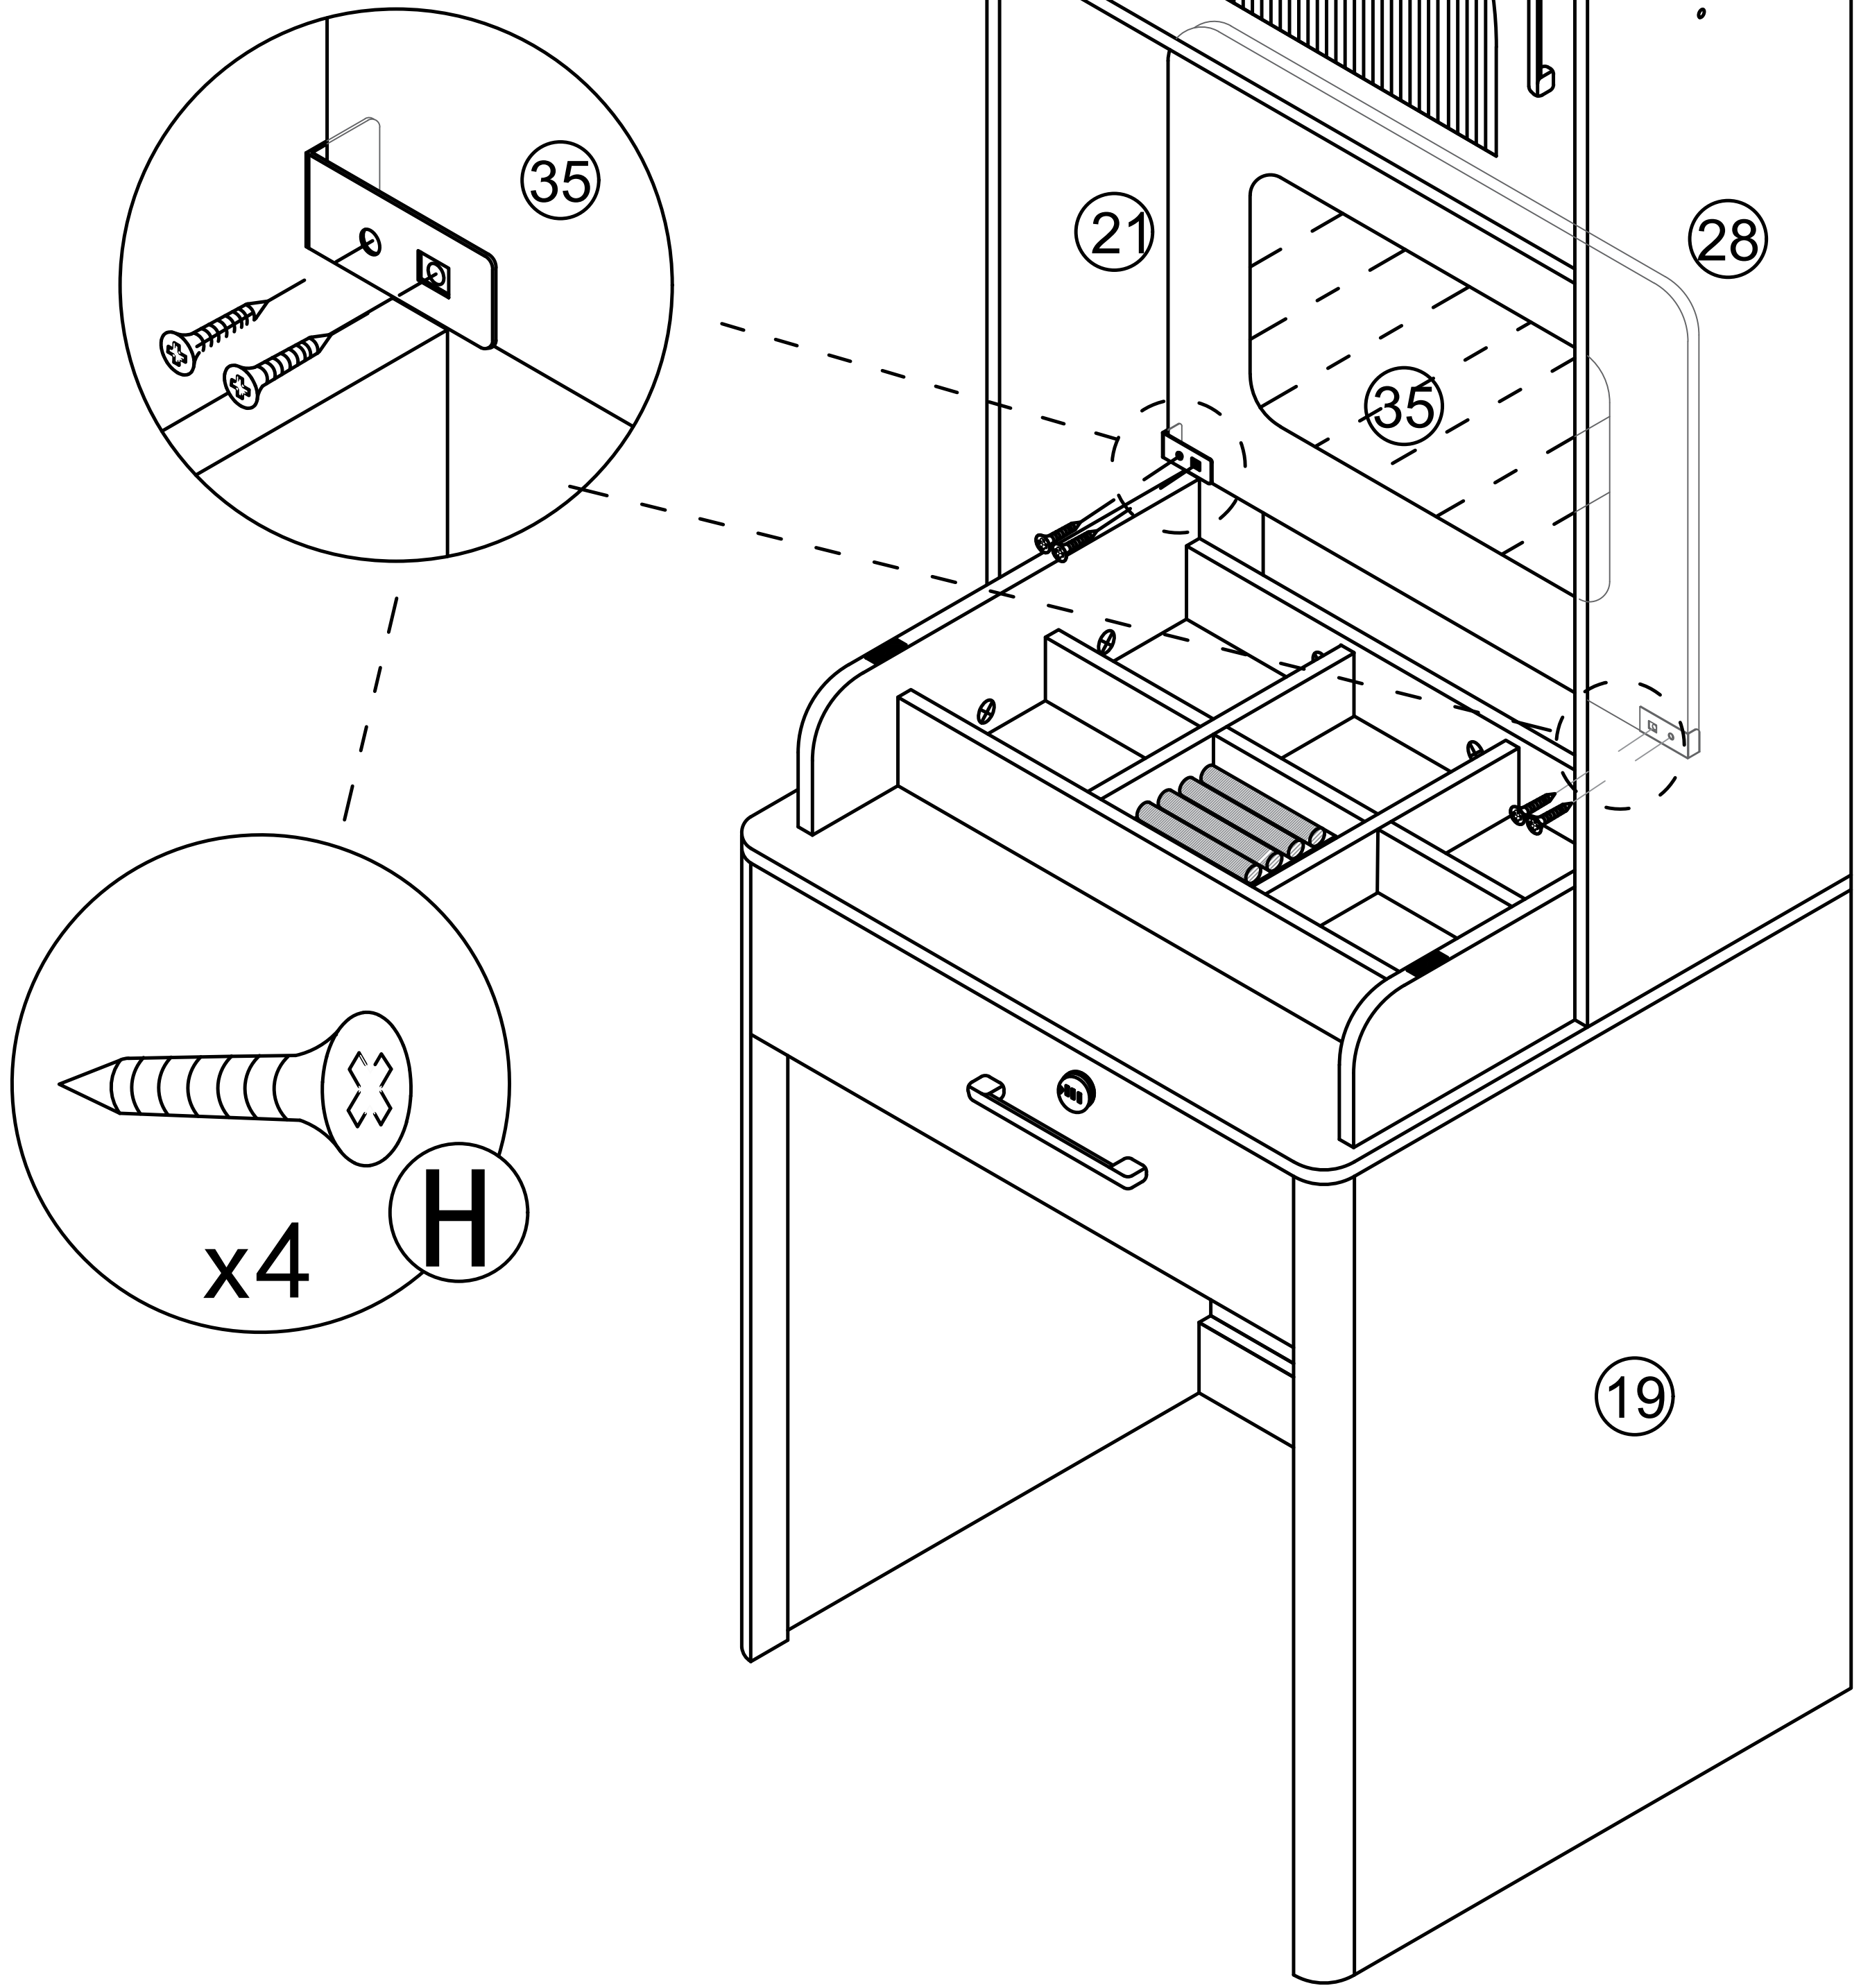


90



Step 85




Hooks can be installed according to customer needs

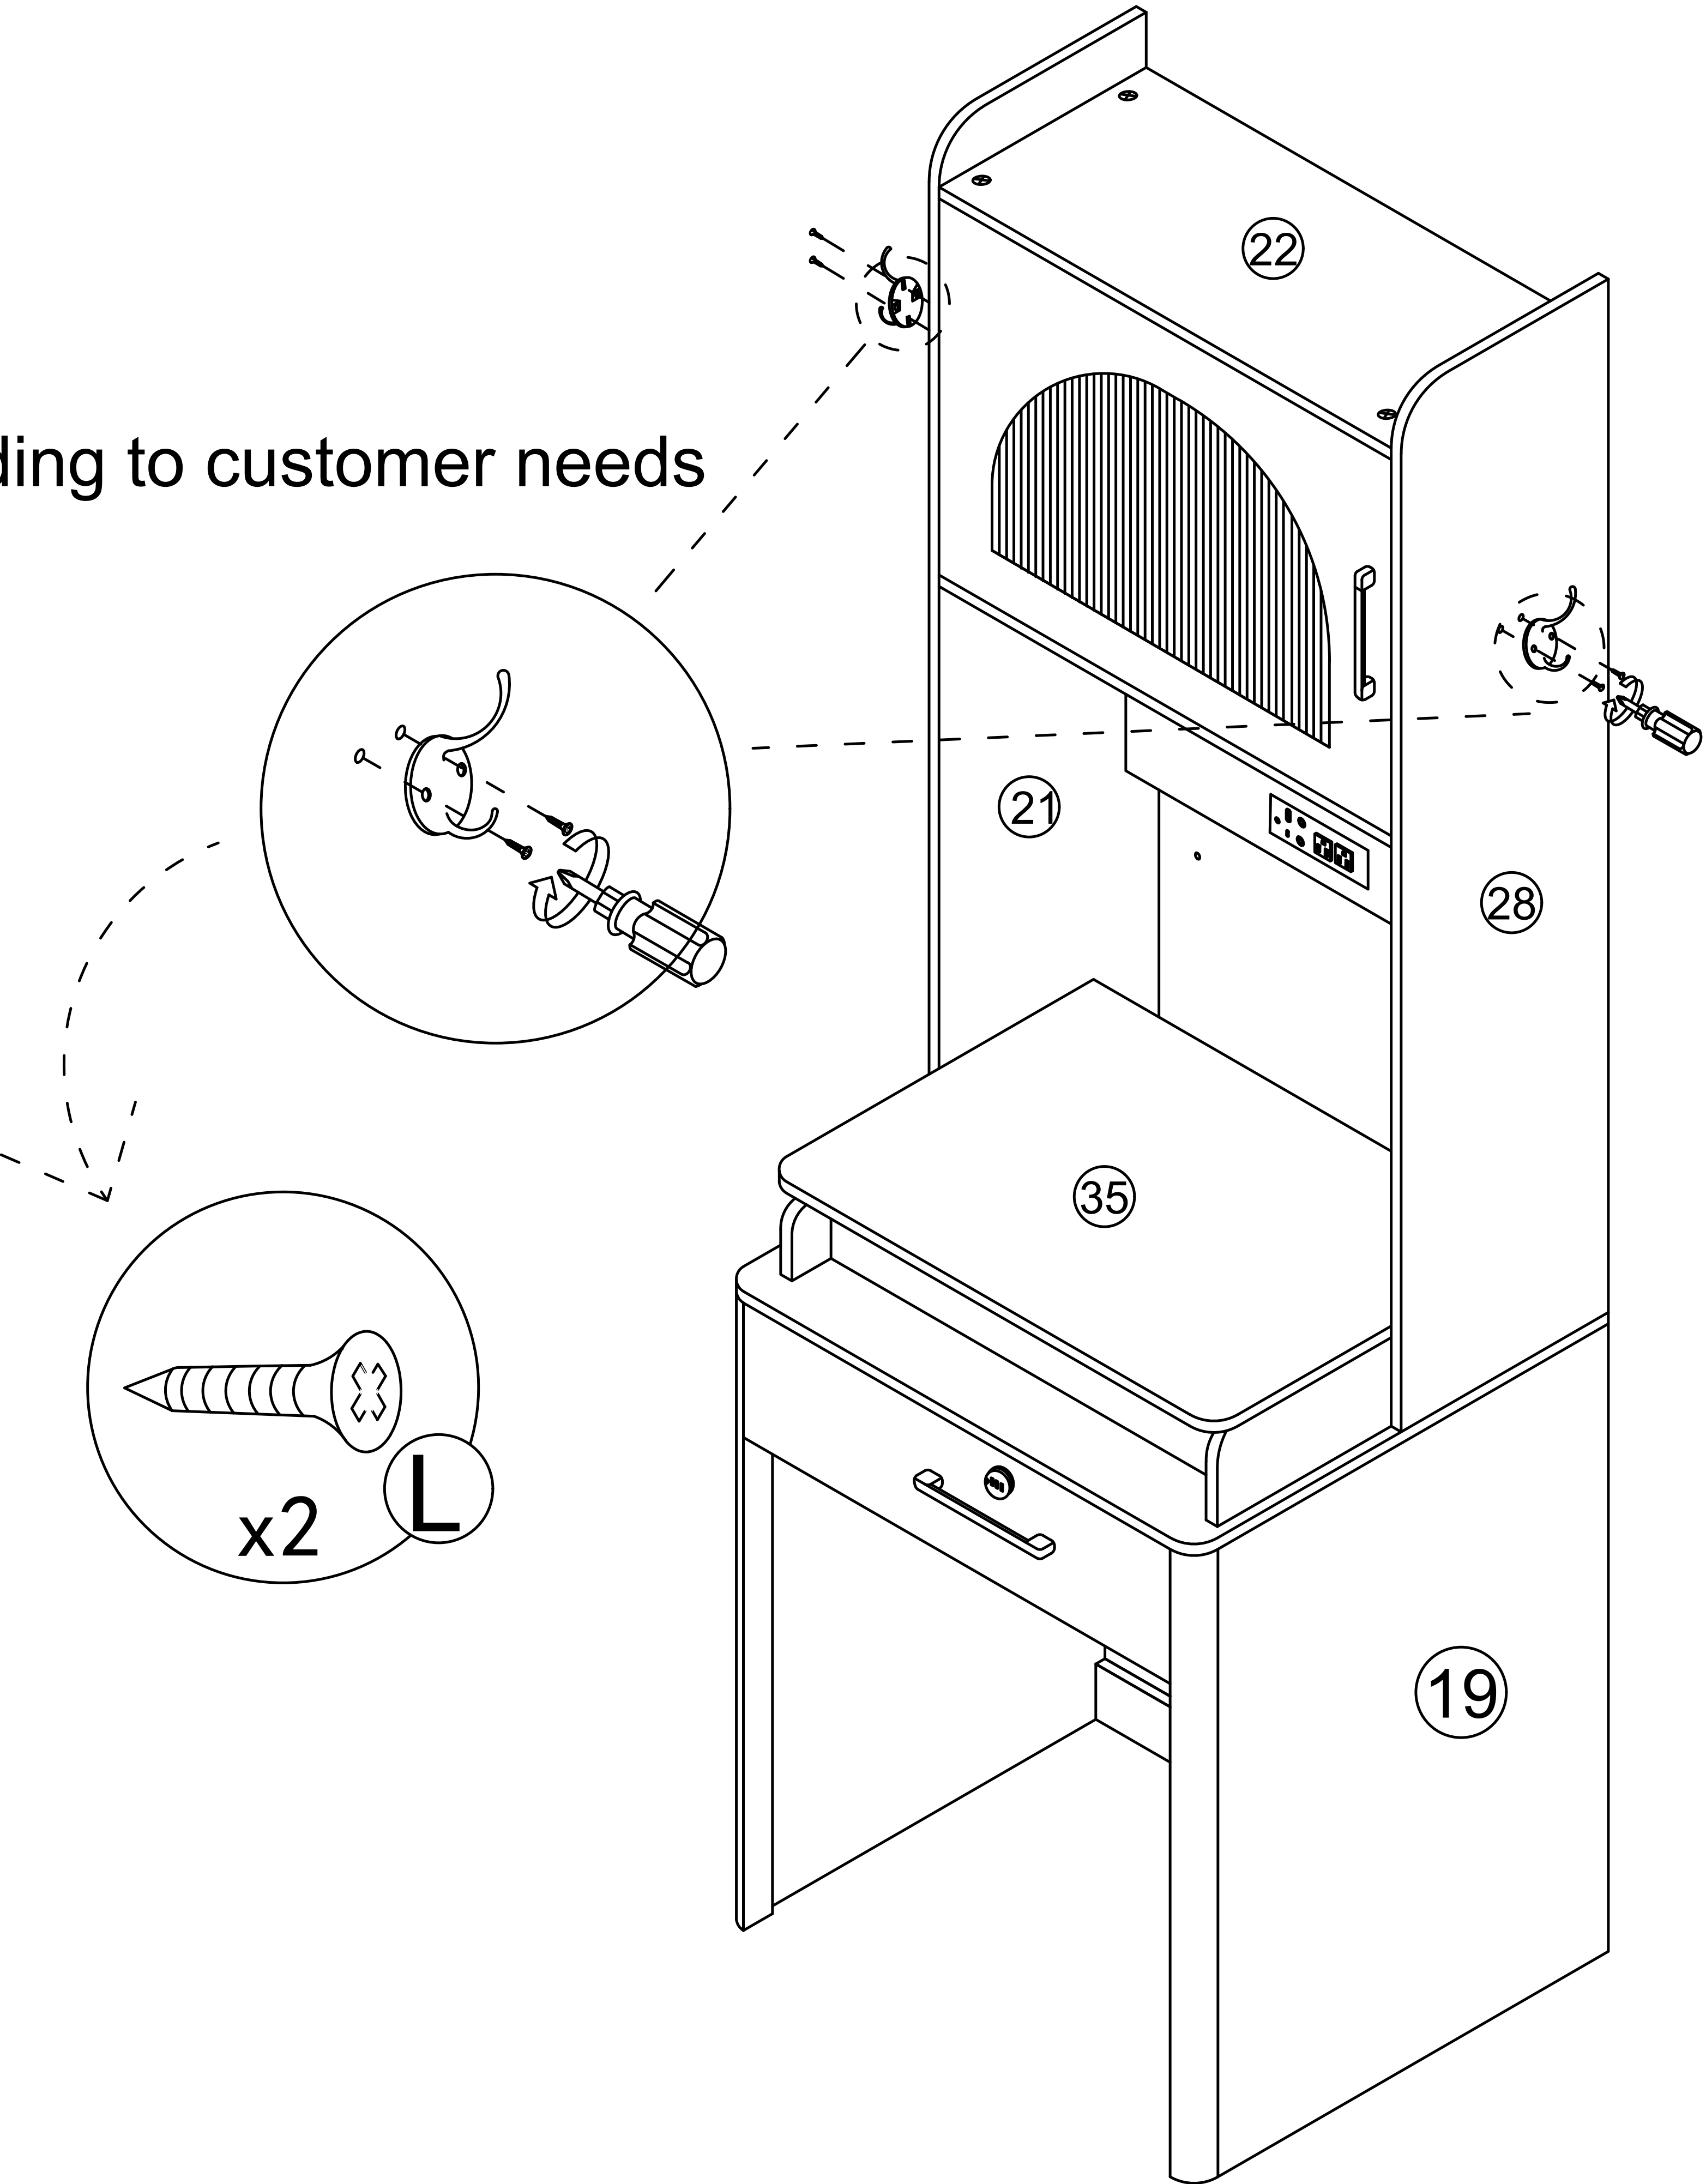

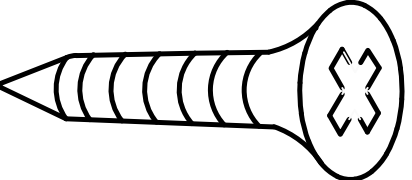- | | | |
|---|---|----|
| L |  | x4 |
| |  | x2 |


Step 87

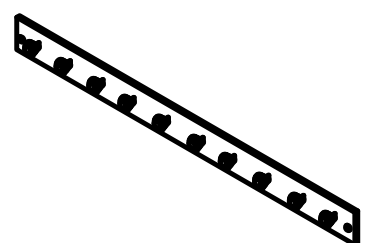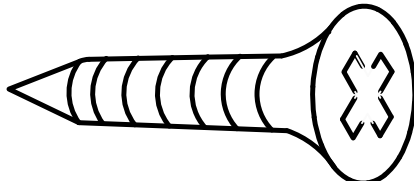- | | | |
|---|---|----|
| 0 |  | x1 |
| |  | x2 |

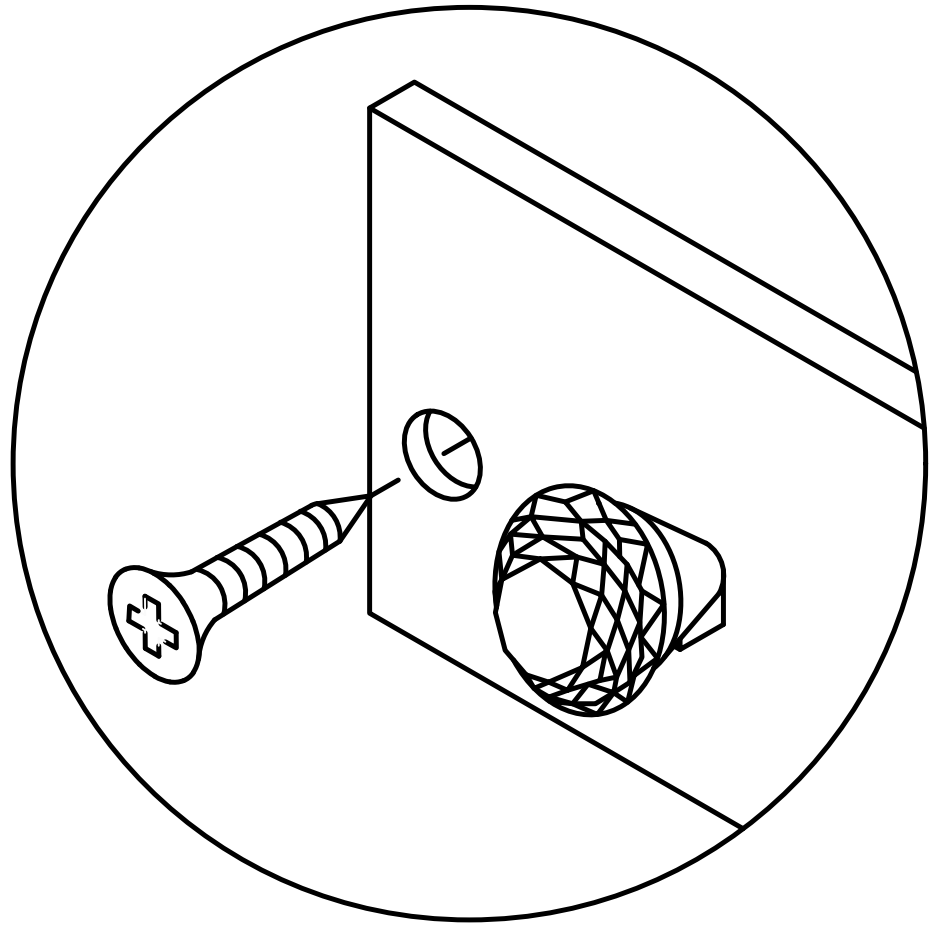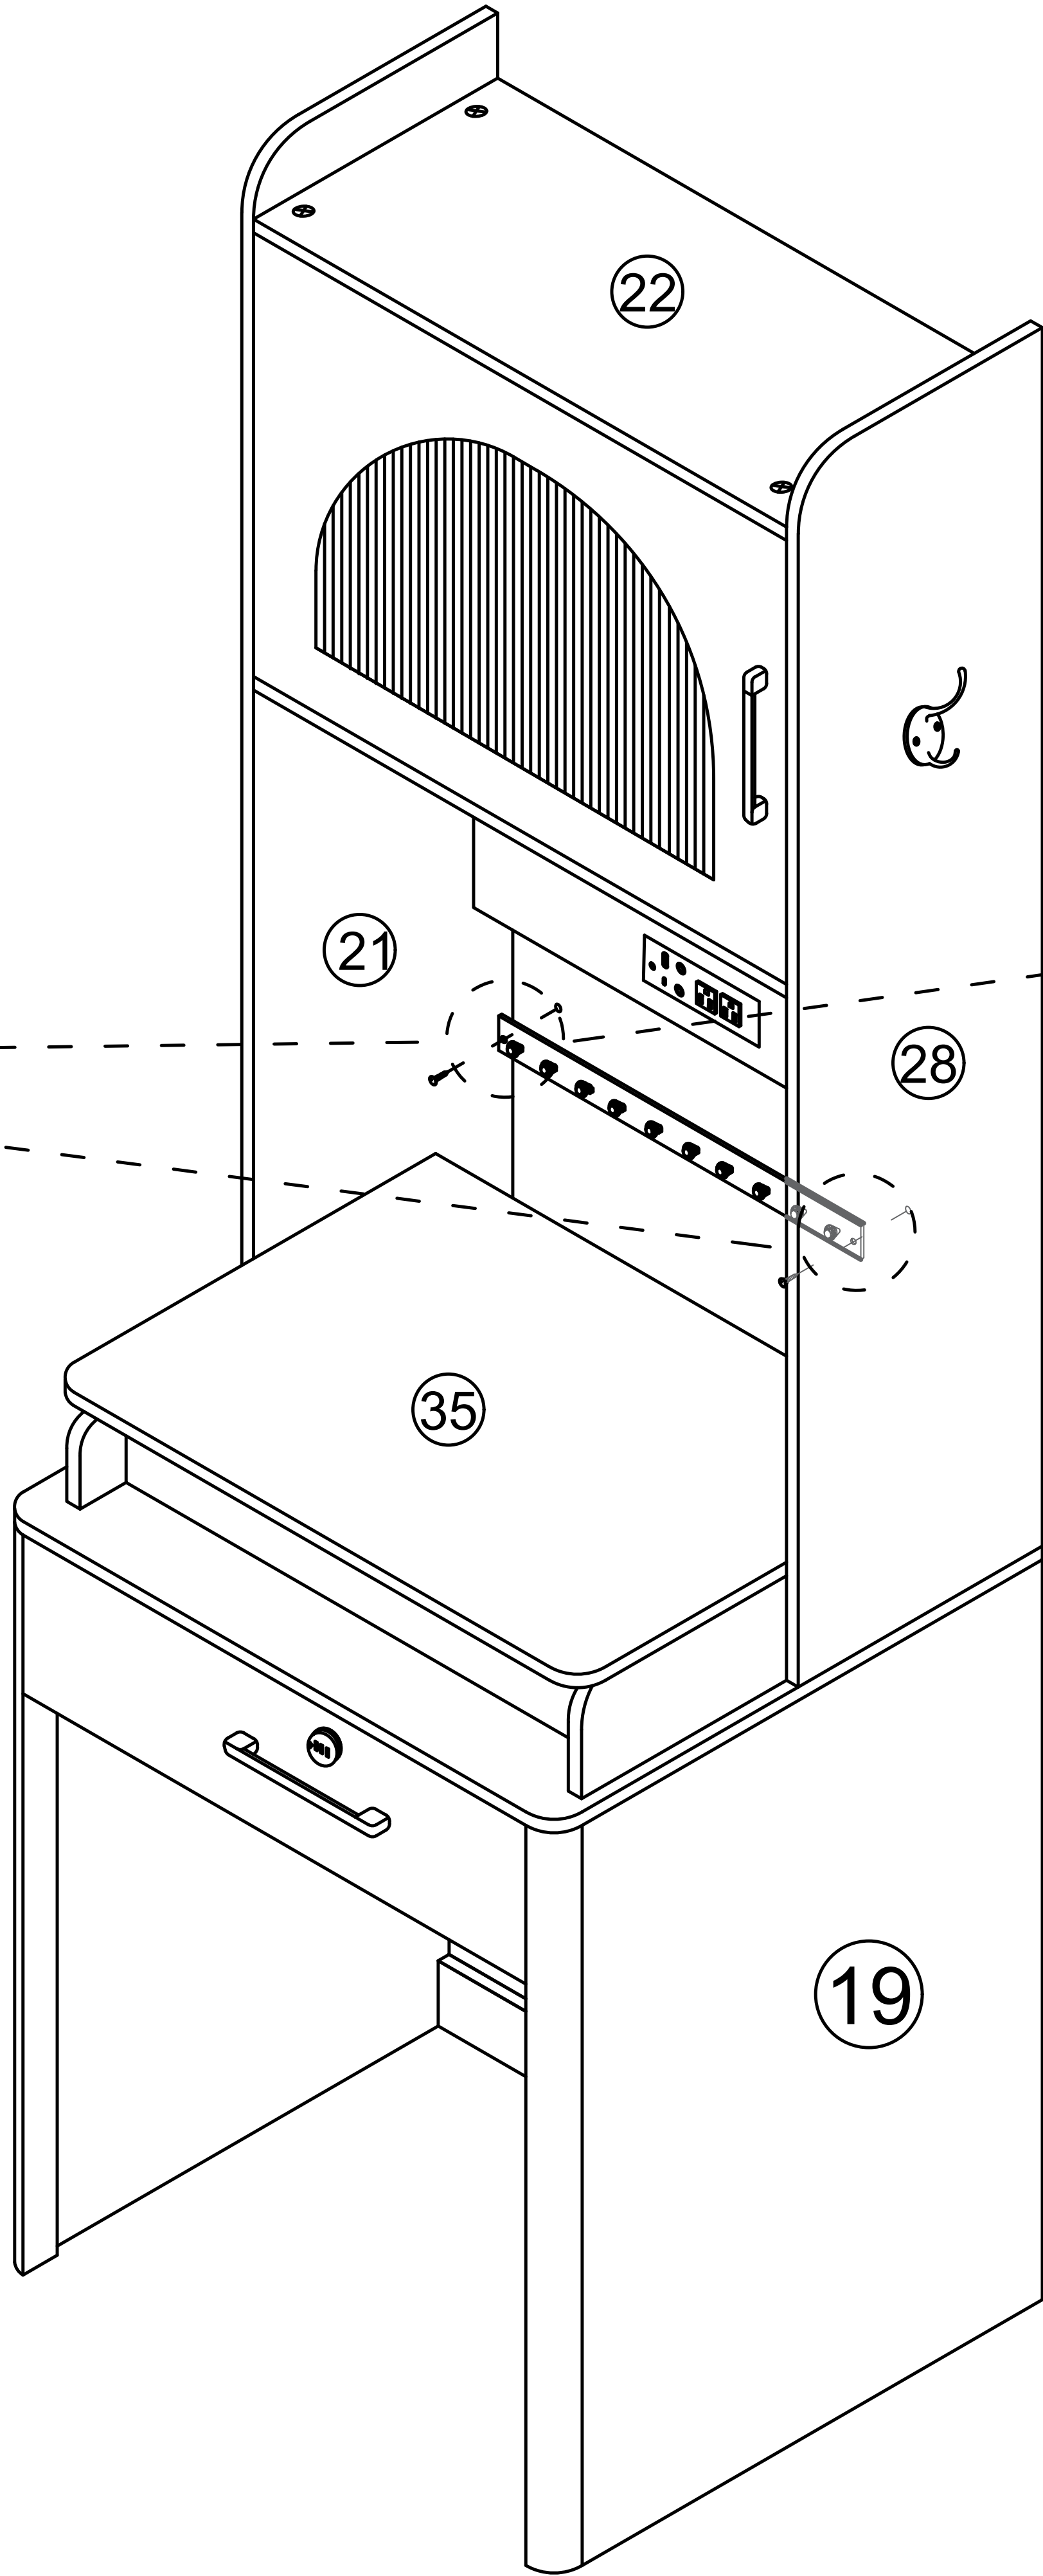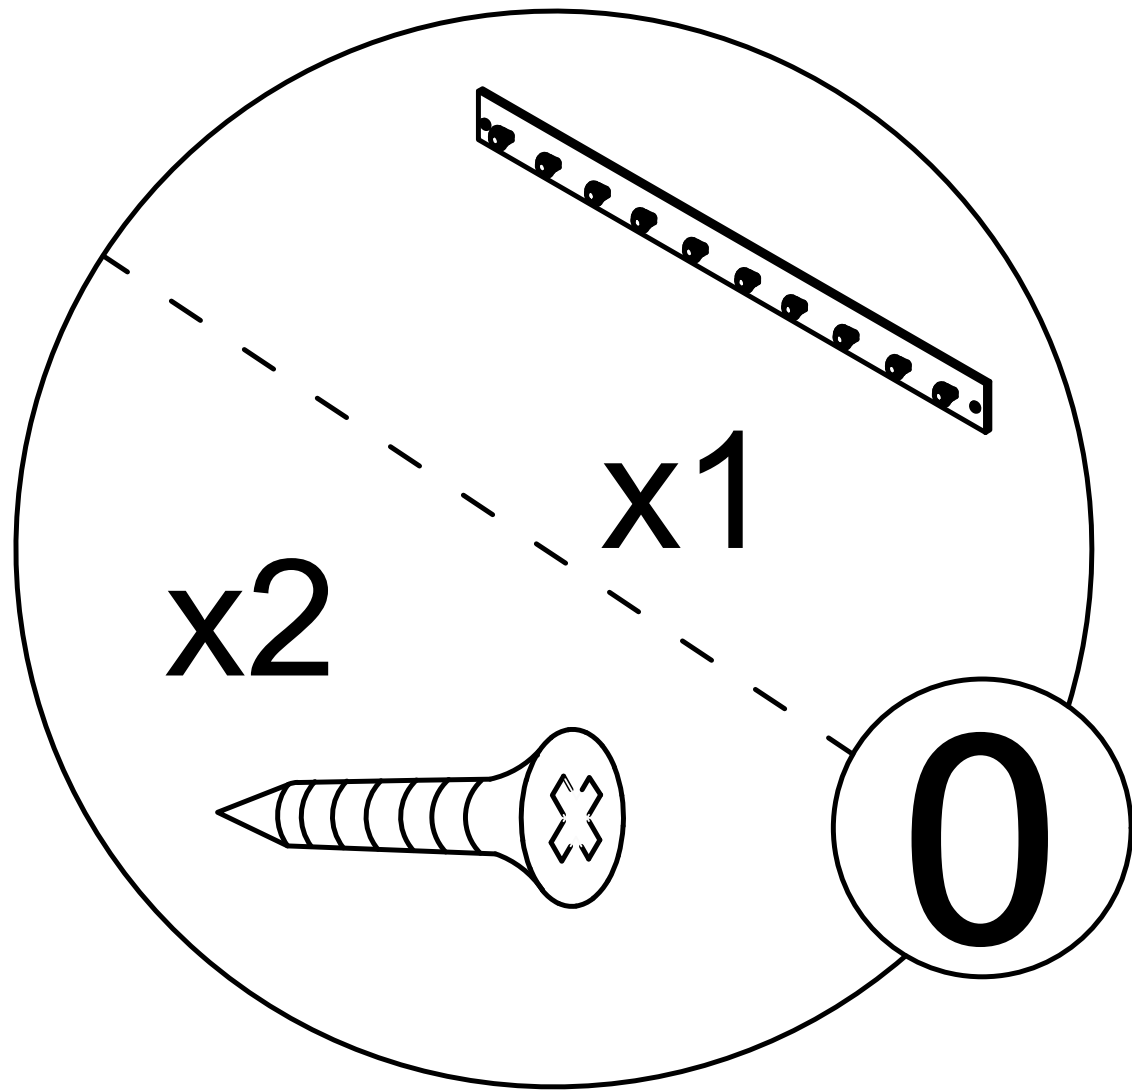

Pay attention to the direction of the crystal hook

Step 88

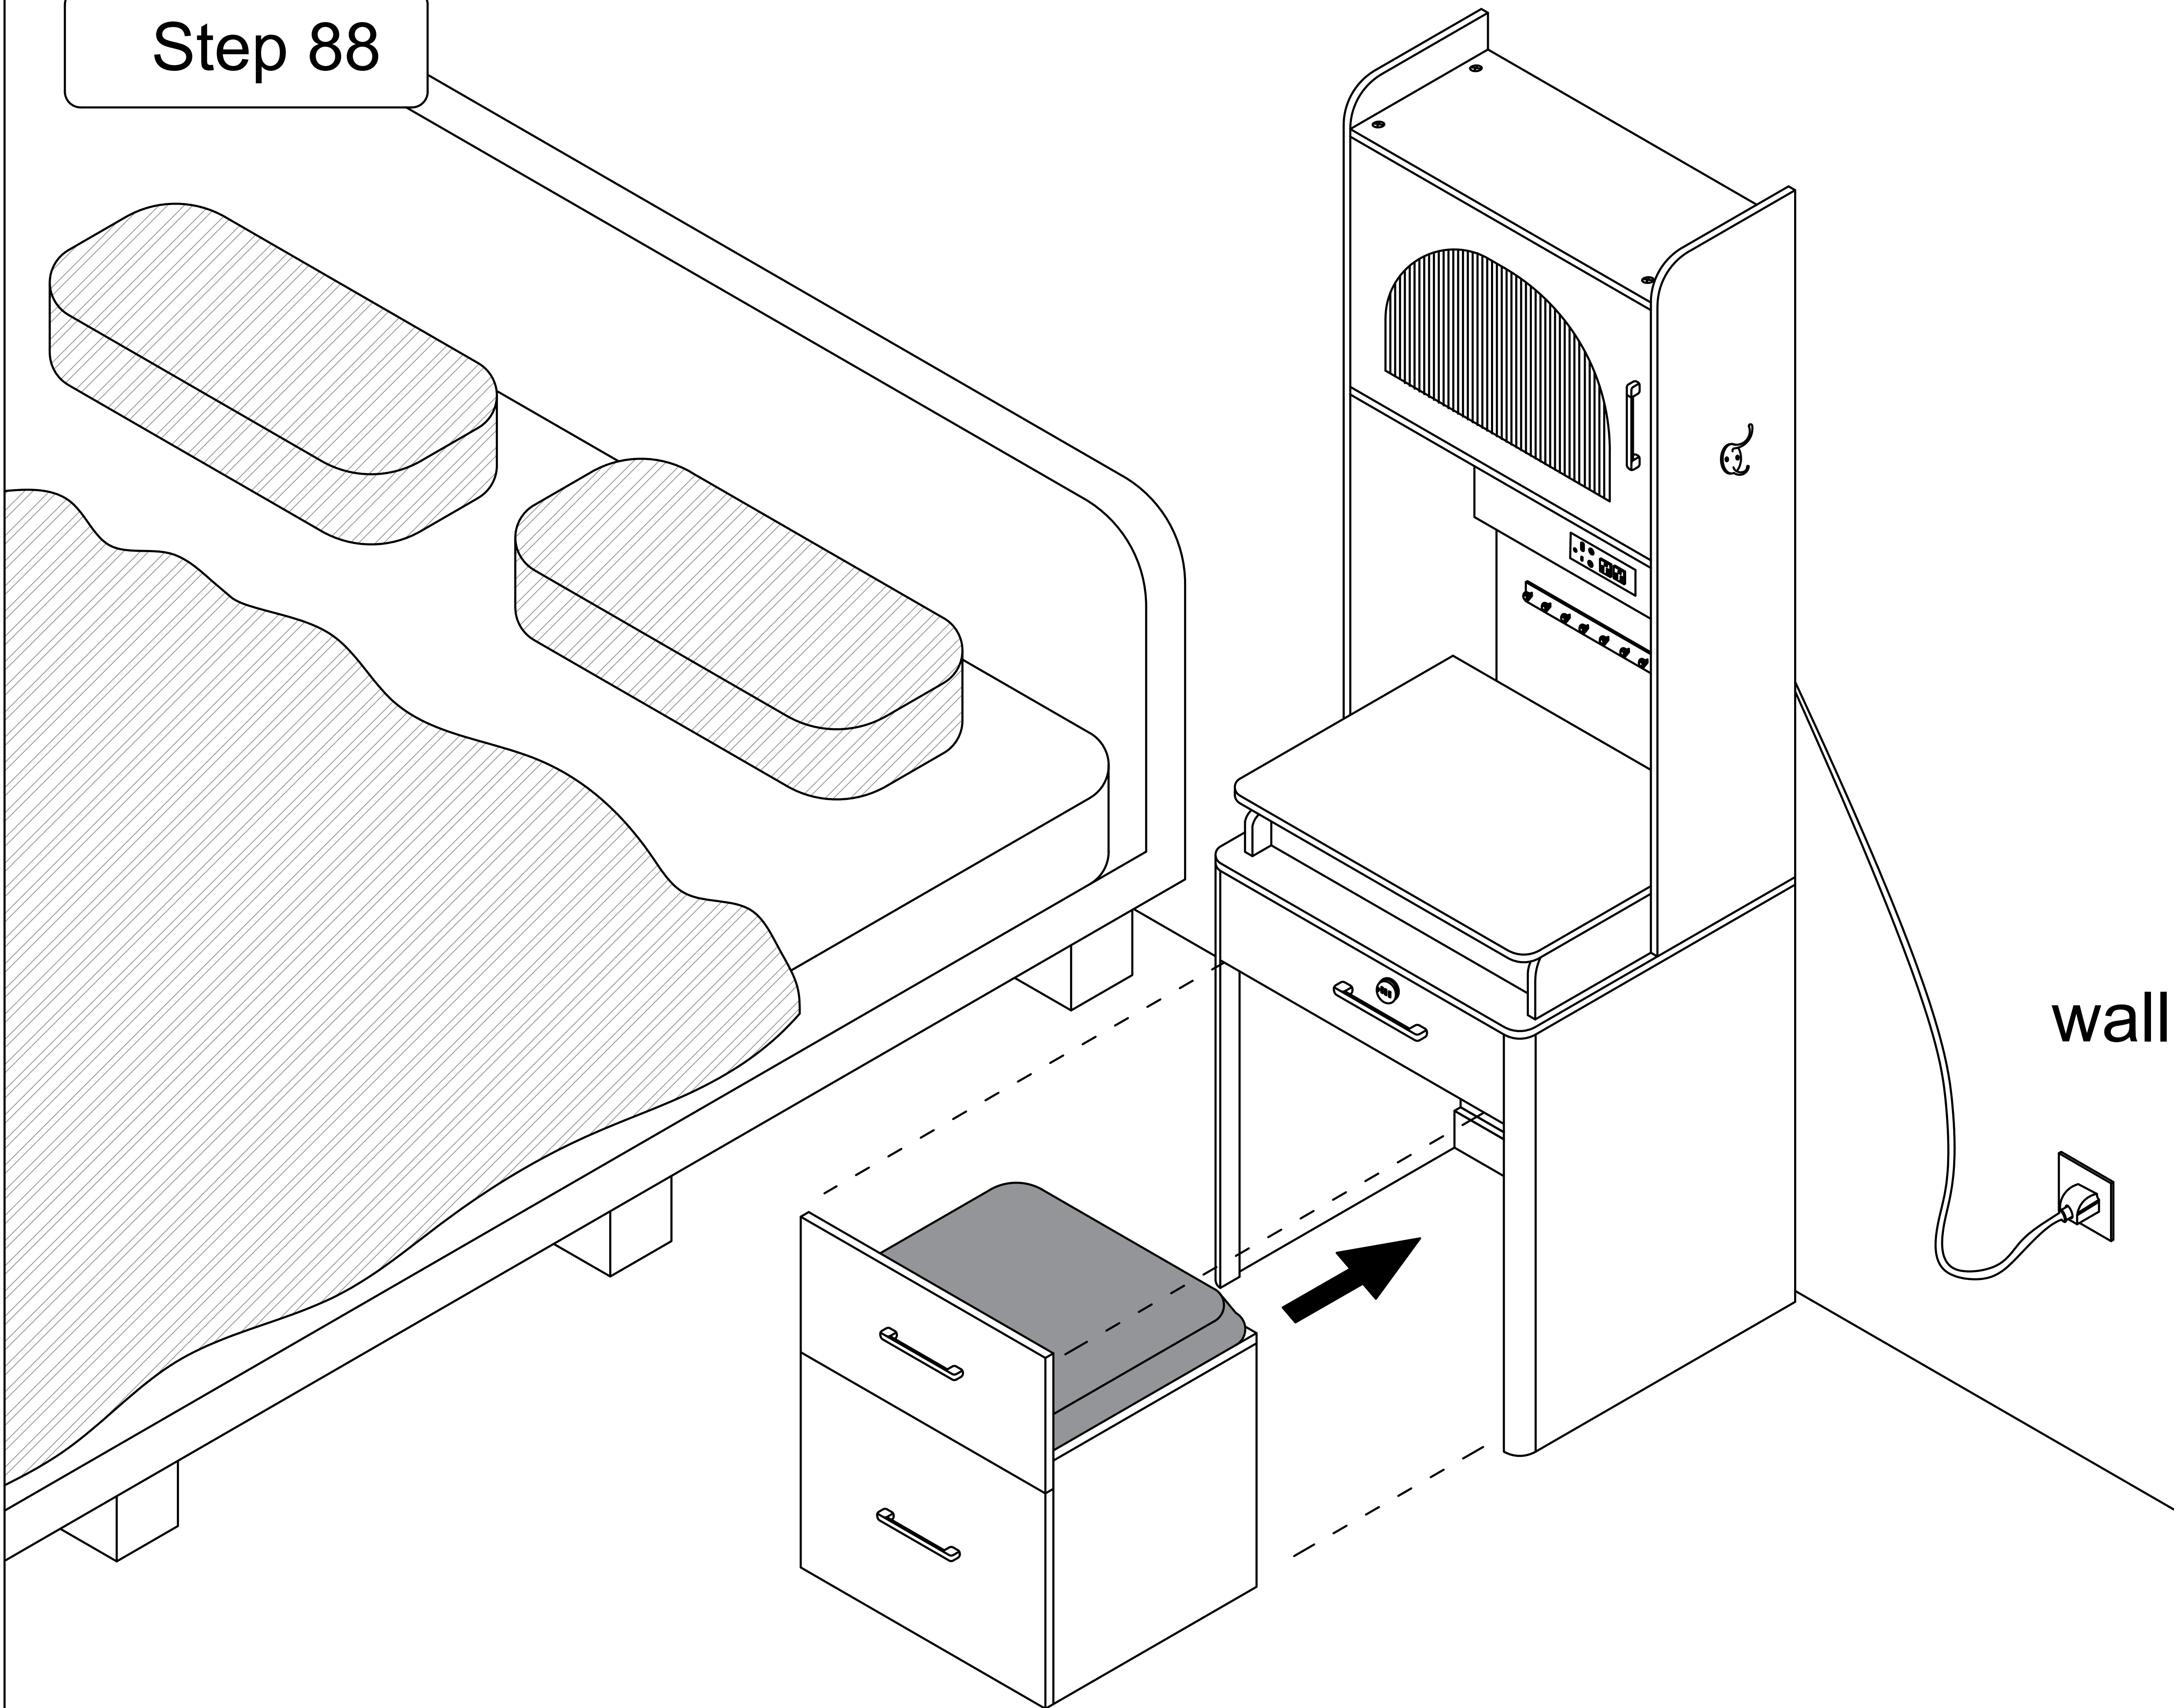

Step 89

Install as required

