

INSTRUCTION


HARDWARE :

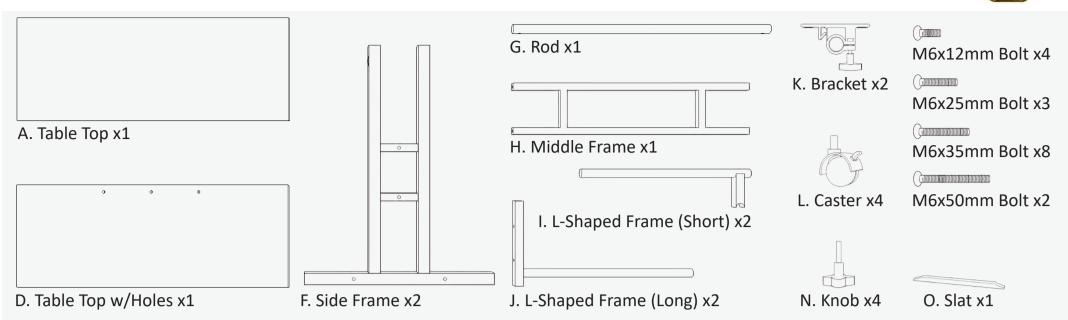


ASSEMBLY INSTRUCTIONS :

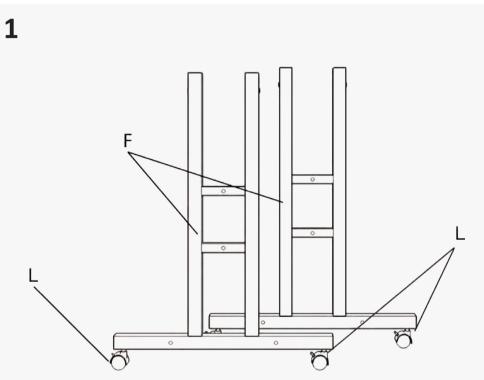


Secure the Side Frames (F) and Casters (L).

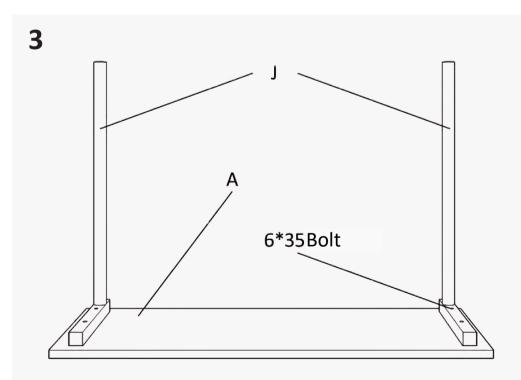

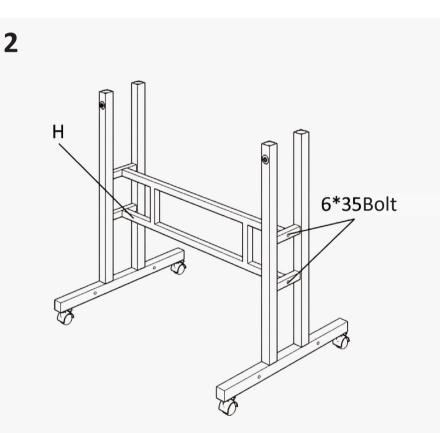


Assemble the Middle Frame (H) and Side Frames (F) with M6*35 Bolt.

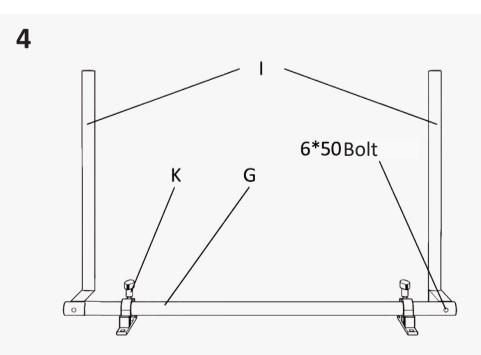

Secure the Table Top (A) and the L-Shaped Frames (Long) (J) with M6*35 Bolt.

Insert the Rod (G) to the Brackets (K) as picture shown, and then install the L-Shaped Frames (Short) (I) on the both ends of the Rod (G) with M6*50 Bolt.

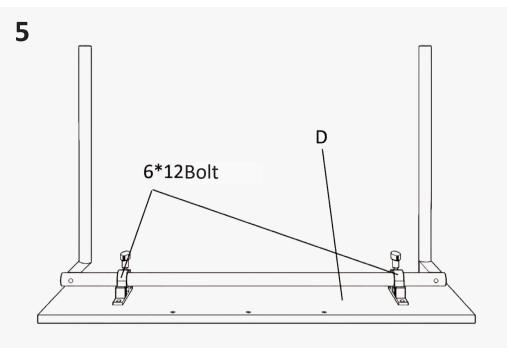


Ν


Fix the assembled part (Step 4) on the Table Top w/Holes (D) with M6*12 Bolts.

Insert the assembled parts (Step 3 & Step 5) into the Side Frames as picture shown, and then fix them by tightening the Knobs (N).



Install the Slat (O) with M6*25 Bolt.



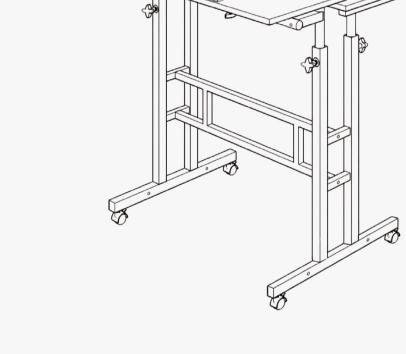

Completed

6

8



① Please always read and follow the assembly, maintenance and operating instruction.

ATTENTION

A

- $\ensuremath{\mathbb{O}}$ Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.
- ③ Keep children away during assembly. This item contains small parts which can be swallowed by children.
- ④ Wipe frames with water gently, do not use bleach, acid, or other solvents.
- **⑤** Check all hardwares before assembly. Incorrect parts used may lead to damage.

Scan the QR code to view the assembly video.

© 2020-2025 by Pundarika LLC - MoNiBloom.com