

ASSEMBLY INSTRUCTION


FULL BED 54" x 75"

Page : 1 OF 1


Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

STEP 1.

TIPS : Attach the Leg to Headboard by using JCBC Bolt.
: Insert Side Rail to the hole of Headboard.

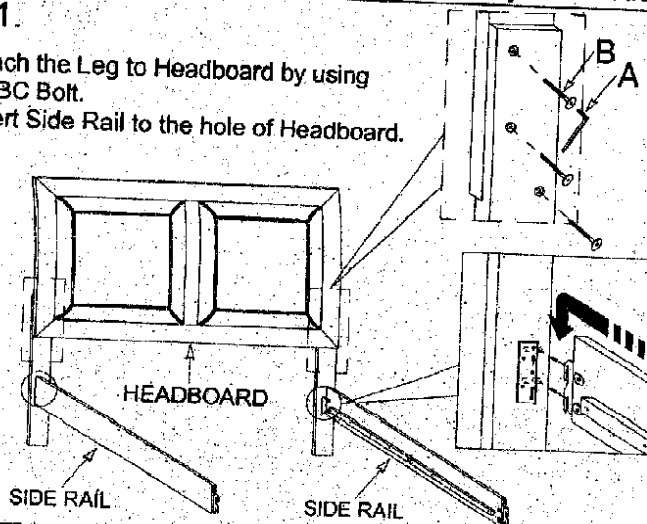

STEP 2.

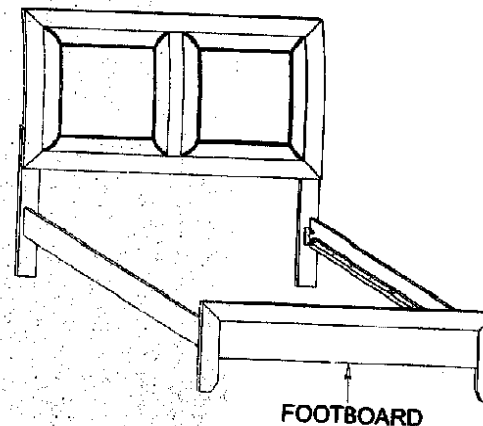

TIPS : Insert Side Rail to the hole of Footboard.



HARDWARE PART 1

NO	HARDWARE DESCRIPTION	QTY
A.	Allen Key	1PC
B.	JCBC Bolt M6 X 35mm	6PCS
SCREW DRIVER NOT PROVIDE !!!		

HARDWARE PART 2


NO	HARDWARE DESCRIPTION	QTY
C.	Chipboard Screw M4 x 32mm	10PCS
D.	JCBC Bolt M6 x 40mm	10PCS
E.	Adjuster Screw M6 x 24mm	10PCS
SCREW DRIVER NOT PROVIDE !!!		

STEP 3.

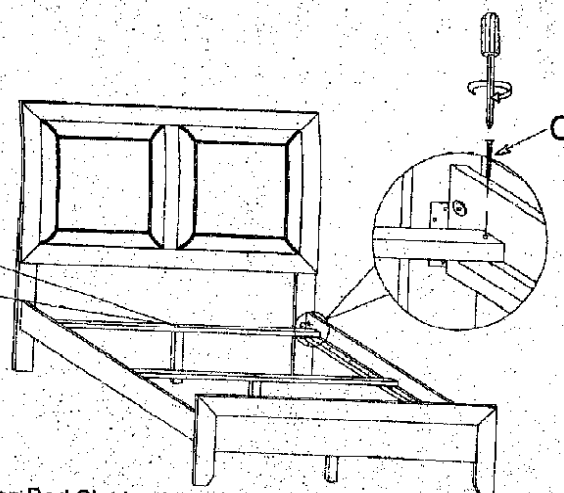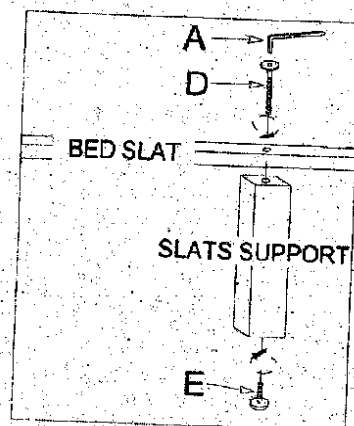

TIPS : Attach the Bed Slat to the Side Rail. Fasten the Bed Slat by tighten with screw through the pre-drilled hole of Bed Slat.

COMPLETE SET

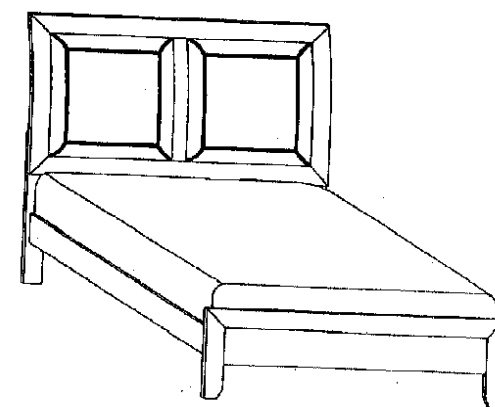

* TOTAL SLAT : 3PCS (WITH JCBC HOLE) + 3PCS (SLATS SUPPORT)