




ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: WMI38 NAME: Elkins Floor Mirror

MATERIAL TYPE: Wood FINISH: Ebony

ITEM NET WEIGHT: 100.75 LBS

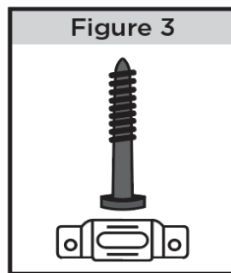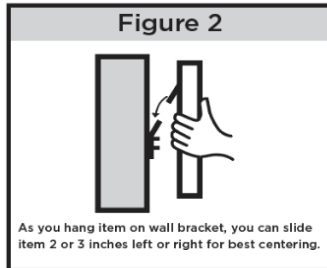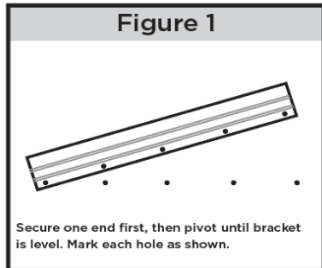

PARTS INCLUDED:

Mirror	Qty: 1
Security Cleat (36")	Qty: 1
Drywall Anchors	Qty: 10
Screws	Qty: 10
T-SCREWS	Qty: 1
Drywall Anchors for T-Screw	Qty: 1
Anti-tip Kit	Qty: 1



NOTE: Please use this Anti Tip kit behind the Mirror for safety.



- Do not throw away packaging materials until assembly is complete
- Stud mounting is recommended. Use proper hardware for your wall type, these instructions are for drywall. When in doubt, consult your local hardware store. For your safety, installation by two people is recommended.
- This mirror can be mounted vertically only.
- Because of heavy weight this mirror is suitable only for vertical mounting on the wall with cleat. This can be lean against the wall in vertical position with the help of Safety Bracket as per option 1.

TO ASSEMBLE:

Option 1

When using the item as a floor mirror resting against a vertical support, use the Anti tip Kit Provided to secure it from tipping forward accidentally. to add Anti Tip Drill 5/16" pilot holes in wall. Position dry wall anchor over hole and gently tap anchor into wall until cap prongs are embedded in wall and cap is snug against surface. Turn screw clockwise pressing firmly to prevent anchor from rotating. Tighten screw until resistance is felt

Option 2

1. Position mirror in desired location on wall.
2. Position security cleat in desired location and mark location of each dry wall anchor installation, as shown in Figure 1.
3. Remove security cleat from the wall.
4. Drill 5/16" pilot holes in wall. Position dry wall anchor over hole and gently tap anchor into wall until cap prongs are embedded in wall and cap is snug against surface. Turn screw clockwise pressing firmly to prevent anchor from rotating. Tighten screw until resistance is felt, this will fully expand the anchor. Turn screw counter clockwise to remove screw. Anchor will remain embedded in wall.
5. Place security cleat over anchors and insert the screw and then tighten all screws.
6. Hang mirror on wall bracket, as shown in Figure 2.
7. Now, align Bottom T-Screw on wall with Bracket, as shown in Figure 3 and use wrench clockwise on T-Screw so that it locks mirror from moving forward.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.