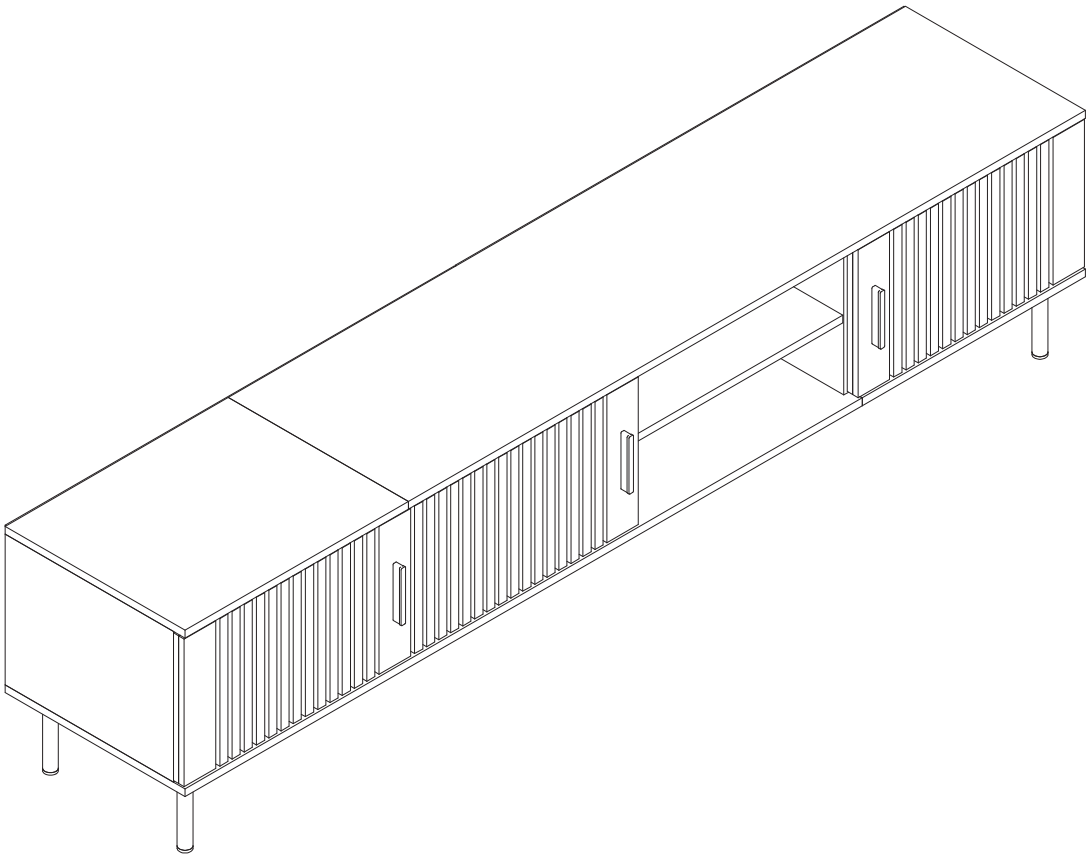
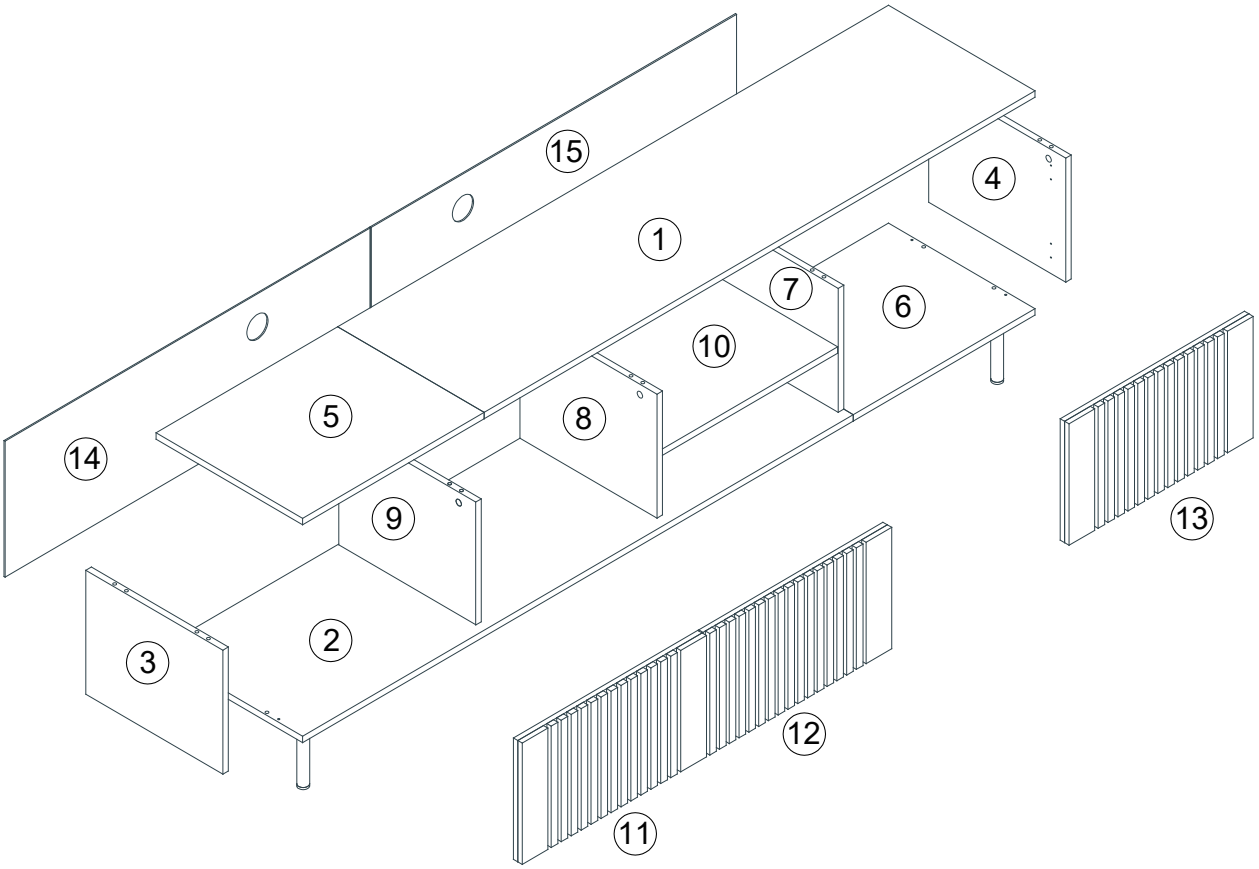
ASSEMBLY INSTRUCTIONS

SKU CODE: (N710P429513P)

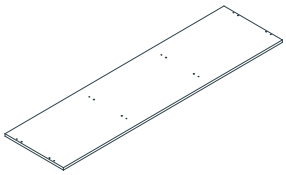
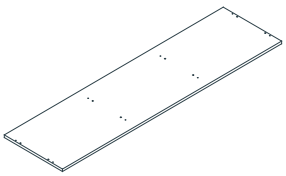
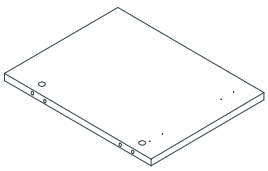
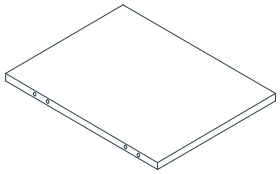
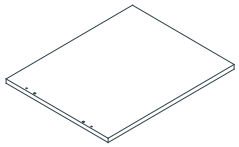
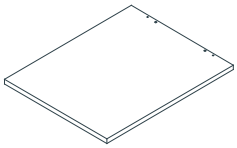
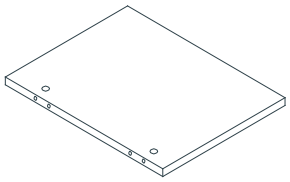
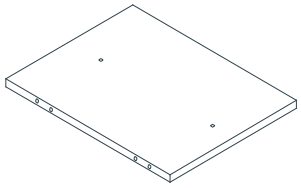
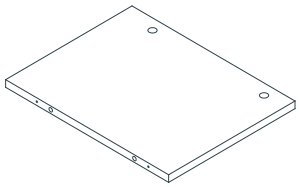
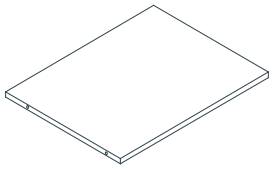
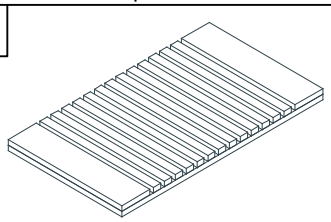
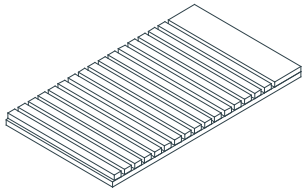
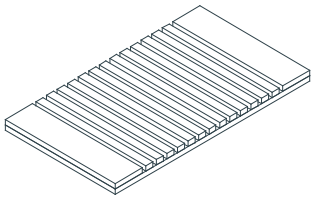
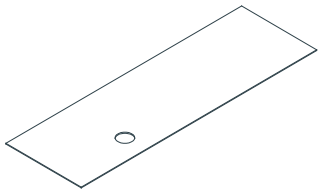
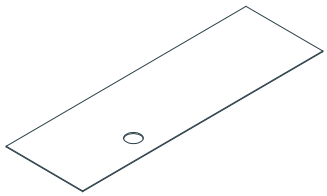


Detail View











Part List


N710P429513P

1  Top Panel - 1pc	2  Bottom Panel - 1 pc	3  Side Panel (Left) - 1 pc
4  Side Panel (Right) - 1 pc	5  Top Panel (Small) - 1pc	6  Bottom Panel (Small) - 1pc
7  Right Panel (Center) - 1pc	8  Center Panel - 1pc	9  Left Panel (Center) - 1pc
10  Shelf - 1 pc	11  Door Panel (Left) - 1 pc	12  Door Panel (Center) - 1pc
13  Door Panel (Right) - 1 pc	14  Back Panel (Left) - 1 pc	15  Back Panel (Right) - 1 pc

Hardware List N710P429513P

A  Ø8*30mm	**B**  Ø8*50mm	**C** 
Wood Dowel (24 pcs)	Wood Dowel (4 pcs)	Cam Nut (14 pcs)
D 	**E**  Ø4 x 45mm	**F**  Ø3.5 x 16mm
Cam Bolt (14 pcs)	Chip Board Screw (10 pcs)	Chip Board Screw (72 pcs)
G  3/4”	**H** 	**I**  5/8”
Nails (52 pcs)	Metal Plate (2 pcs)	Hydraulic Hinges (4 pcs)
J  2/8”	**K** 	**L** 
Hydraulic Hinges (2 pcs)	Metal Leg (7 pcs)	Metal Handle (3 pcs)
M  M4 x 30 mm		
TMS Screw (6 pcs)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)







PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1 :


A	B	D
		
8 PCS	4 PCS	14 PCS

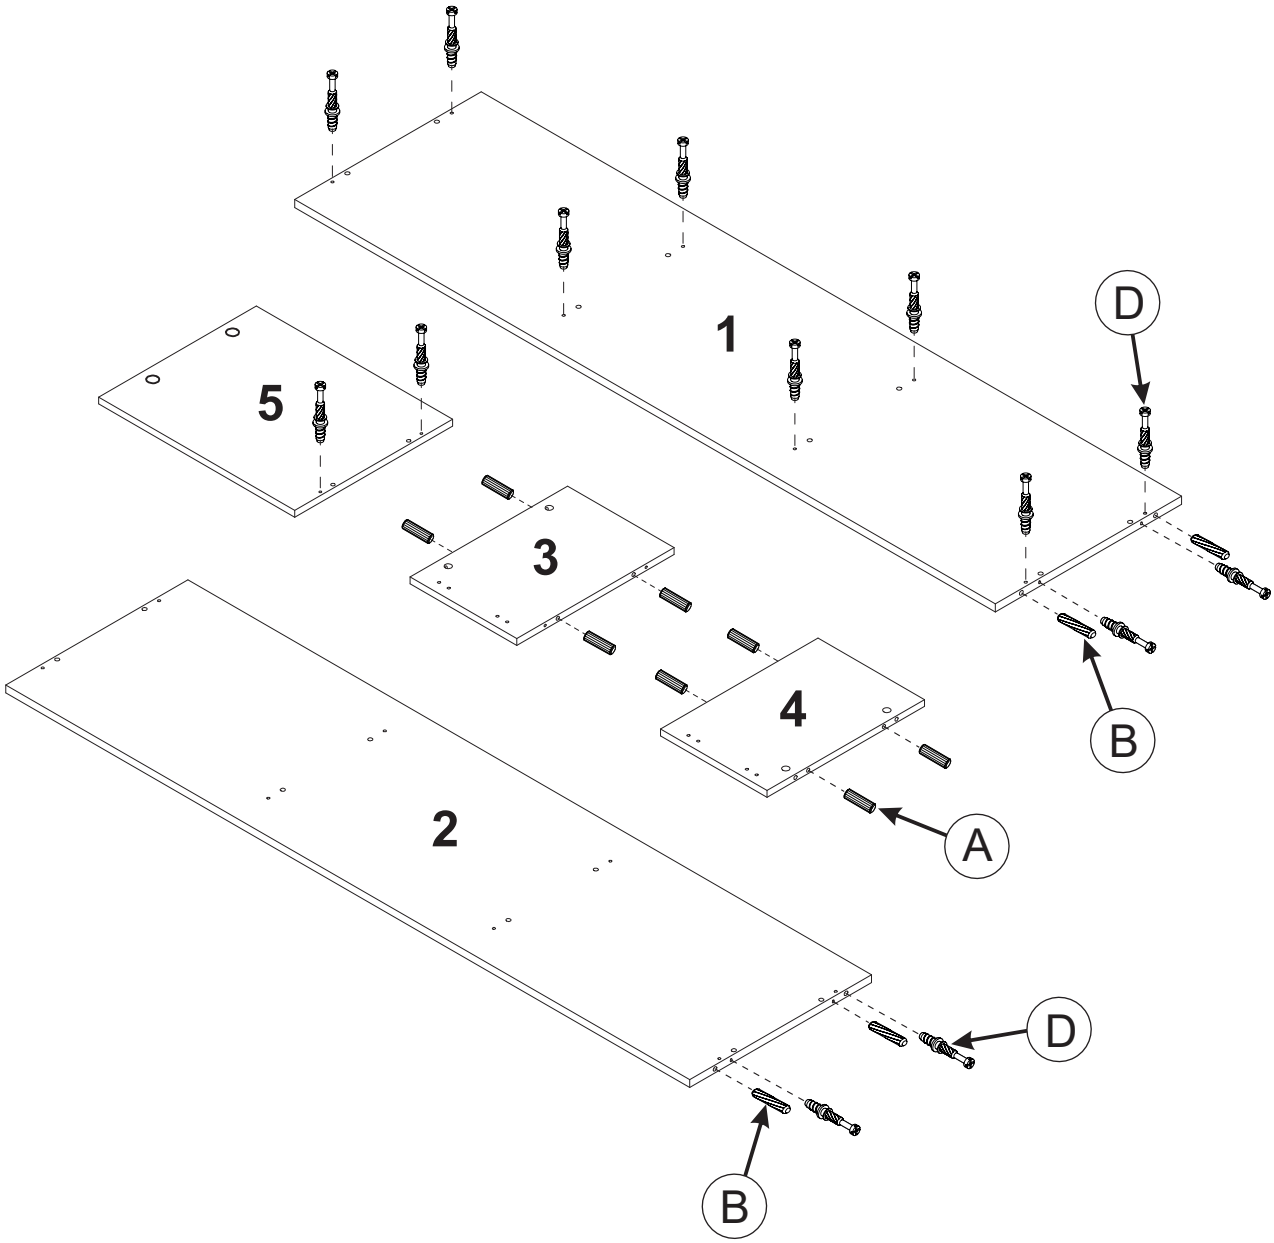

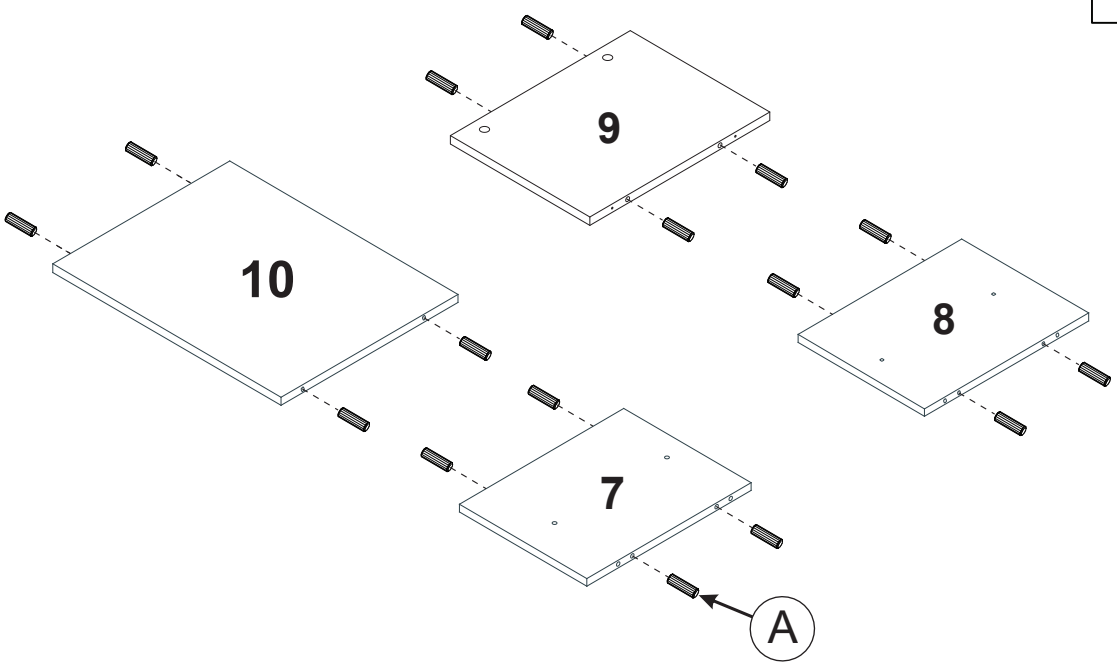STEP 2 :




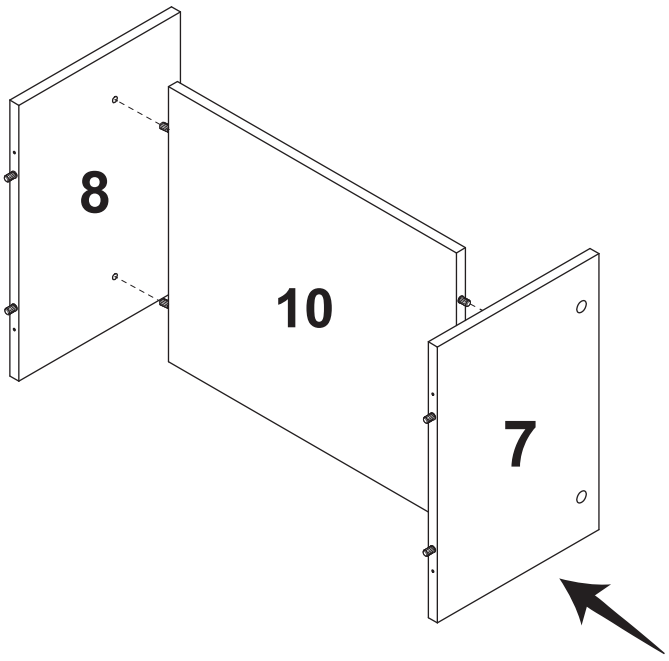STEP 3 :



STEP 4 :

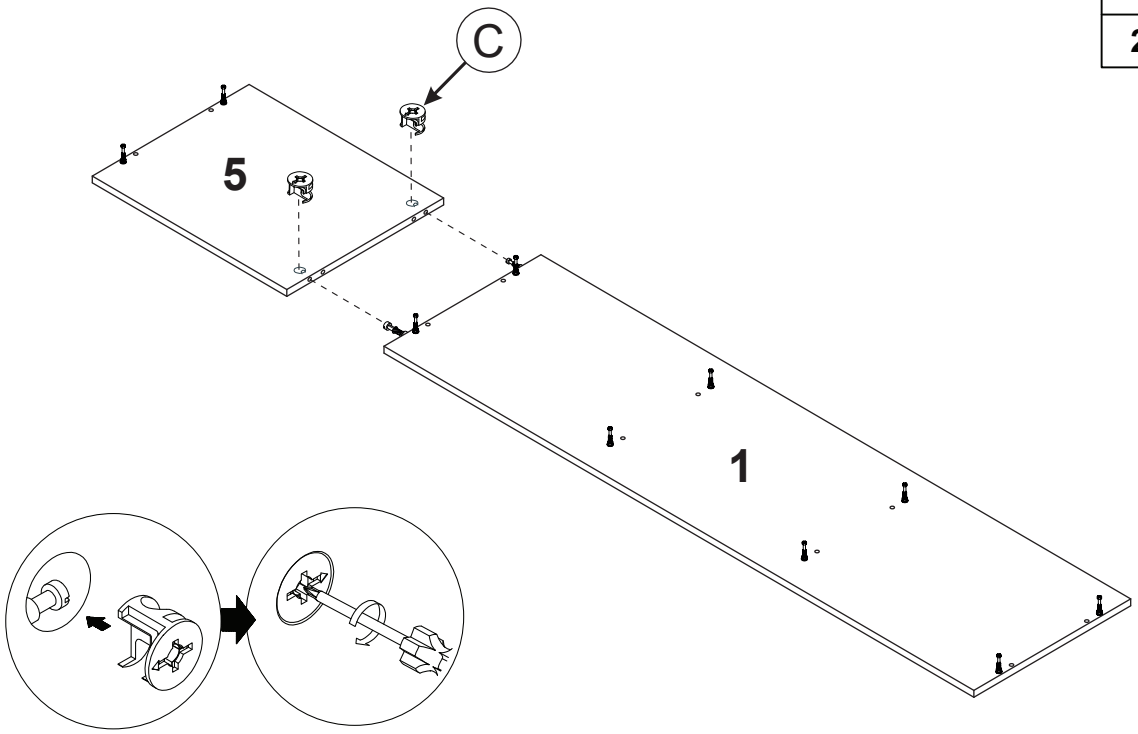C




C

2 PCS

STEP 5 :

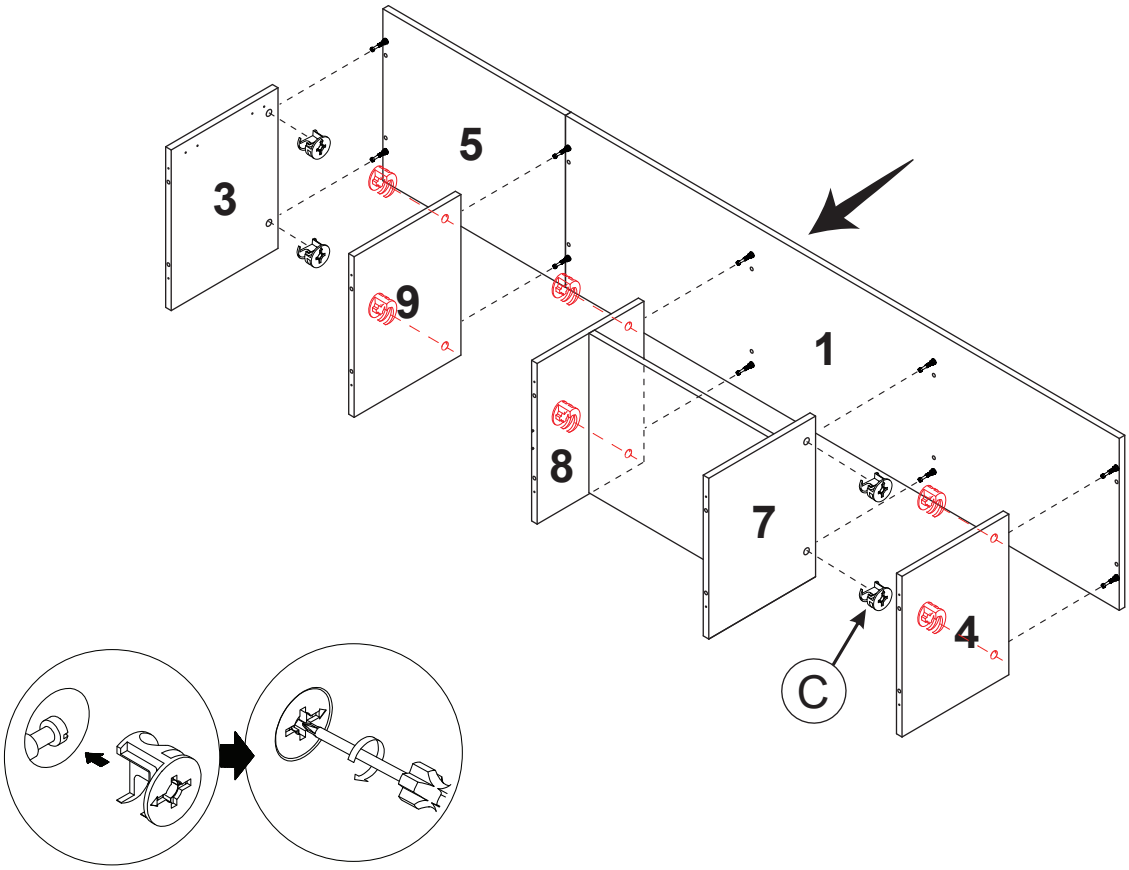C



C

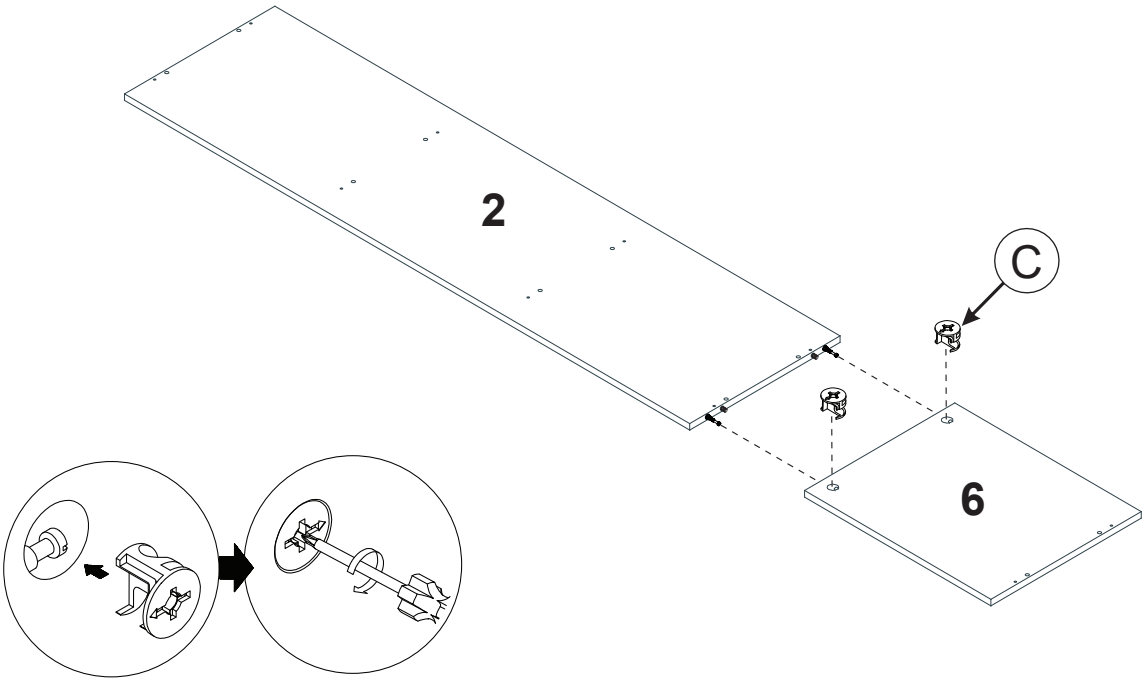
10 PCS

C



2 PCS

STEP 6 :




E





10 PCS

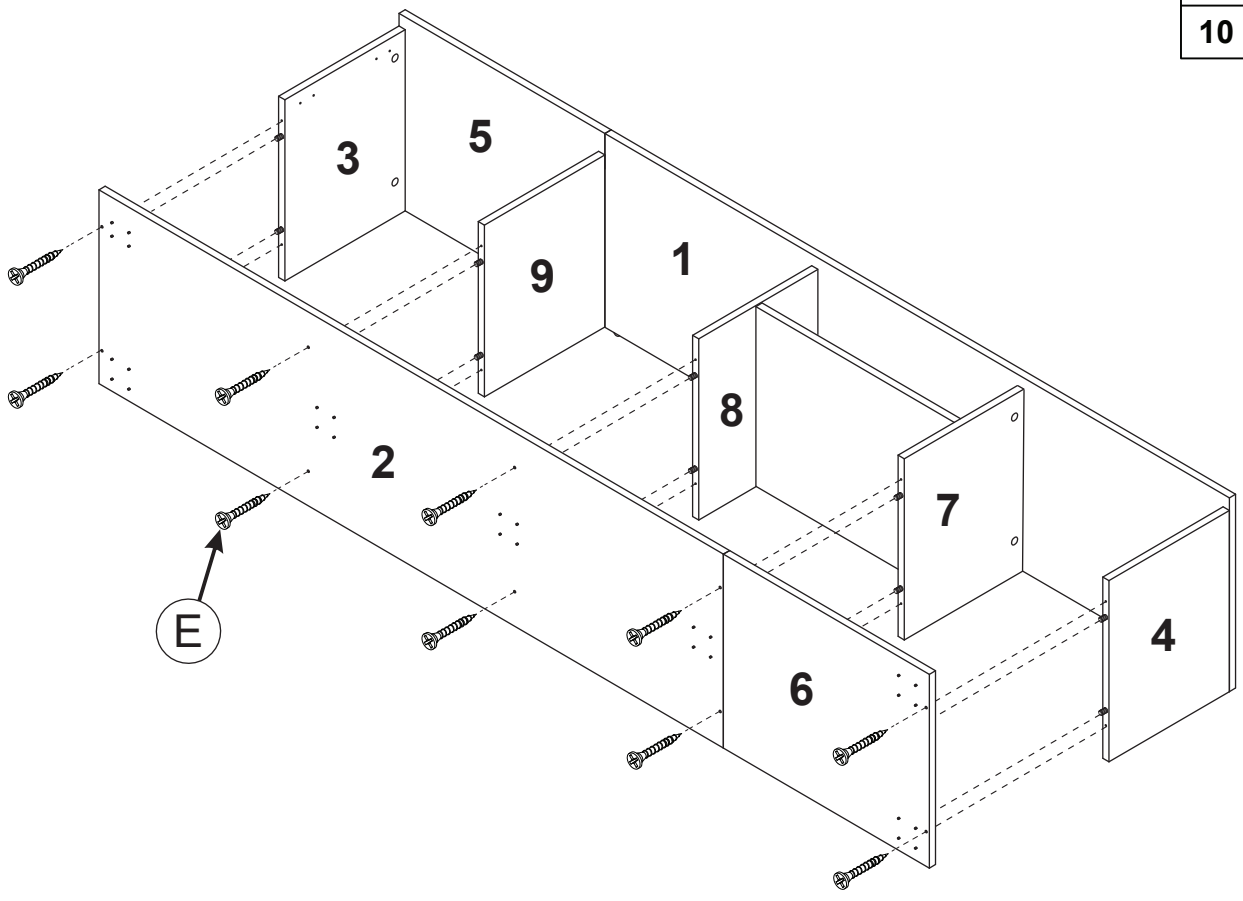STEP 7 :






STEP 8 :

G

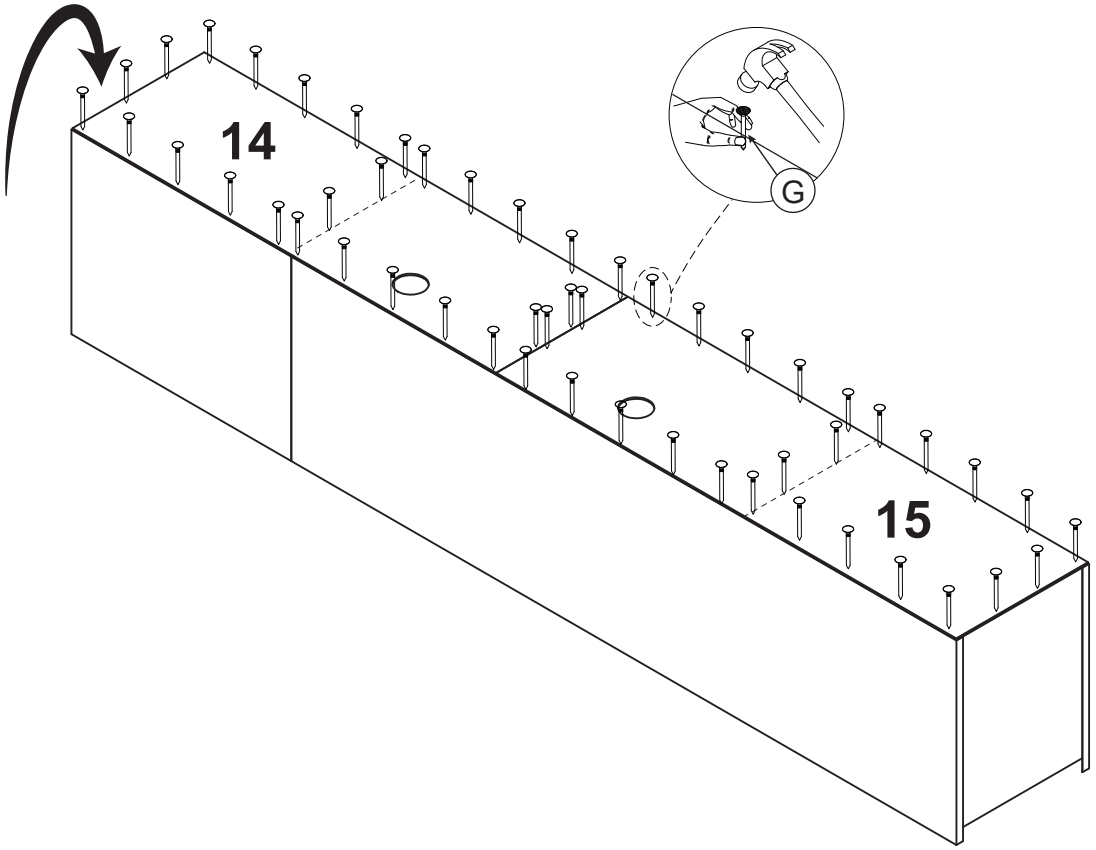52 PCS



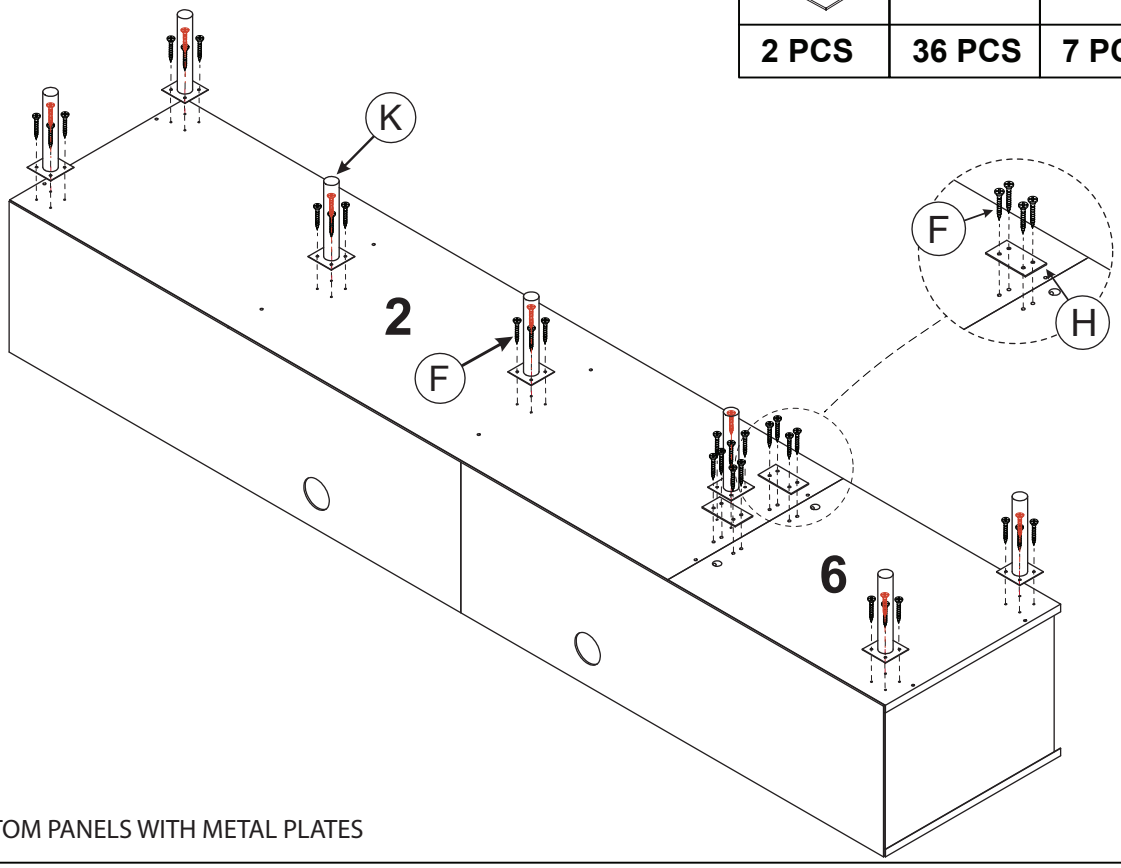STEP 9 :


H	F	K
		
2 PCS	36 PCS	7 PCS



REMARK!
SECURE BOTTOM PANELS WITH METAL PLATES


STEP 10 :

F	I	J
12 PCS	4 PCS	2 PCS

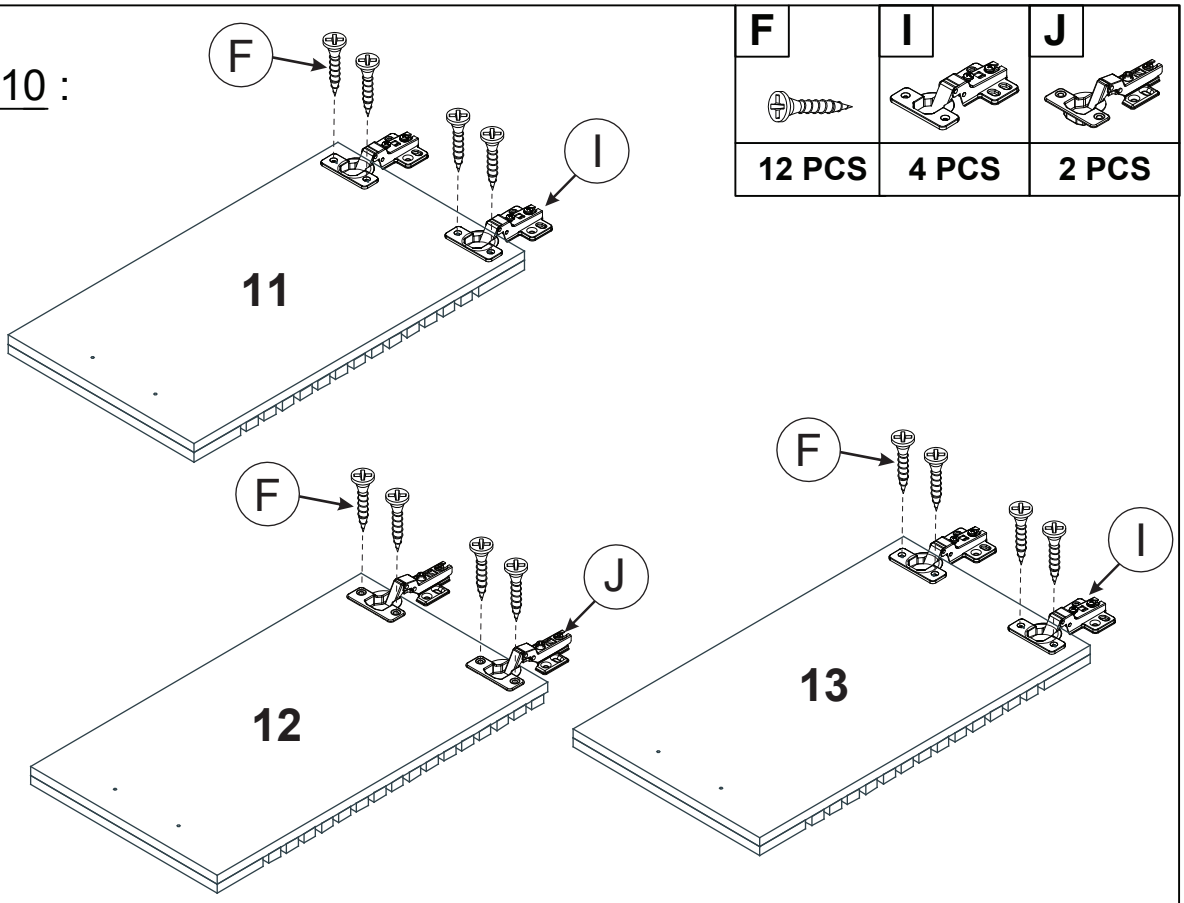

STEP 11 :


L	M
3 PCS	6 PCS

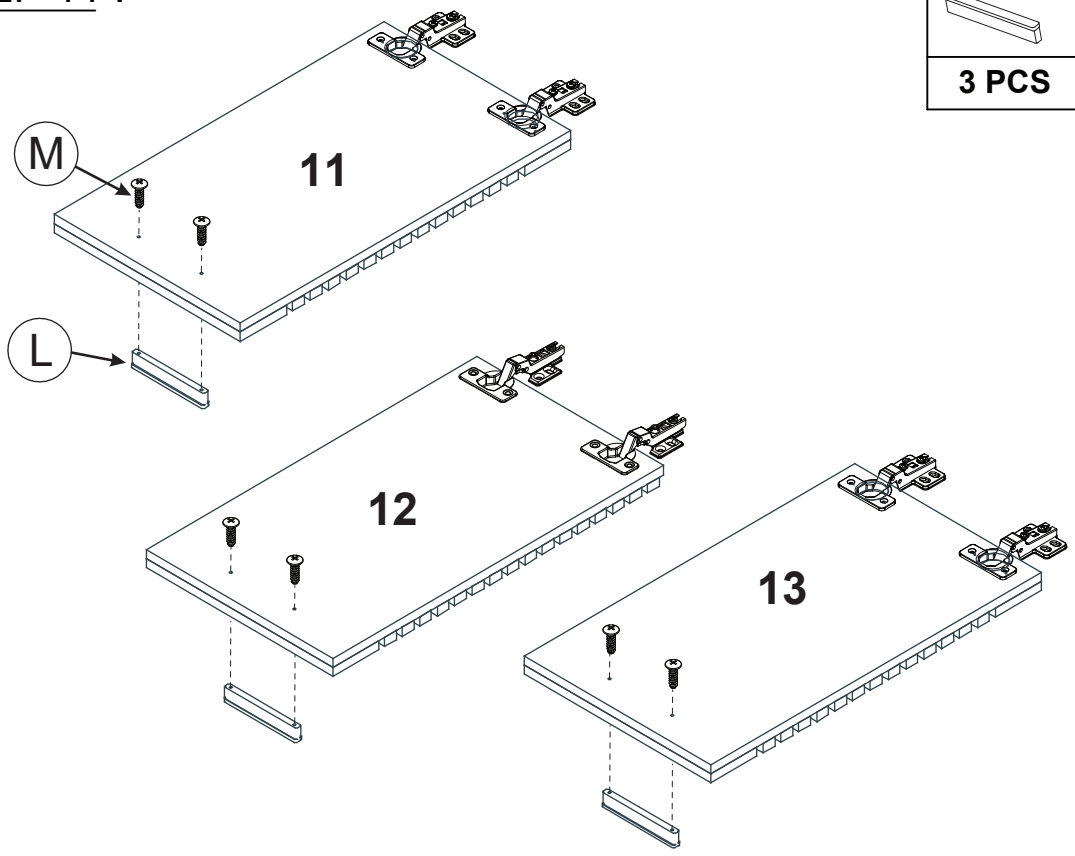


F

24 PCS

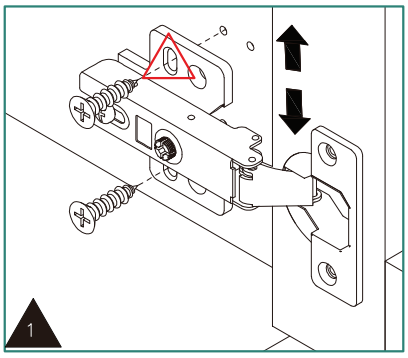
STEP 12 :




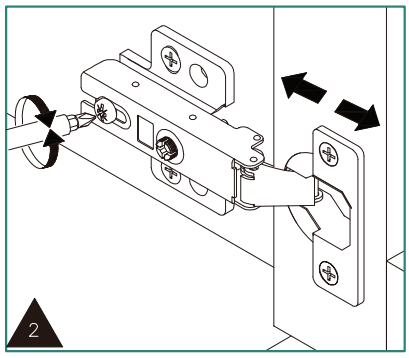Use the "waist round hole" marked with a triangle to adjust the position of the door panel (ensure that the gap between the door panel and the upper and lower panels is consistent).




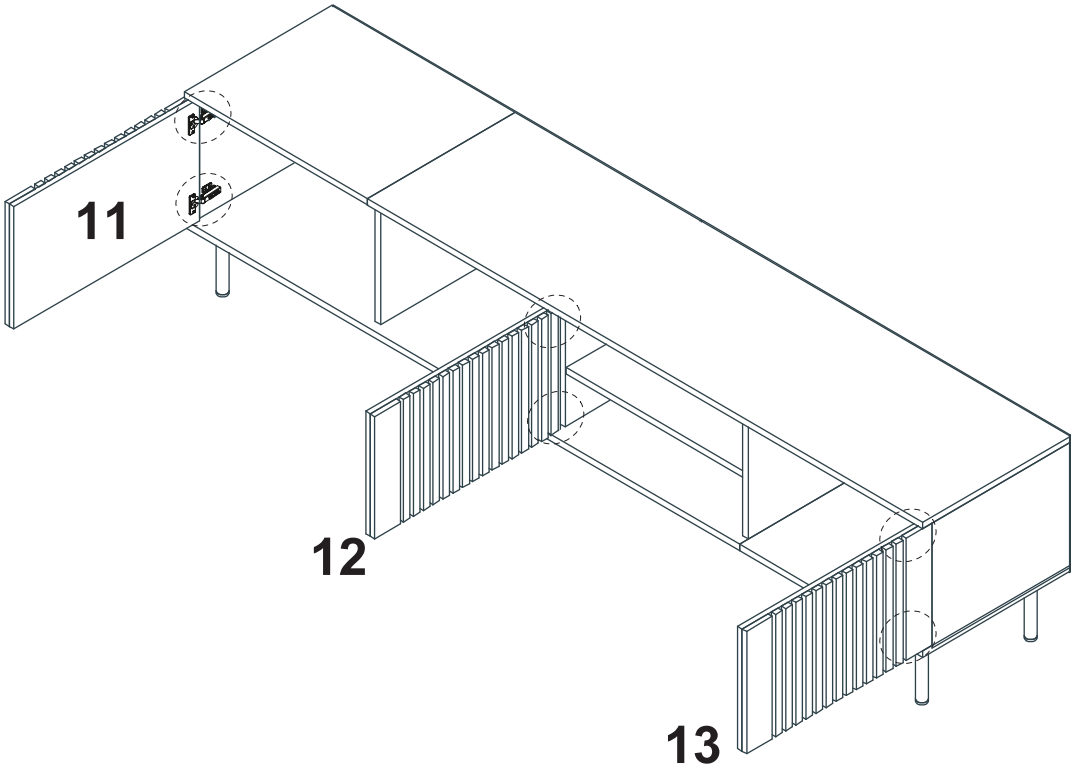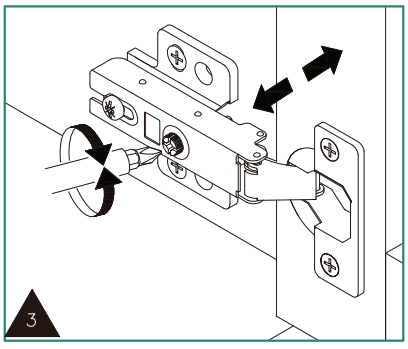Use the screw at the back end of the hinge to adjust the front and back position of the door panel (ensure that the front of the door panel is in the same plane as the upper and lower panels).





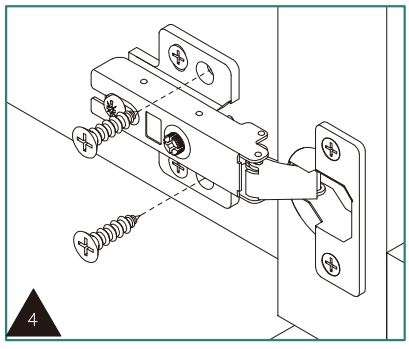Use the screw at the front end of the hinge to adjust the lefl and right position of the door panel (ensure that the left and right sides of the door panel are in the same plane as the upper and lower panels).



After completing these three steps, secure the other two screws on the hinge.

STEP 13 :

