







SKU:FY-AUT164YM/FY-AUT164BK


A  2PCS	J  M6*40 8PCS
B  1PC	K  M6*55 6PCS
C  2PCS	L  Ø15*Ø8.5*1.5 30PCS
D  2PCS	M  M6 28PCS
E  1PC	N  1PC
F  2PCS	O  M6 2PCS
G  M6*10 4PCS	P  M6 2PCS
H  M6*20 4PCS	Q  1PC
I  M6*30 6PCS	

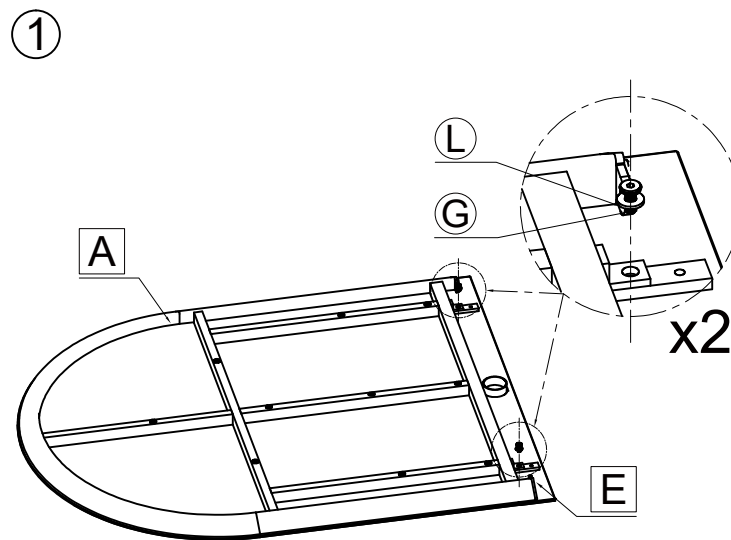


Do not tighten the screws completely in the step.

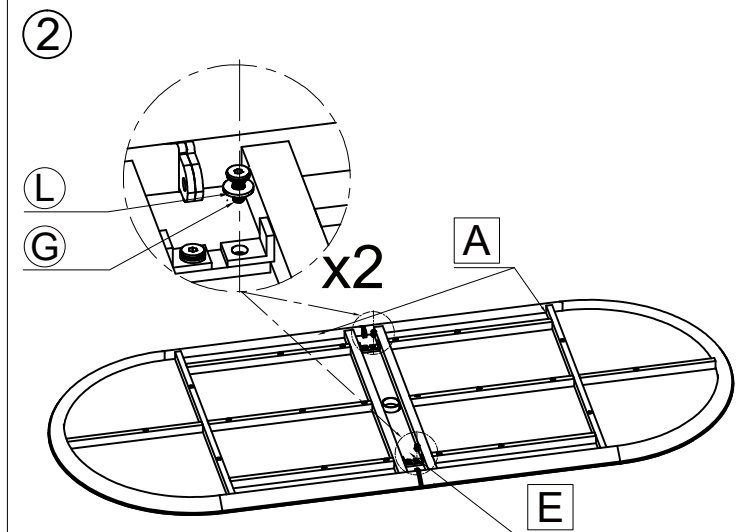

Tighten the screws completely in the step and then align the two tabletops.

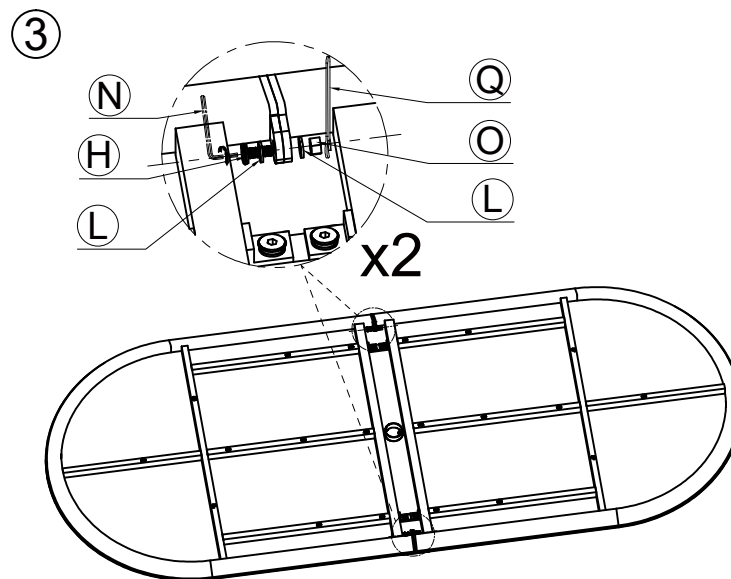

Do not tighten the screws completely in the step.

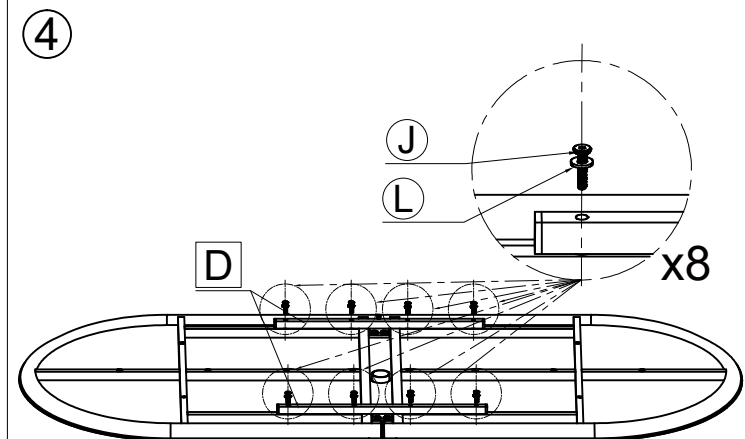


Do not tighten the screws completely in the step.




Tip: We recommend flattening the boxes to use as a protective work surface, or setting up your new furniture on a soft floor like a carpet.

⑤

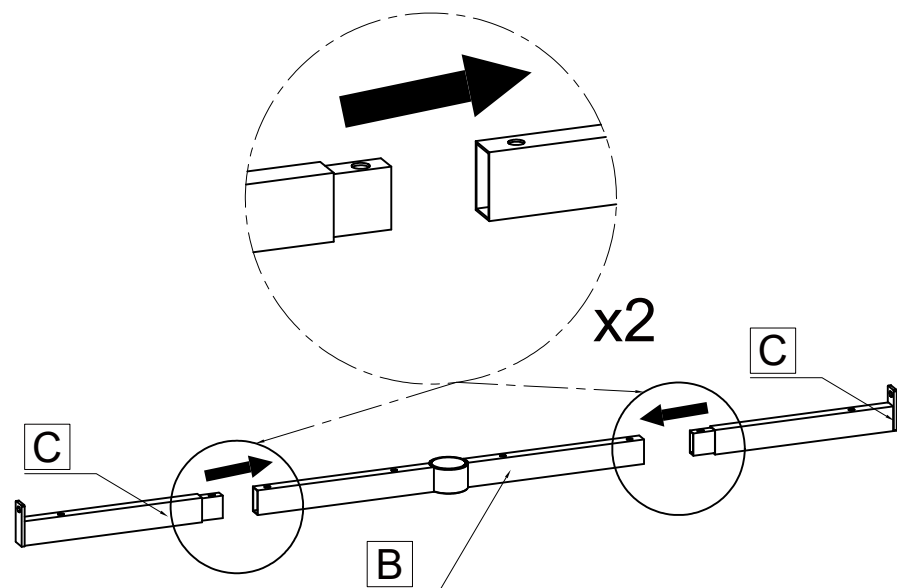


⑥

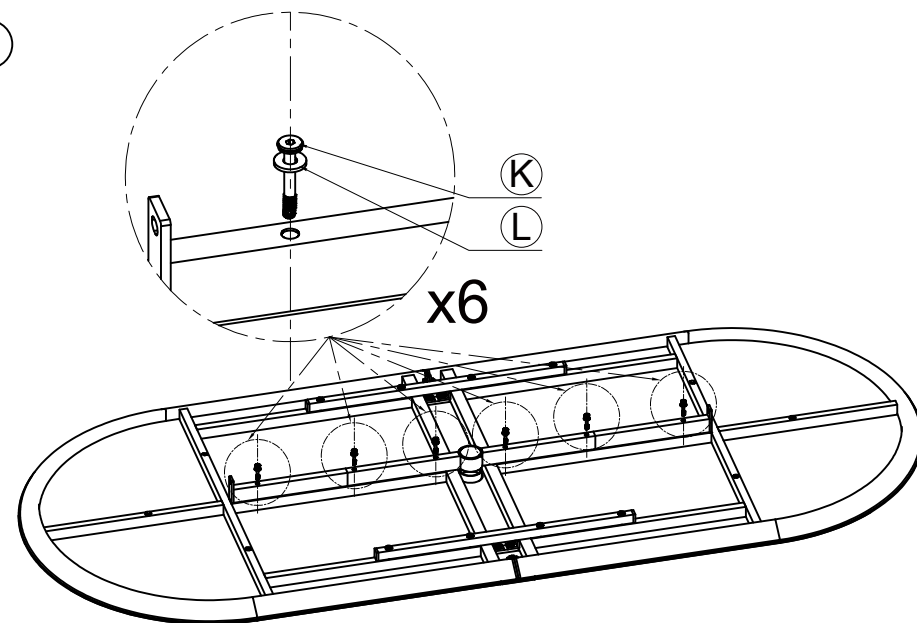


Do not tighten the screws completely in the step.

⑦

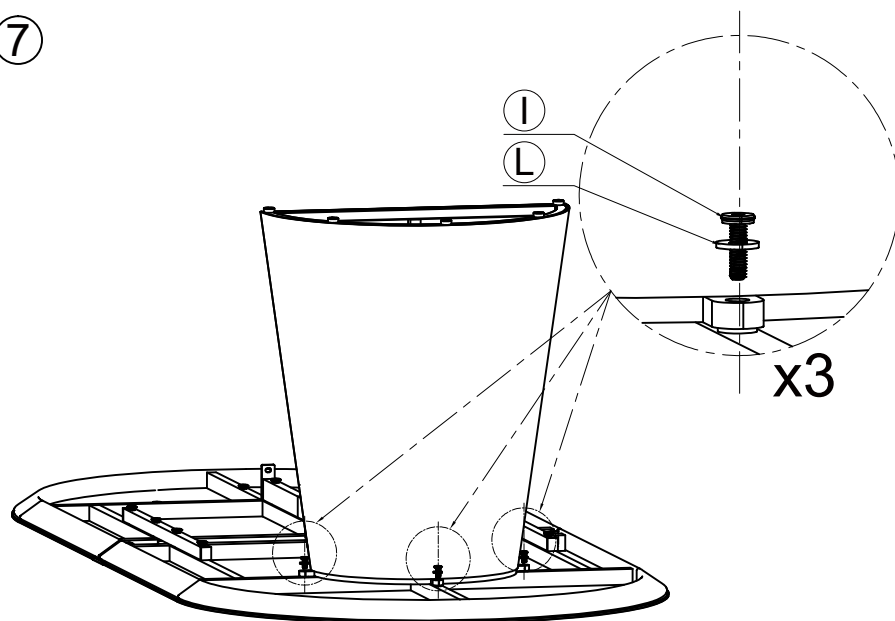


Do not tighten the screws completely in the step.

⑧

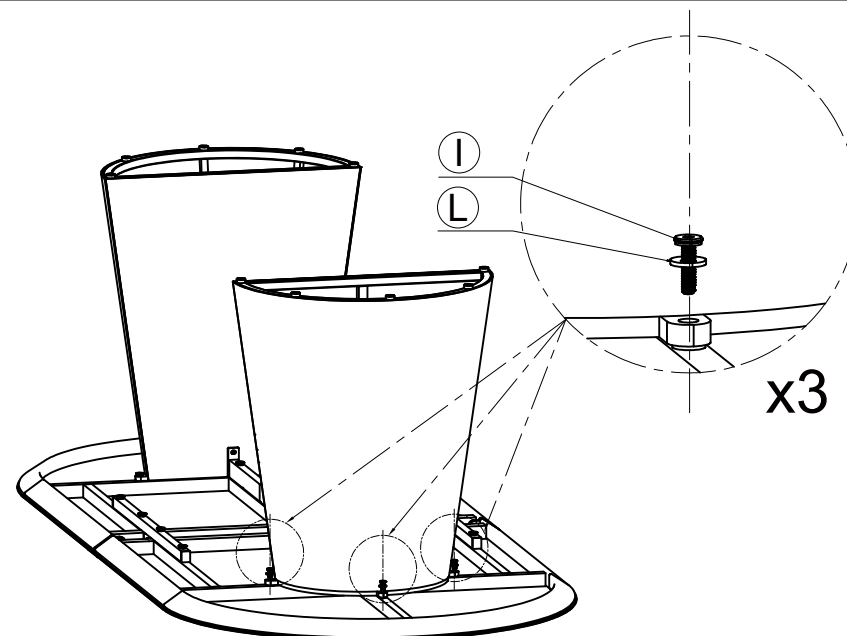


Do not tighten the screws completely in the step.

9

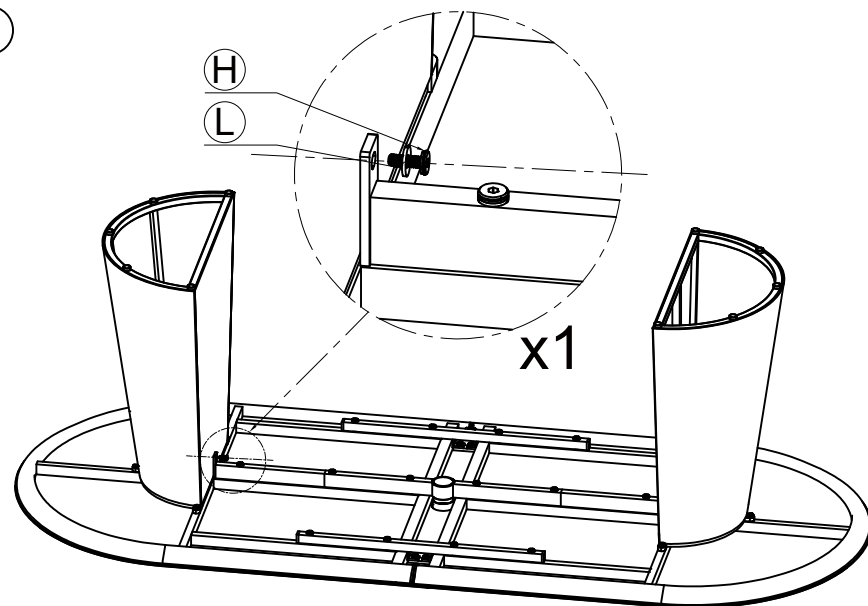


Tighten the screws completely in the step.

10

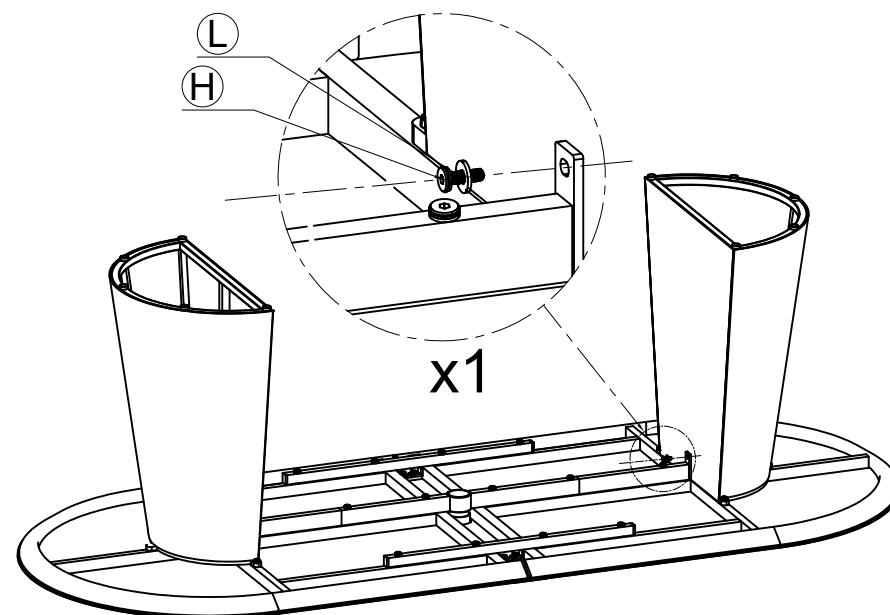

Tighten the screws completely in the step.

11

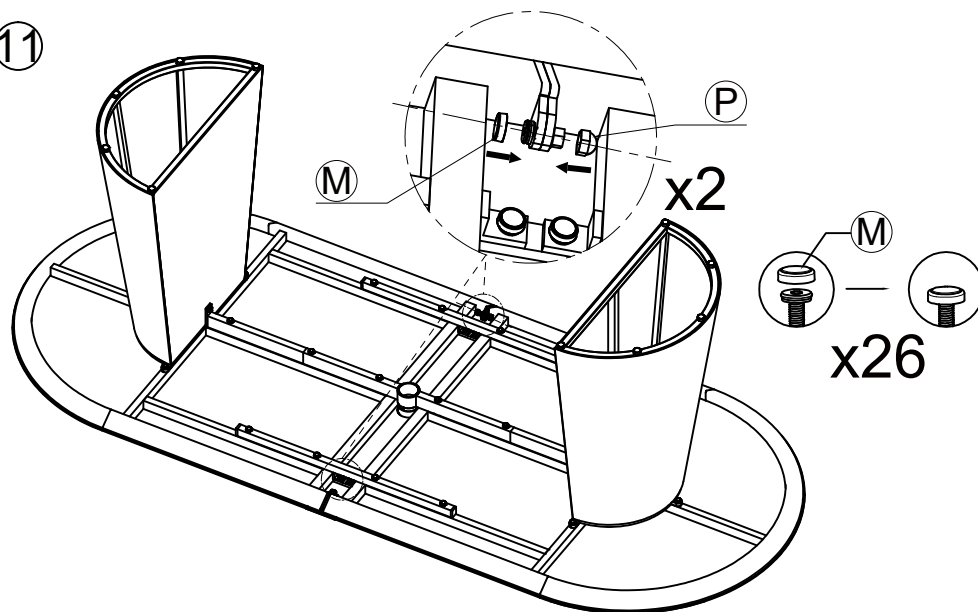

Install all the Caps (M) for protecting and concealing the screws.

12

