



ASSEMBLY MANUAL

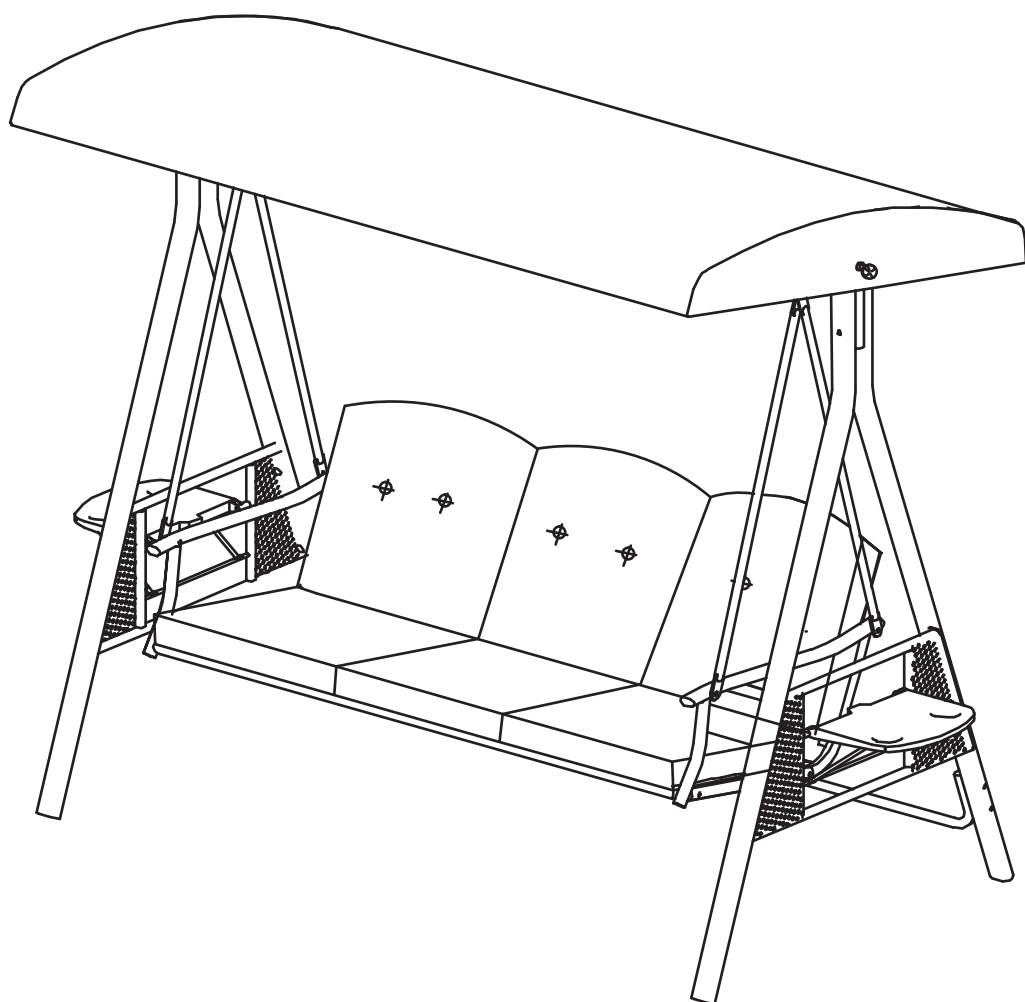

ASSEMBLY INSTRUCTIONS











- Prior to assembly, make sure you lay out and identify all the parts listed below in the parts list.
- Tighten all nuts and bolts securely. All bolts should be hand tightened before use. Never use power tools or excessive force during assembly and tightening of bolts.

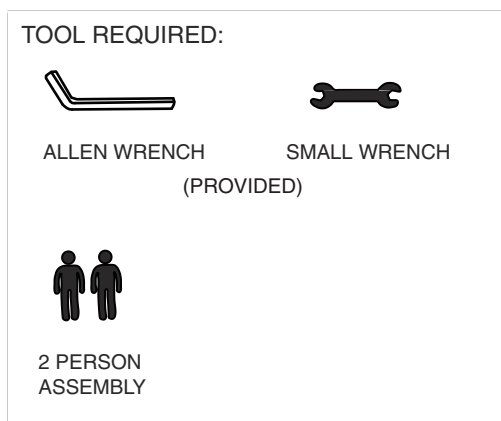

Warning:


1. Do not kneel or stand on swing chair.
2. Do not exceed 600lbs weight limit.
3. Make sure swing chair is located on a solid level surface.

PART LIST

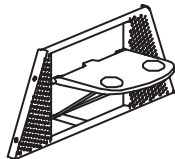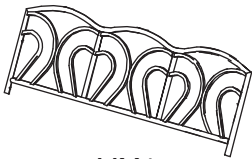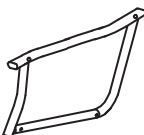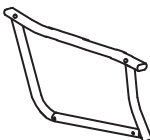LEG TUBE  AX2	LEG TUBE  BX2	TOP BEAM  CX1	CROSS BAR  DX2
HANGING PIPE  EX4	BACK LEG CROSS  FX1	SEAT FRAME  GX1	BACK FRAME  HX1
SPRING HOOK  IX2	ARMREST  JX1	ARMREST  J1X1	CANOPY  KX1
BOLT(M8*100)  MX4	BOLT(M6*89)  NX4	BOLT(M6*20)  OX8	BOLT(M8*55)  PX2
BOLT(M8*80)  QX2	BOLT(M8*65)  RX4	BOLT(M8*62)  SX2	CUSHION  TX3
NUT  W M6X4 M8X14	WASHER  X M6X12 M8X14	ROOF SCREW  YX2	SCREW CAP  Z M6X4 M8X14

STEP -1


First connect leg tube (part A) and (part B) with top beam (part C) using bolt M, washer X and nut W as shown in diagram. Then connect back leg cross (part F) with leg tube (part B) using bolt N, washer X and Nut W as shown in diagram.

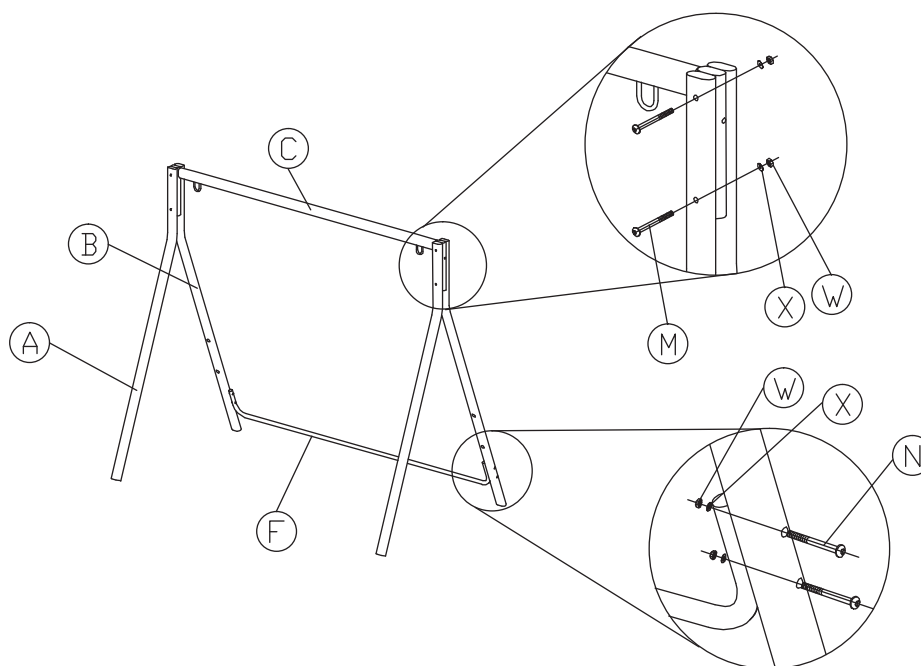

Attention: Both part A should be the same side, and both part B should be in the other side.


STEP -2

Affix leg tube (part A) and (part B) by cross bar (part D) using bolt O and washer X as shown in diagram.

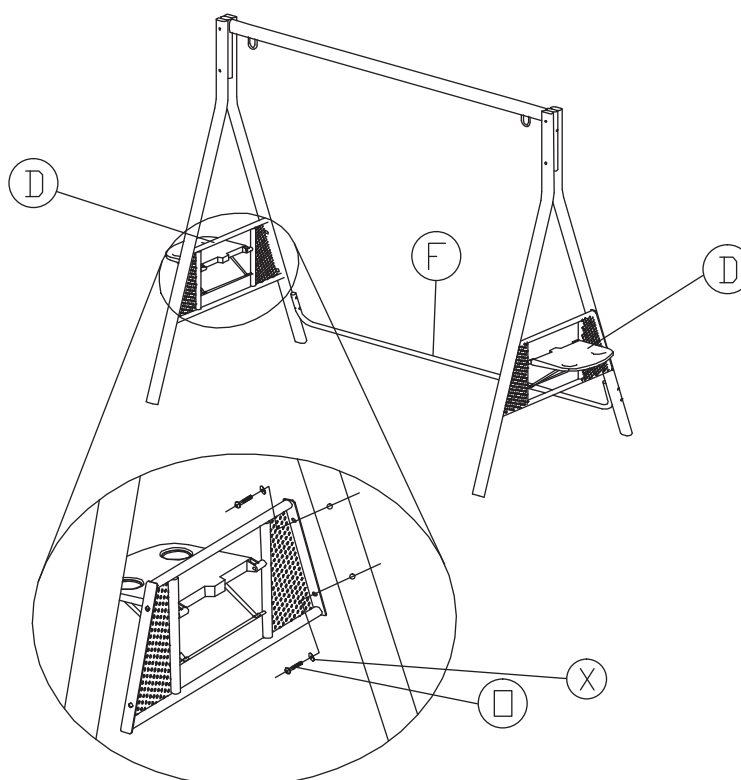


STEP -3

First connect armrest (part J) and (part J1) with back frame (part H) using bolt S,washer X and nut W as shown in diagram.
Then connect armrest (part J) and (part J1) with seat frame (part G) using bolt R,washer X and nut W as shown in diagram.

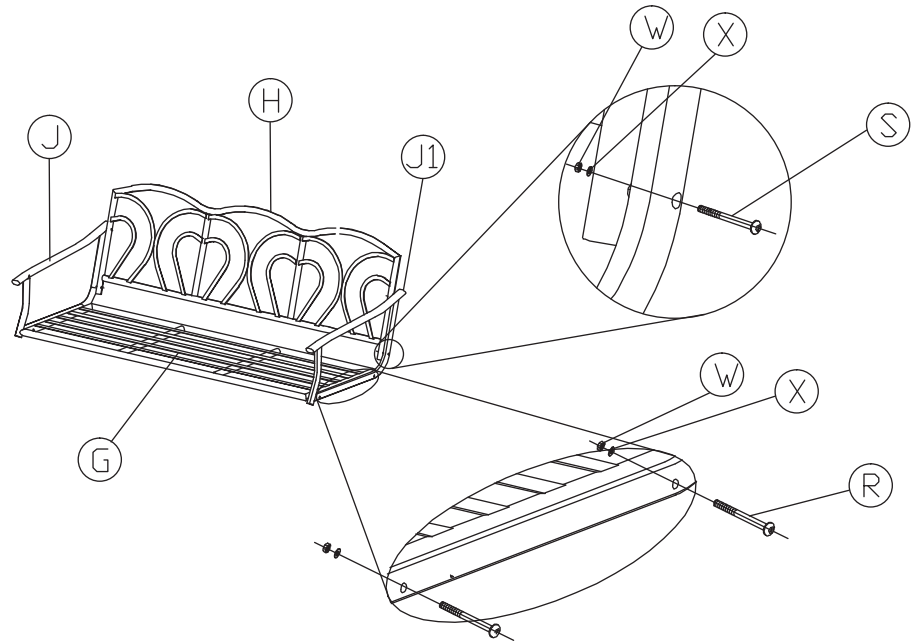


STEP -4

First connect hanging tube (part E) with armrest (part J/J1) and back frame (part H) using bolt Q,washer X and nut W as shown in diagram.
Then connect part E with armrest (part J/J1) using bolt P,wather X and nut W as shown in diagram. In the last,put spring hook (part I) into hanging tube (part E) as shown in diagram.

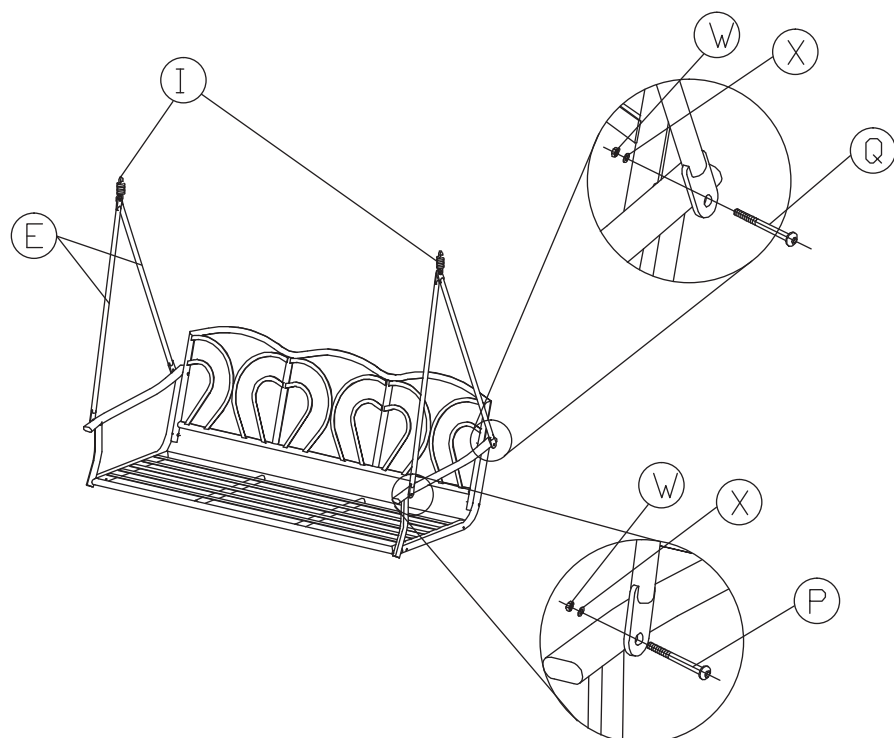


STEP -5

Using spring hook (part H) to hook the seat to the frame as shown in diagram.

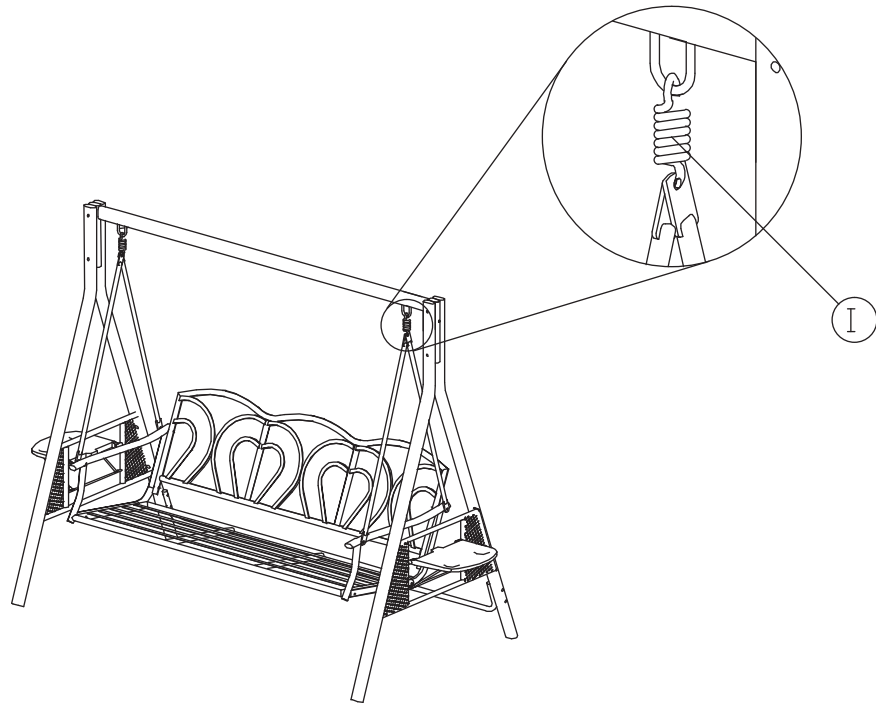


STEP -6

Connect canopy (part K) with top beam (C).

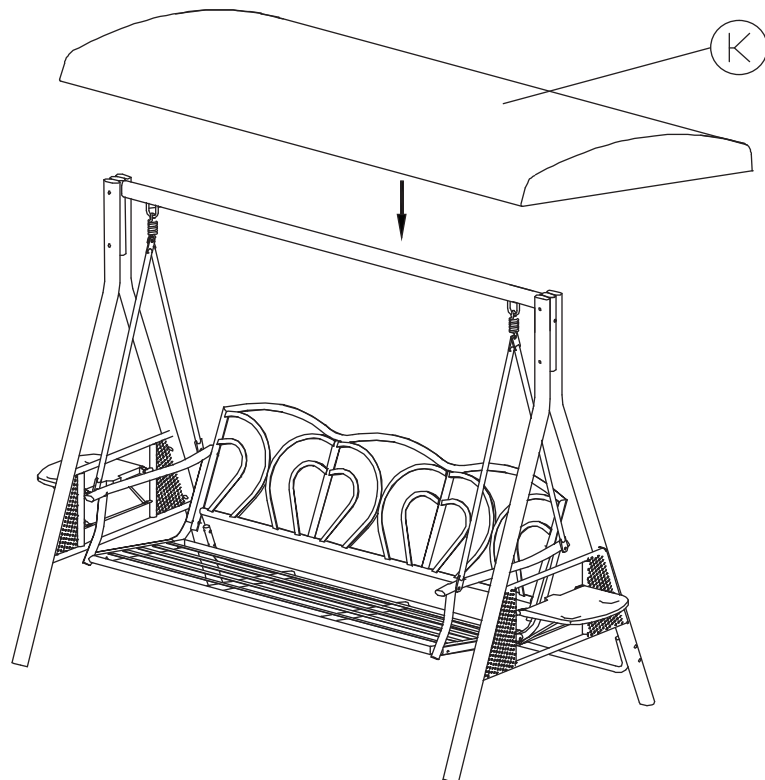


STEP -7

Connect canopy with top beam using bolt Y.

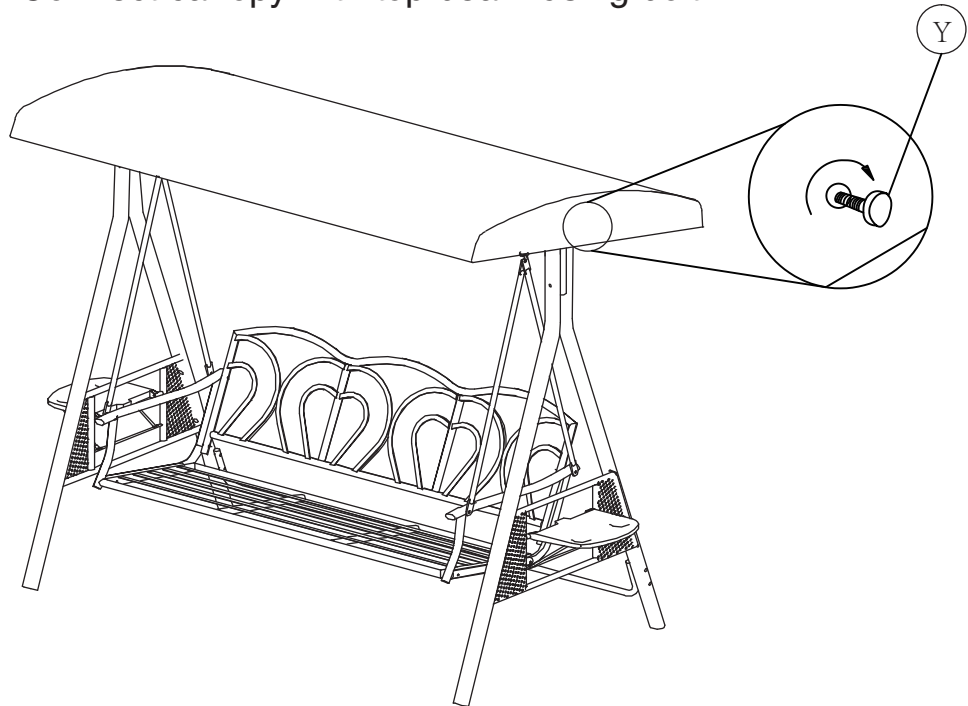

STEP -8

Put cushion (Part T) on the seat frame as shown in diagram.

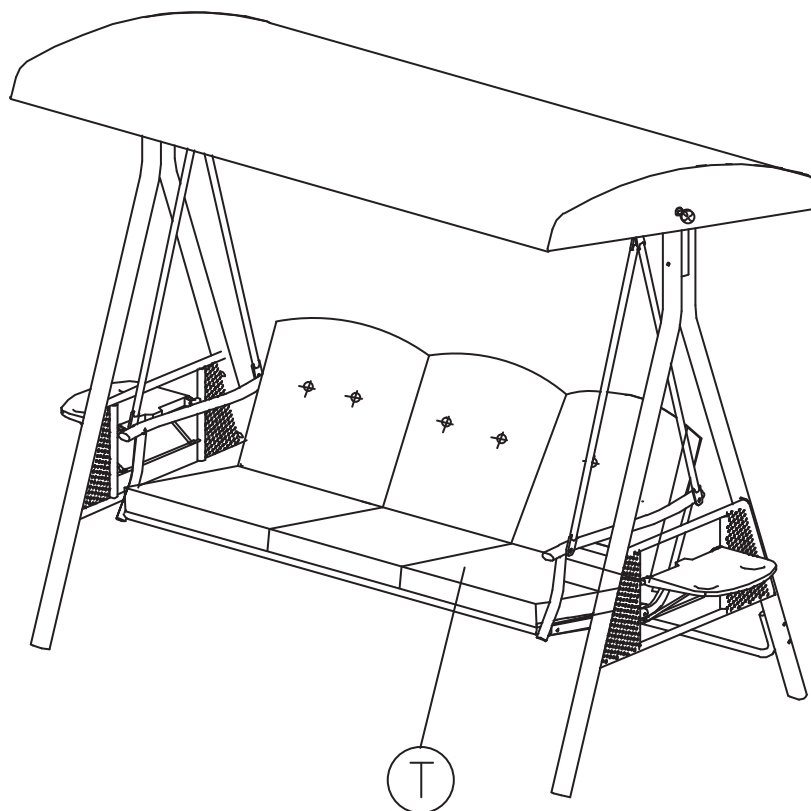

STEP -9

Make sure all of screws are fixed tightly then cover all screw caps Z (M6 or M8) before use in level solid ground.