


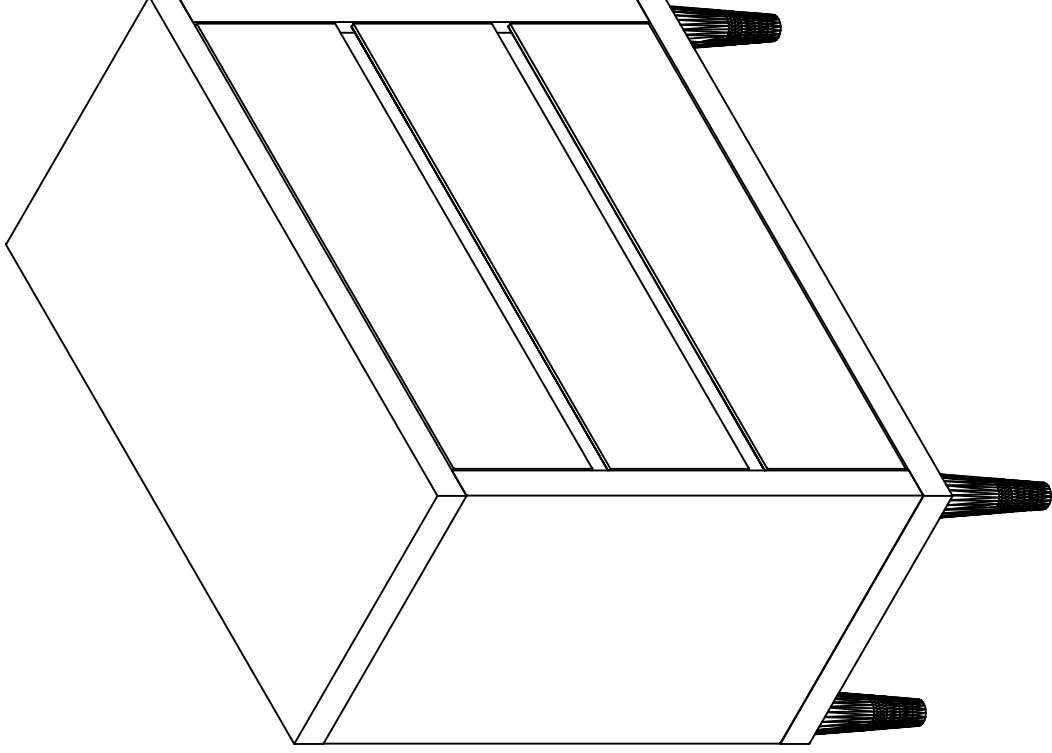
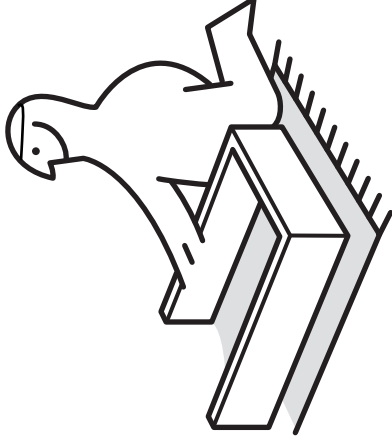
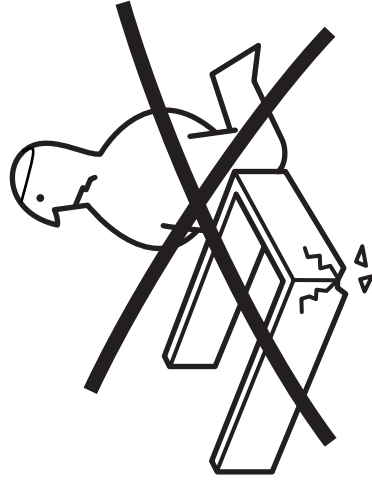


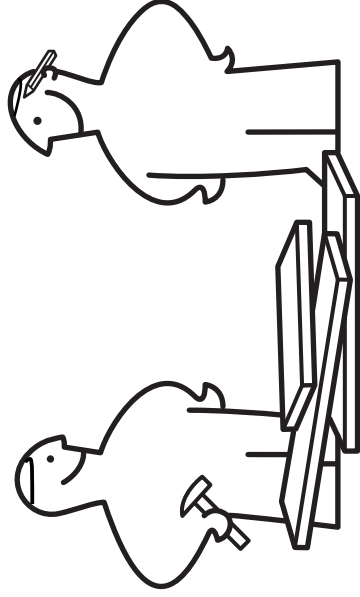

Thanks for purchasing one of our products,
please carefully read the assembly instructions
before installation(Attention:Do not tighten
the screws before all screws are in place).

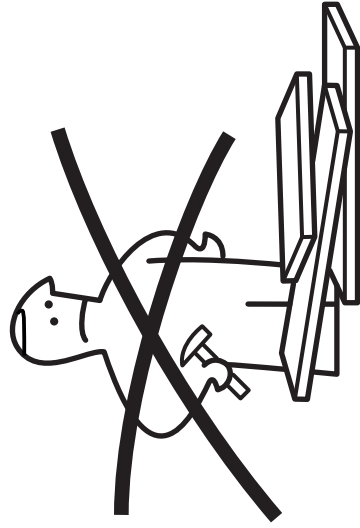


(Tools not provided)
Flat Blade Screwdriver
Phillips Head Screwdriver
Wooden Hammer



To Assemble the Unit
Wooden Hammer

PAGE1
Exploded View

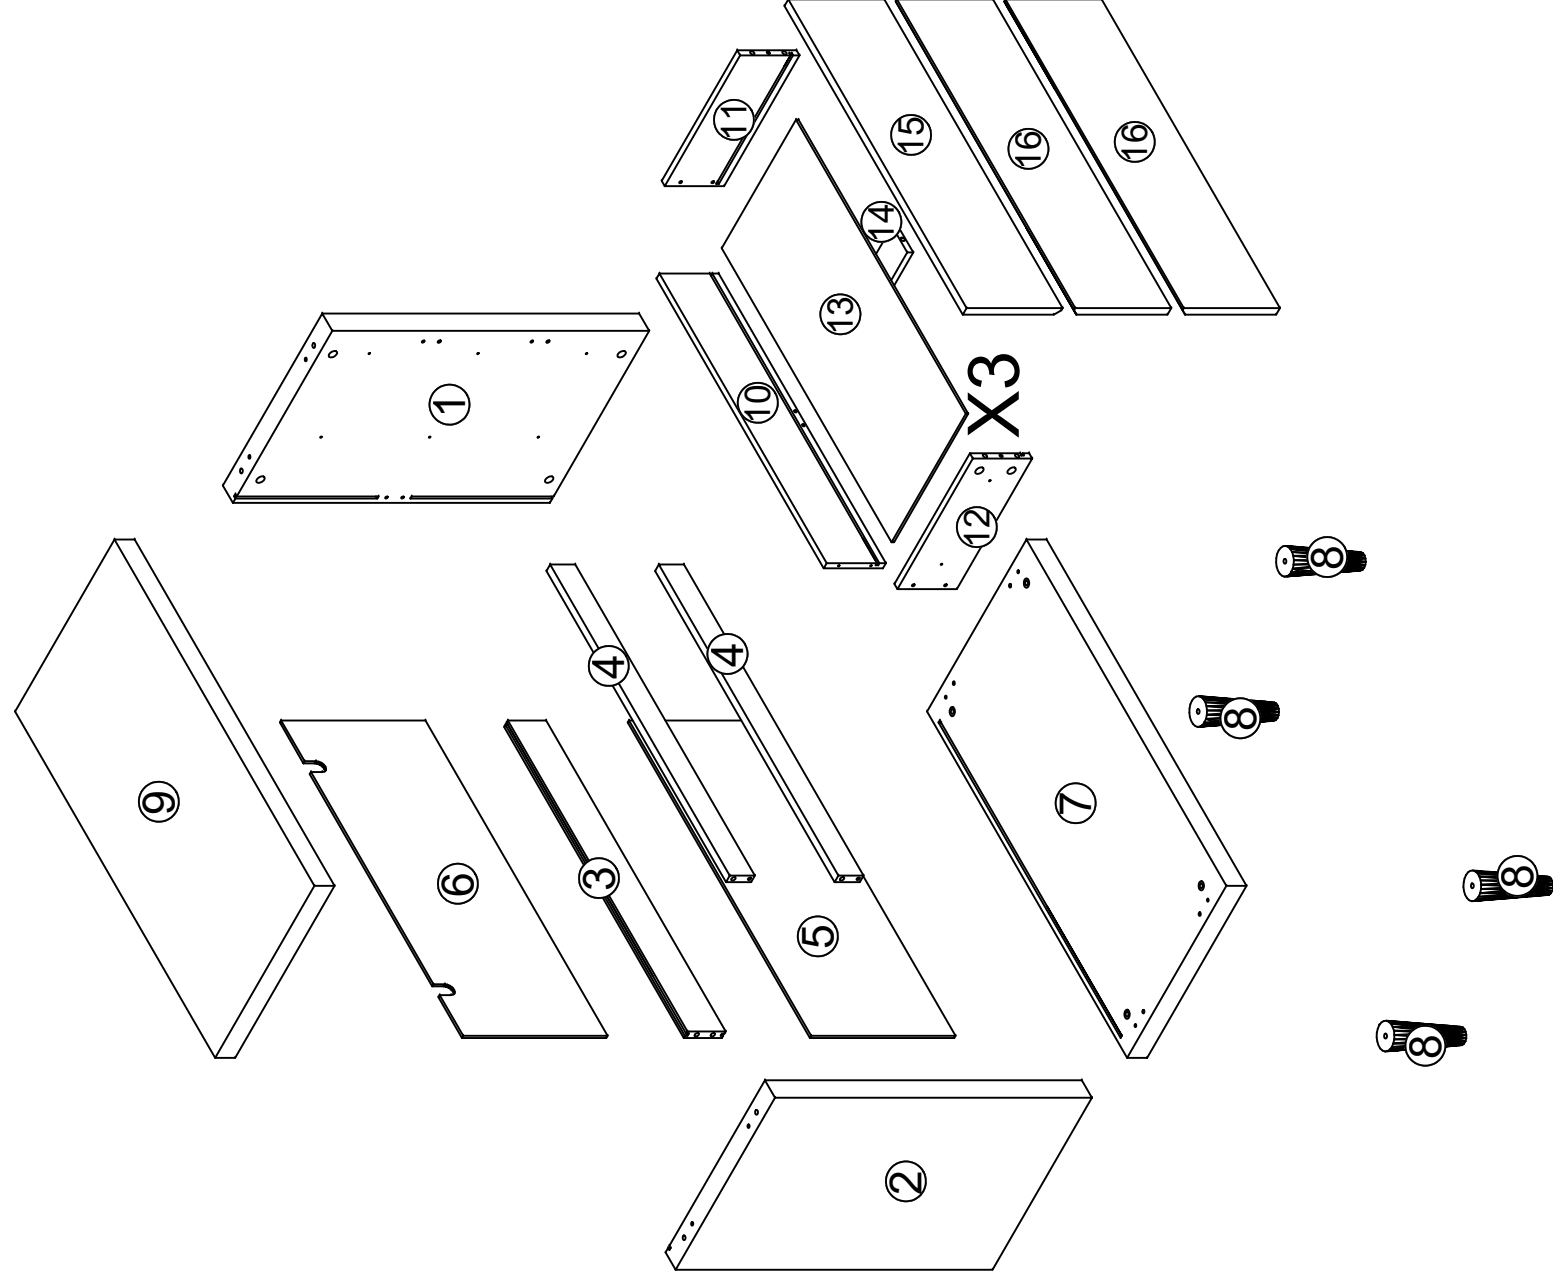




PAGE2 Check your Parts & Hardware

31+2PCS	31+2PCS	18+2PCS	24+2PCS
M3.5X30M 18+1PCS	M8X45M 4PCS	L=290mm 6PCS	(3*16MM) 4PCS
4PCS	2PCS	M3.5X14M 2PCS	2PCS
M3.5X25M 2PCS			



STEP1

PAGE3

will require these parts

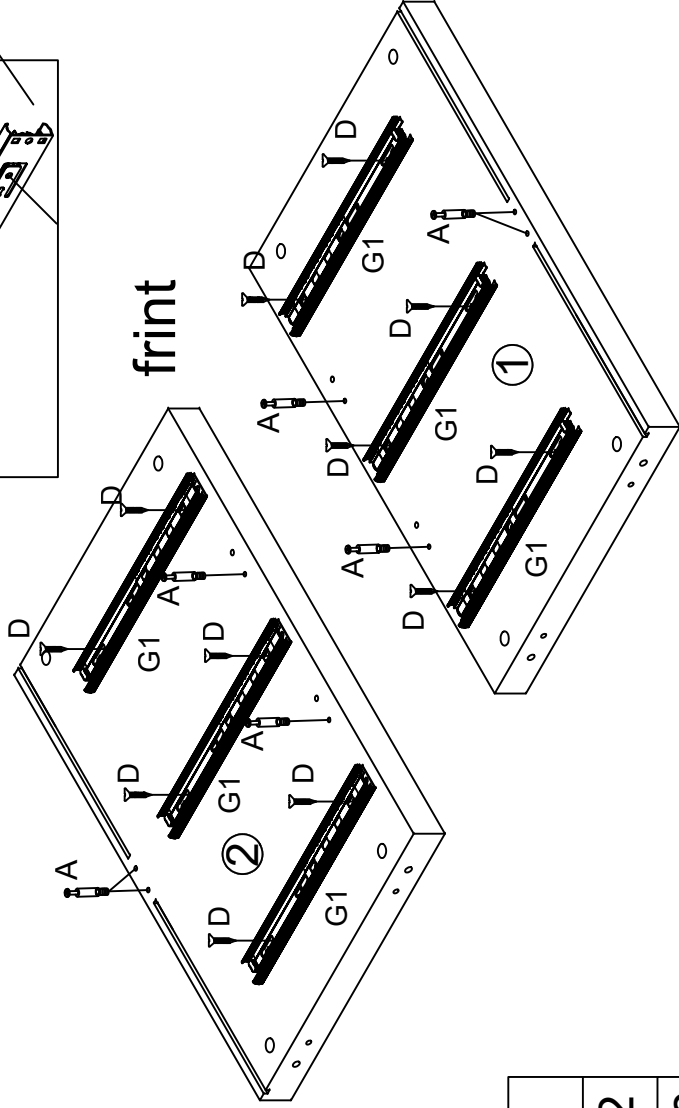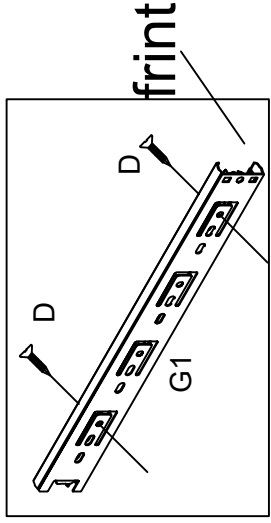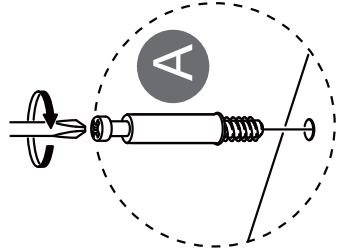

	AX8
	DX12
	G1X6

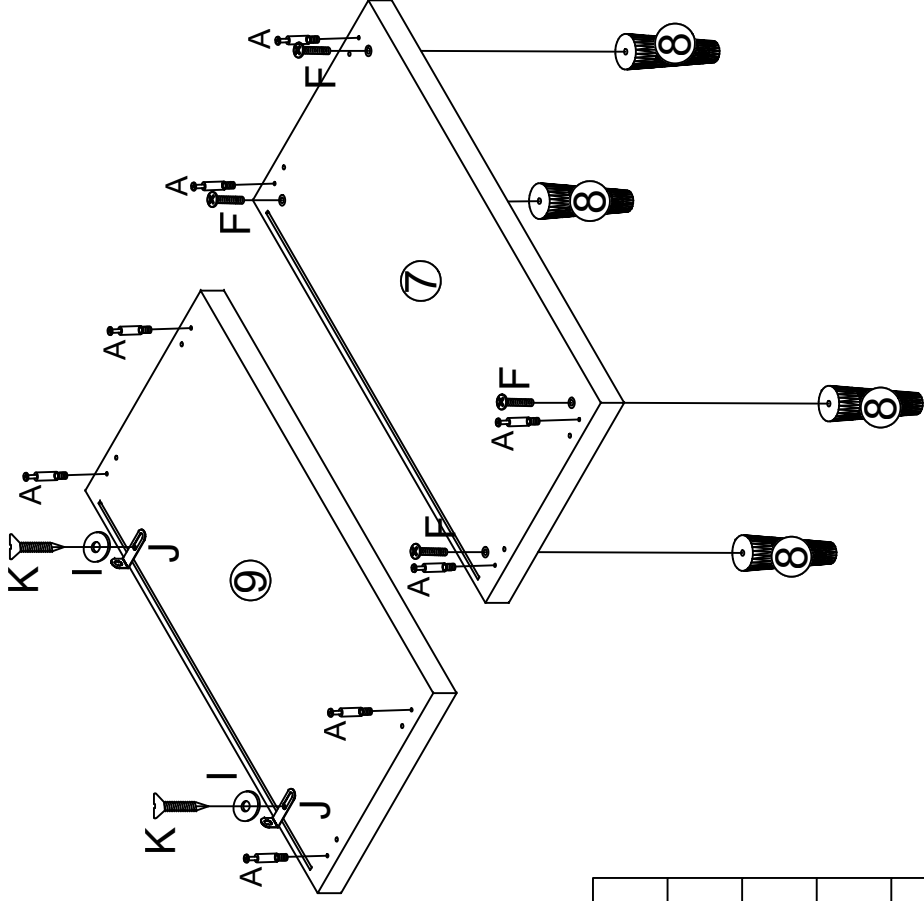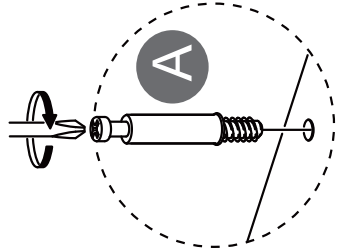


	AX8
	FX4
	IX2
	JX2
	KX2


STEP2

PAGE4


will require these parts

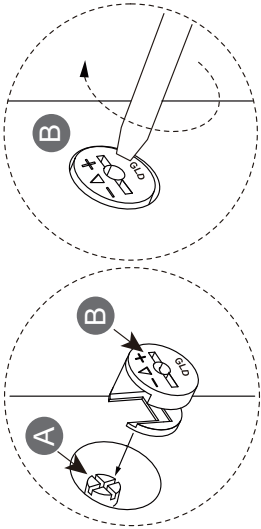


Attention:
Put **B** into the hole and turn
B clockwise to lock **A** tightly.

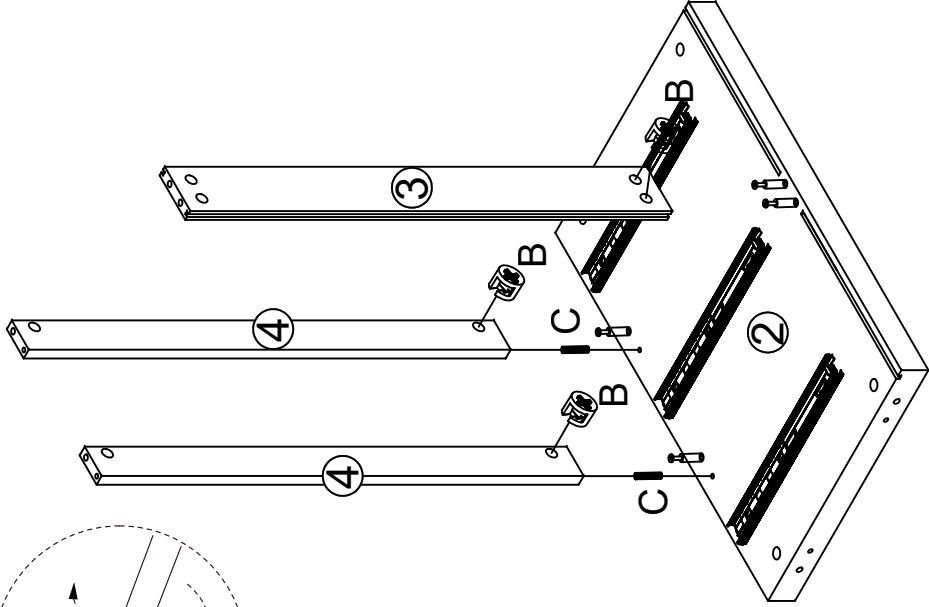

	BX4
	CX2

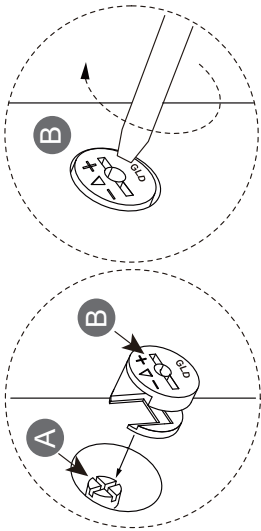

Attention:
Put **B** into the hole and turn
B clockwise to lock **A** tightly.


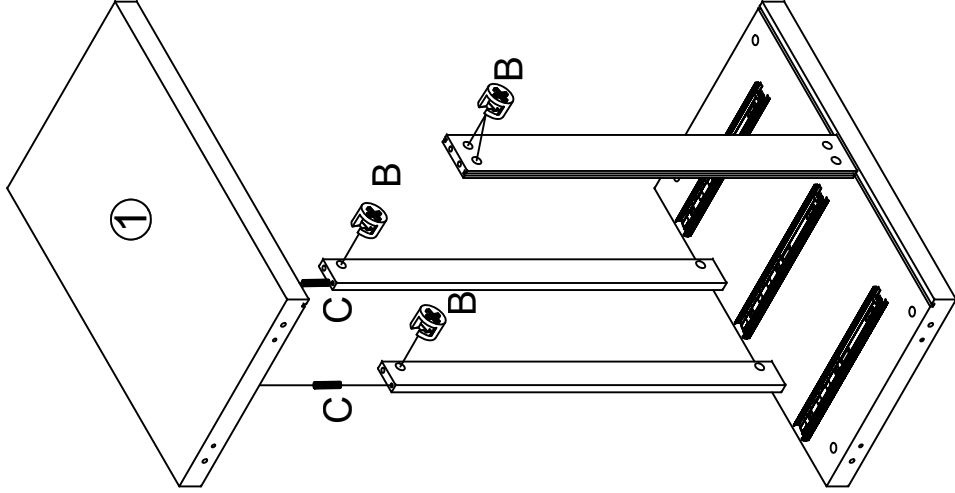


	BX4
	CX2


STEP3

PAGE5

will require these parts

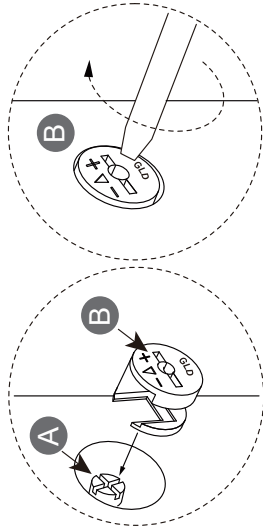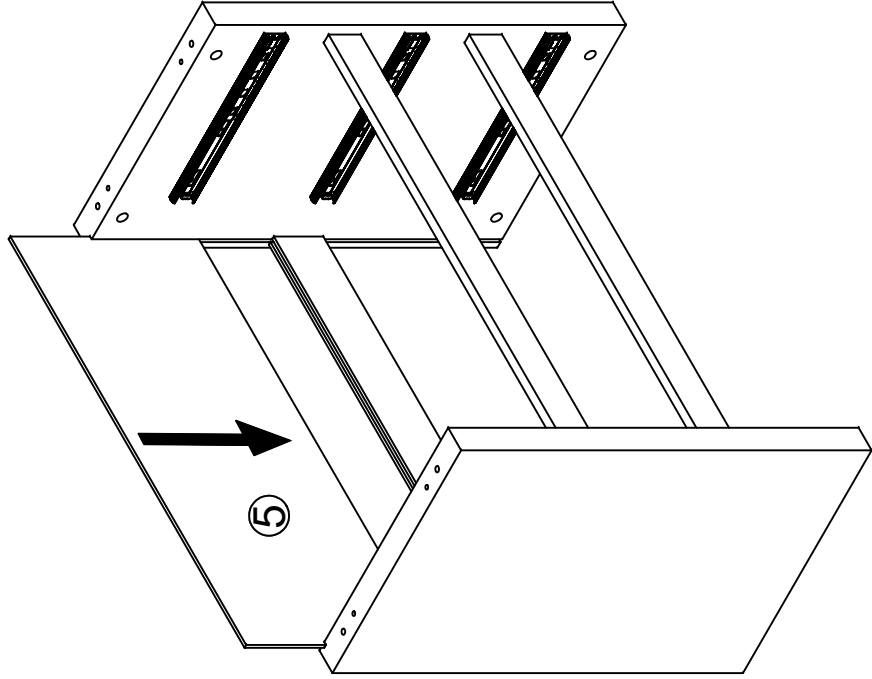



Attention:
Put (B) into the hole and turn
(B) clockwise to lock (A) tightly.

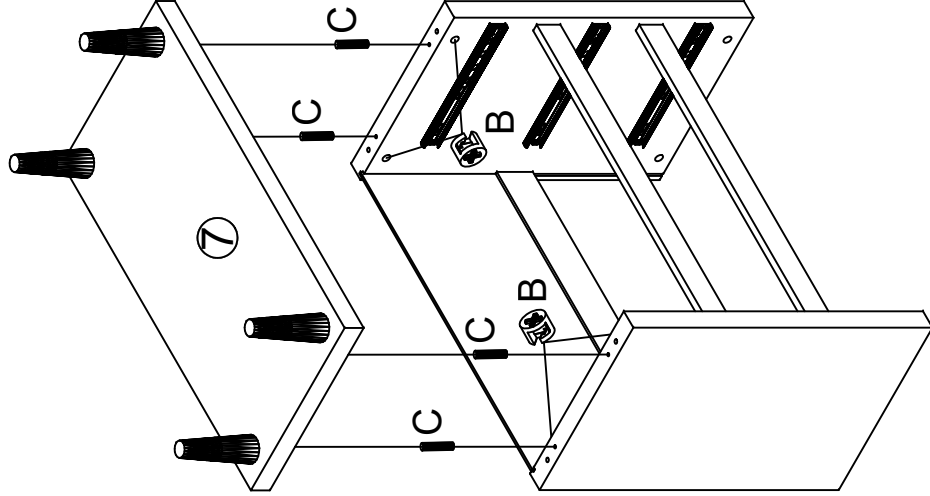


	BX4
	CX4

will require these parts

STEP4

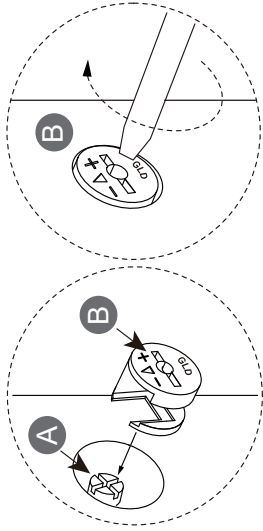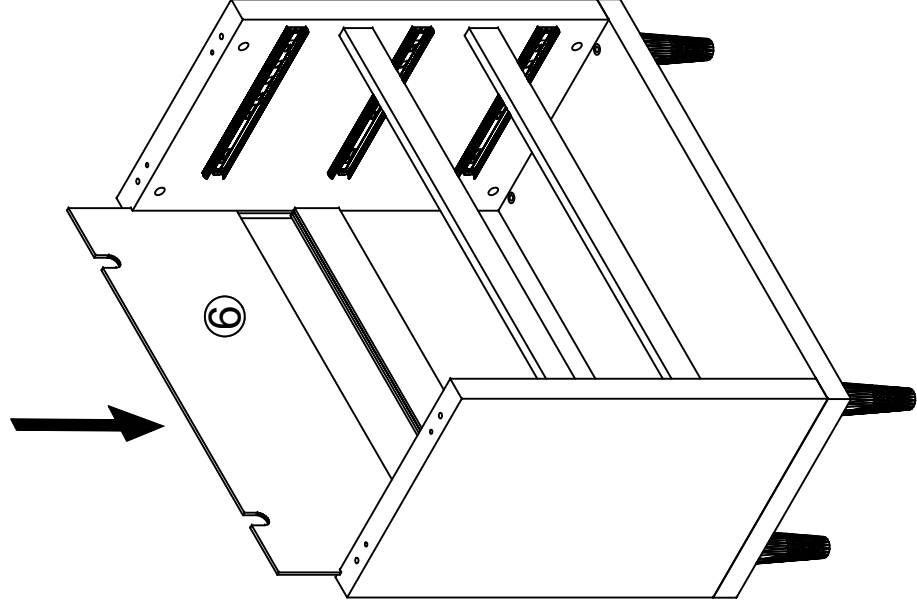


Attention:
Put (B) into the hole and turn
(B) clockwise to lock (A) tightly.

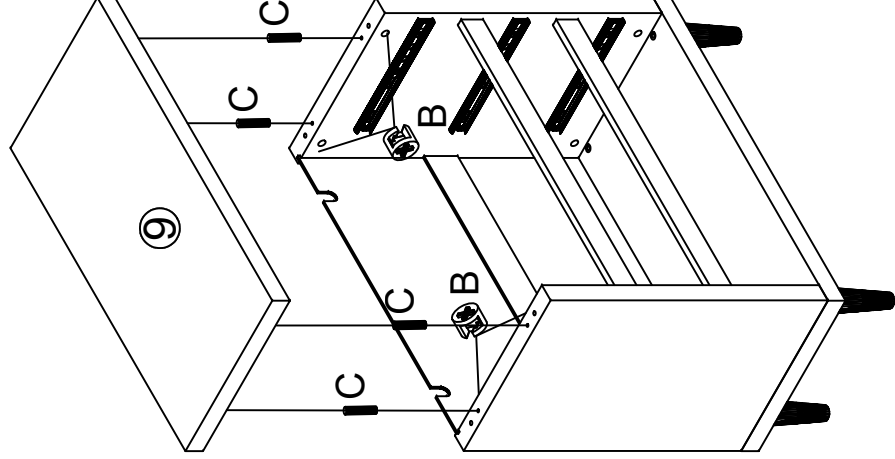

	BX4
	CX4



will require these parts

STEP5

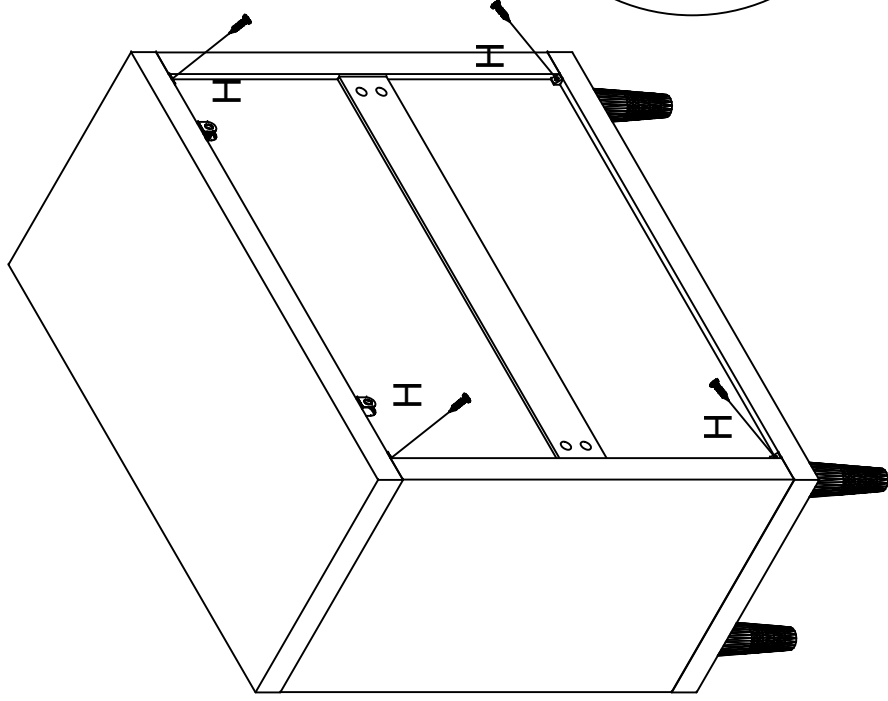

HX4

Drill 2 holes on the wall at the required position for anti-falling device installation.

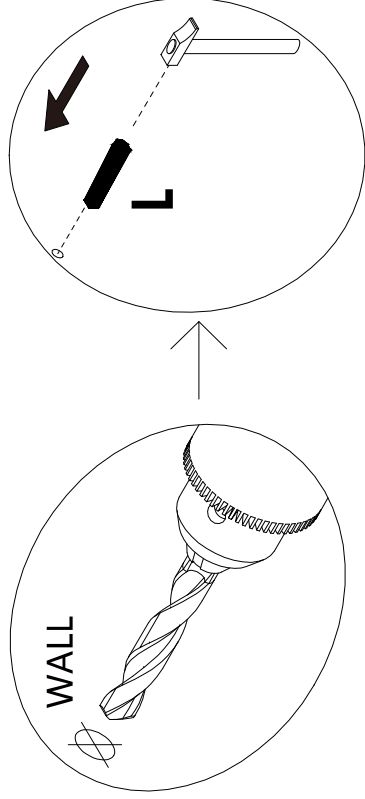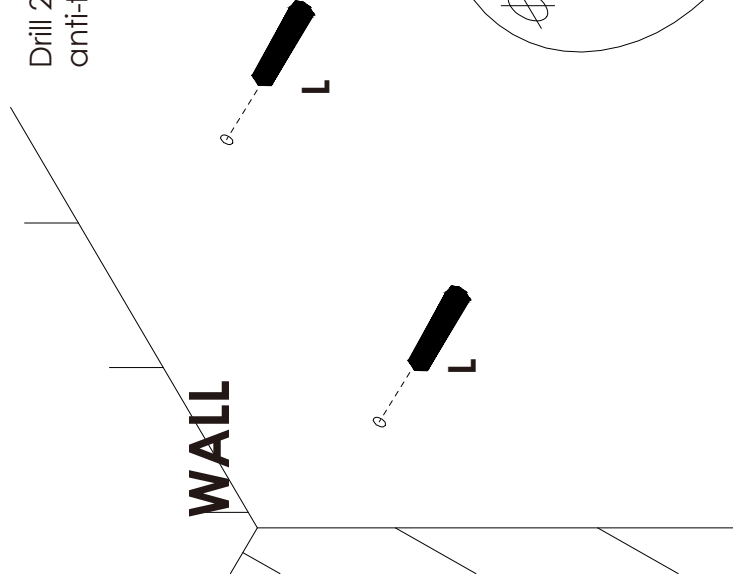


LX2


STEP6

will require these parts

Move the cabinet to the required position, use the "M" long screw to fix the cabinet to the wall.

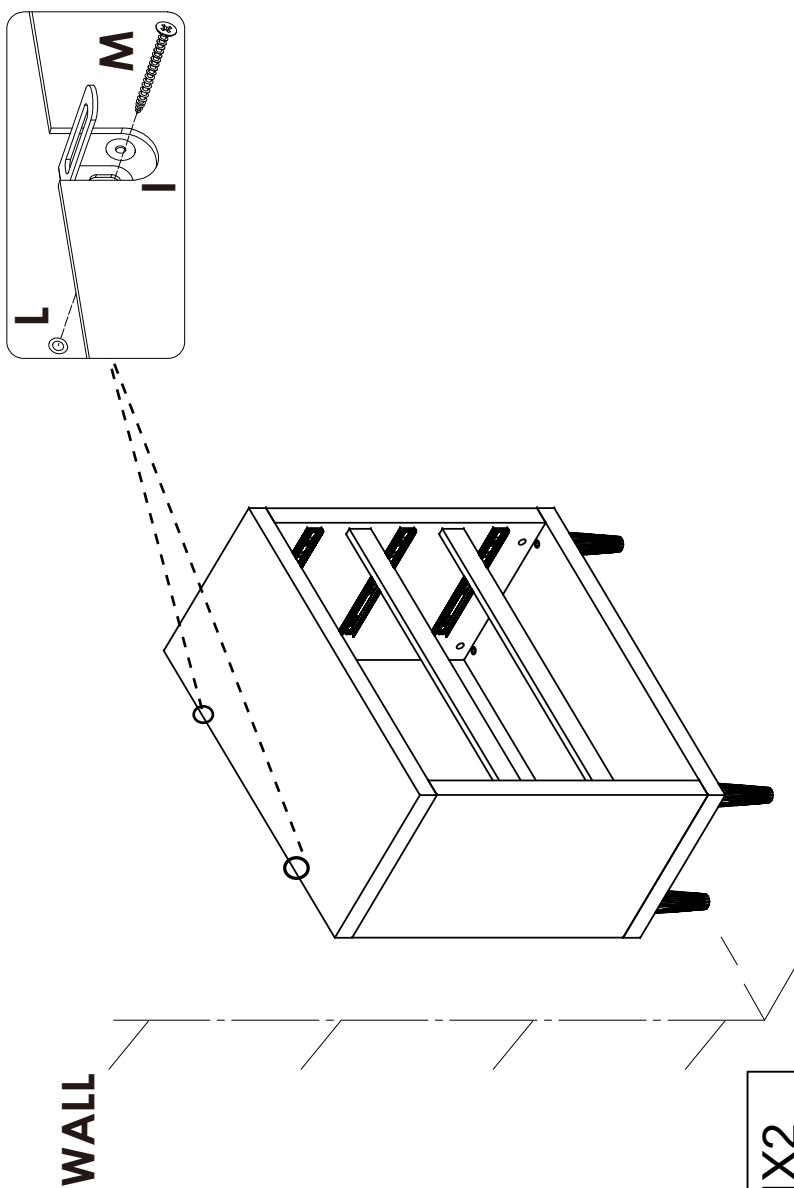

	IX2
	MX2

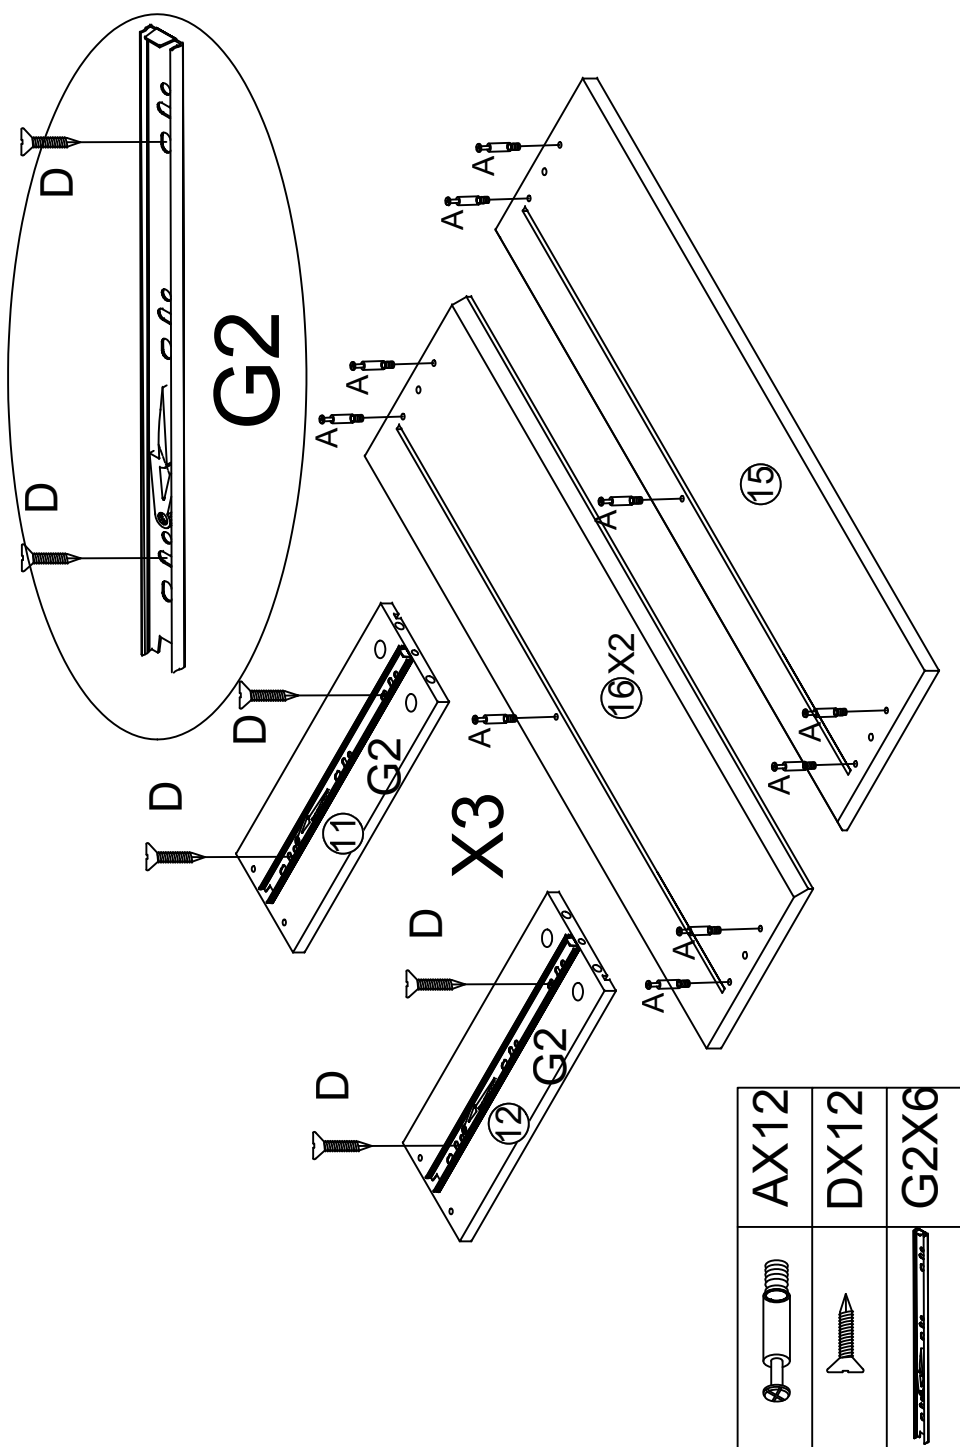


	AX12
	DX12
	G2X6


STEP7

PAGE9


will require these parts

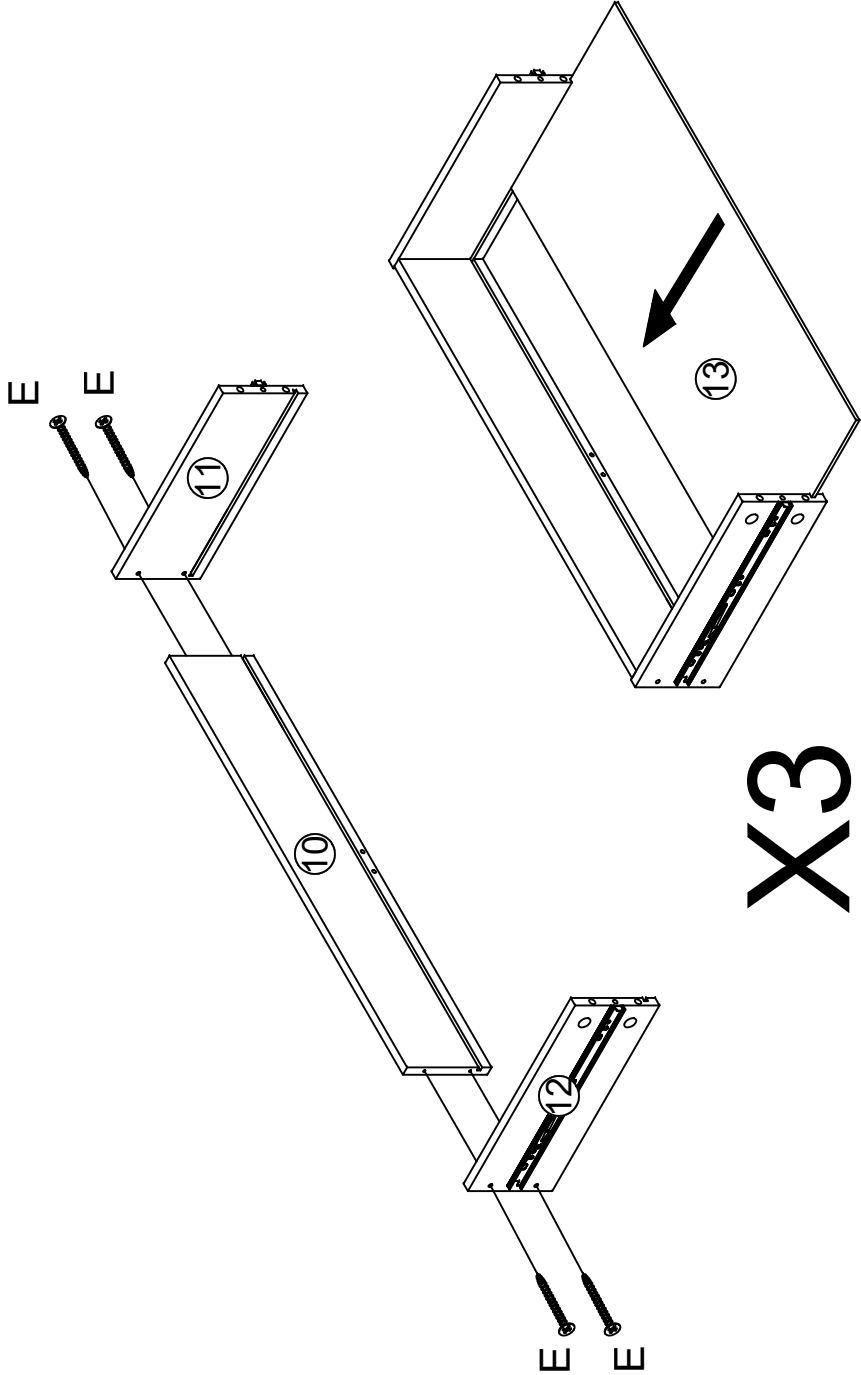

	EX12
--	------

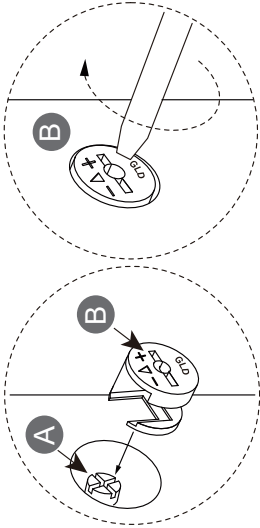

Attention:
Put (B) into the hole and turn
(B) clockwise to lock (A) tightly.


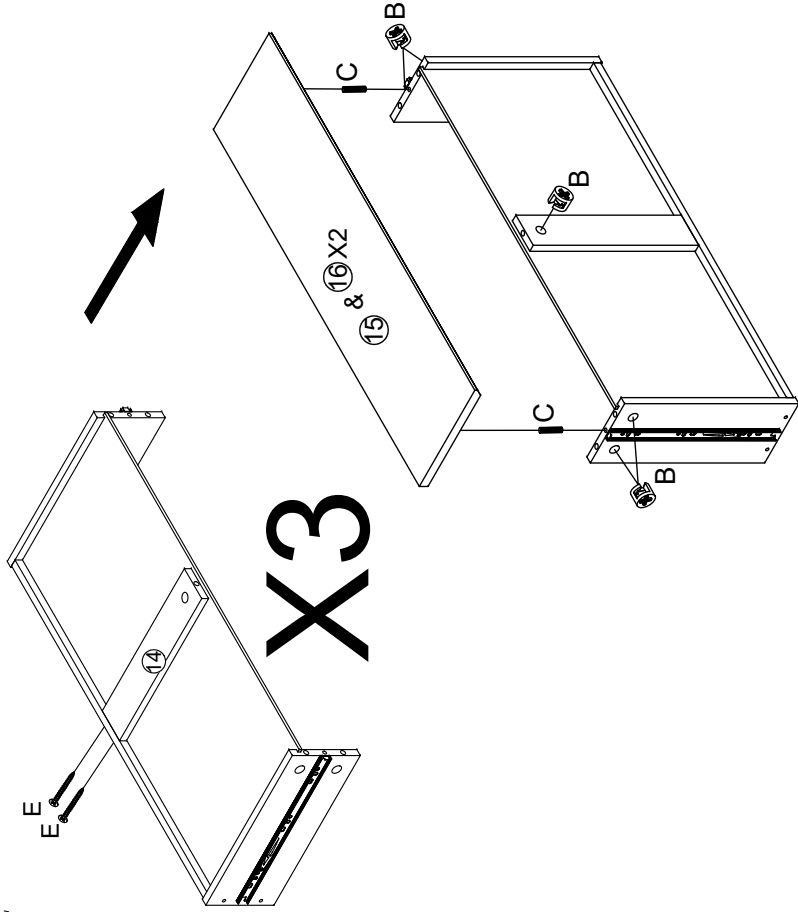


	BX15
	CX6
	EX6

STEP8

PAGE10

will require these parts

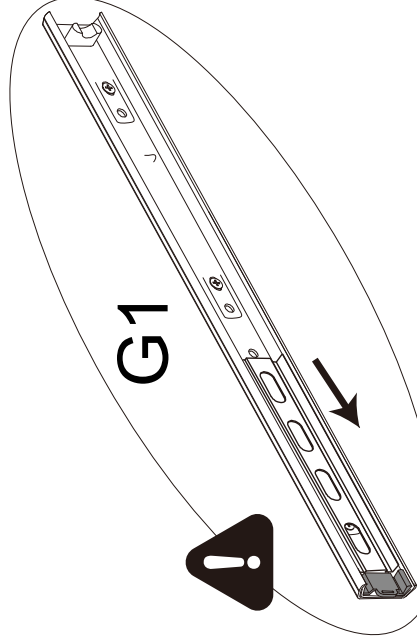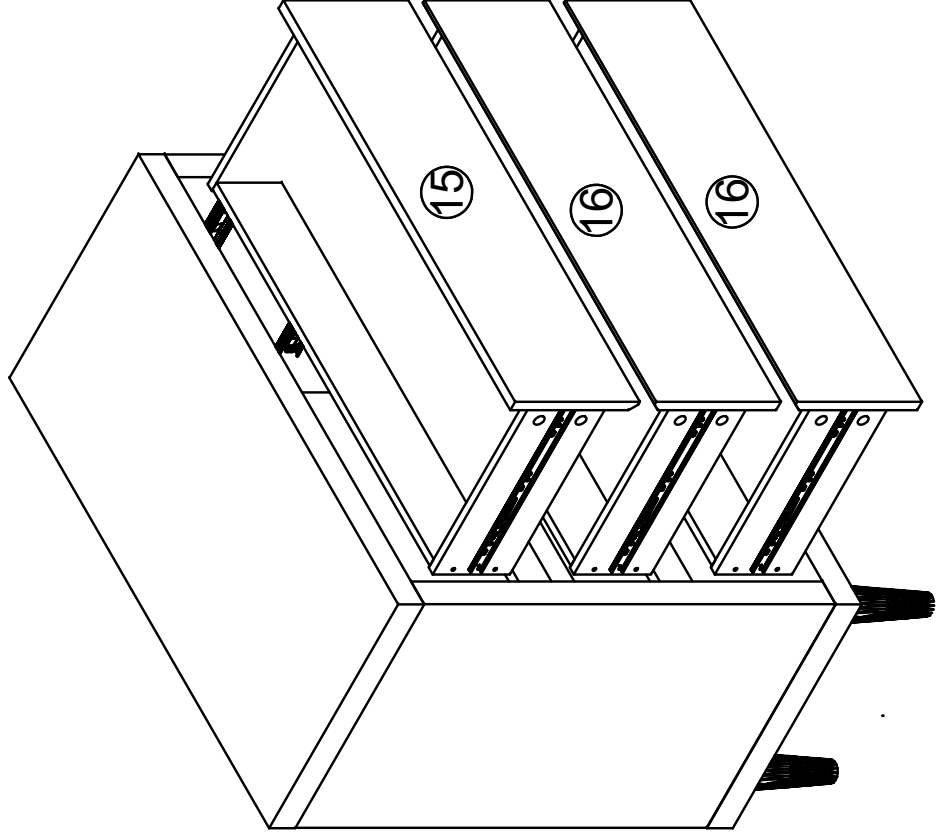

Make sure all the sliders on the front end

EN : 1, Drawers must be **horizontally put into** the cabinet

2, Make sure both side sliders **match well** to avoid damage

Wrong: "G1" and "G2" are not be horizontally placed and pushed

Right: Push "G2" and "G1" horizontally until you hear a "click"

