


Model: _____

Lot No: _____

Date of Purchase: _____

STORAGE LOFT BED

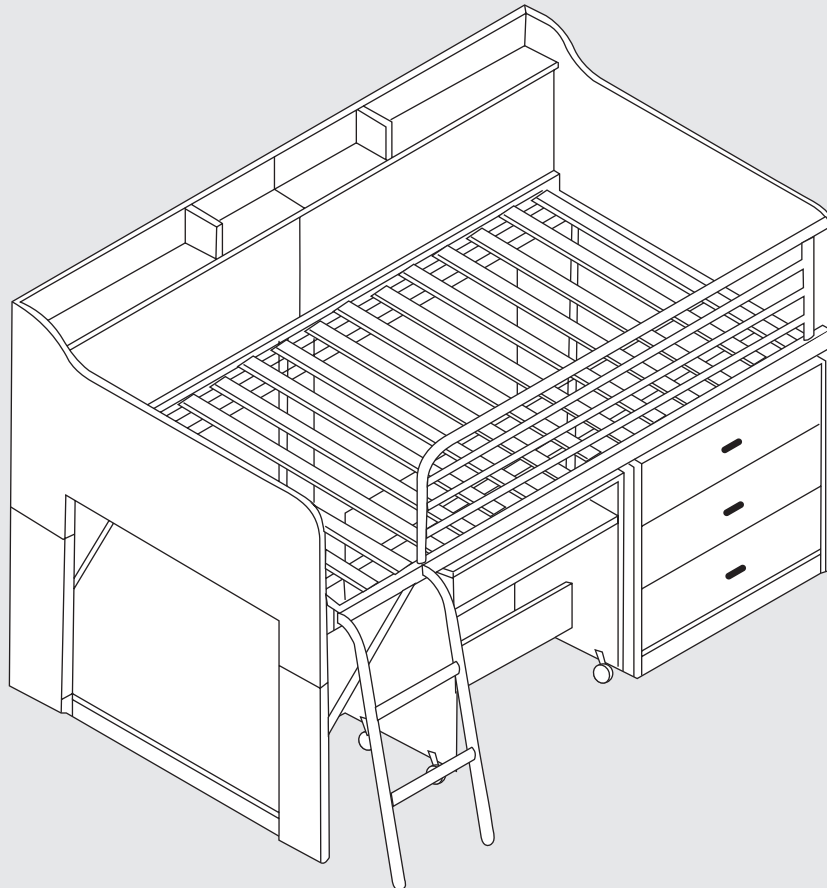

ADULT ASSEMBLY REQUIRED

If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free, customer service number and have this assembly manual open to the parts list ready to provide the model name, number and part name or number.



WARNING: This product may contain small components, please ensure they are kept away from small children.

Model : MG 7269 (Sample A)

Product Size : 1000mm x 1930mm (Base int Size)


Thank you for purchasing this product. Before starting assembly we suggest you spend a short time reading through this leaflet, then follow the simple step by step guide.

Two people are needed to assemble this product.

Option A



Option B

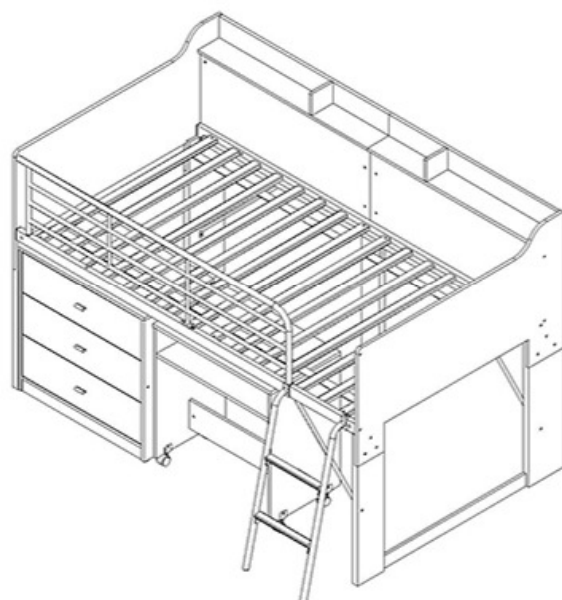

Option C



Option D




Guide To Assembly

Model : MG 7269

Tools Required For Assembly

Phillips Screw Driver

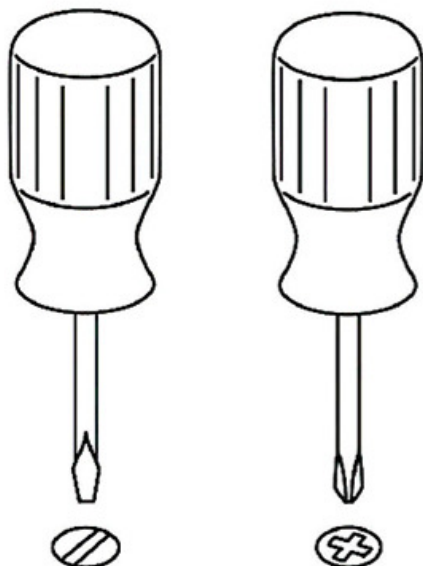

DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT. USE OF POWER TOOLS WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




Approximately 3 hour








2 People Required

Rubber Hammer

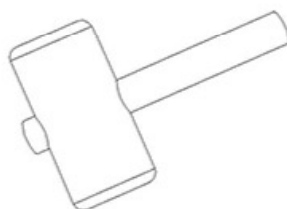

Measure

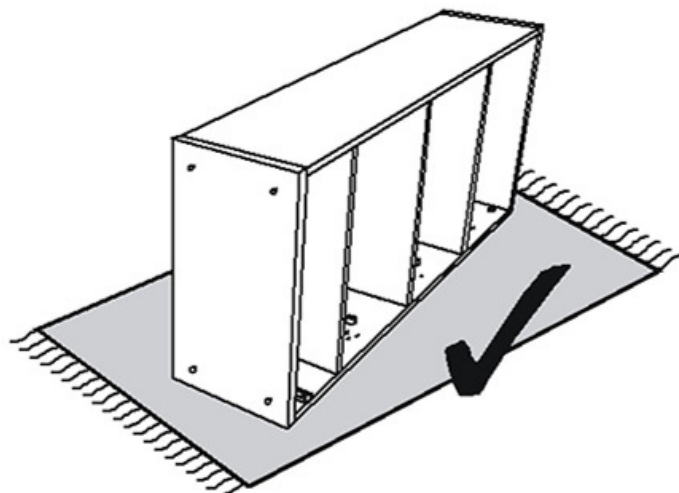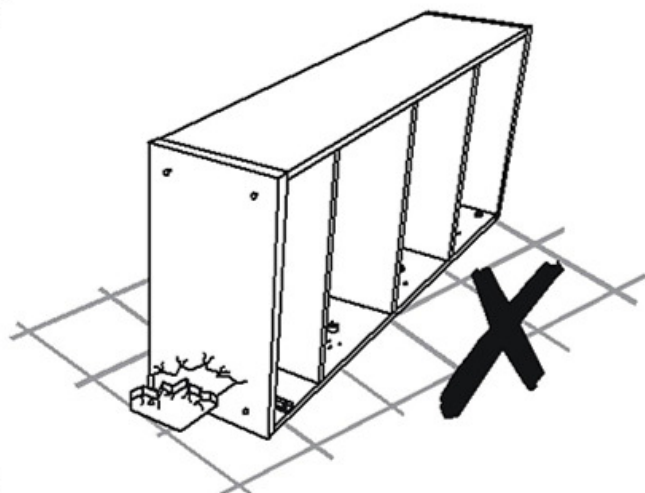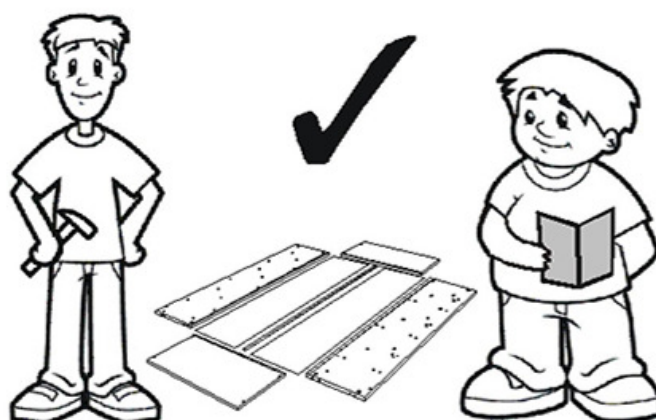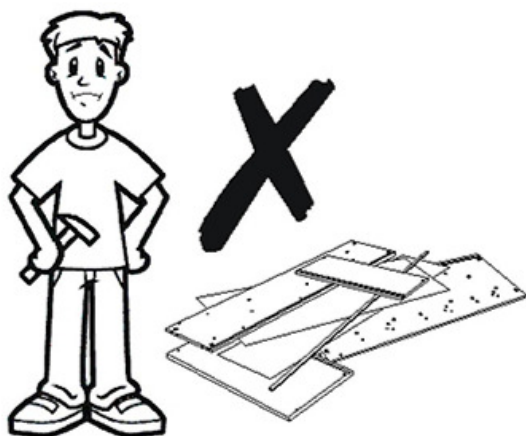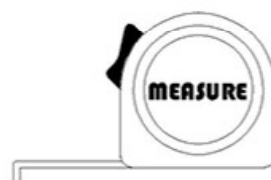

Part List

Model: MG 7269

Carton 1 of 3

No.	Part Name	Pcs
20	Center Panel	2
23	Left End Panel	1
26	Right End Panel	1
27	Back Panel (Shelf)	1
28	Bottom Panel (Shelf)	1
29	Support Panel (Shelf)	2
30	Back Side Panel	1
31	Back Panel (Shelf)	1
32	Bottom Panel (Shelf)	1
33	Back Side Panel	1
35	Back Support Panel	1

Carton 2 of 3

No.	Part Name	Pcs
17	Left Panel (Desk)	1
18	Right Panel (Desk)	1
21	Left End Panel (Back Post)	1
22	Left End Panel (Front Post)	1
24	Right End Panel (Back Post)	1
25	Left End Panel (Front Post)	1
34	Back Support Panel	1
36	Side Rail (Back)	1
37	Side Rail (Front)	1
38	Solid Wood Slat Base (15 pcs)	1 set
40	Guardrail	1
41	Ladder Step	2
42	Ladder Side Rail (Left)	1
43	Ladder Side Rail (Right)	1
44	Brace (Long)	2
45	Brace (Short)	2


Assembly Instructions + Fitting List

Carton 3 of 3

No.	Part Name	Pcs
01	Plinth Panel (Chest Drawers)	1
02	Bottom Panel (Chest Drawers)	1
03	Back Panel (Chest Drawers)	1
04	Support Panel (Chest Drawers)	2
05	Left Panel (Chest Drawers)	1
06	Right Panel (Chest Drawers)	1
07	Back Panel (Chest Drawers)	1
08	Top Panel (Chest Drawers)	1
09	Back Panel (Drawer)	3
10	Left Panel (Drawer)	3
11	Right Panel (Drawer)	3
12	Bottom Panel (Drawer)	3
13	Front Panel (Drawer)	3
14	Bottom Panel (Desk)	1
15	Center Panel (Desk)	1
16	Center Panel (Desk)	1
19	Top Panel (Desk)	1

Part List

Model : MG 7269

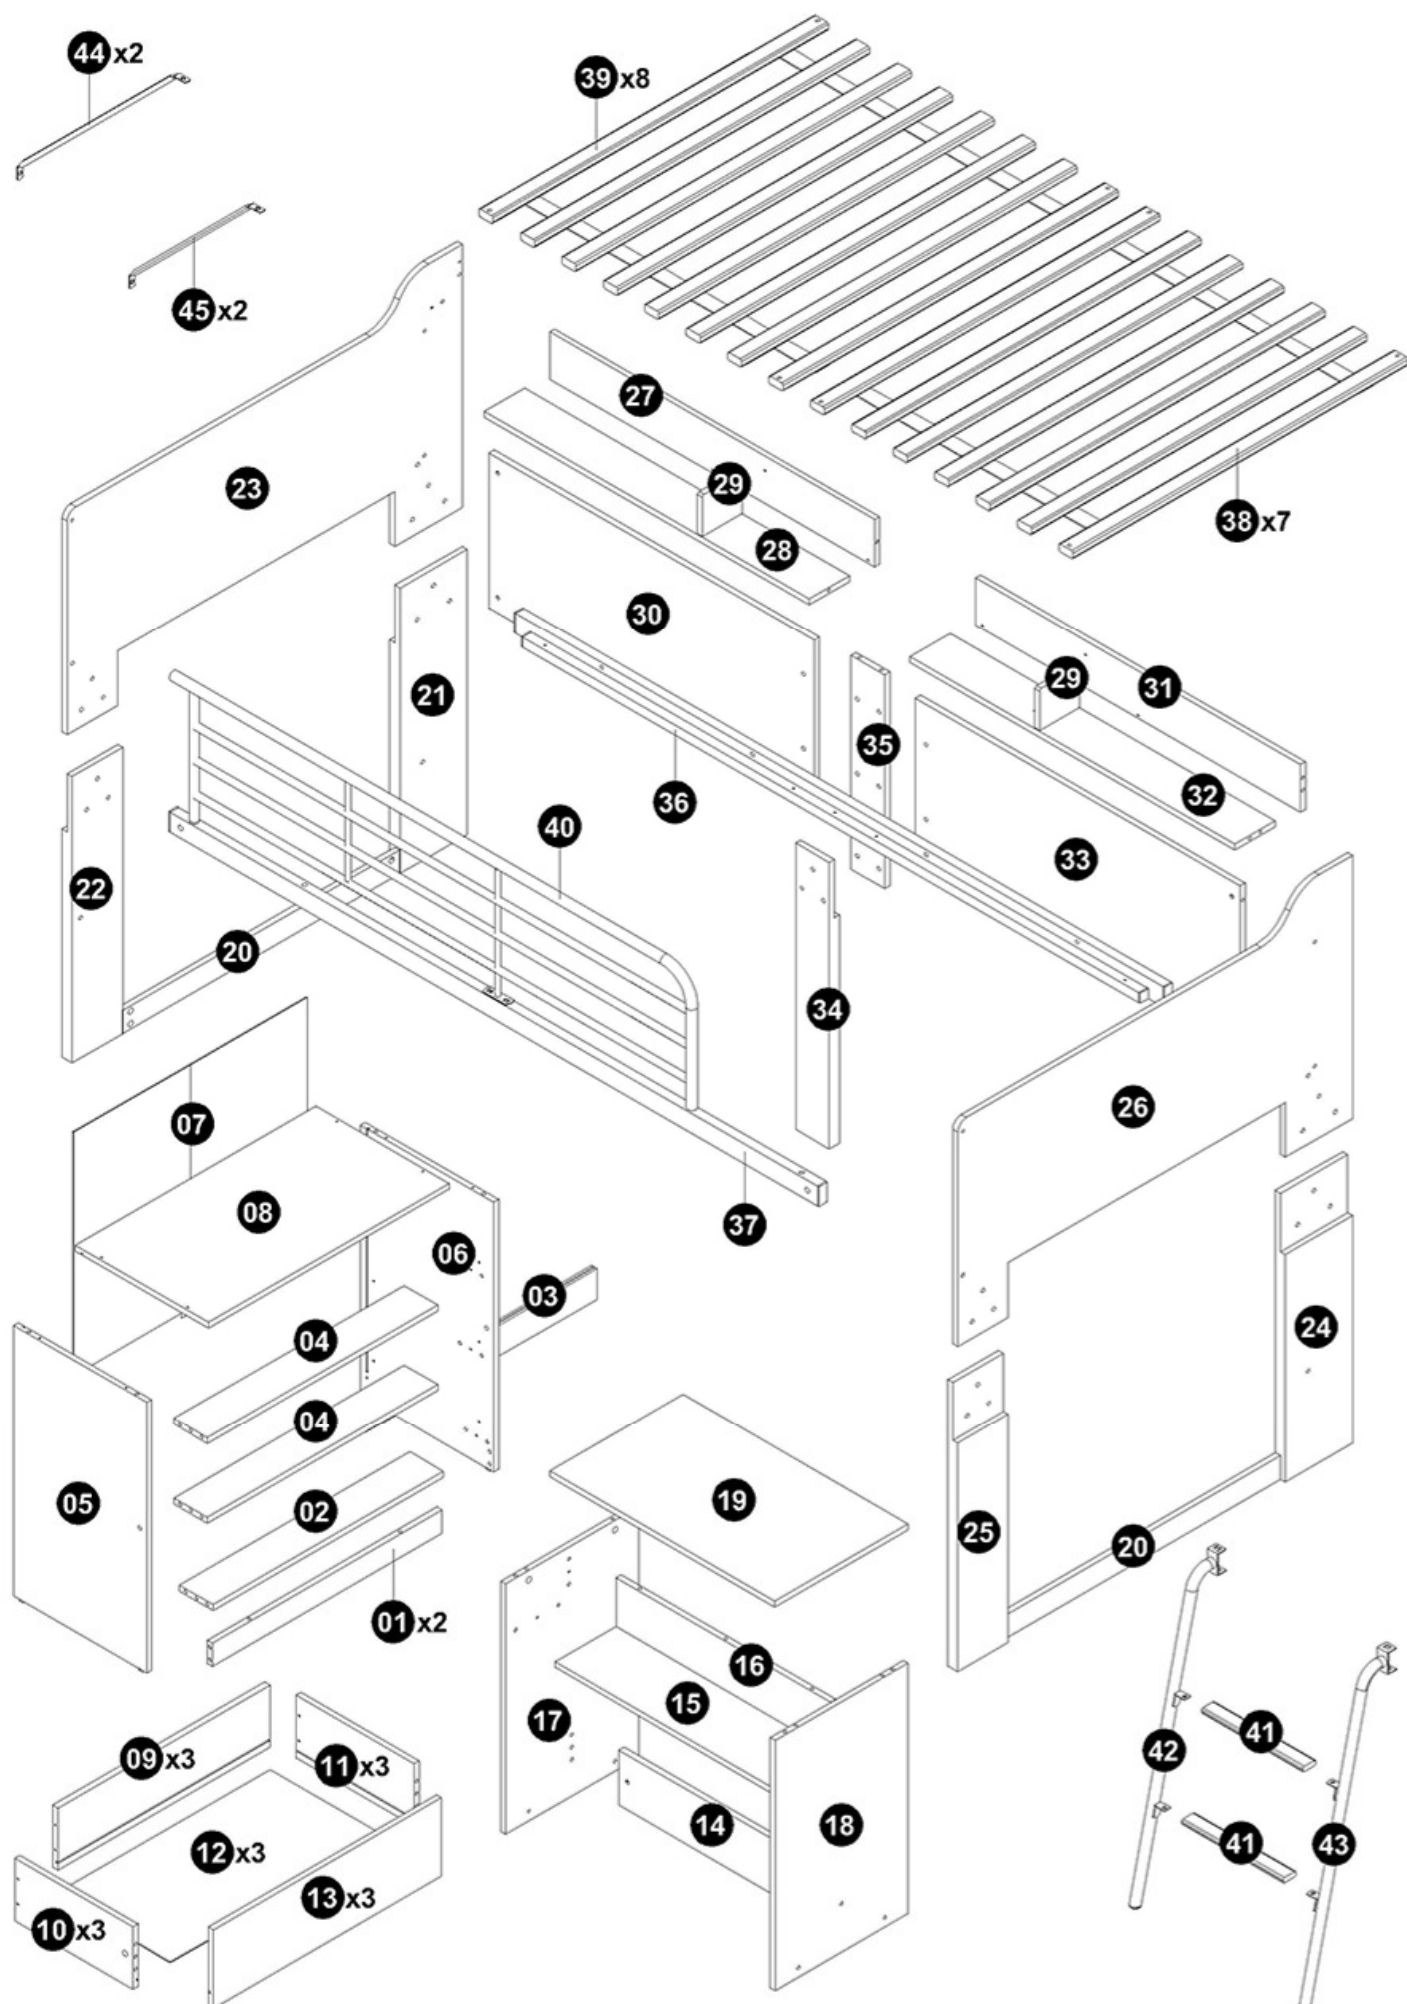

Carton ~ of ~

Fitting List

No.	Part Name		Pcs
A	Cam Stud (small)		37
B	Cam		37
C	M8 x 25mm PVC Dowel		62
D	45mm Chipboard Screw		11
E	38mm Chipboard Screw		12
G	14mm Chipboard Screw		32
H	14" Drawer Slide (SJ)		3 sets
J	Handle		3
K	20mm Handle Screw		6
L	U Shape Caster		4
M	25mm Allen Bolt		4
N	M6 Cap Nut		4
P	M6 Round Nut		8
Q	M8 Round Nut		2
R	M8 x 60mm Allen Bolt		2
S	M6 x 80mm Allen Bolt		1
T	M6 x 70mm Allen Bolt		1
U	M6 x 50mm Allen Bolt		9
V	M6 x 45mm Allen Bolt		1
W	M6 x 40mm Allen Bolt		2
X	M6 x 35mm Allen Bolt		4
Y	M6 x 30mm Allen Bolt		8
Z	M6 x 25mm Allen Bolt		23
Z1	M6 x 12mm Allen Bolt		8
Z2	M6 JCN Nut		29
Z3	M6 Allen Wrench		2
Z4	Metal Plate		1
Z5	Spanner		1
Z6	M8 Allen Wrench		1

Caution

There are many small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit. As an extra precaution, screw cover caps should be permanently fixed in position. (Where applicable)

USEFUL HINTS & TIPS

Two people will be required to assemble this unit


Please keep this assembly instruction for future reference

Guide To Assembly


Model : MG 7269

WHEN FITTING CAMS


ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

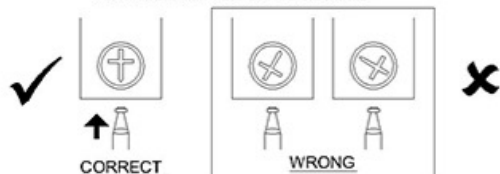

To Assembly the Drawer Slide, Please Follow Step as Below

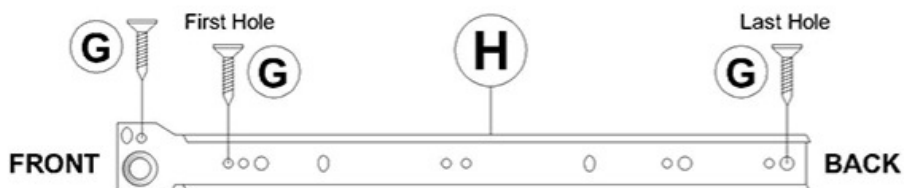


- 1
- A x 8
 - B x 8
 - C x 24
 - G x 18
 - H x 3 sets

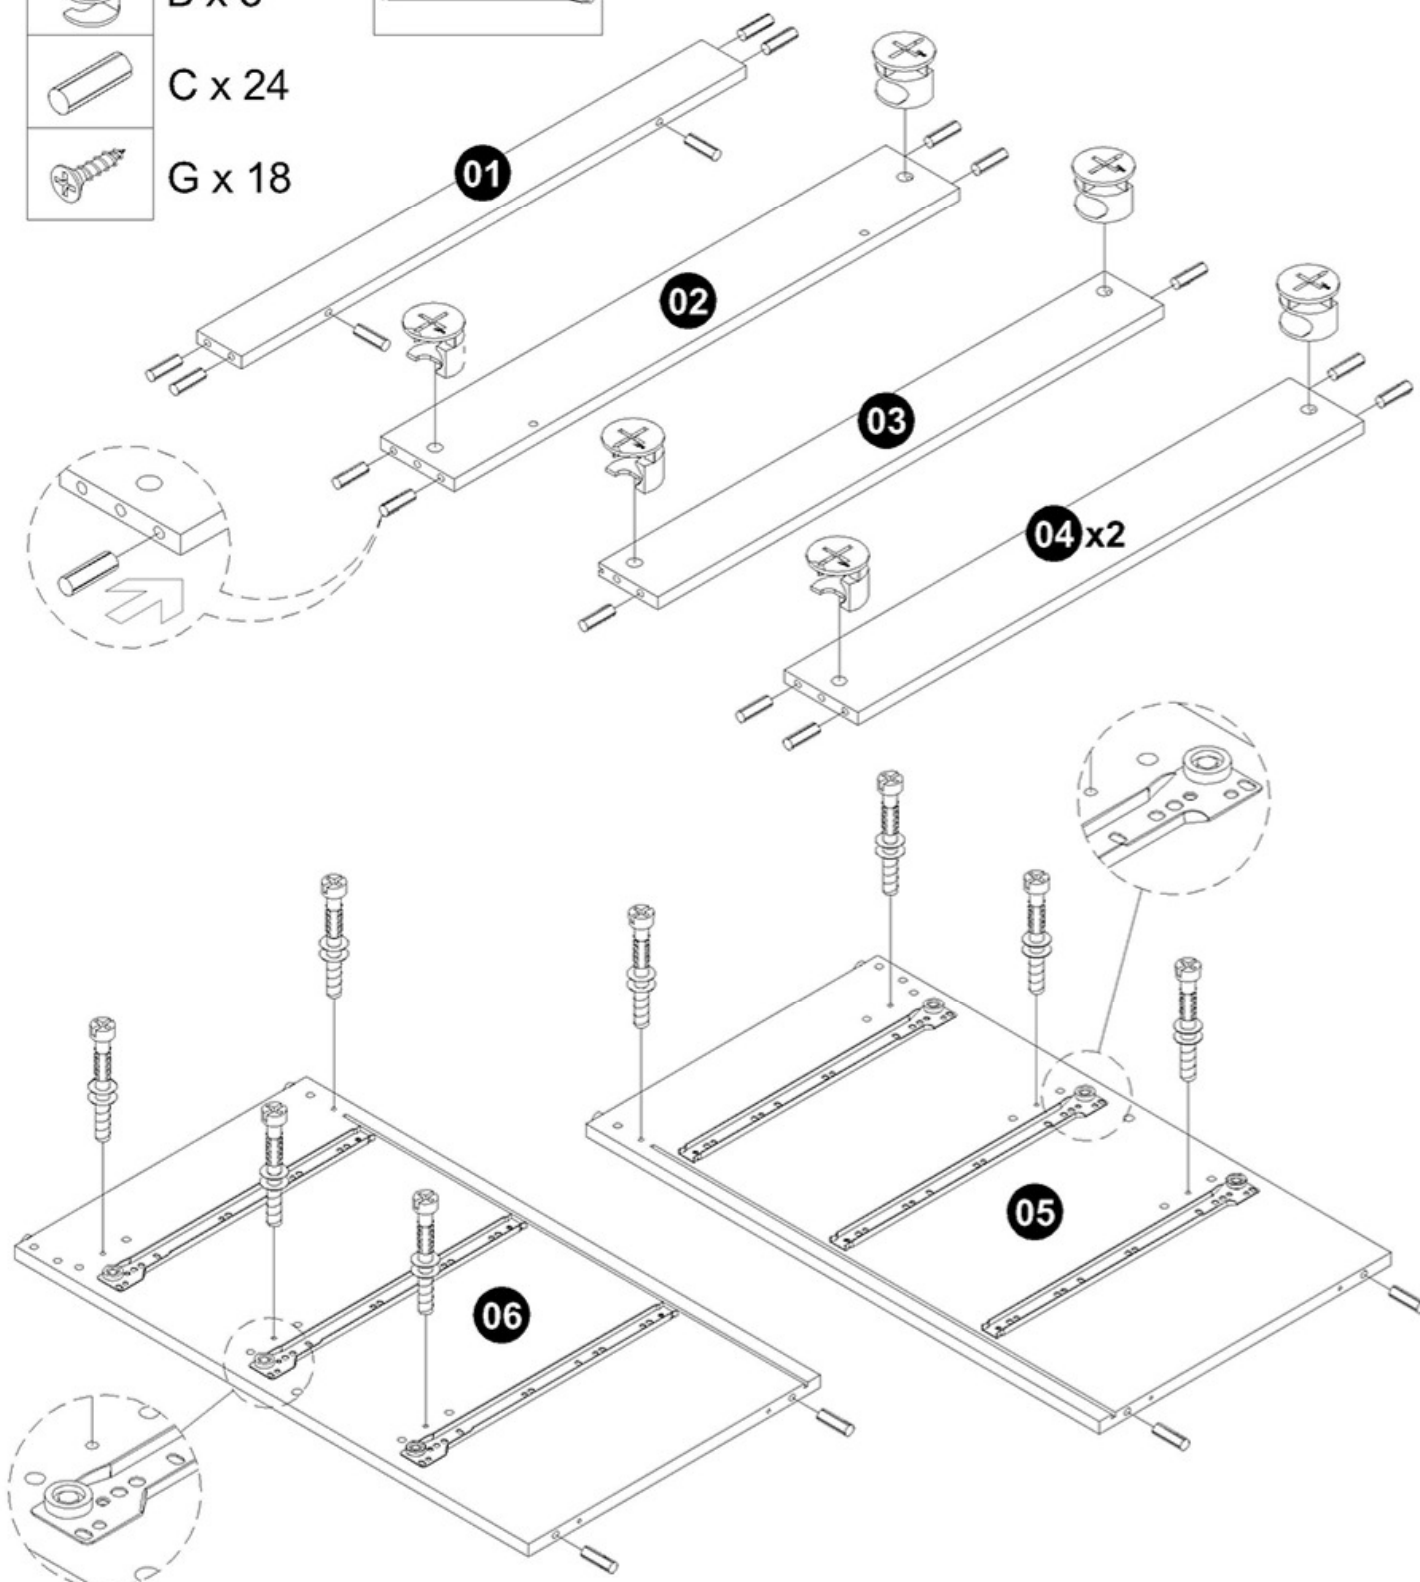

Guide To Assembly



Model : MG 7269

2

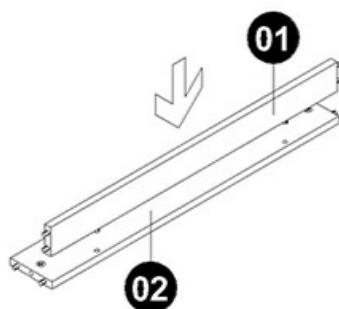


3


With Edging Face

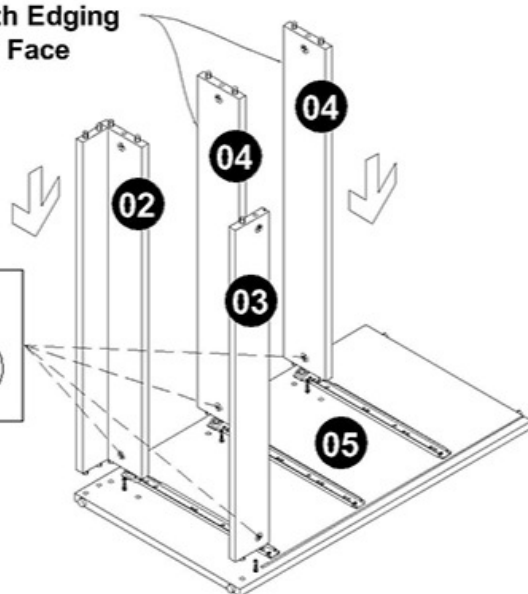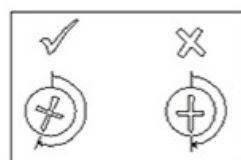

4

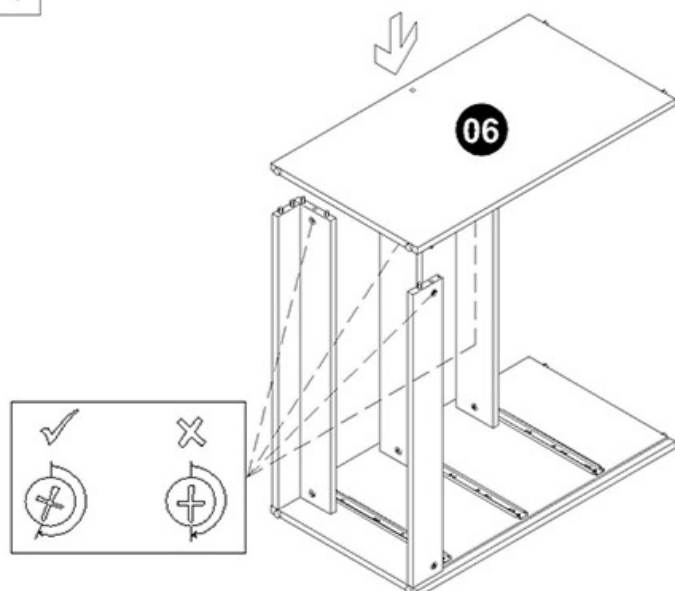


5

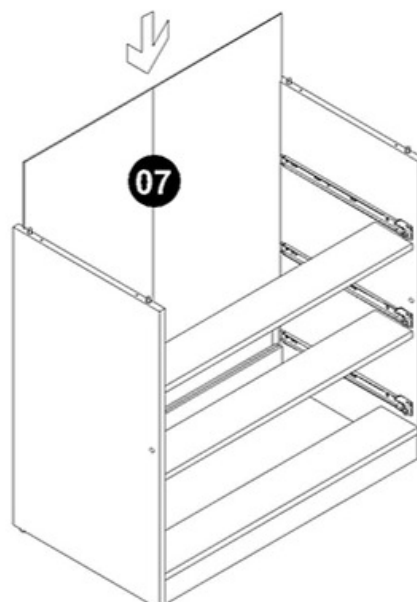

6



D x 4

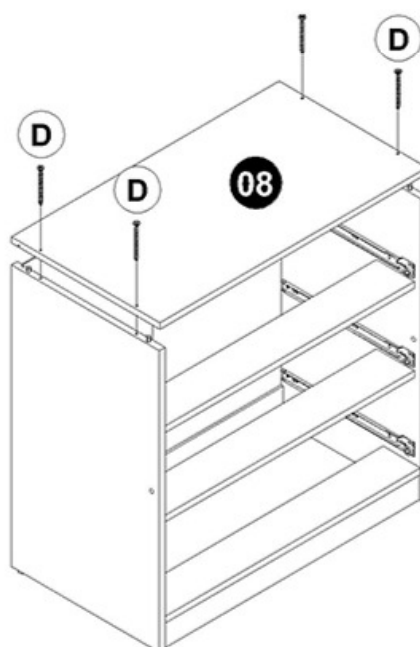

Guide To Assembly

Model : MG 7269


7




A x 6



B x 6



C x 12

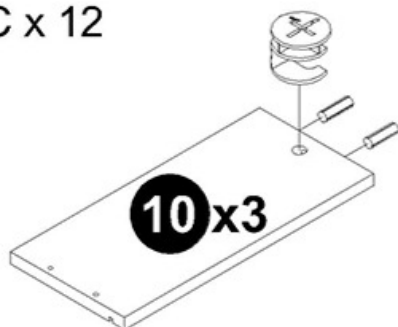




8



E x 12

9

10

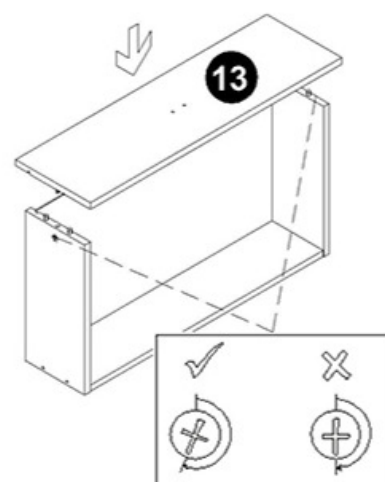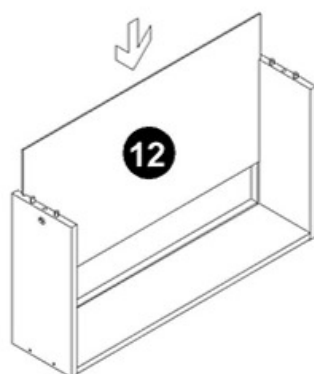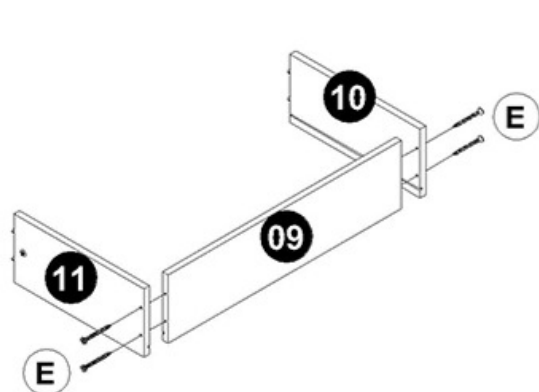

Do This Step 3 Times

11



J x 3



K x 6




12



G x 12



H x 3

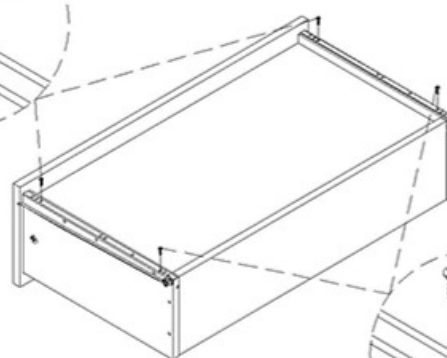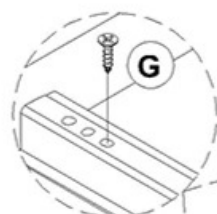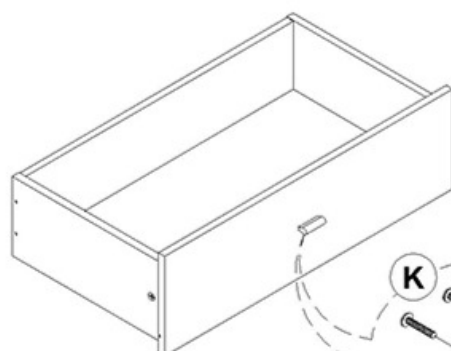

Do This Step 3 Times

Guide To Assembly

Model : MG 7269

13



A x 9





B x 9




C x 20

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

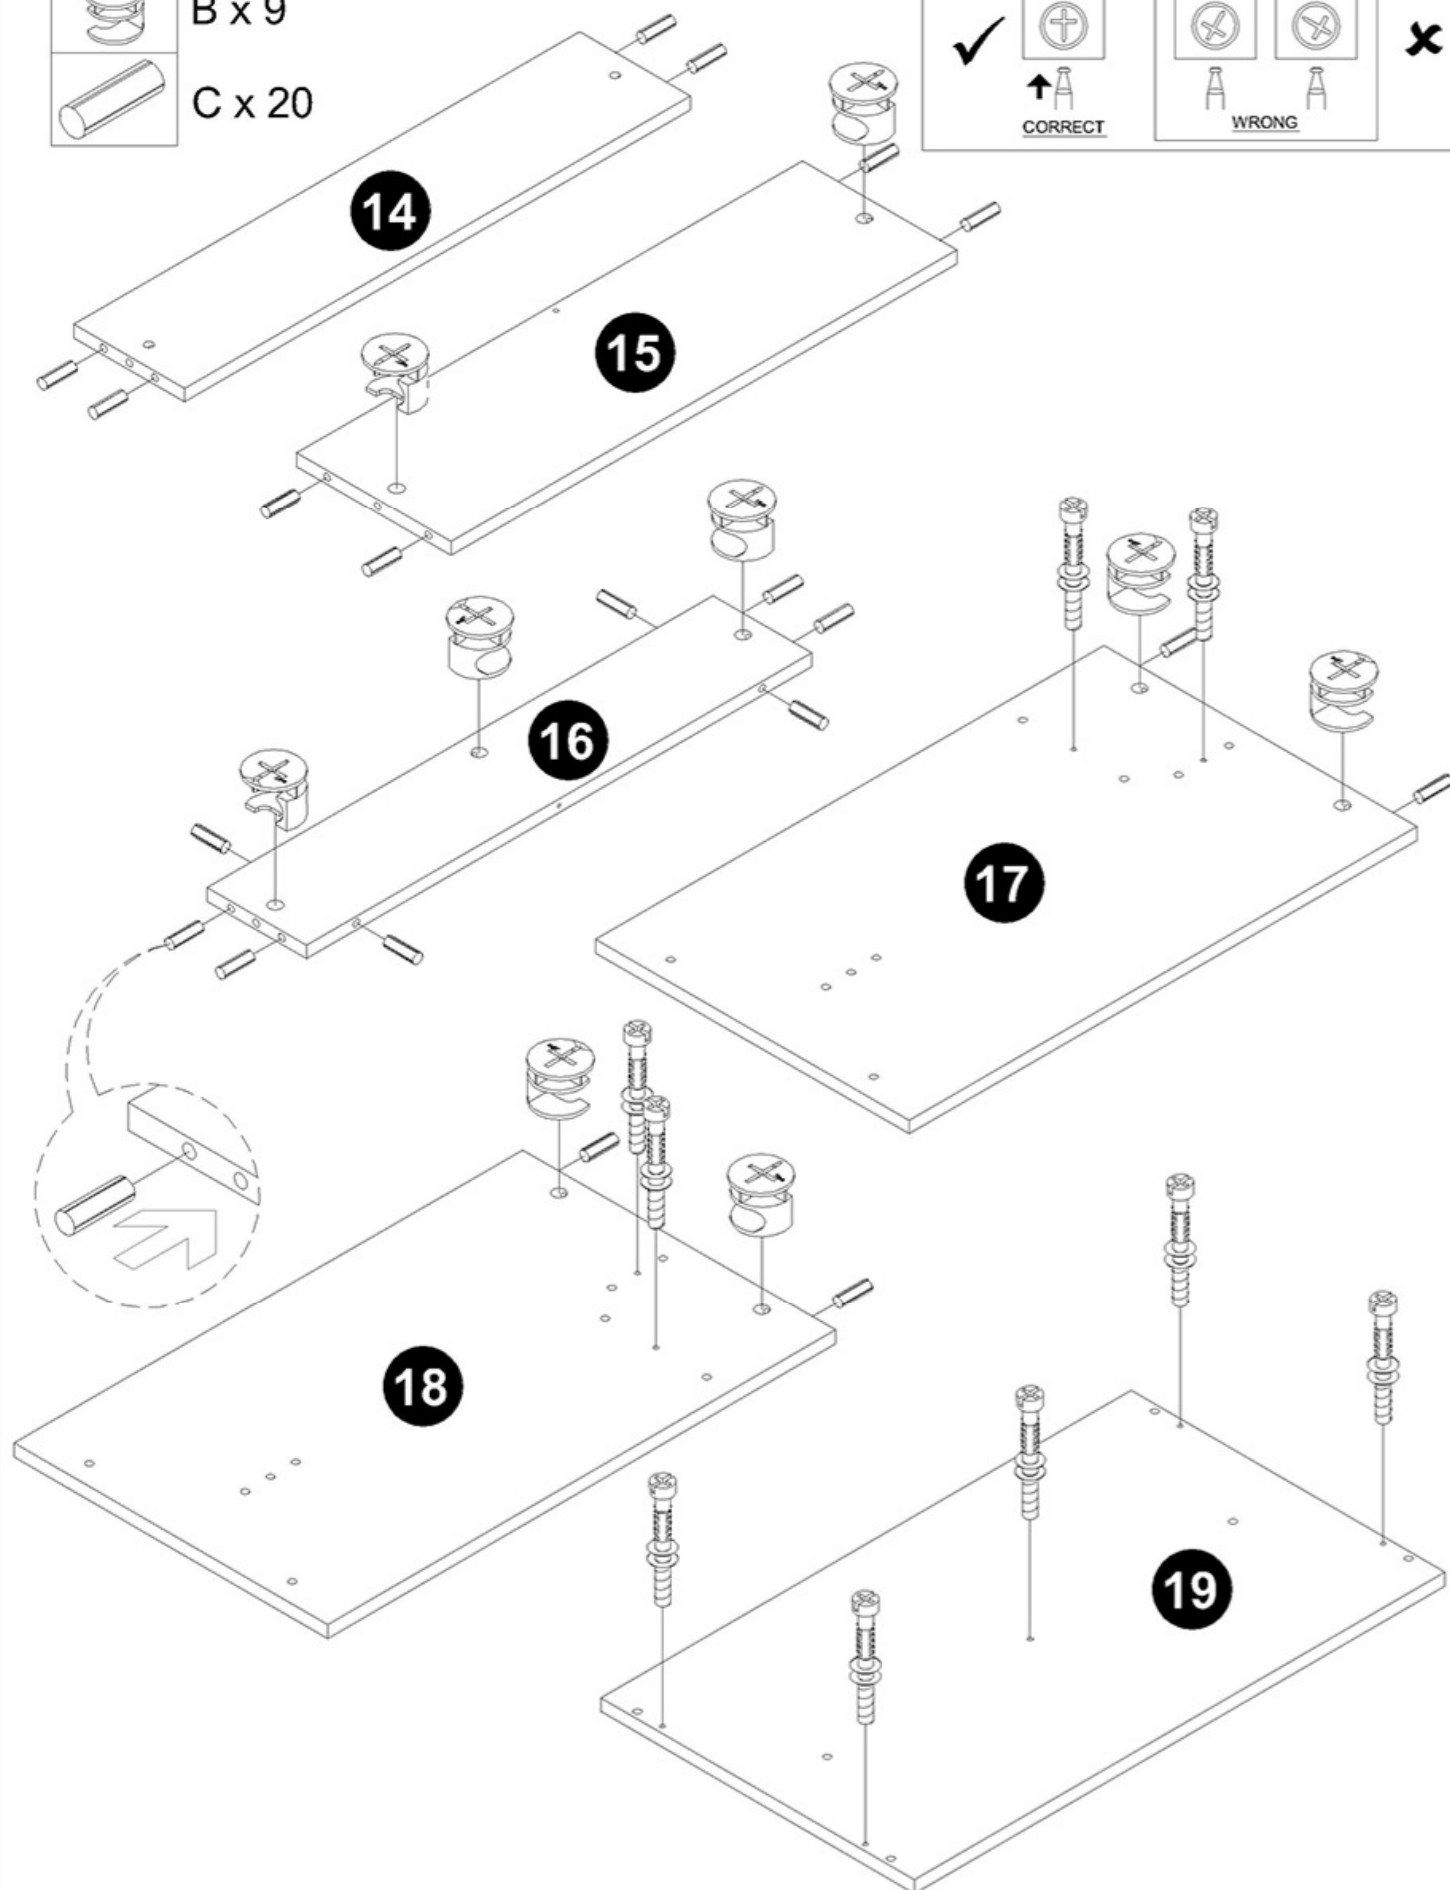
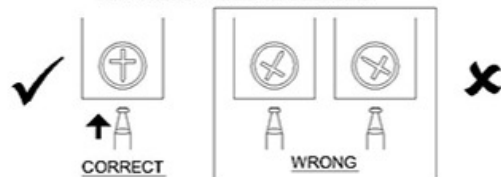




Guide To Assembly

Model : MG 7269

14  D x 1


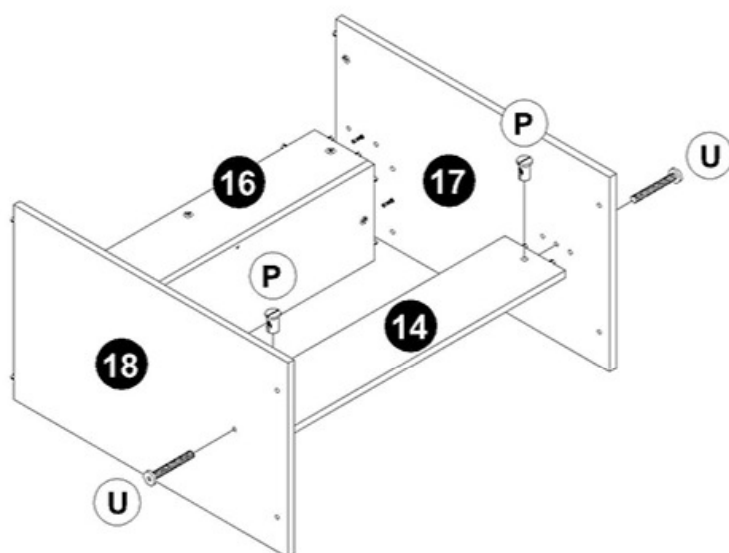
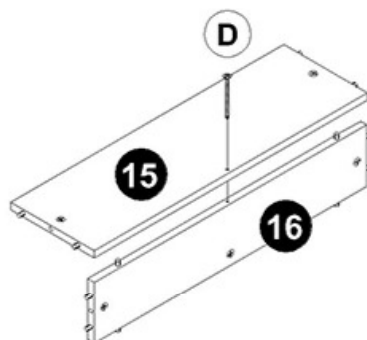
15  P x 2
 U x 2



16  L x 4
 N x 4

 M x 4

17

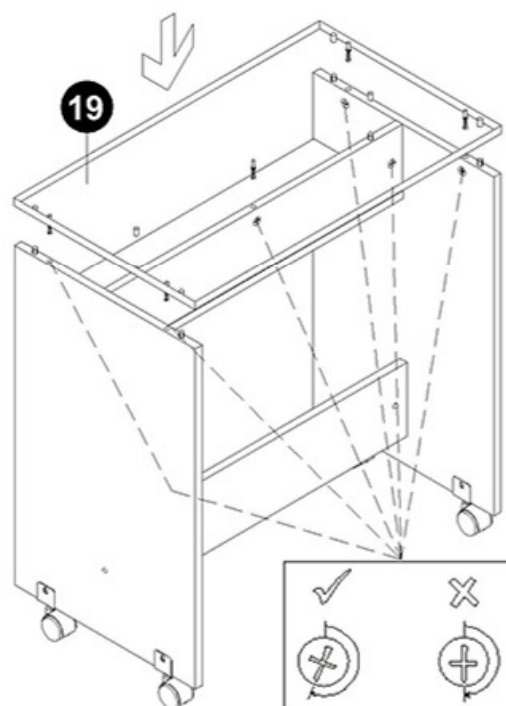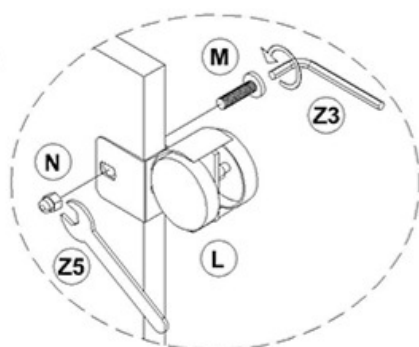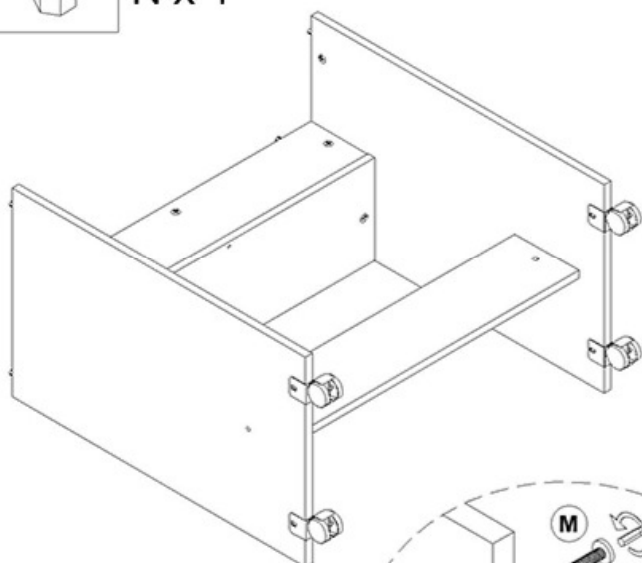

Guide To Assembly

Model : MG 7269



18




A x 8



B x 8

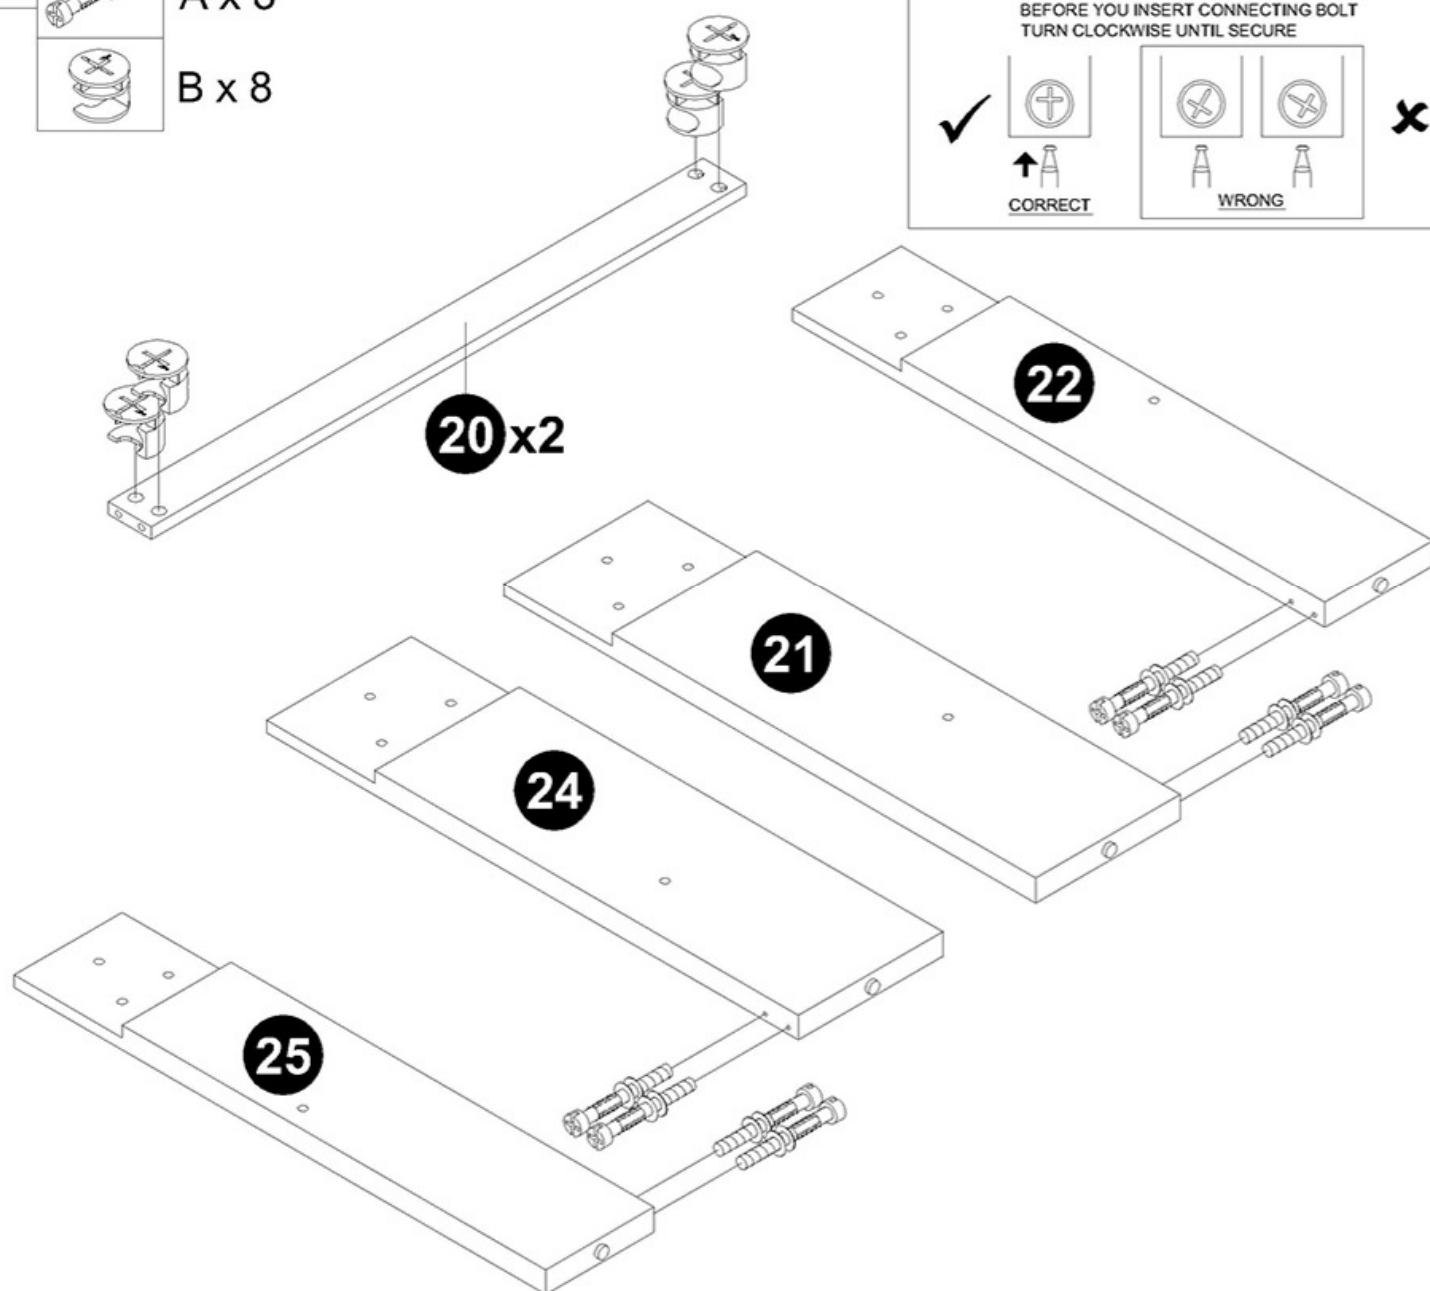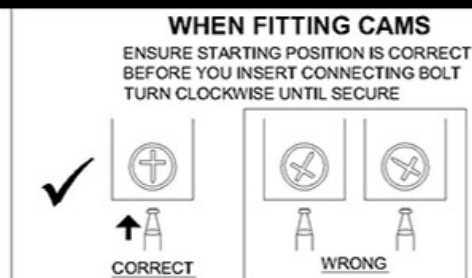

19

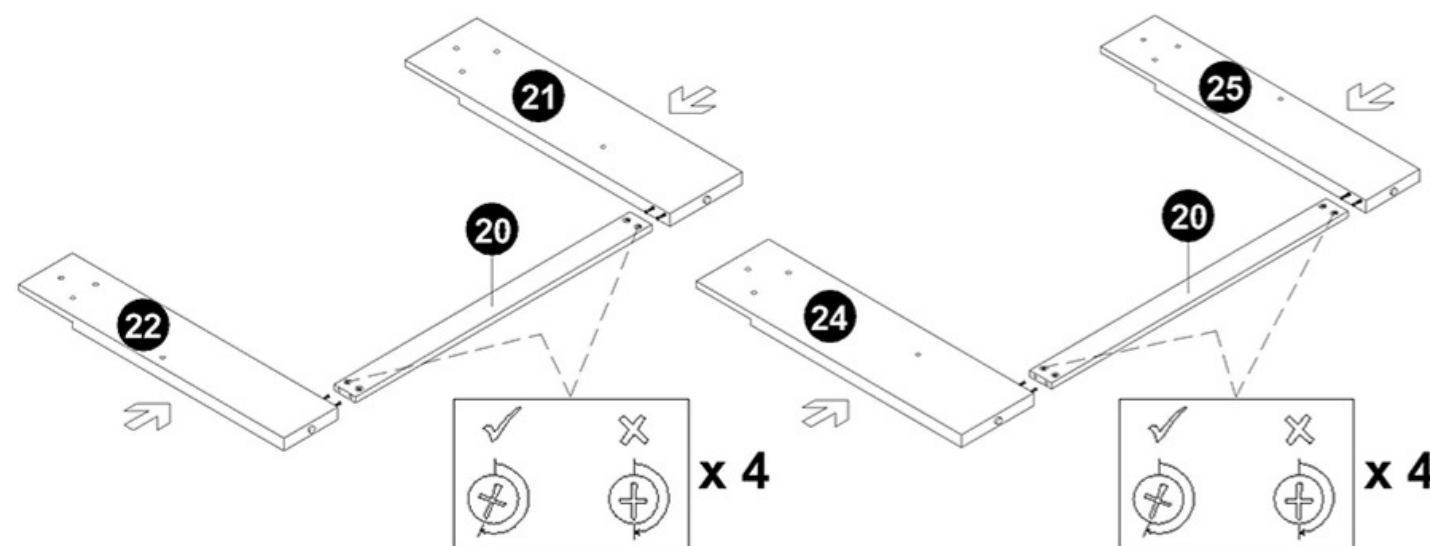

Guide To Assembly

Model : MG 7269


20



A x 6





B x 6




C x 6



WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

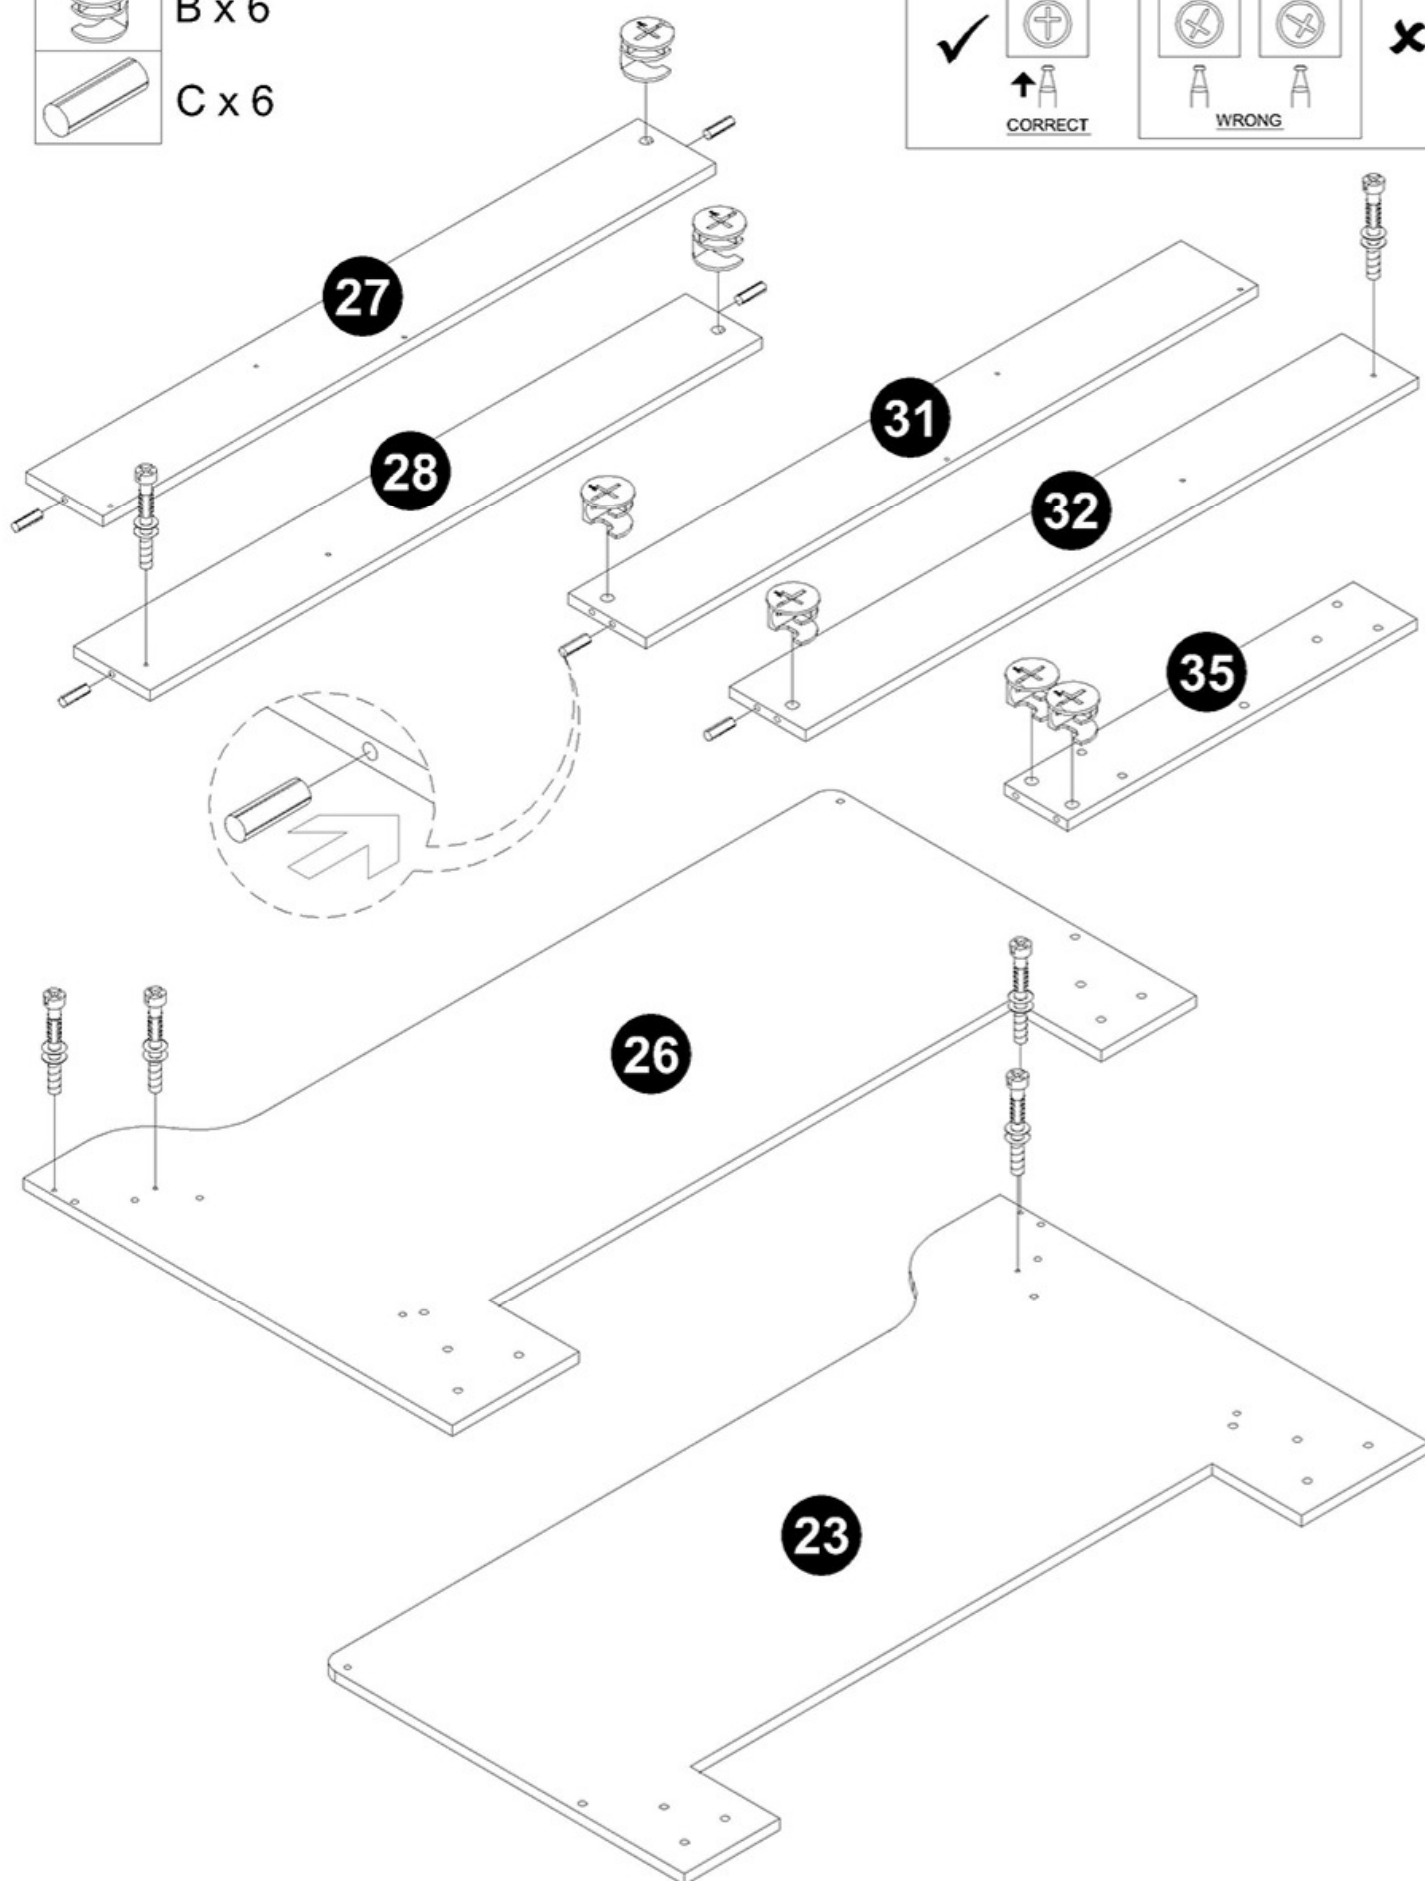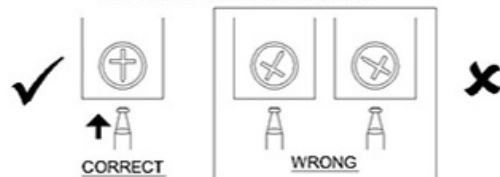



Guide To Assembly

Model : MG 7269



21  D x 2

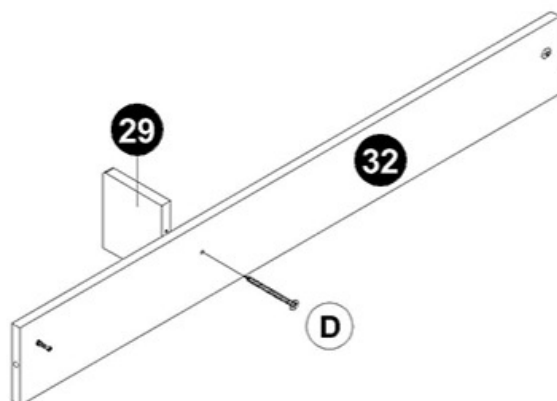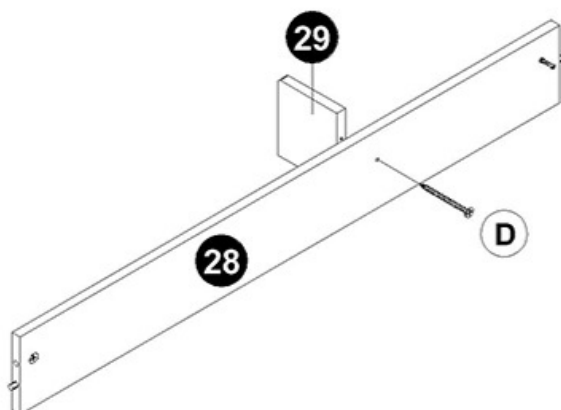

22  D x 4

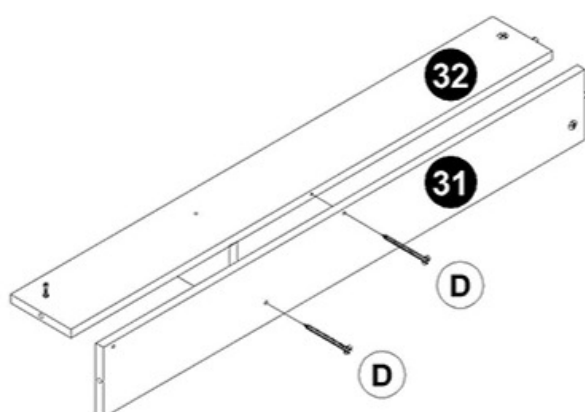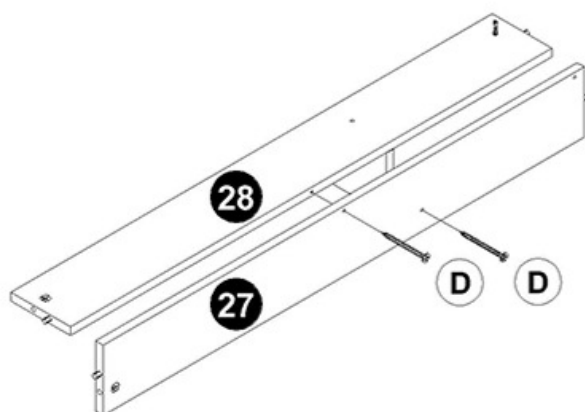

23  G x 2
 Z4 x 1

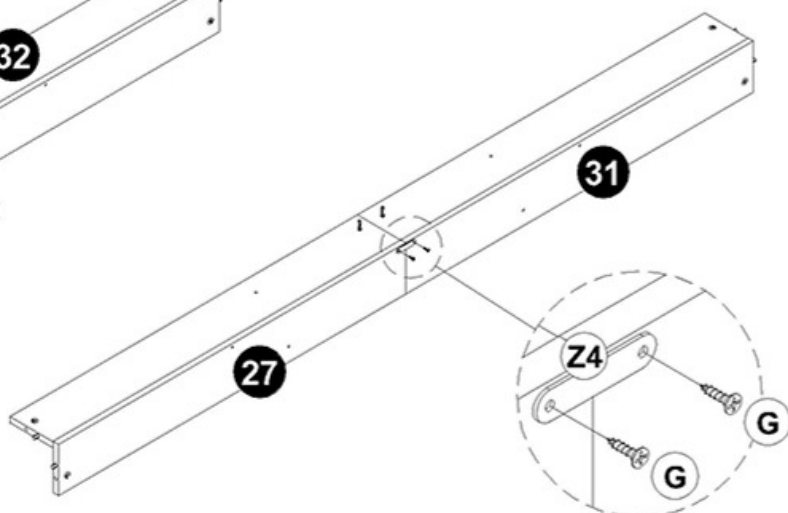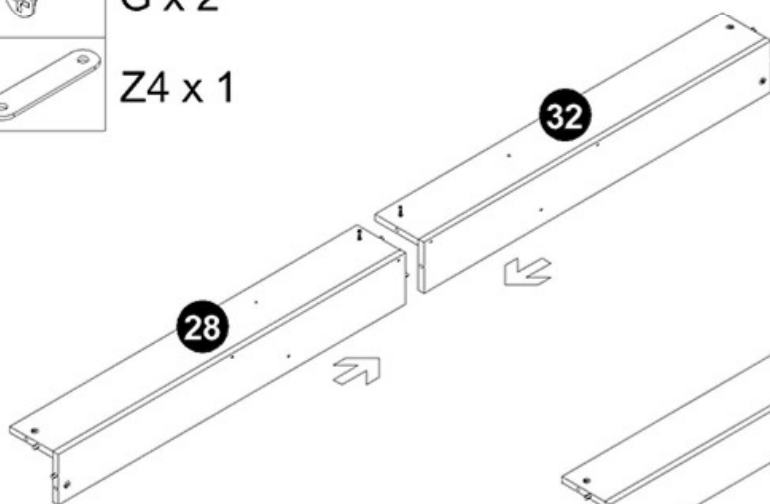

Guide To Assembly

Model : MG 7269


24



Z x 4



Z2 x 4

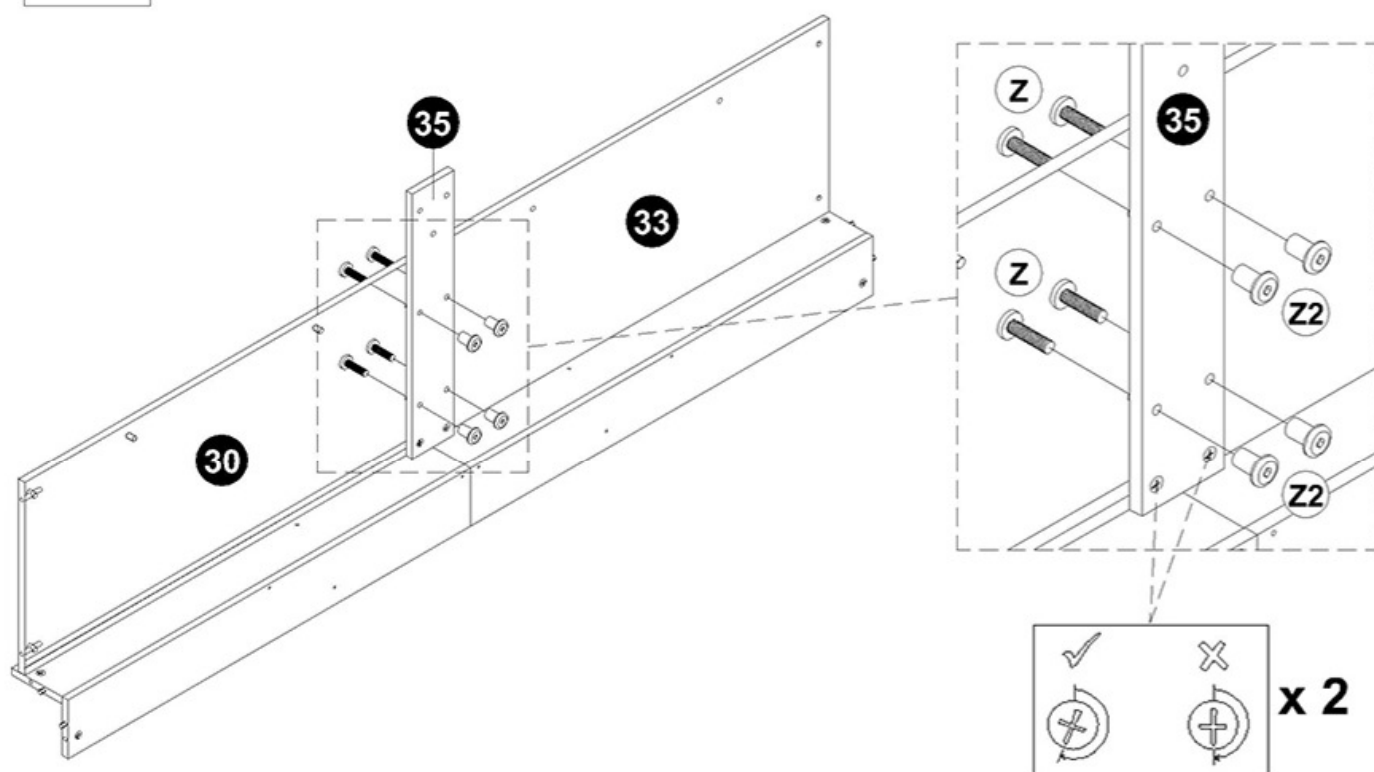

25



P x 4




Q x 2



R x 2



U x 4

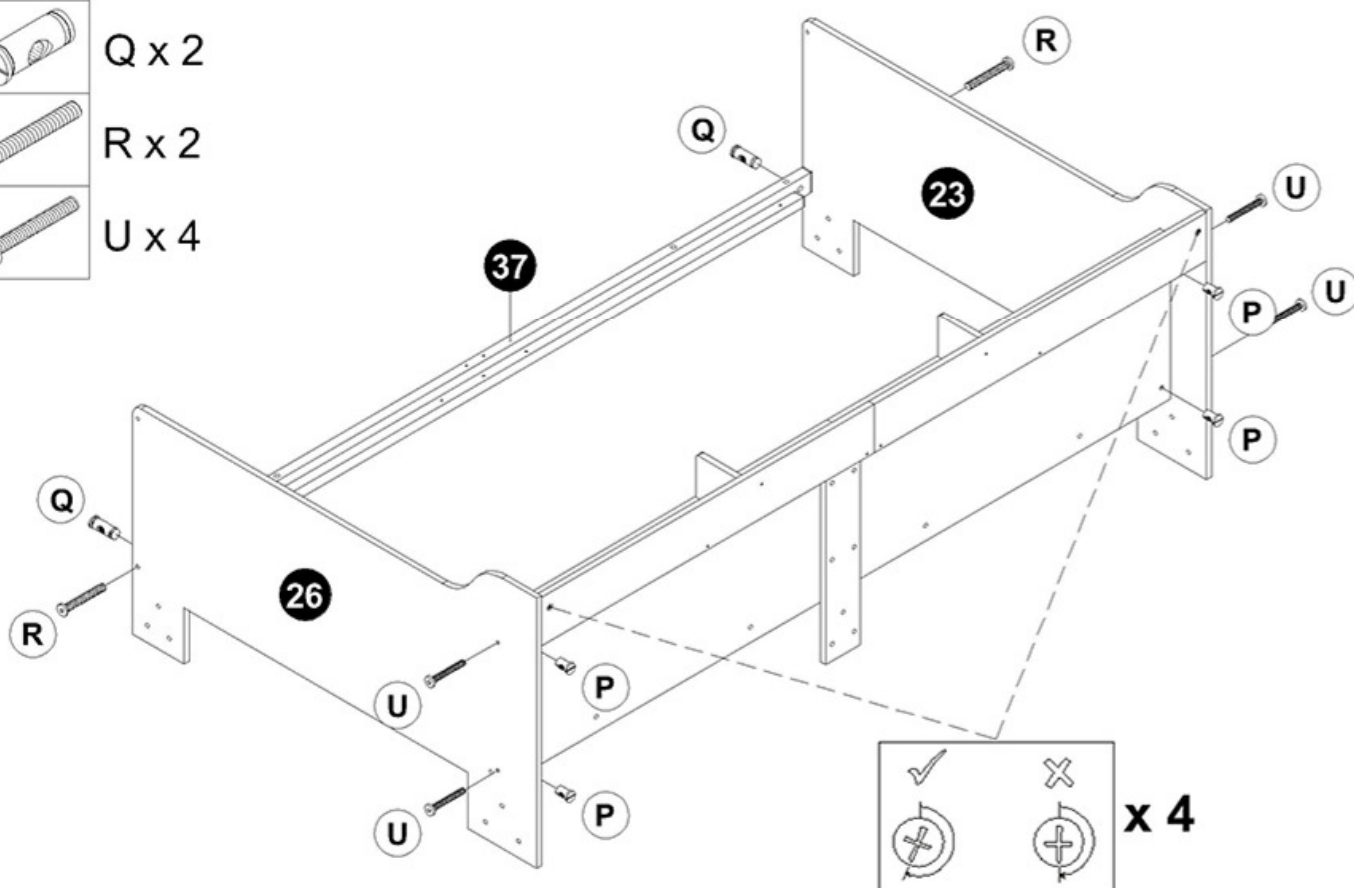

Guide To Assembly

Model : MG 7269


26



Z x 15



Z2 x 15

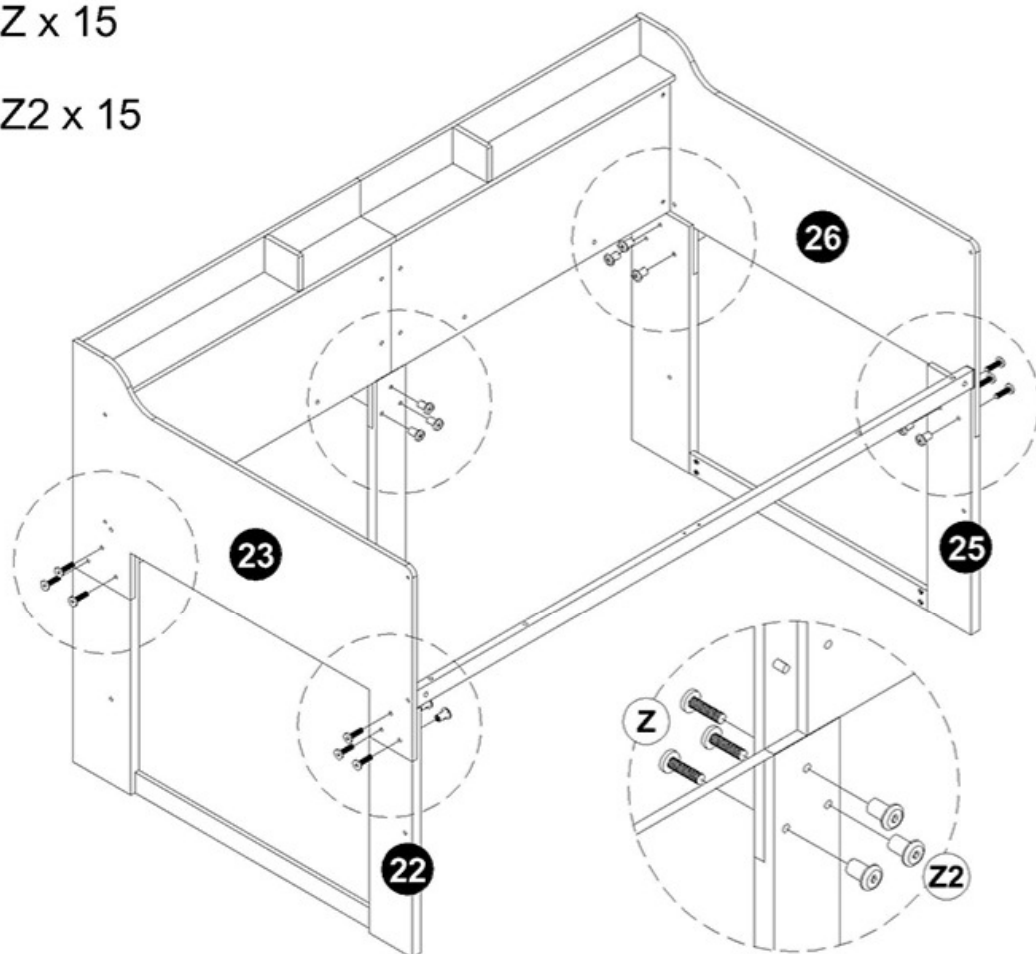


27



X x 4




Z2 x 4

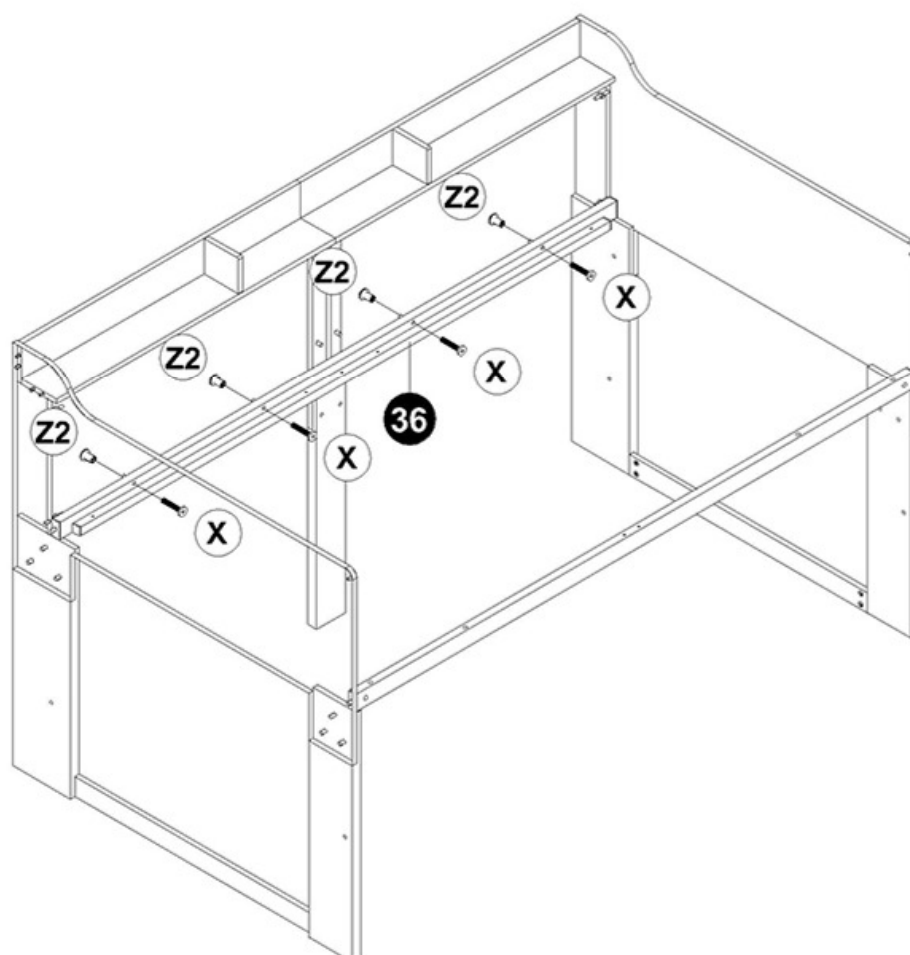




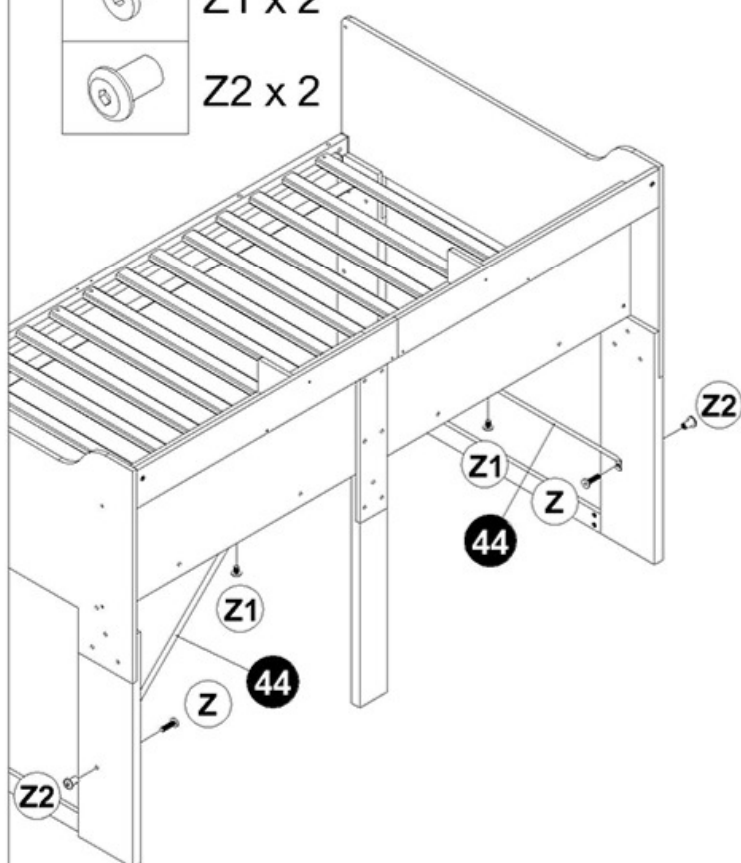
Guide To Assembly

Model : MG 7269

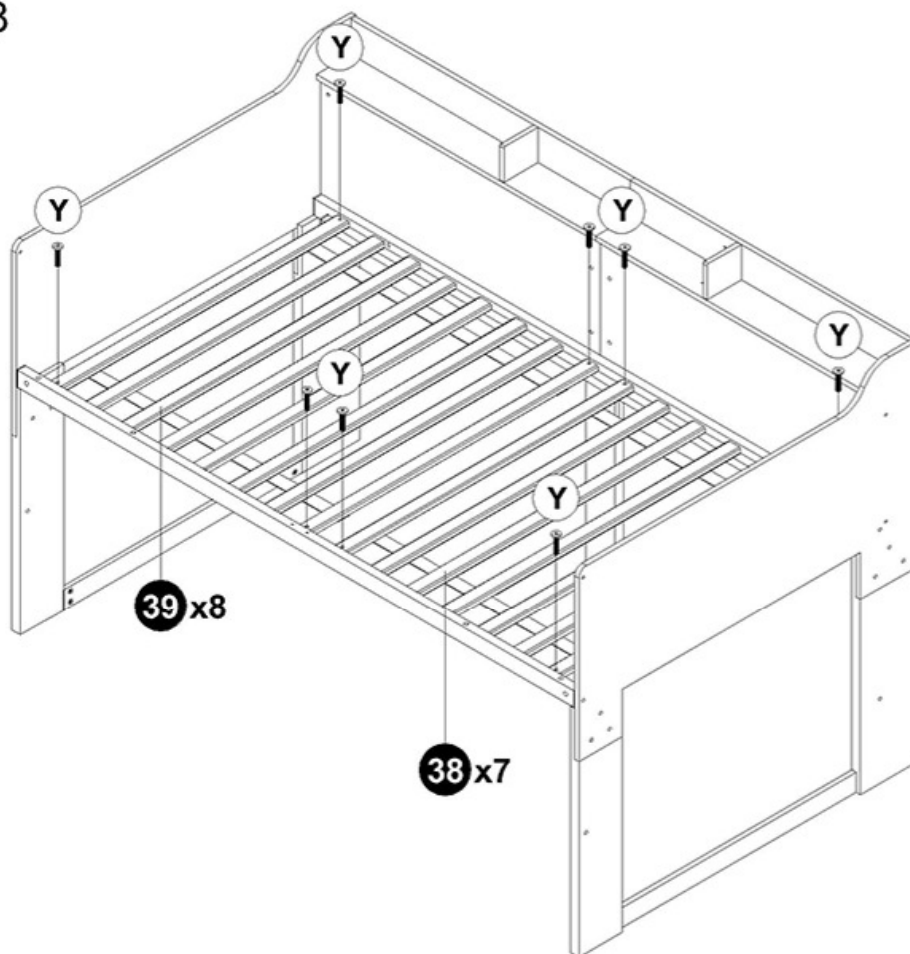
28  Y x 8



29  Z x 2
 Z1 x 2
 Z2 x 2



30  Z1 x 4

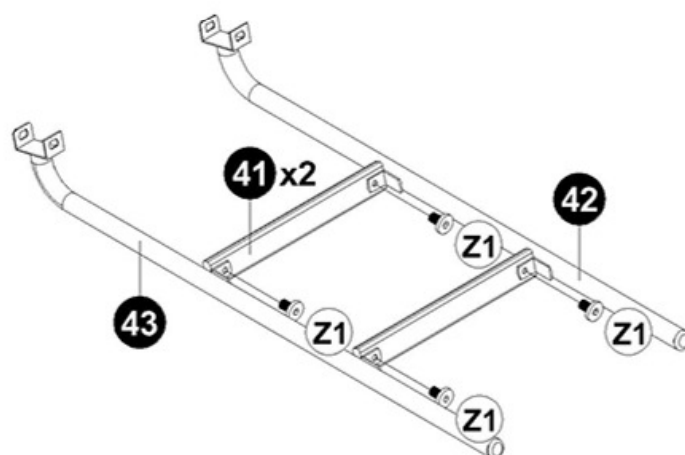

Guide To Assembly


Model : MG 7269

Option A

31



T x 1




W x 1



Z1 x 2

W

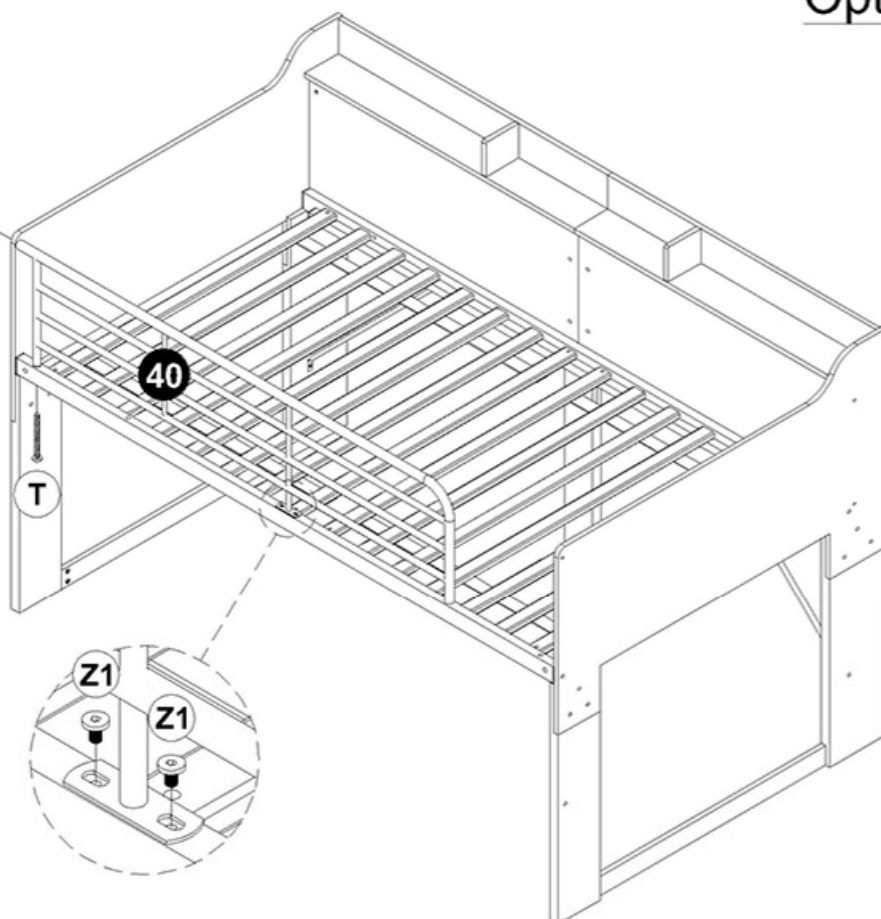

32



S x 1



U x 1




V x 1



Z x 2





Z2 x 4

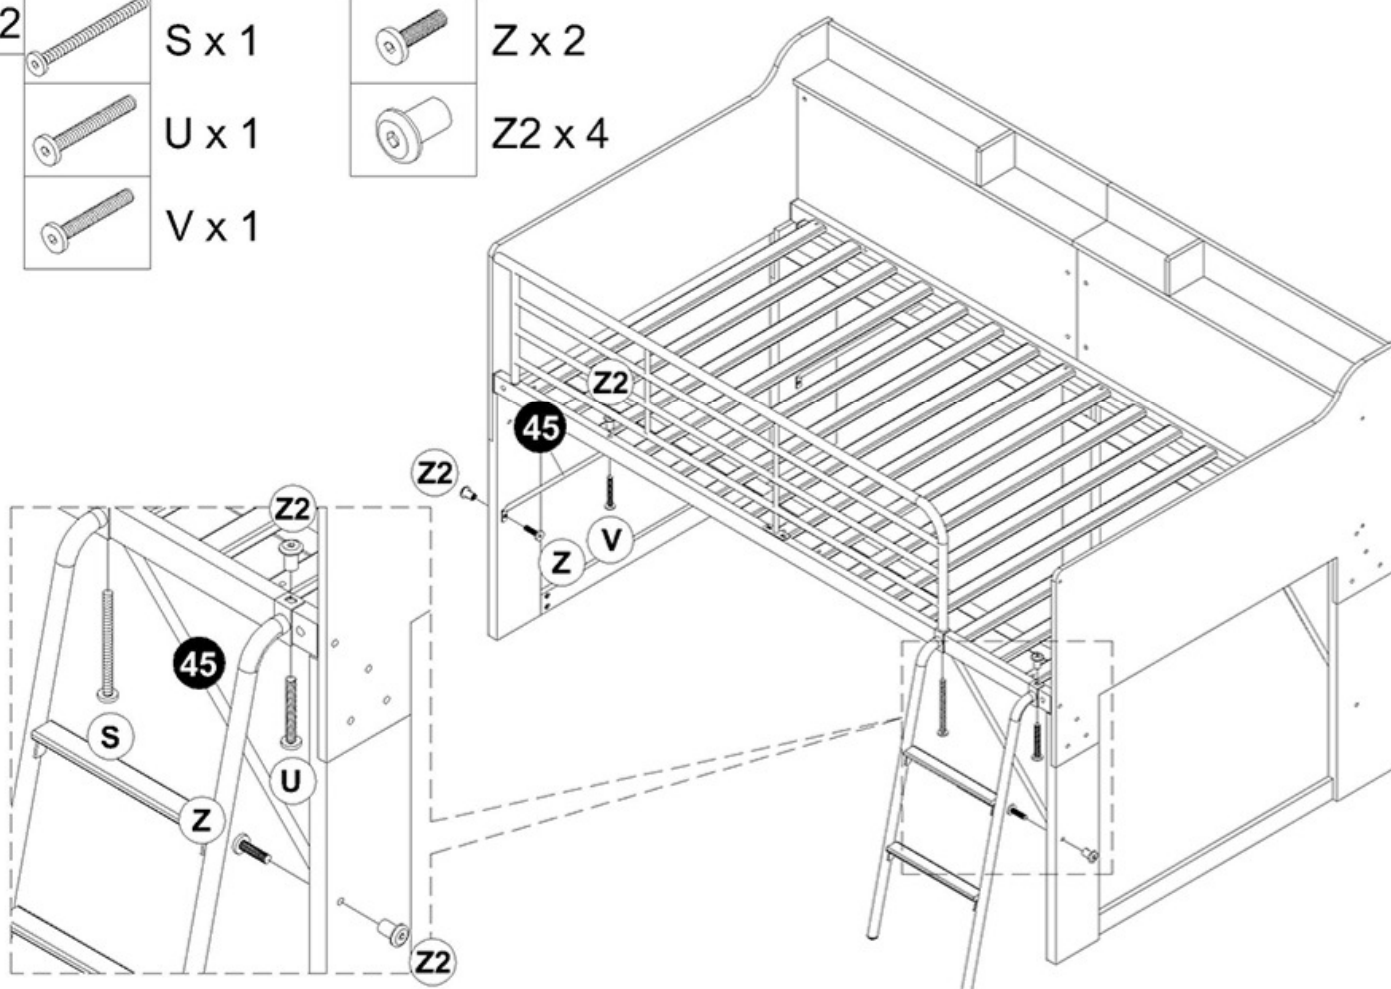

Guide To Assembly

Model : MG 7269

Option B

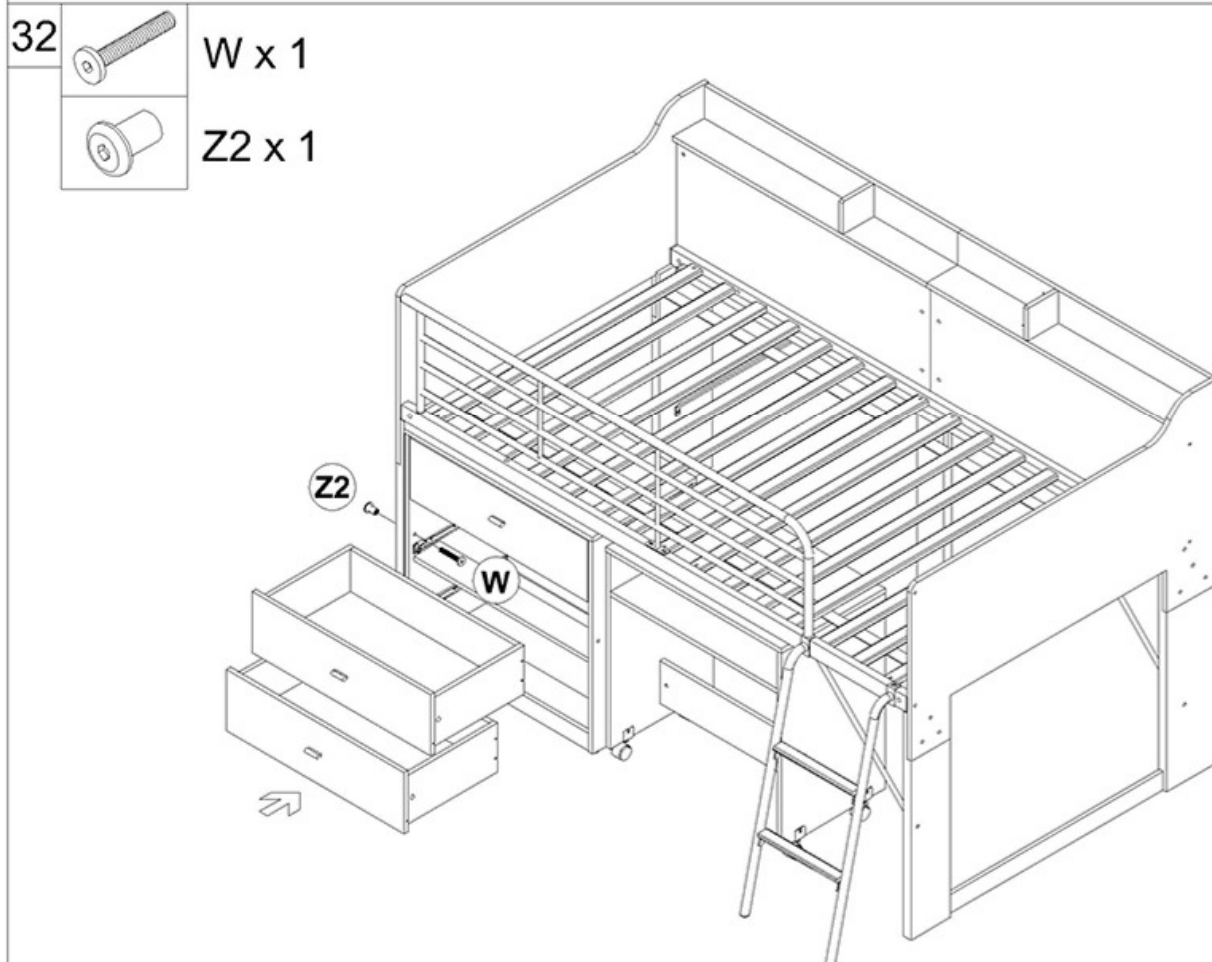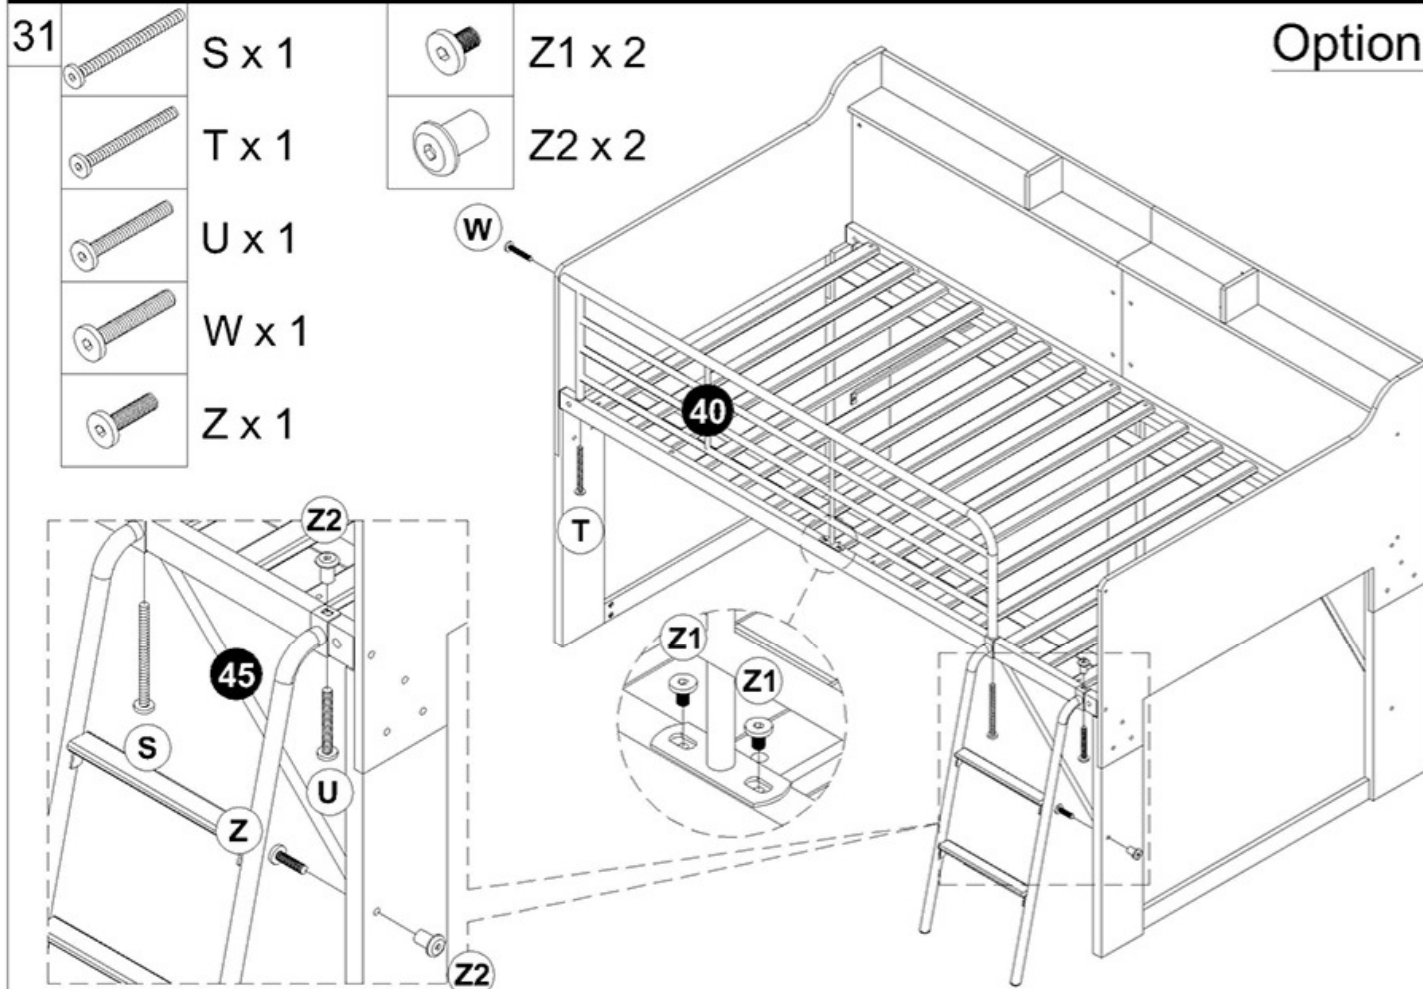


Guide To Assembly


Model : MG 7269

- 31
- T x 1
 - W x 1
 - Z1 x 2

Option C

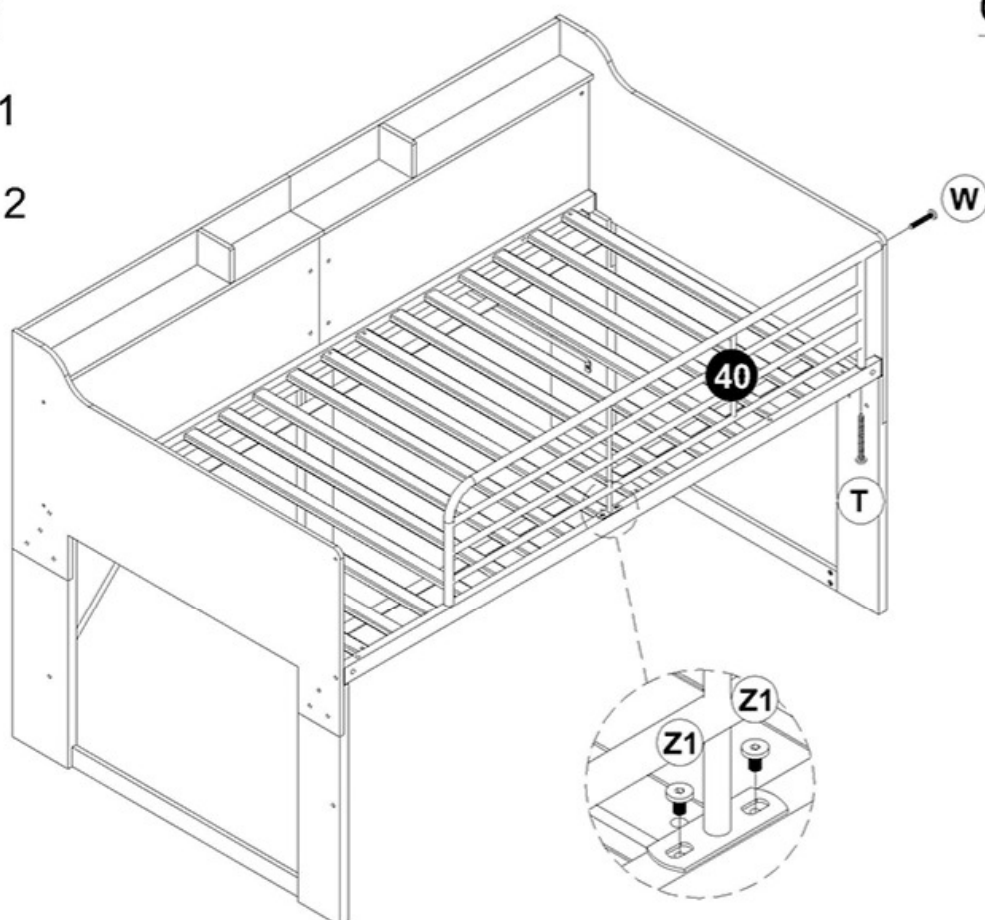

- 32
- S x 1
 - U x 1
 - V x 1
 - Z x 2
 - Z2 x 4

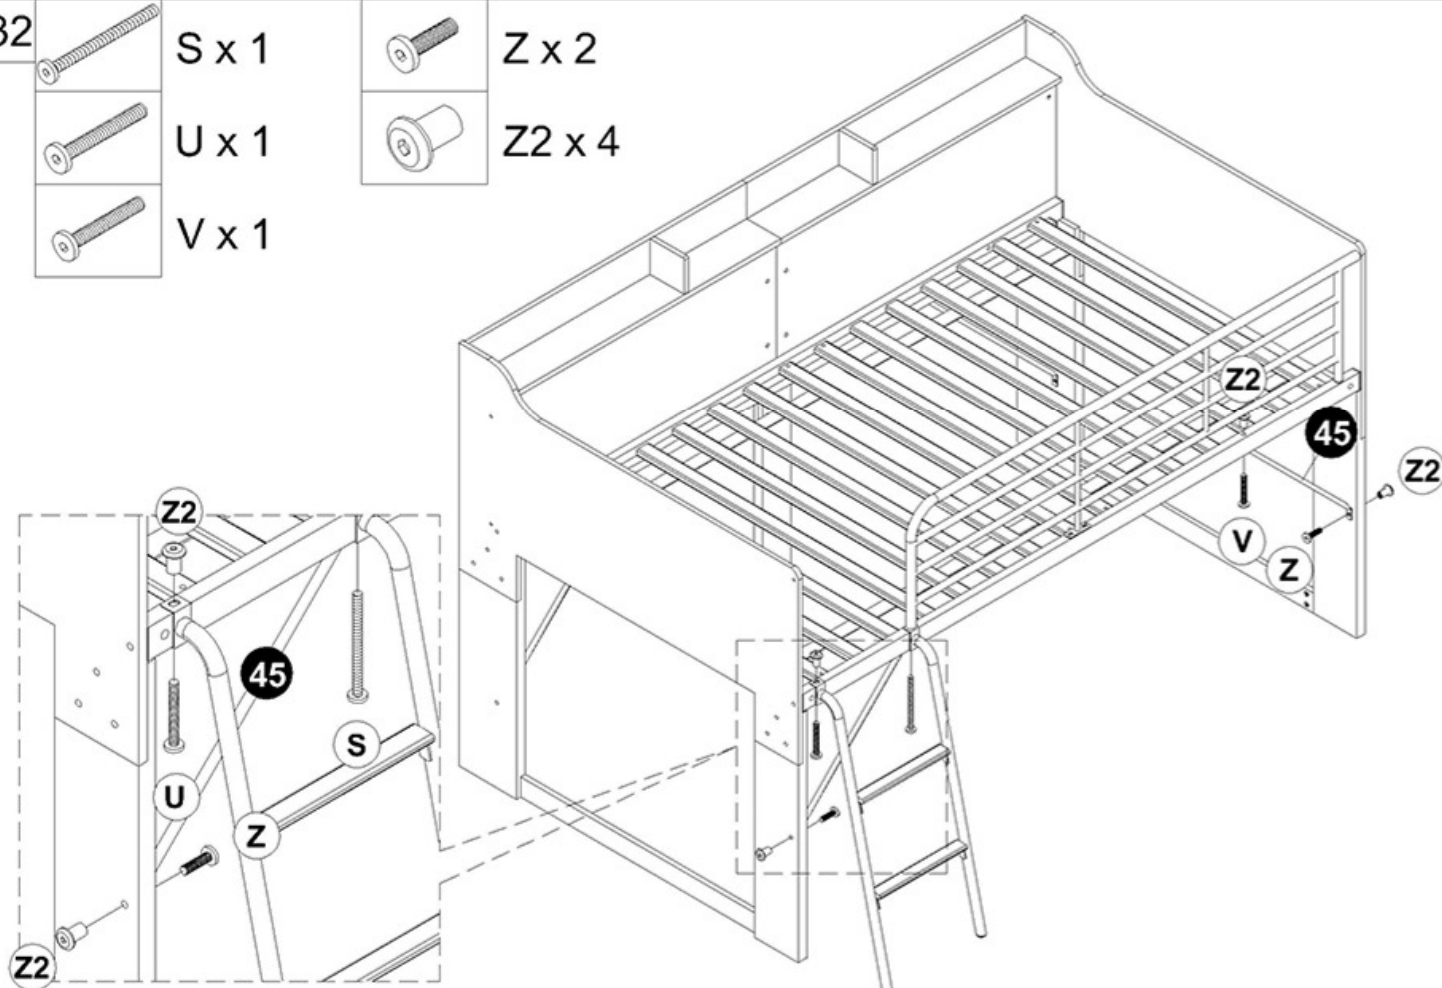

Guide To Assembly

Model : MG 7269

