


Assembling Instruction

Generating Drawings

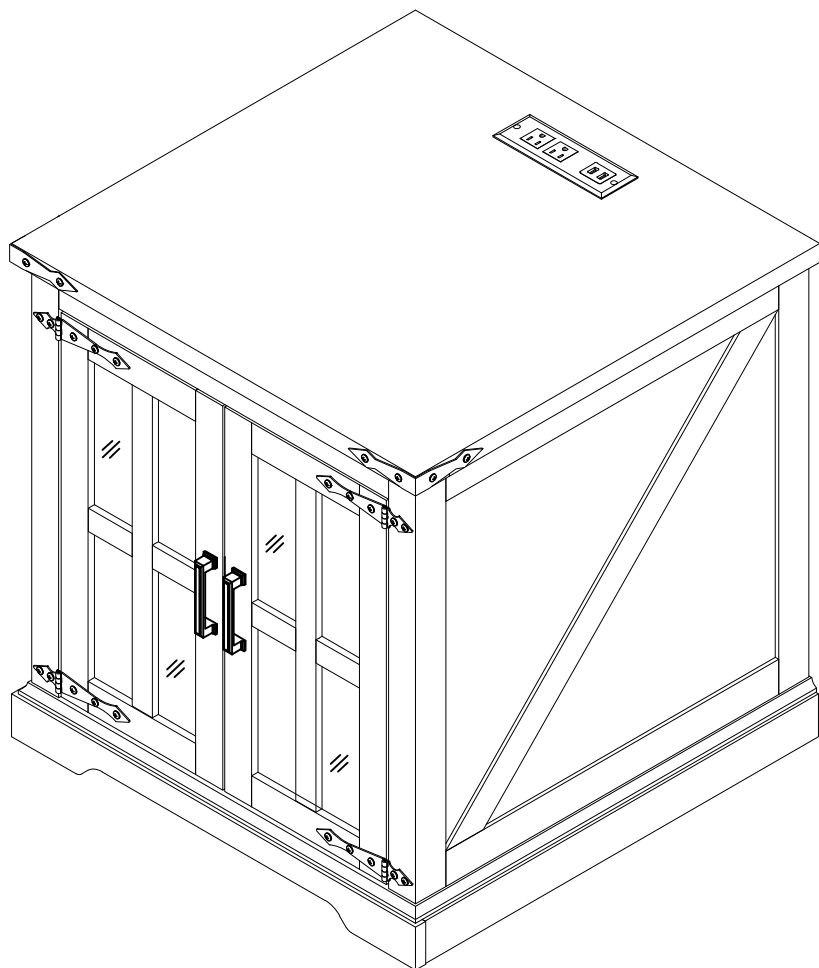

ATTENTION

If there is any missing, please kindly send us messages to let us know the name of missing part regarding to the first page of instructions.

Please also provide us your full address so we can send replacement to you as soon as possible


We are concerned about each customer's experience, if there is any loss or damage, please contact us at any time, we will provide effective solutions.

Please attach your Order ID so that we can assist you better




General Assembly Guidelines

- I. Ensure that all Parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this Product.
- III. Two People are recommended for ease in the assembly of this Product.
- IV. The three main types of hardware used to assemble this Product are : wood dowels , screws and bolts.
- VI. A Phillips head screwdriver is required for the assembly of this Product .



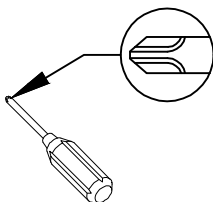


- VII. Power tools should not be used to assemble this Product .

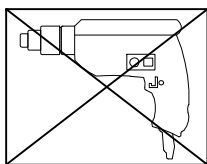


CAM LOCK/BOLT FASTENING INTRODUCTION

(You will use it during assembly)

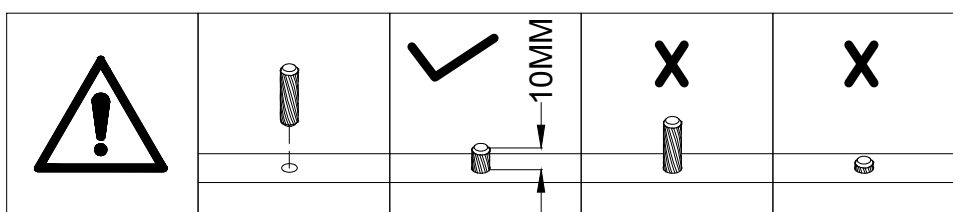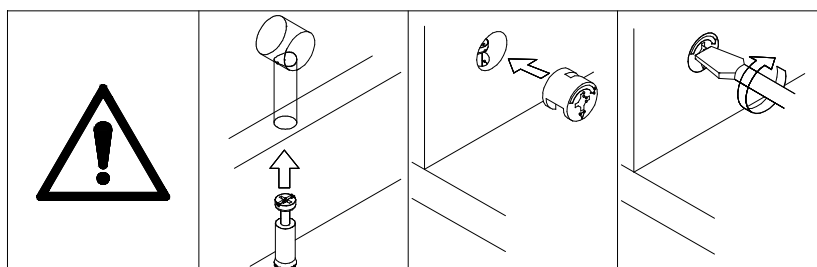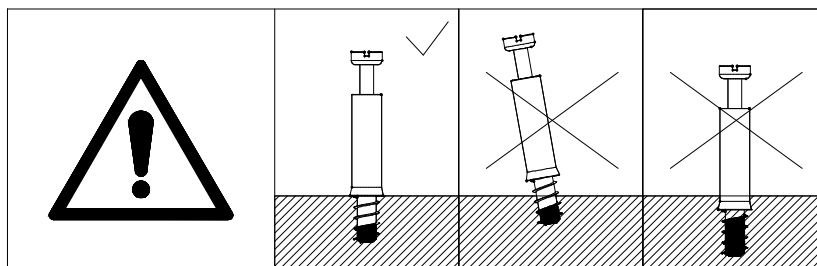


Parts List

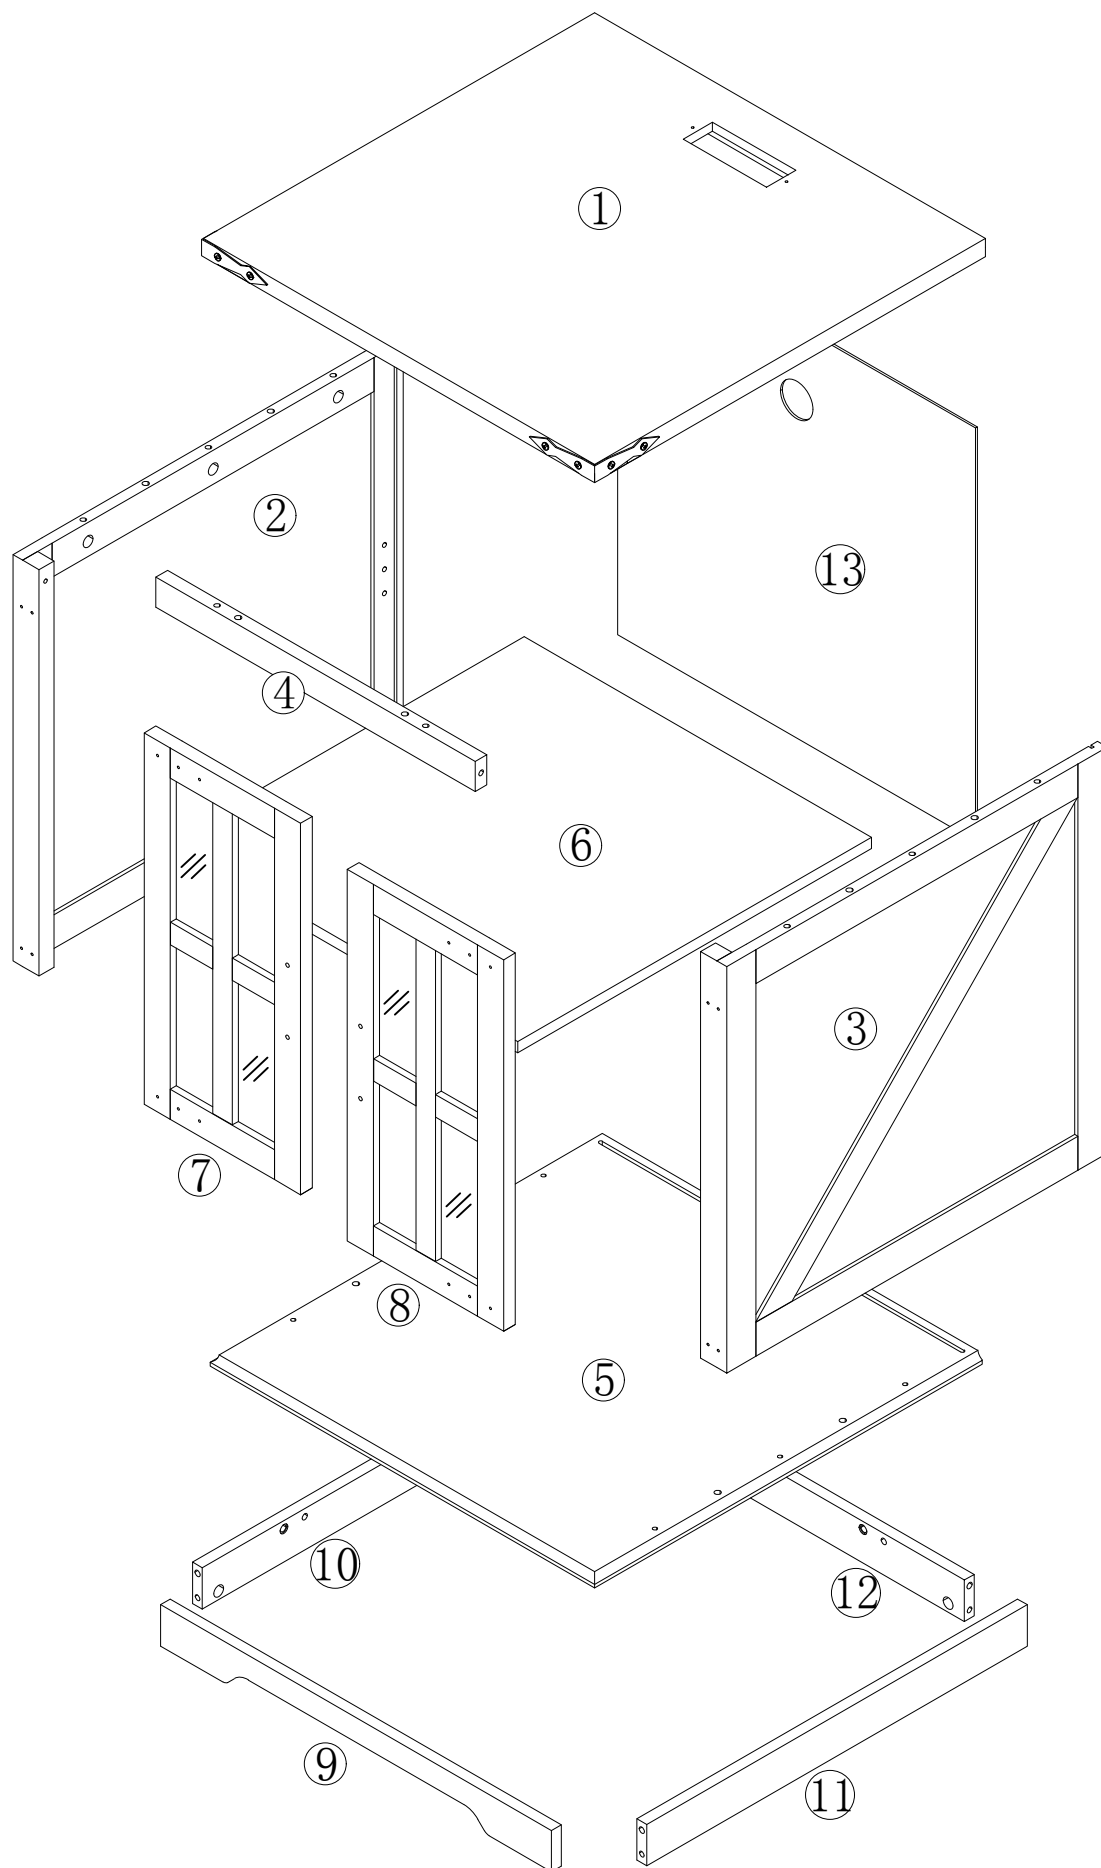

HARDWARE PACK CONTENT


A

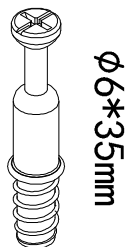

φ6*35mm

14X + 1

B



φ15*9.5mm

14X + 1


C



φ8*30mm

14X + 1

D



φ5*40mm

6X + 1

E



4X


F



φ3*15mm

6X + 1

G

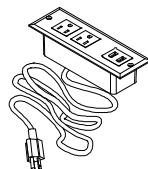


1X

H



4X


I



φ3.5*14mm


20X + 2

J




4X

K



1X

L

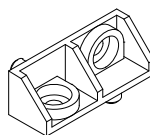

8X


M



M6*12mm


16X + 1

N



1X

O



φ3*12mm

2X

P



2X


Q




M4*22mm

4X



Step 1

A	L	M
		
X4	X8	X8

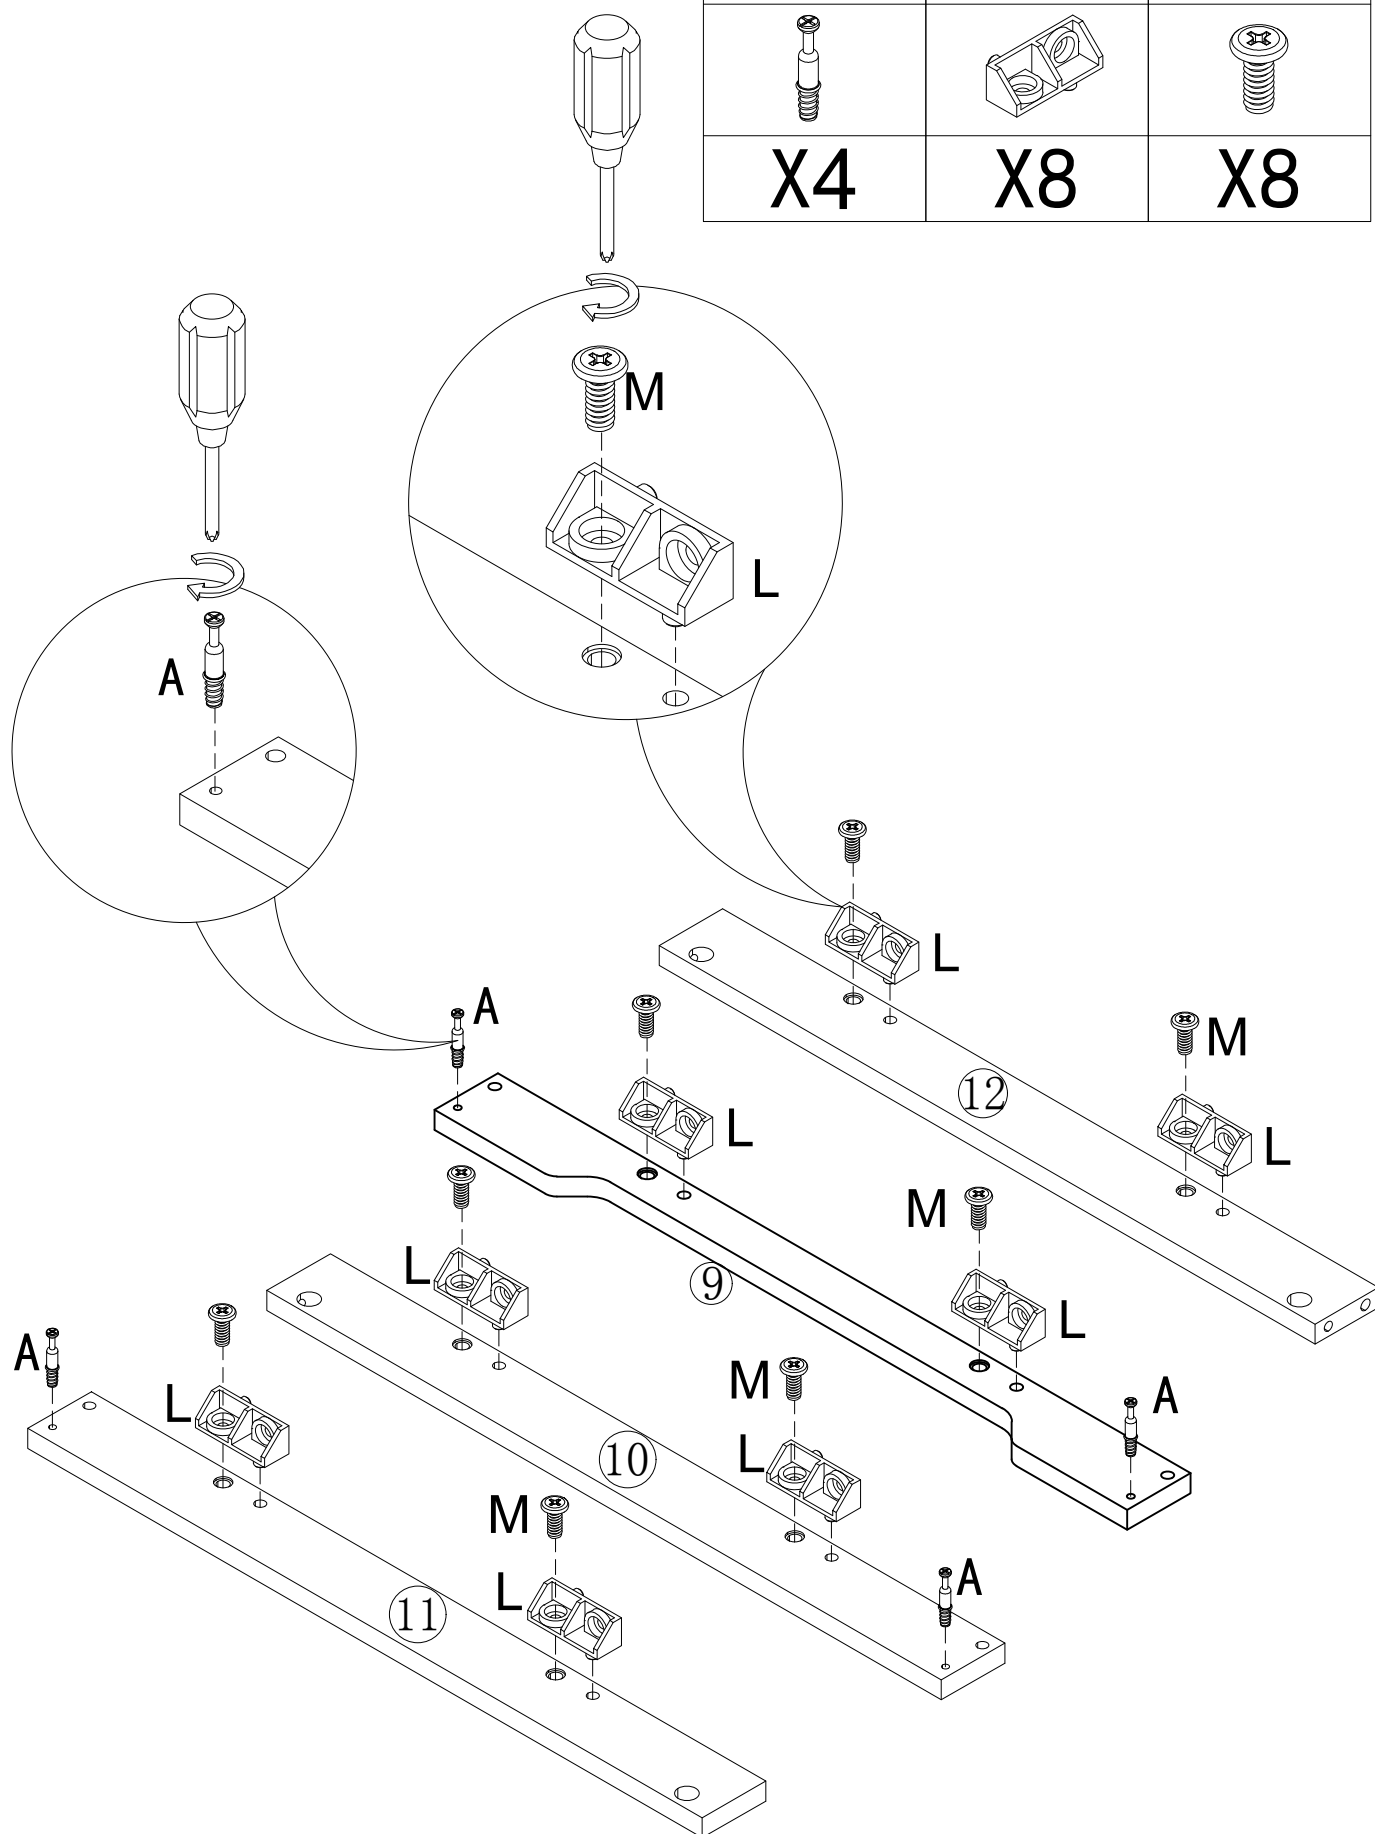


Step 2

B	C
	
X2	X2

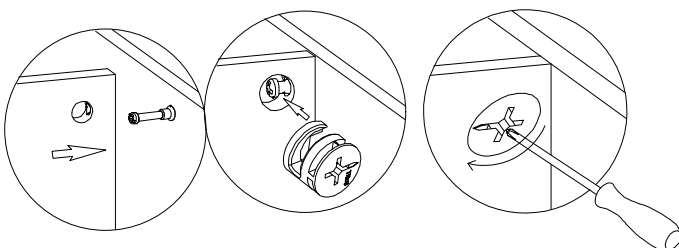
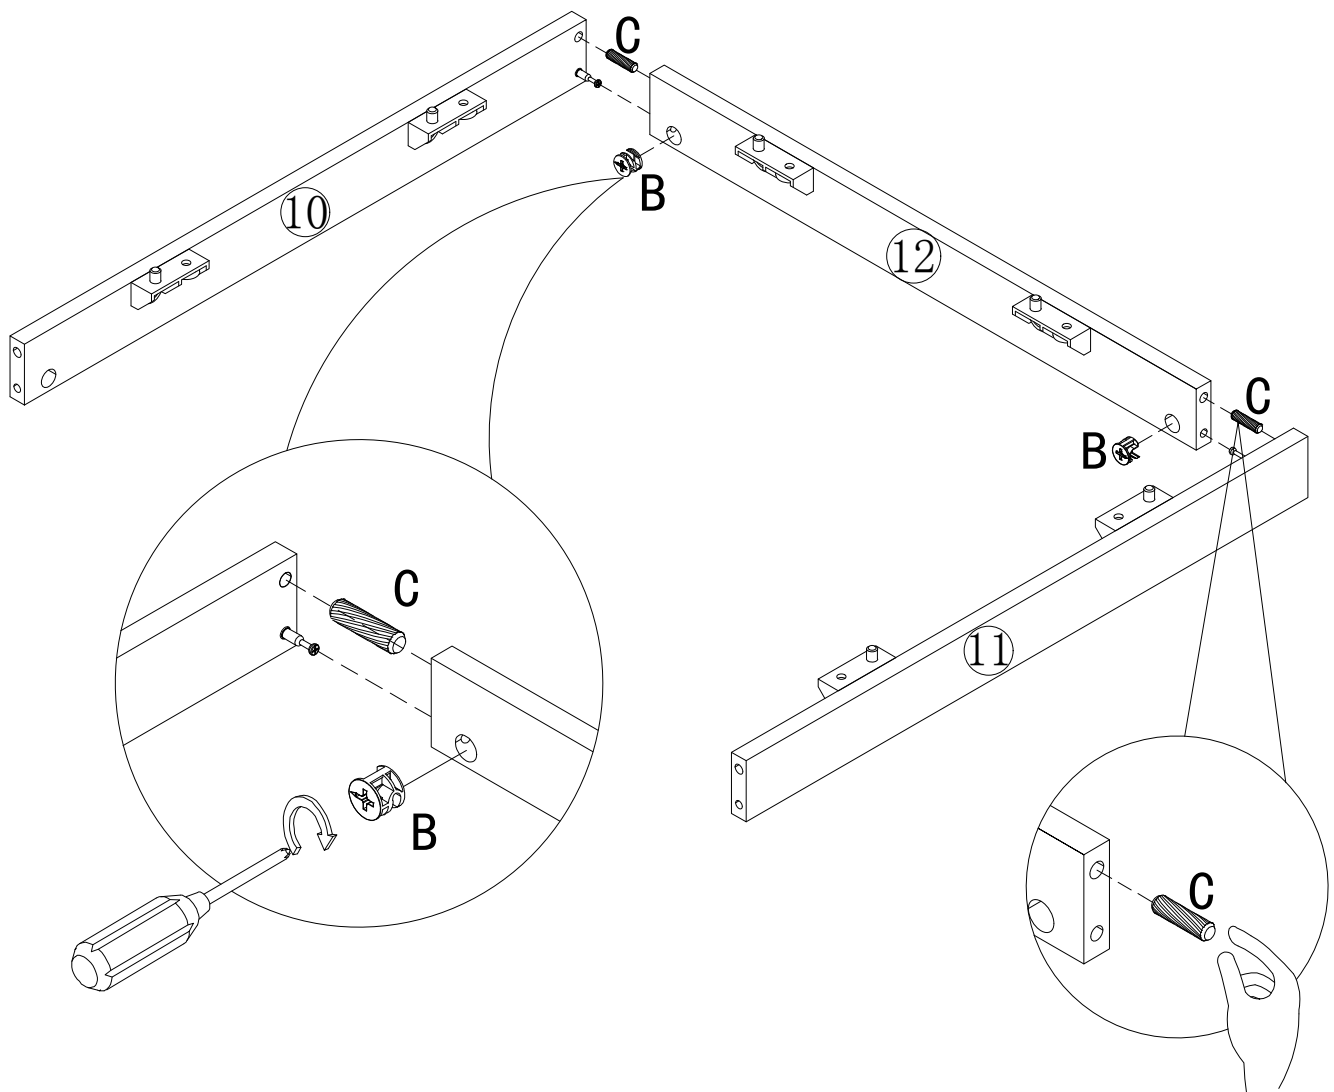



Step 3

B	C
	
X2	X2

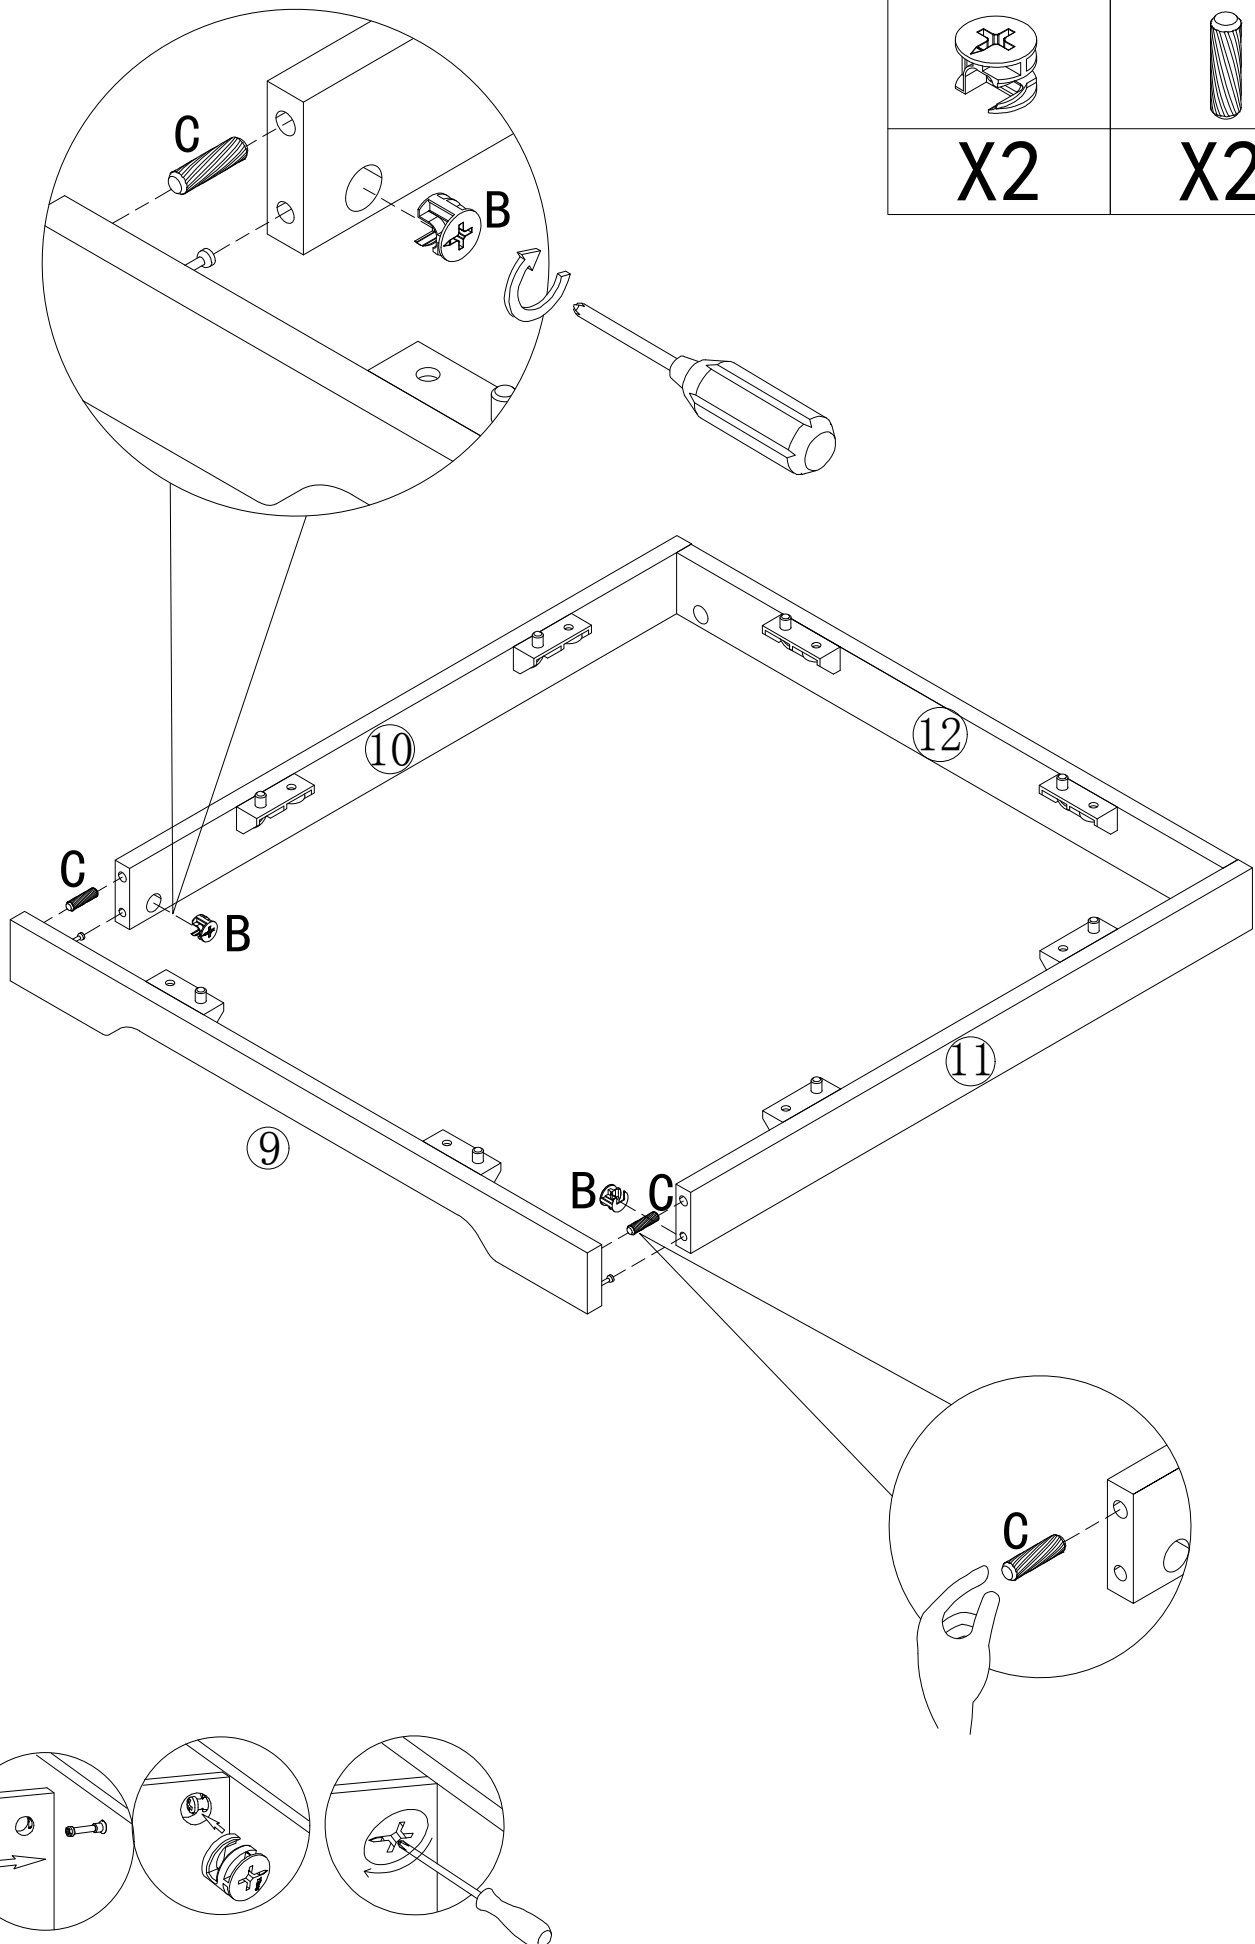

Step 4

A	N	O
		
X2	X1	X2


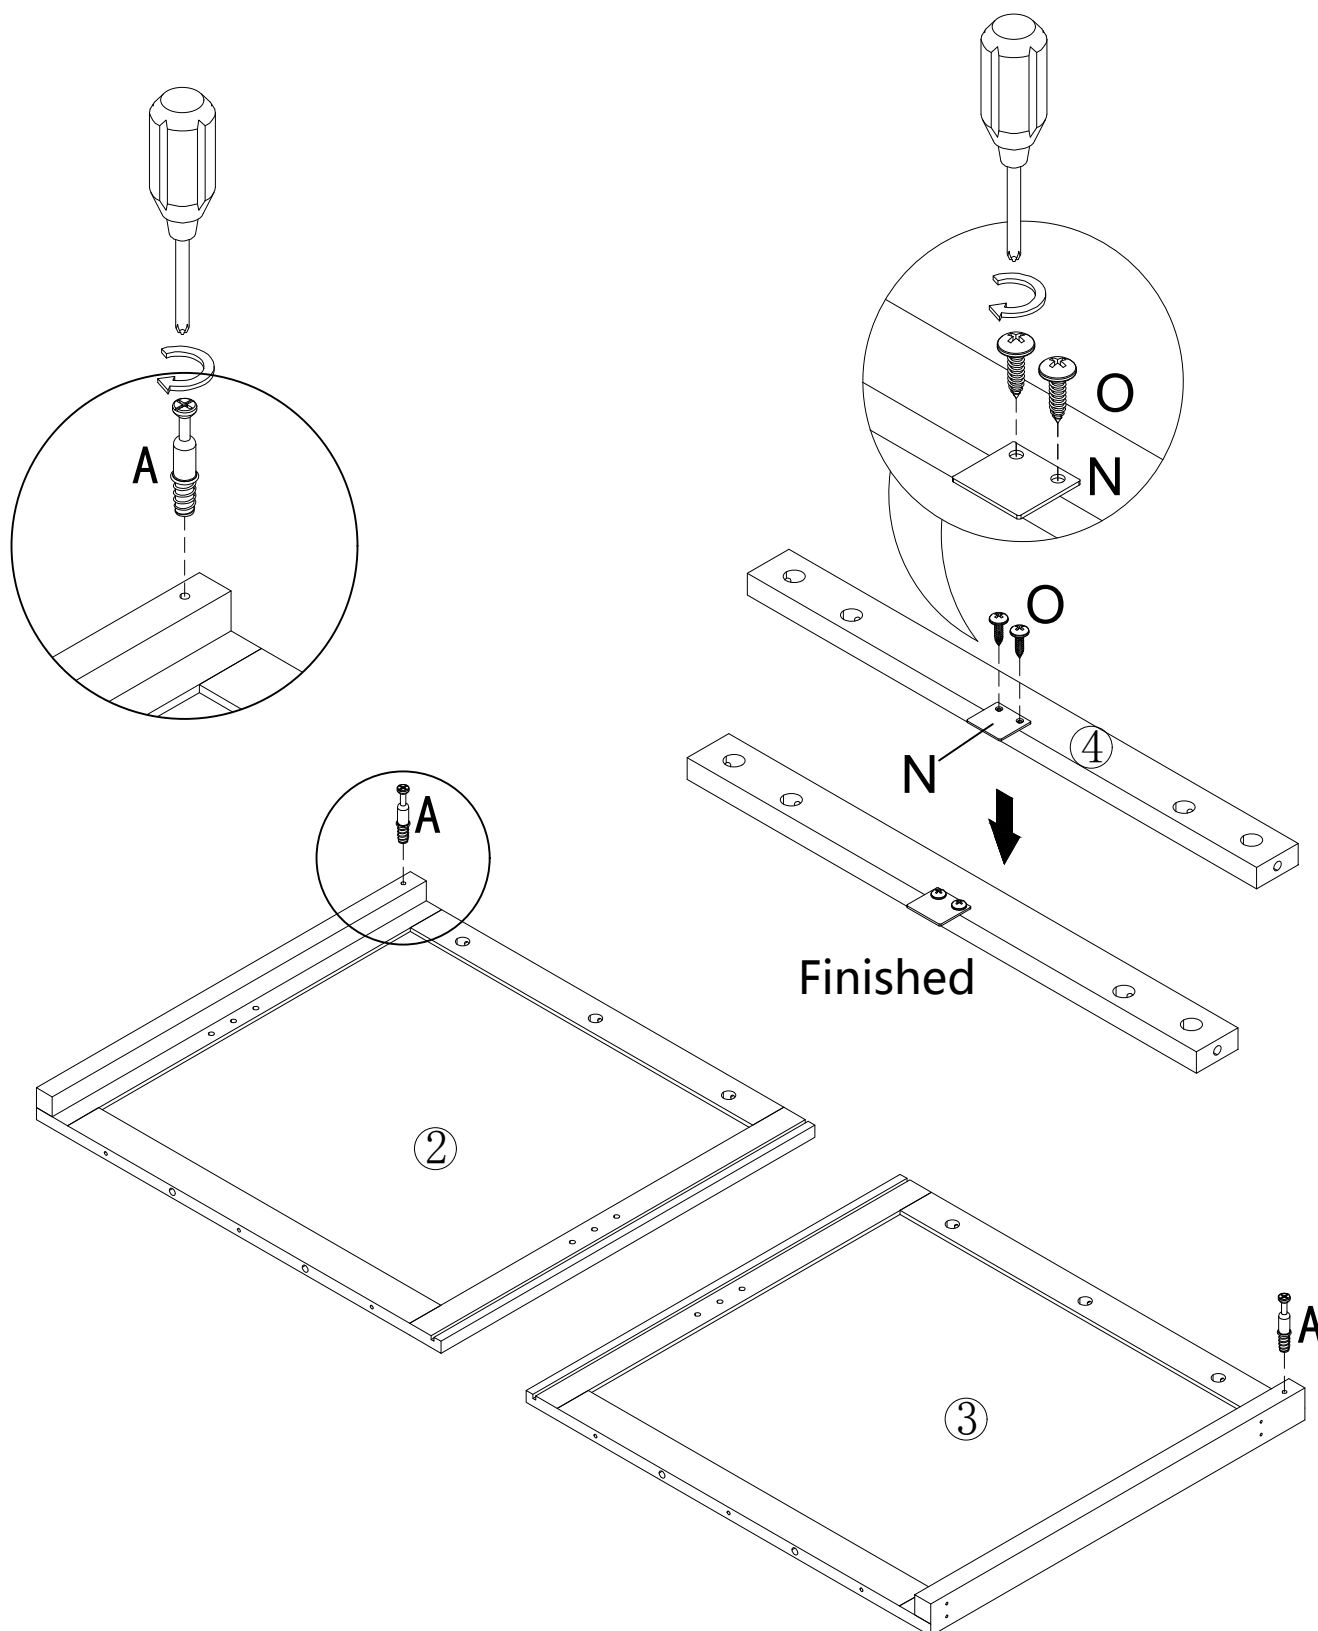


Step 5

B




X2

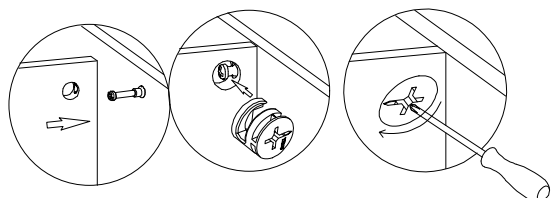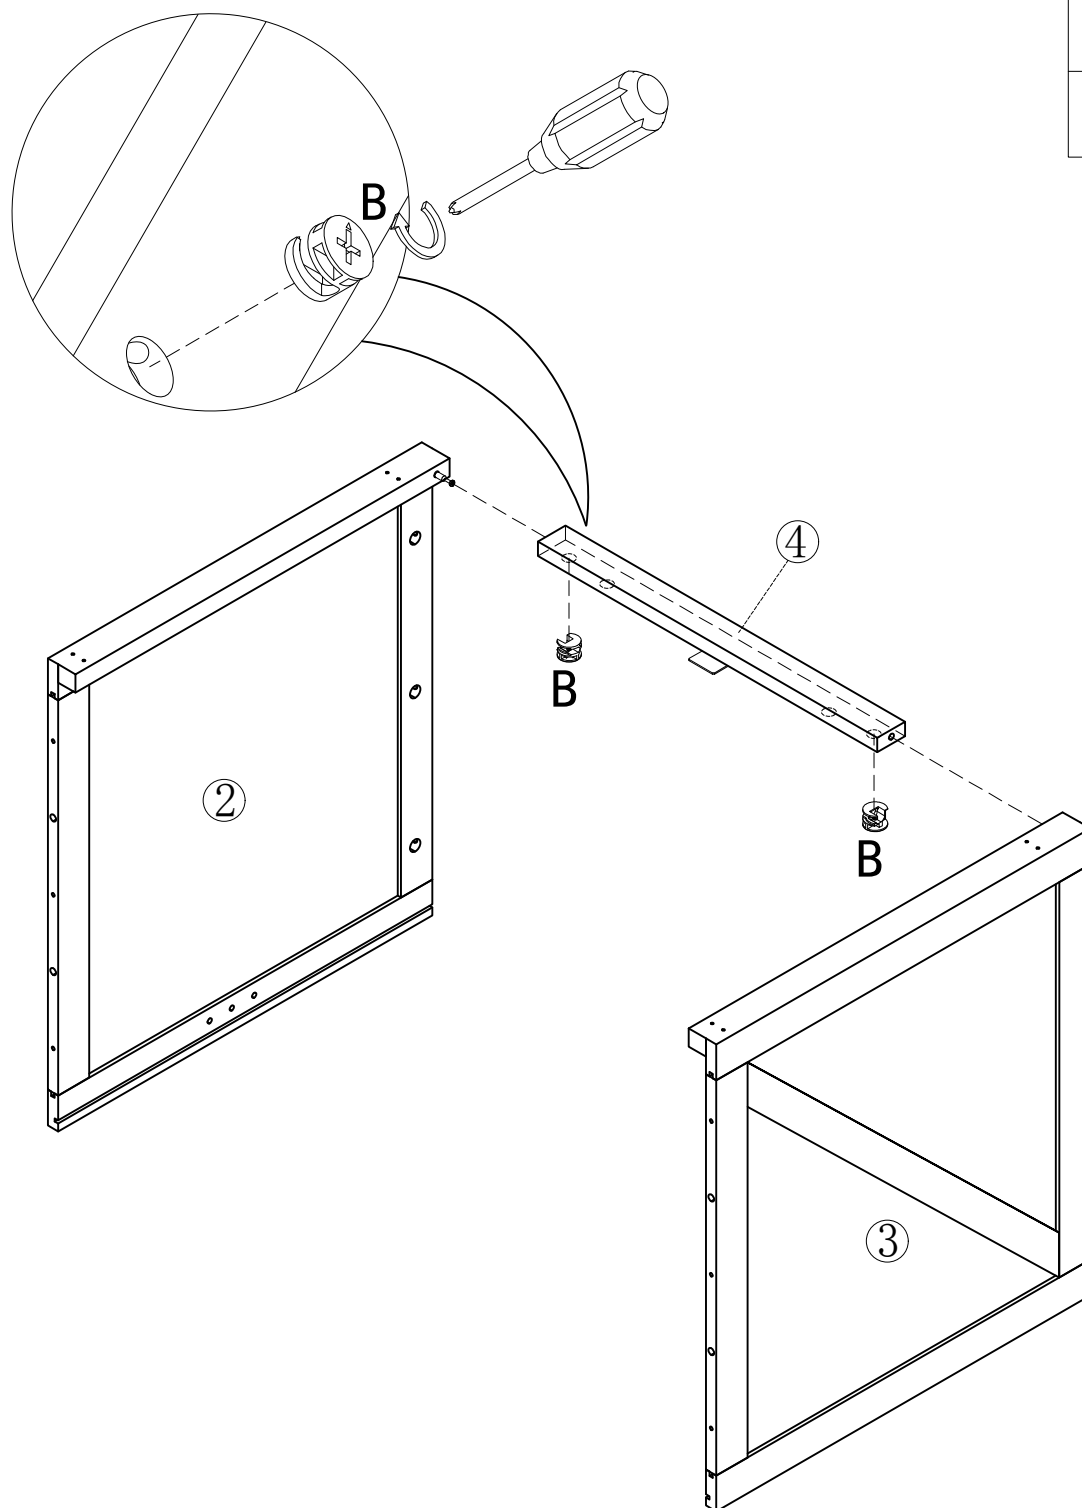

Step 6

D	C	K
		
X6	X4	X1


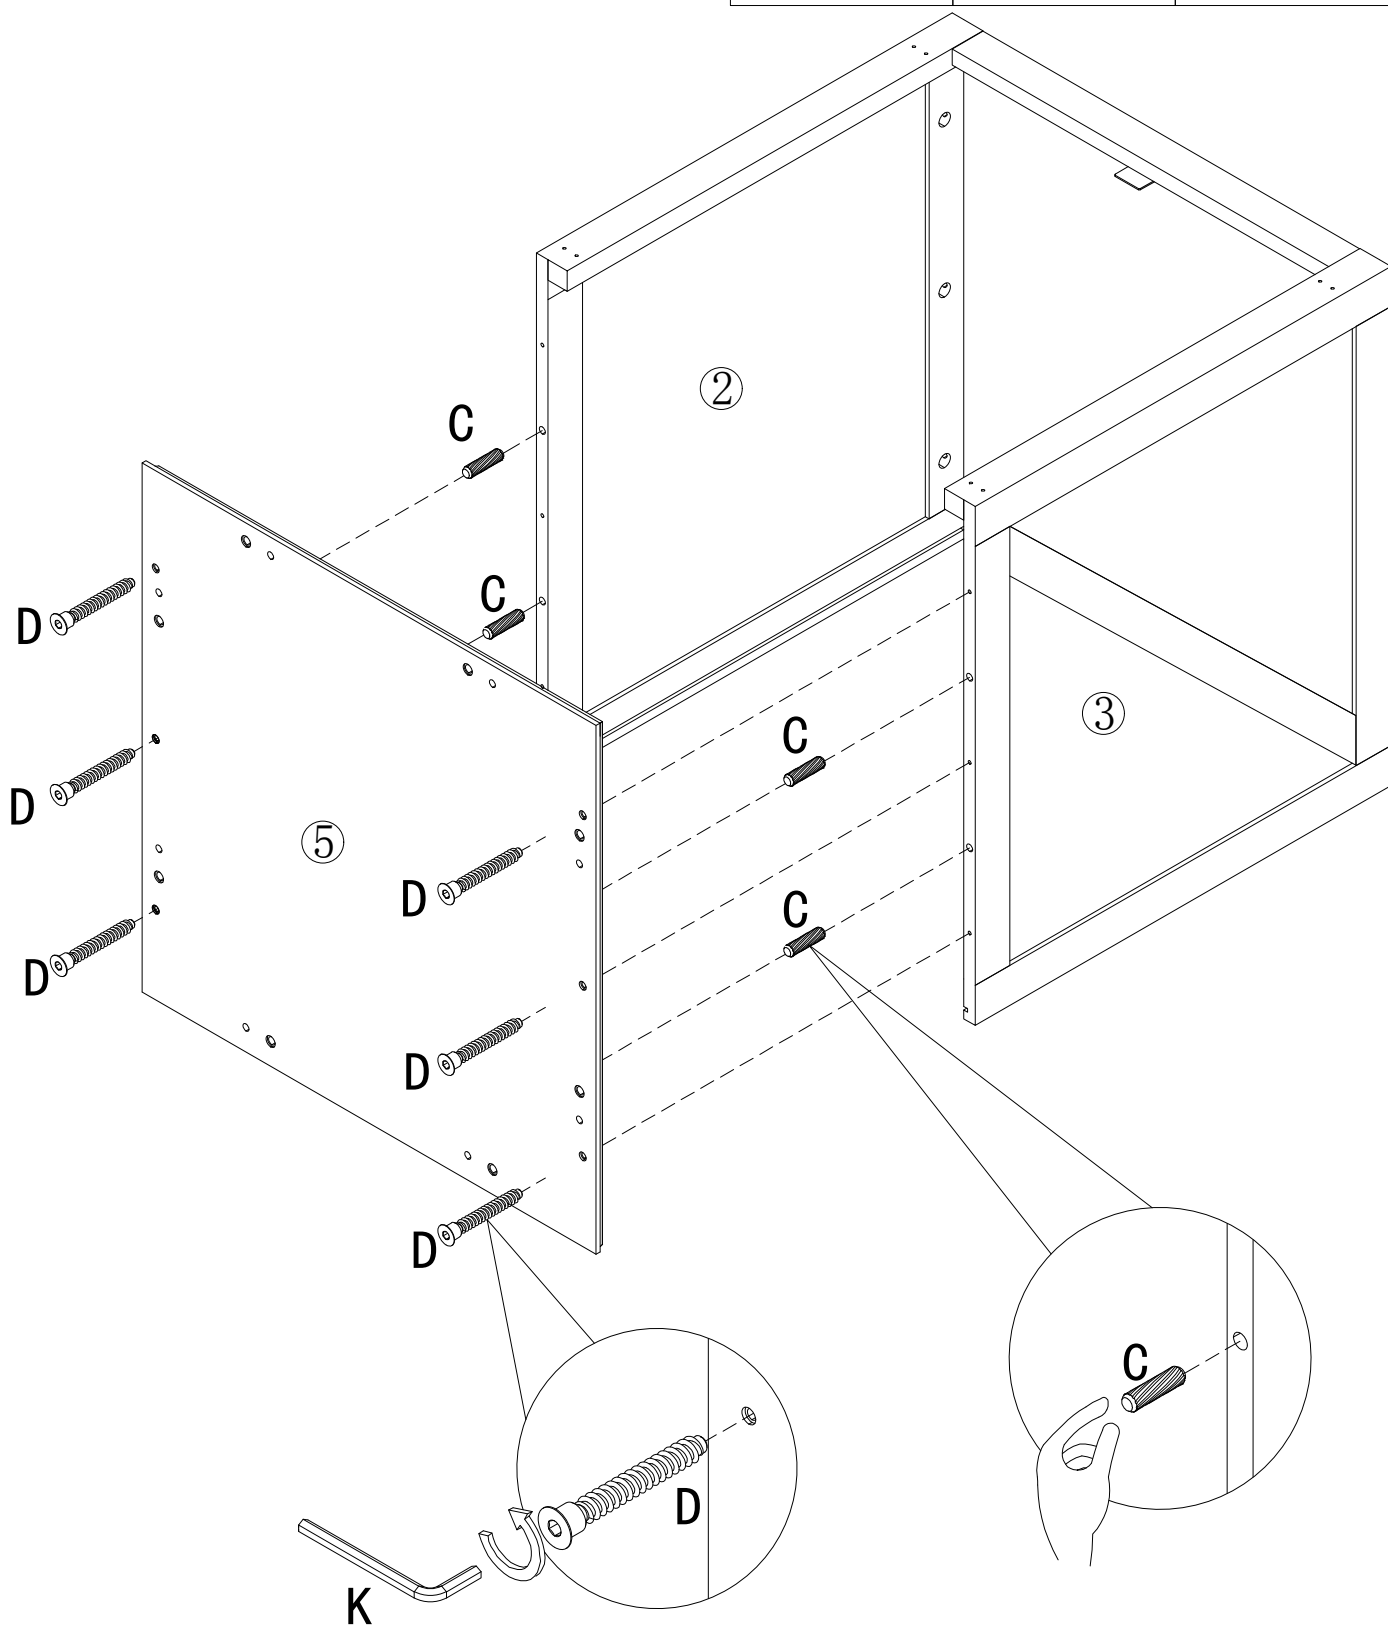


Step 7

M



X8

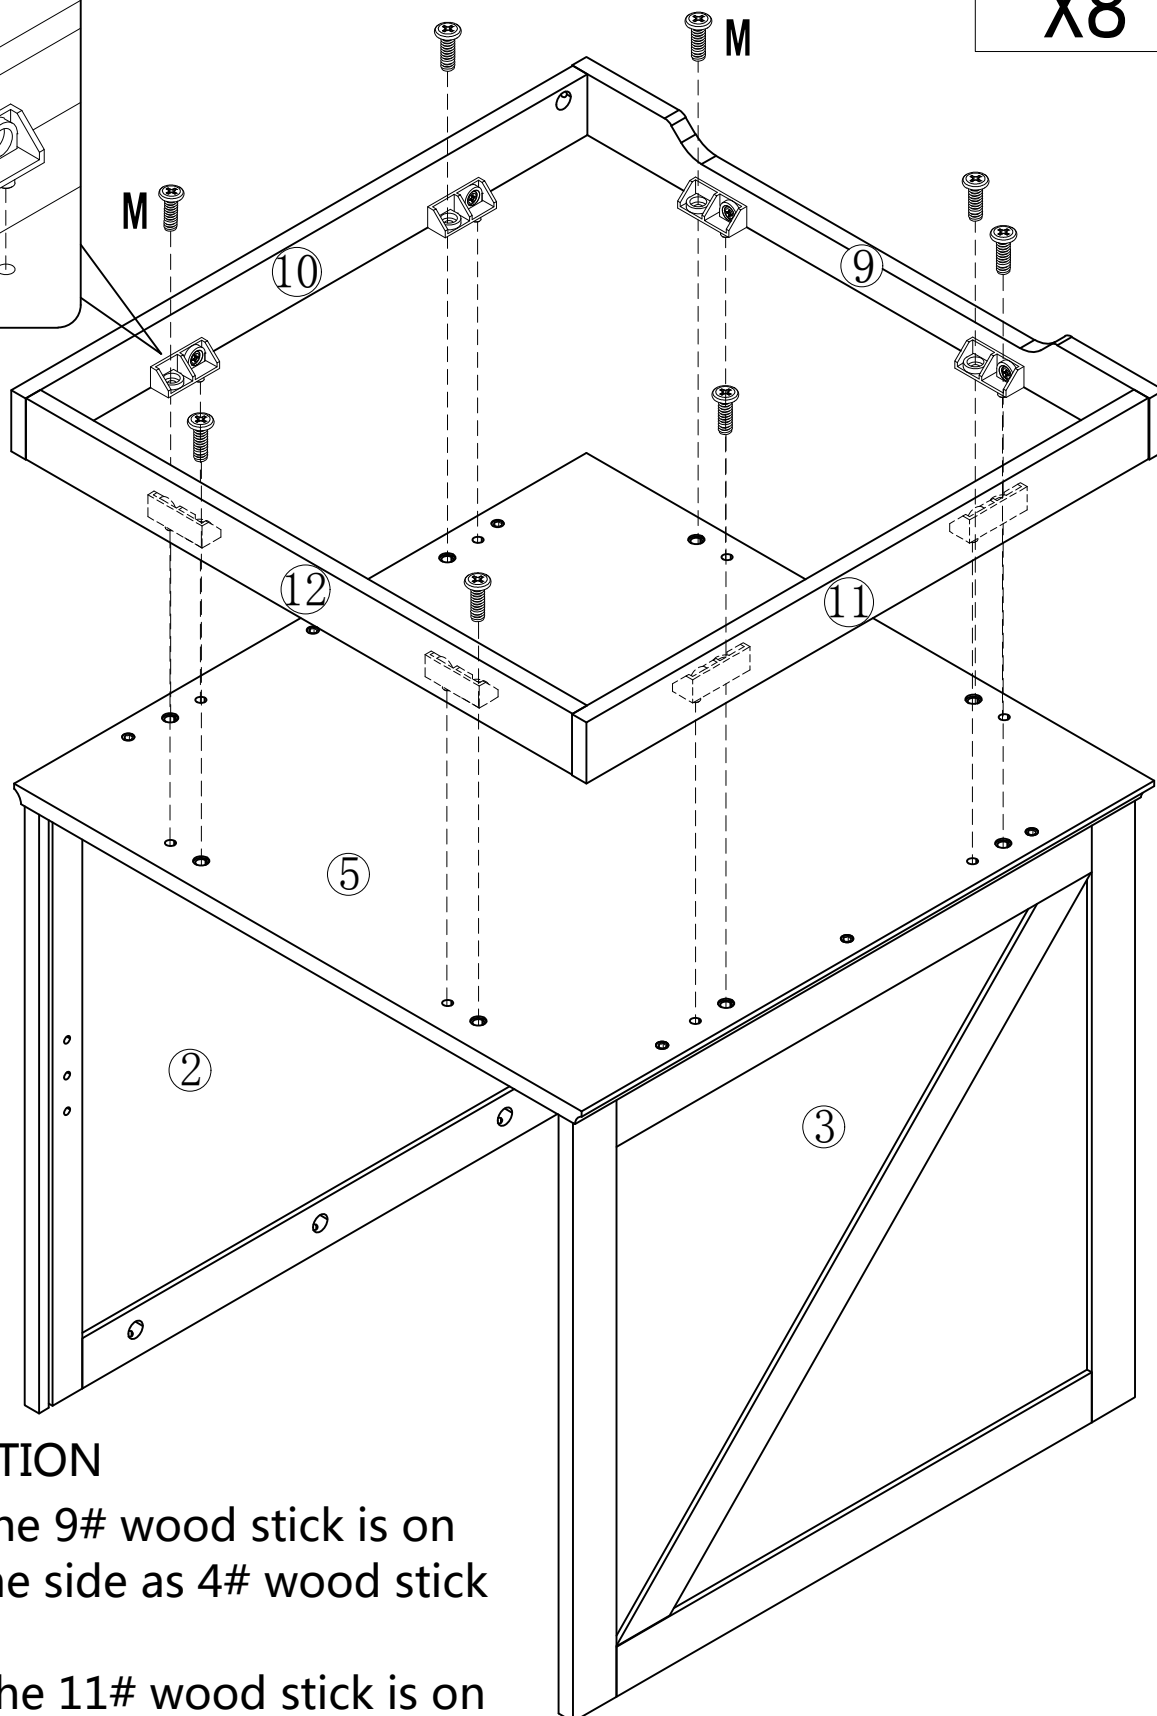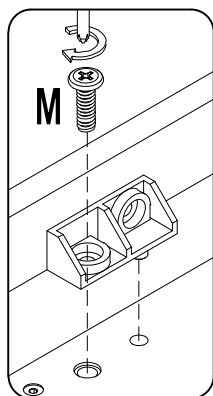

⚠ CAUTION


Note: The 9# wood stick is on the same side as 4# wood stick

Note: The 11# wood stick is on the same side as 3# BOARD

Step 8

⚠ CAUTION

Please be aware the wire hole is at the top

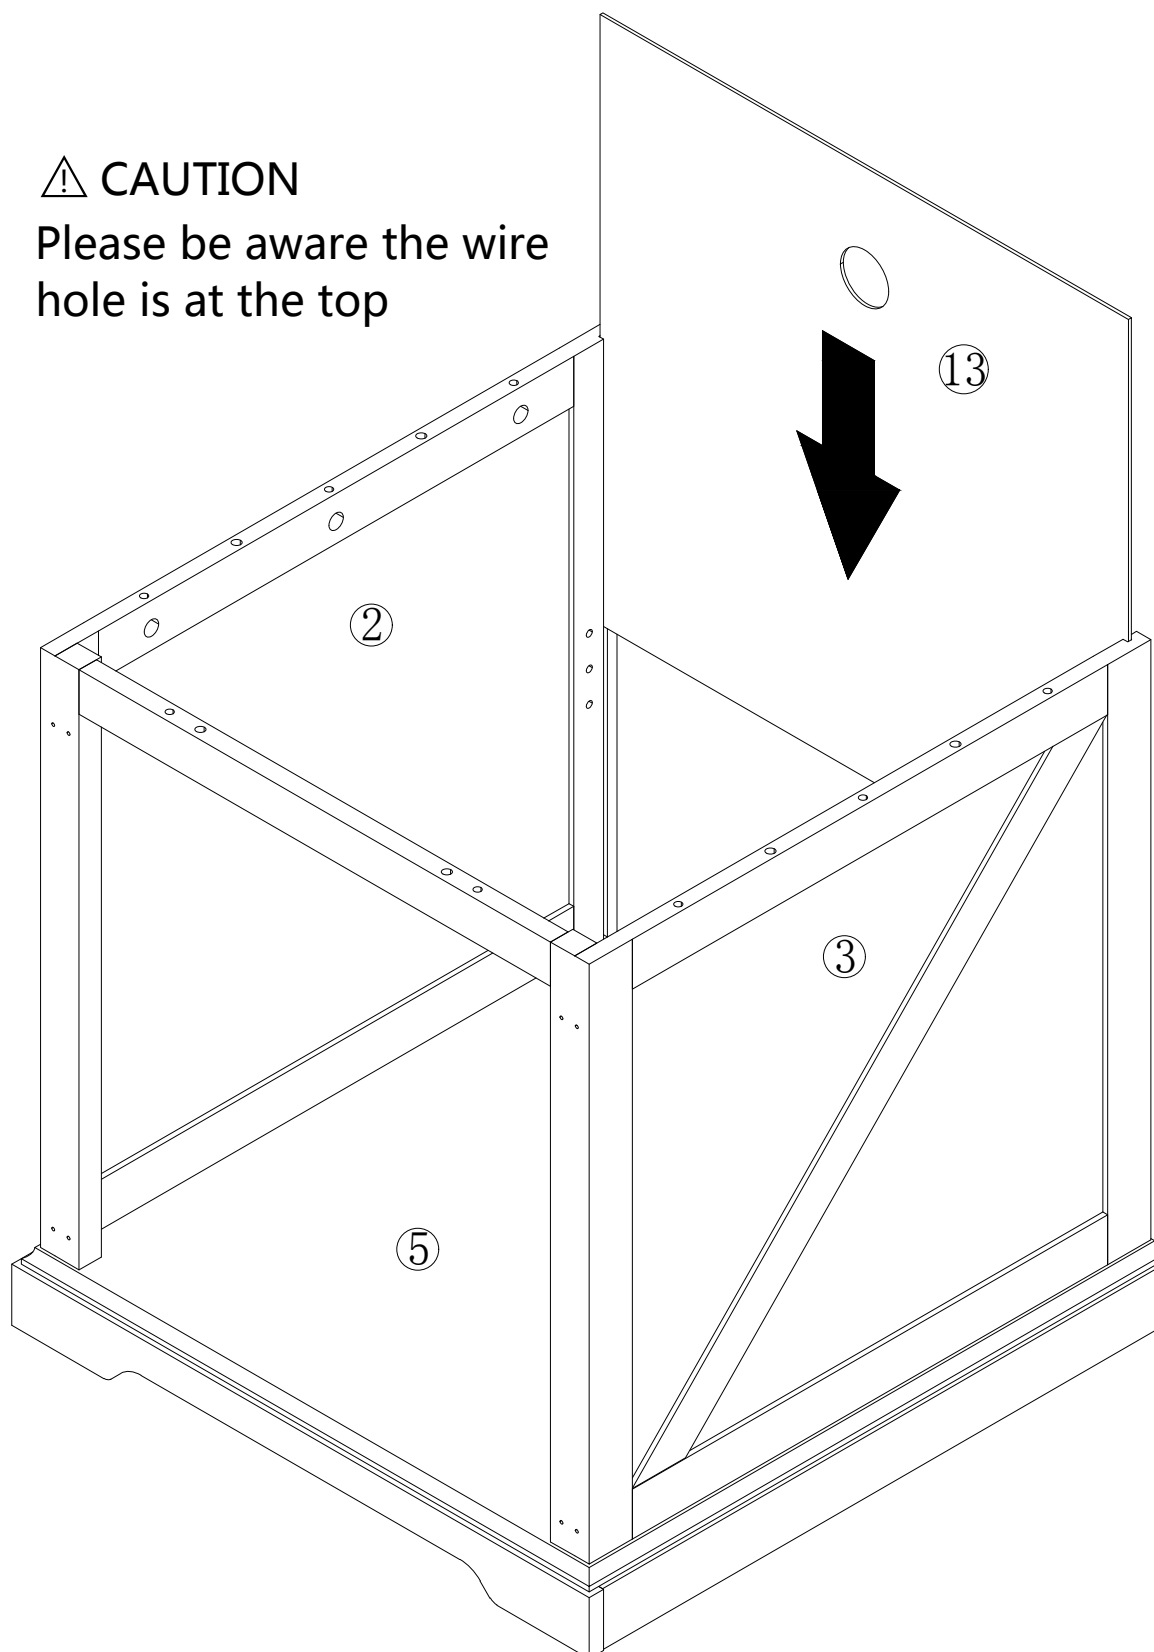


Step 9

A



X8




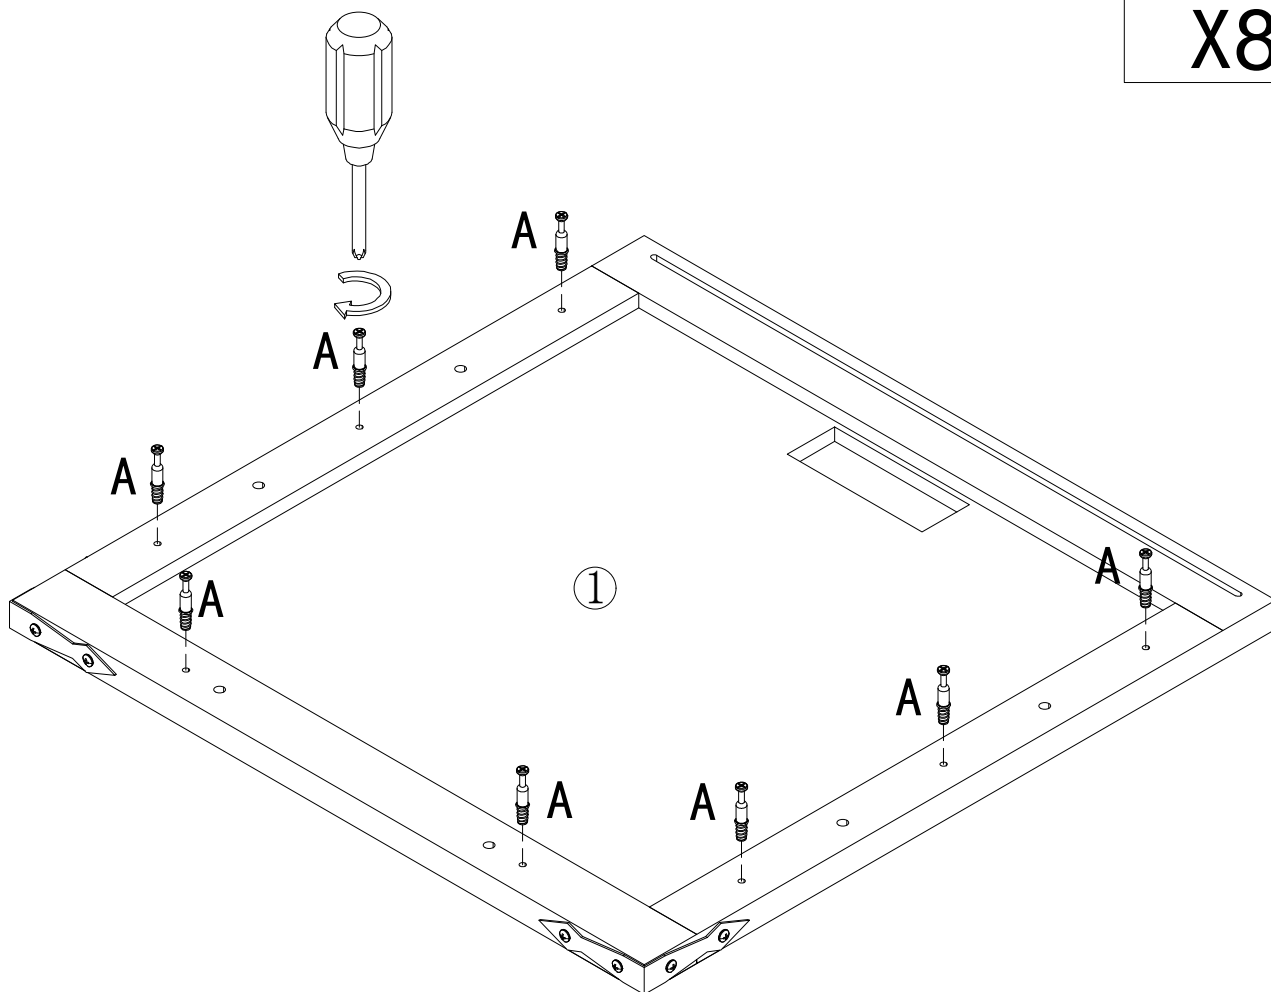


CAM LOCK/BOLT FASTENING INTRODUCTION (You will use it during assembly)


Screw cam bolt into the threaded anchor gently. (Attention: don't screw cam bolt too deep or too shallow.)	Keep cam bolts straight to the panels for alignment with screw holes.




Step 10

B	C
	
X8	X6

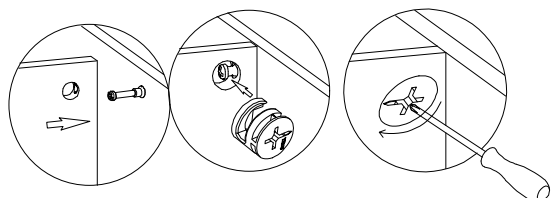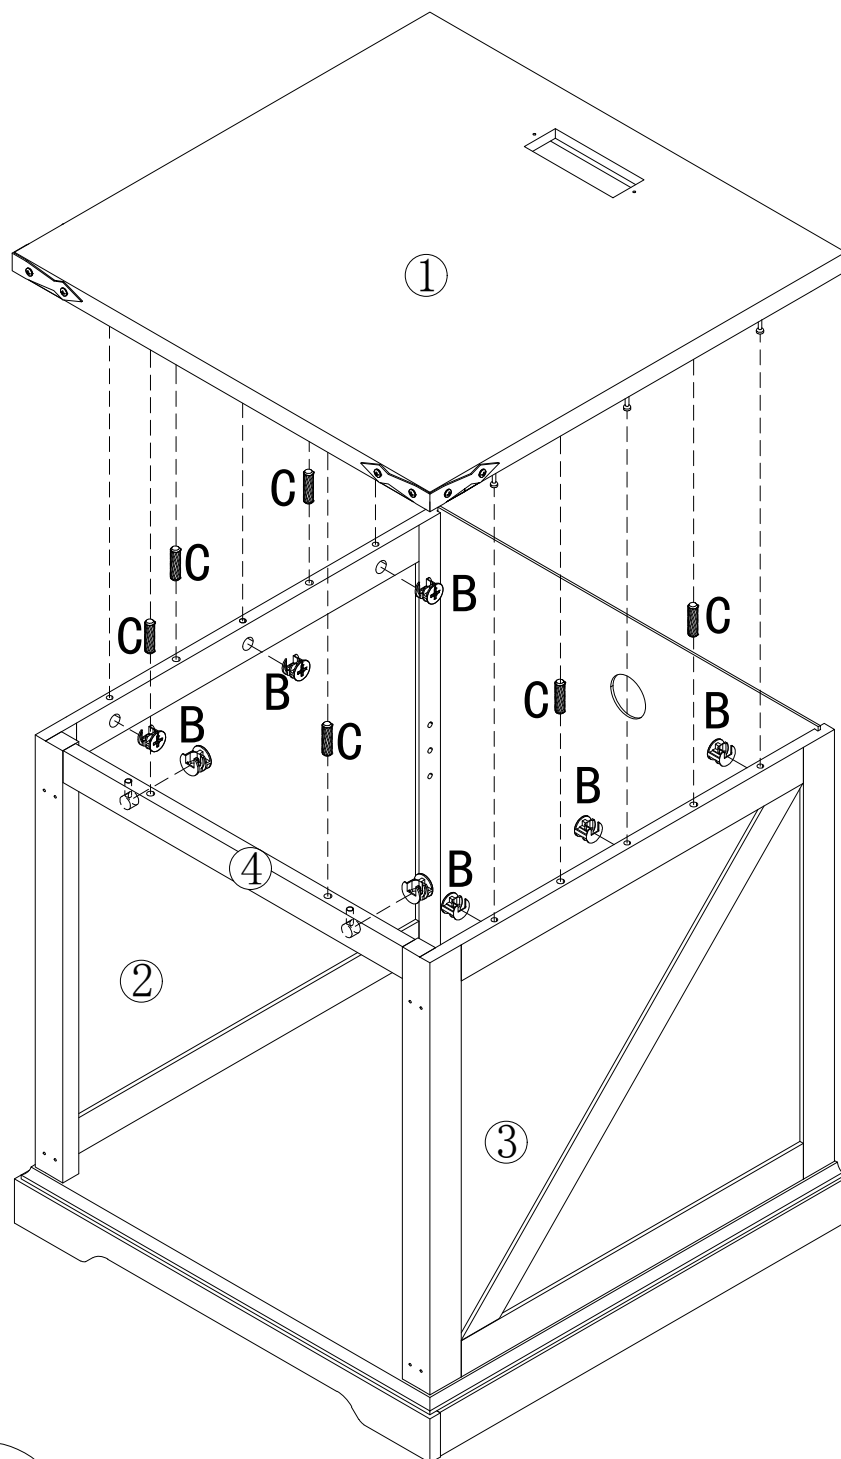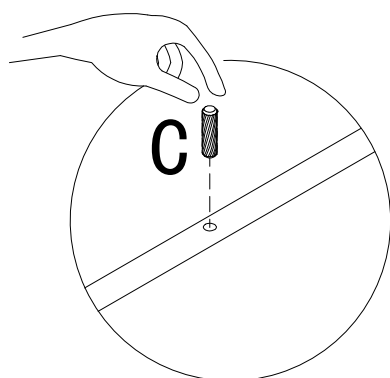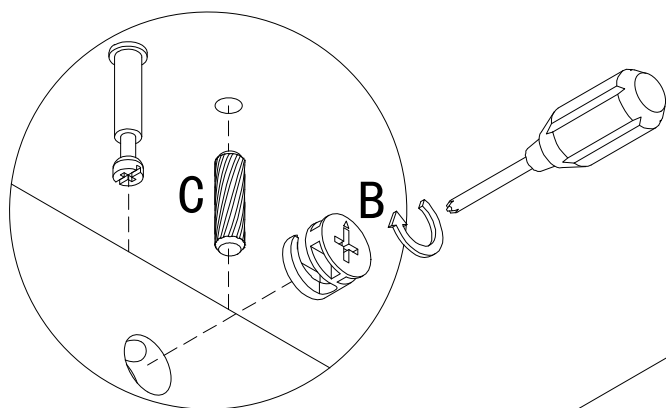

Step 11

E	F	G
		
X4	X6	X1

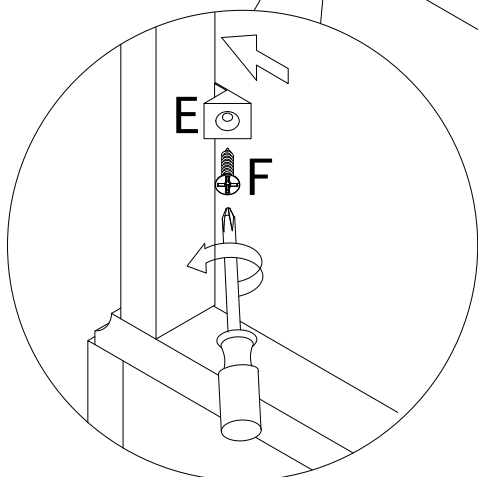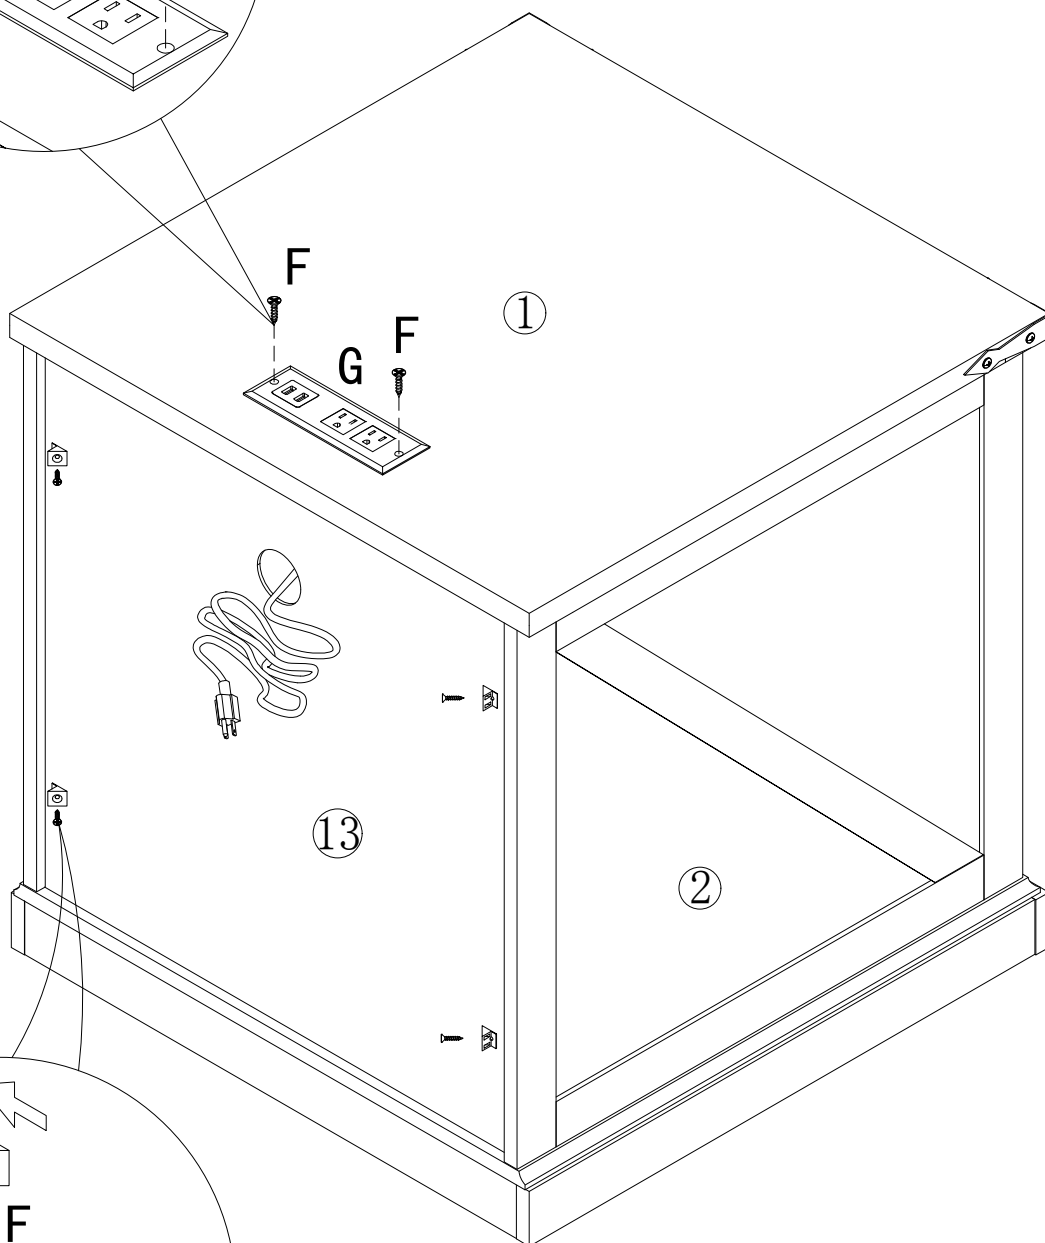
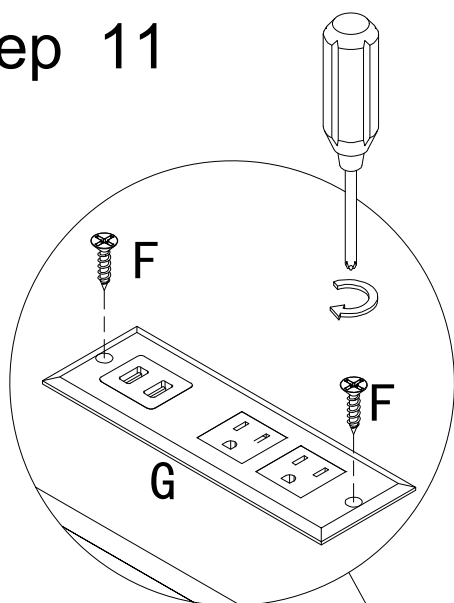


Step 12

J



X4

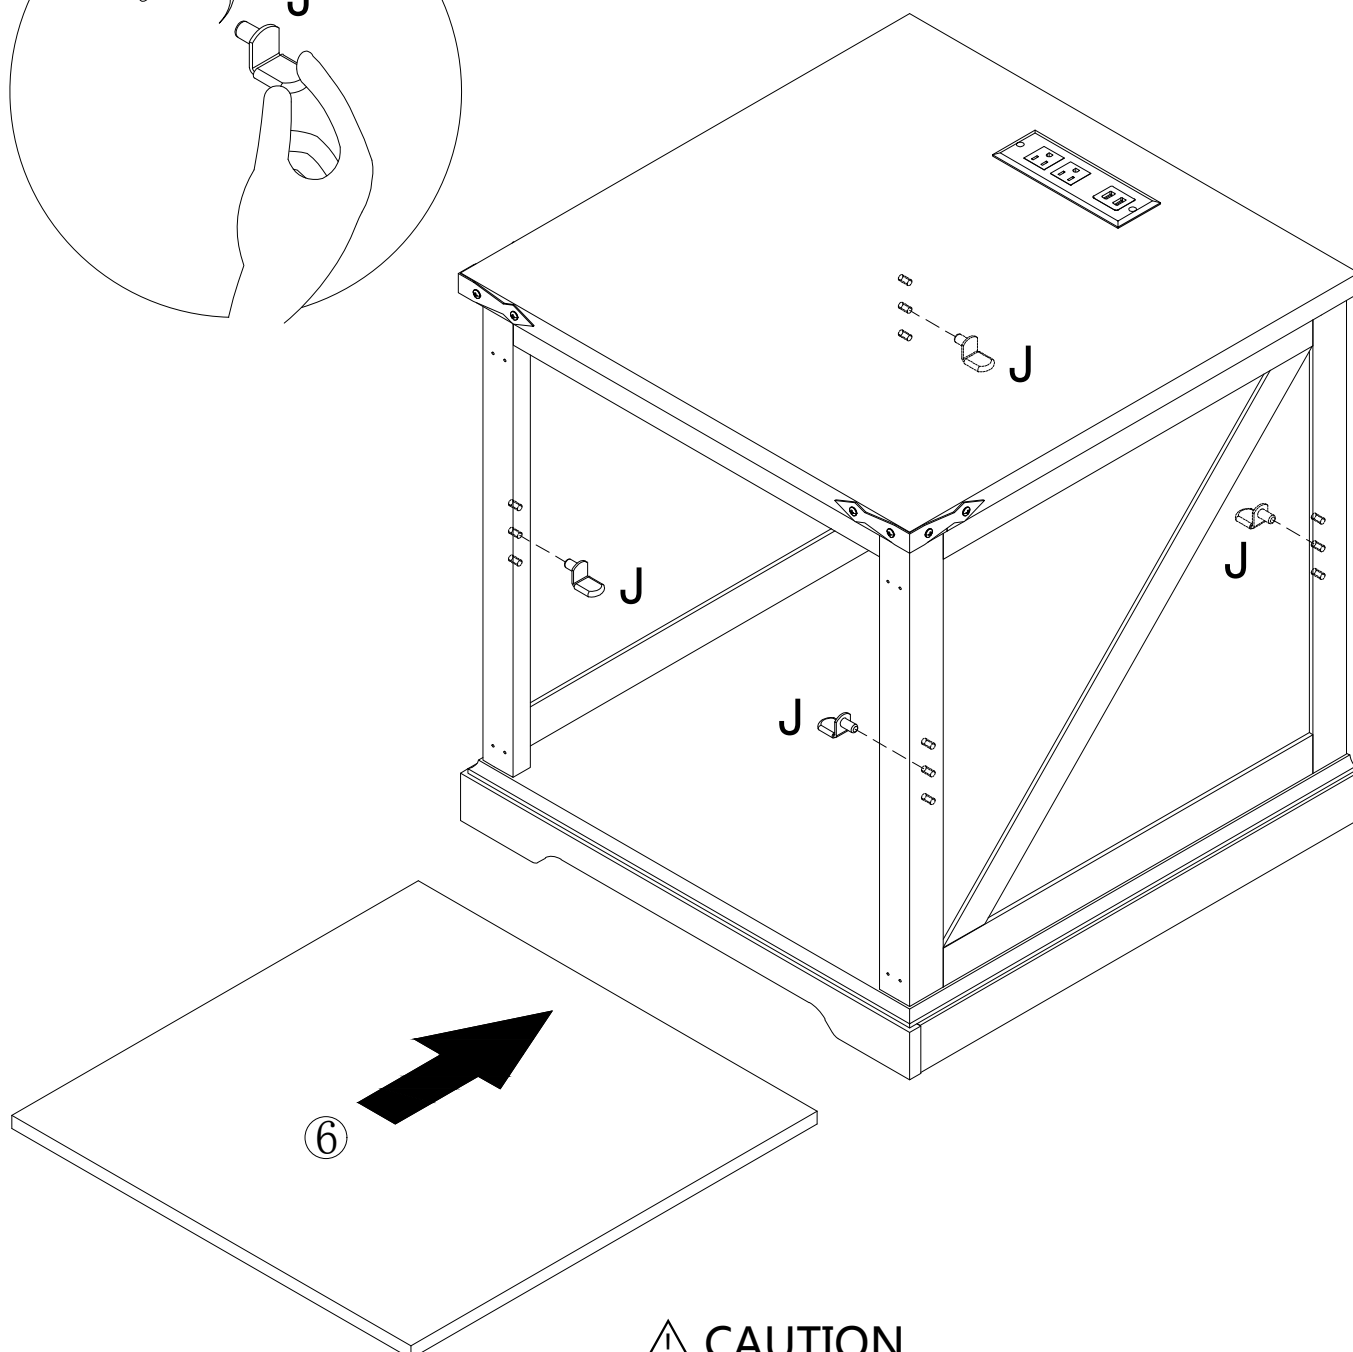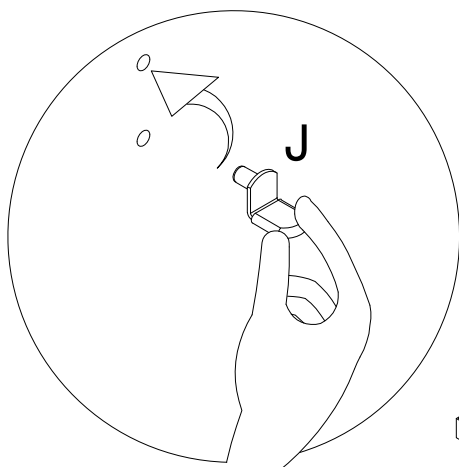


⚠ CAUTION


Note: the 6# plate needs to be inserted diagonally


Step 13

H	I
	
X4	X12

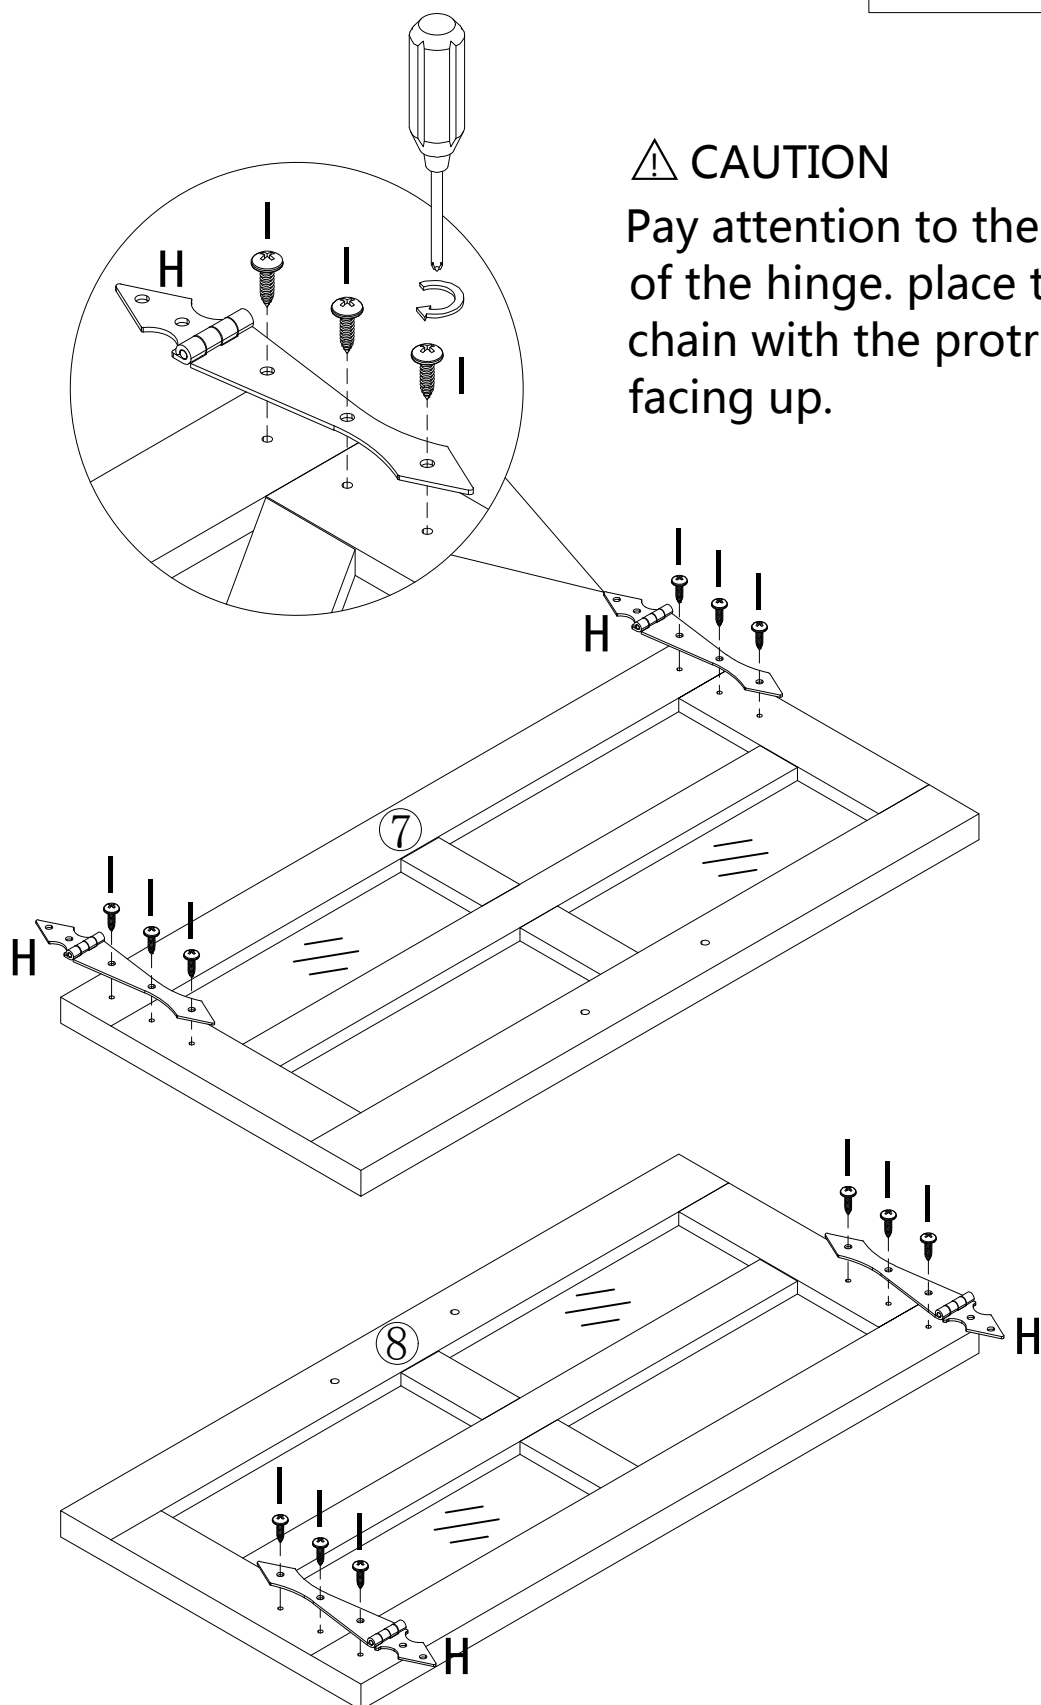

Step 14

P	Q
	
X2	X4


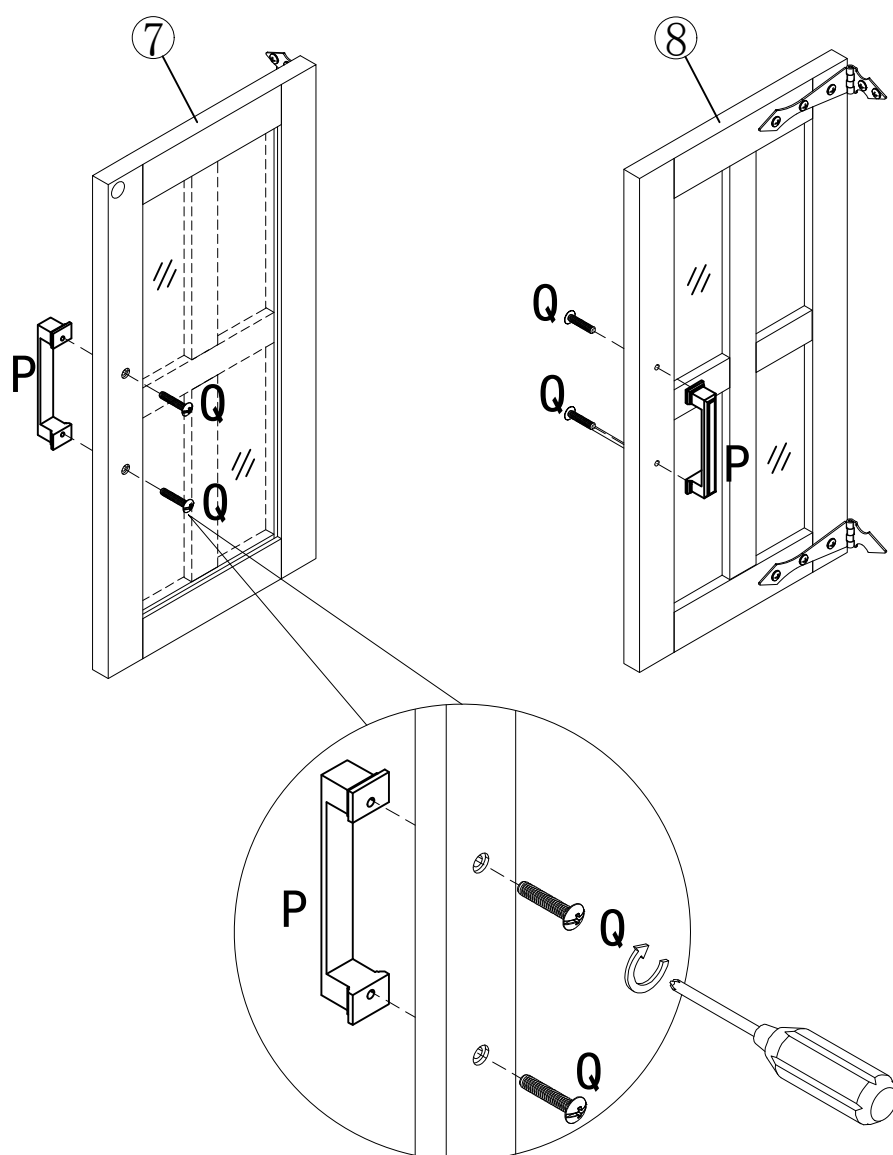


Step 15

I



X8

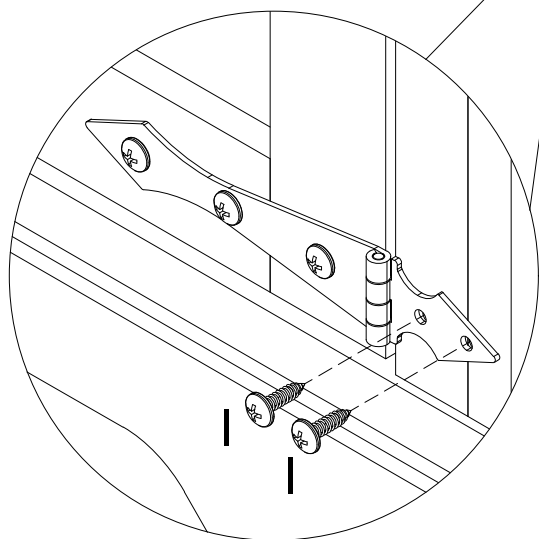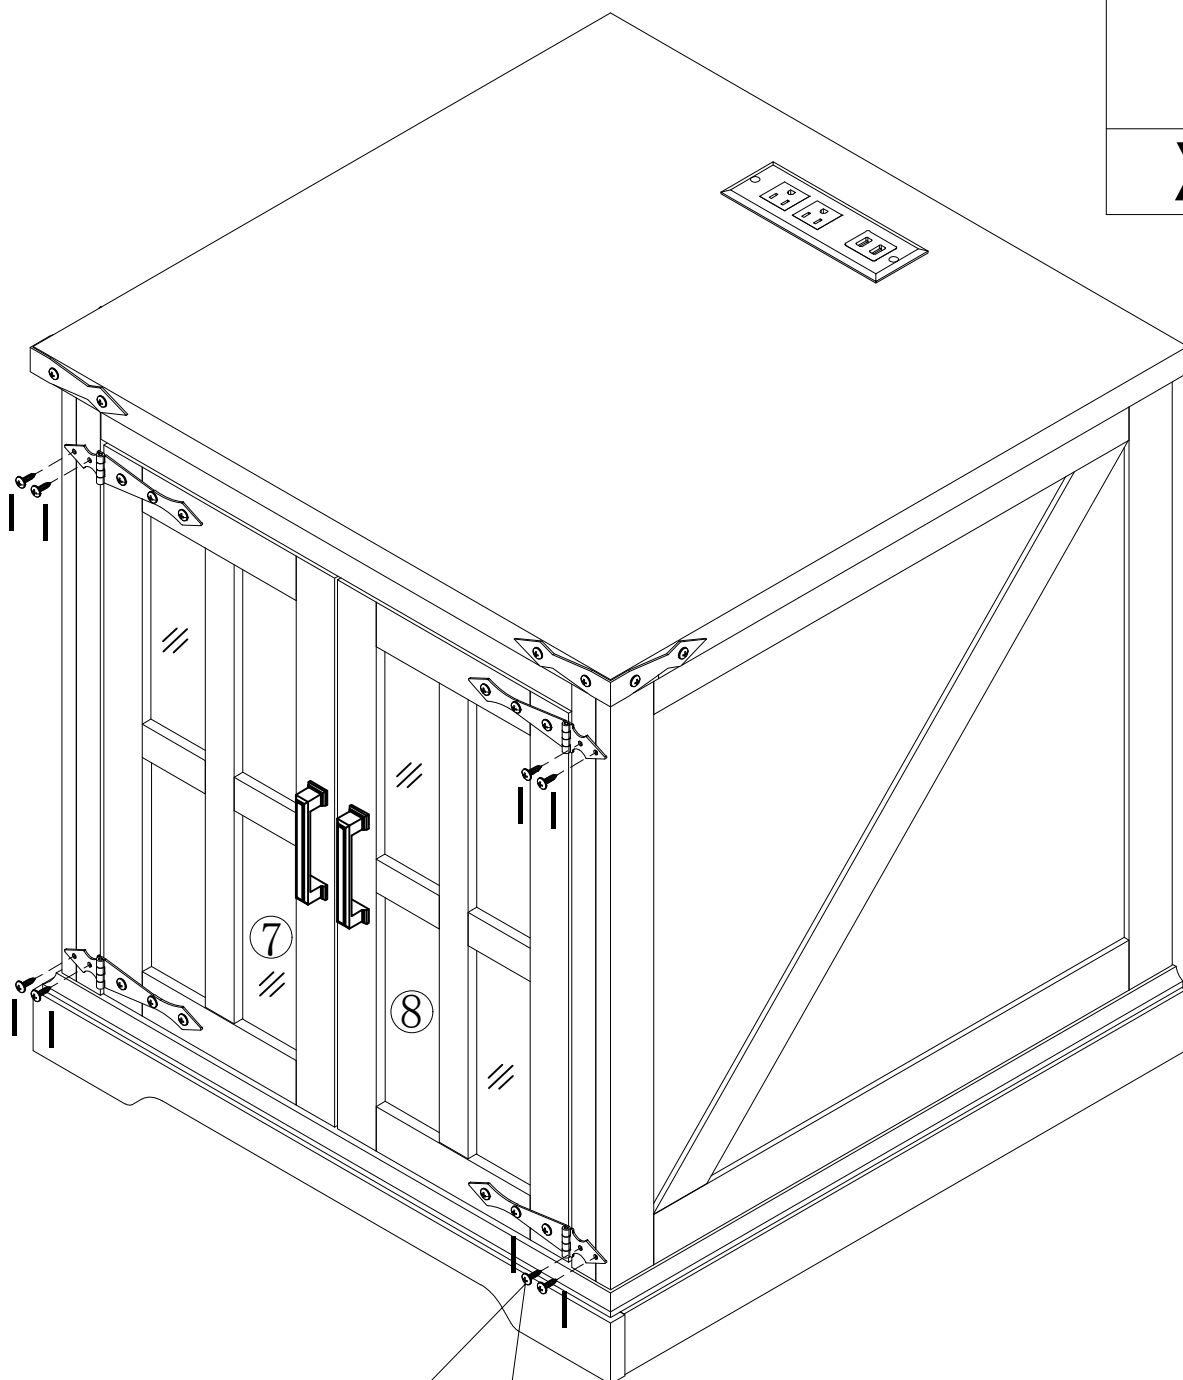

⚠ CAUTION

Note: Door #7 need to be installed on the left side, Door #8 need to be installed on the right side
The suction iron piece is located above the door.

Step 16

