




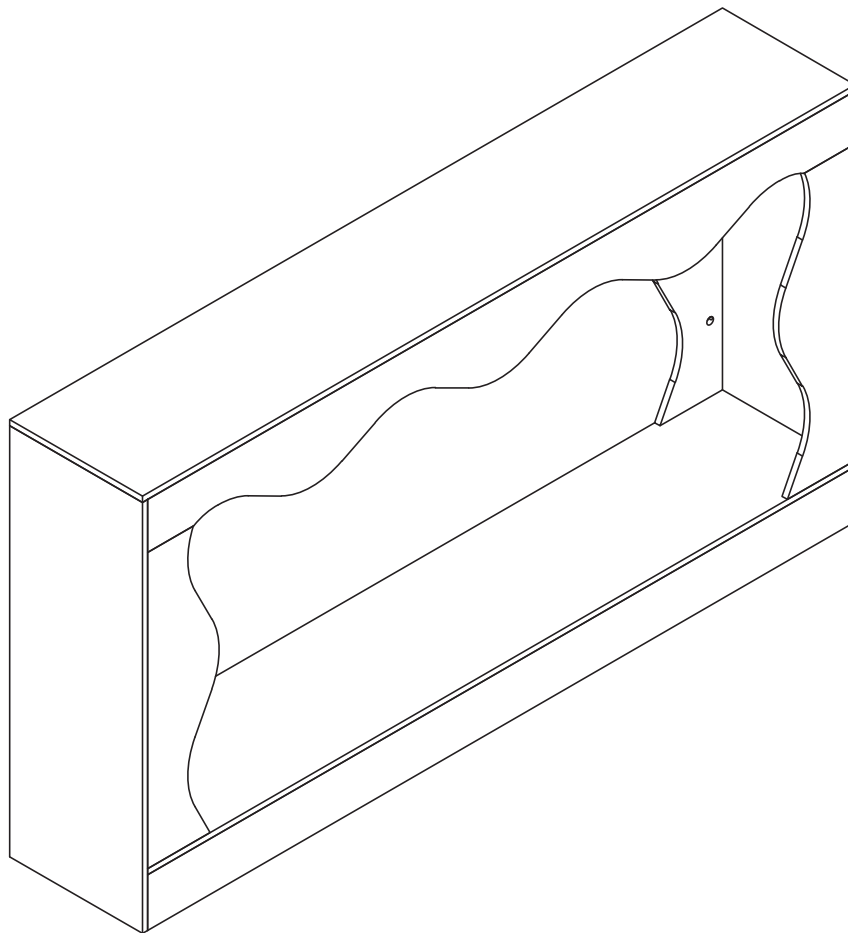


Please note: Items cannot be returned once assembled.

Installation & Assembly




IT IS RECOMMENDED
TO USE POWER TOOLS

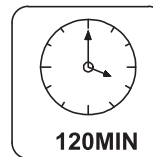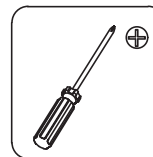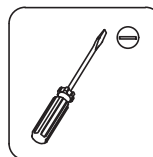


120MIN




EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

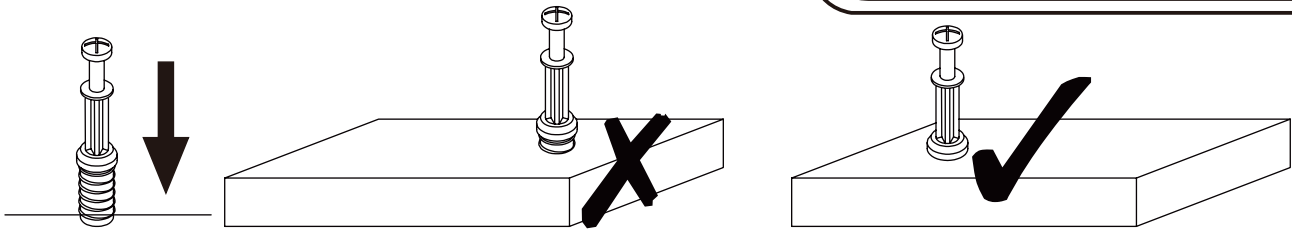


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

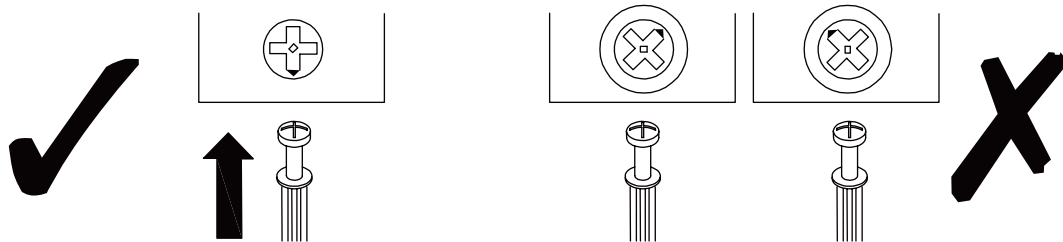










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

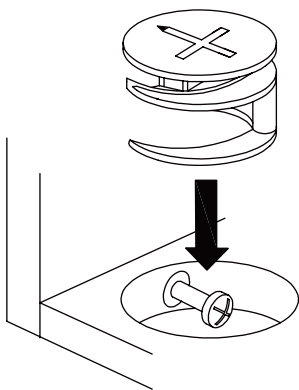


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.






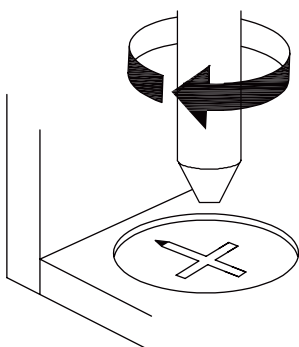



EN_Turn cam lock clockwise to tighten.

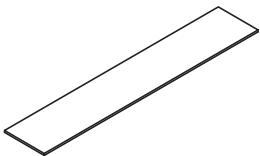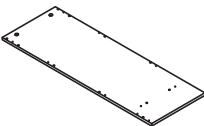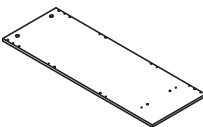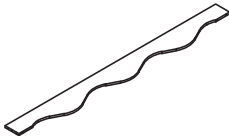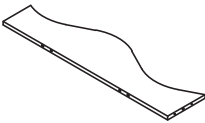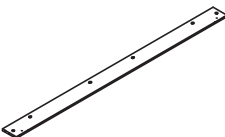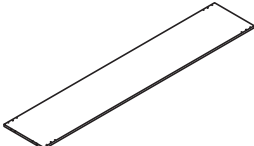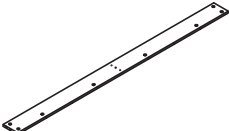NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x2	
6		x2	
7		x1	
8		x1	
9		x1	
10		x1	

[illegible]

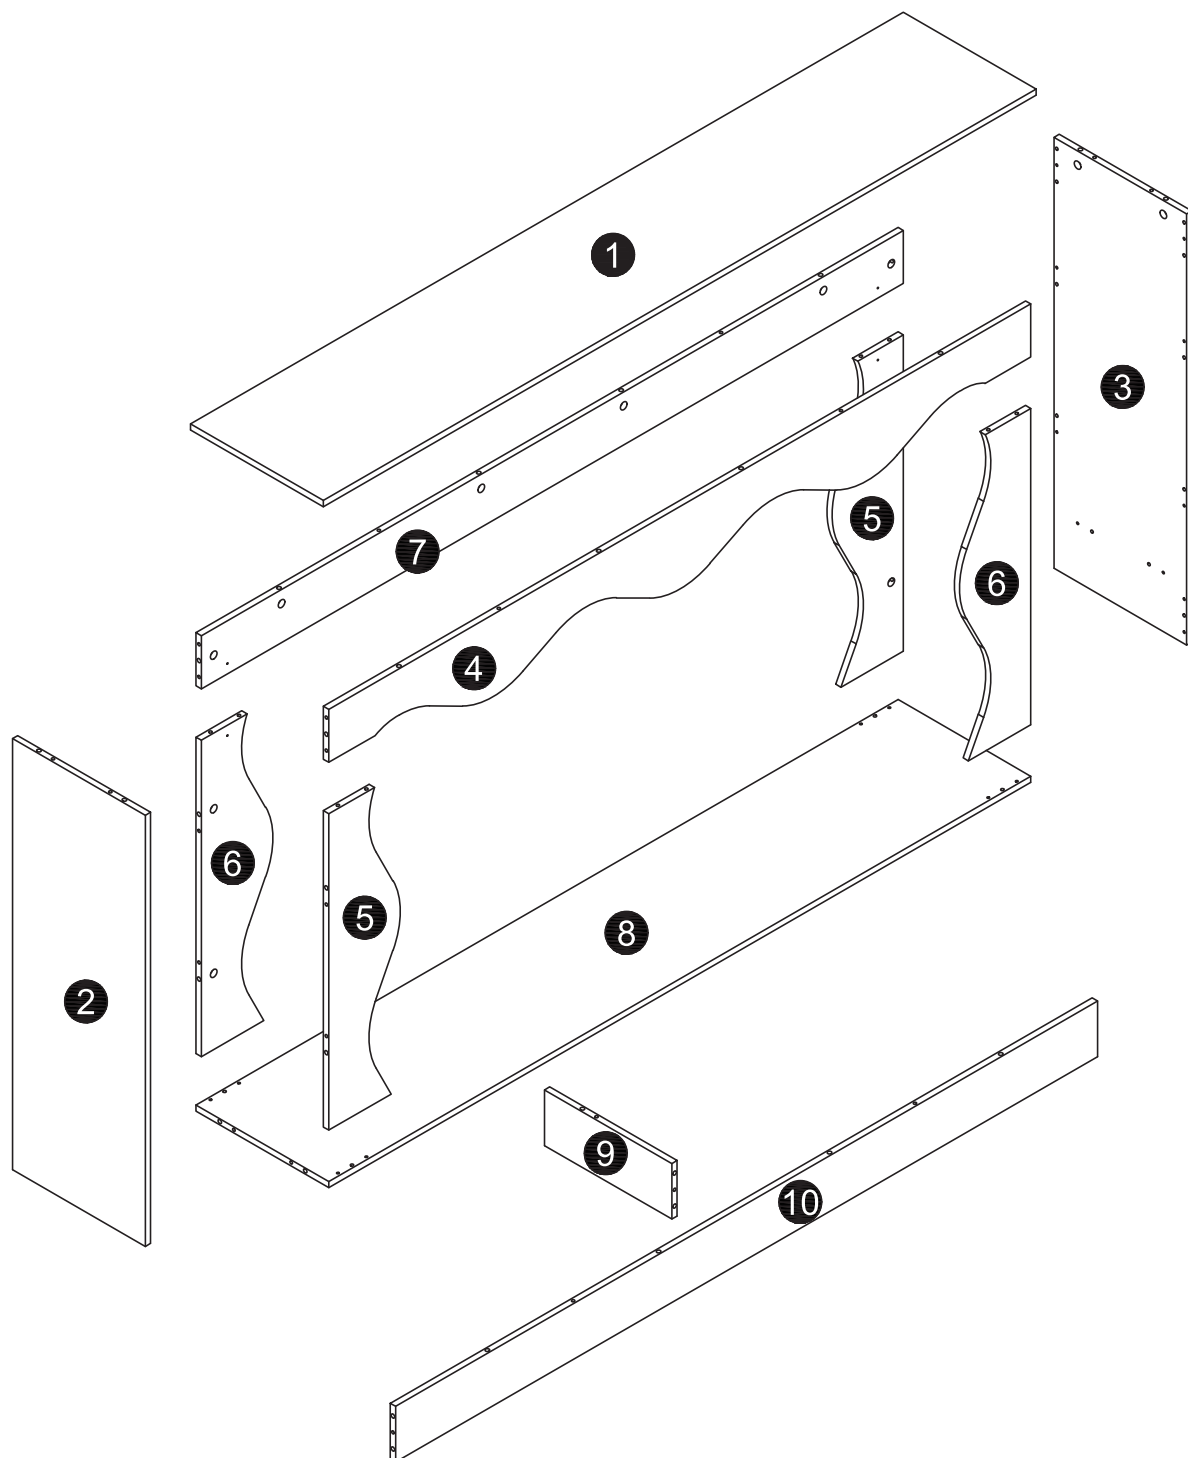

 A x39 Ø6x35mm +2(spare)	 B x39 Ø15x10mm +2(spare)	 C x46 Ø6x30mm +4(spare)	 D x10 Ø4x35mm +1(spare)	 E x8 Ø3.5x11mm +1(spare)	 F x4
 G-1  G-2 Ø4x14mm	 H x2 Ø6x30mm				

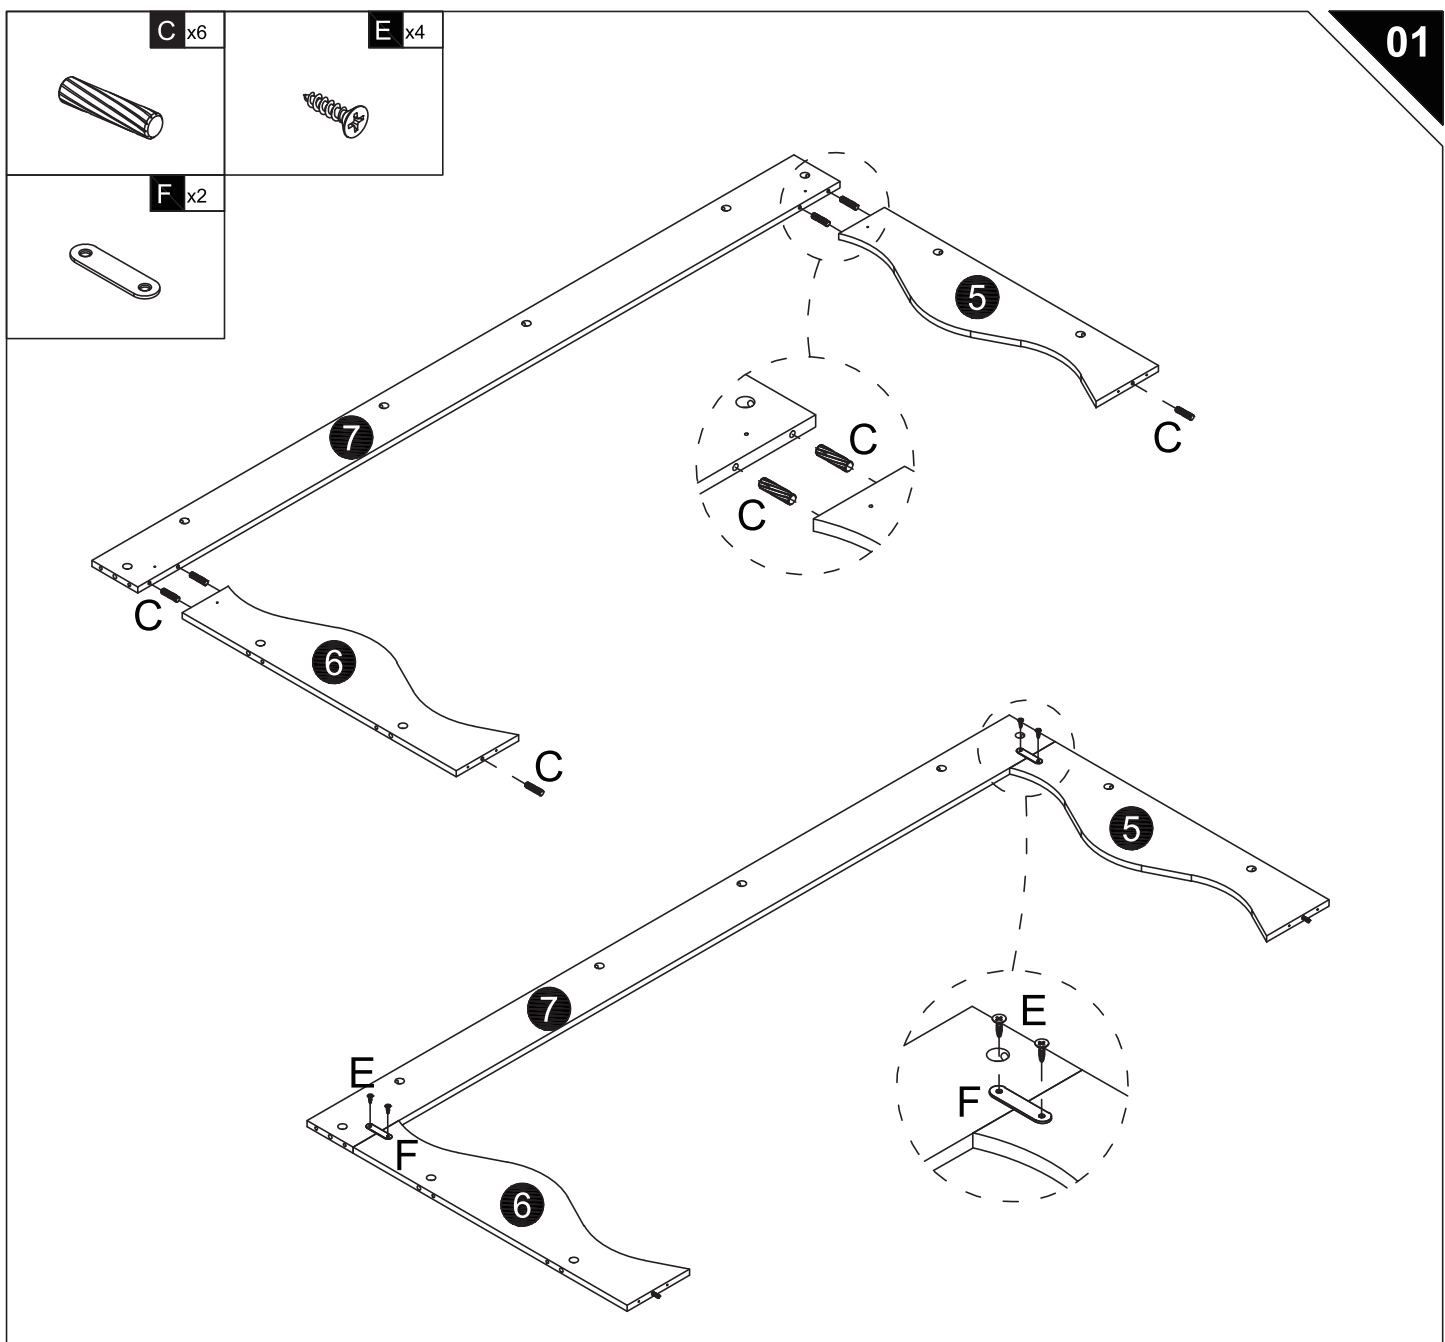


C x6





E x4



F x2

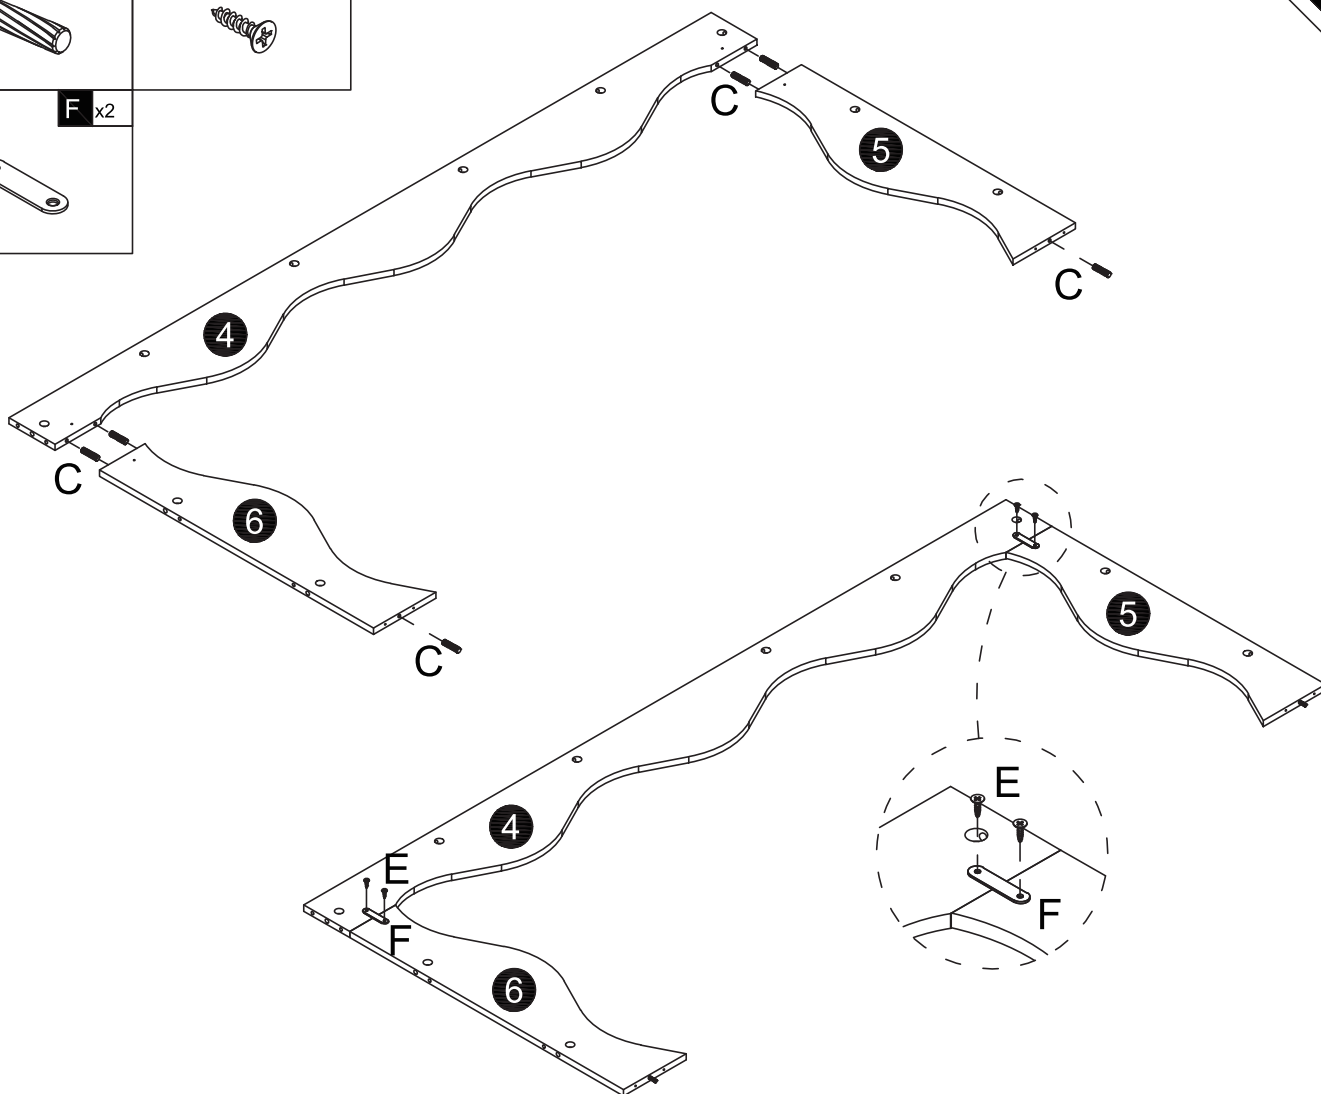


A x7

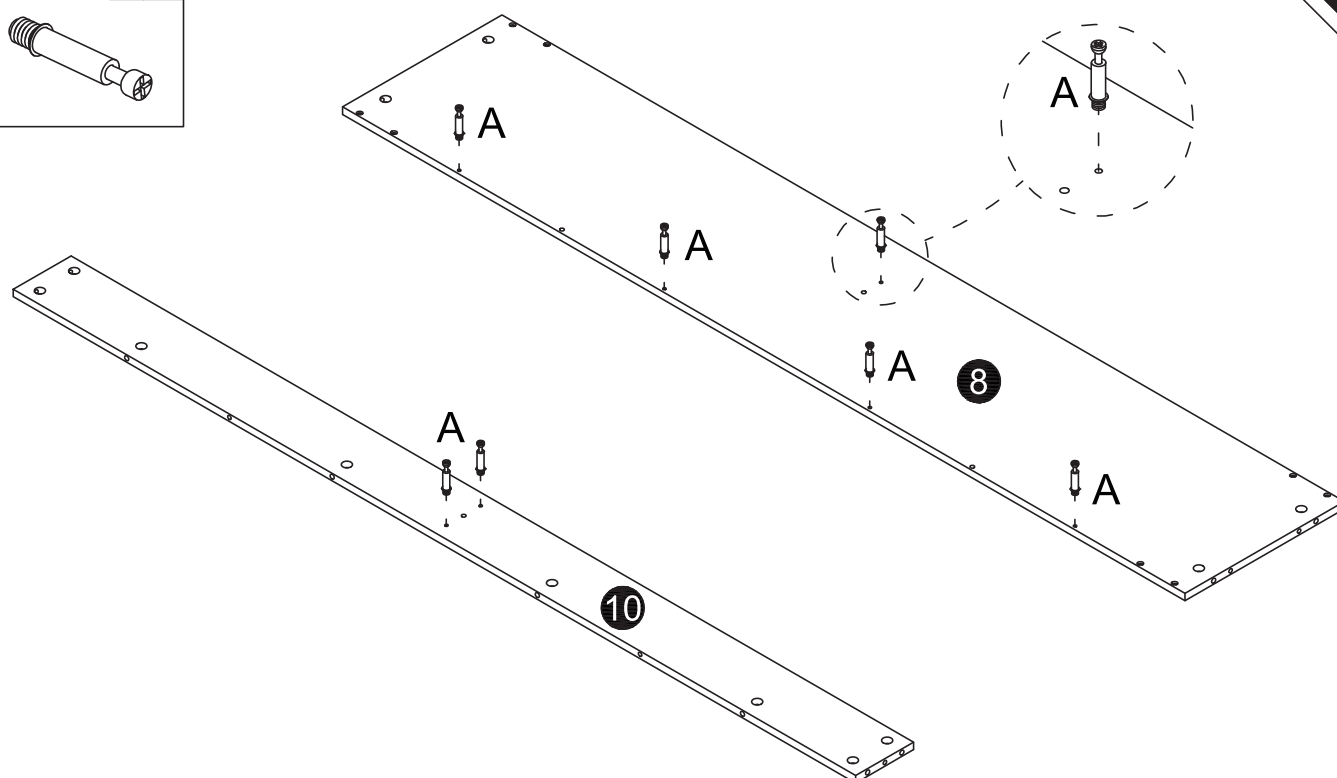



B x2





C x4

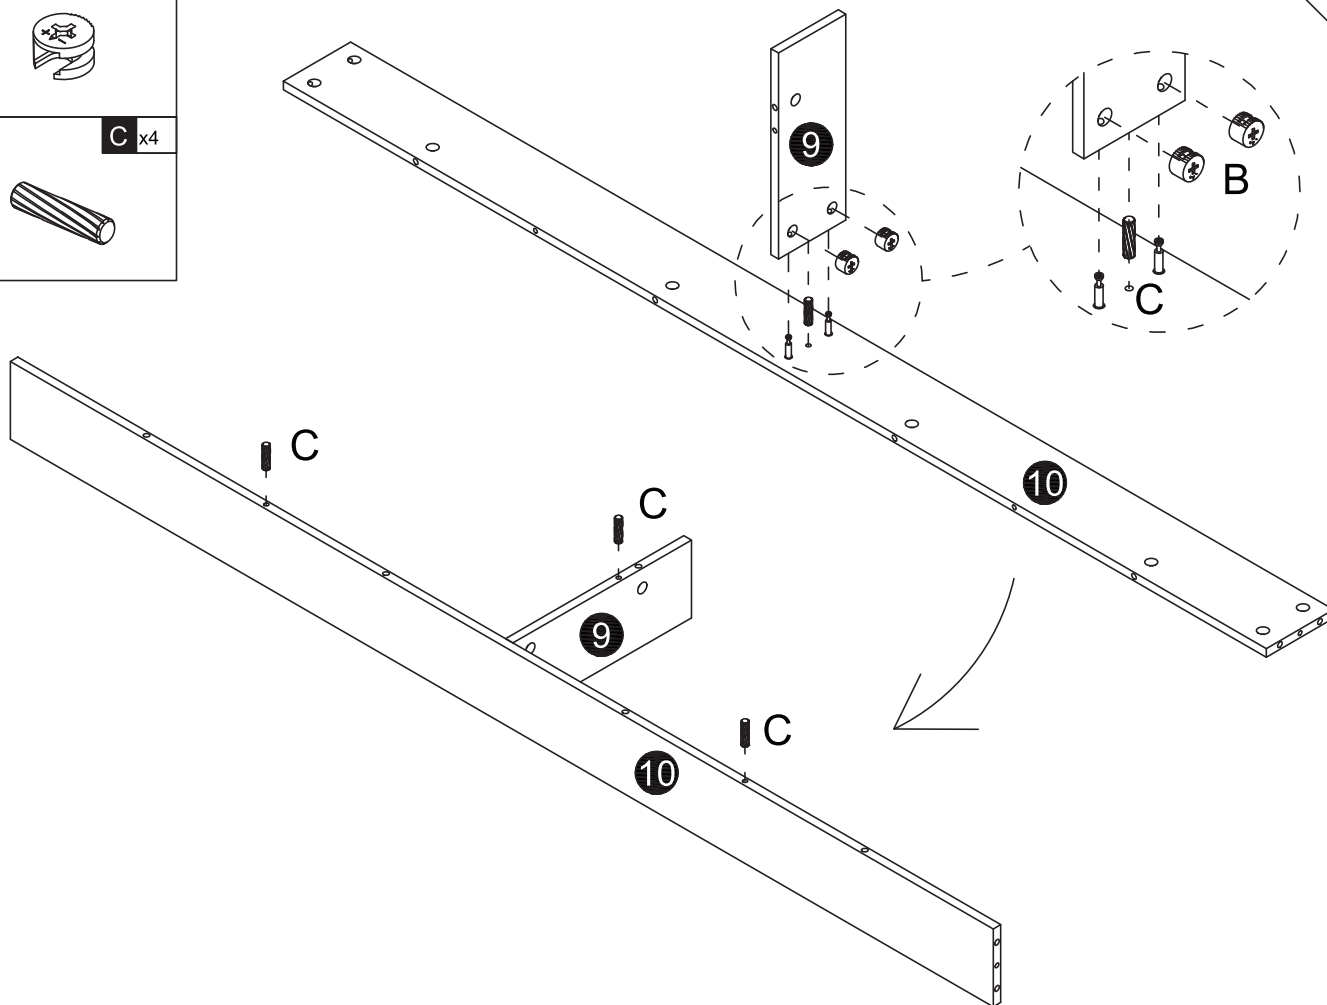



A x20

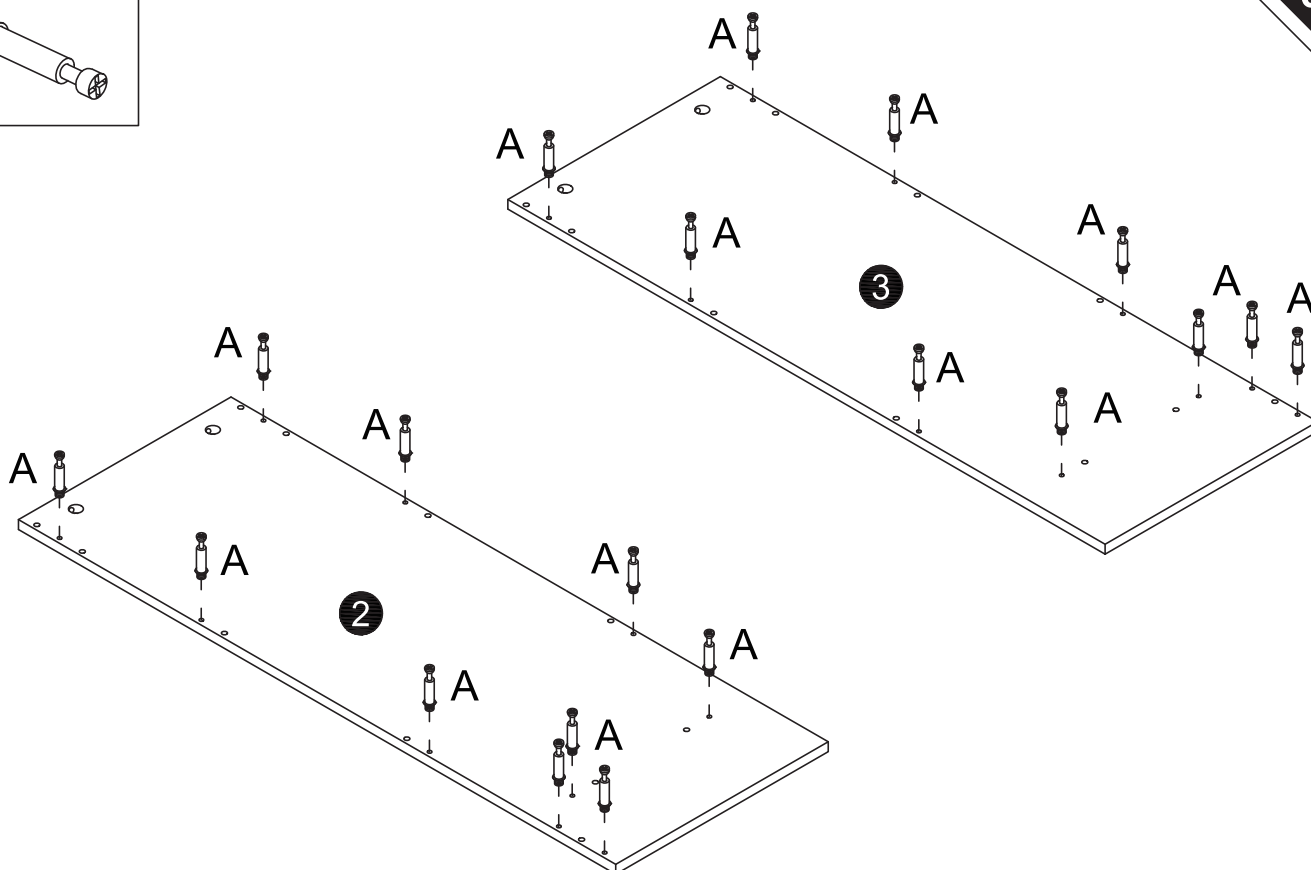

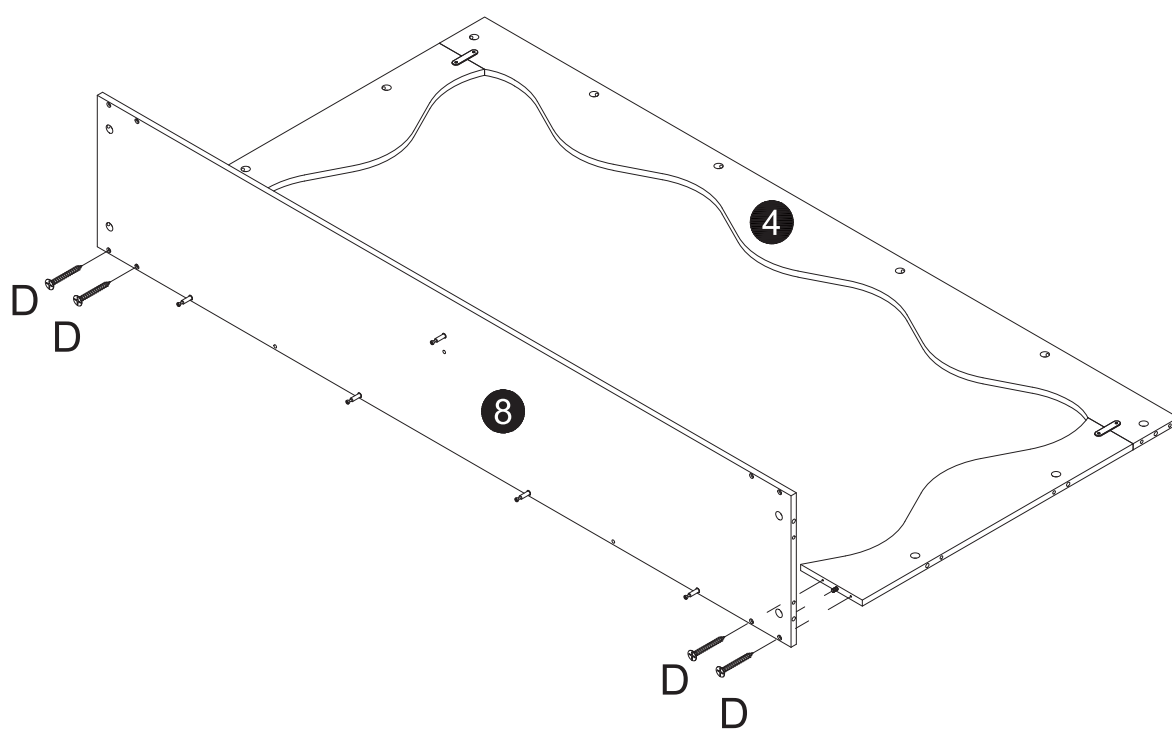

D x4

07

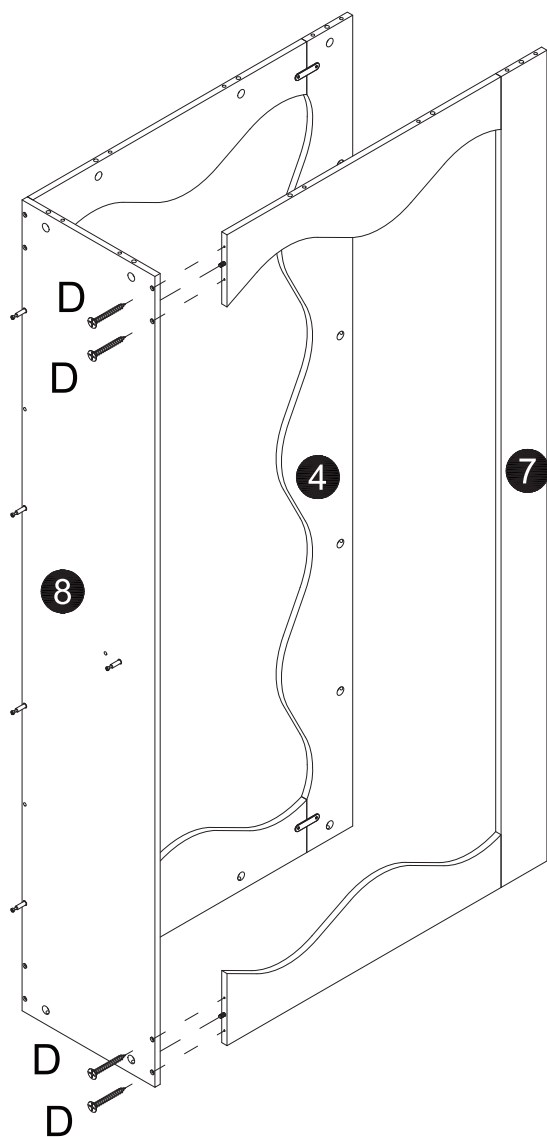


handle with care!



Need Two or More
People To Complete


B x5

08

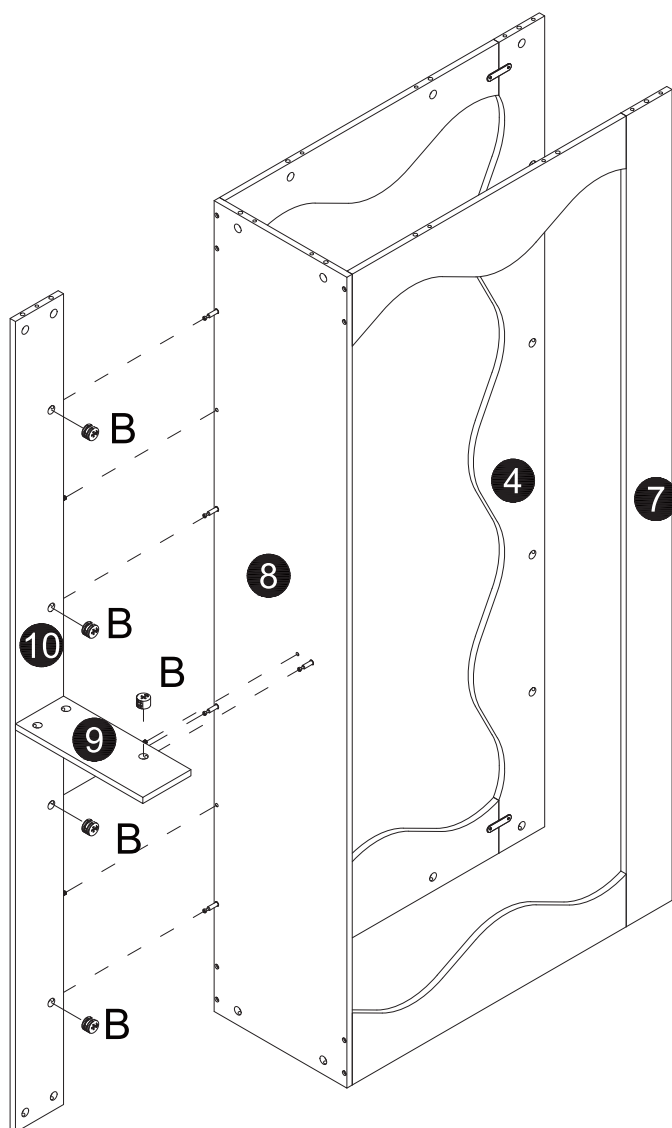


C x11

09

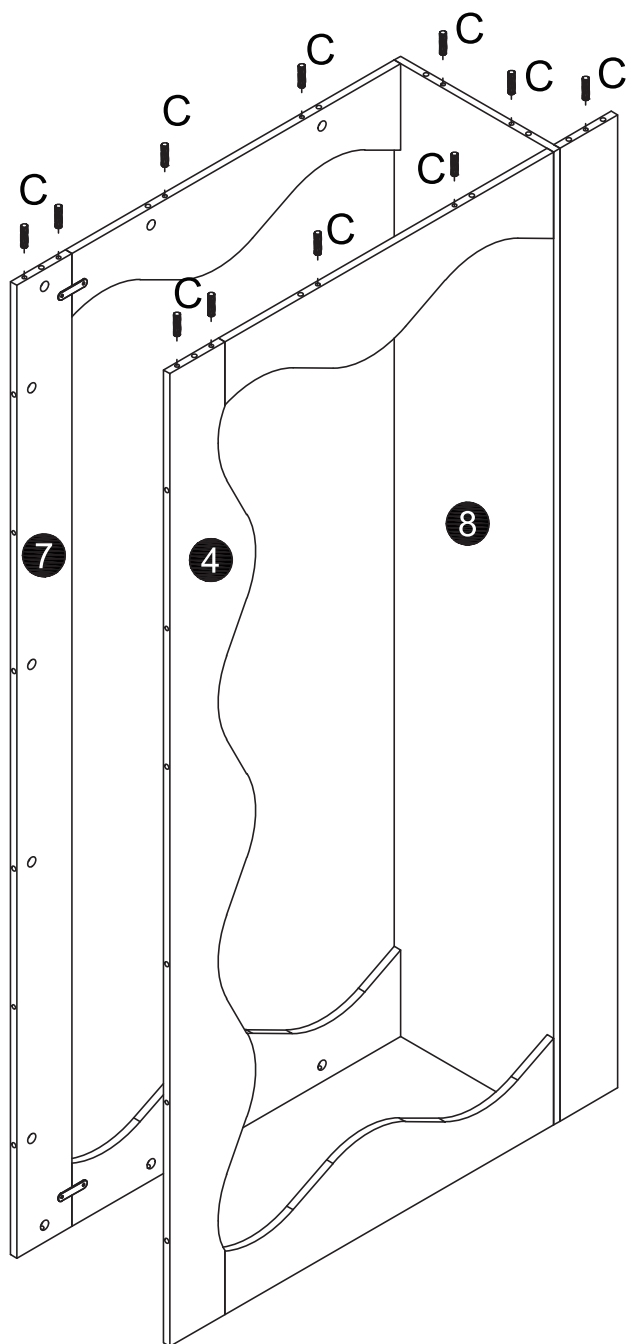

B x10



10

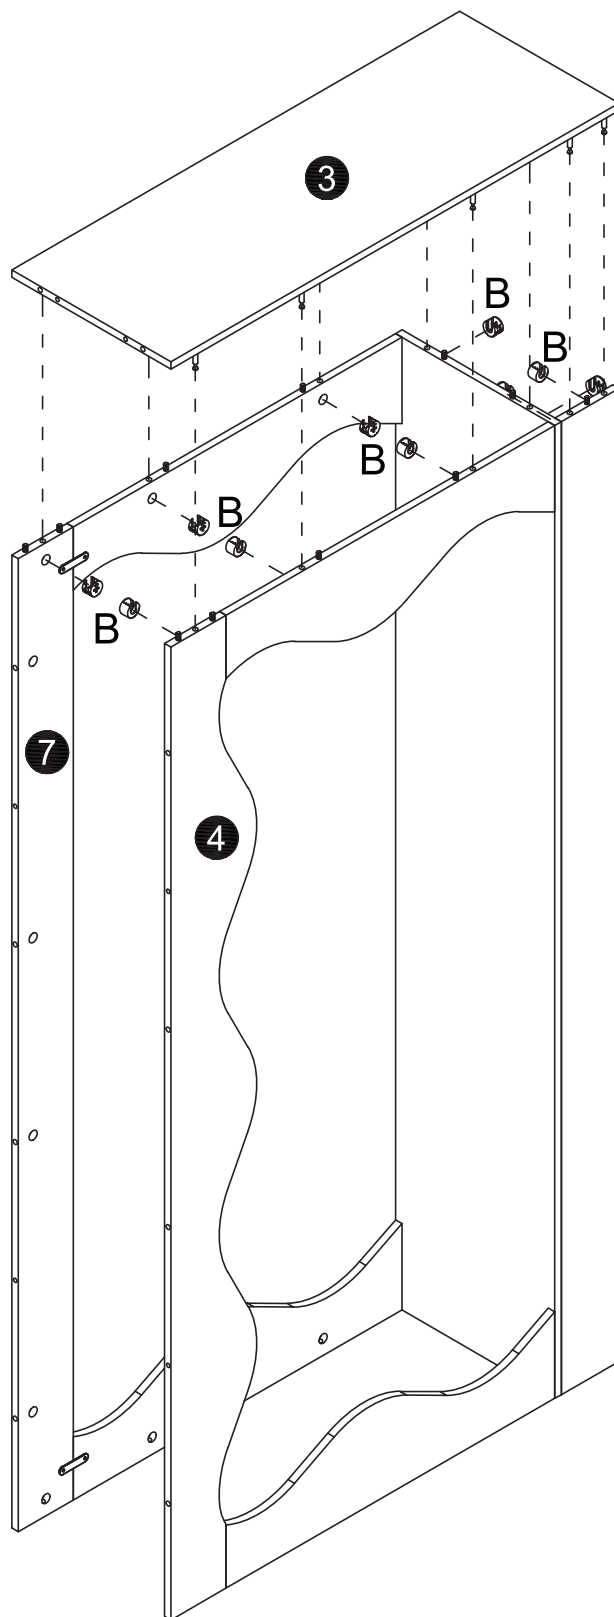

B x10



C x11

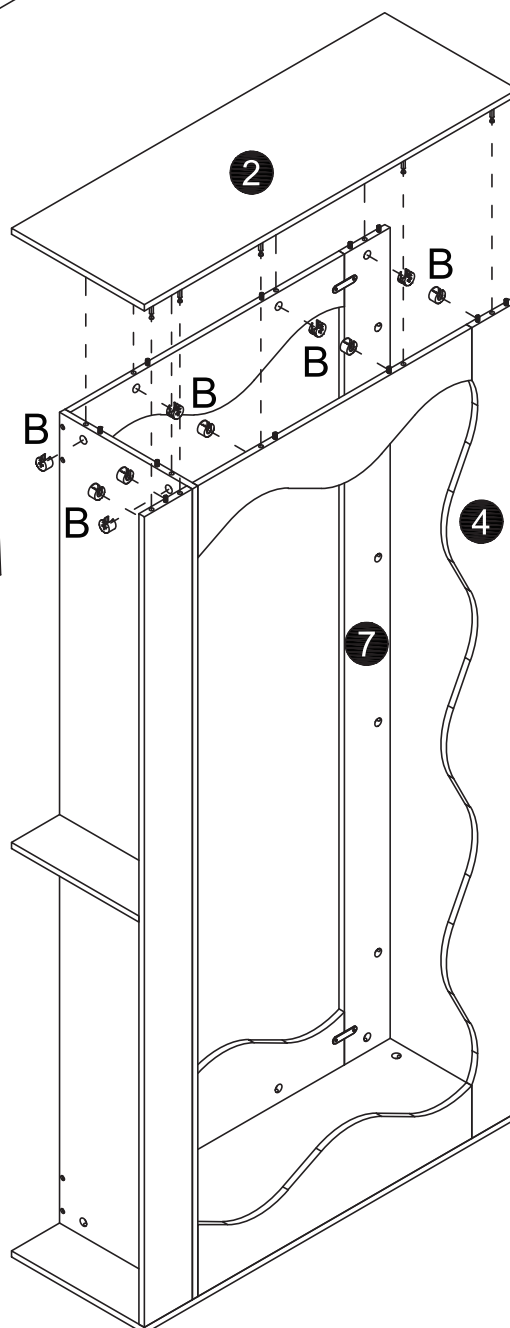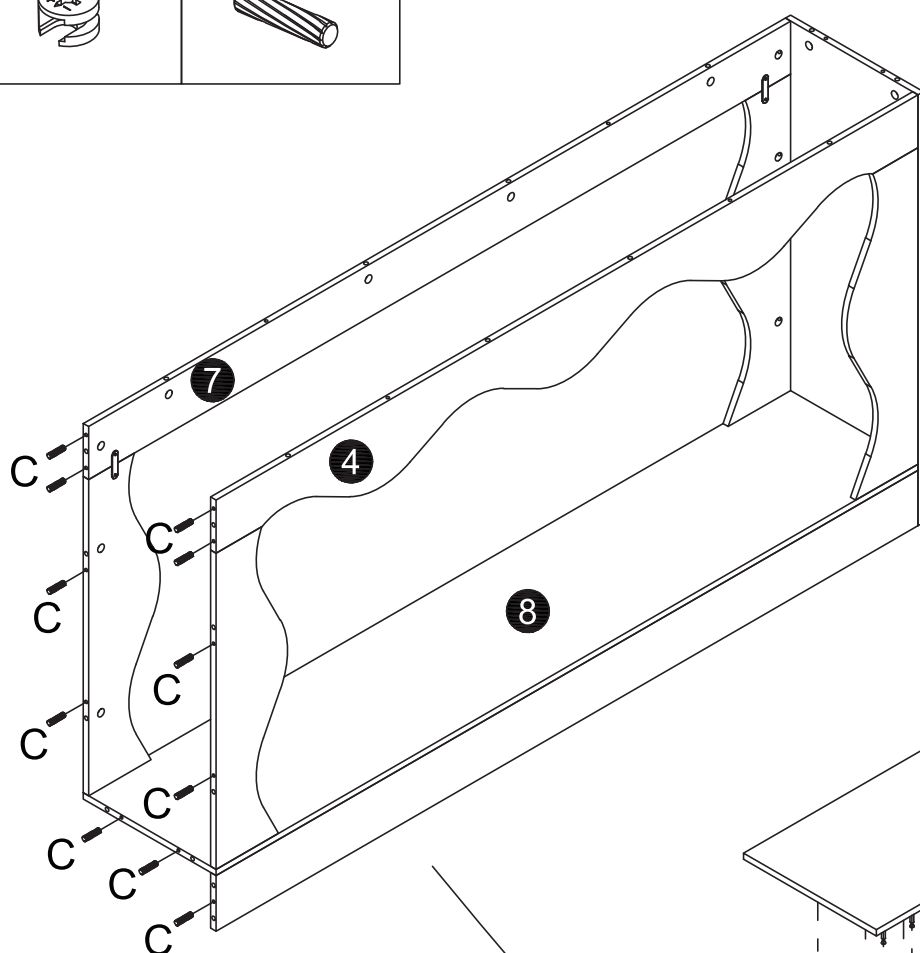



**Need Two or More
People To Complete**



handle with care!

A x12


12

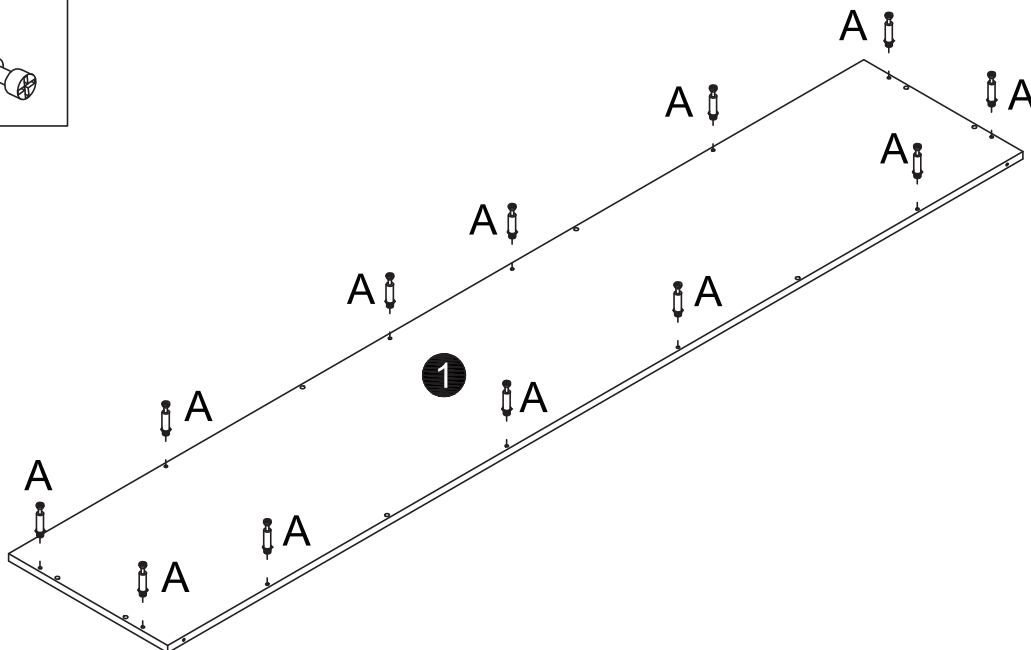

B x12

C x8

13

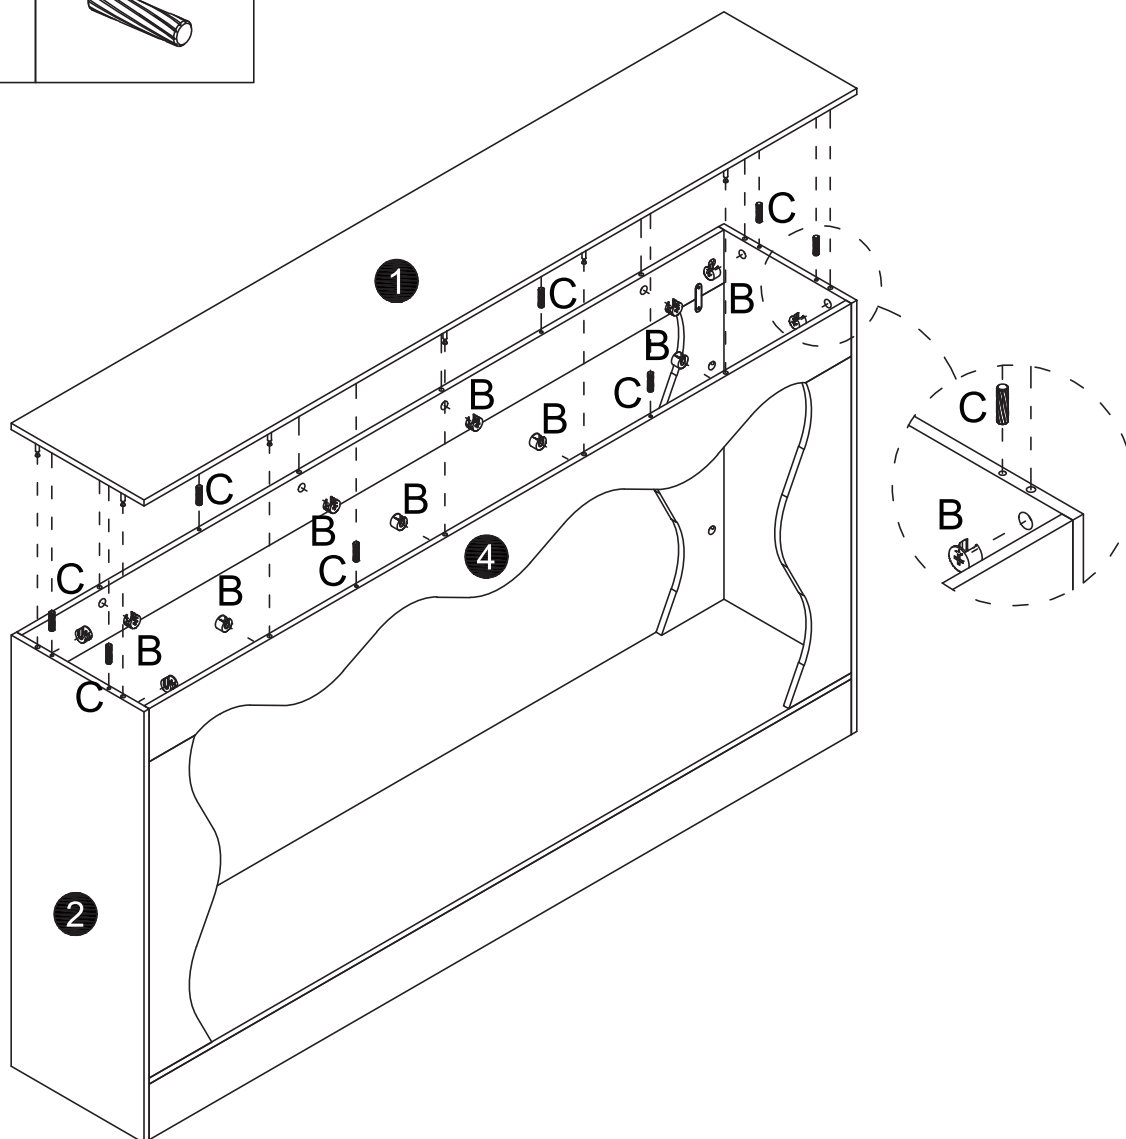


D x2



G x2



H x2




G-1

First fix the anti-rewind screw in the reserved hole of the product.

G-2

(1)x2

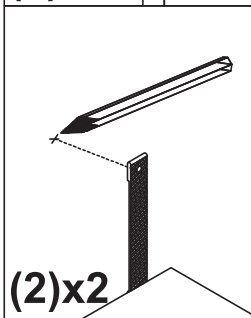

(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL

+
drilling hole
Ø6x30mm



(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

H




(4)x2

Then, put the expansion bolt into the hole

WALL

D

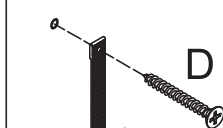

(5)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

D H
G

