

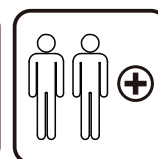
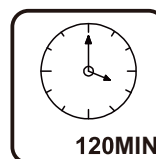
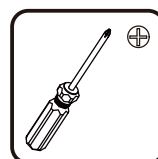
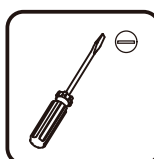


Installation & Assembly


Version:1.0

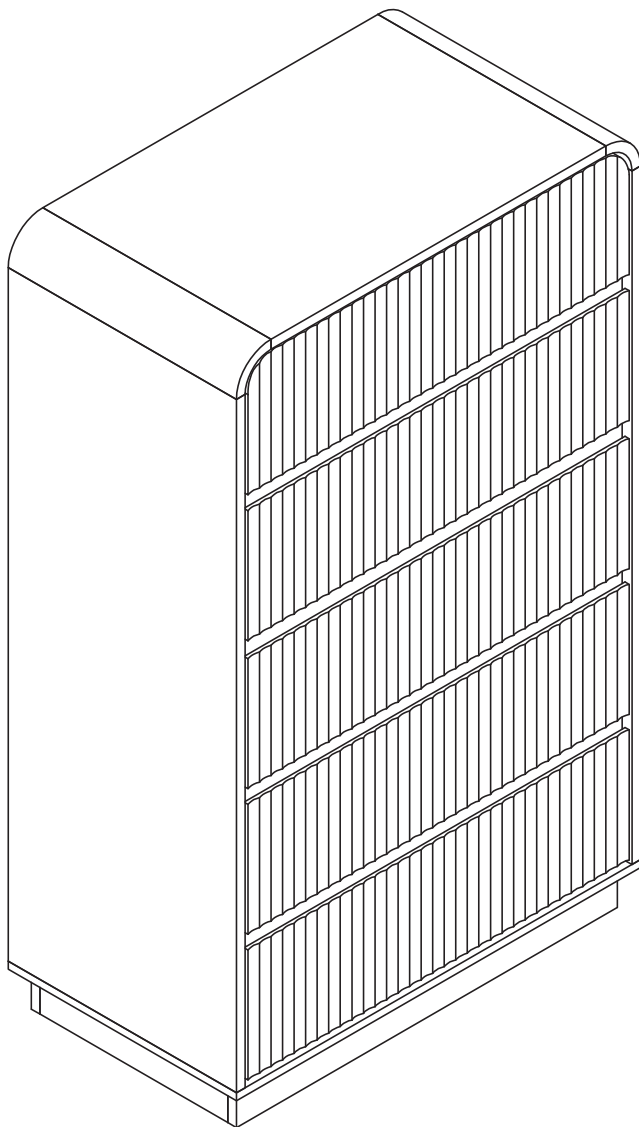


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

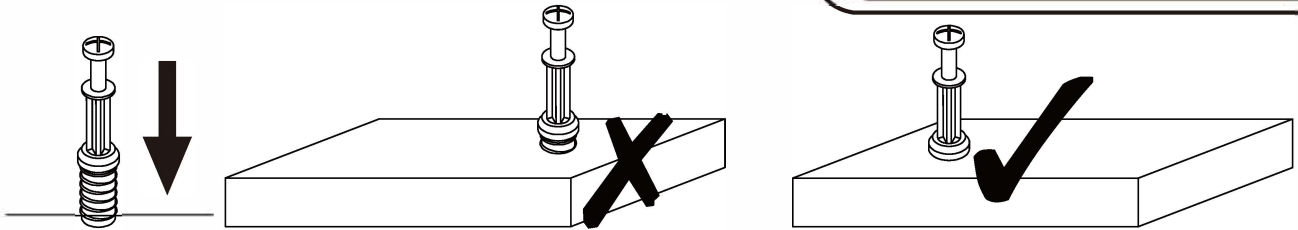


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

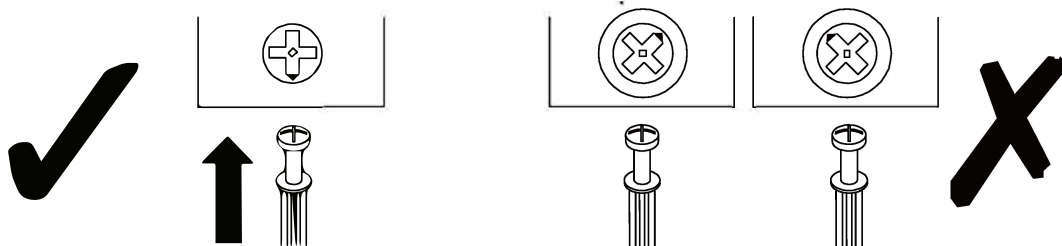

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.











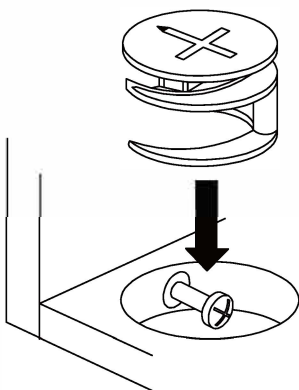











EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.



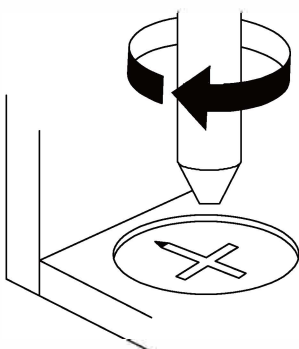




EN_Turn cam lock clockwise to tighten.

PACKING DETAILS

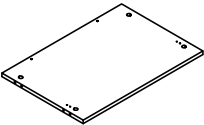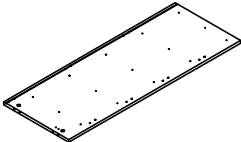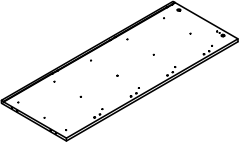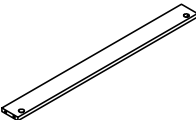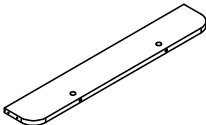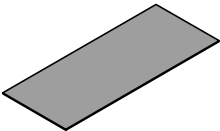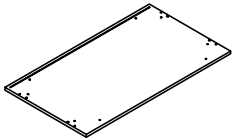NO.	PARTS	QTY	SPARE
①		x1	
②		x2	
③		x1	
④		x1	
⑤		x4	
⑥		x1	
⑦		x1	
⑧		x2	
⑨		x1	
⑩		x2	
⑪		x2	

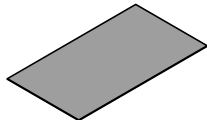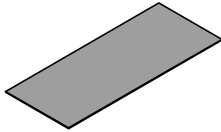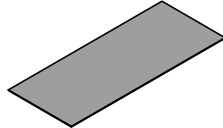
NO.	PARTS	QTY	SPARE
⑫		x5	
⑬		x5	
⑭		x5	
⑮		x5	
⑯		x5	
⑰		x1	
⑱		x4	
⑲		x1	
⑳		x1	
	 Hardware Kit	x1	

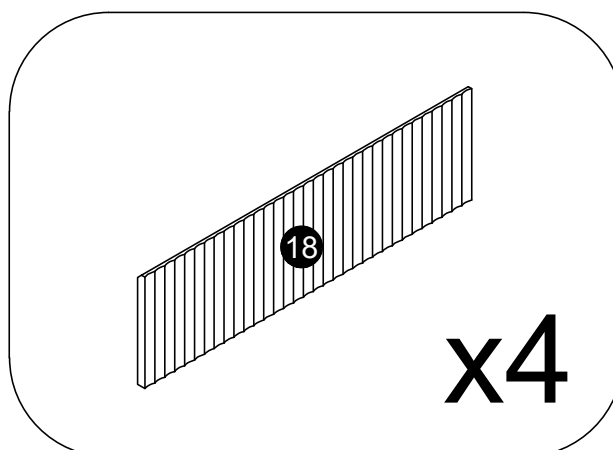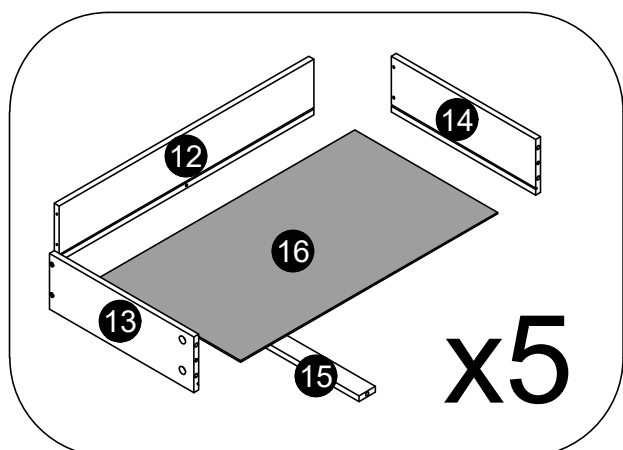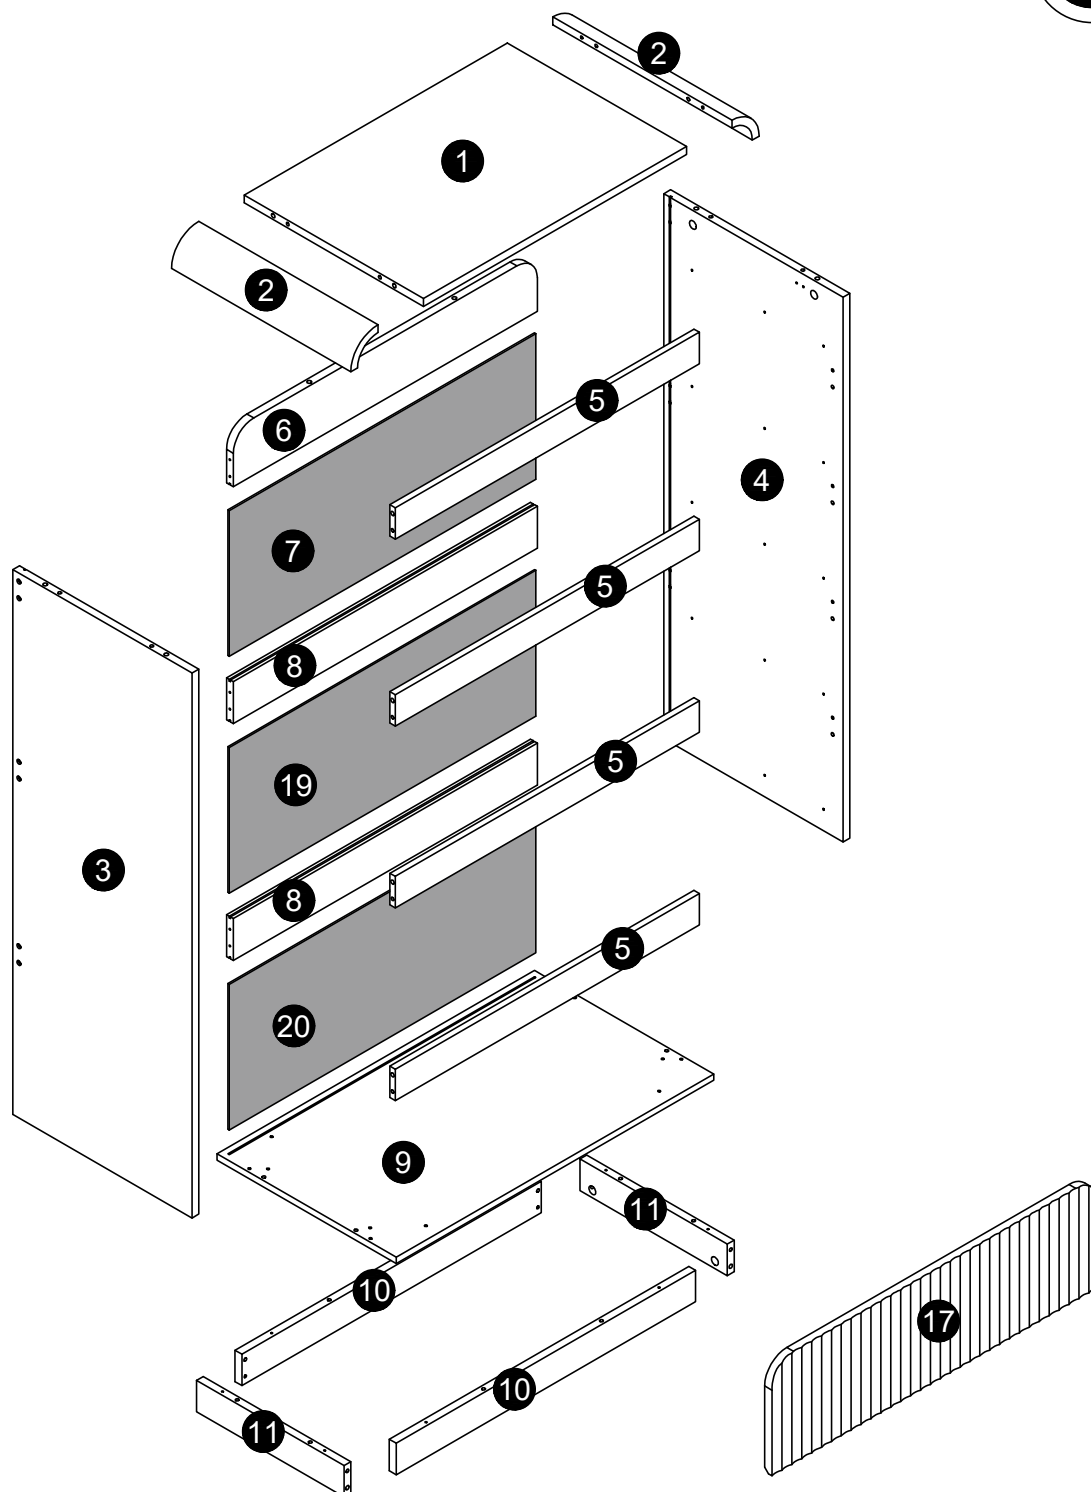

 A x39 Ø6x35mm +3(spare)	 B x47 Ø15x10mm +3(spare)	 C x42 Ø6x30mm +4(spare)	 D x27 Ø4x35mm +2(spare)	 E x60 Ø3.5x12mm +5(spare)	 F x8 Ø6x40mm
 G x16 Ø5x40mm +1(spare)	 H x12 Ø15mm +2(spare)	 I x8 Ø4x30mm	 J x2	 K x8 Ø4x14mm	 L x2 Ø6x30mm
 M-1	 M-2	 N-1	 N-2		
 CL x5 L350mm	 CR x5 L350mm	 DL x5 L350mm	 DR x5 L350mm		

01



D x25

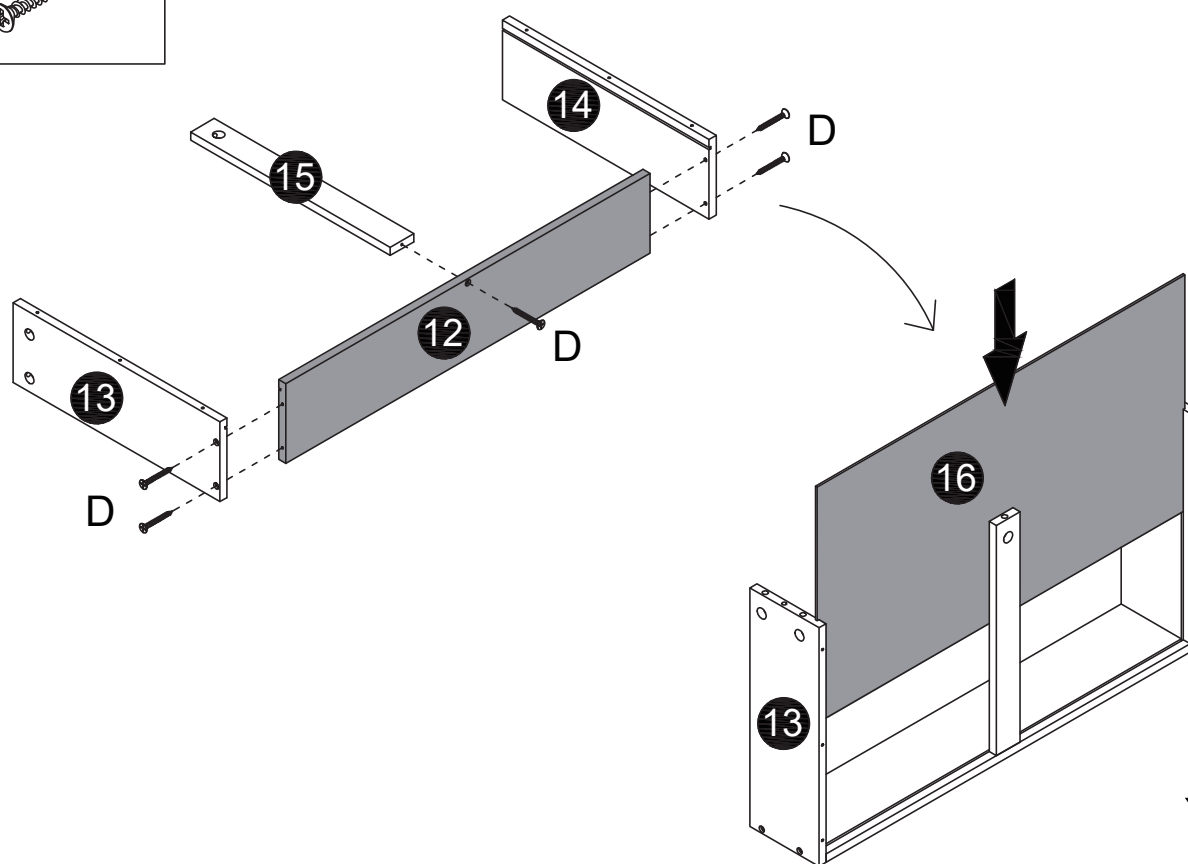

x5

02

A x25

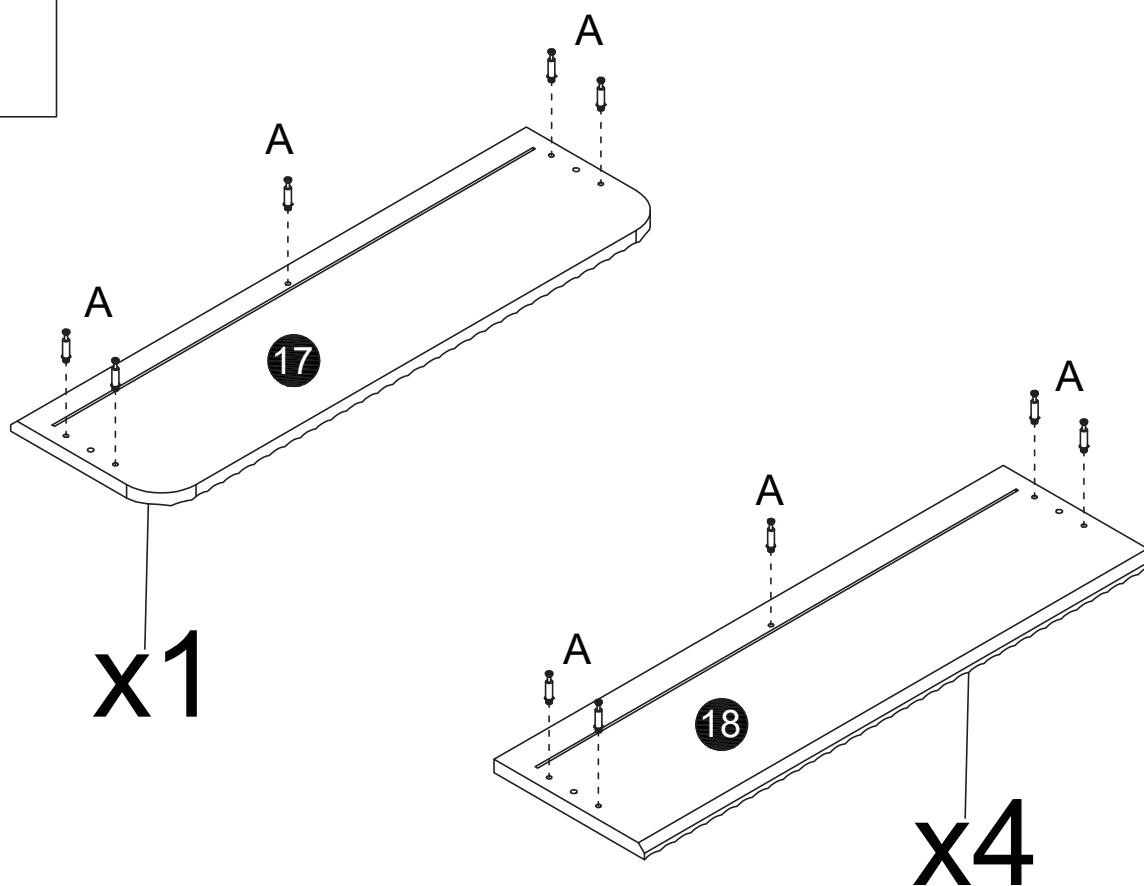

x1

x4



B x25



C x10



03

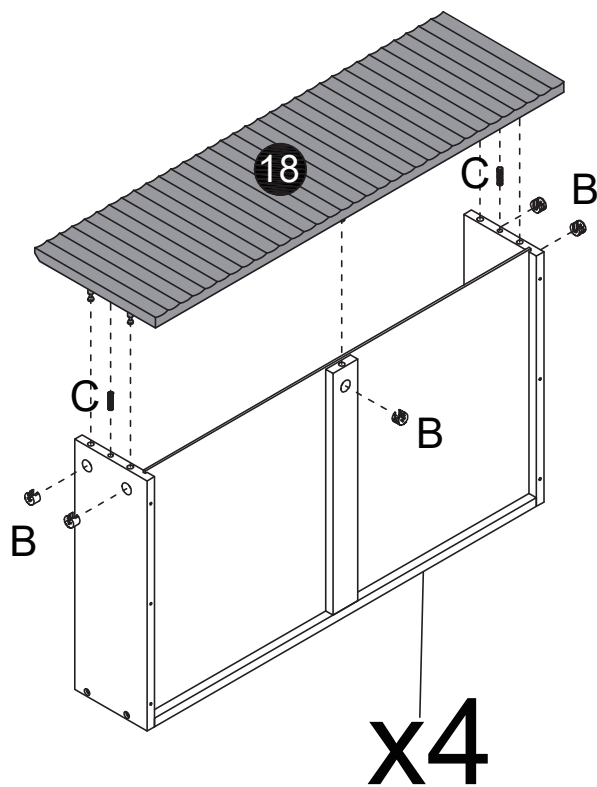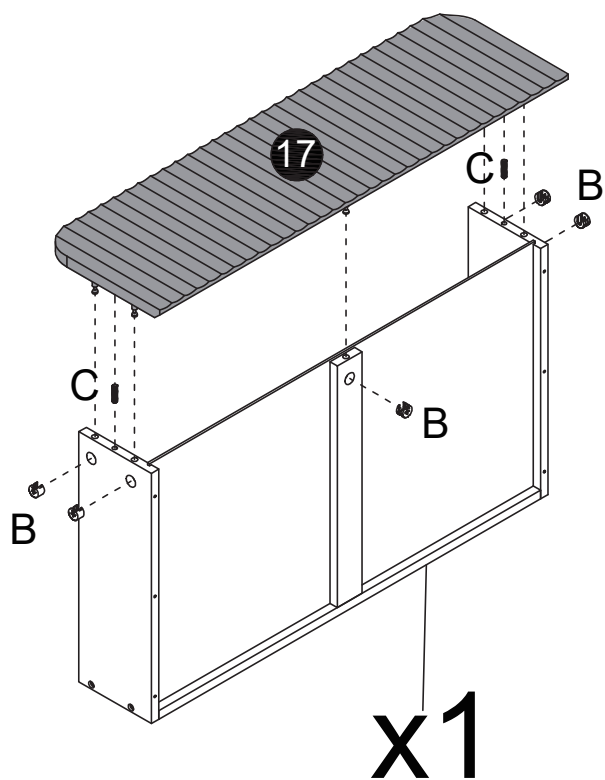


E x30




DL x5




DR x5



04

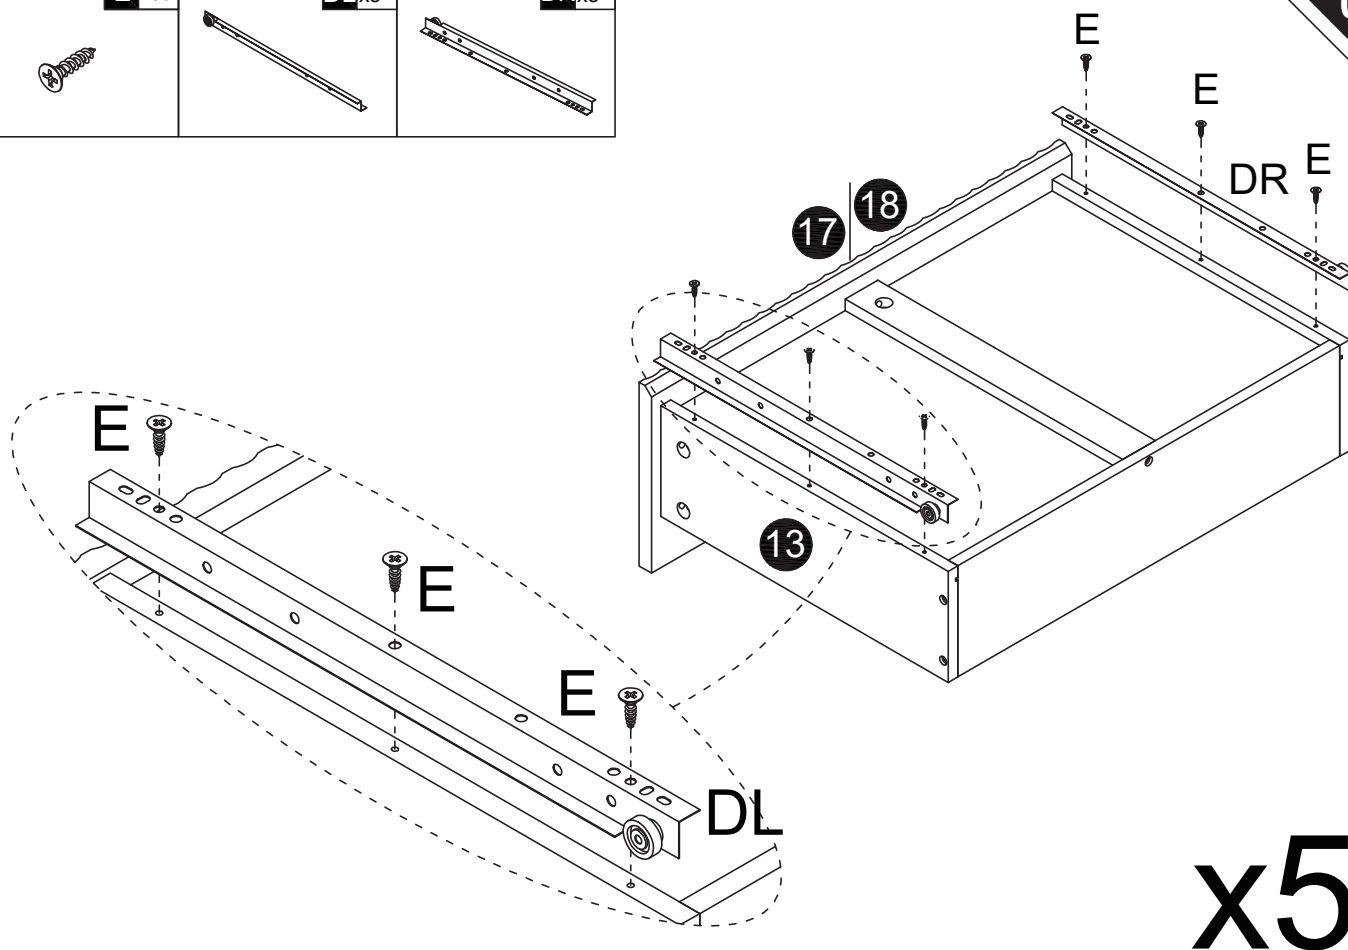

A x8







E x30




CL x5




CR x5

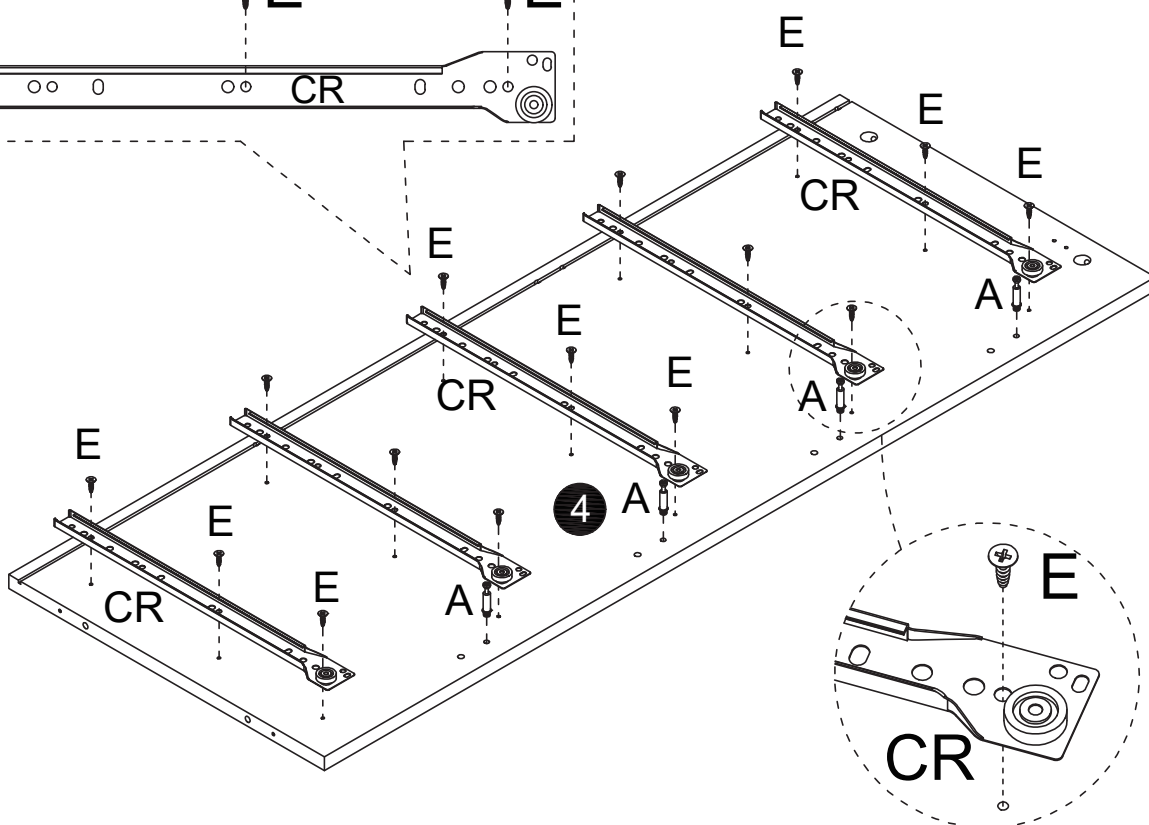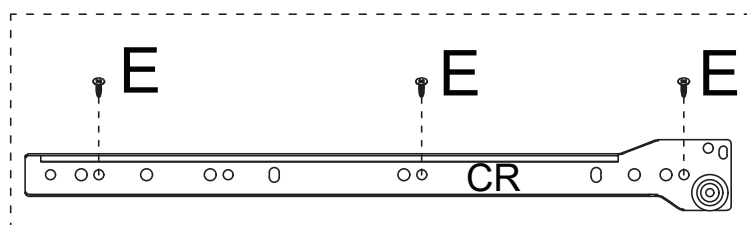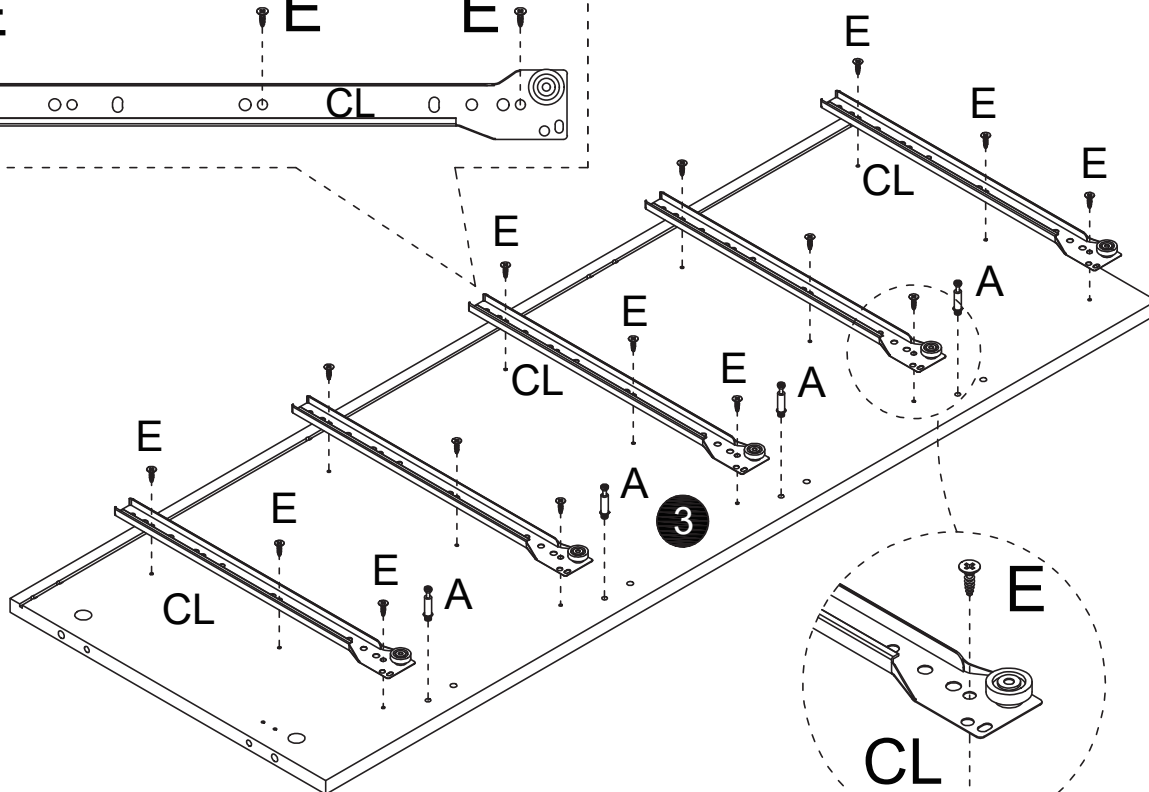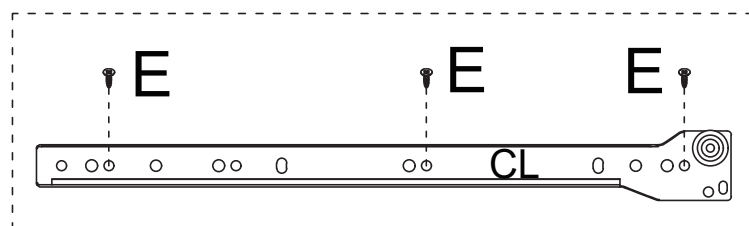

A x4



06

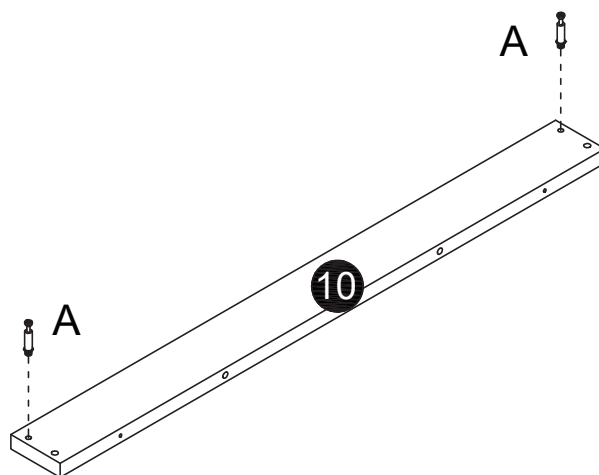

x2

B x4





C x12



I x8




07

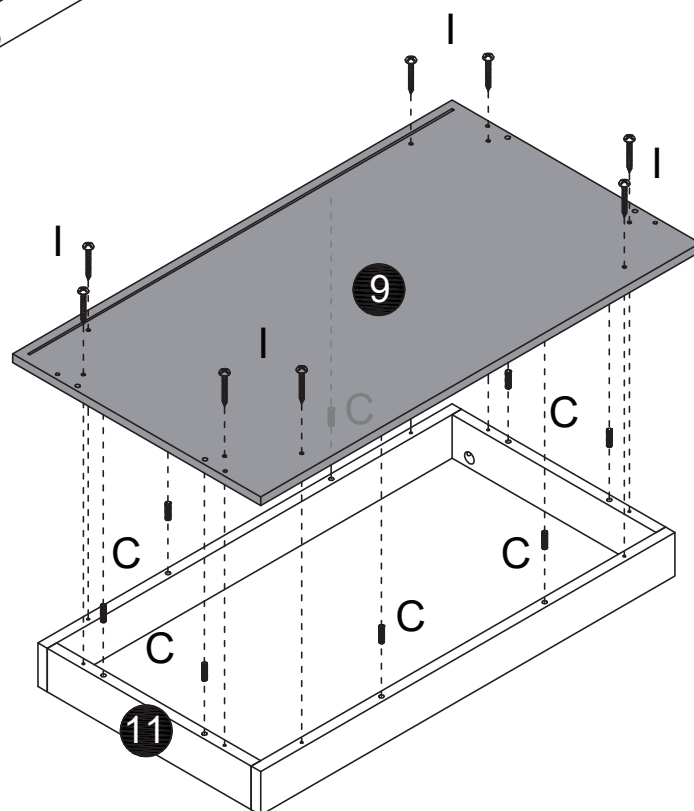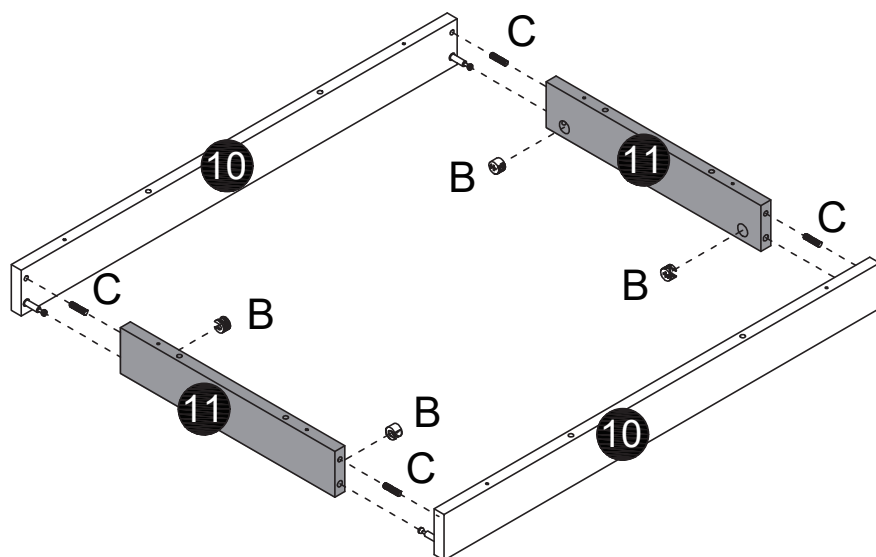

G x6


08

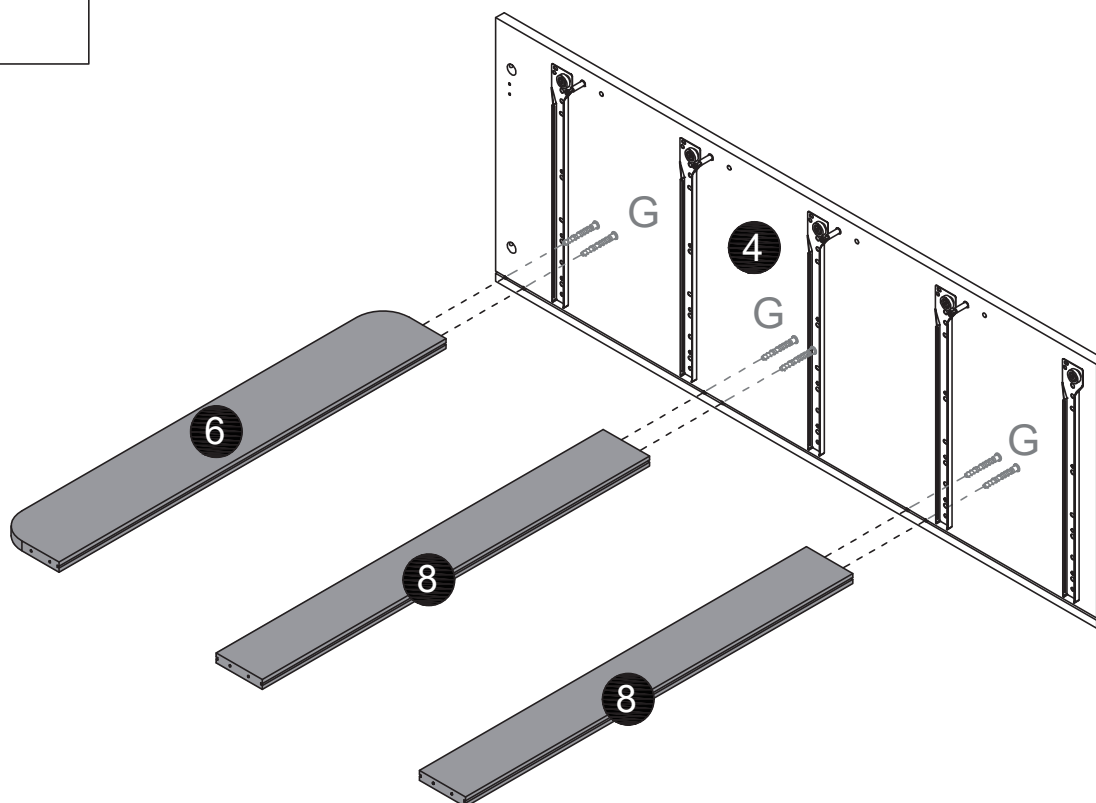


B x4


C x4

09

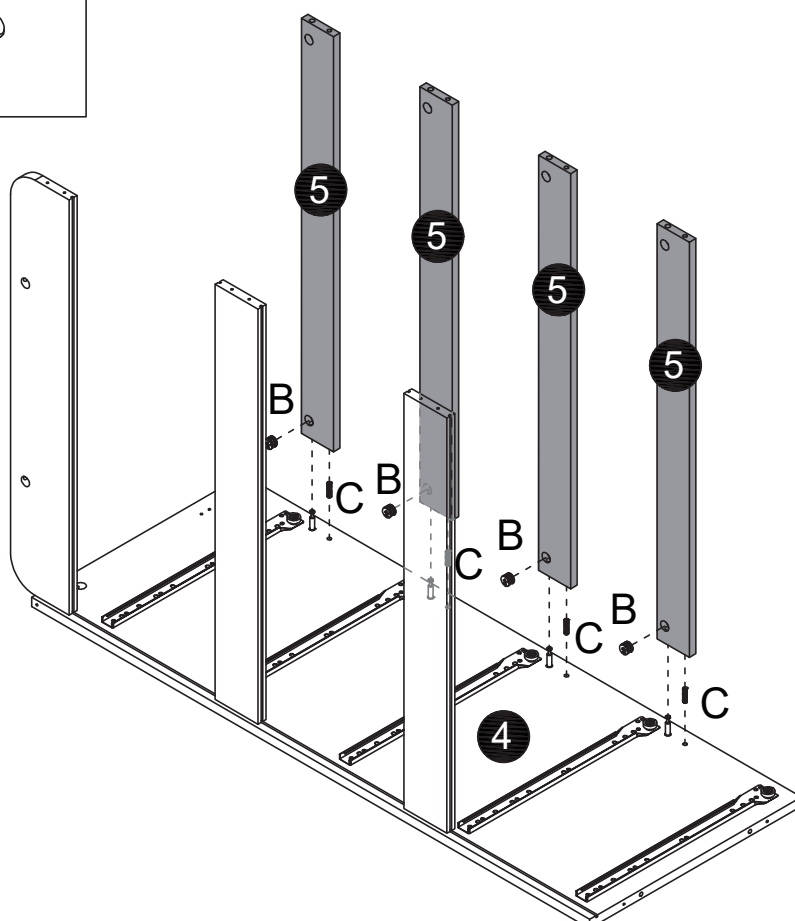

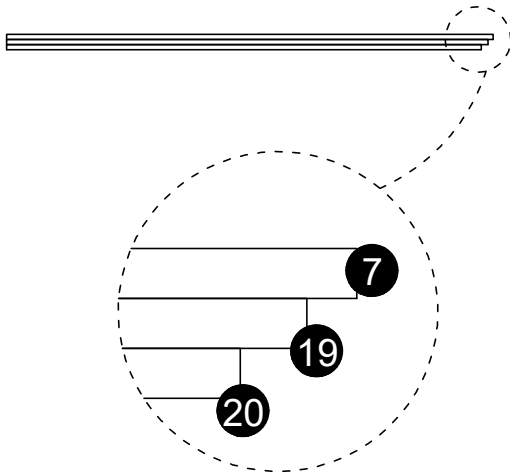

Caution :The sizes of board 7, board 19, and board 20 are similar, with board 7 being the largest and board 20 being the smallest. Please distinguish between them.

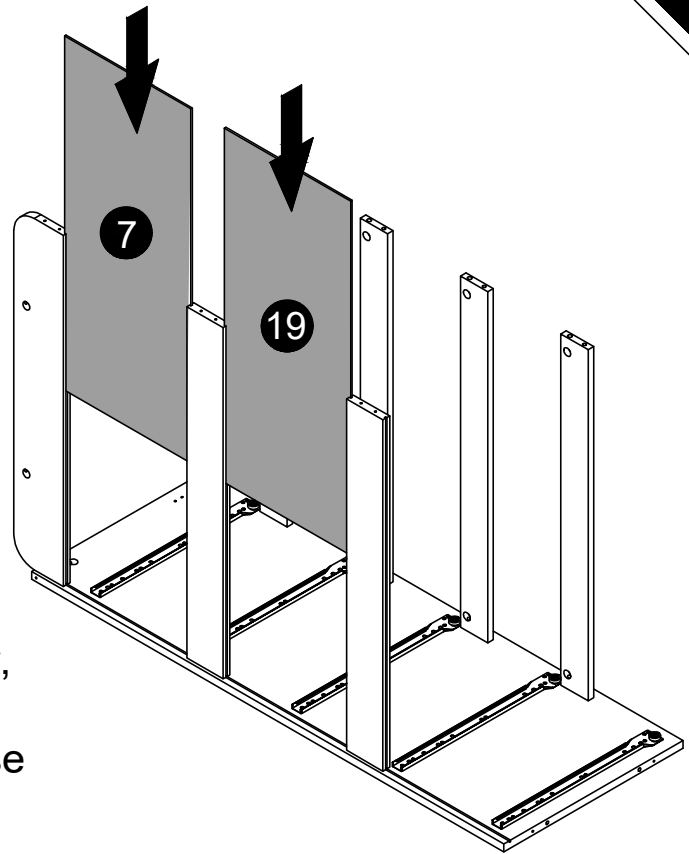

B x4


C x4




G x6




Caution :For easy installation, you can first manually screw screw G into plate 6 and plate 8, and then tighten it.

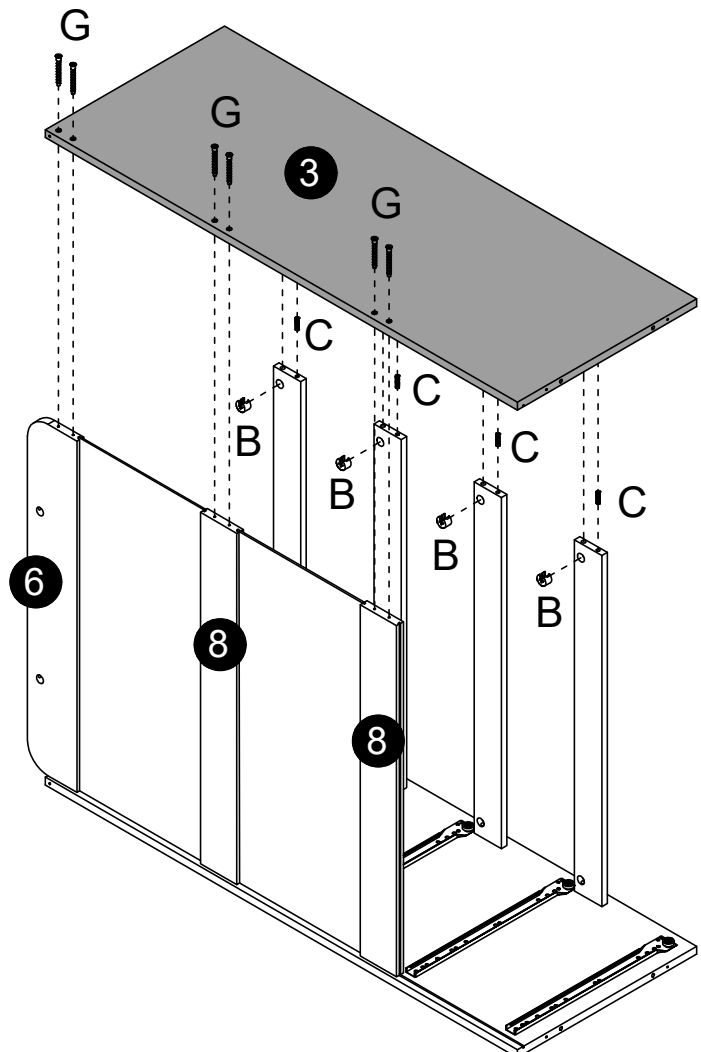

F x8

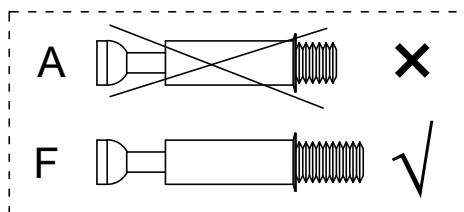

Caution : Need to use the correct part #F instead of part #A.

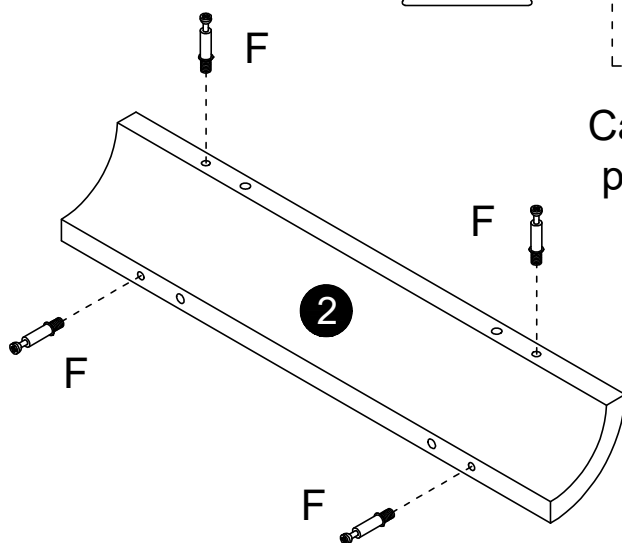


x2



B x4



C x4

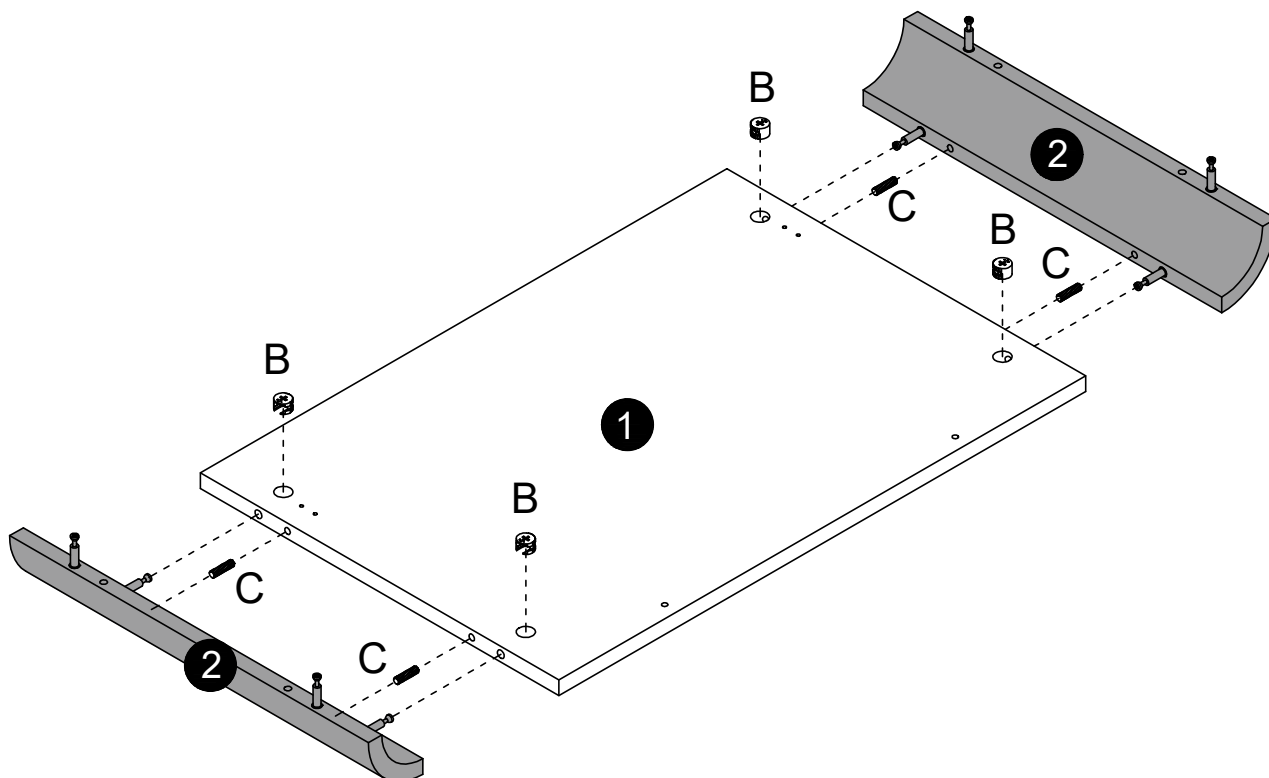



A x2

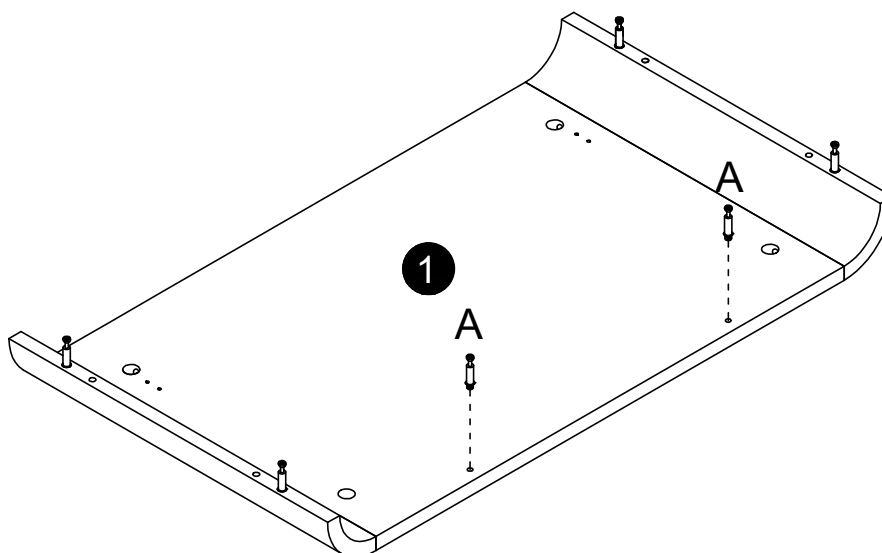


B x6



C x4

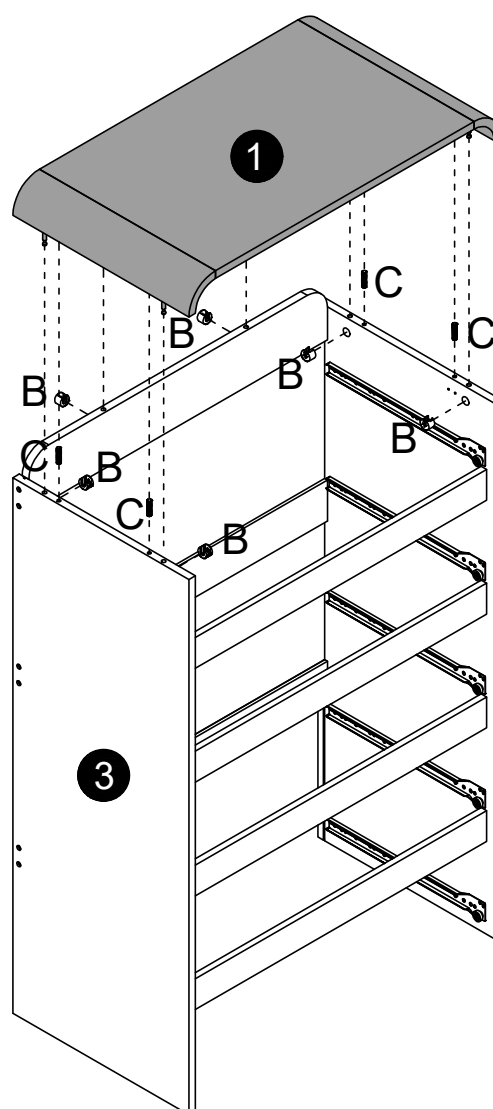
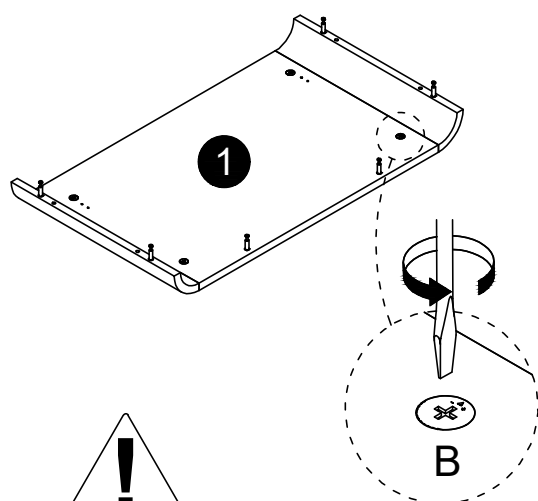


Caution : If you find it difficult to connect the No. 1 plate to the cabinet, you can loosen part B of the No. 1 plate first, and tighten it after the subsequent installation is completed.

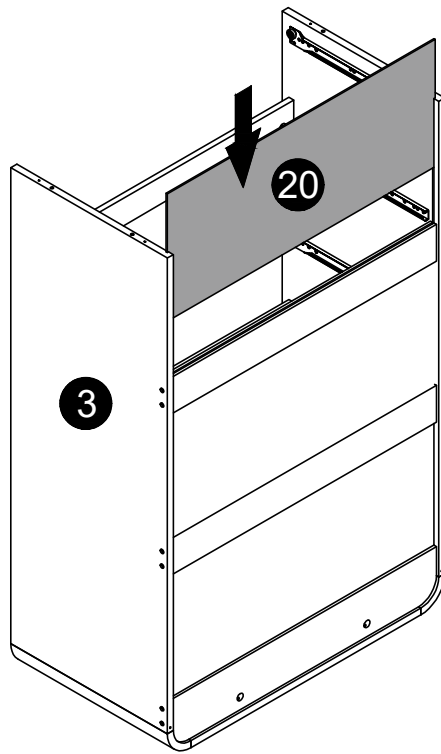

C x4

G x4

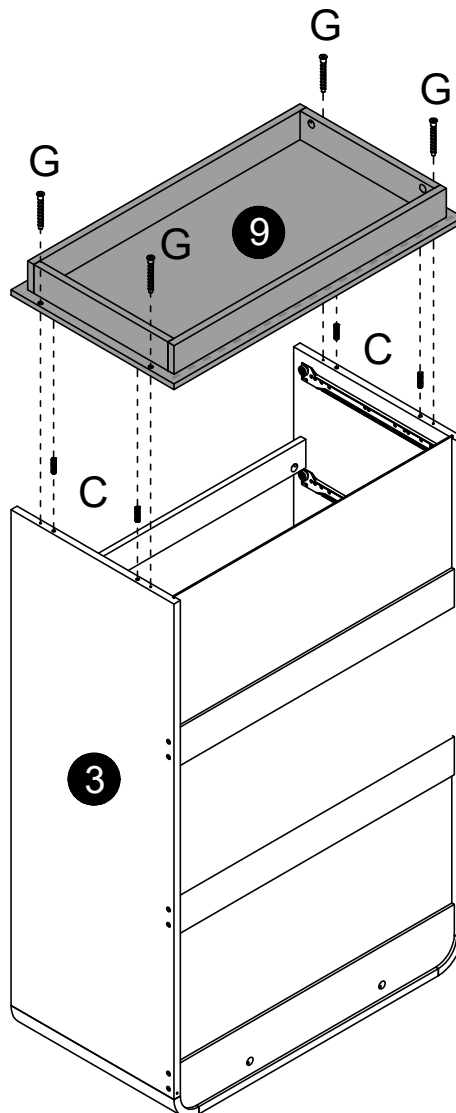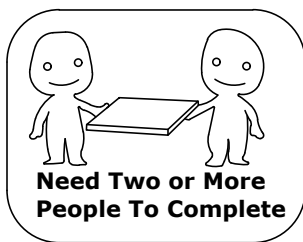



H x12








J x2




K x8

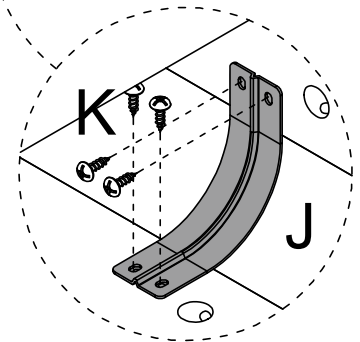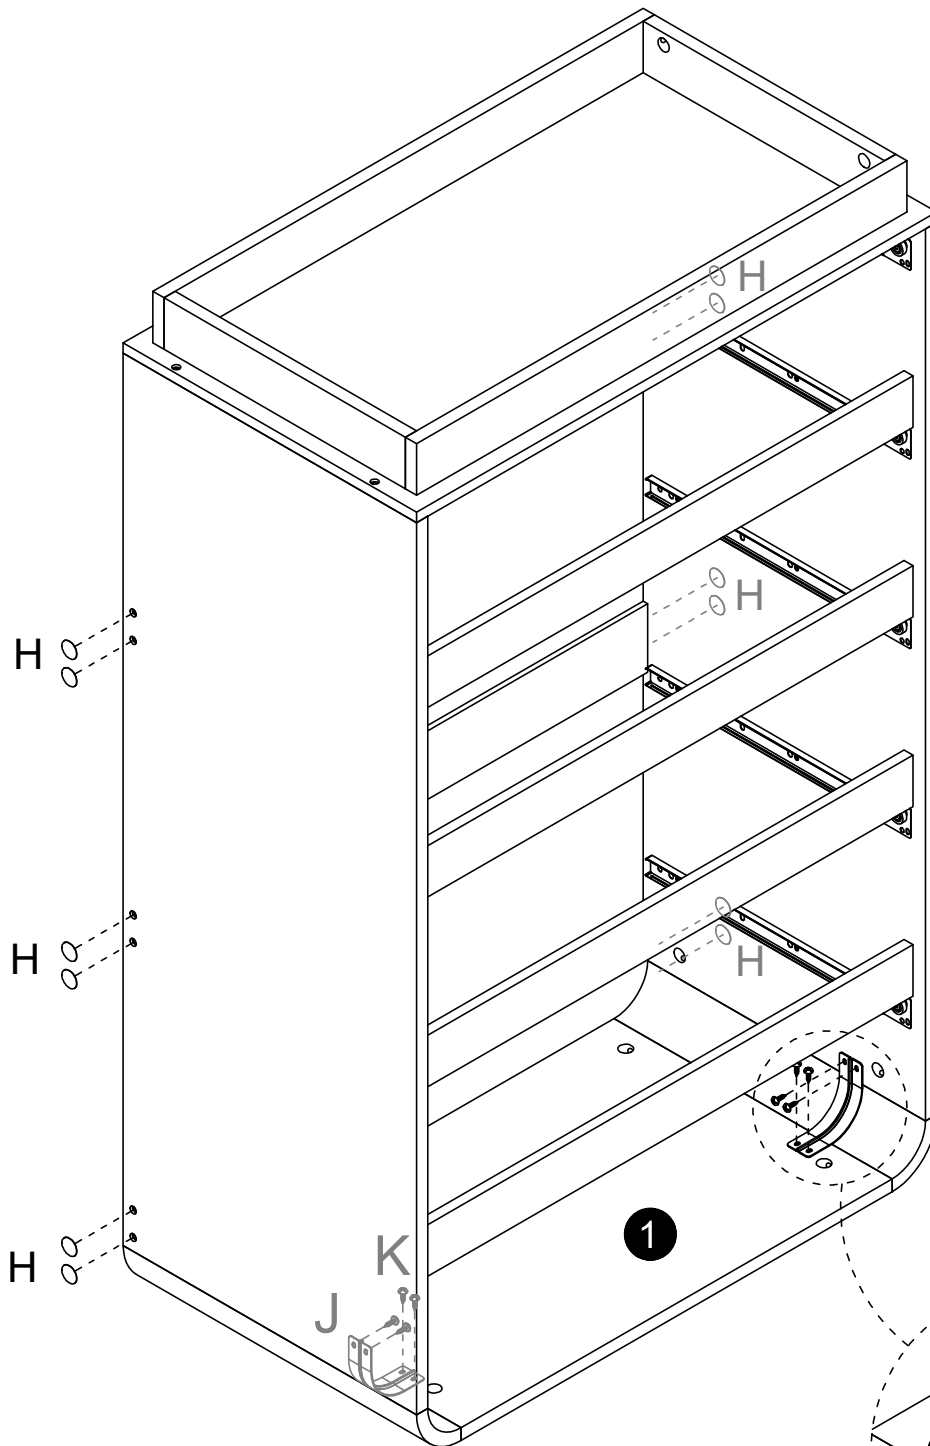

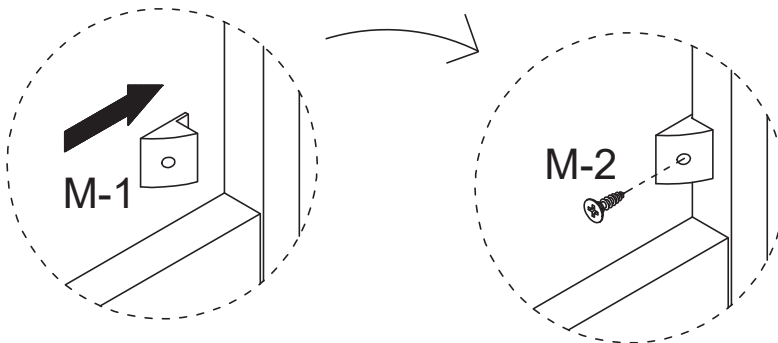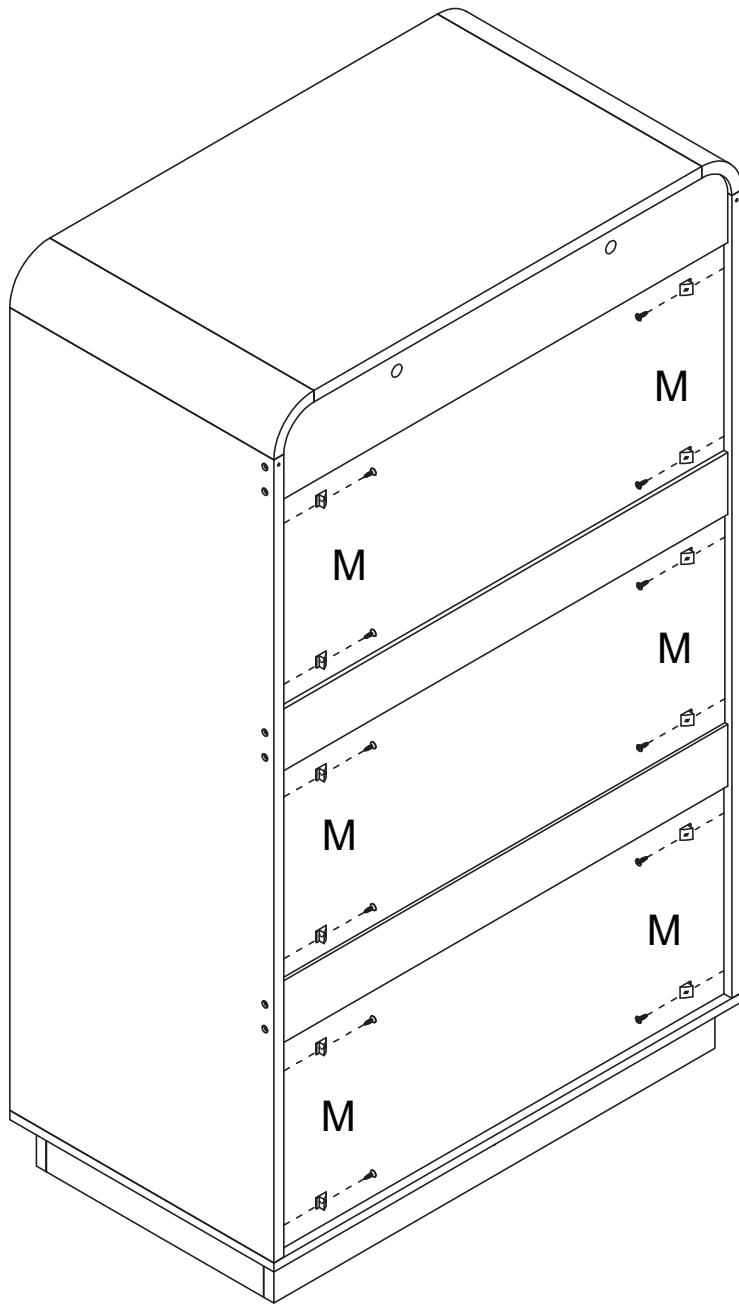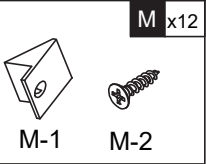


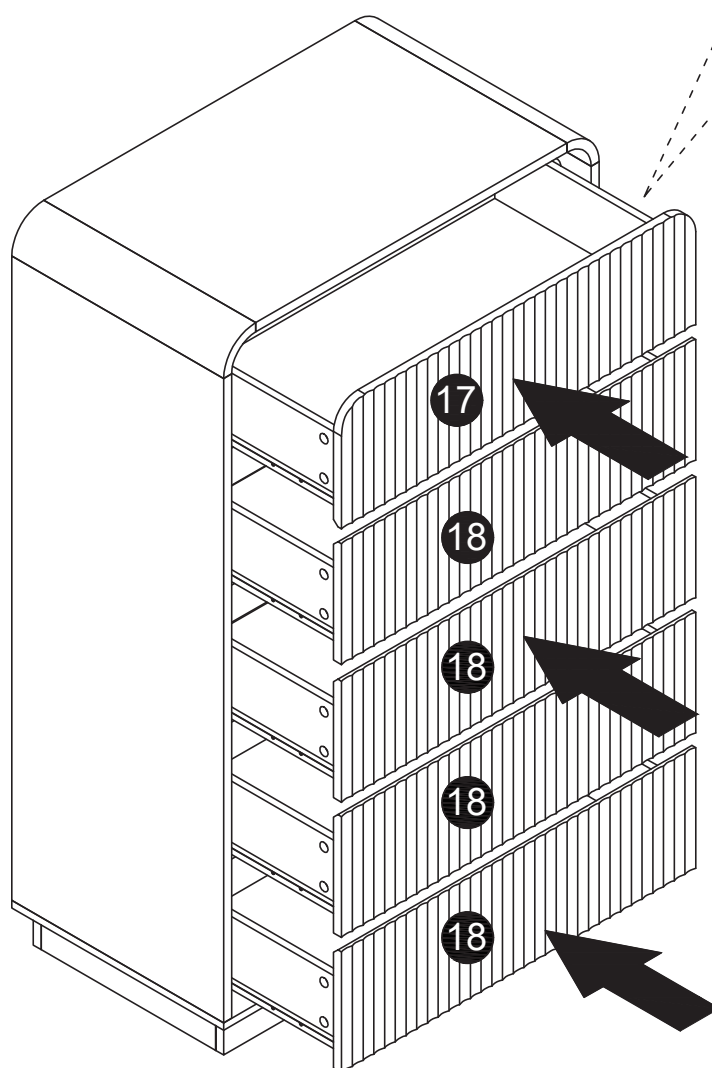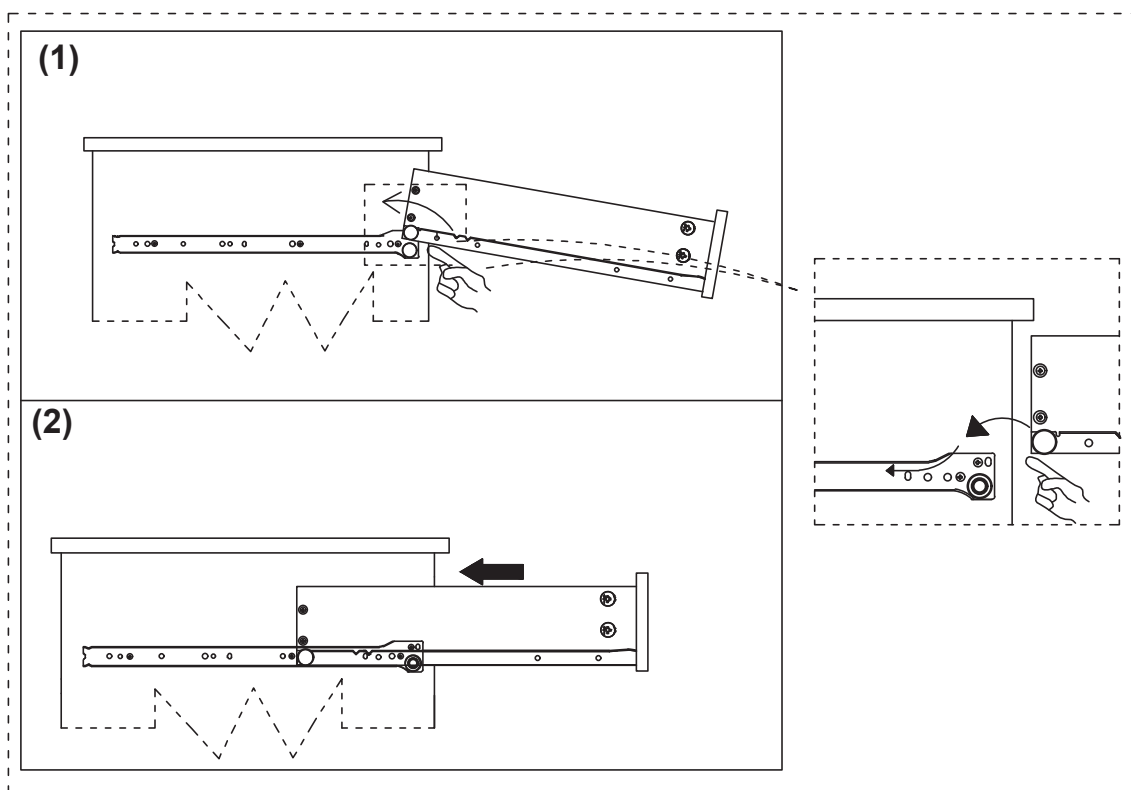

D x2



L x2




N x2




N-1


N-2

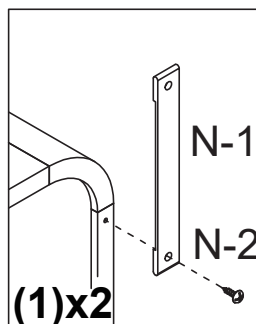


First fix the anti-rewind screw in the reserved hole of the product.

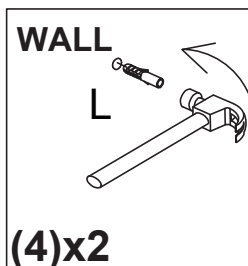


Then, put the expansion bolt into the hole

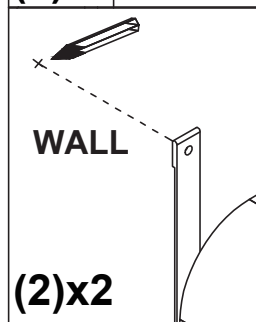

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

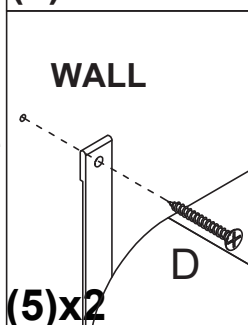

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

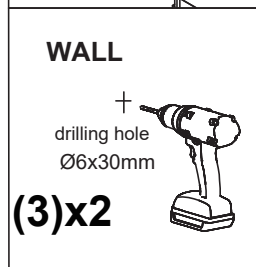

Then use a tape drill to make holes in the wall that are suitable for the product screws.

