

WONLINE

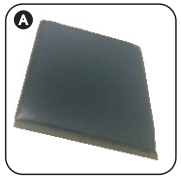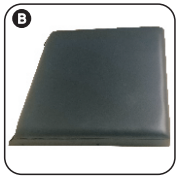

PART LIST


A*1


B*1


C*2


D*2


E*1


F*2


G*6


H*4


I*4


J*2

Installation steps




Insert 4 part I into the top of armrests(C) respectirelly.



Insert 4 part H into the position of armrests(C) respectivelly.



Assemble the back of chair(B) and seat(A) with screw(D),nut F,and part J.

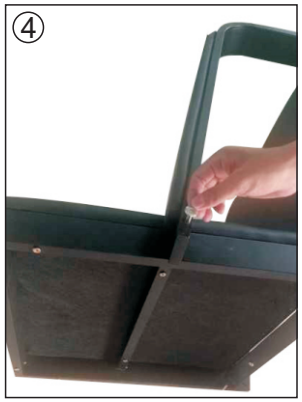

Assemble the armrests and chair with screws(G).



Tighten the screws with tool(E).



Completely.