



# ASSEMBLY INSTRUCTIONS

## QUEEN BED

Caution : Please read instructions thoroughly before unpacking assembly parts . Sharp , exposed staple tips can cause injury , therefore , for your protection , please remove any exposed staple used in packing


- 1 . We recommend that you should assemble this product with the assistance of another person ; this will make assembly easier , and will help to eliminate damage to the product or injury to persons during assembly .
- 2 . Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment .
- 3 . please do not over tighten screws or bolts until the assembly is complete .
- 4 . Please put all parts on a non - abrasive floor before assembly , and follow the assembly steps to assemble your newly purchased product correctly and efficiently .

PART LIST


|   |                                                                                     |                     |      |
|---|-------------------------------------------------------------------------------------|---------------------|------|
| 1 |    | HEADBOARD PANEL     | 1PC  |
| 2 |    | HEADBOARD POST LSF  | 1PC  |
| 3 |    | HEADBOARD POST RSF  | 1PC  |
| 4 |    | HEADBOARD CROSS BAR | 1PC  |
| 5 |  | FOOTBOARD           | 1PC  |
| 6 |  | RAIL                | 2PCS |
| 7 |  | SLAT                | 4PCS |
| 8 |  | SUPPORT LEG         | 4PCS |

HARDWARE LIST IN RAIL


|   |                                                                                     |                     |       |
|---|-------------------------------------------------------------------------------------|---------------------|-------|
| A |   | ALLEN KEY 5/16"     | 1PC   |
| B |   | BOLT 5/16"x1-3/4"   | 12PCS |
| C |  | SPRING WASHER 5/16" | 12PCS |
| D |  | FLAT WASHER 5/16"   | 12PCS |
| E |   | BOLT 5/16" x 3-1/4" | 8PCS  |
| F |  | "C" WASHER 5/16"    | 8PCS  |
| G |  | HEX NUT 5/16"       | 8PCS  |
| H |   | WRENCH 13x90MM      | 1PC   |
| J |  | WOOD SCREW #8 x 1"  | 8PCS  |

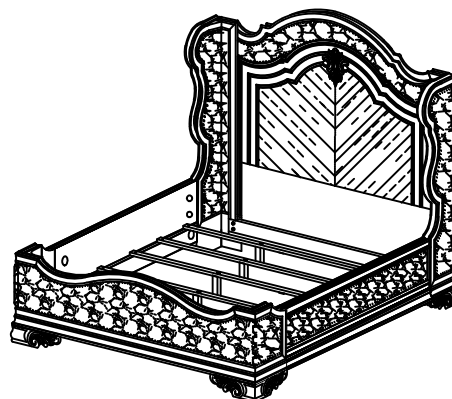


STEP 1

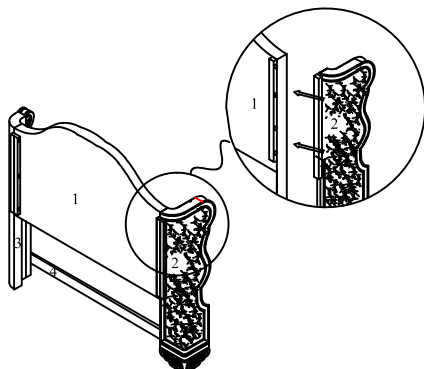

STEP 2

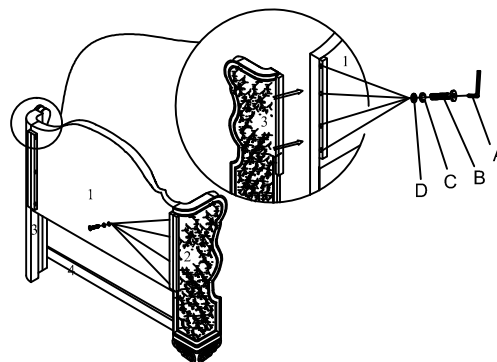

STEP 3

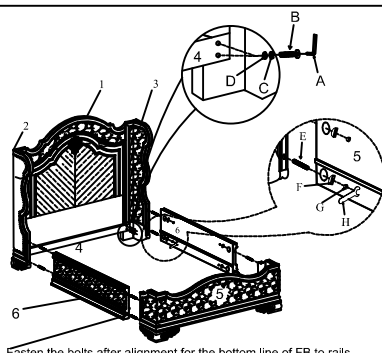

Fasten the bolts after alignment for the bottom line of FB to rails

STEP 4

