


ENCLO

HIDE IT WITH STYLE

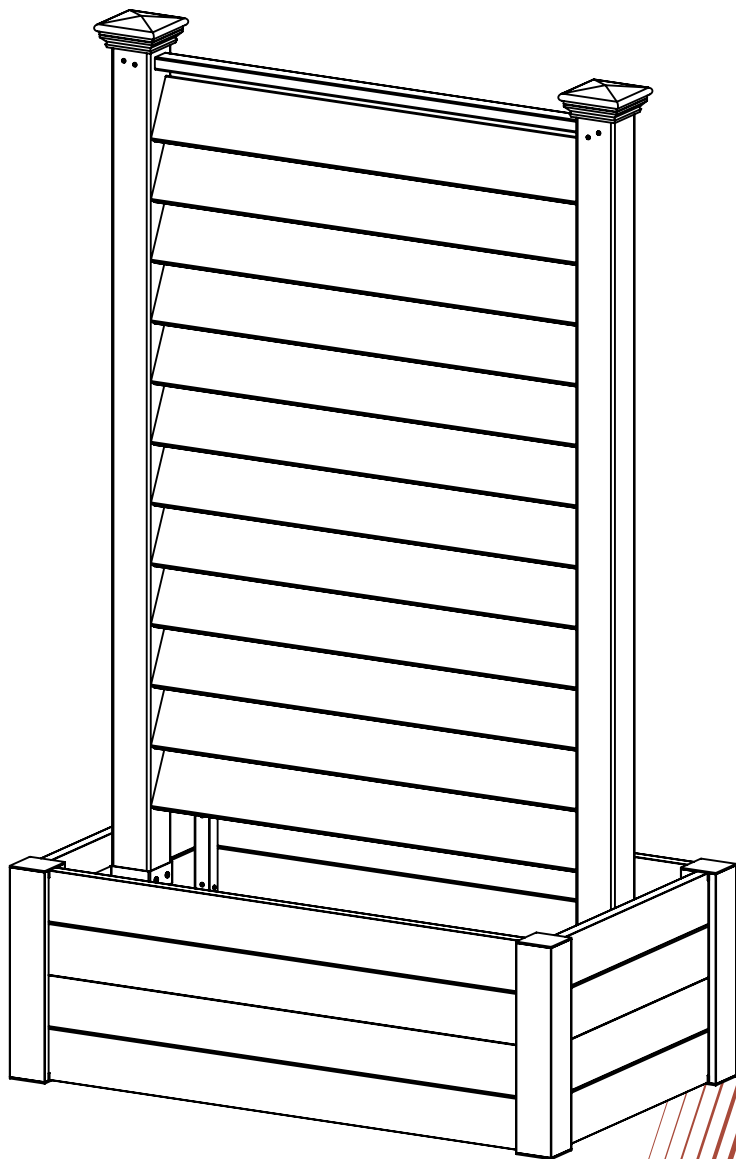

Lexington

Louvered Planter Screen

43" W x 72" H

45 min

*Approximate assembly
time for 1 screen*



Scan the QR code
for an assembly video



ASSEMBLY INSTRUCTIONS

EC18039

www.encloscreens.com

VER. 120525

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, ➤ Your product number (**EC18039**)
please have the ➤ Your affected part letters (**pages 4-6**)
following ➤ Your original product box

NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,
please contact at:

📞 **704-892-5222 / 877-234-6196** ✉ **support@encloscreens.com**

NEED TO RETURN?


If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

DETAILED **PRODUCT DIMENSIONS & SPECIFICATIONS**

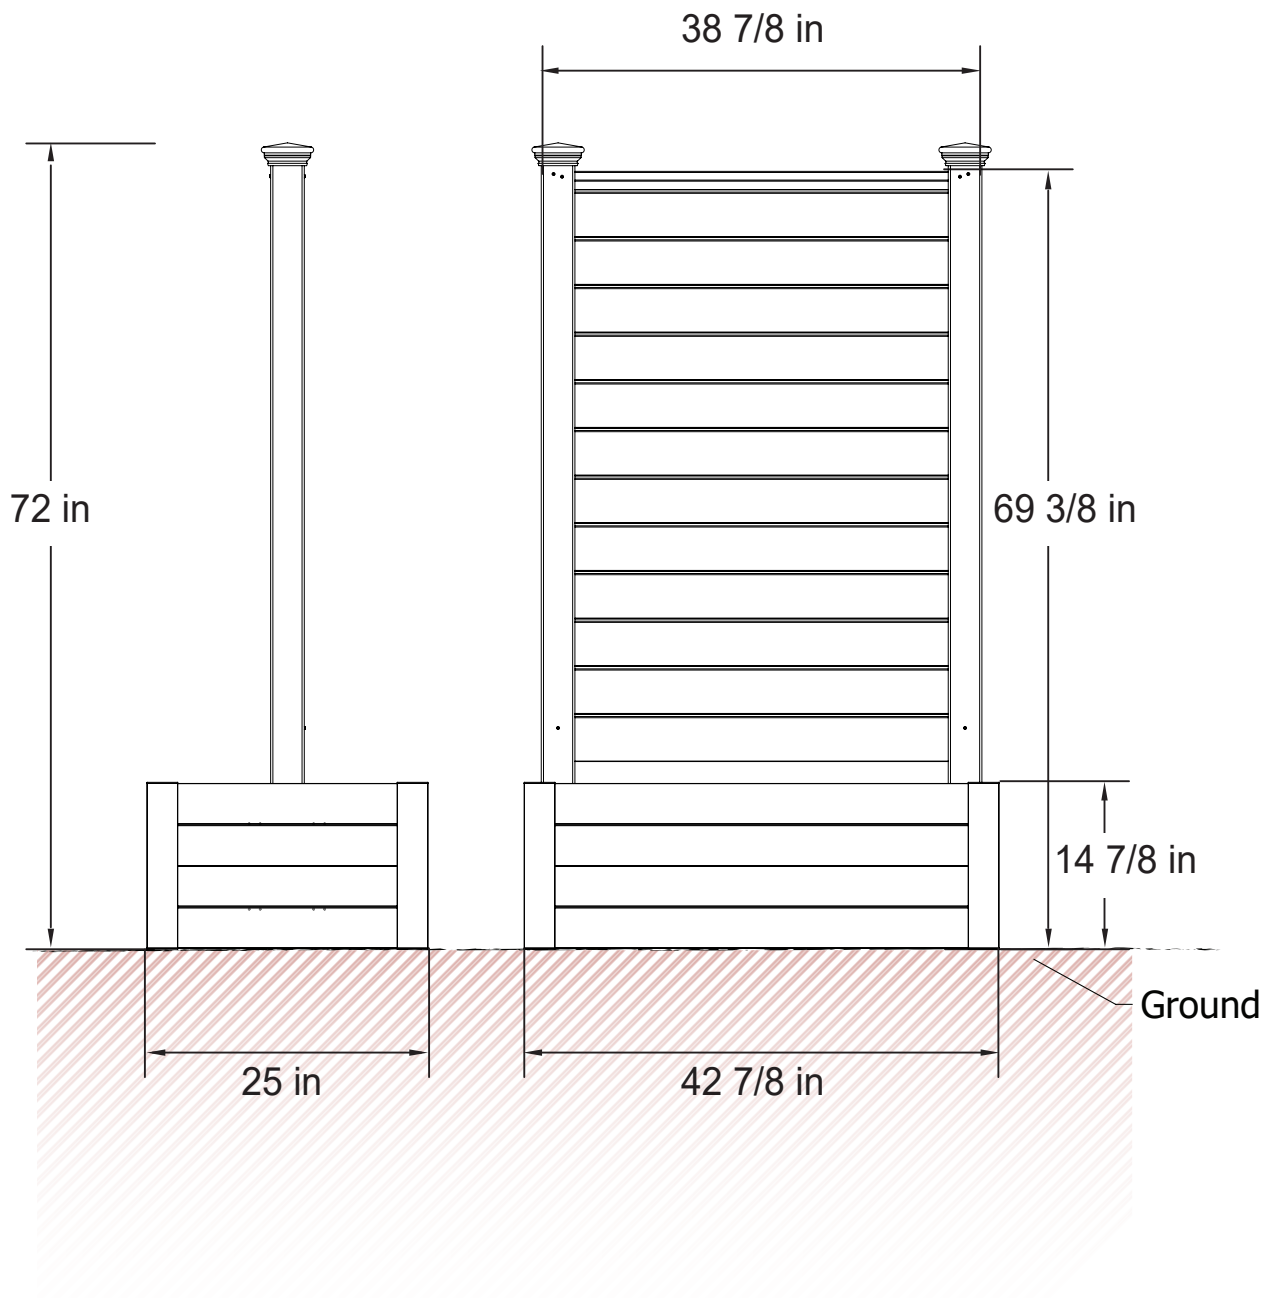

LAY OUT MATERIALS

► Tools required for a smoother installation experience.

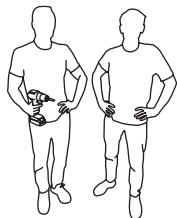


We recommend
2 people for
a smoother
assembly.



► **Power Drill with Phillips Bit**


SCREEN

A

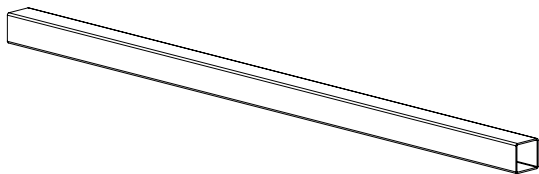


Left Post (1)
3" x 3" x 68 5/8"

B

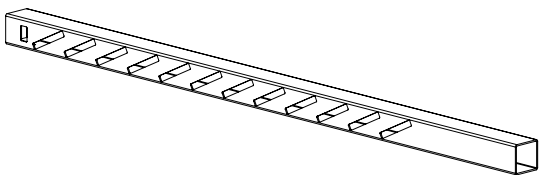


Right Post (1)
3" x 3" x 68 5/8"

C

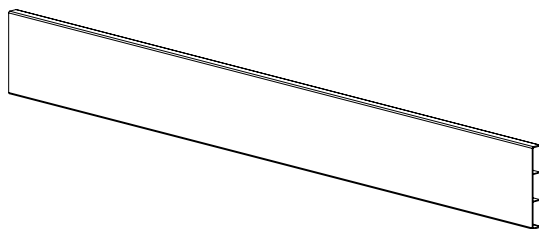







Slats (12)
5/8" x 4 1/2" x 39"

D

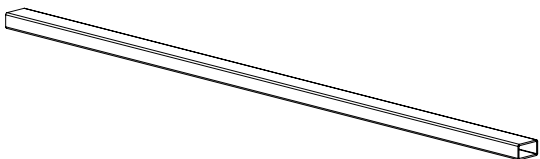

Top Rail (1)
7/8" x 1 1/2" x 39"


LAY OUT MATERIALS

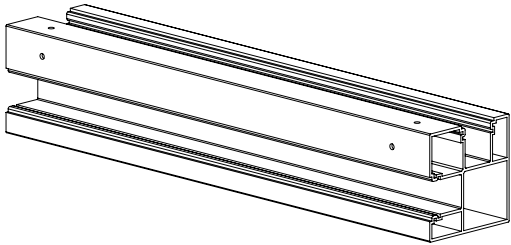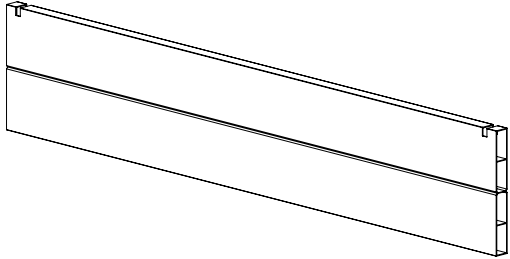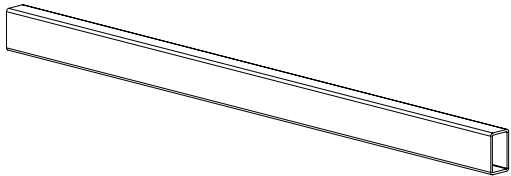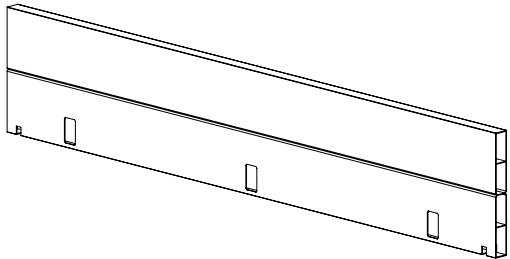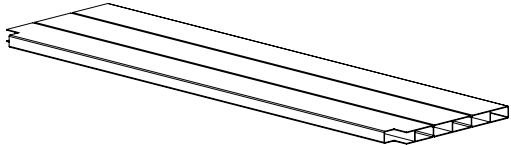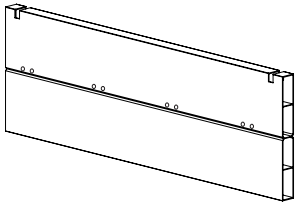PLANTER BOX	
E  Planter Box Posts(4) 2 3/4" x 2 3/4" x 15"	H  Long Planter Boards - Tops (2) 7 3/8" x 7/8" x 39"
F  Floor Supports (3) 1 1/2" x 7/8" x 23 5/8"	I  Long Planter Boards - Bottom (2) 7 3/8" x 7/8" x 39"
G  Floor Boards (2) 7/8" x 11" x 39 1/4"	J  Short Planter Boards (4) 7 3/8" x 7/8" x 21 3/4"

LAY OUT MATERIALS


HARDWARE & ACCESSORIES

K

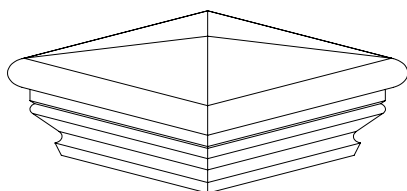


Screen Post Caps (2)

L

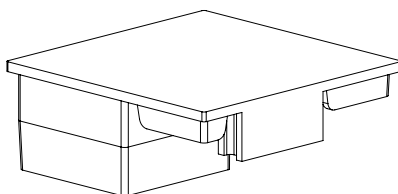


Planter Post Caps (8)

M




2" Screw (22)

N





.75" Screw (24)

O


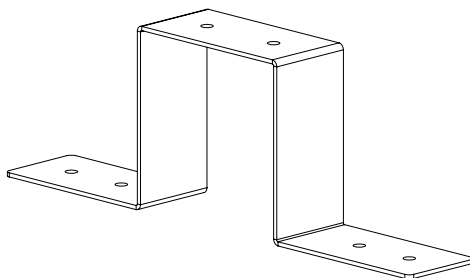


Post Brackets (4)
3" x 3" x 9 1/4"



1

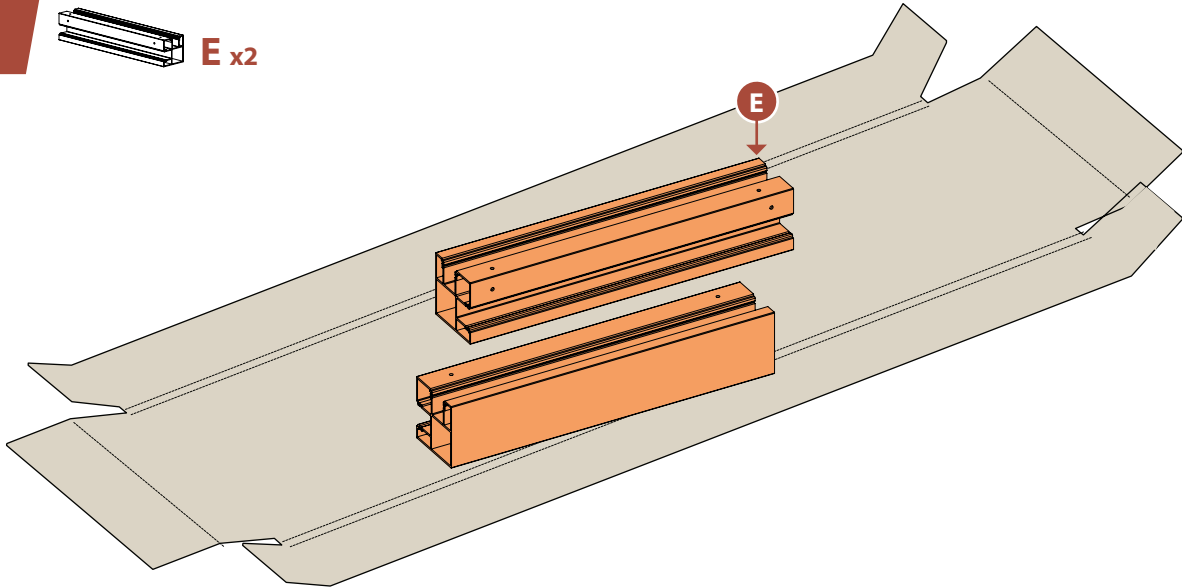



2

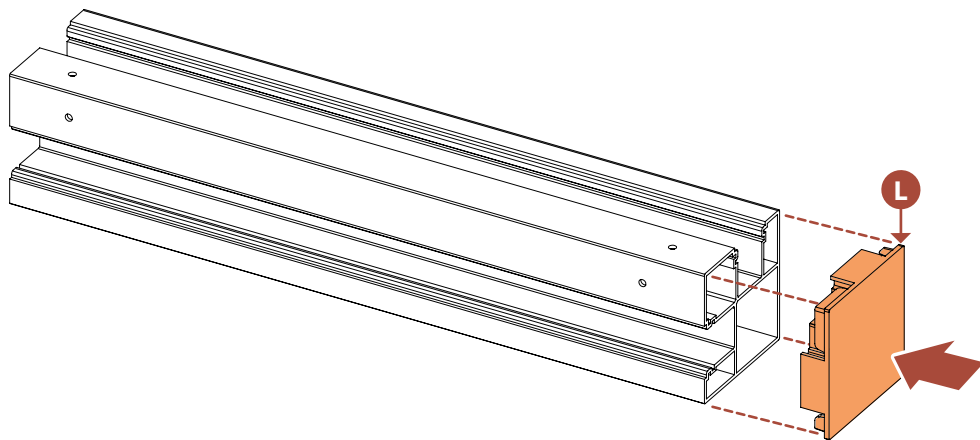

3

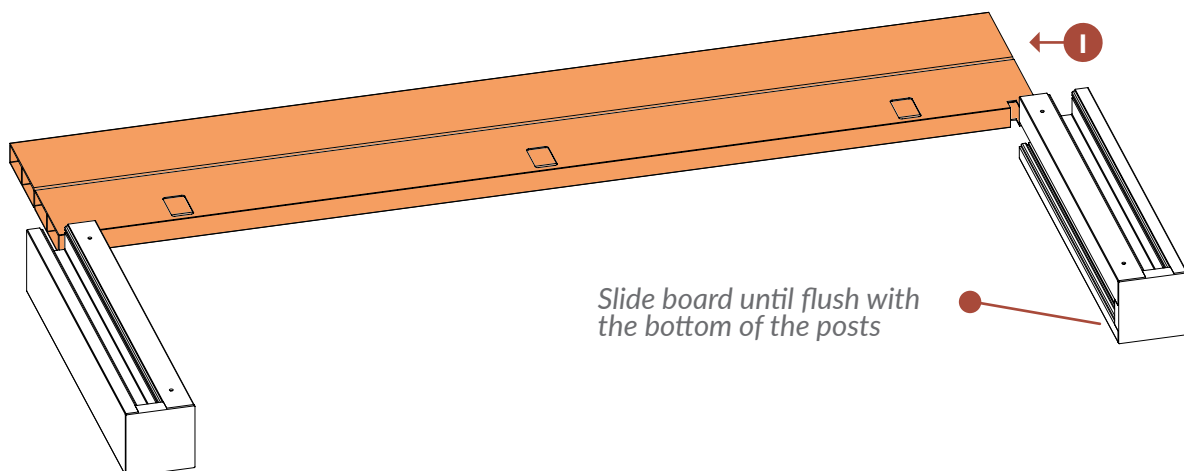


4

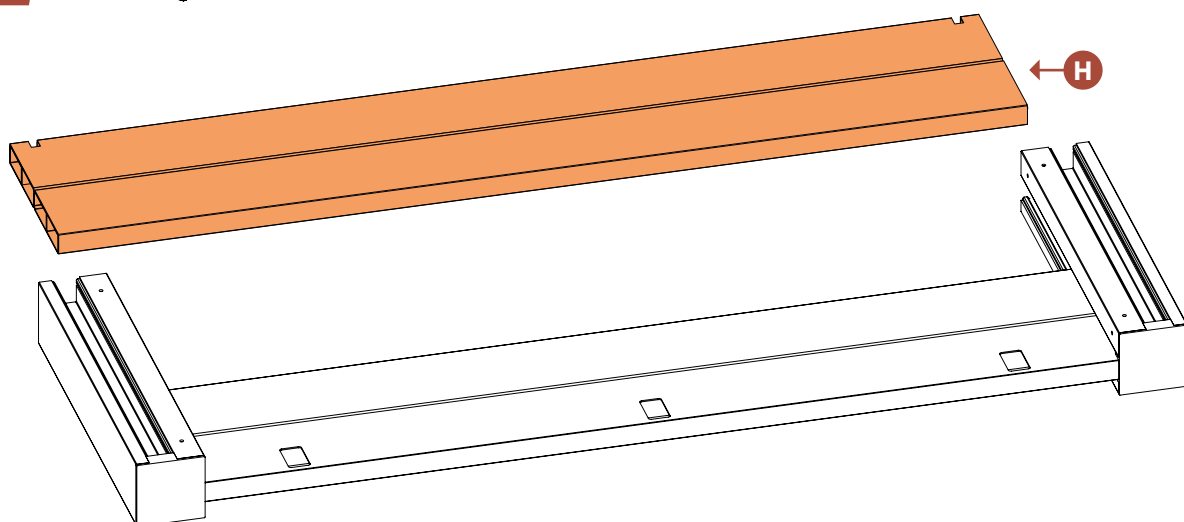


5



 **M x4**

NOTE: Ensure the boards are flush to the back of the channels before driving screws

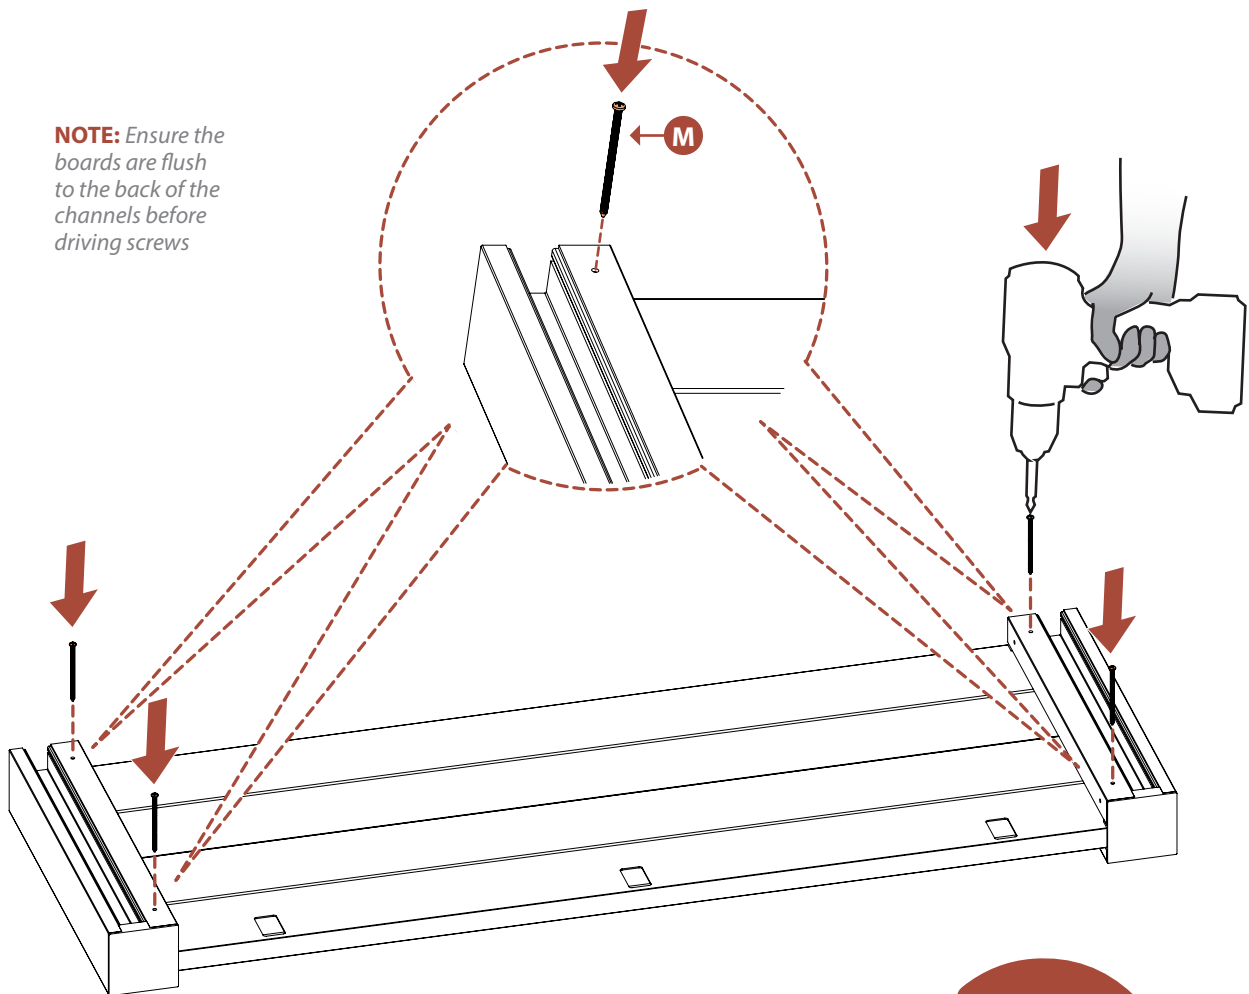

Repeat steps 1-5 to create second long side of planter box

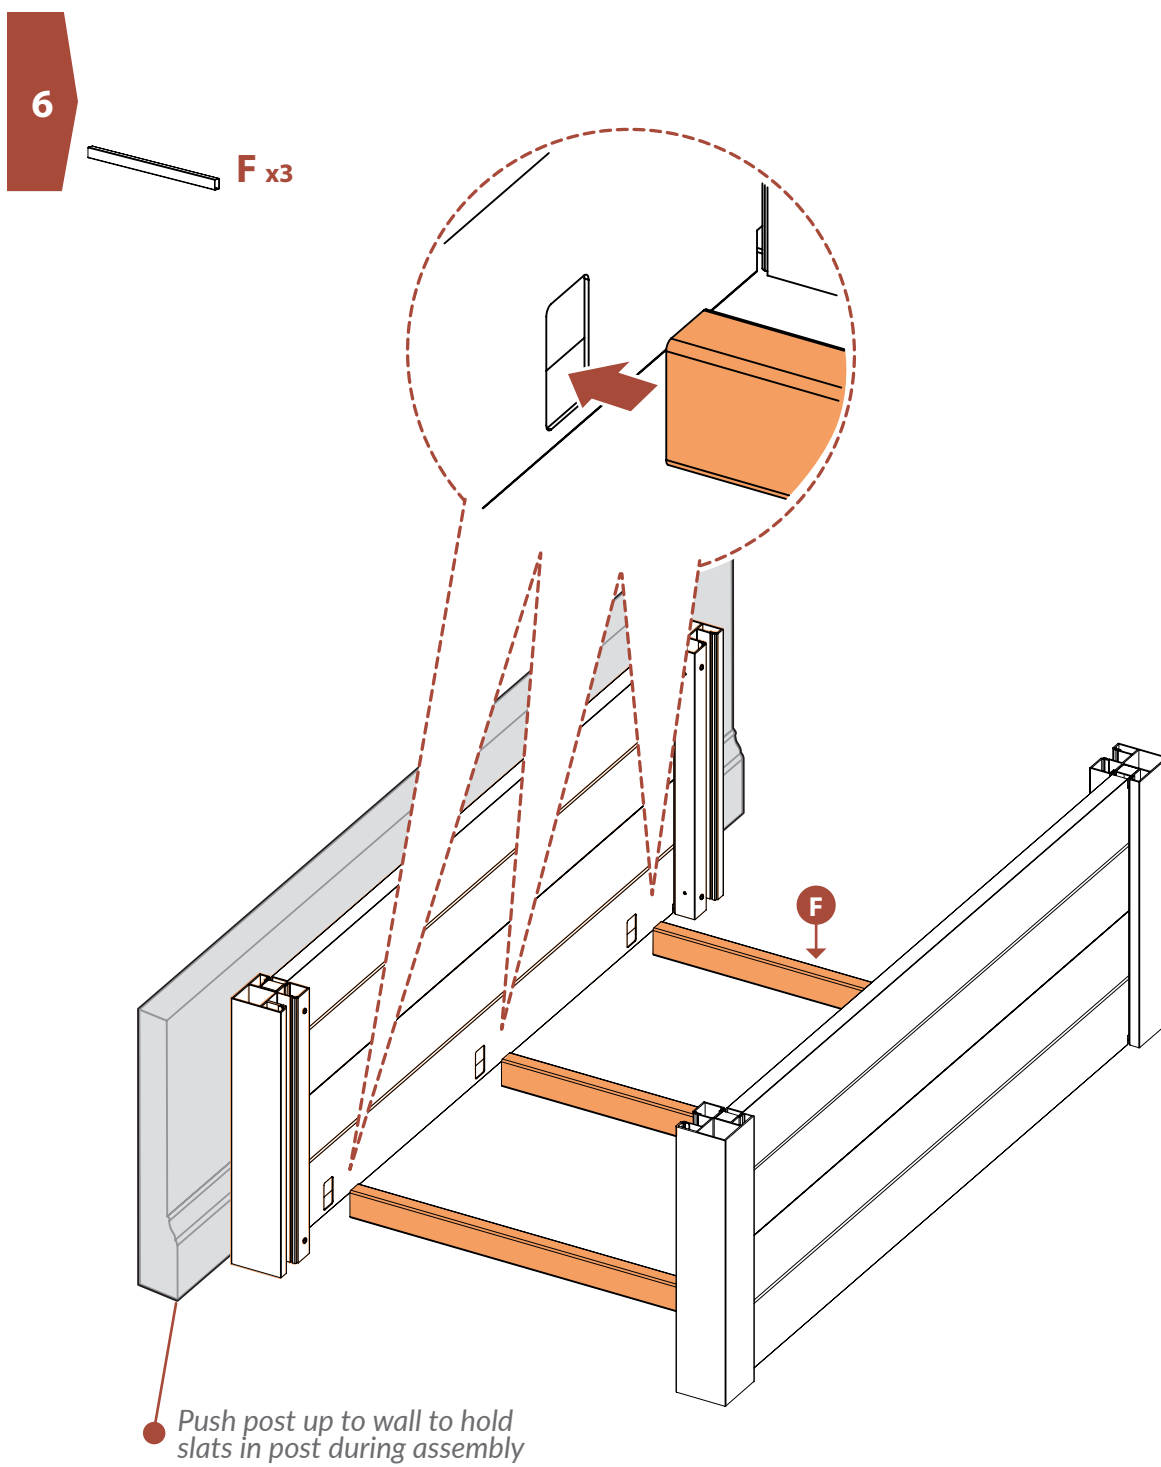


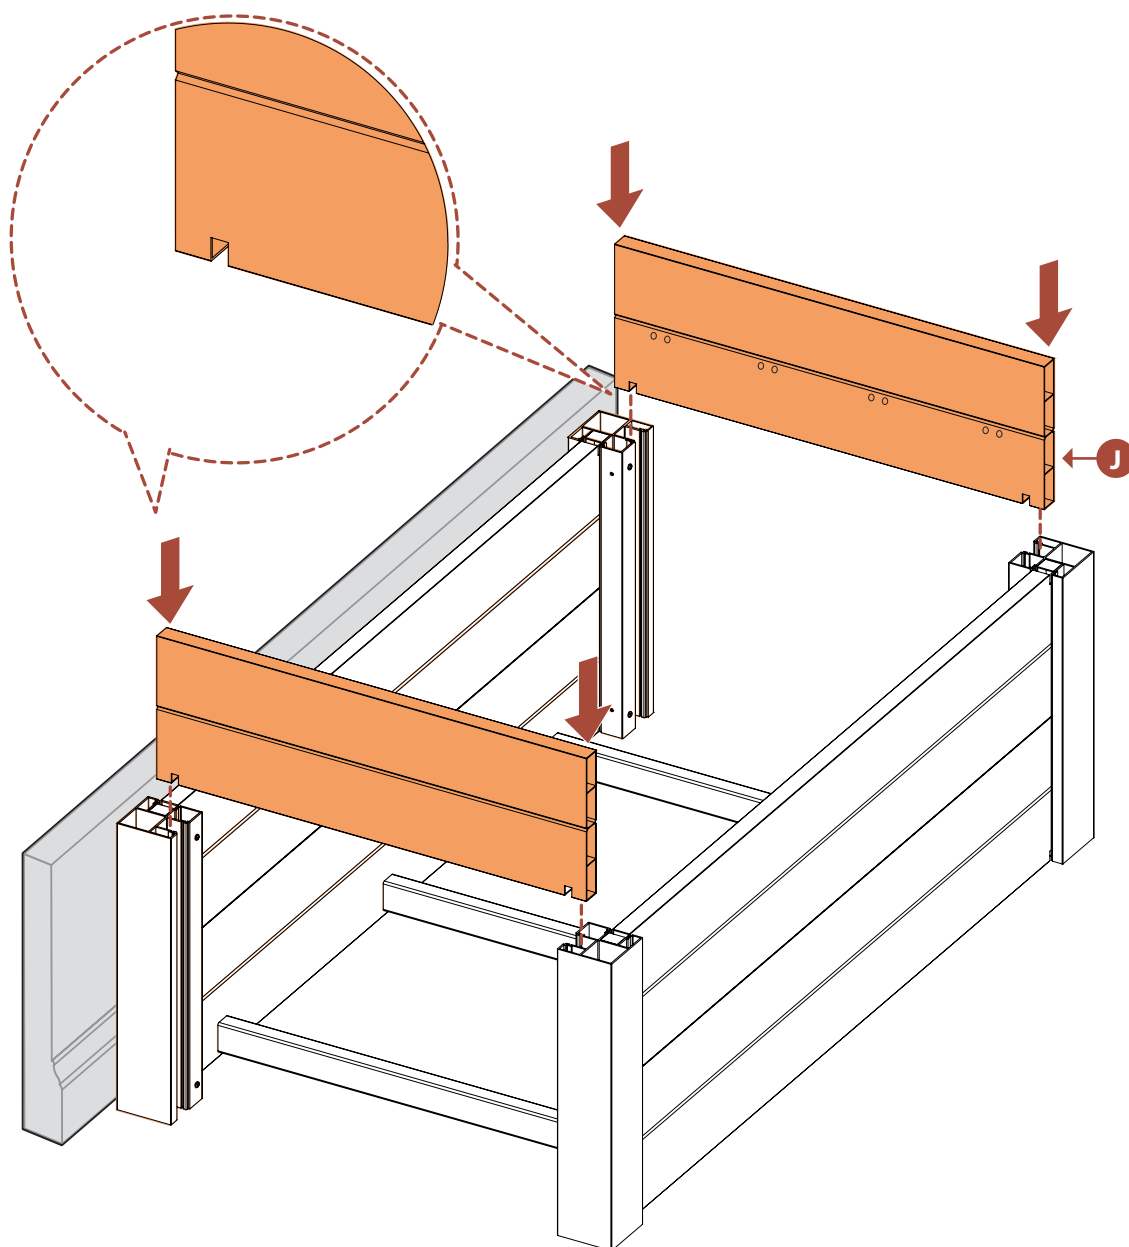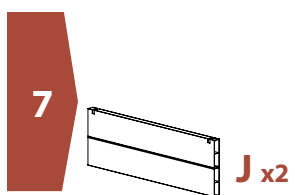

8





J x2

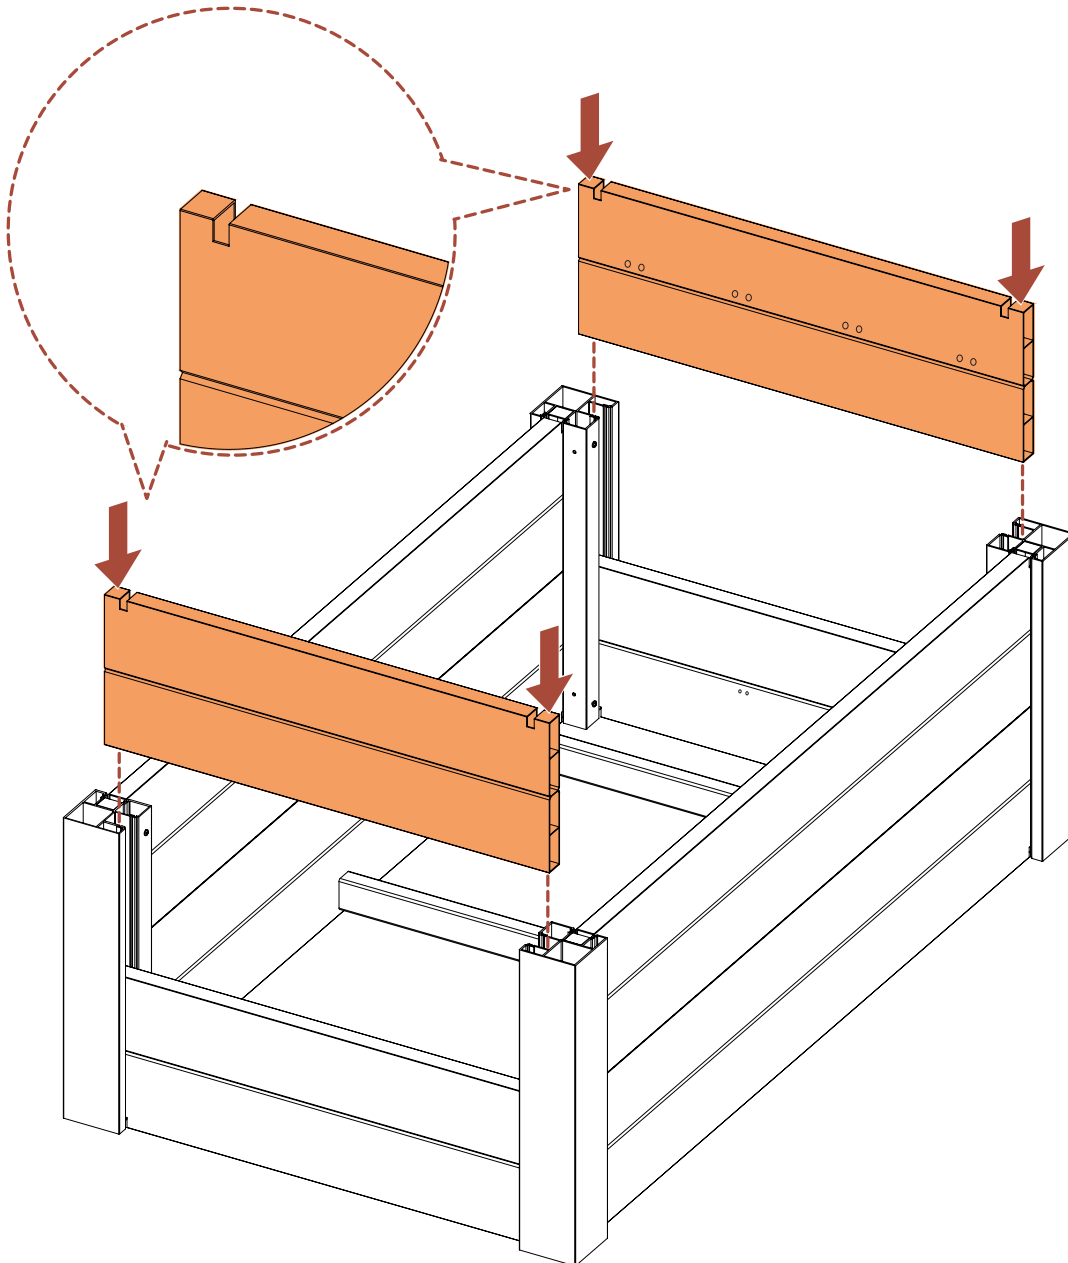


9

 **M x4**

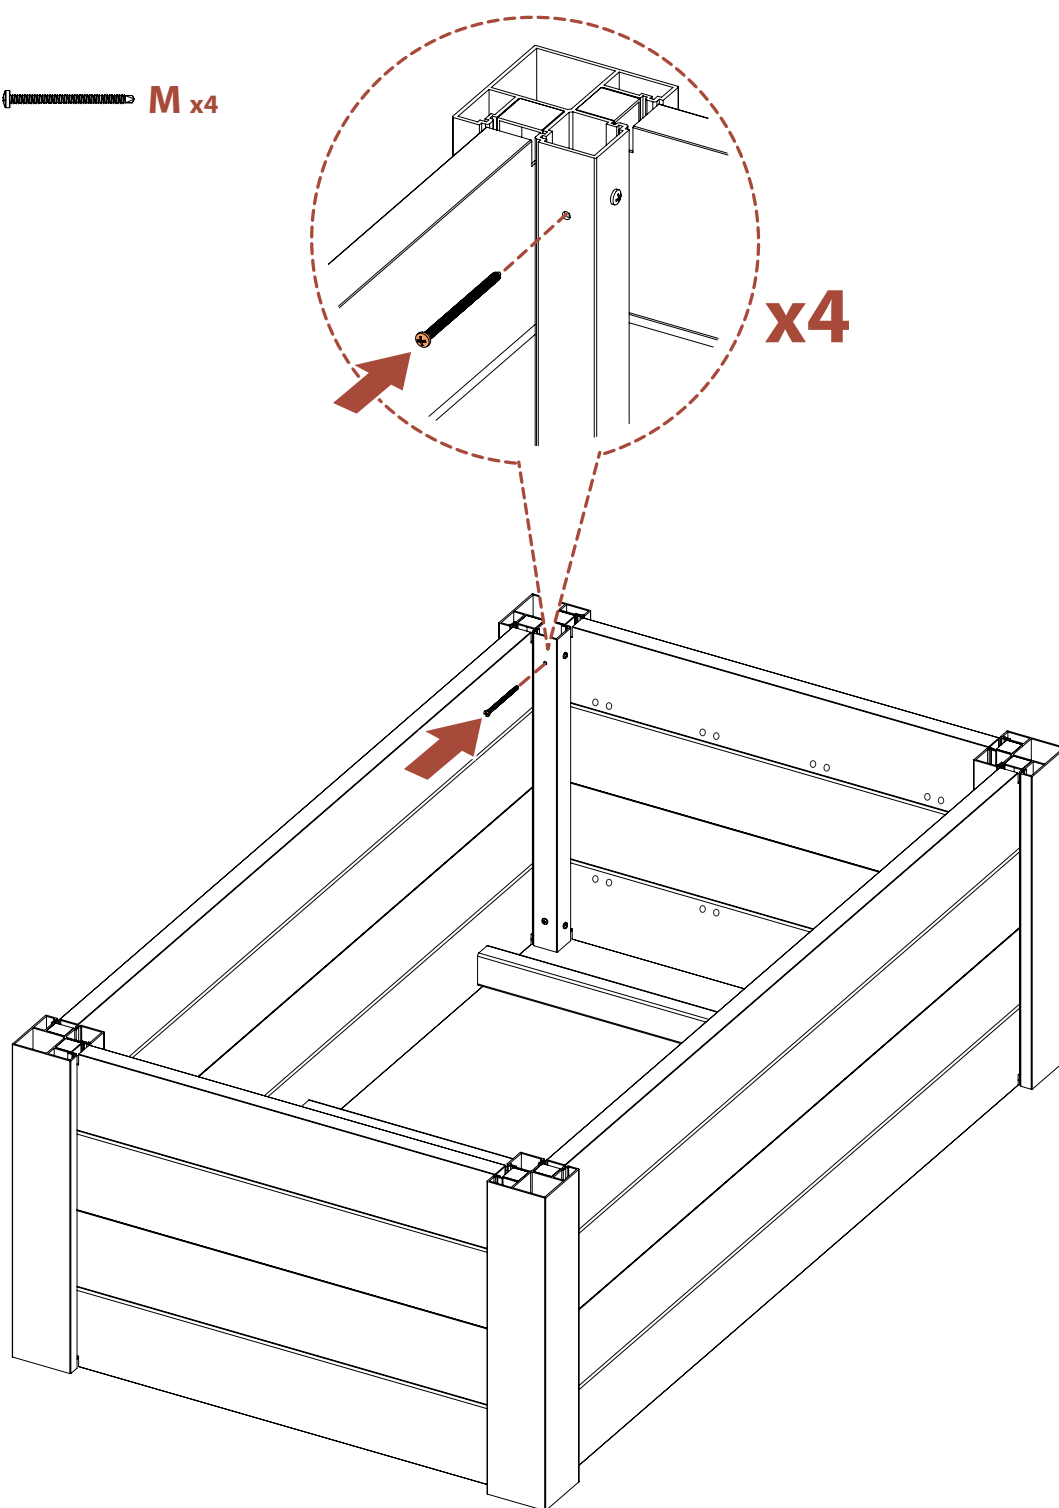

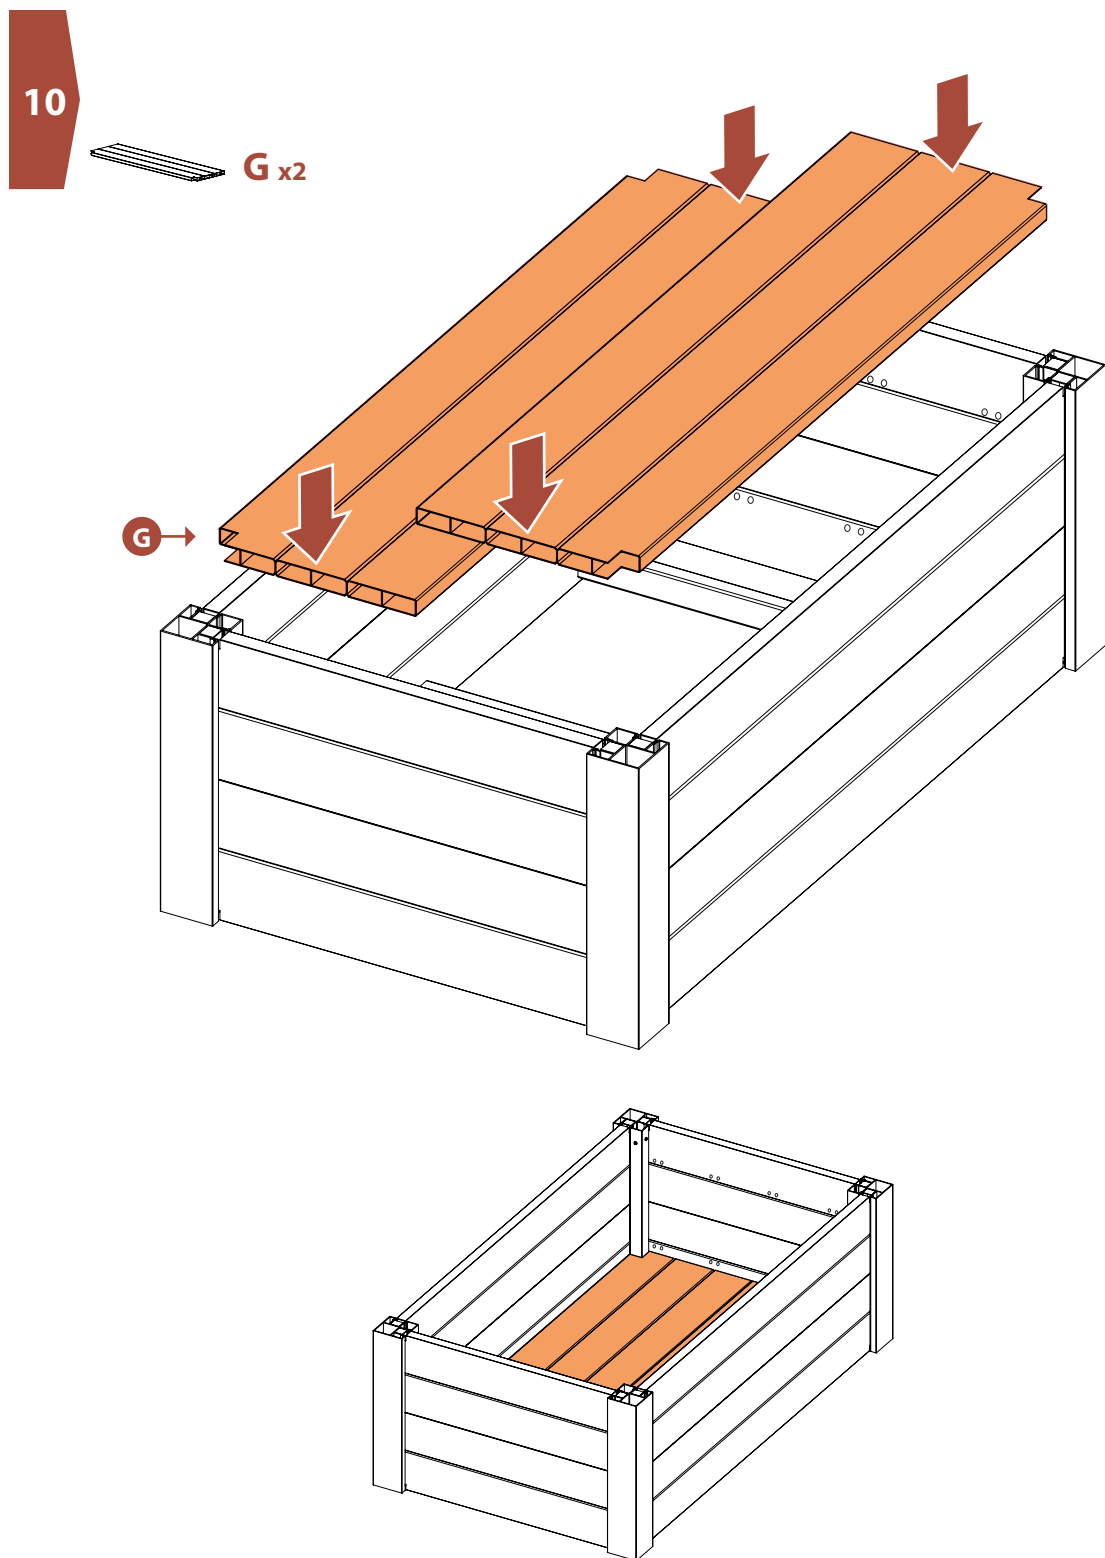


11

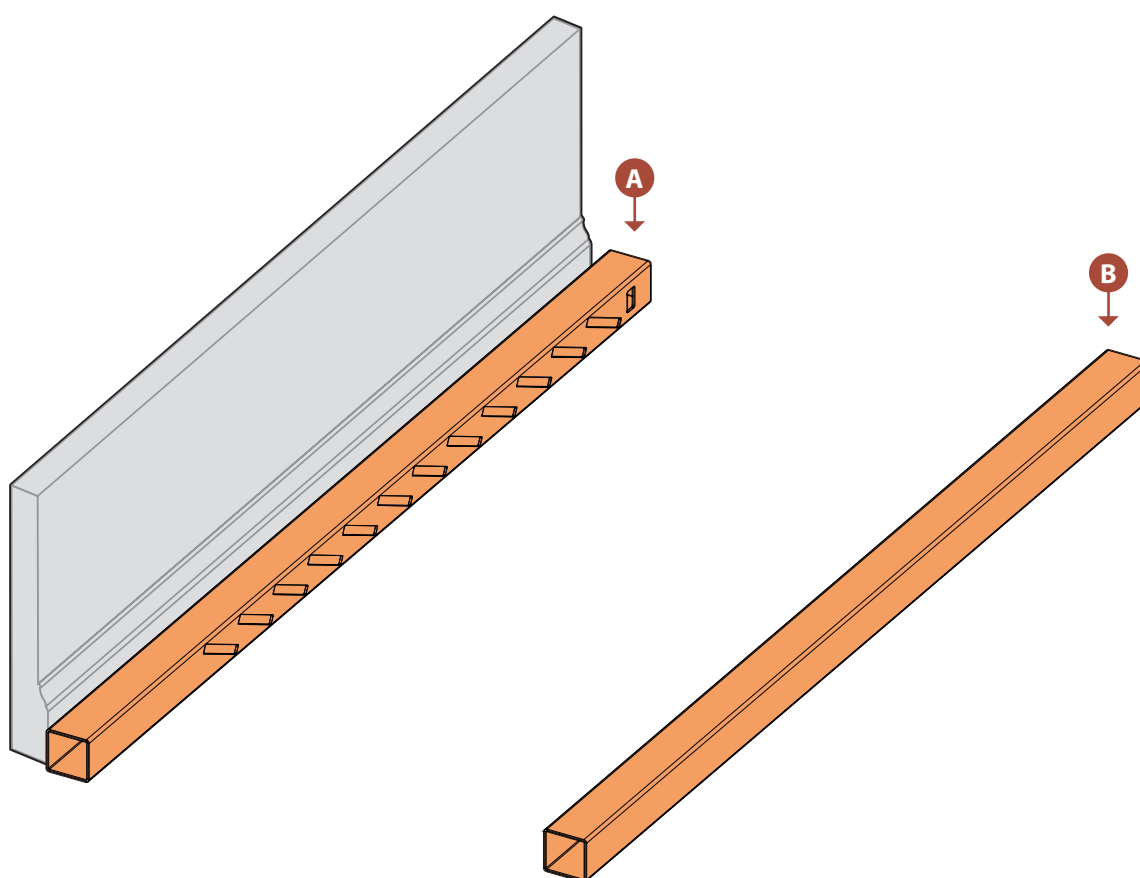

12

C x12



D x1

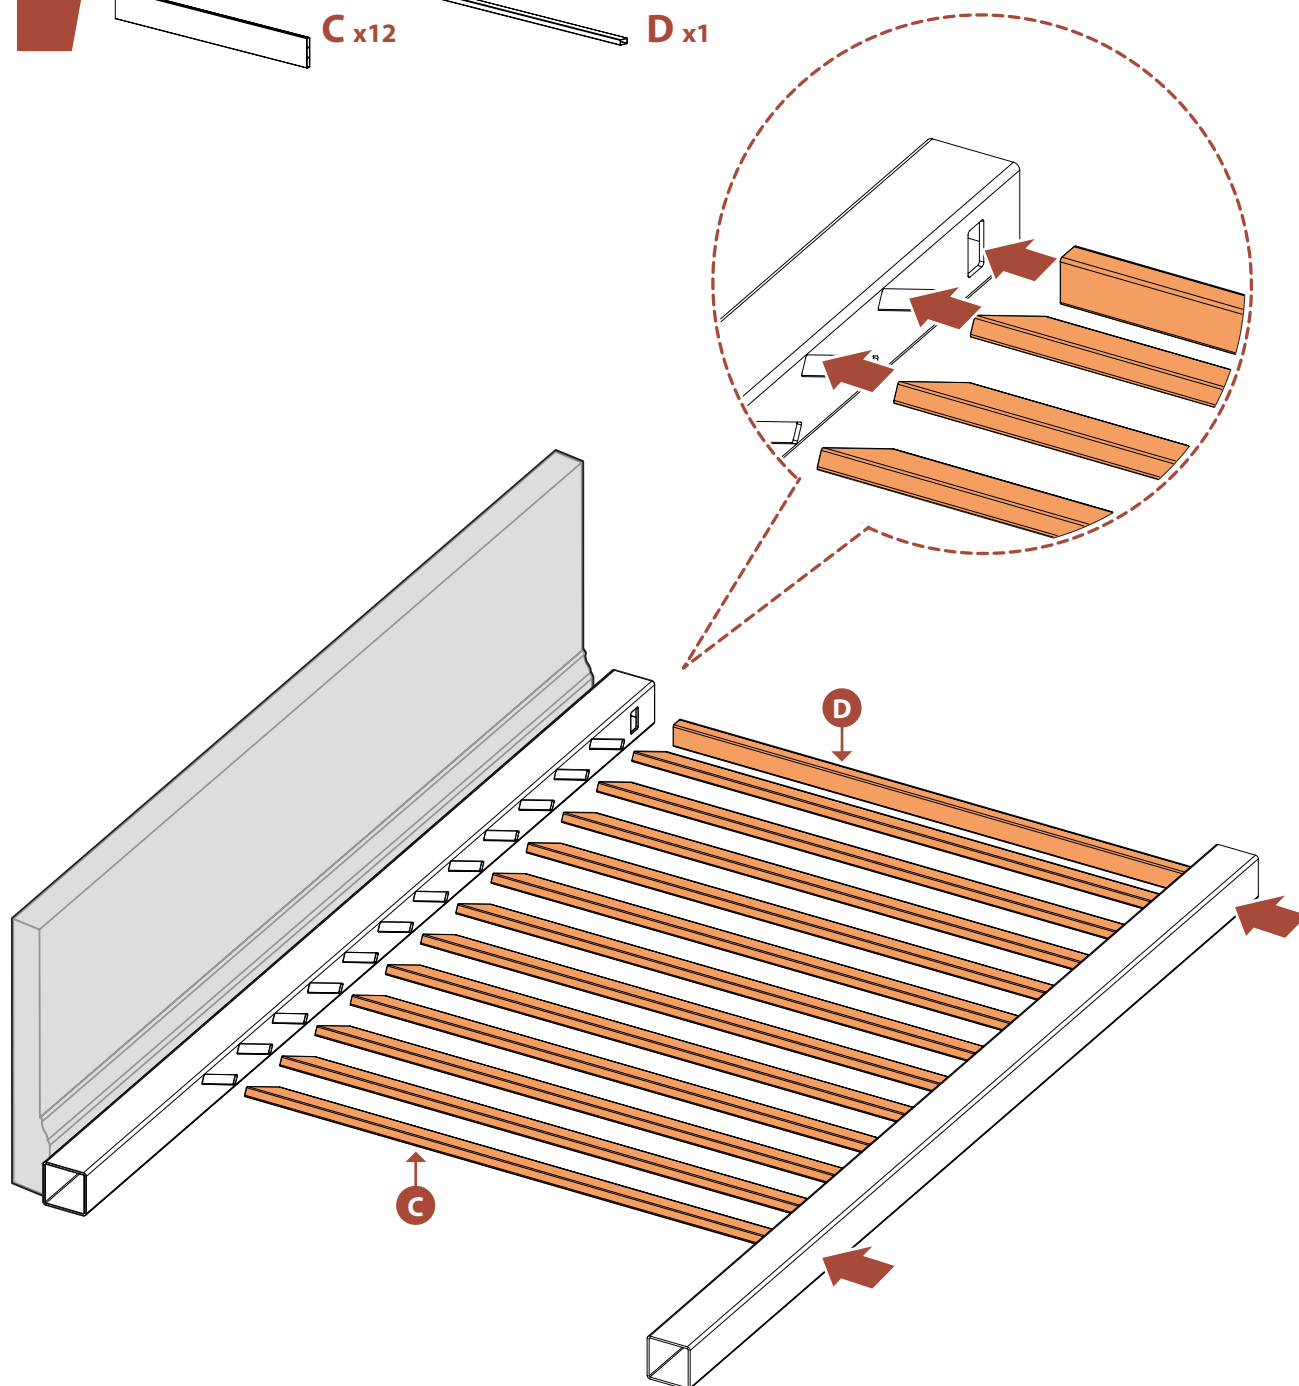


13

 **M x6**


Flip Panel

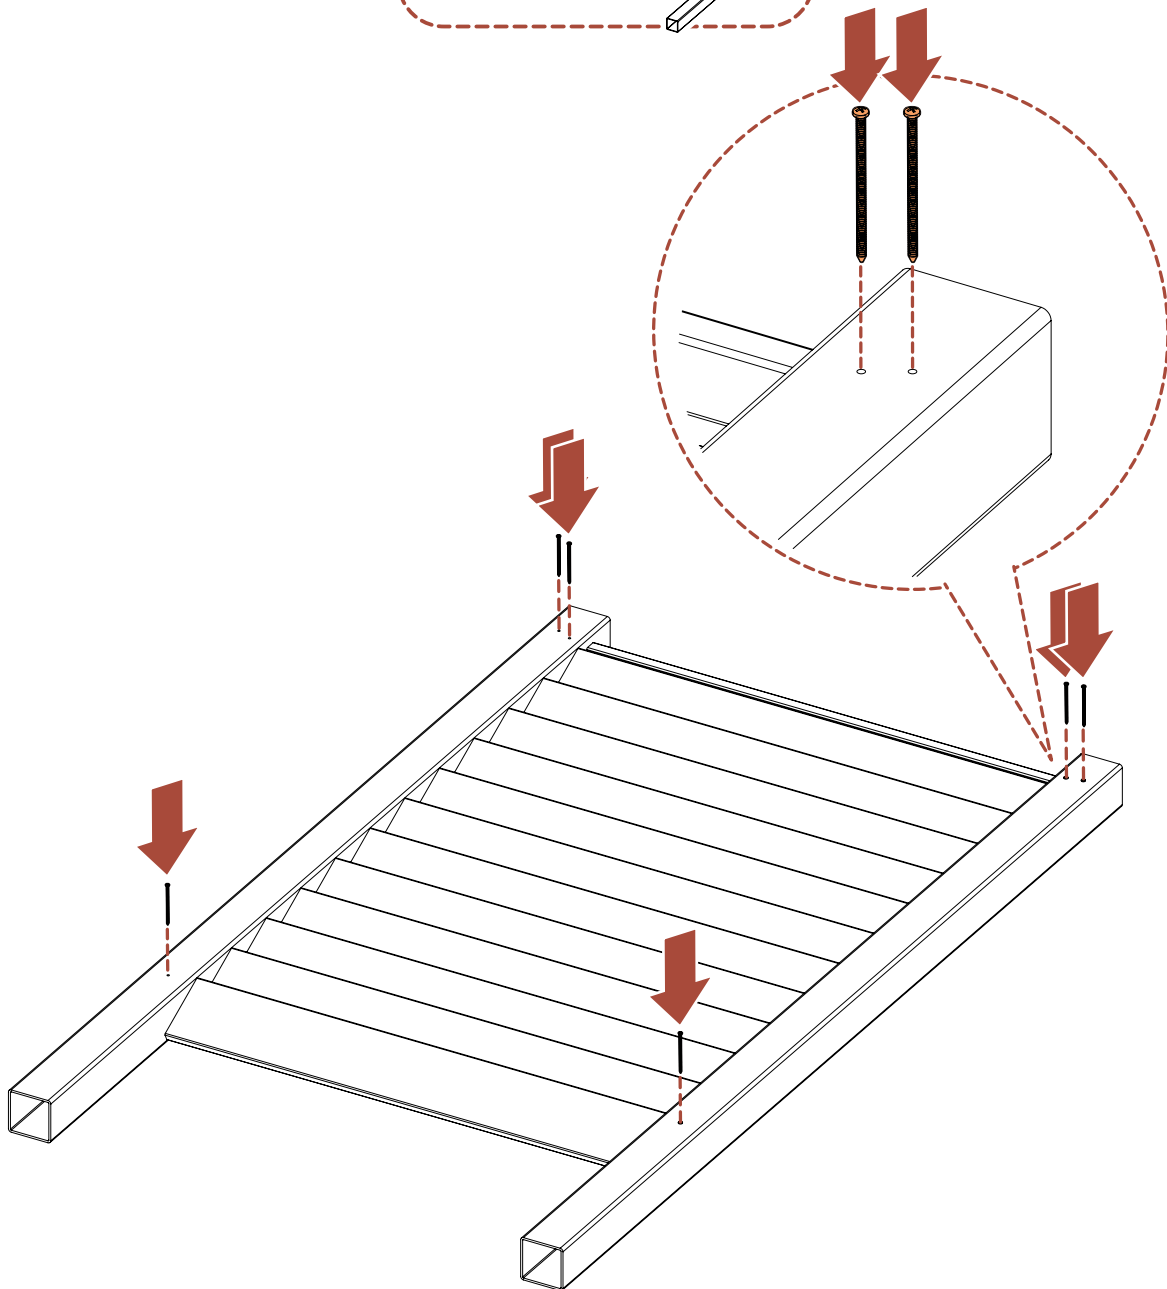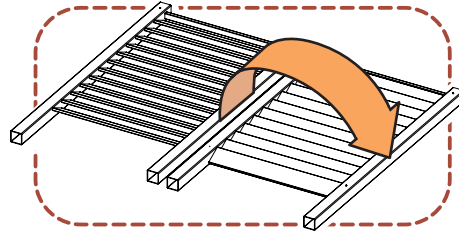


14



K x2

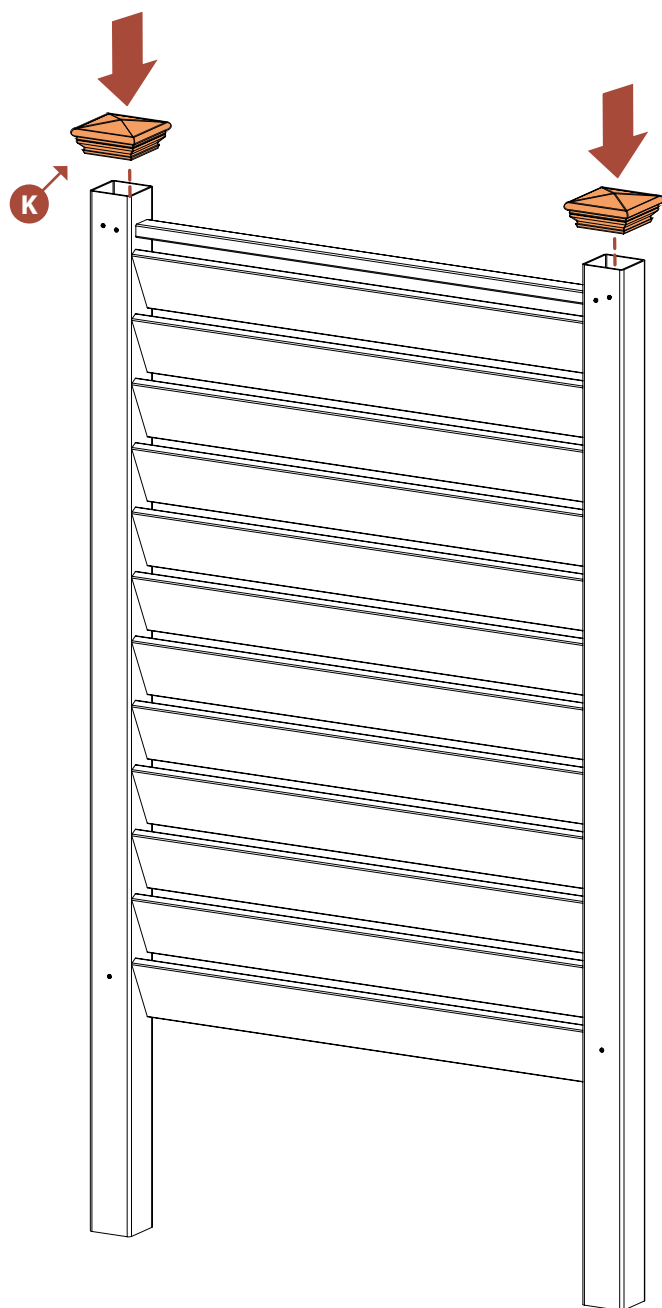


15

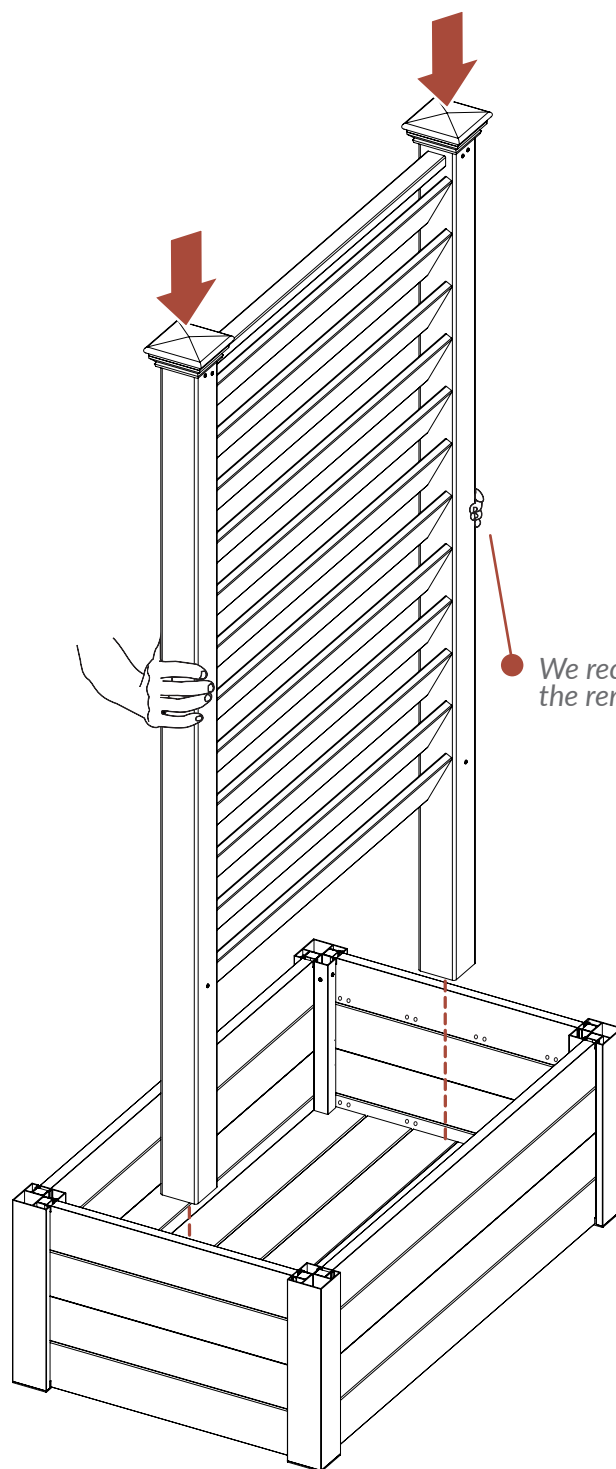


We recommend two people for the remaining steps.

16a

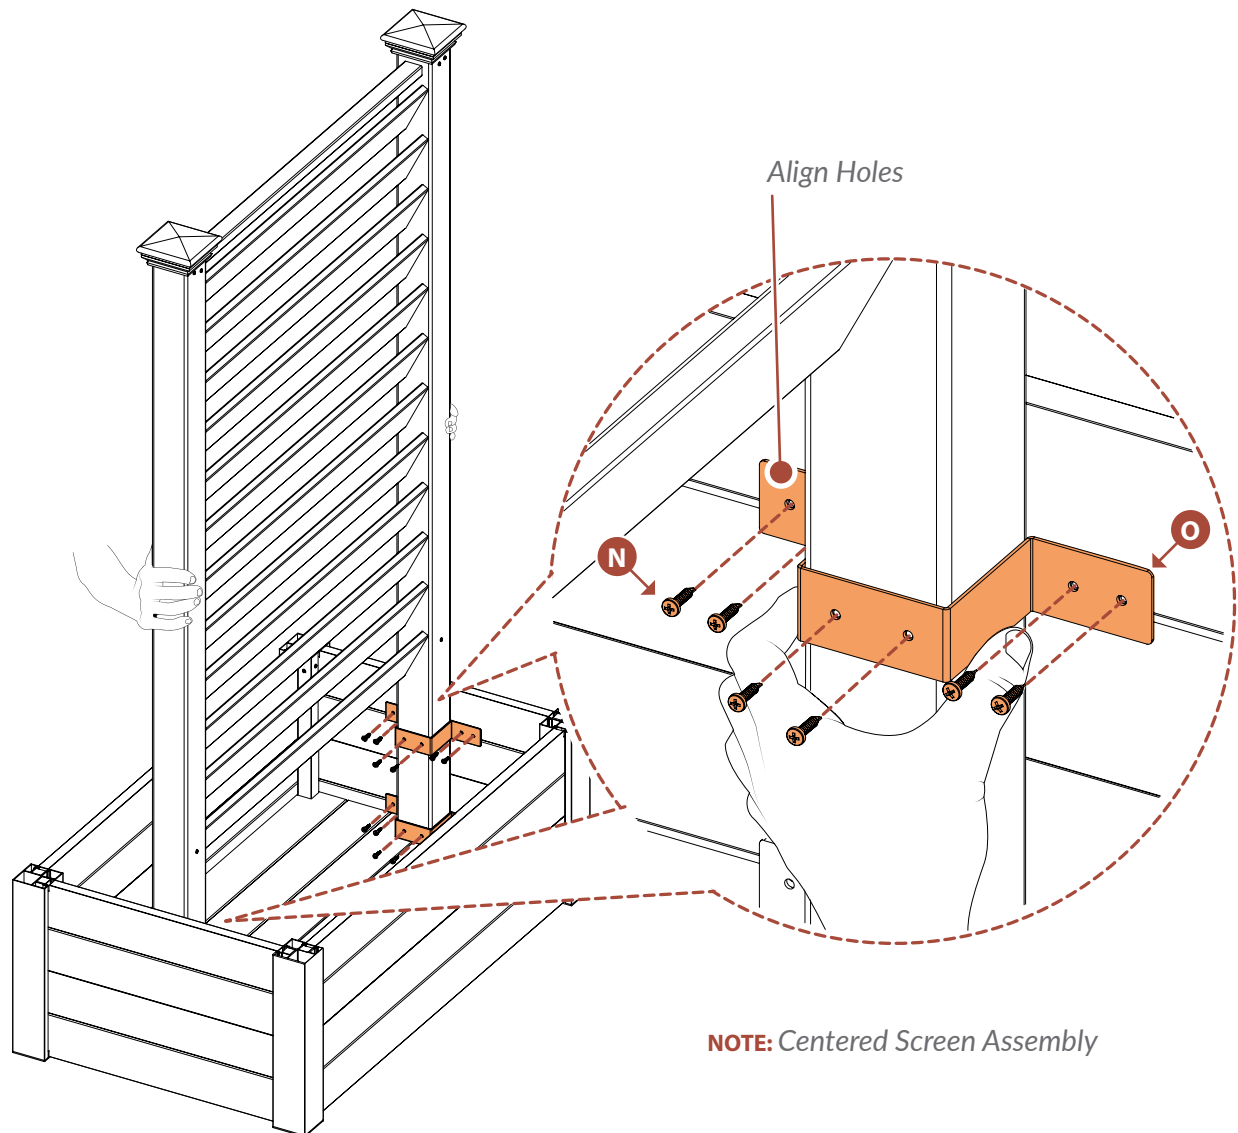


16b

 **N x18**

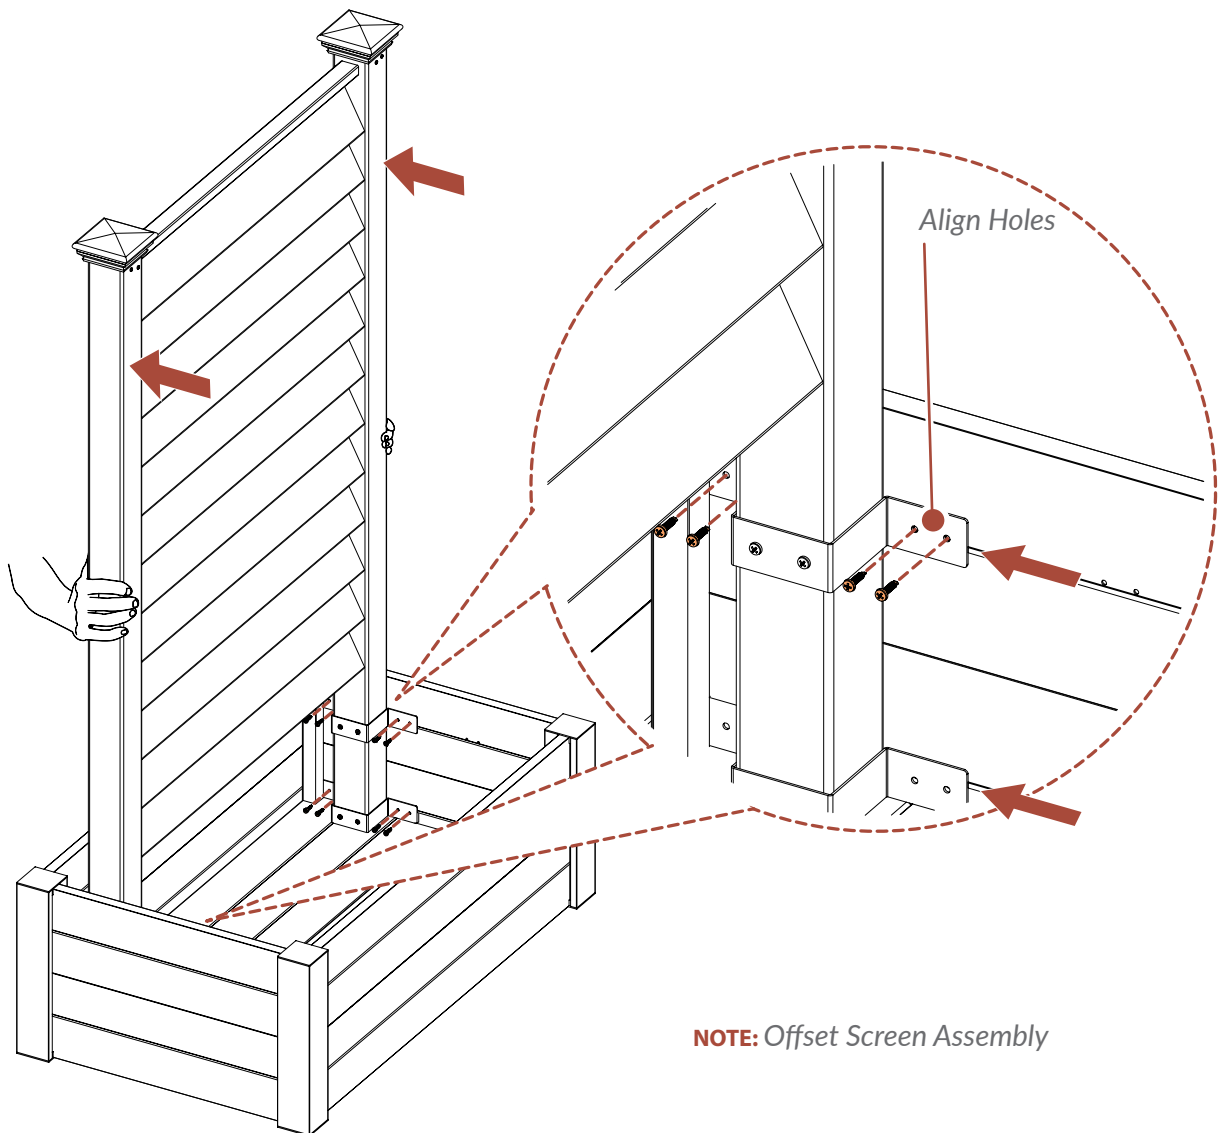


NOTE: Offset Screen Assembly

17



L x4

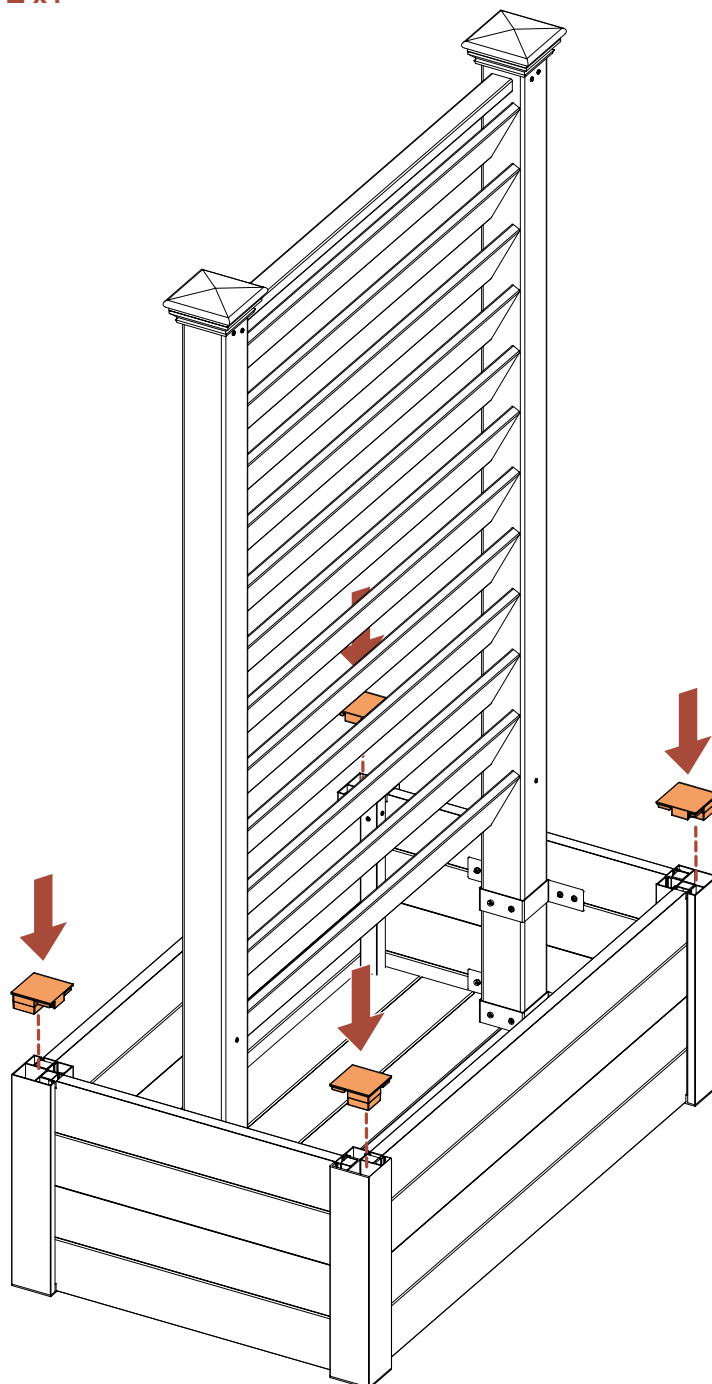



HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



ASSEMBLY
INSTRUCTIONS
EC18039