



ASSEMBLY INSTRUCTIONS
















FULL BED WITH BOOKCASE (PB) & TRUNDLE

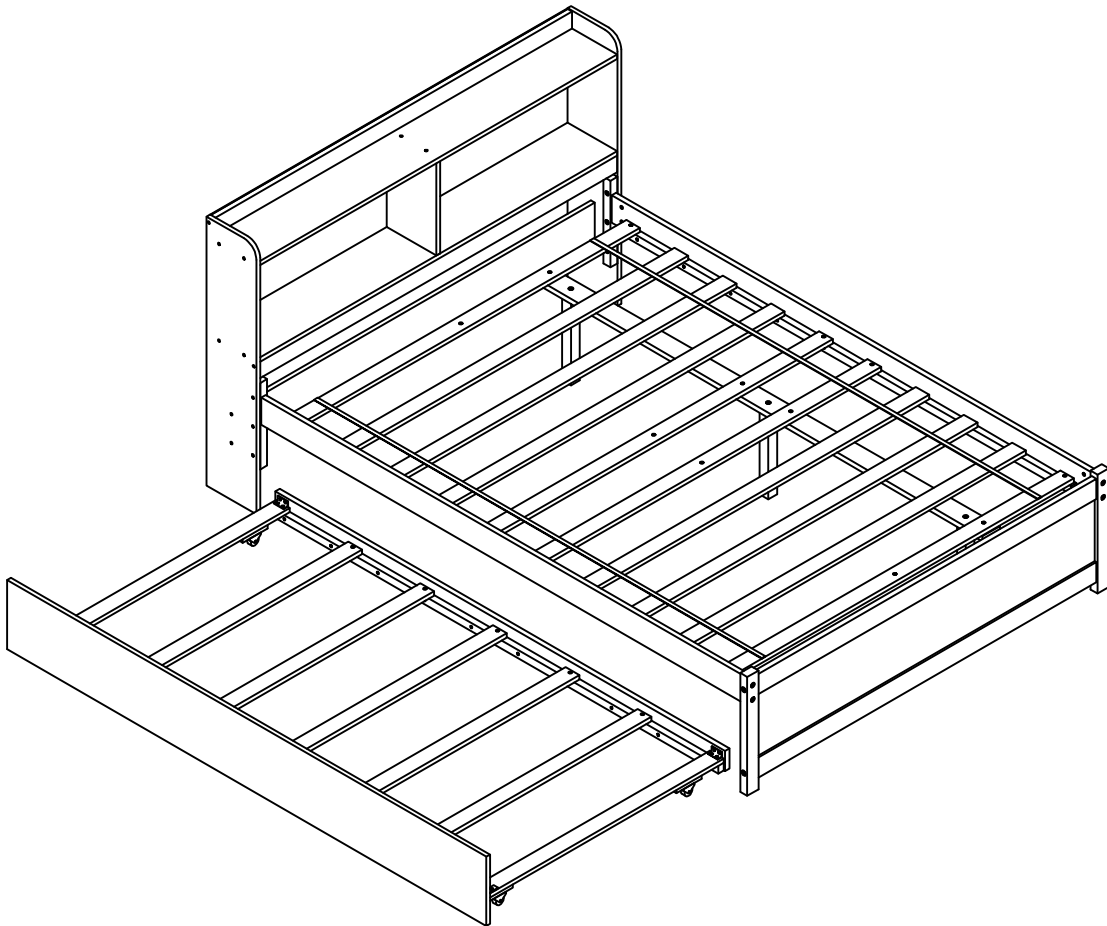







Detail View

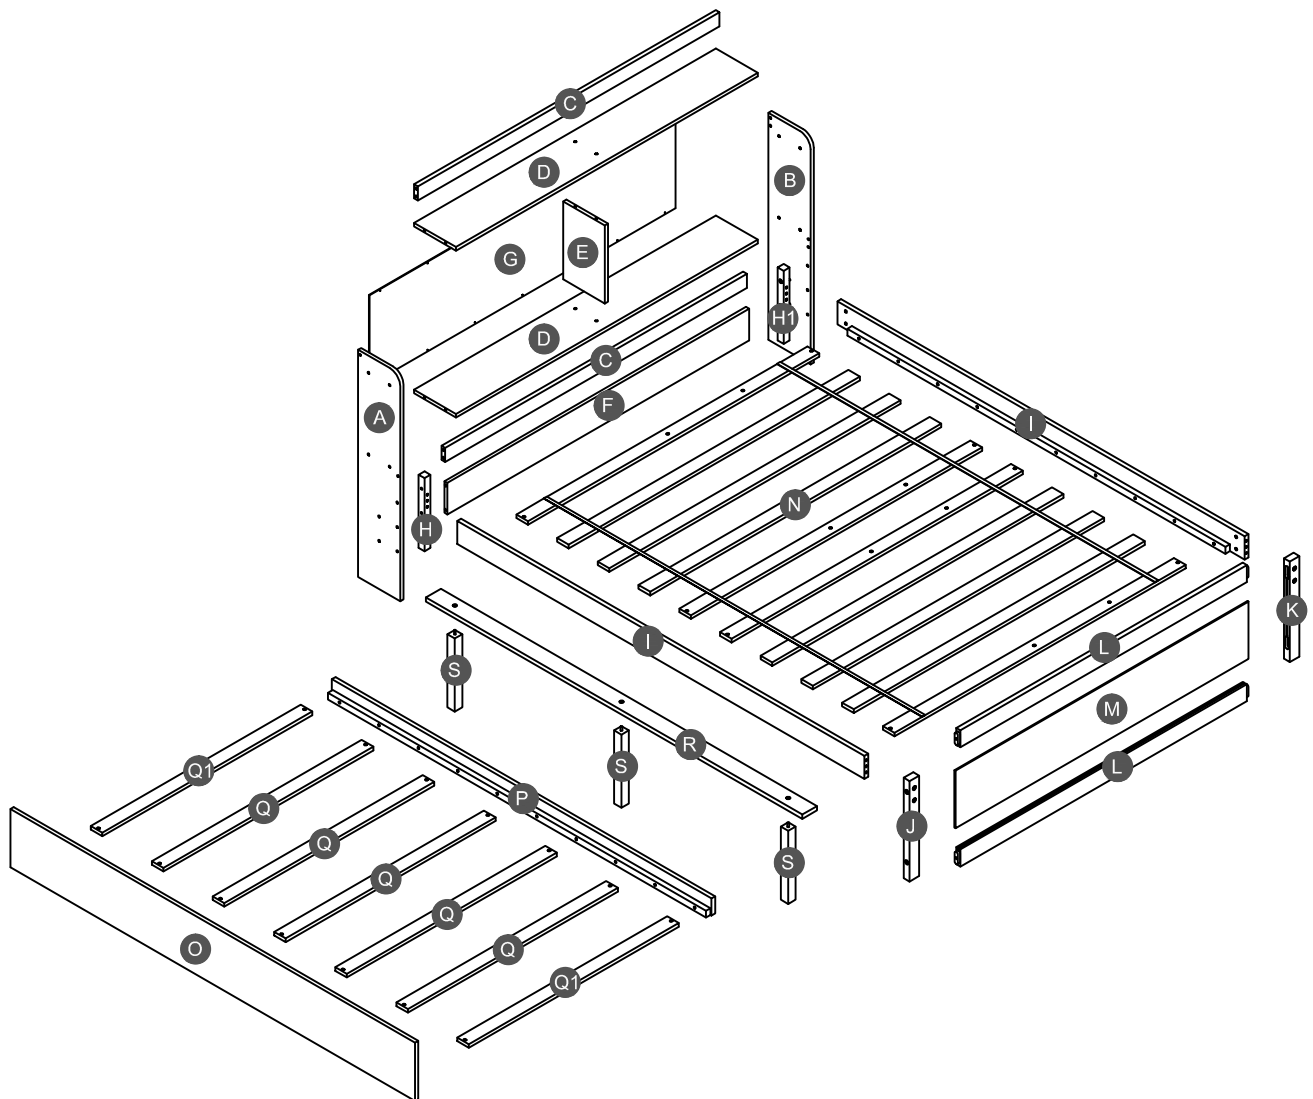


Part List

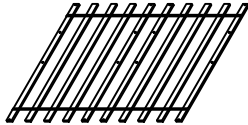A  Panel (left) - 1pc	B  Panel (right) - 1pc	C  HB horizontal - 2pcs
D  Top - Shelf panel - 2pcs	E  Middle panel- 1pc	F  Crossbar-1pc
G  Back panel - 1pc	H  Vertical bar HB (left) - 1pc	H1  Vertical bar HB (right) - 1pc
I  Side rail - 2pcs	J  Leg FB (left) - 1pc	K  Leg FB (right) - 1pc
L  FB horizontal bar - 2pcs	M  Side panel FB - 1pc	N  Slats - (Set = 10pcs)
O  Front panel of Trundle - 1pc	P  Back panel side rail of Trundle -1pc	Q  Slats - 5pcs
Q1  Slats - 2pcs	R  Lower support slat - 1pc	S  Leg support - 3pcs

Hardware List

1	 Ø8*30mm Wood dowel (8pcs)	2	 (Ø15)1/4"*80mm Hex-Head bolts (12pcs)	3	 (Ø12)1/4"*60mm Hex-Head bolts (20pcs)
4	 (Ø12)1/4"*40mm Hex-Head bolts (6pcs)	5	 1/4"*15 (9.5mm) Horizontal-Hole bolts (32pcs)	6	 (1/4")4.5*58mm Allen key (1pc)
7	 Ø4*30mm Wood screws (34pcs)	8	 100*63*20mm Wheels (4pcs)	9	 Ø3.5*15mm Wood screws (14pcs)
10	 Ø3.5*15mm Wood screws (16pcs)	11	 95*95*18*3mm Metal bracket (2pcs)	12	 40*18*18*2mm Metal bracket (2pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

4



6PCS

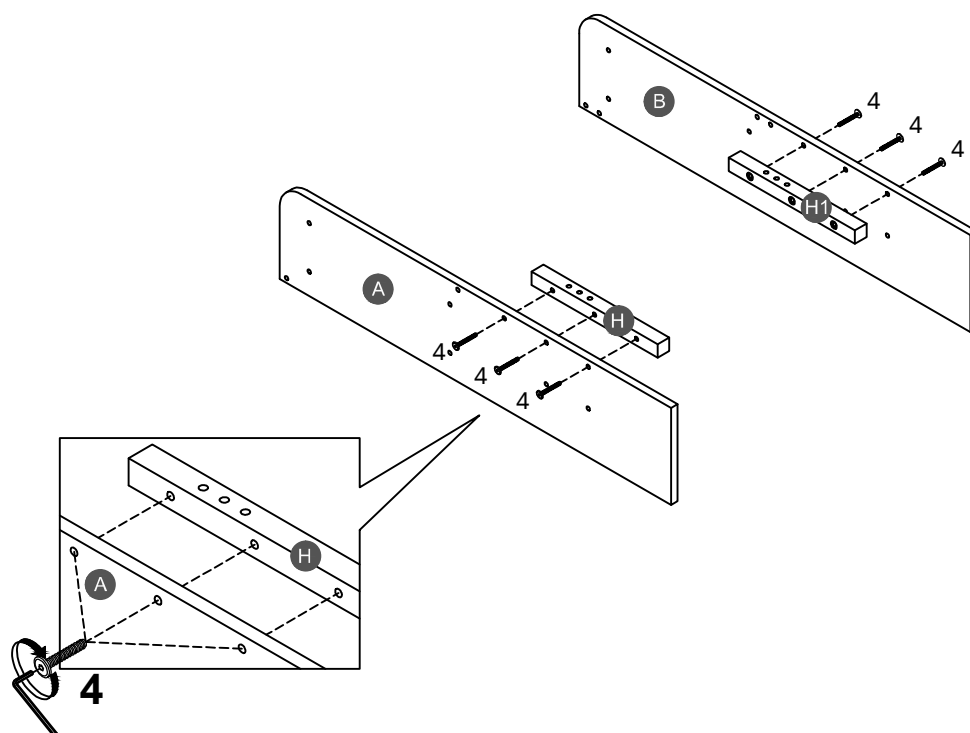

STEP 2:

3




4PCS

5




4PCS

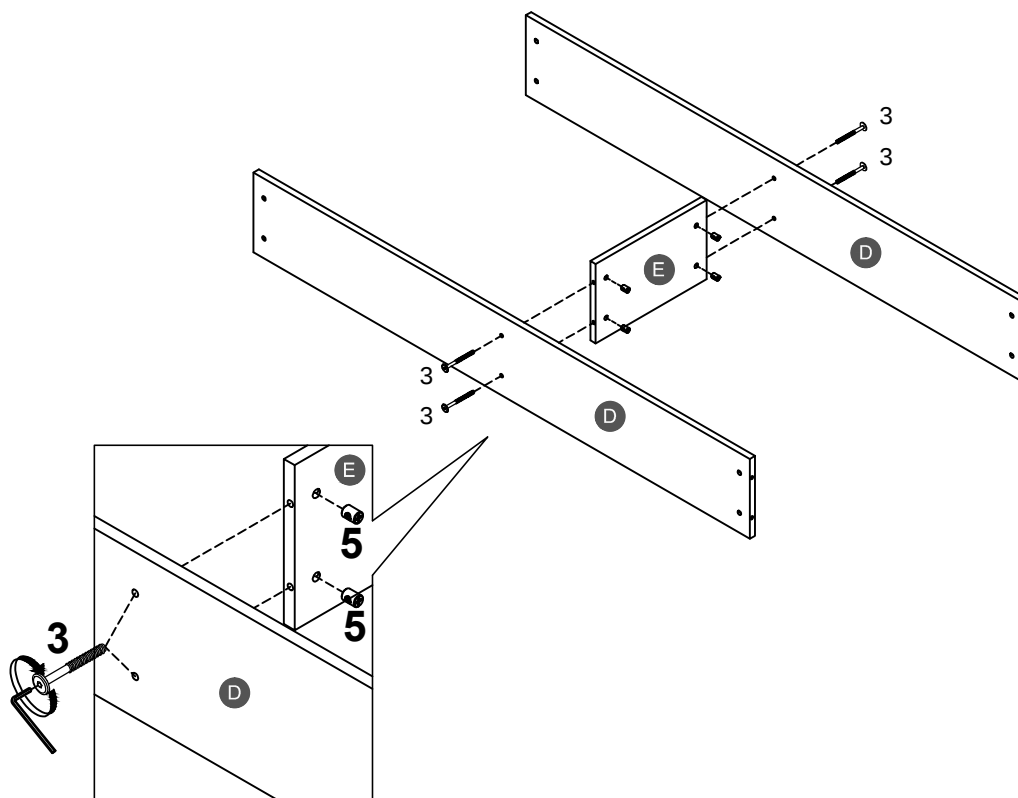

STEP 3:

1	3	5
		
4PCS	16PCS	16PCS

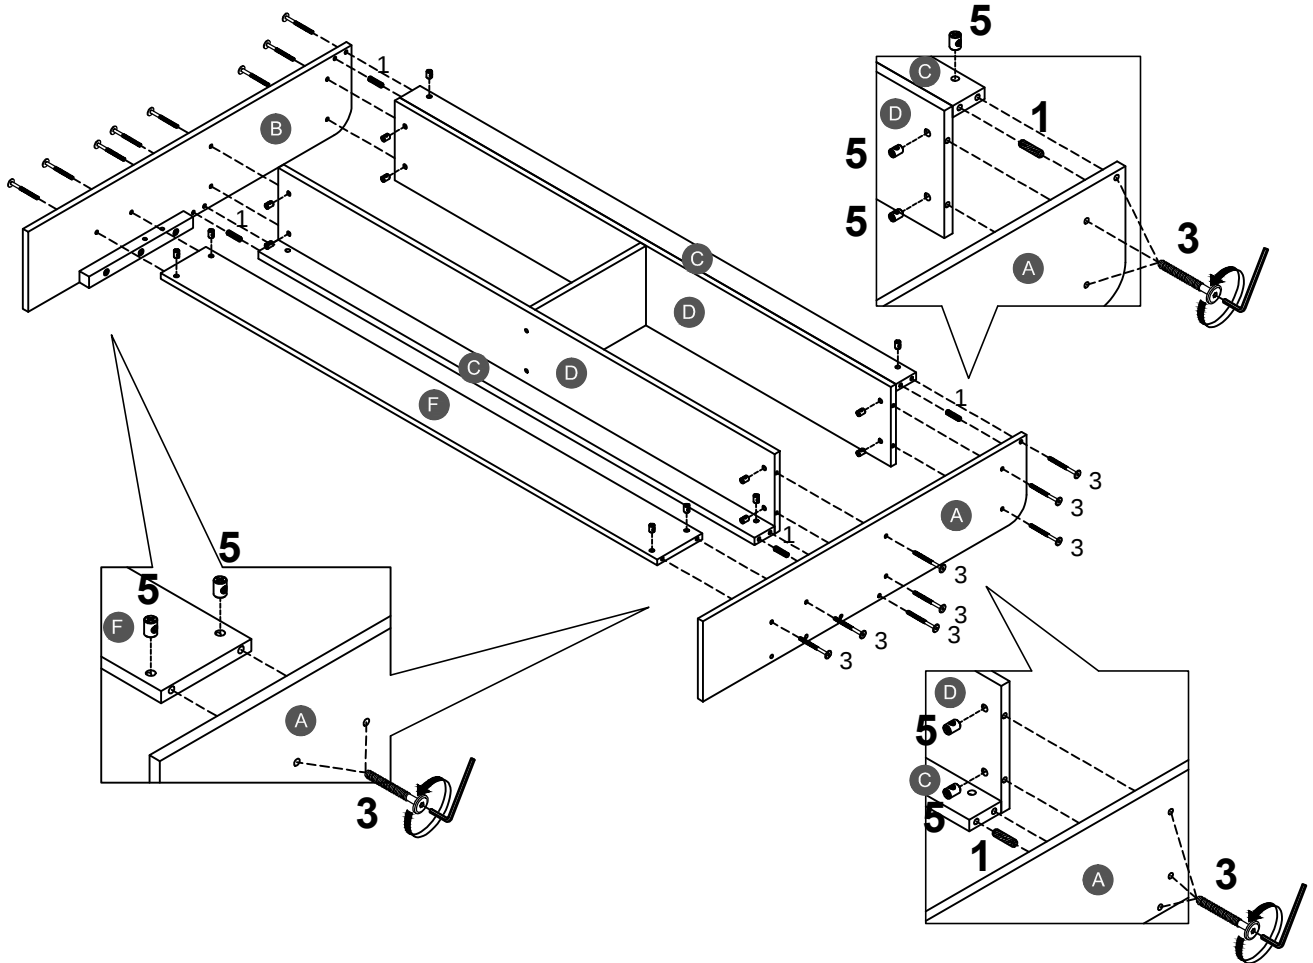


STEP 4:


9



14PCS

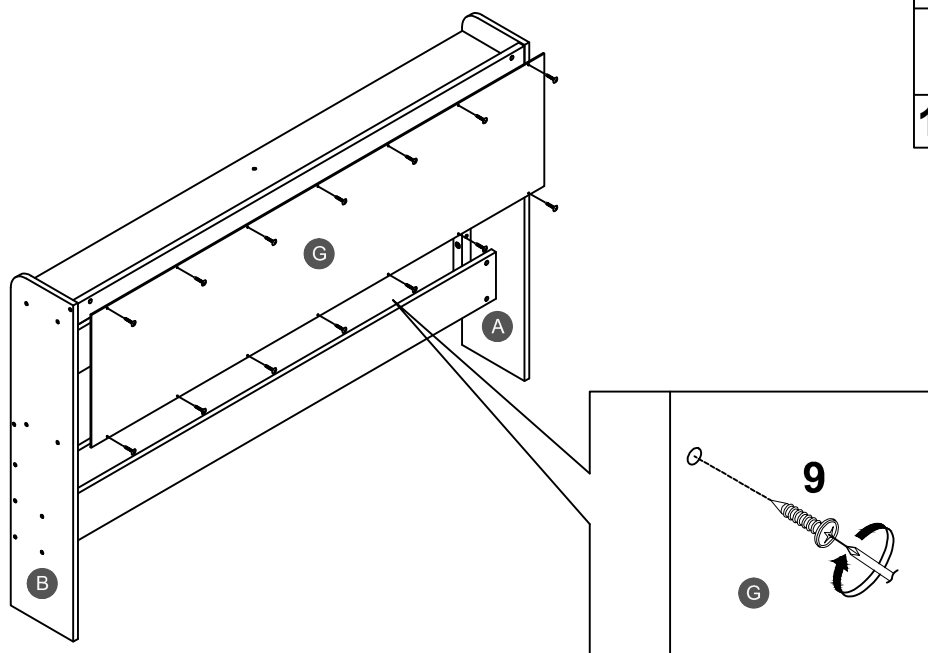


STEP 5:

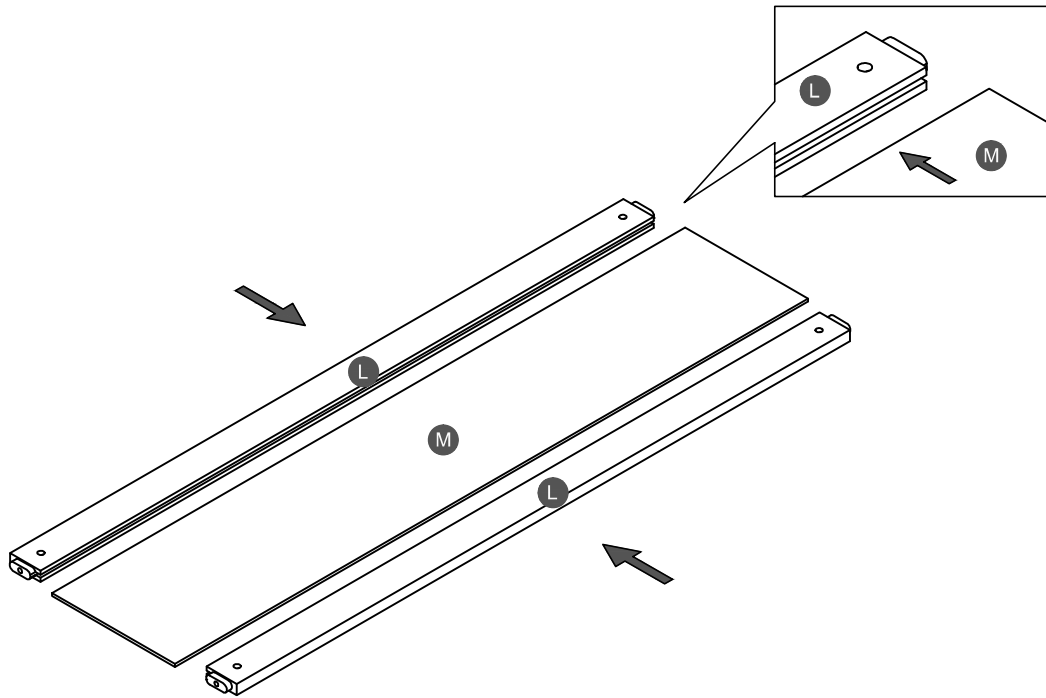


STEP 6:


2		5	
4PCS		4PCS	

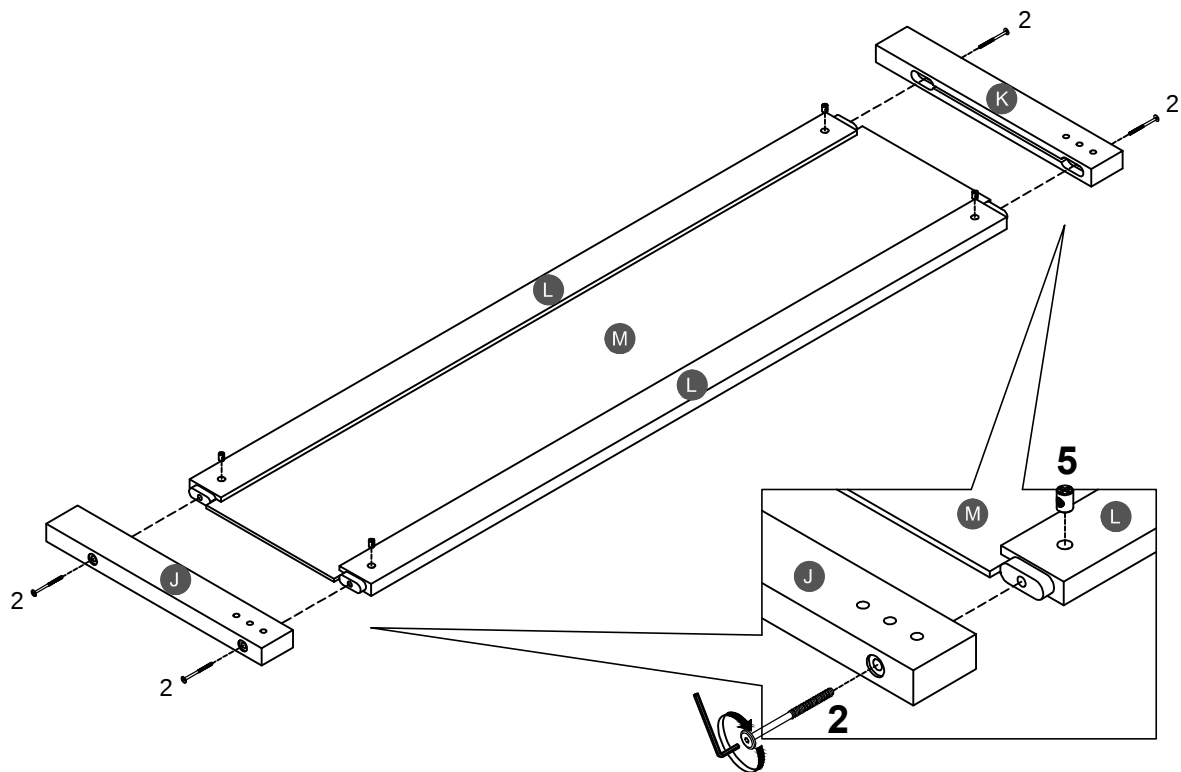

STEP 7:

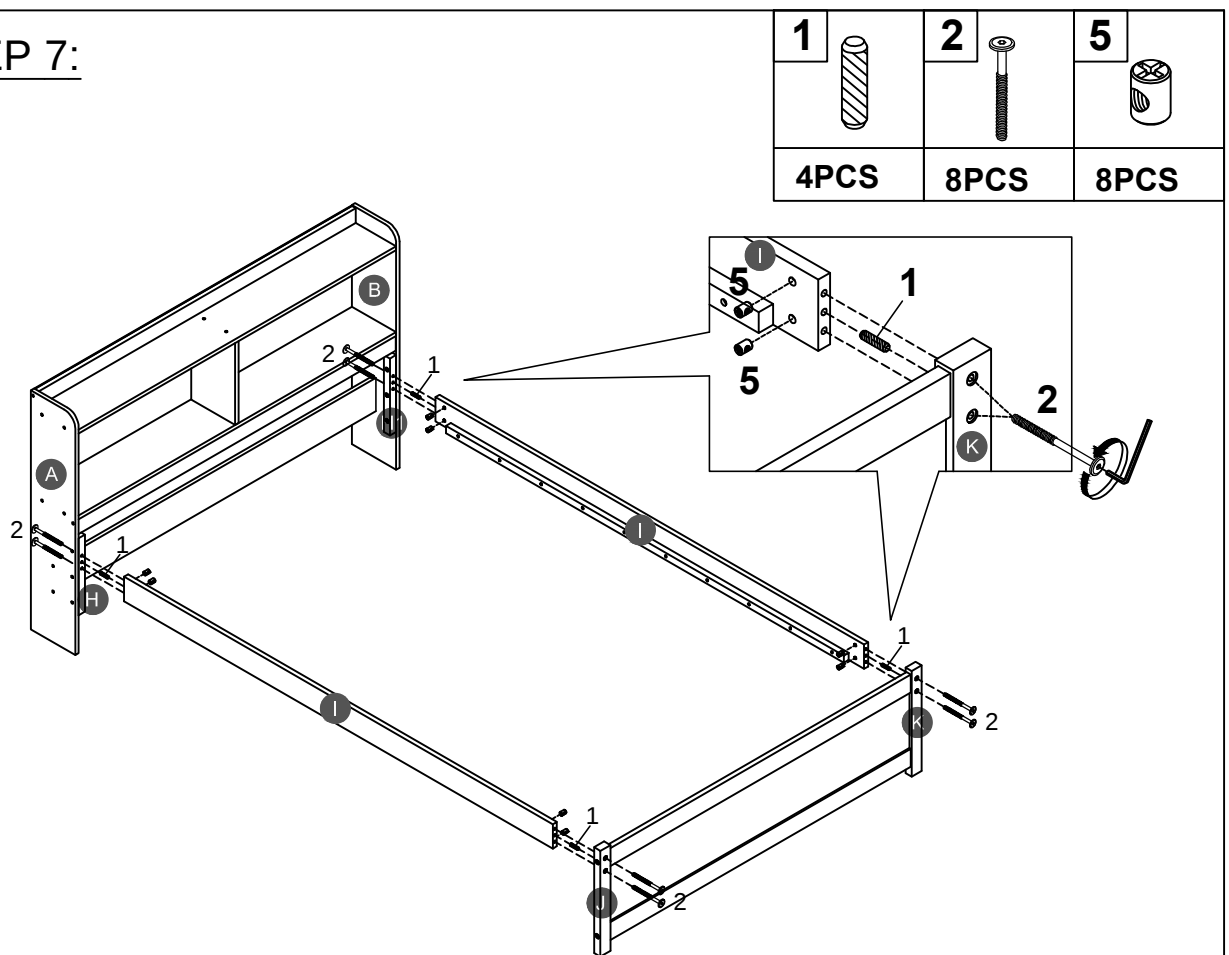


STEP 8:

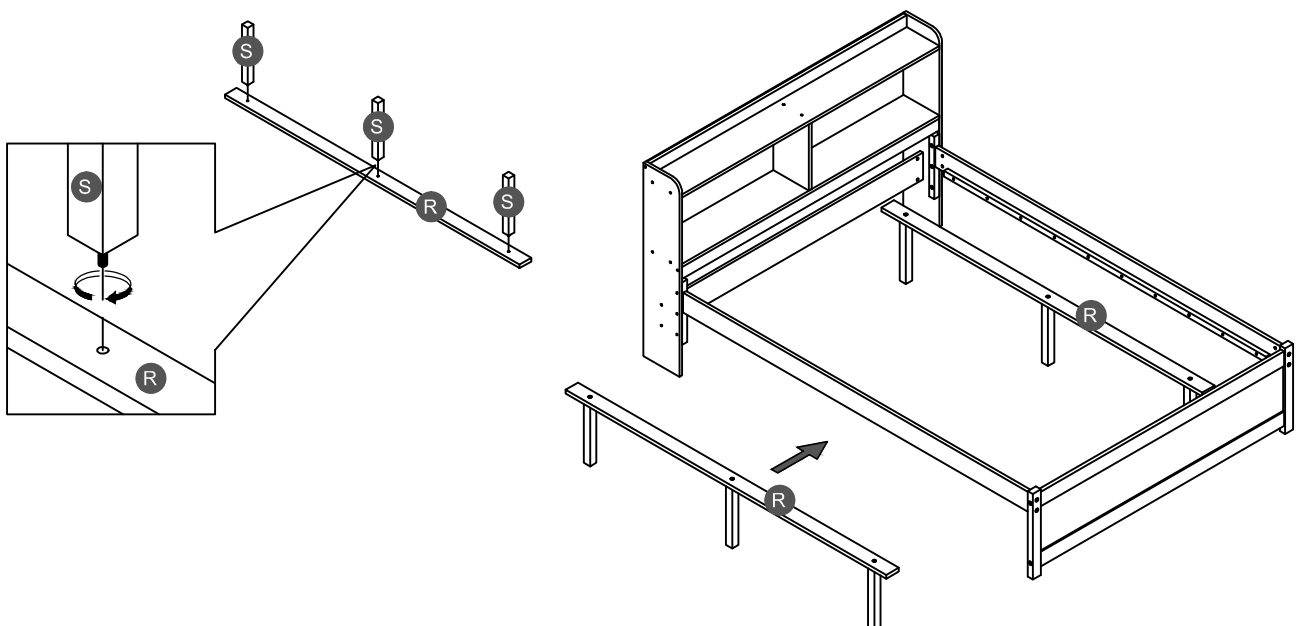


Assembling leg support (S) with lower support slat (R) later rotate, Move support slat inside Full bunkbed.

STEP 9:

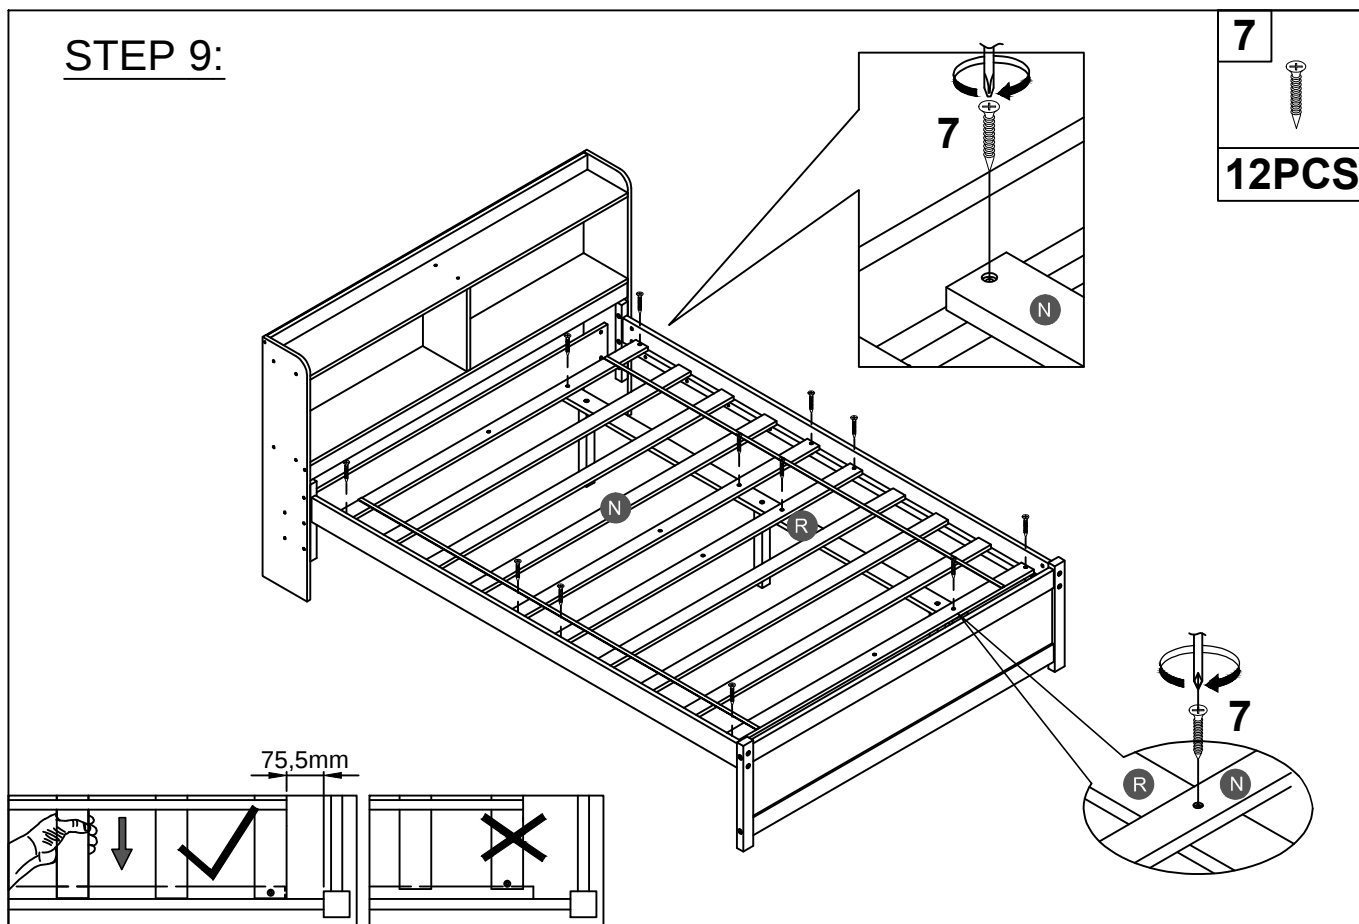

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 10:




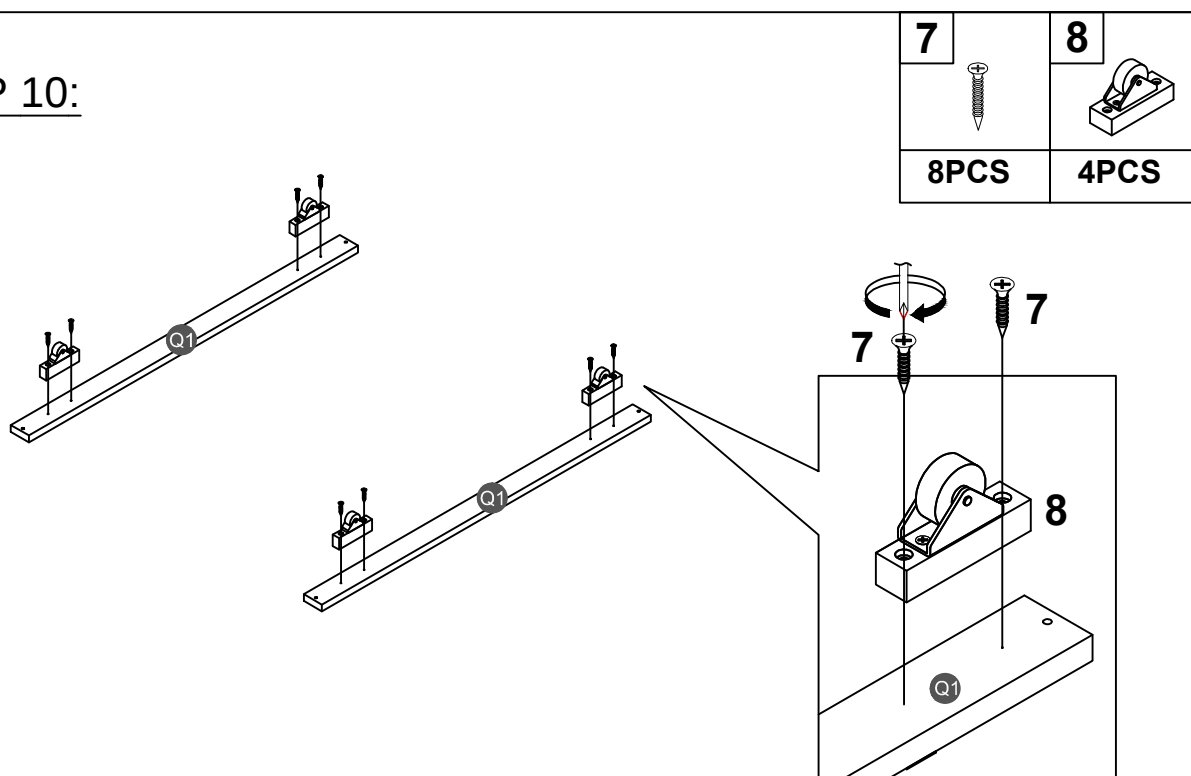


STEP 11:

7



14PCS

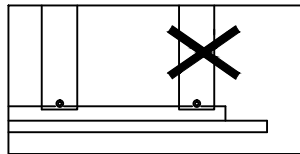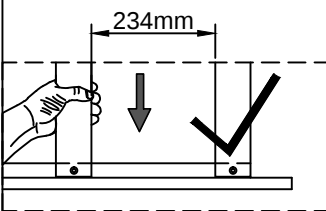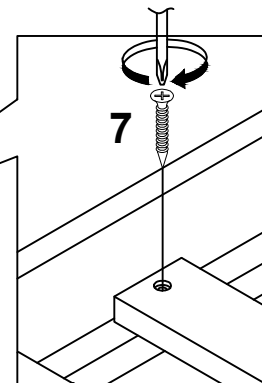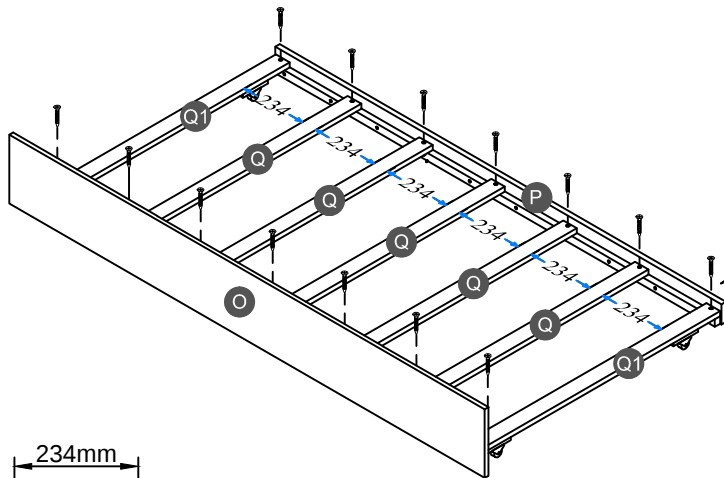

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 12:

10





8PCS


11



2PCS

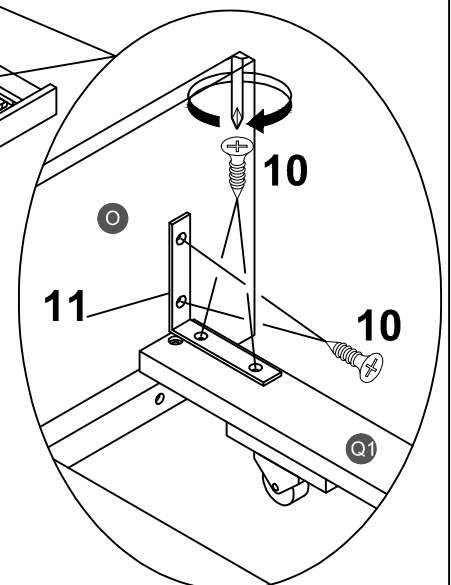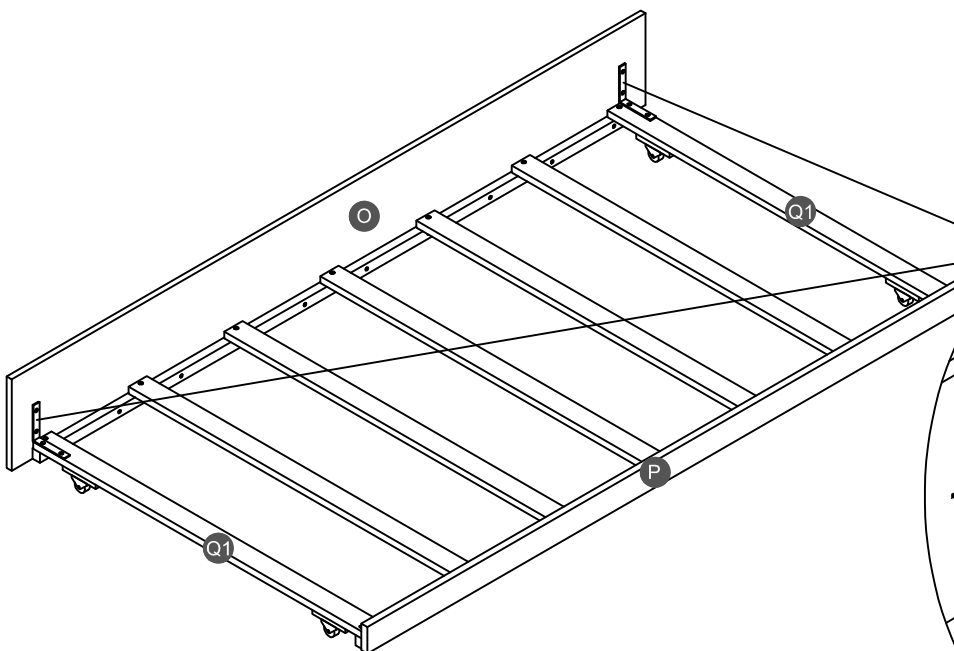


STEP 13:

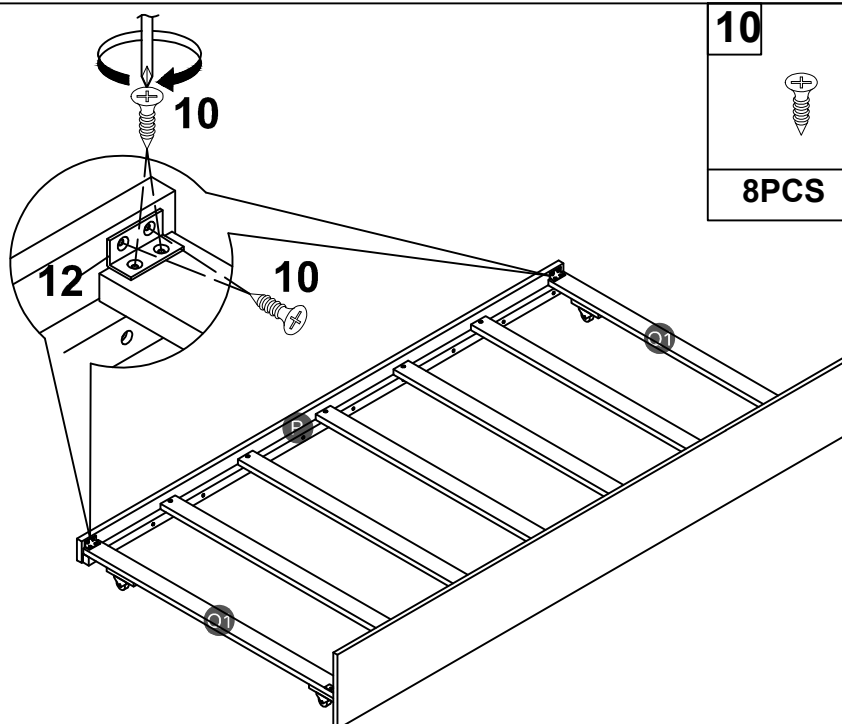

10	12
	
8PCS	2PCS

STEP 14:

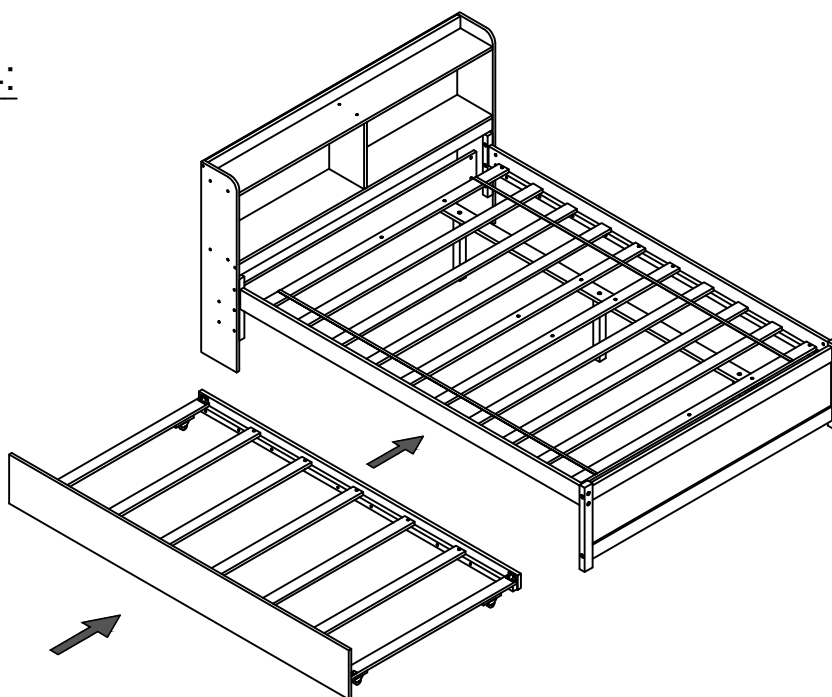

Push Trundle and Drawer under the bottom of Bunkbed.

