

FNZ24FCWT2553

FNZ24FCDS2554

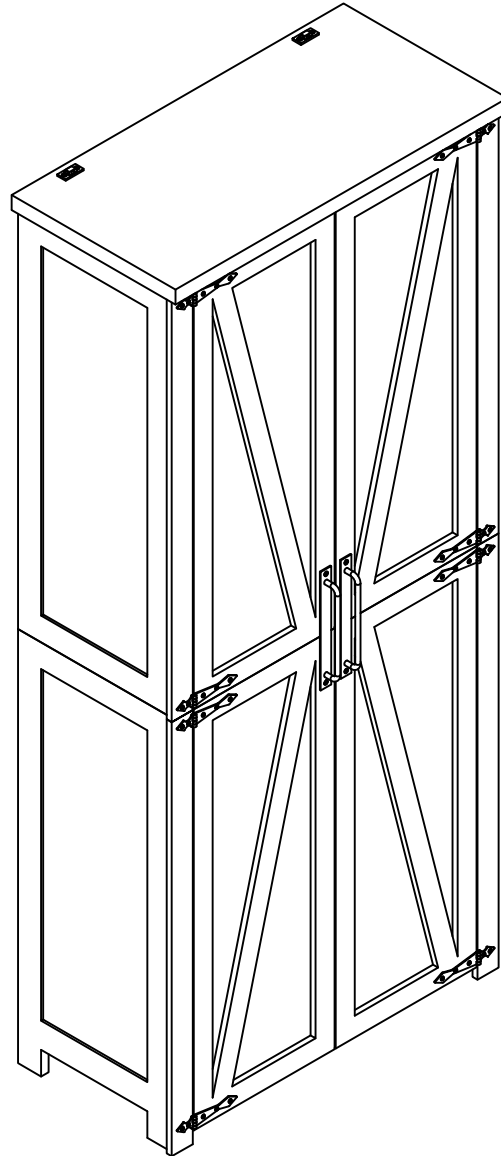


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

Our professional after-sales team will serve you online all day.

MADE IN CHINA

Before You Start

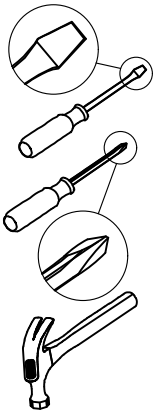


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

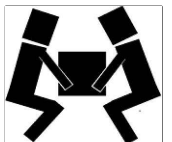


Board Identification

Not actual size

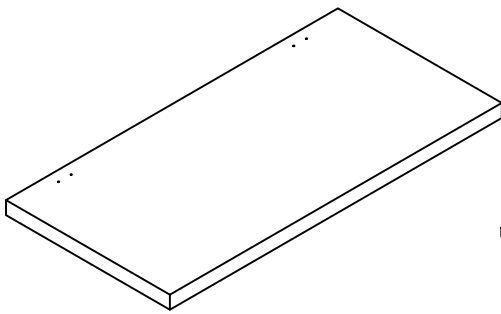


Ⓐ

Qty:1

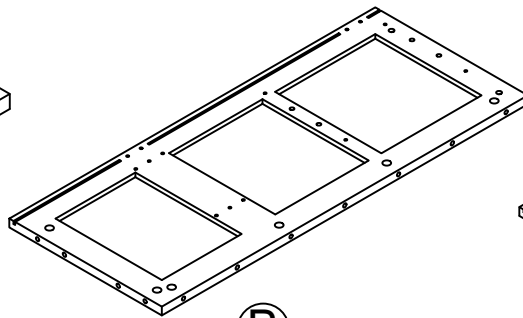


Ⓑ

Qty:1

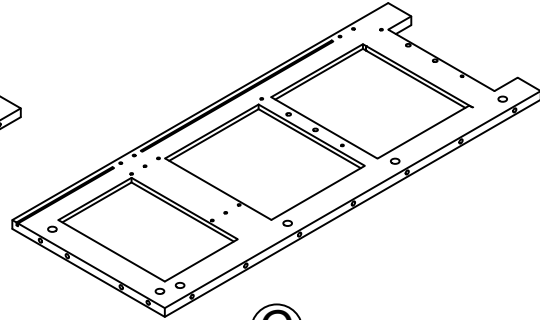


Ⓒ

Qty:1

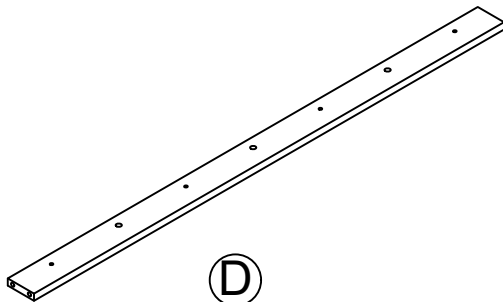


Ⓓ

Qty:1

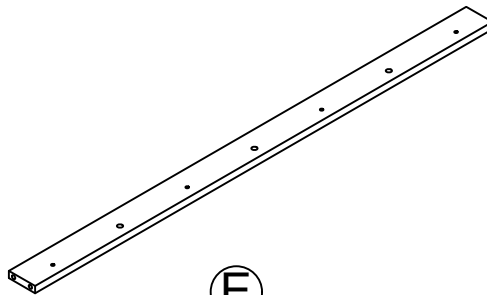


Ⓔ

Qty:1

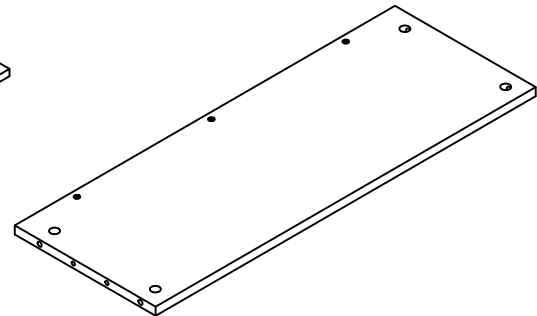


Ⓕ

Qty:1

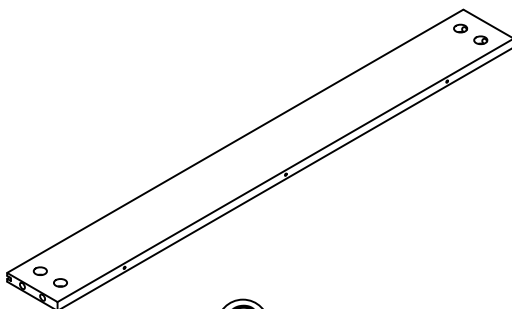


Ⓖ

Qty:1

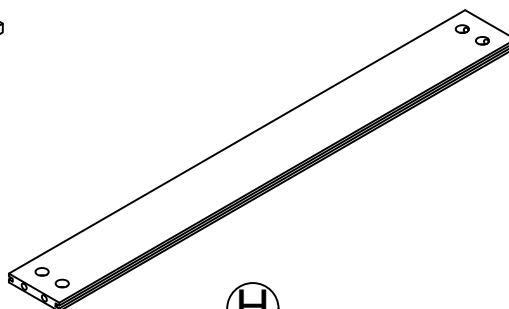

Ⓗ

Qty:3

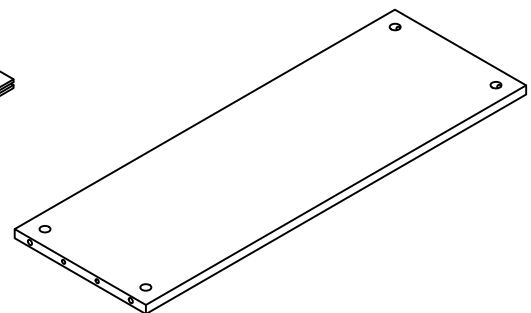


Ⓘ

Qty:3


Board Identification

Not actual size

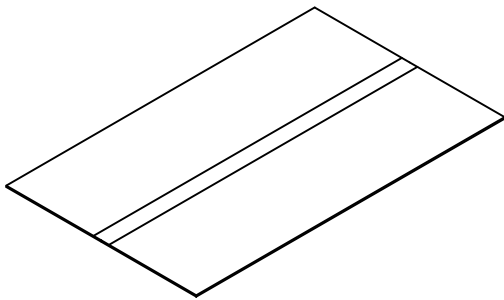


ⓐ

Qty:2

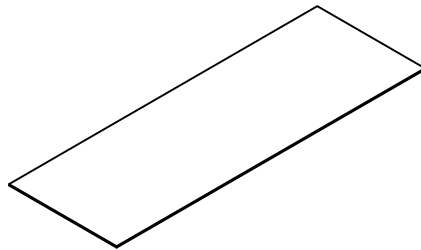


ⓑ

Qty:2

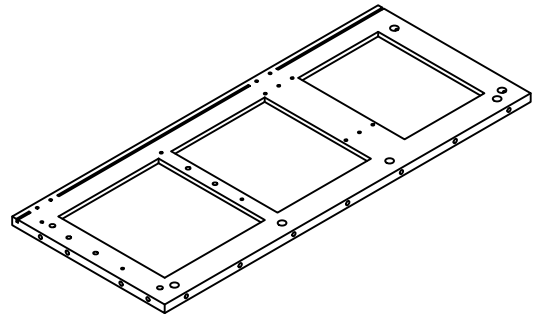


ⓒ

Qty:1

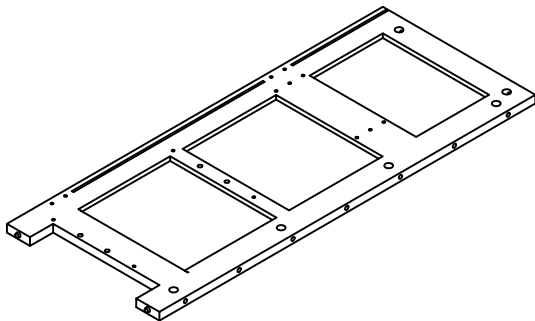


ⓓ

Qty:1

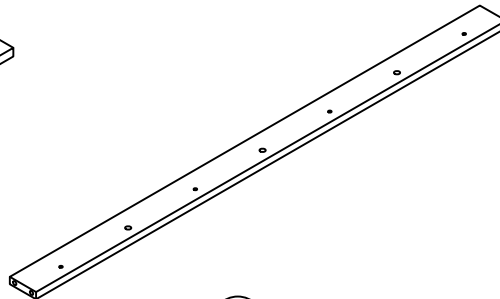


ⓔ

Qty:1

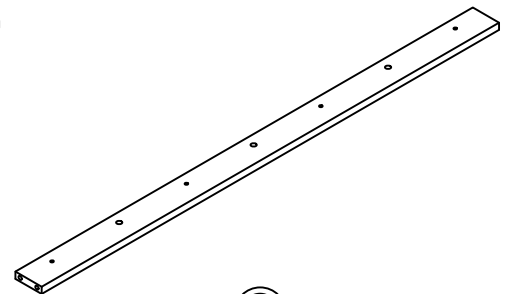


ⓕ

Qty:1

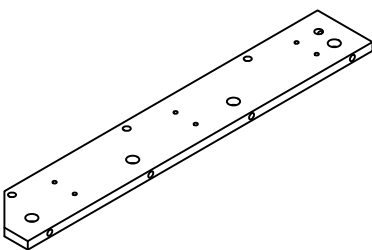


ⓖ

Qty:2

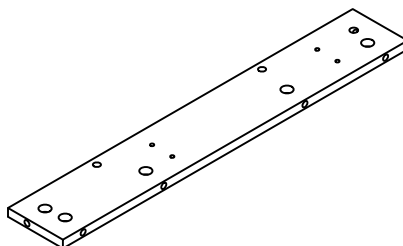

ⓗ

Qty:2

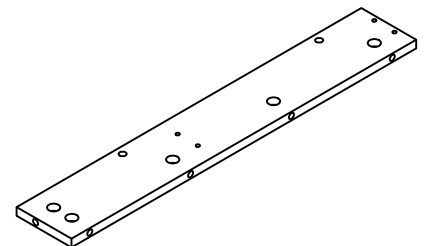


ⓓ

Qty:2


Board Identification

Not actual size

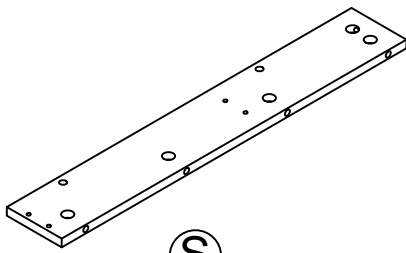


Ⓢ

Qty:2

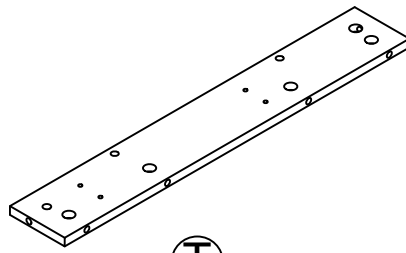


Ⓣ

Qty:2

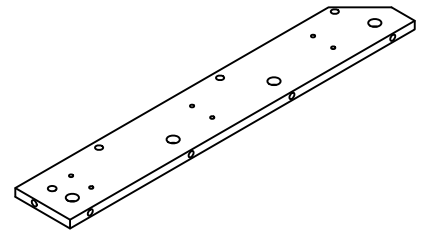


Ⓤ

Qty:2

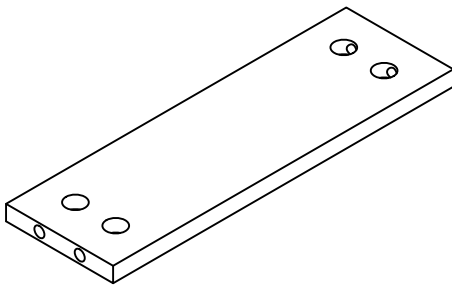


Ⓥ

Qty:12

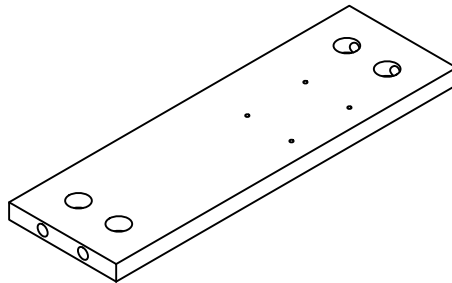


Ⓦ

Qty:1

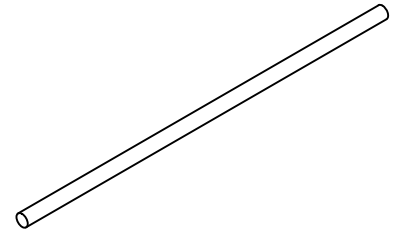


Ⓧ

Qty:14

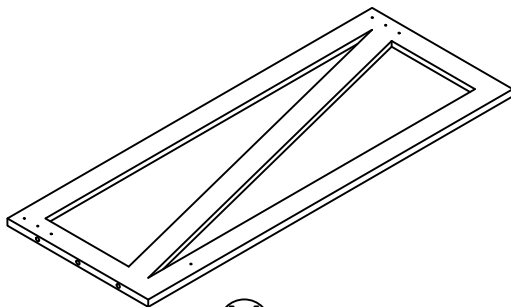


Ⓨ

Qty:1

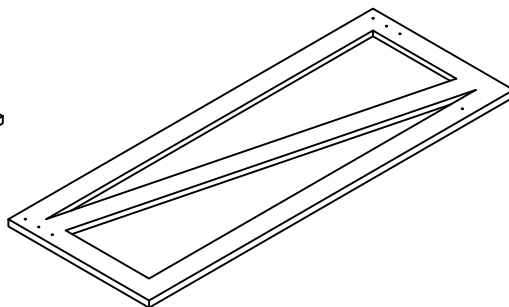

Ⓩ

Qty:1

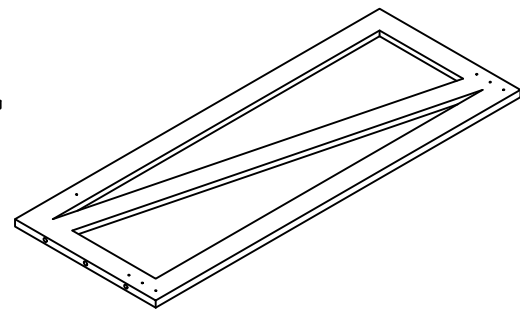


ⒶⒶ


Qty:1

Board Identification


Not actual size

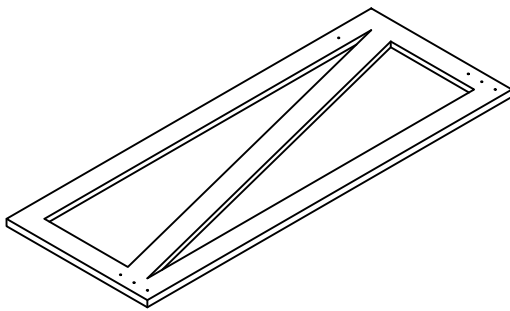

ⒷⒷ_Ⓢ
Qty:1

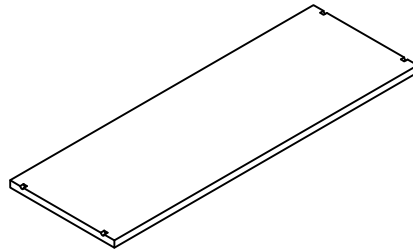

ⒸⒸ_Ⓢ
Qty:2

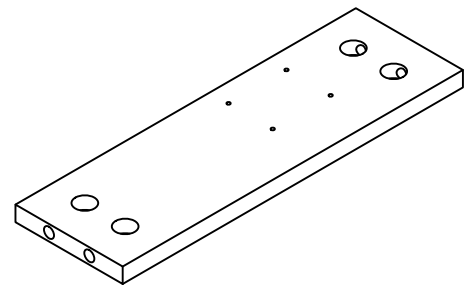


ⒹⒹ_Ⓢ
Qty:1


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

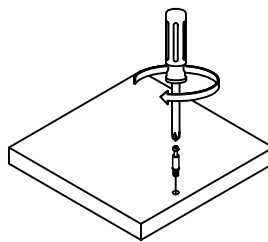

2

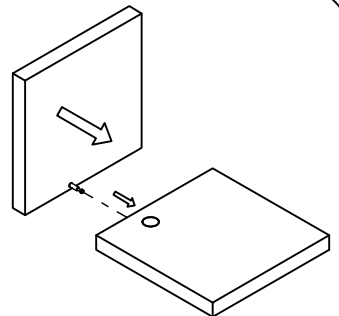


3

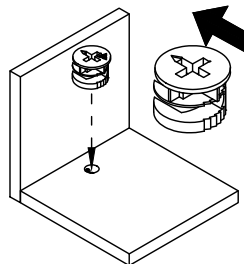


The opening must point toward the edge of the board

4

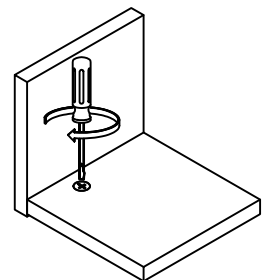

Not actual size

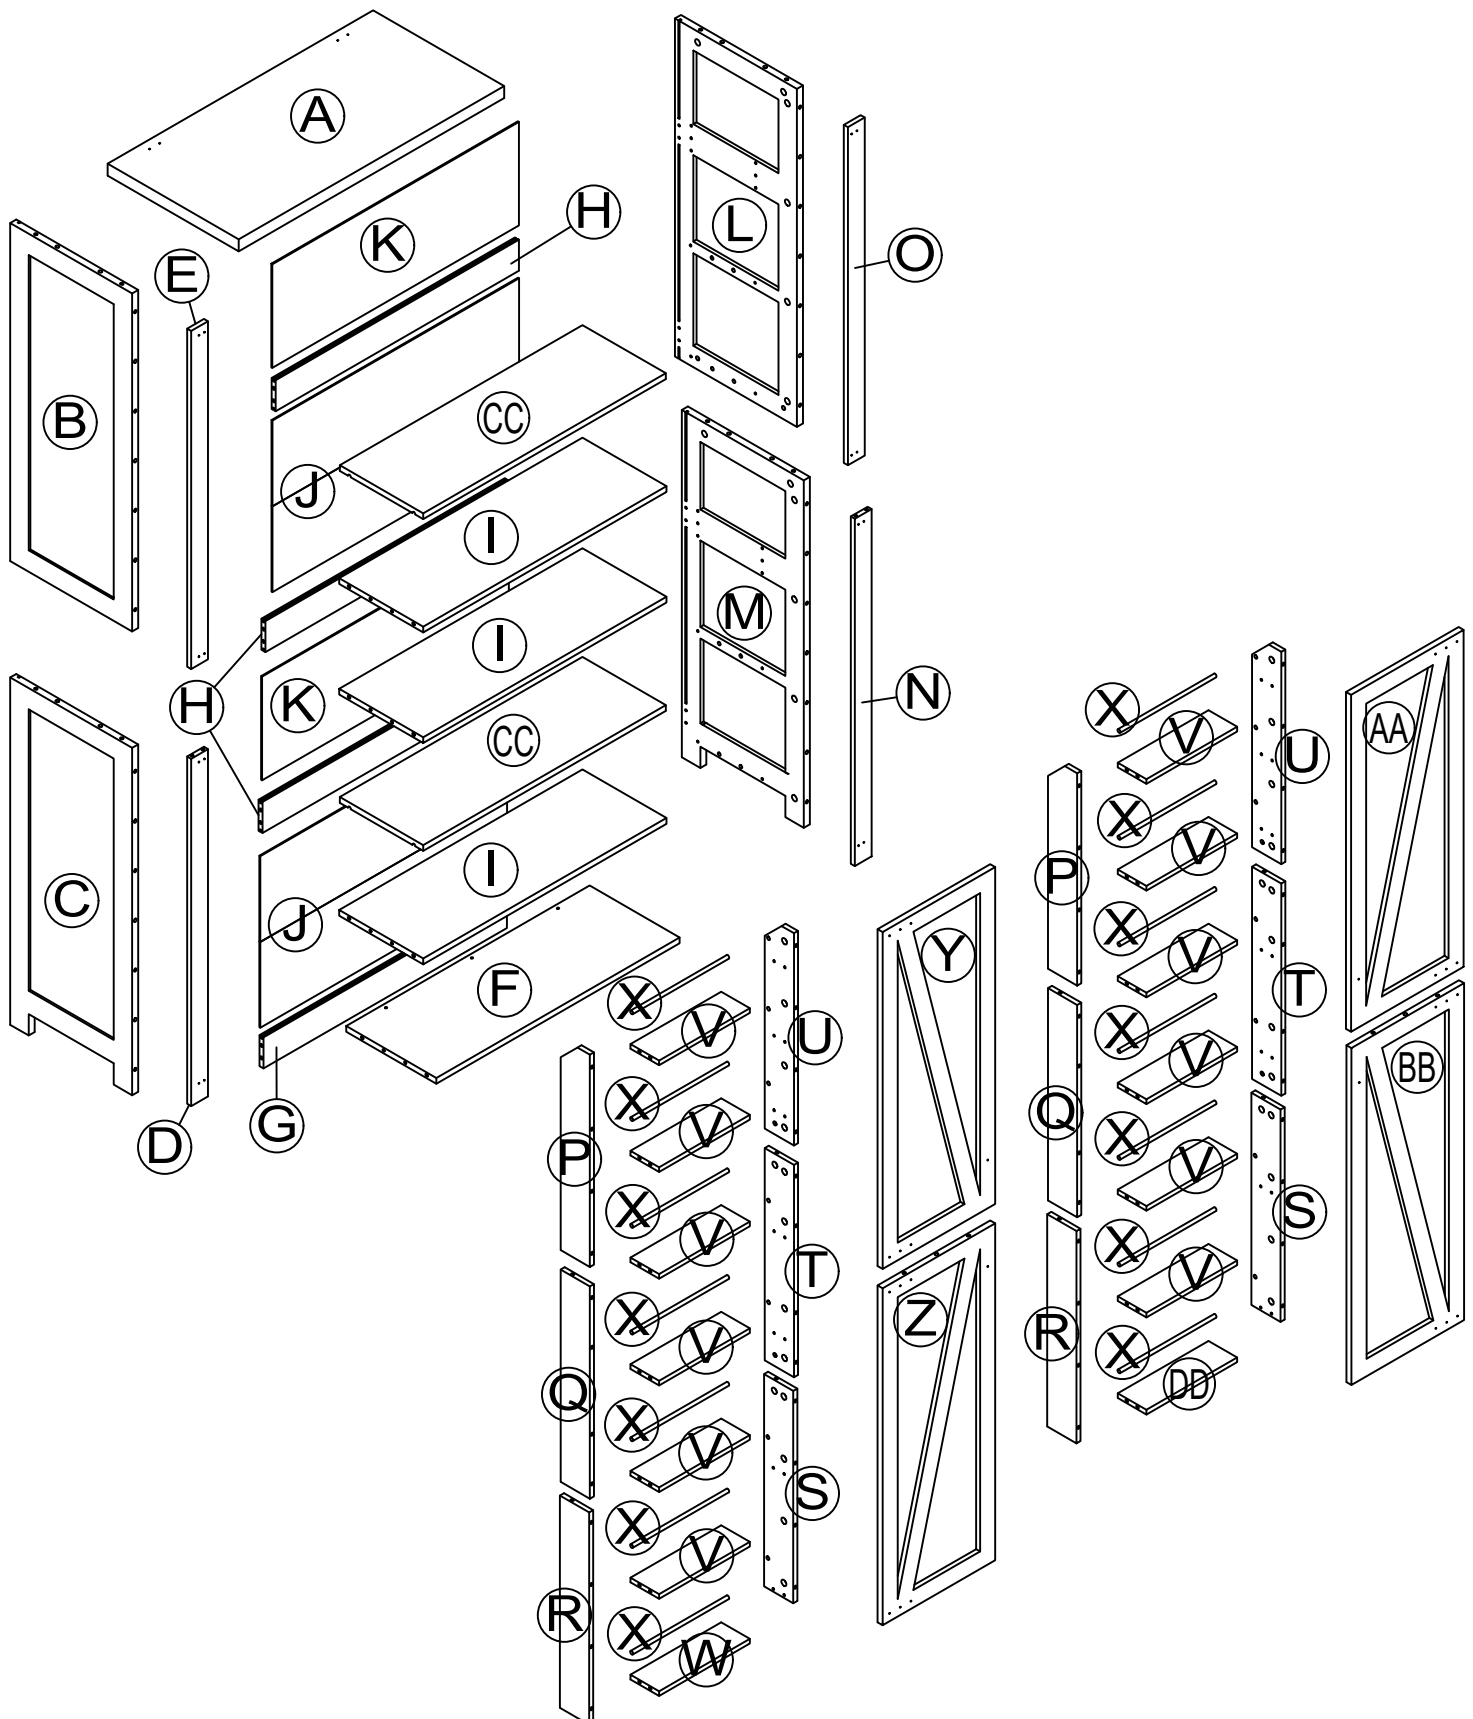

Part List




Ø15X9.5mm

①

X172

CAM LOCK
spare: 5



Ø6.5X35mm

②

X156

CAM BOLT
spare: 5




Ø9.5X10mm

③

X16

CROSS HOLE NUT
spare: 2



Ø6.5X60mm

④

X16

CAM BOLT
spare: 2



Ø8X30mm

⑤

X38

WOOD DOWEL
spare: 3




Ø6X30mm

⑥

X4

WOOD DOWEL
spare: 1




Ø3X14mm

⑦

X20

SCREW
spare: 2




Ø3X12mm

⑧

X2

SCREW
spare: 1




Ø4X12mm

⑨

X52

SCREW
spare: 3




Ø4X35mm

⑩

X3

SCREW
spare: 1




144X24X6

⑪

X8

HINGE




96X21X14mm

⑫

X1

MAGNETIC DOOR
CATCH



26X21X1mm

⑬

X2

IRON SHEET




Ø5X16mm

⑭

X8

SHELF SUPPORT
spare: 2




243X25X38mm

⑮

X2

HANDLE



⑯

X18

BACK PANEL BUCKLE
spare: 2

Part List



46X58X65mm

17

X2

UNIVERSAL WHEEL




Ø21mm

18

X172

HOLE STICKER
spare: 5

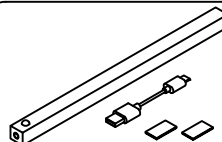

19

X1

MOTION SENSOR
LIGHT




70X30X5mm

20

X1

SCREWDRIVER










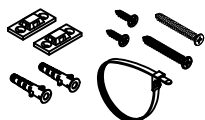


21





X2set

ANTI-TIP WALL
ANCHORS



STEP1

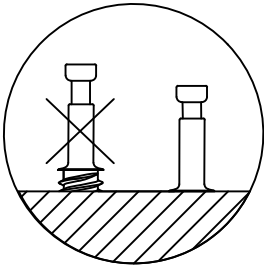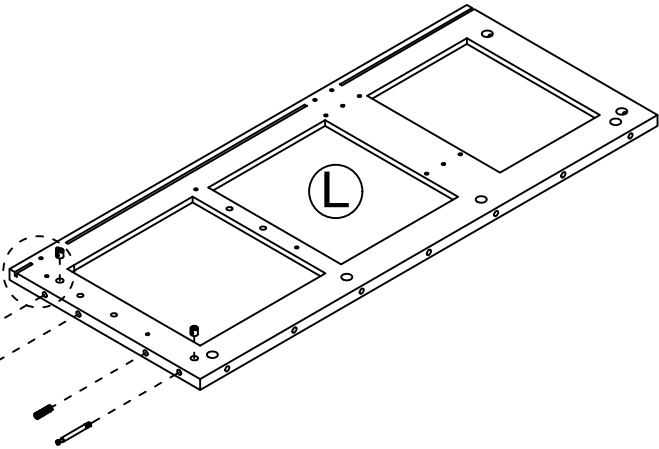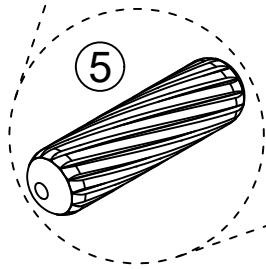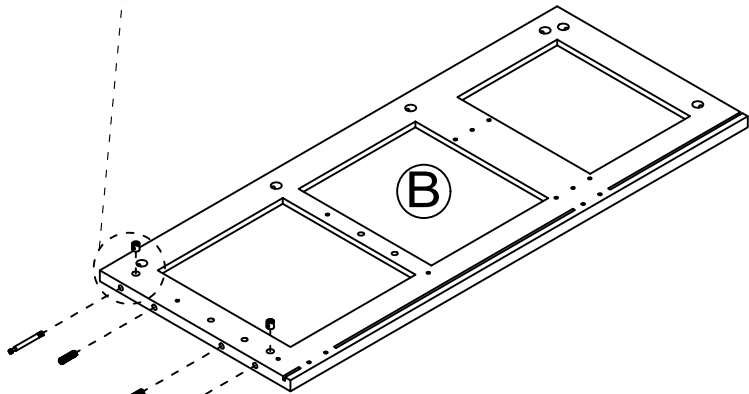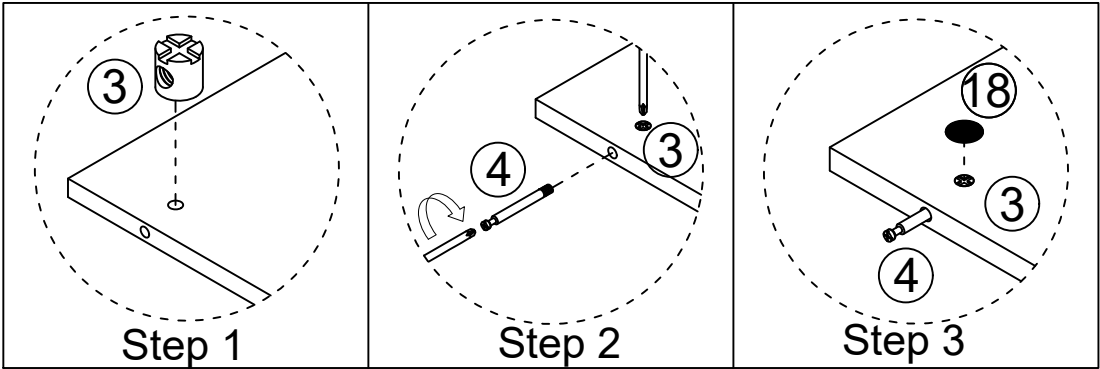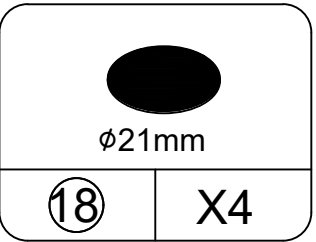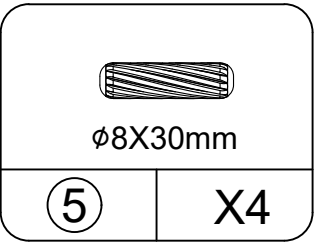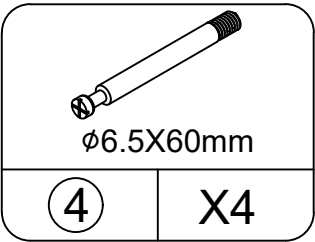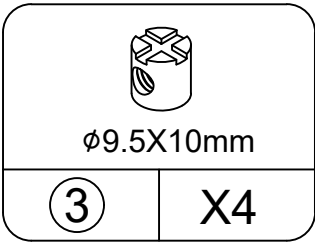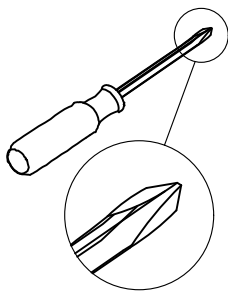

STEP2

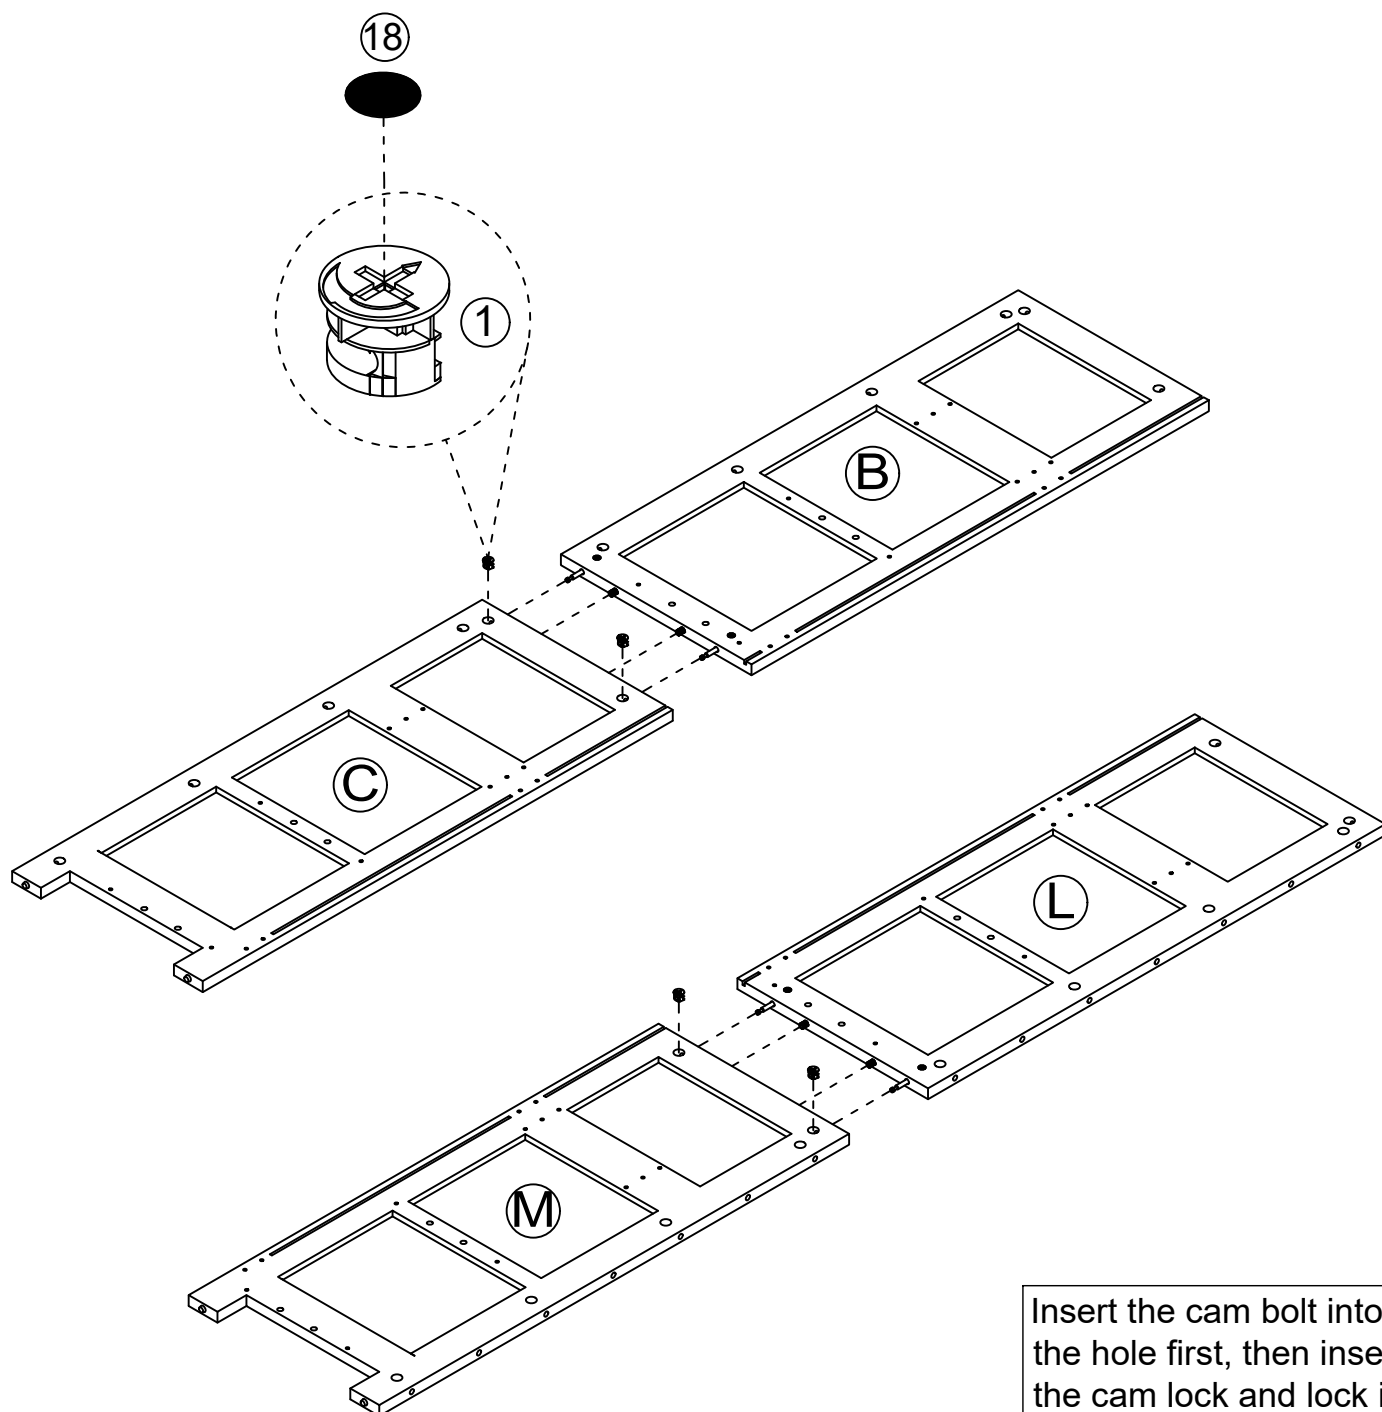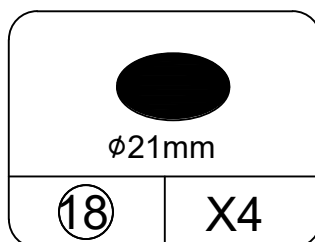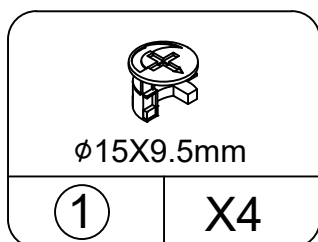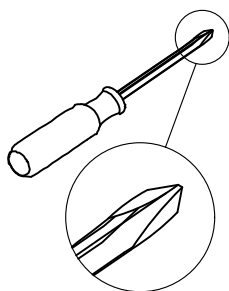


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

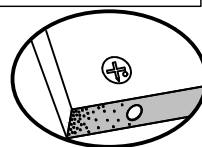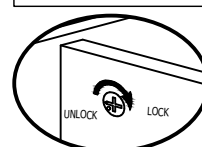


Proper orientation of CAM LOCK

STEP3

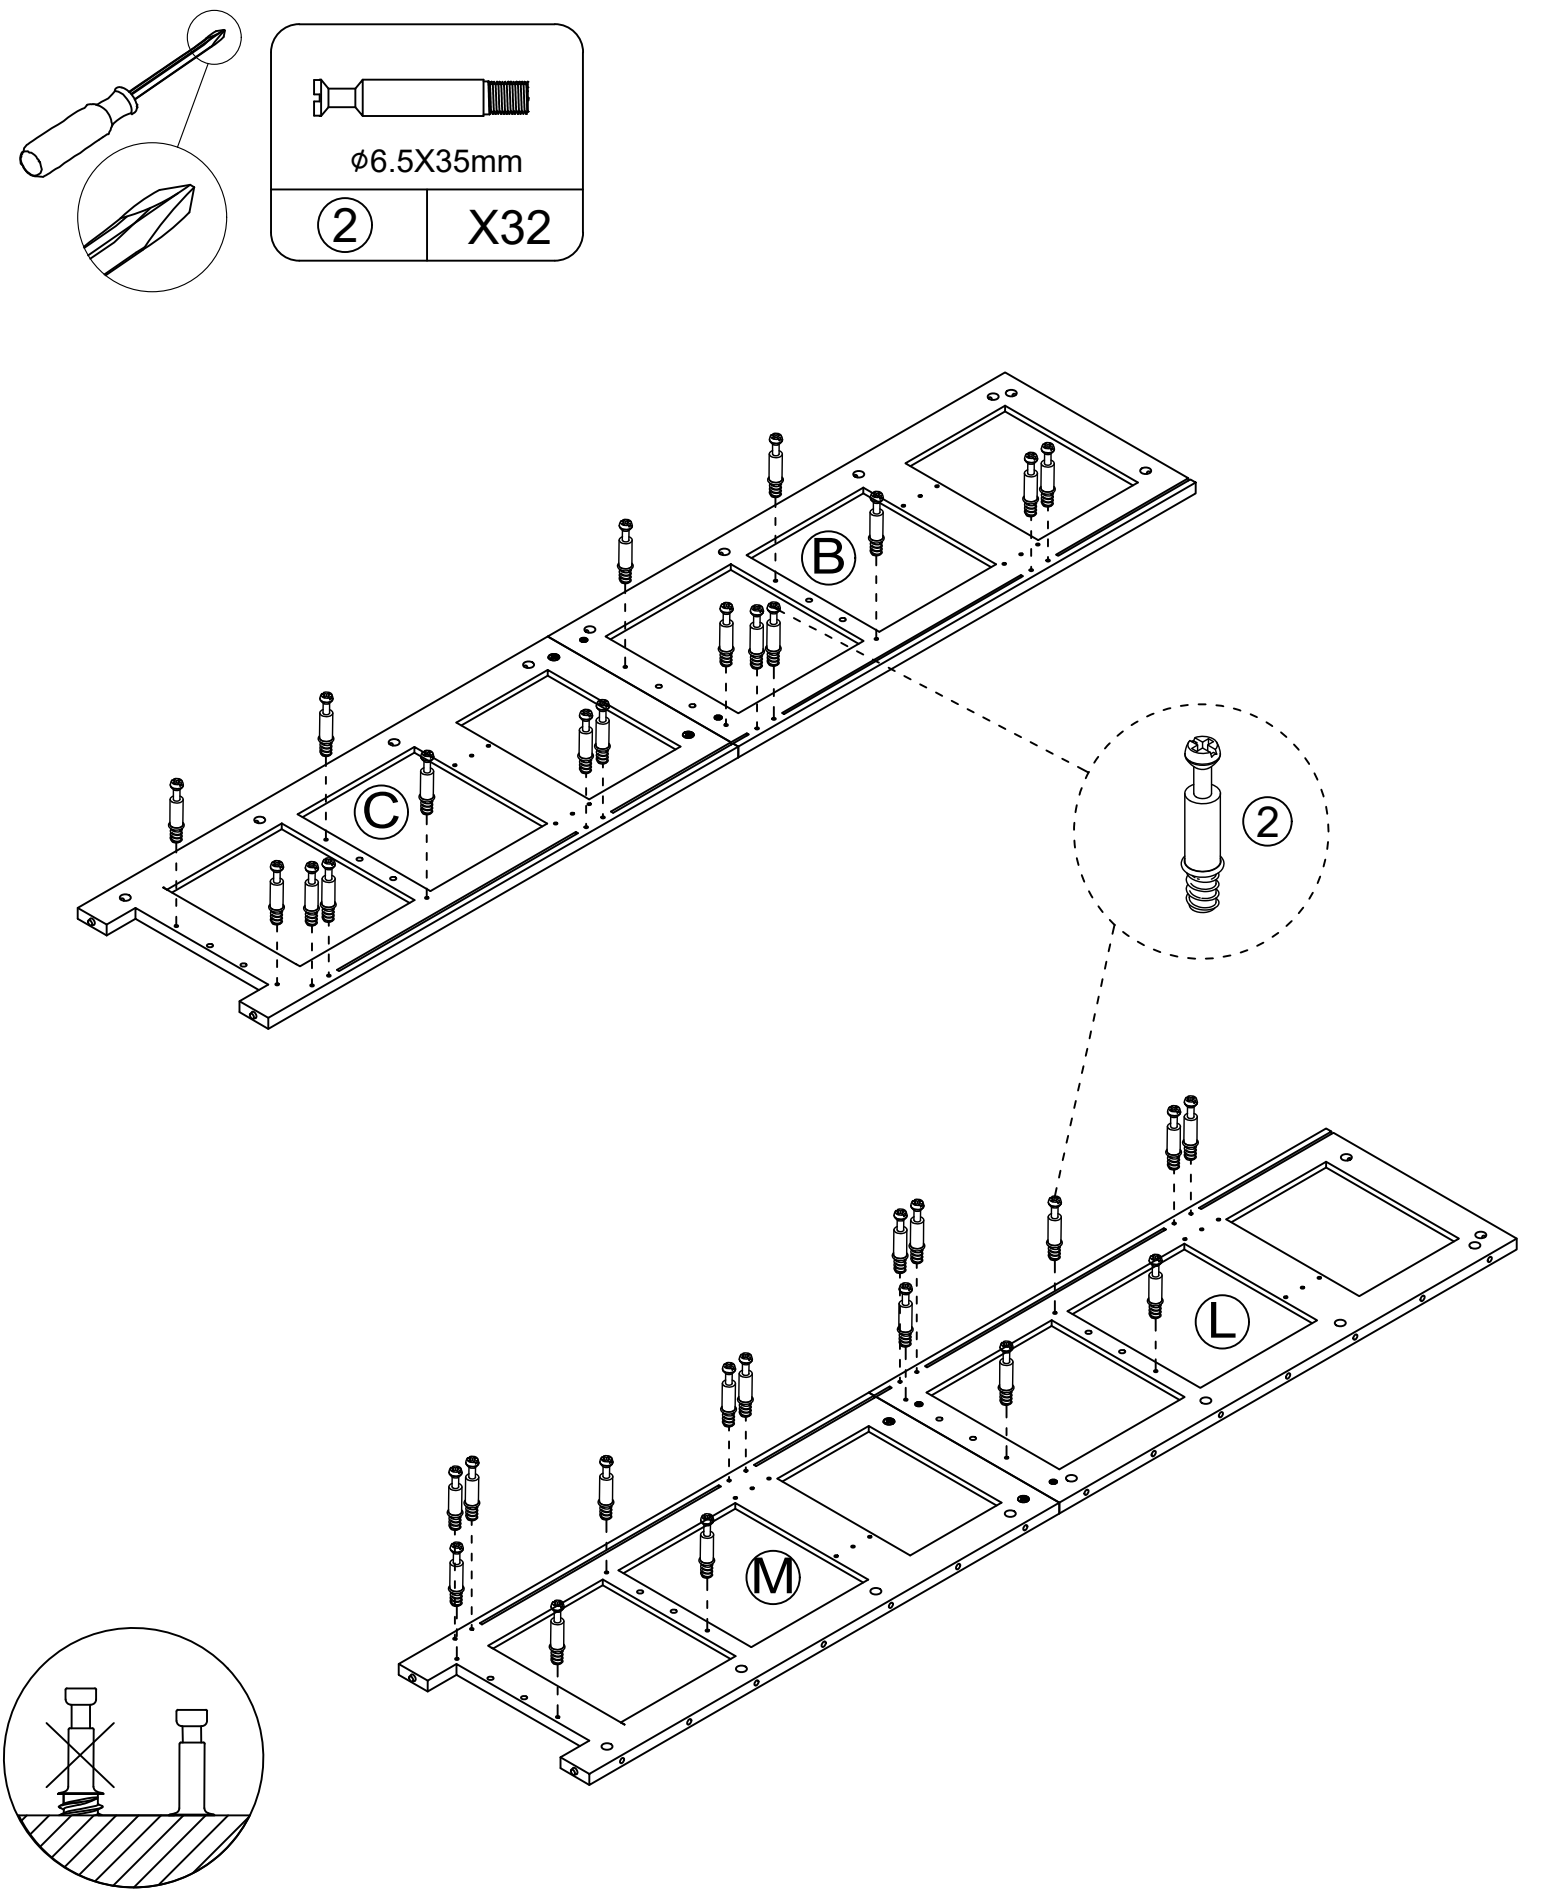


STEP4

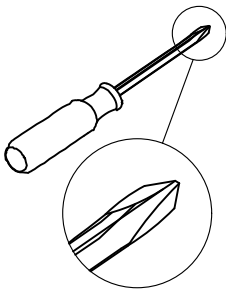


	
$\phi 15 \times 9.5 \text{mm}$	
①	X6

	
$\phi 21 \text{mm}$	
⑱	X6

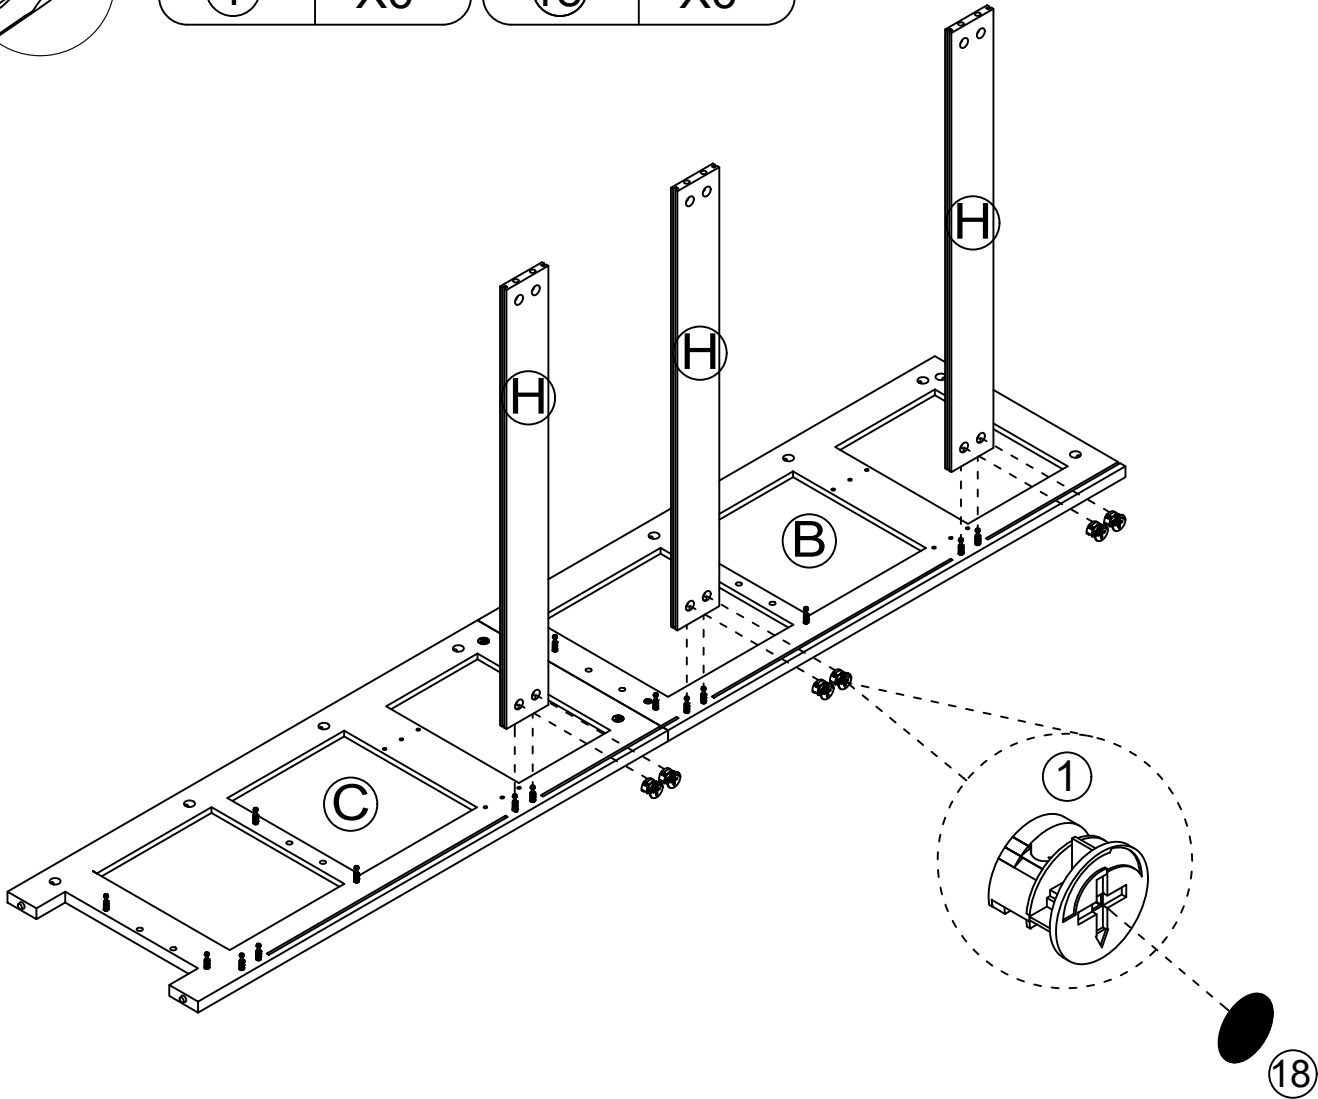


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

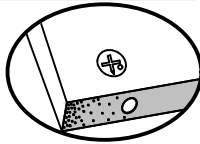

Proper orientation of CAM LOCK


STEP5

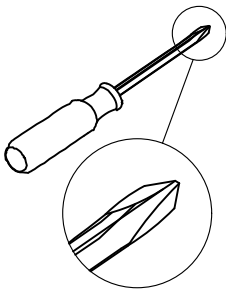


 ø15X9.5mm	
1	X6

 ø8X30mm	
5	X6

 ø21mm	
18	X6

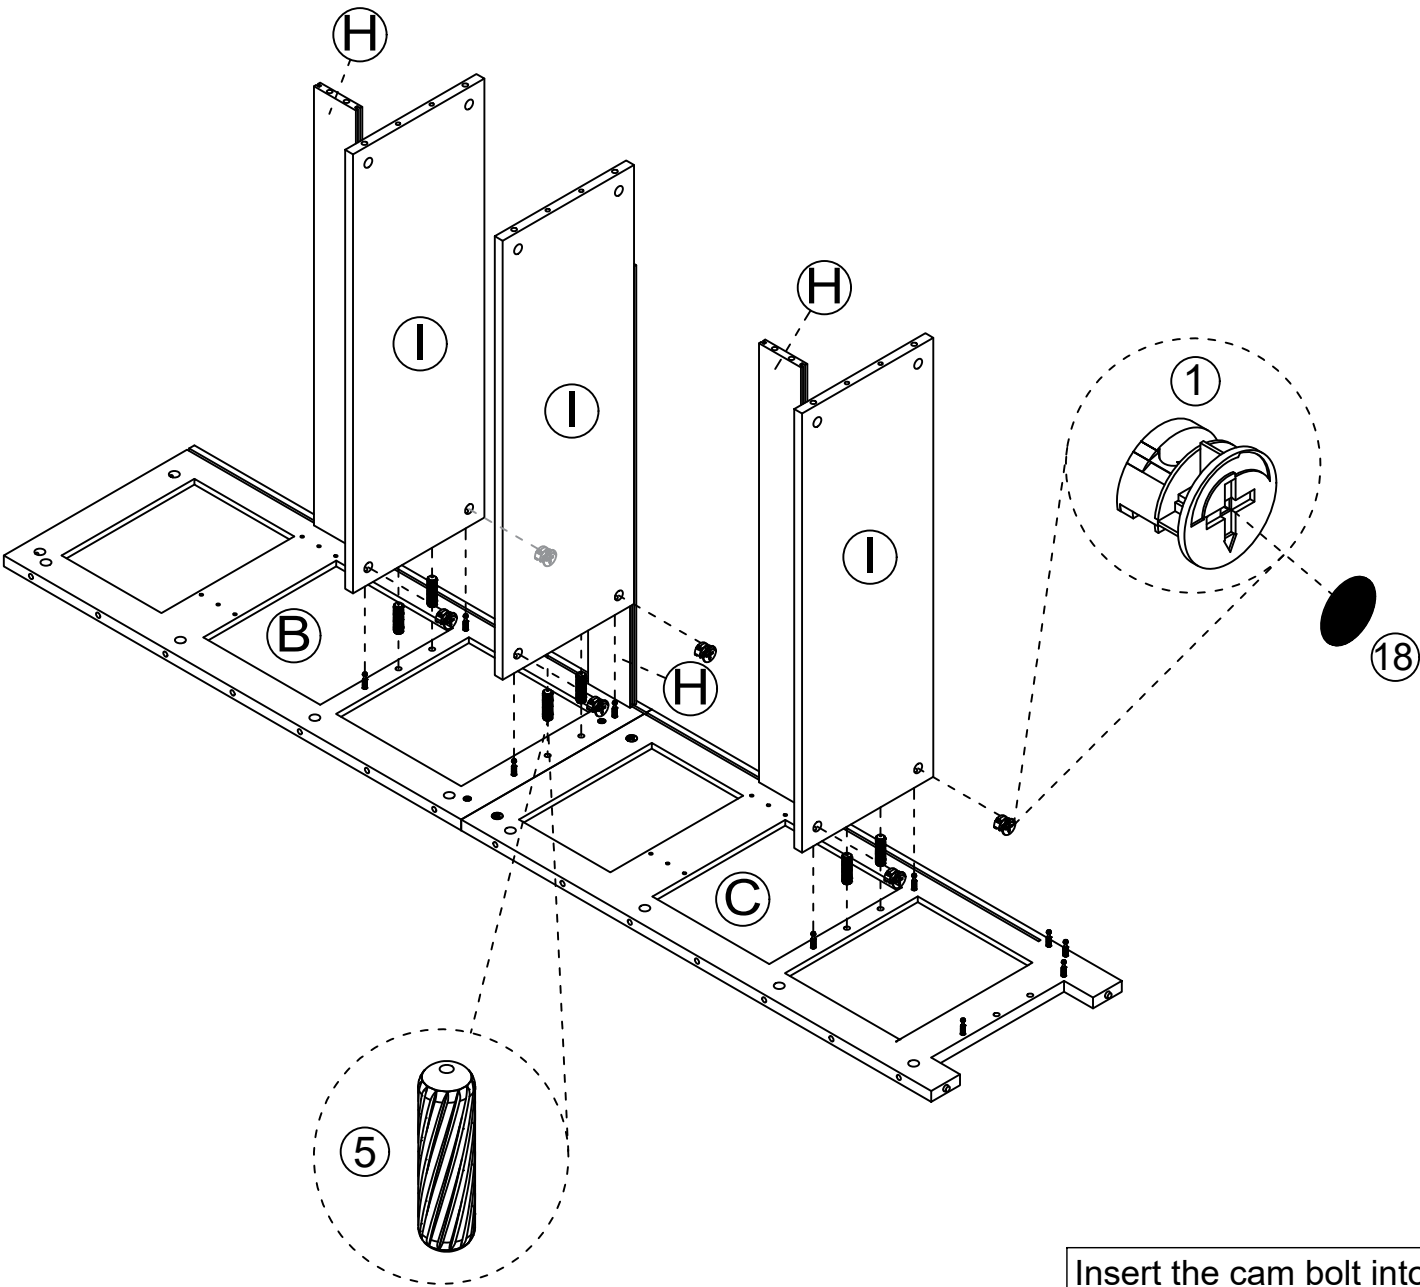


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

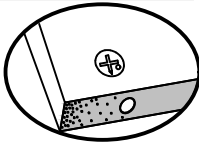


Proper orientation of CAM LOCK

STEP6

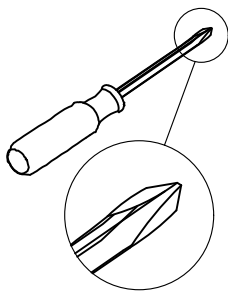


 ø15X9.5mm	
①	X4


 ø8X30mm	
⑤	X2

 ø4X35mm	
⑩	X3

 ø21mm	
⑱	X4

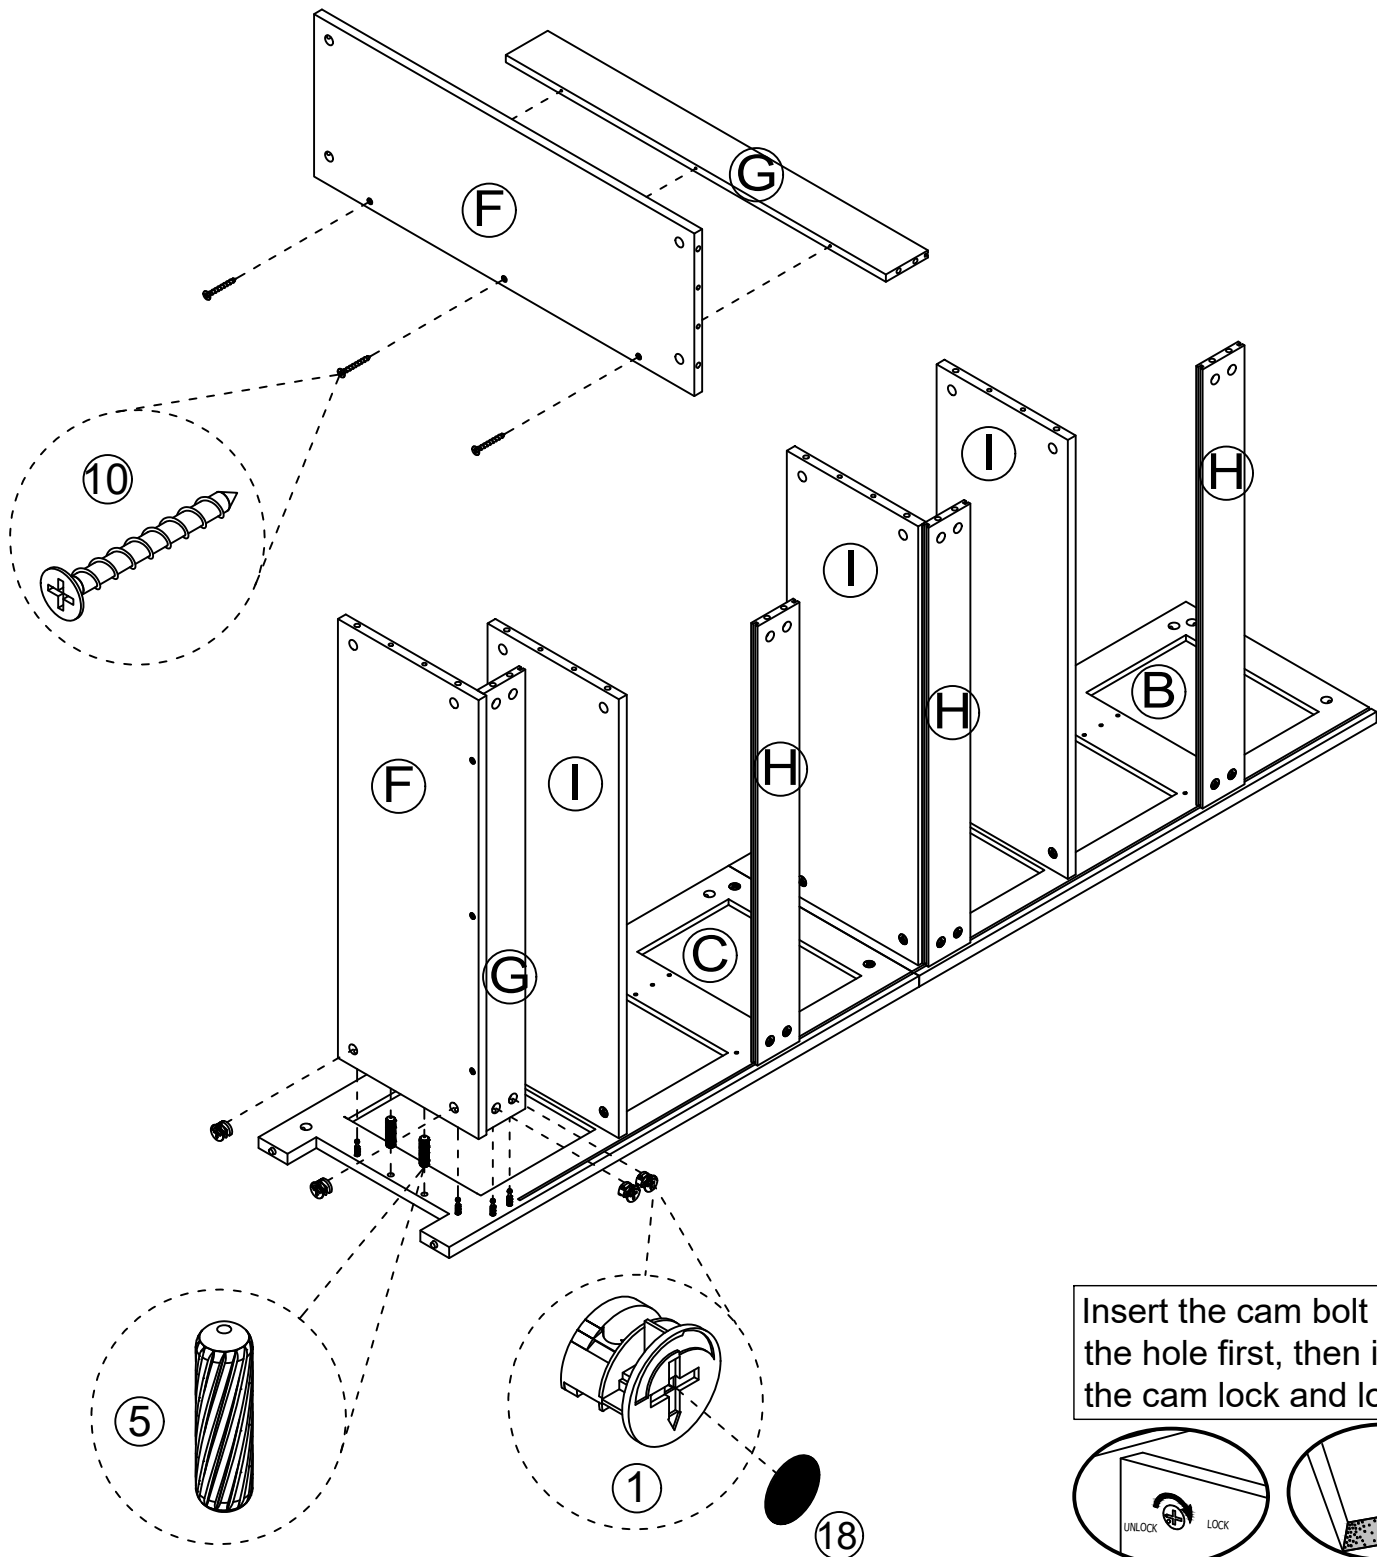


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

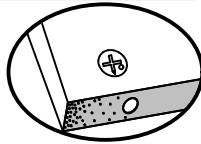


Proper orientation of CAM LOCK

STEP7

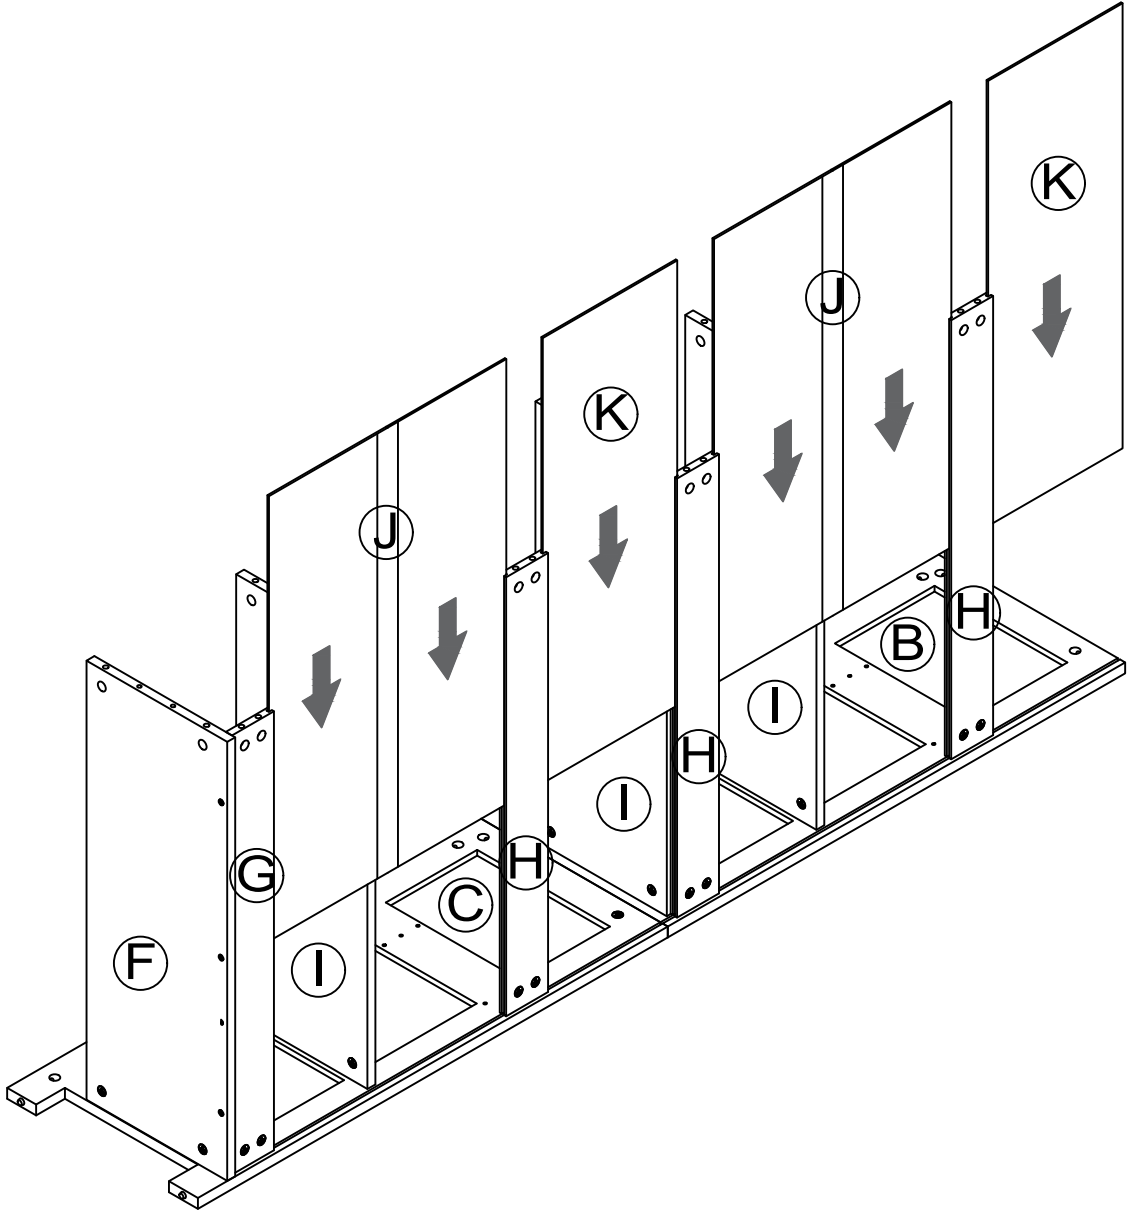


STEP8

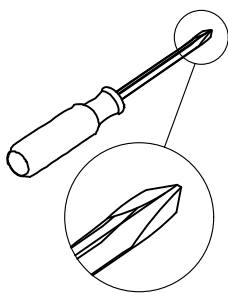


 ø15X9.5mm	
①	X16

 ø8X30mm	
⑤	X8

 ø21mm	
⑱	X16

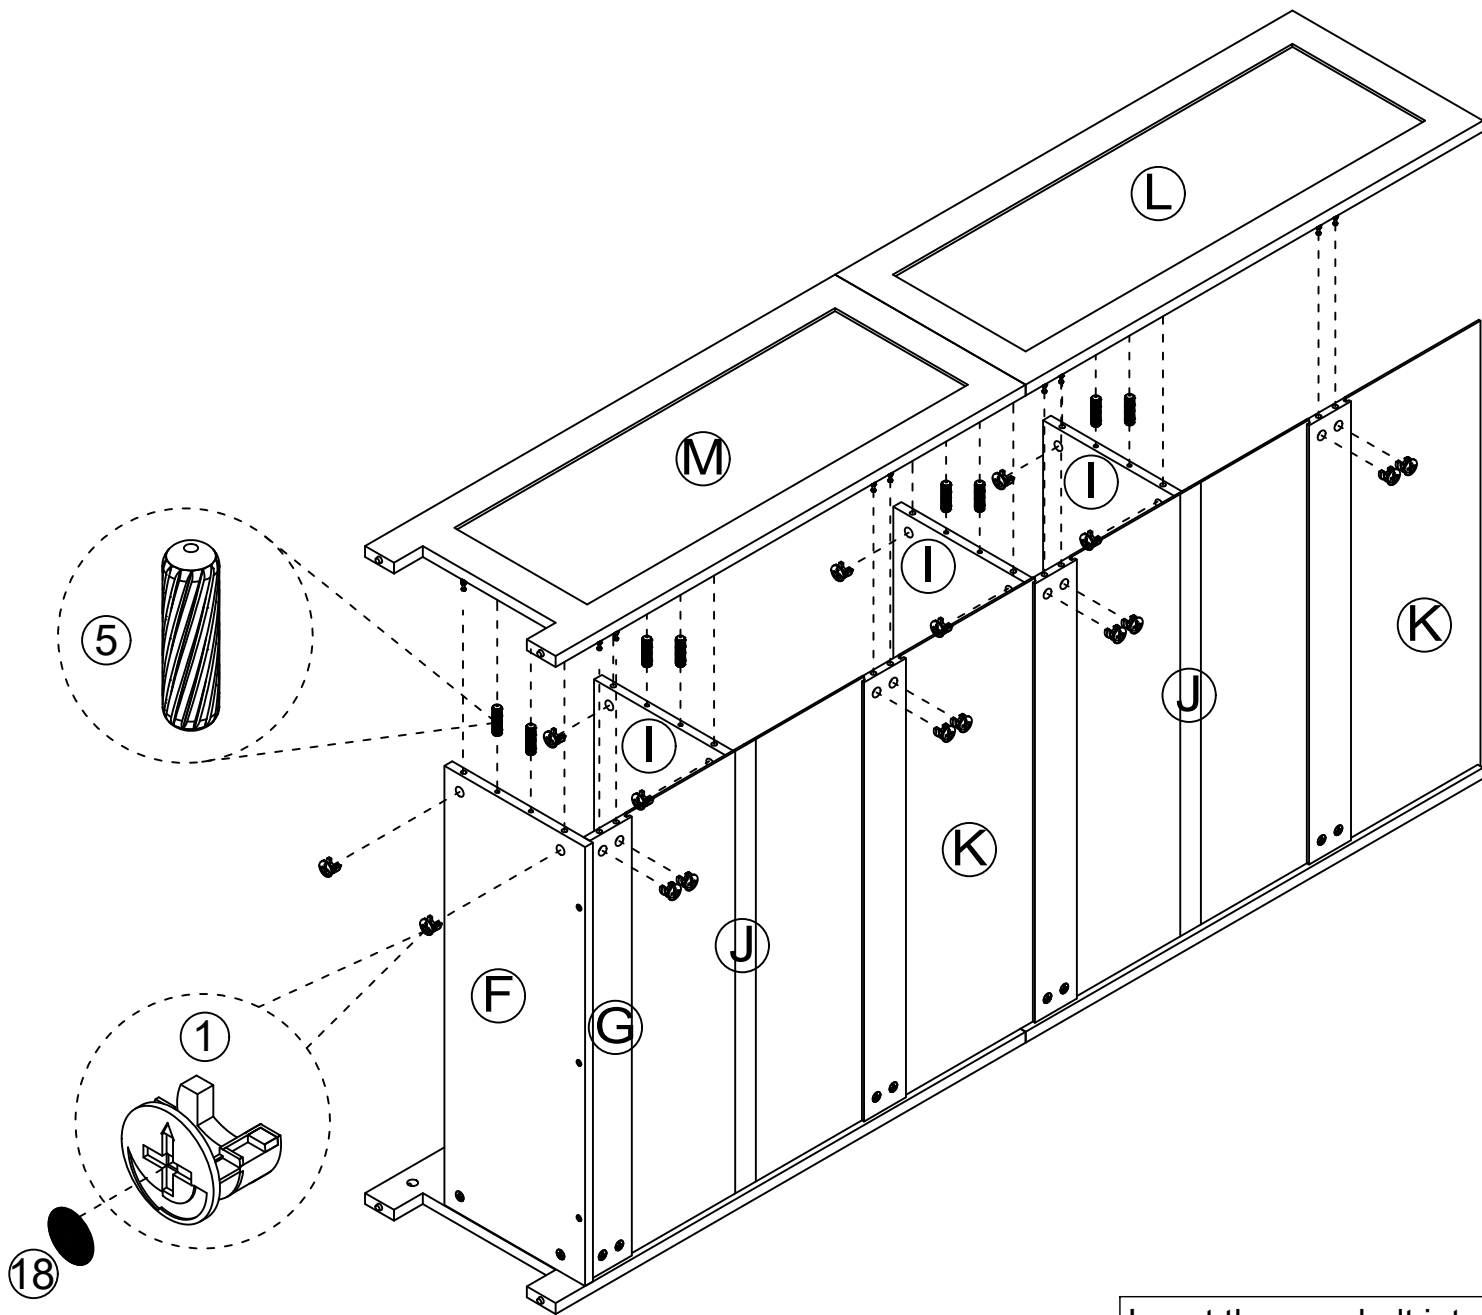



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

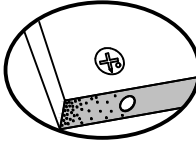


Proper orientation of CAM LOCK


STEP9



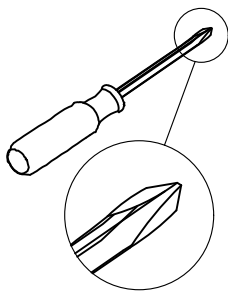


 ø6.5X35mm	
2	X20


 ø6X30mm	
6	X4

 ø3X14mm	
7	X2

 96X21X14mm	
12	X1

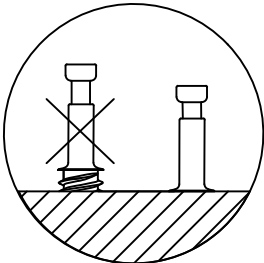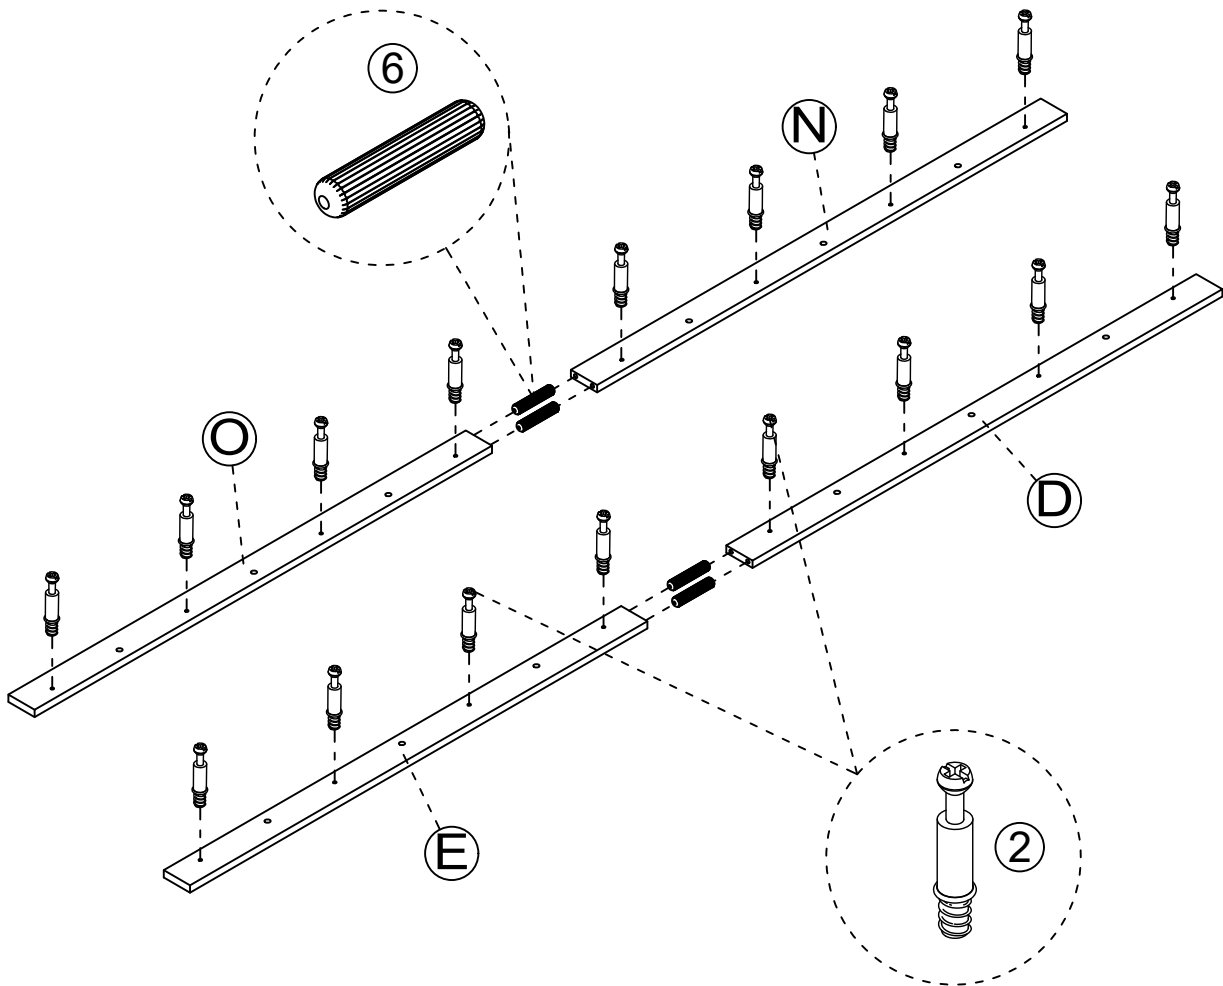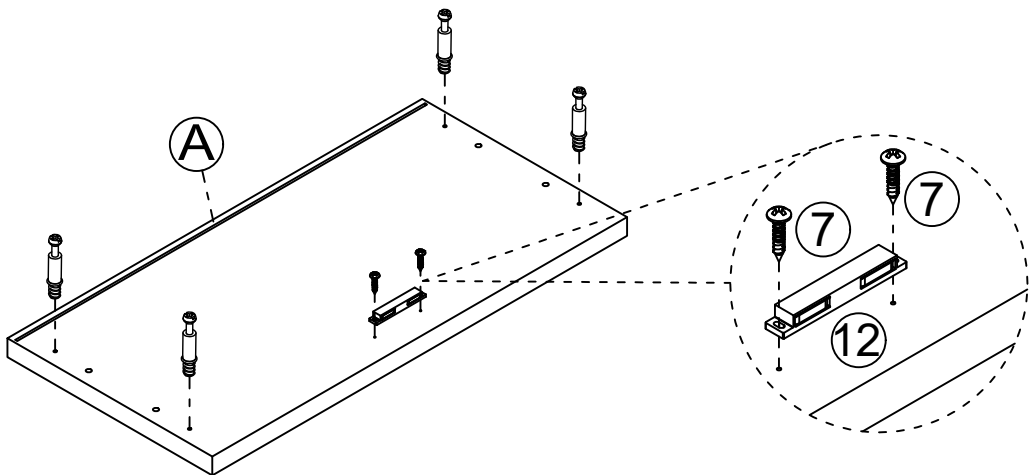


STEP10

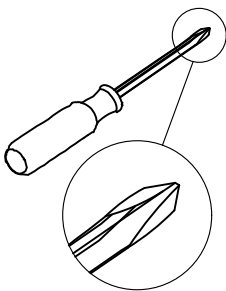


 Ø15X9.5mm	
1	X4

 Ø8X30mm	
5	X4

 Ø21mm	
18	X4

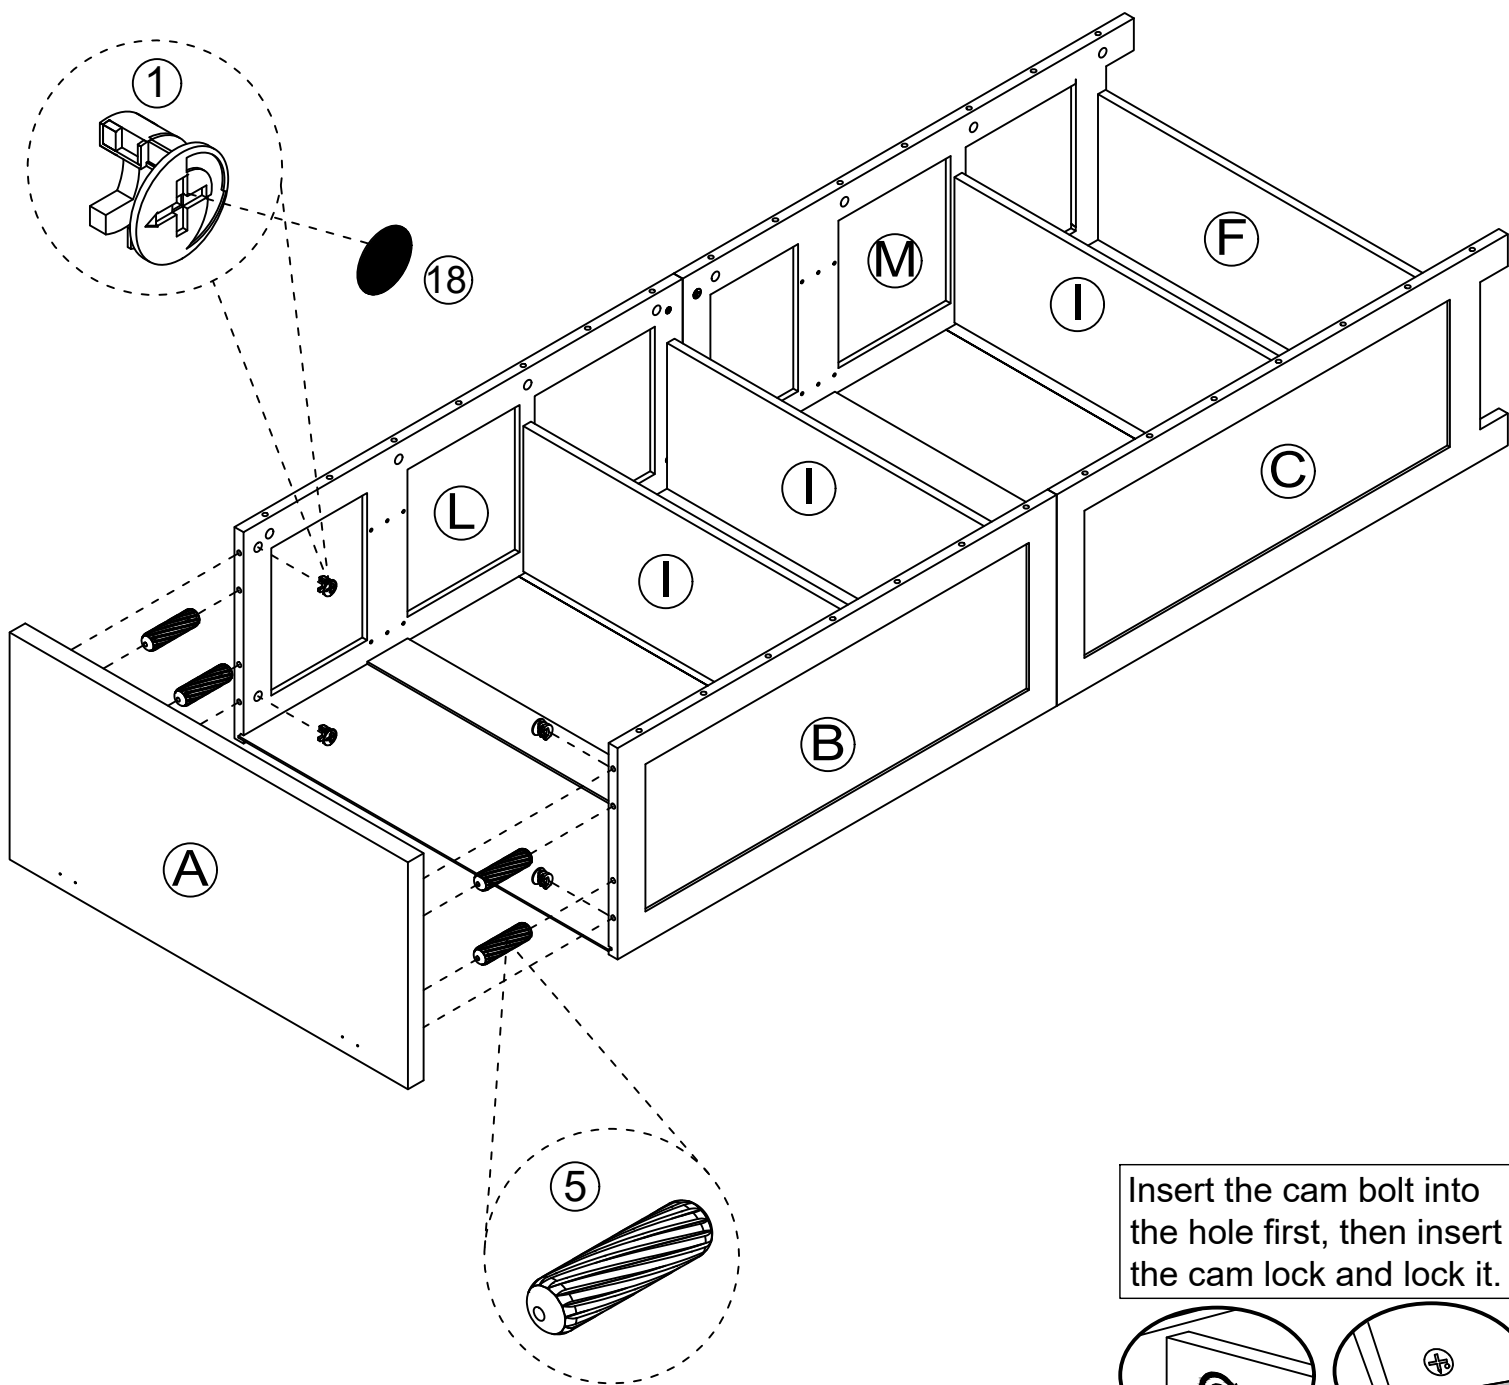


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

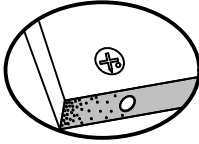

Proper orientation of CAM LOCK


STEP11

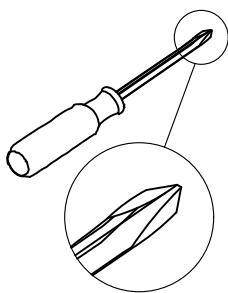


 ø15X9.5mm	
①	X16

 ø8X30mm	
⑤	X12



 ø21mm	
⑱	X16

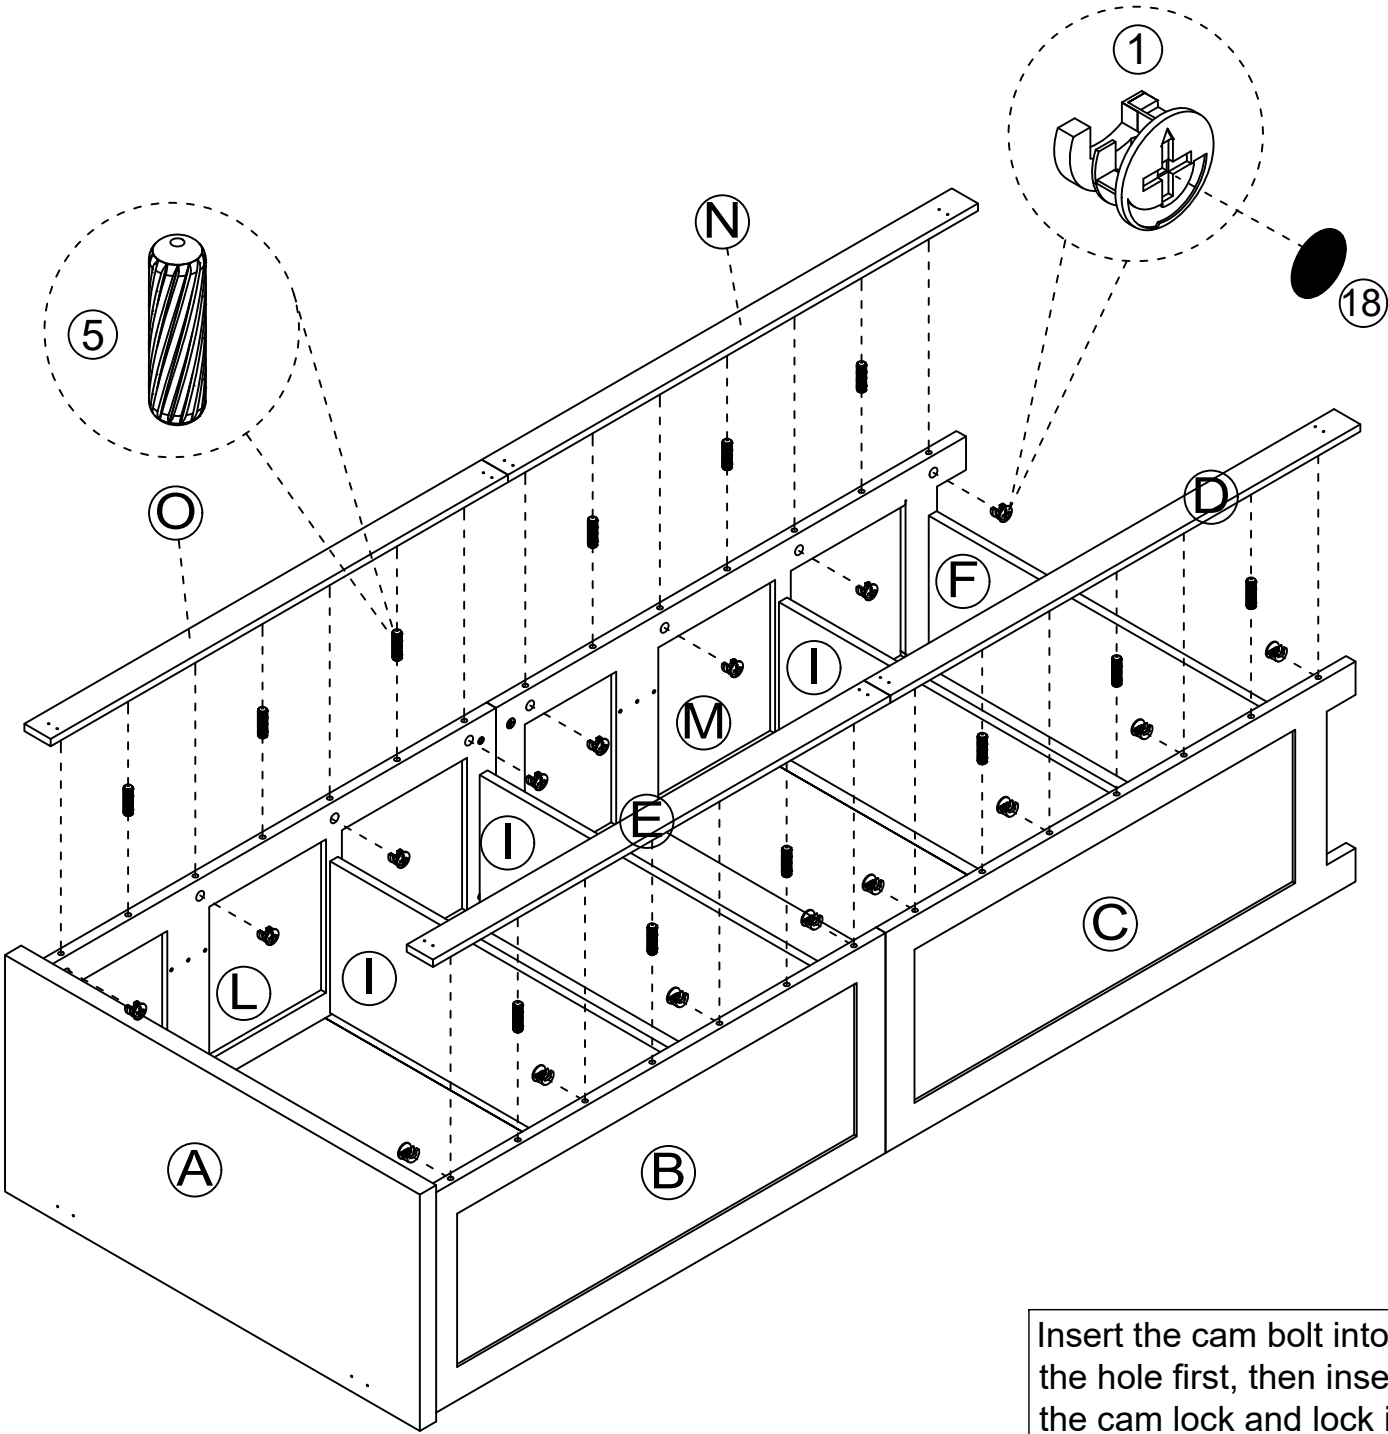


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

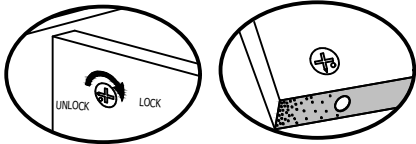


STEP12

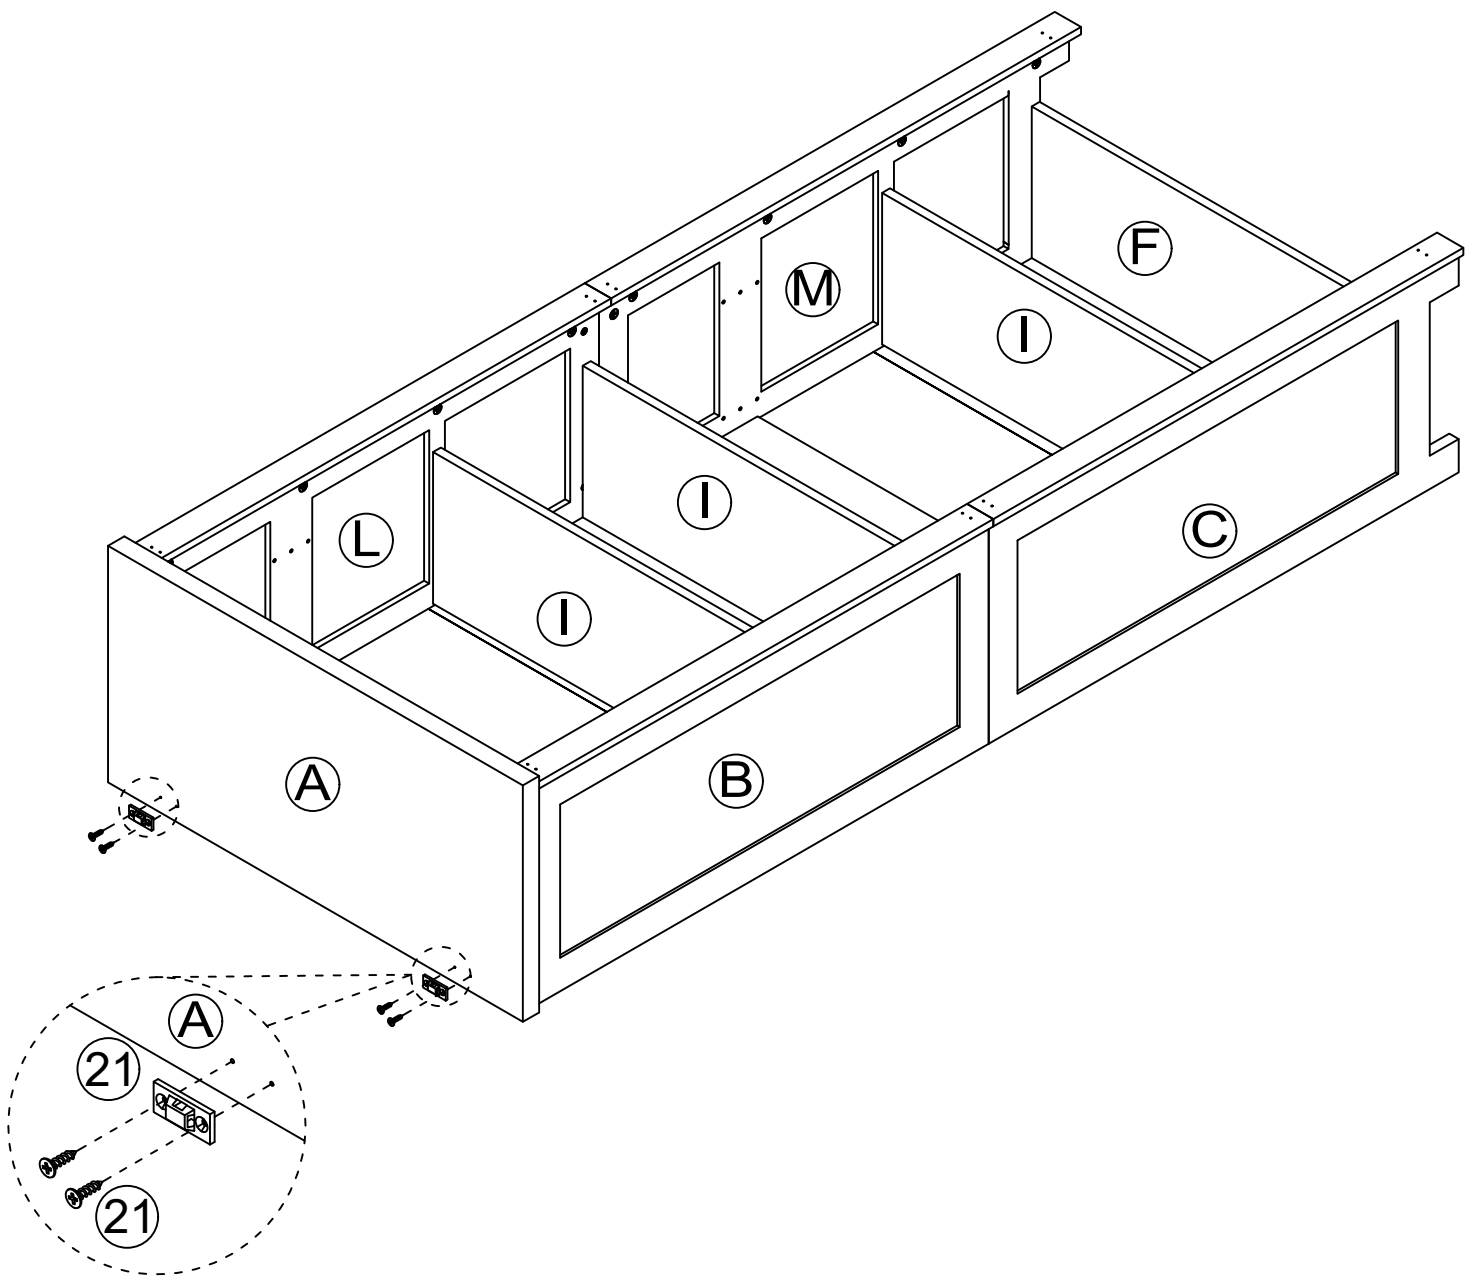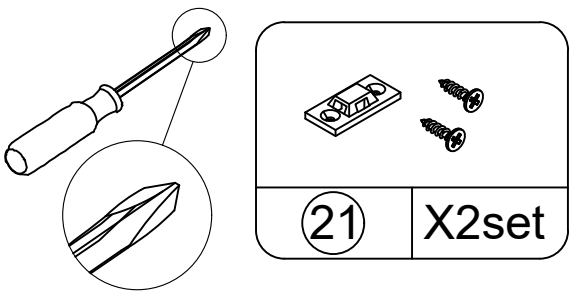









STEP13

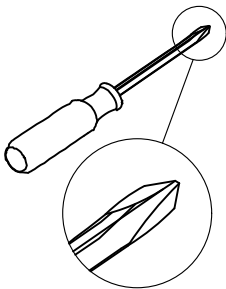

 ø9.5X10mm	
3	X8


 ø6.5X60mm	
4	X8

 ø21mm	
18	X8

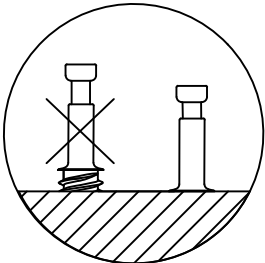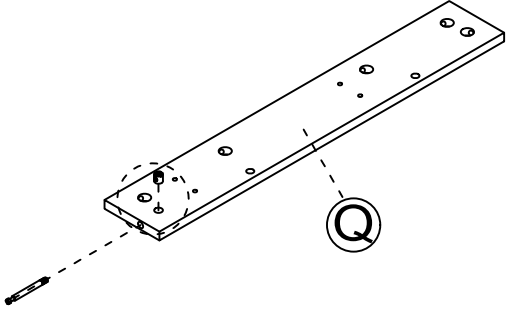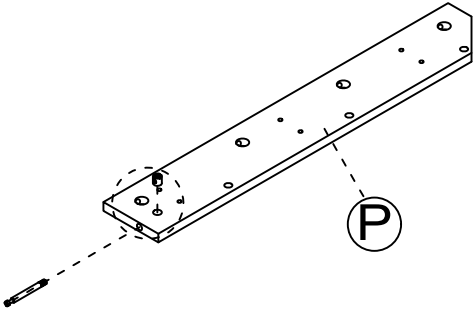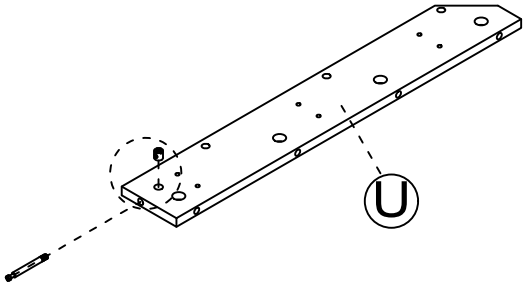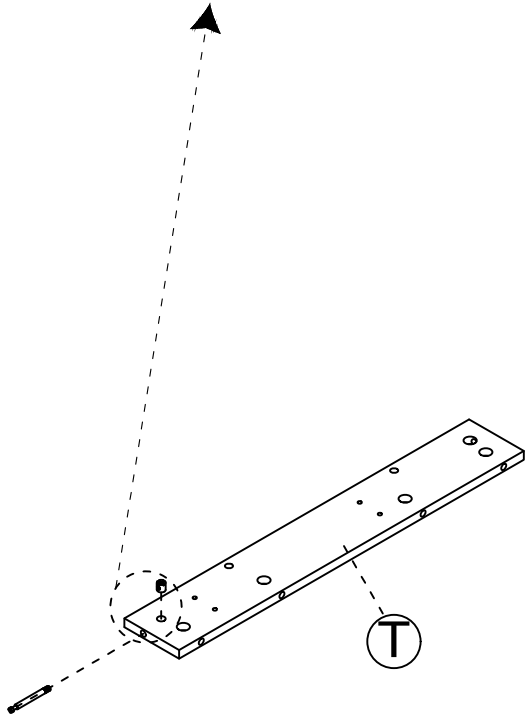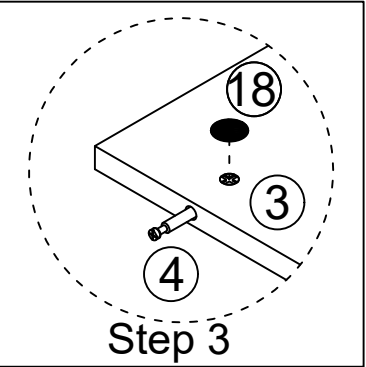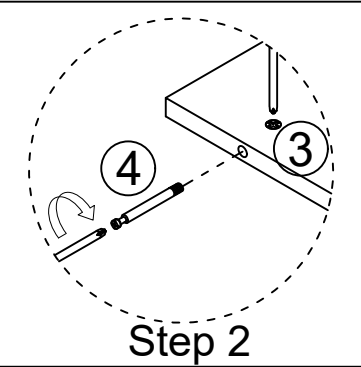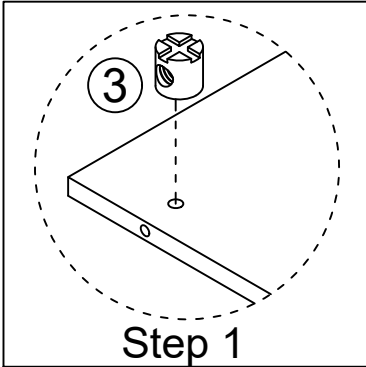


X2



STEP14

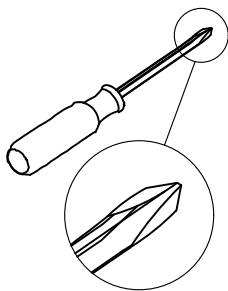


 Ø15X9.5mm	
1	X8

 Ø6.5X35mm	
2	X56

 Ø21mm	
18	X8

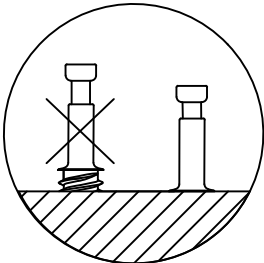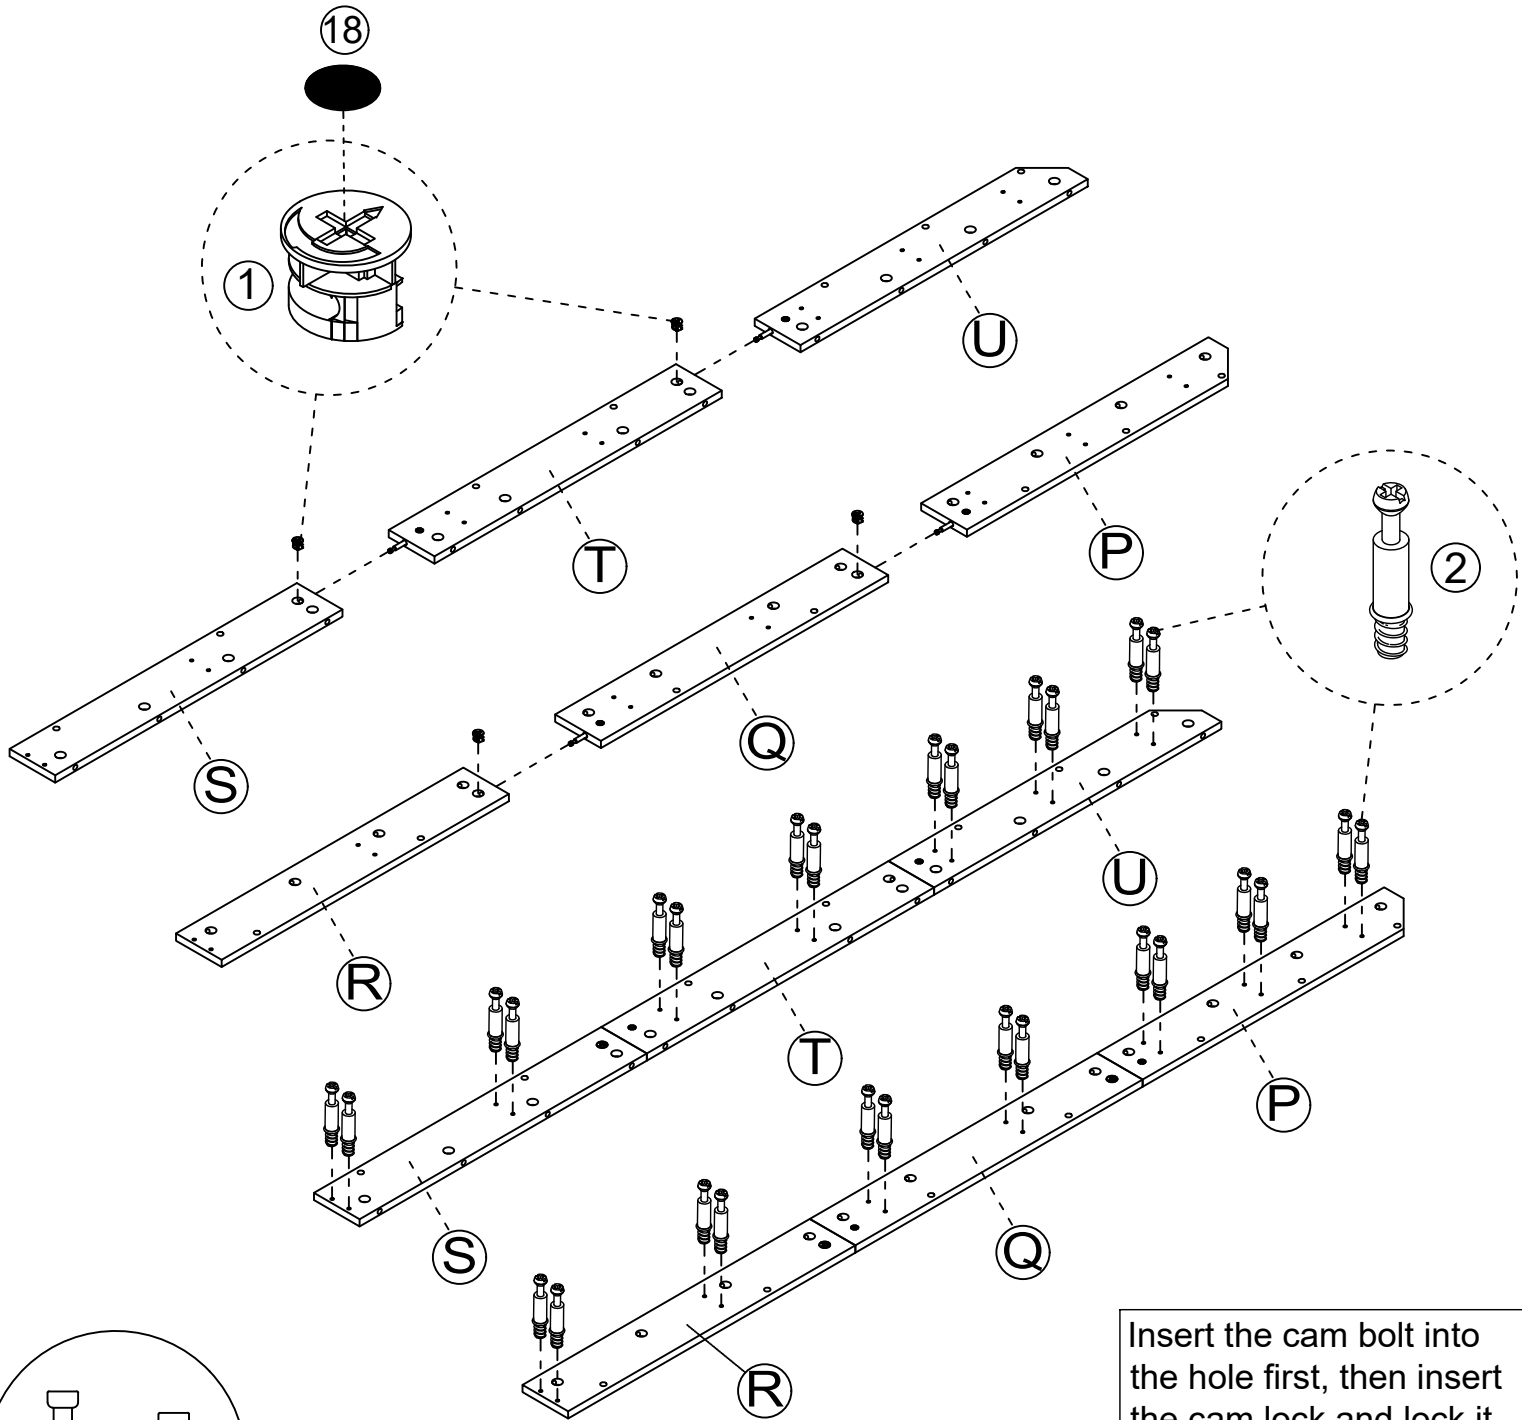


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

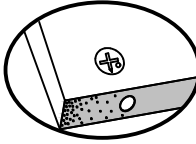


Proper orientation of CAM LOCK

X2

STEP15

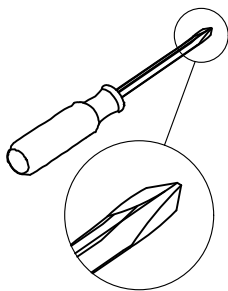


 ø15X9.5mm	
1	X28


 ø4X12mm	
9	X4

 46X58X65mm	
17	X1

 ø21mm	
18	X28

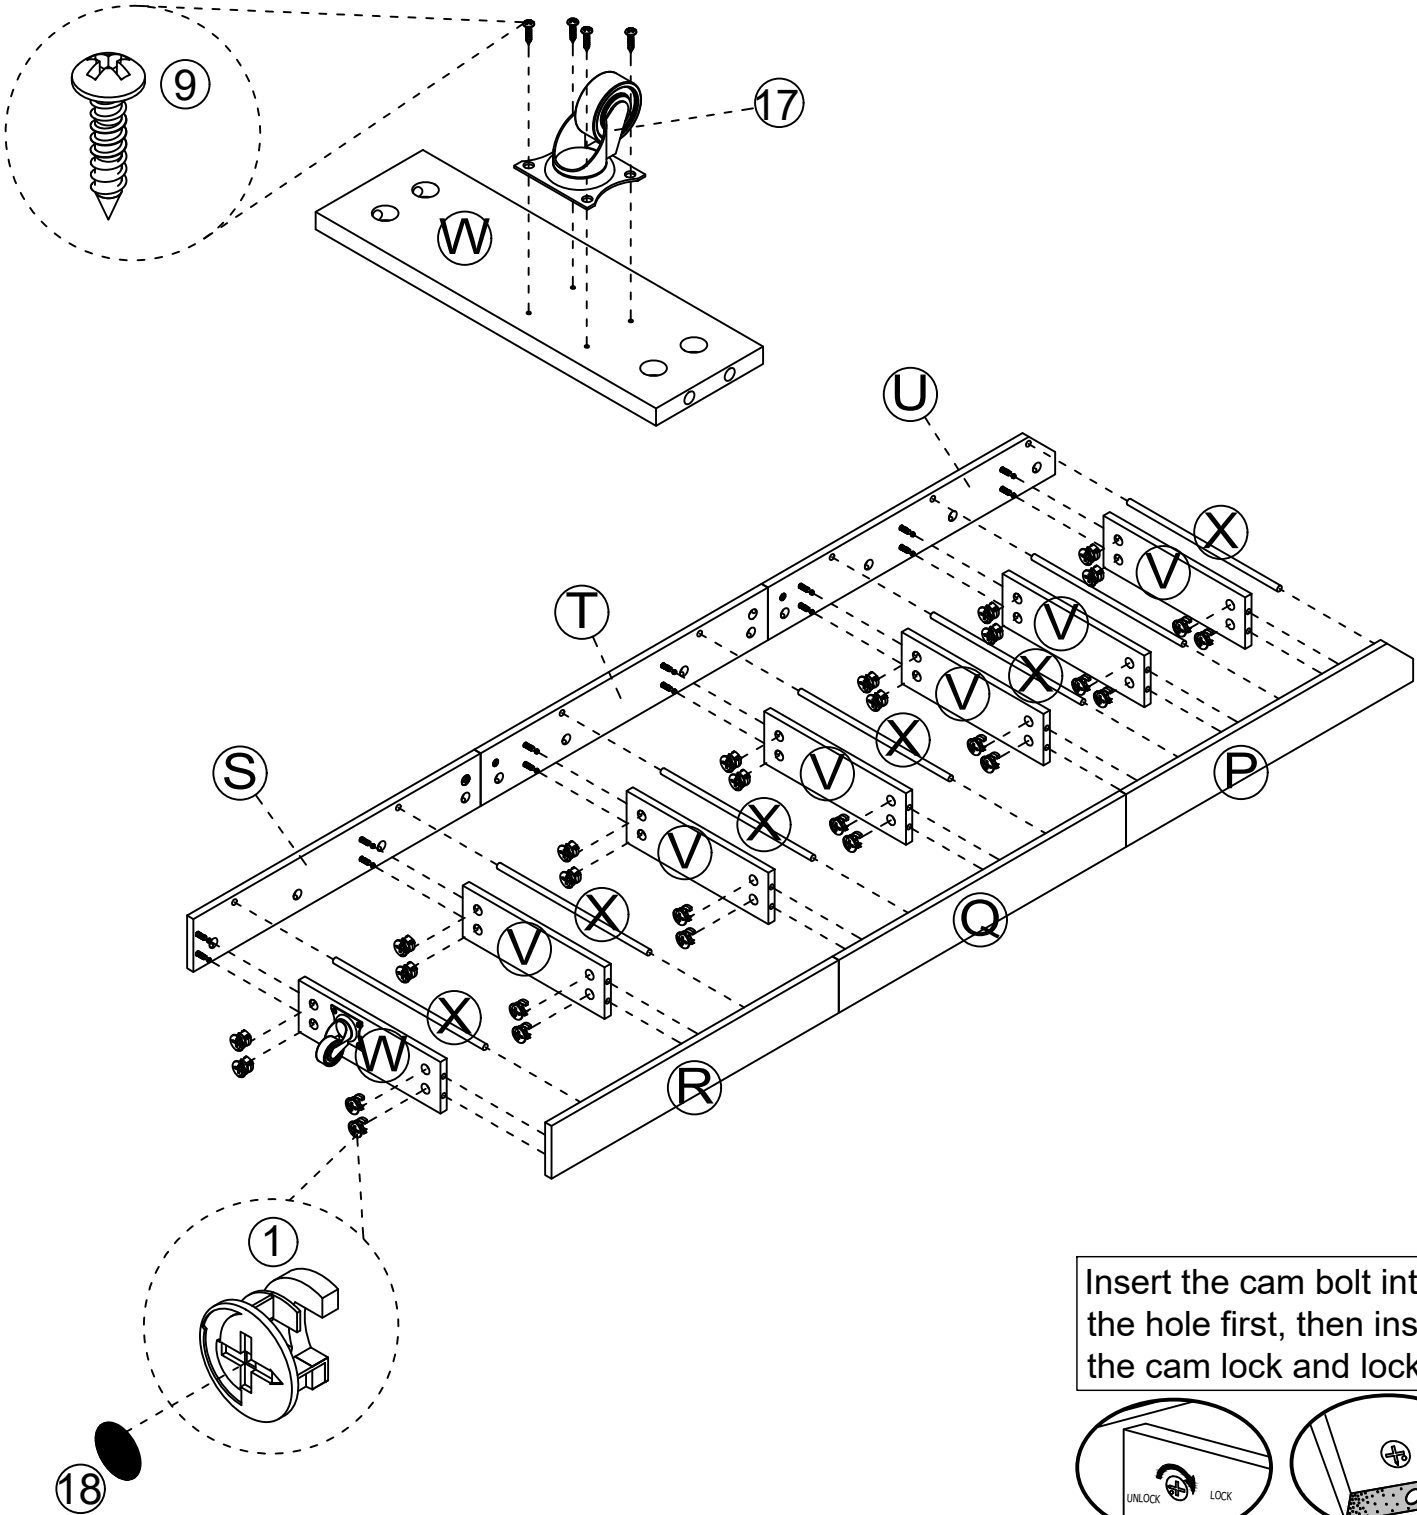


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

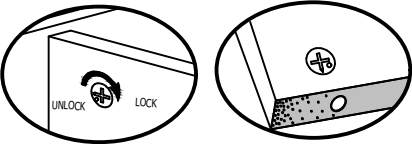


Proper orientation of CAM LOCK

STEP16

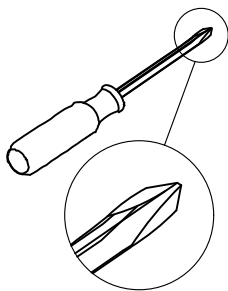


	
ø15X9.5mm	
1	X28


	
ø4X12mm	
9	X4

	
46X58X65mm	
17	X1


	
ø21mm	
18	X28

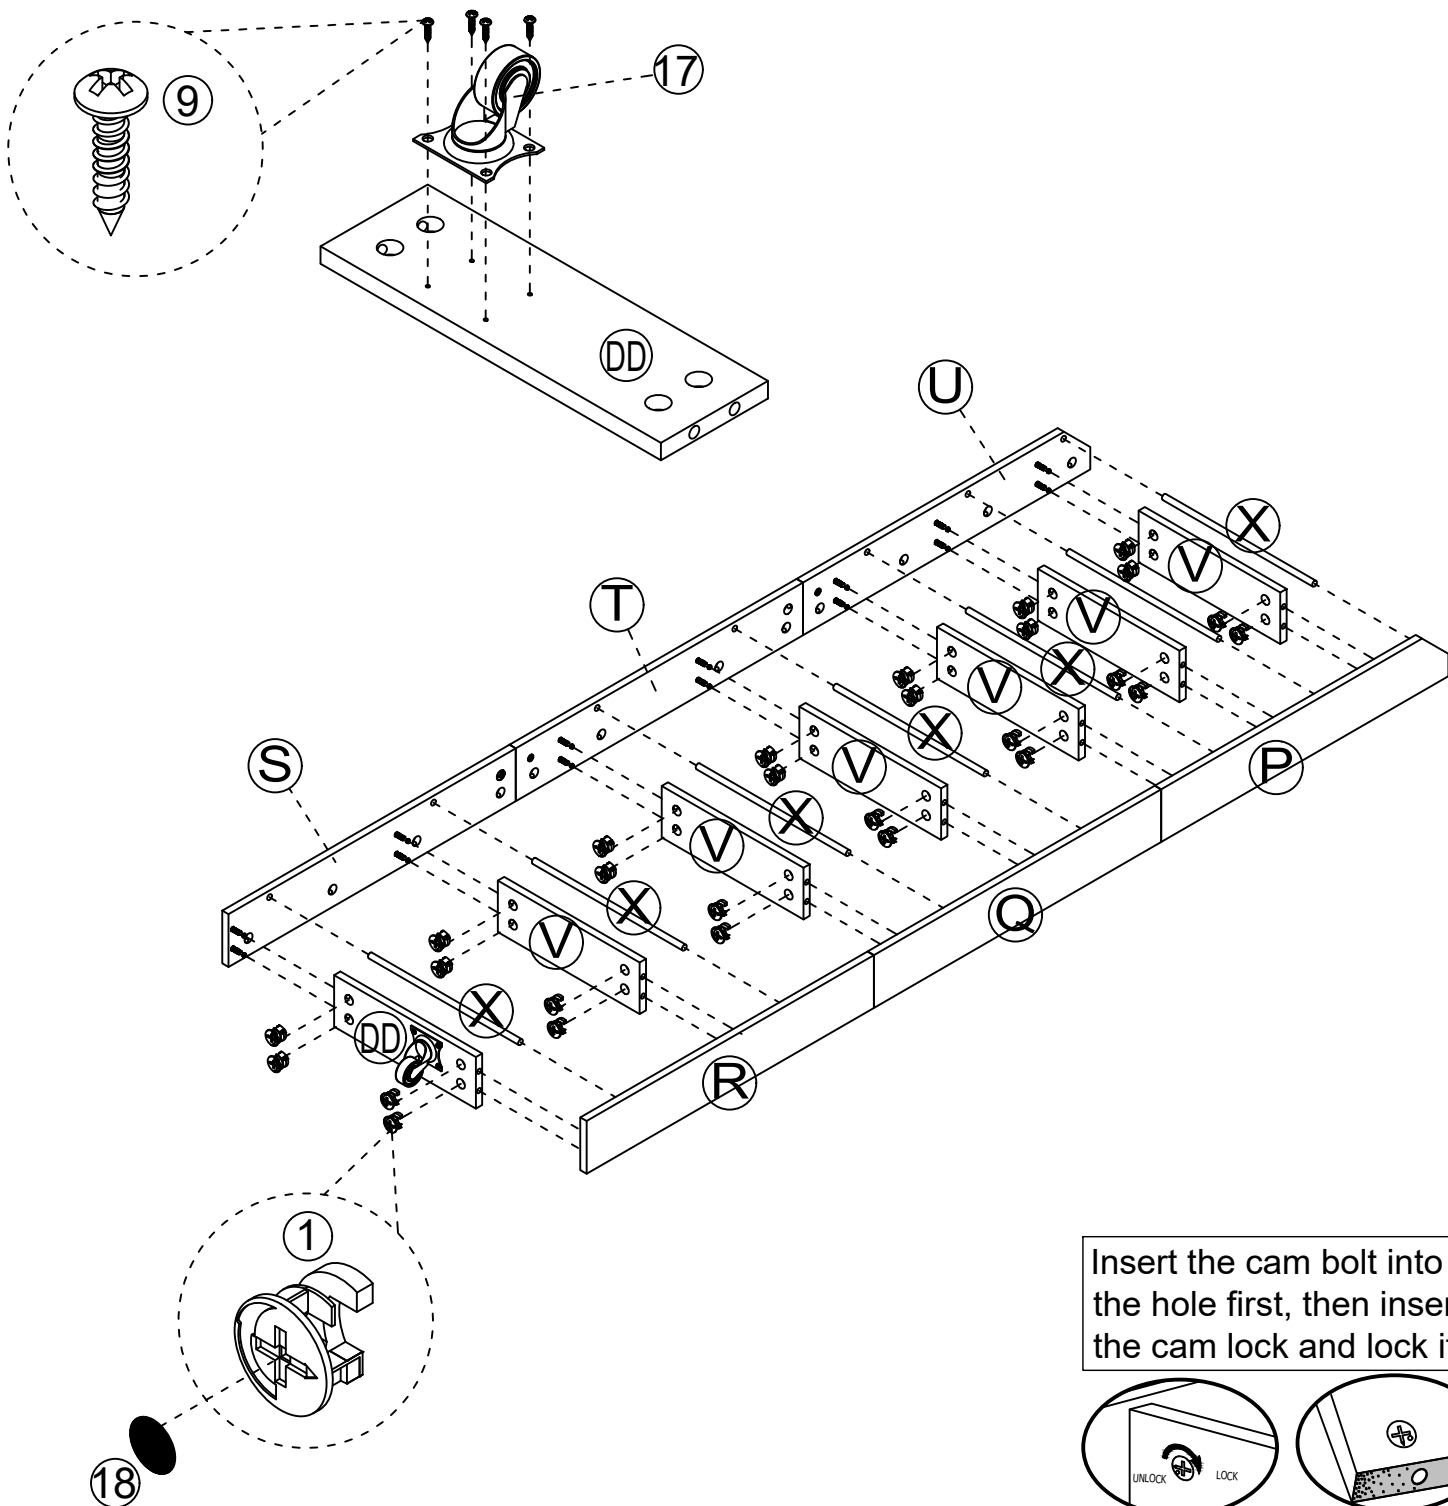


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

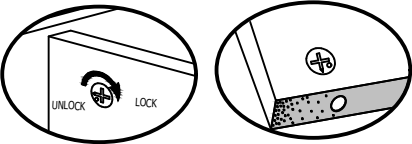

STEP17






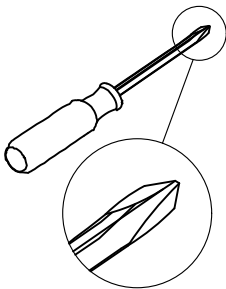


 ø9.5X10mm	
③	X4


 ø6.5X60mm	
④	X4

 ø8X30mm	
⑤	X2

 ø21mm	
⑱	X4

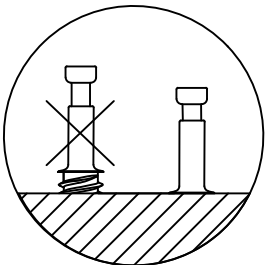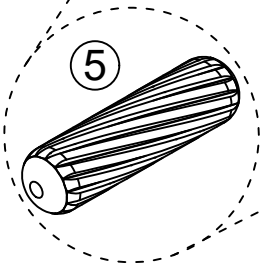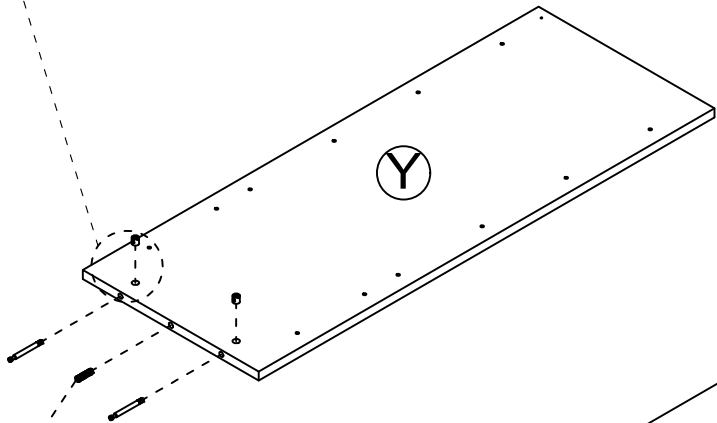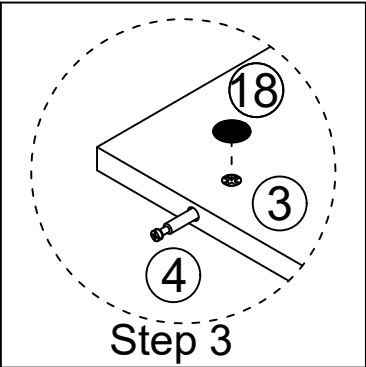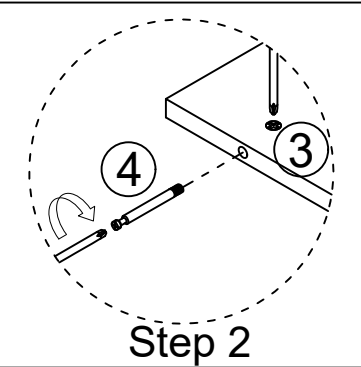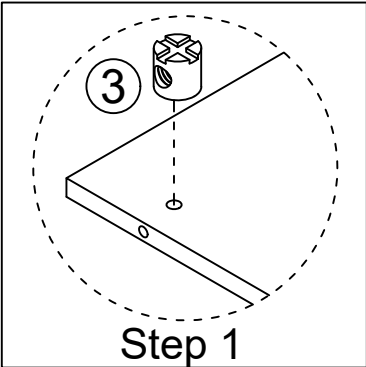


STEP18

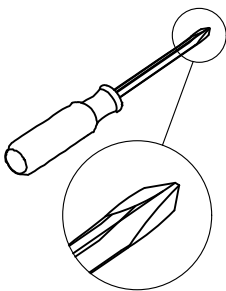


 ø15X9.5mm	
①	X4

 ø21mm	
⑱	X4

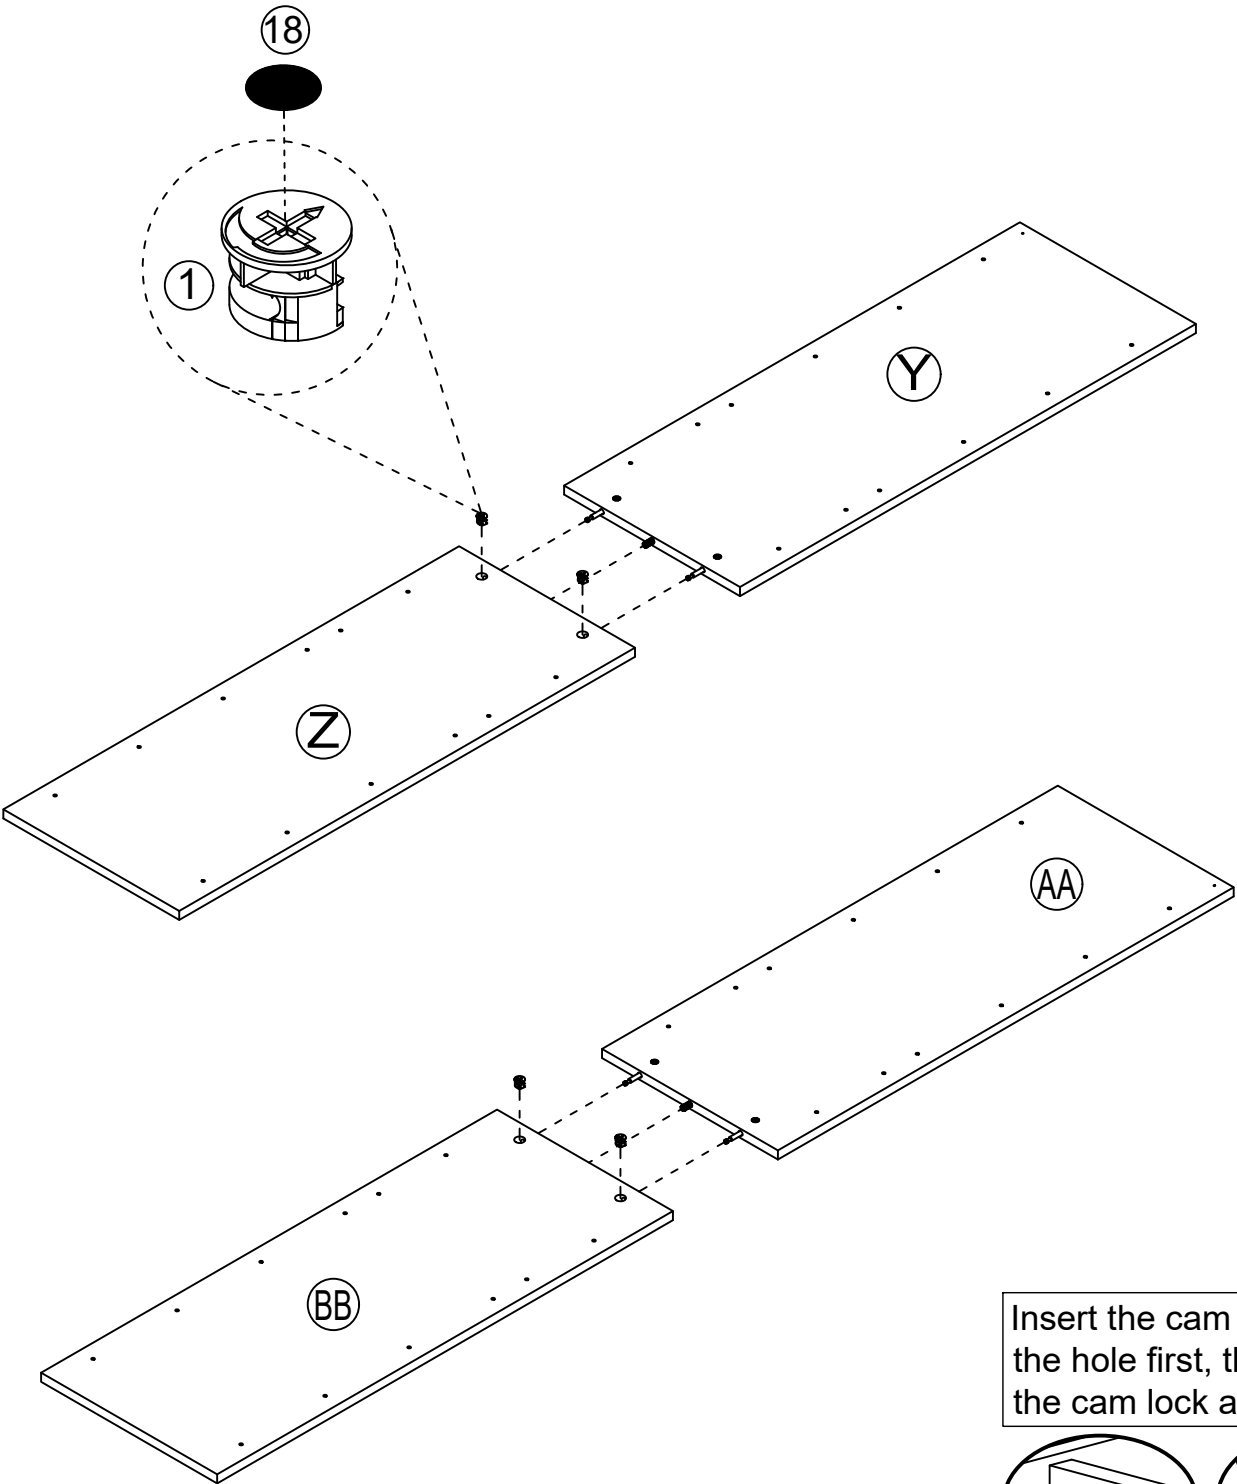



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

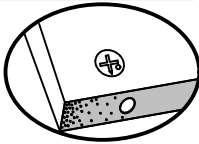



Proper orientation of CAM LOCK


STEP19

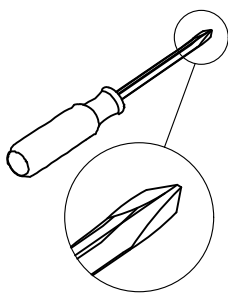


 ø6.5X35mm	
2	X48

 ø3X12mm	
8	X2

 26X21X1mm	
13	X2

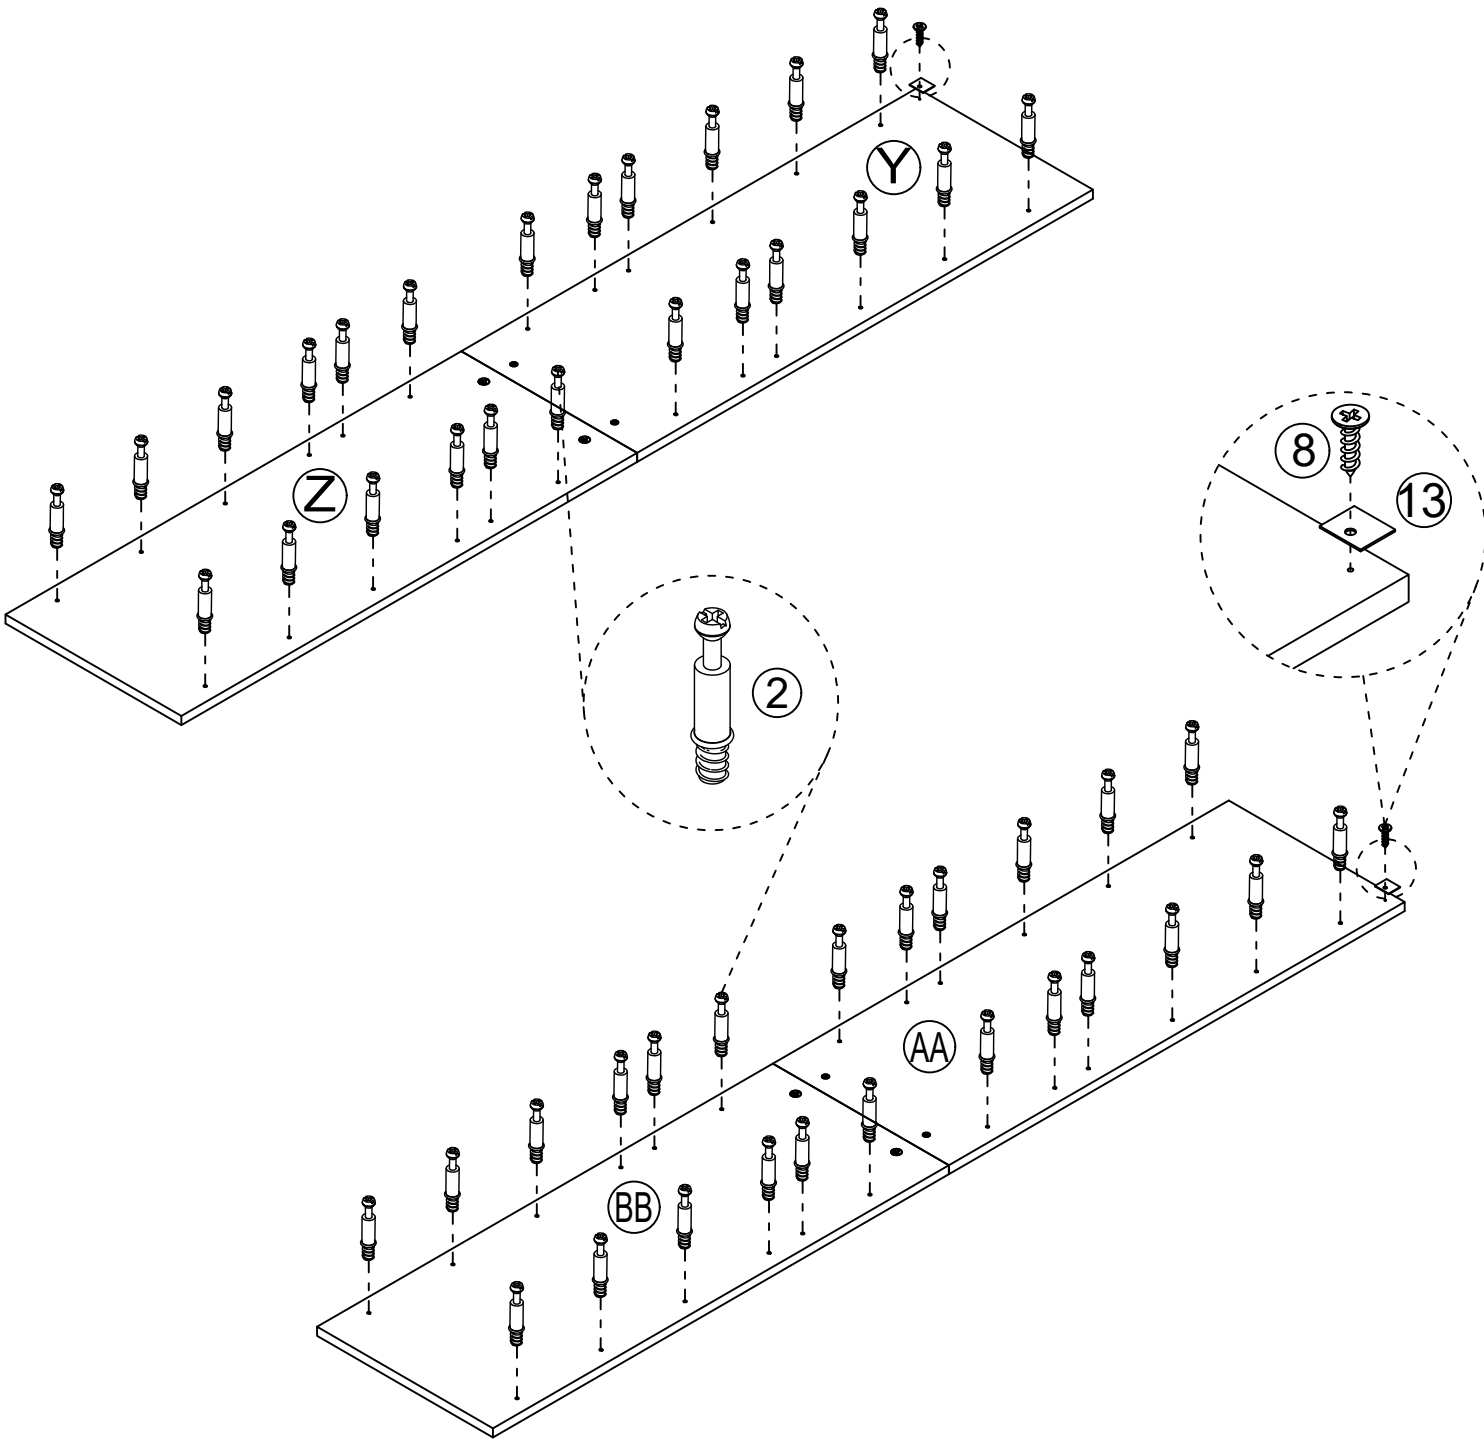


STEP20

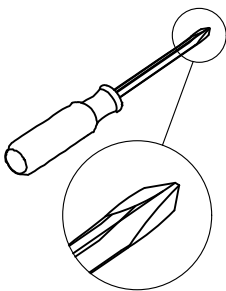


 ø15X9.5mm	
①	X24

 ø21mm	
⑱	X24

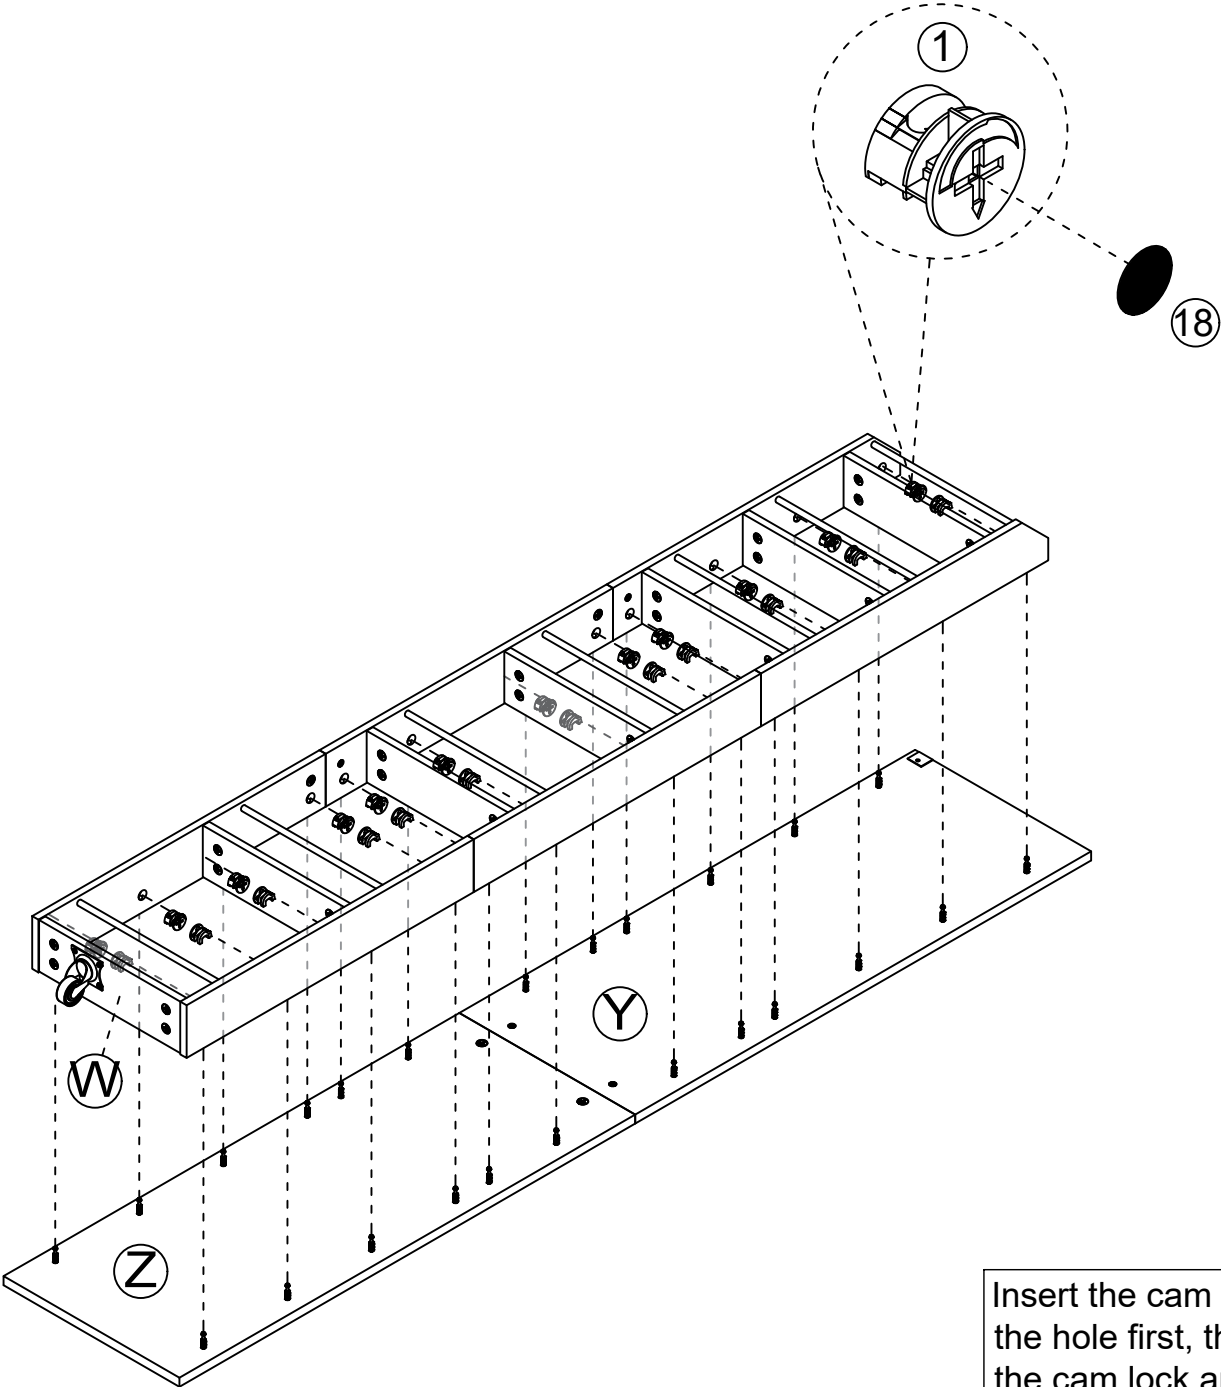


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

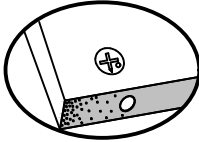



Proper orientation of CAM LOCK

STEP21

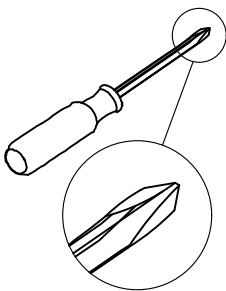


	
$\phi 15 \times 9.5 \text{mm}$	
①	X24

	
$\phi 21 \text{mm}$	
⑱	X24

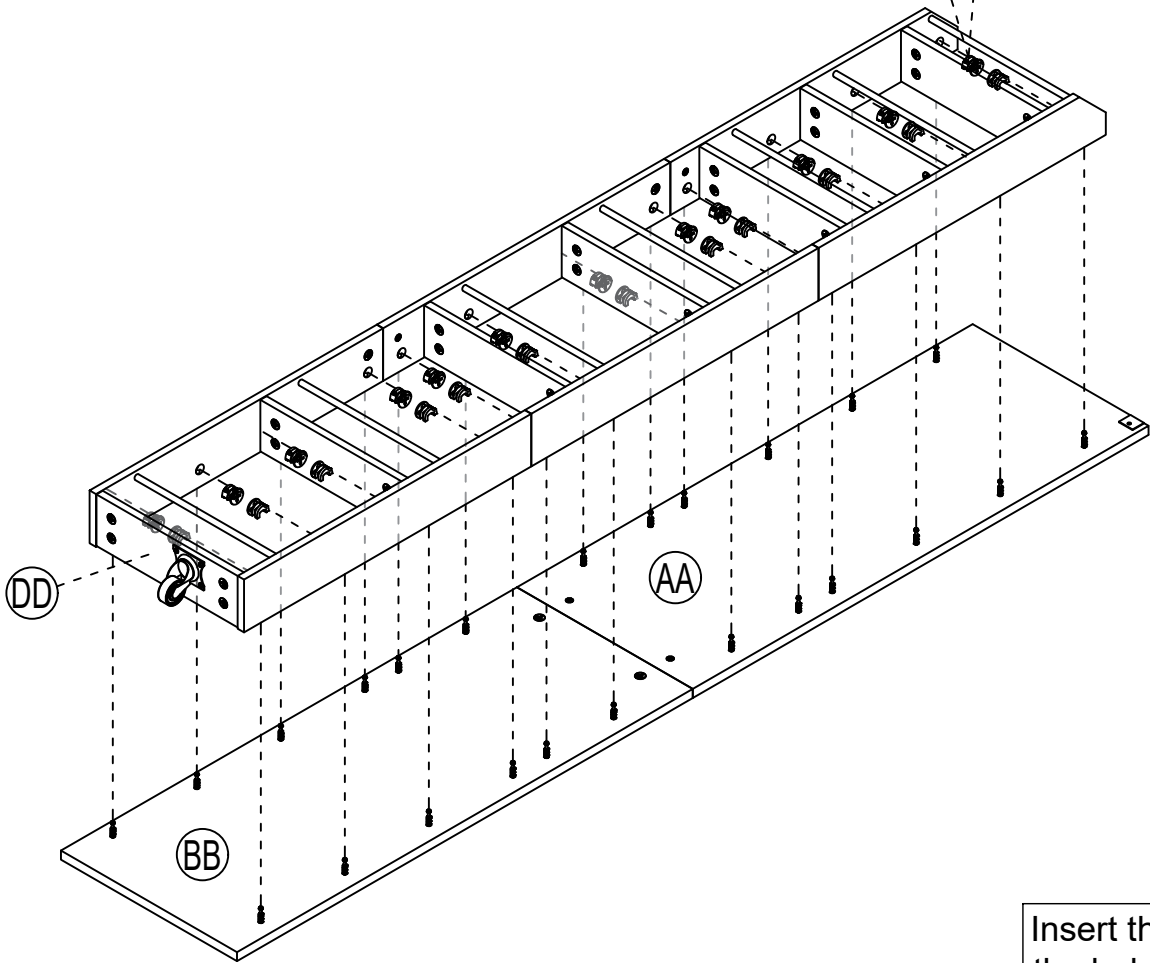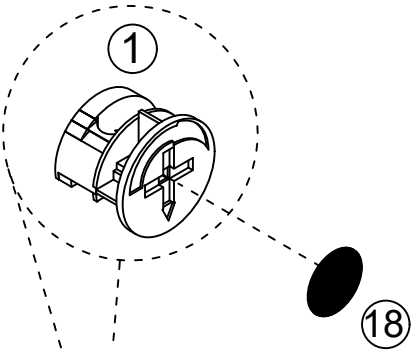



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

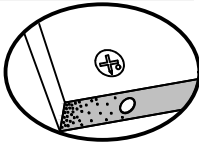



Proper orientation of CAM LOCK


STEP22

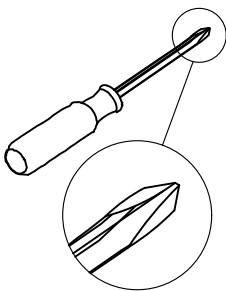



	
$\phi 4 \times 12 \text{mm}$	
9	X28

	
144X24X6	
11	X8






	
243X25X38mm	
15	X2

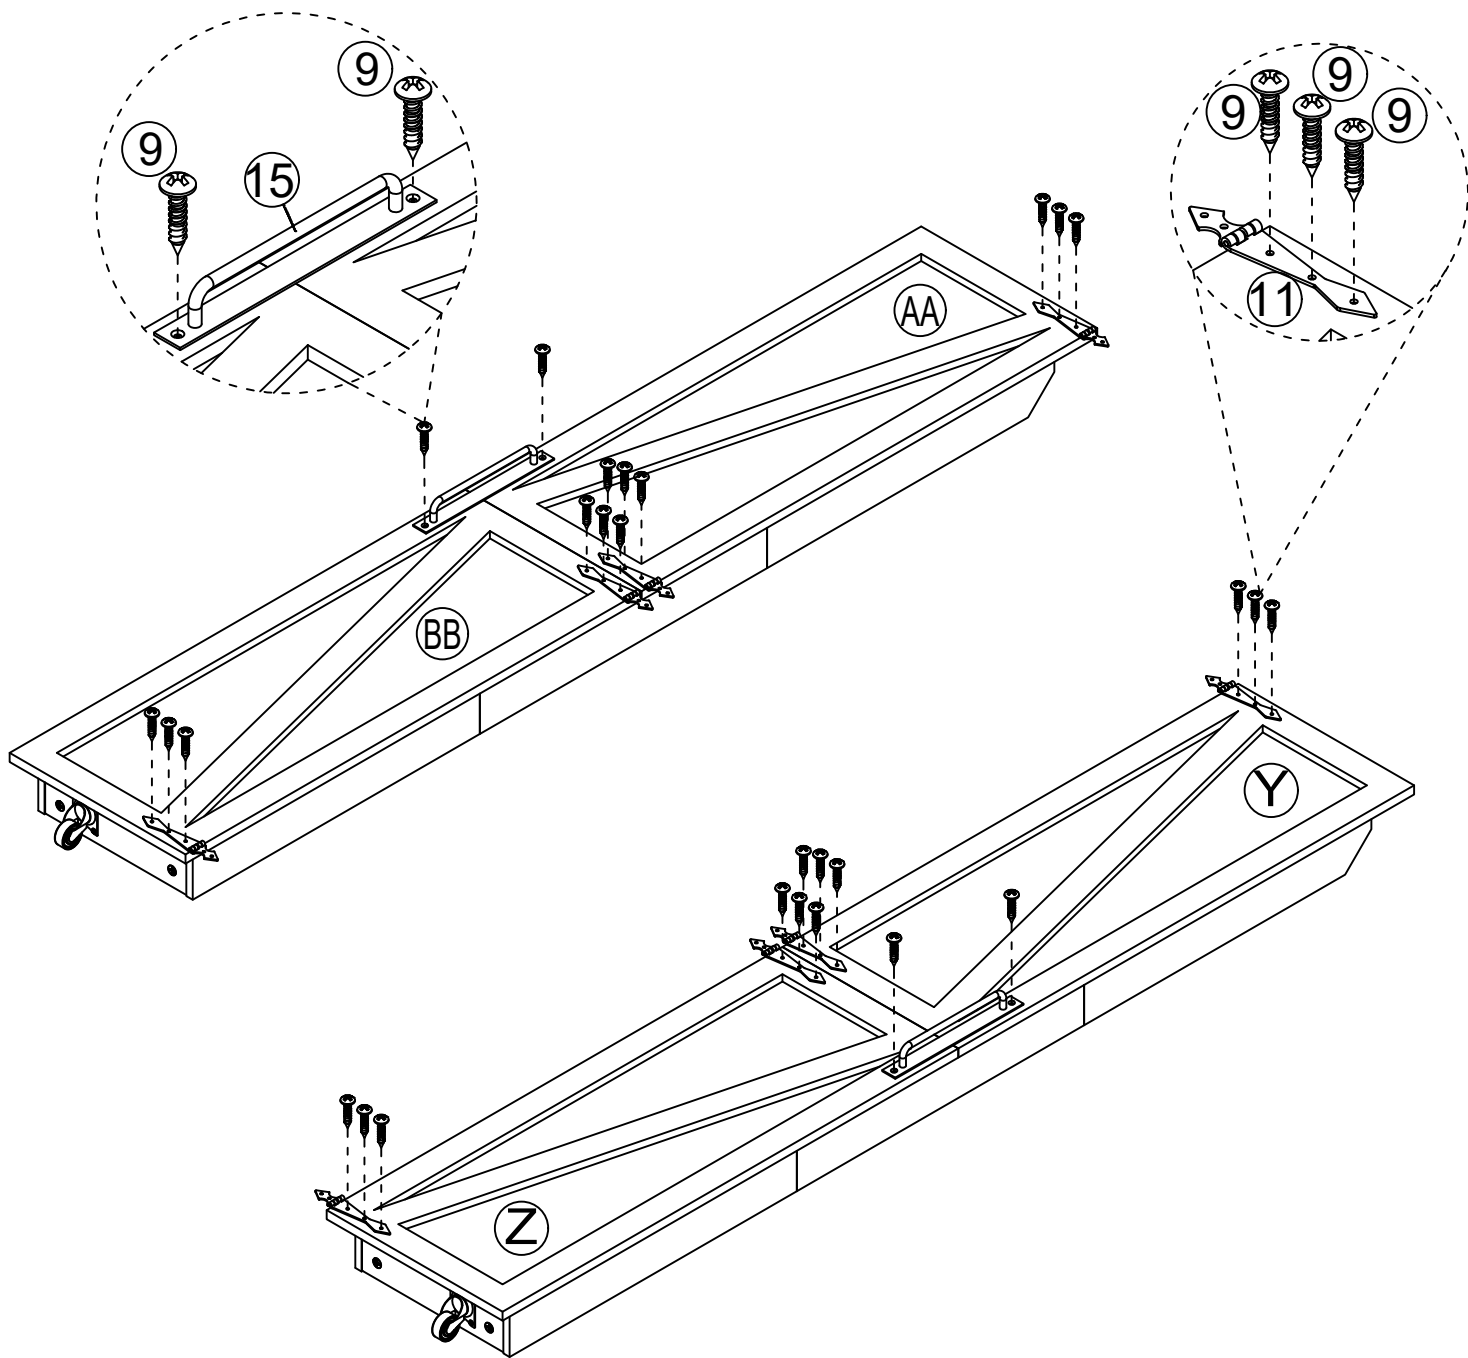





STEP23

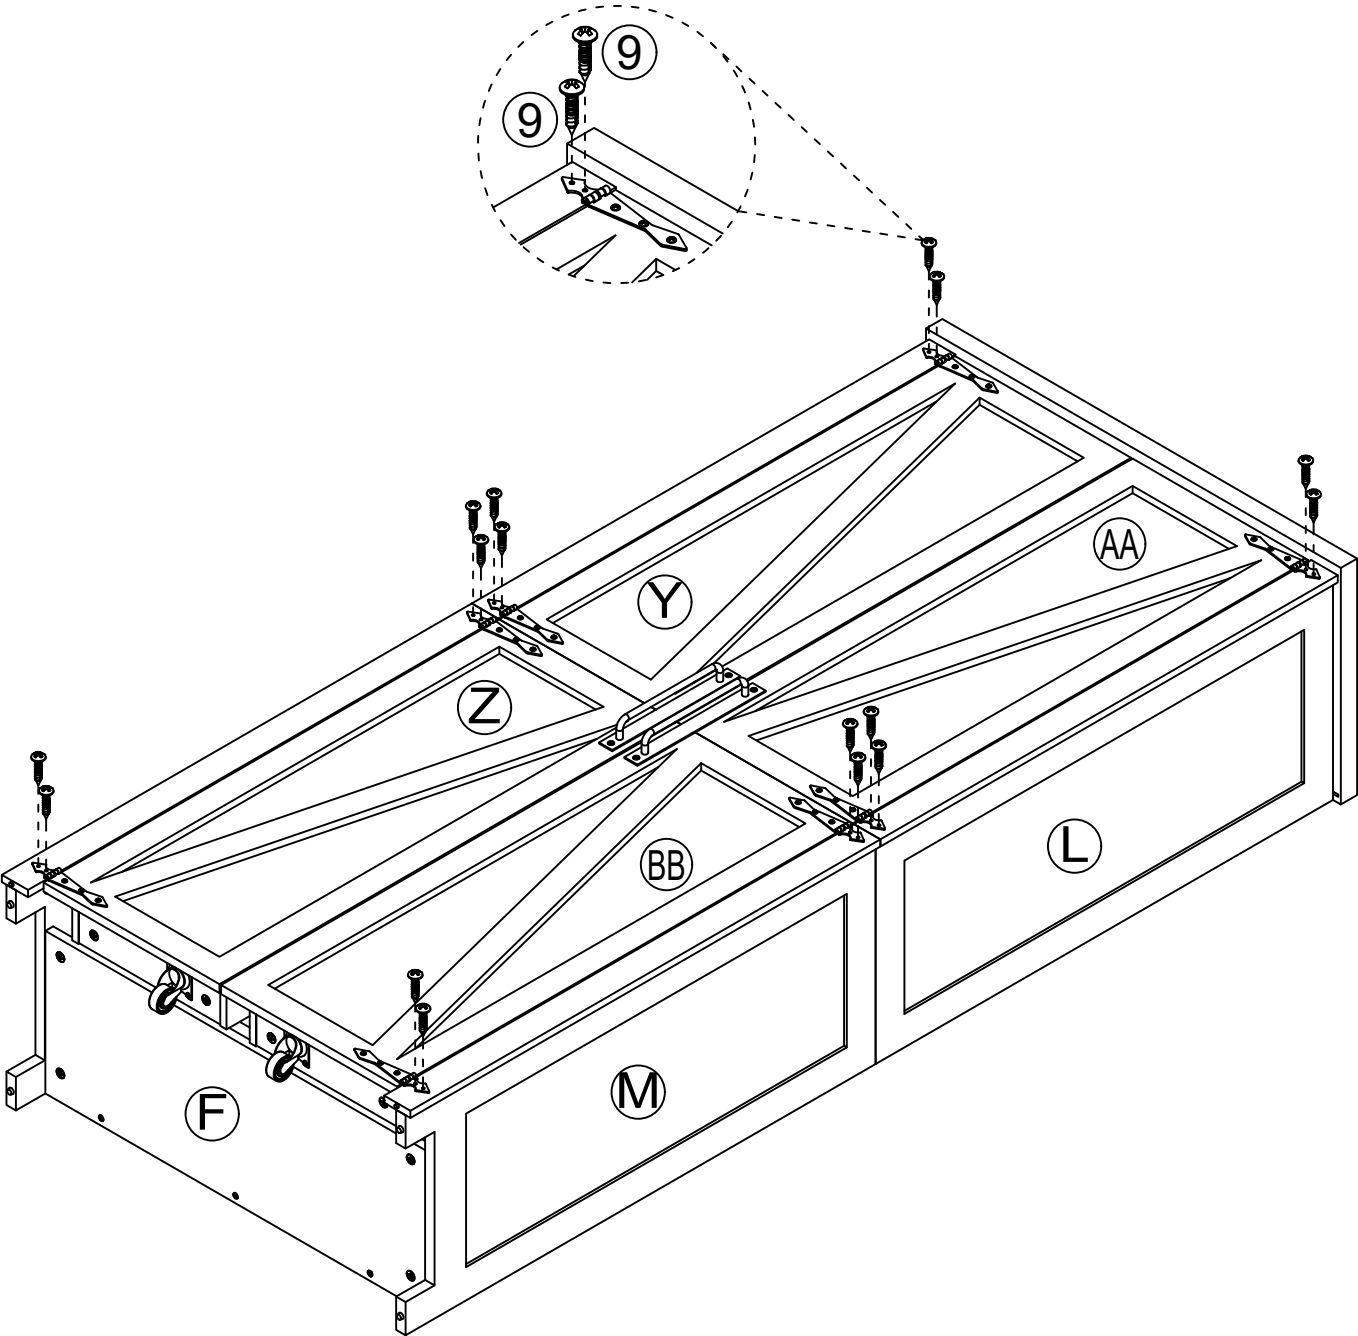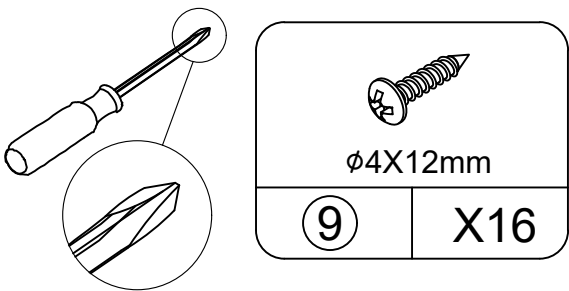



STEP24

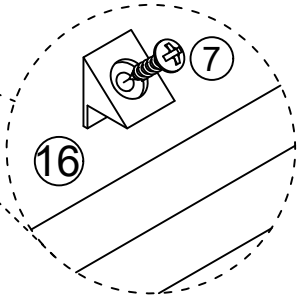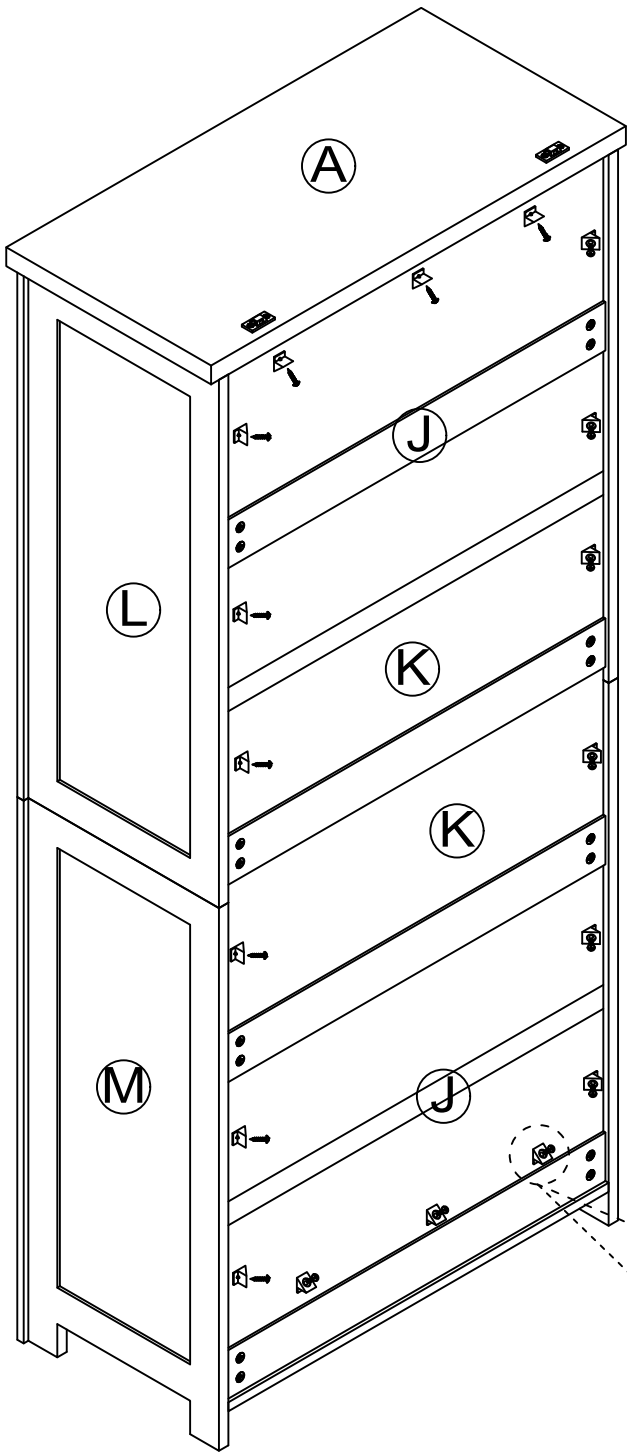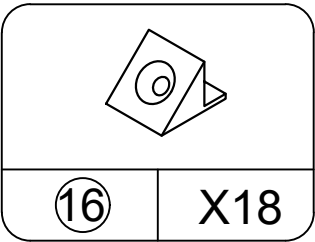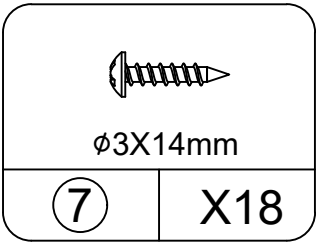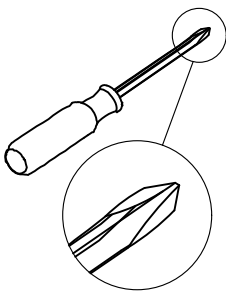





STEP25

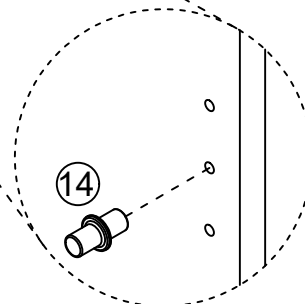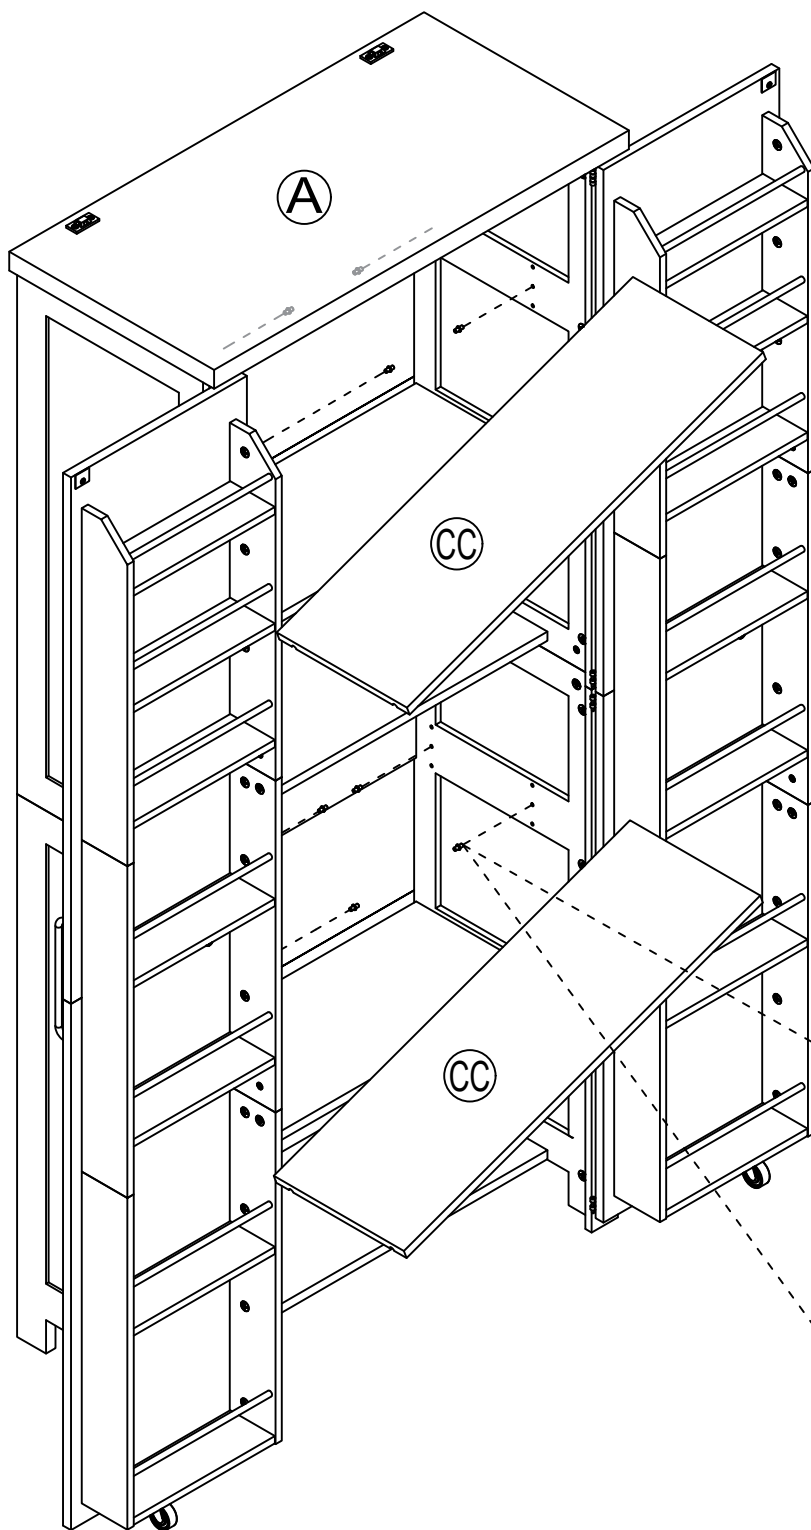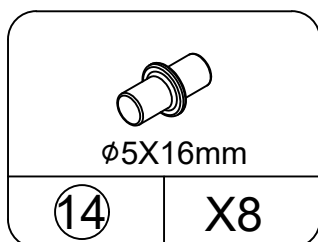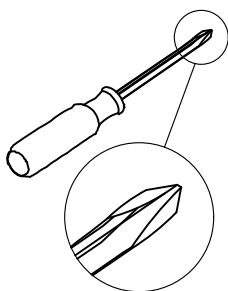

STEP26

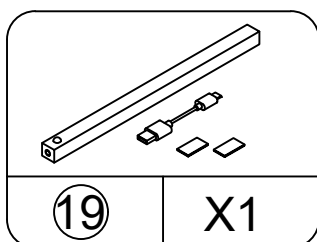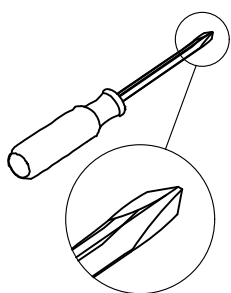

Tear the back film on the stainless steel sheet 19 and paste it on the inside of plate A, noting that the distance is the same as the sensing distance on the lamp, as shown in the figure.

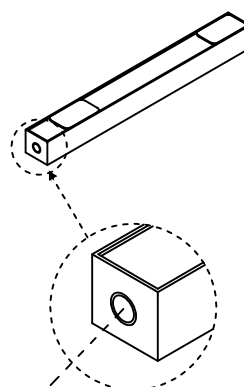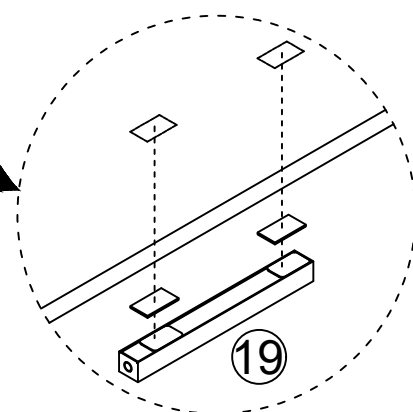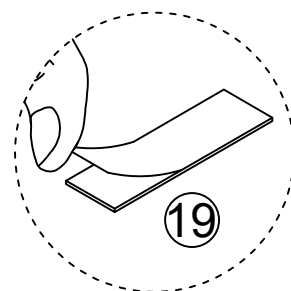
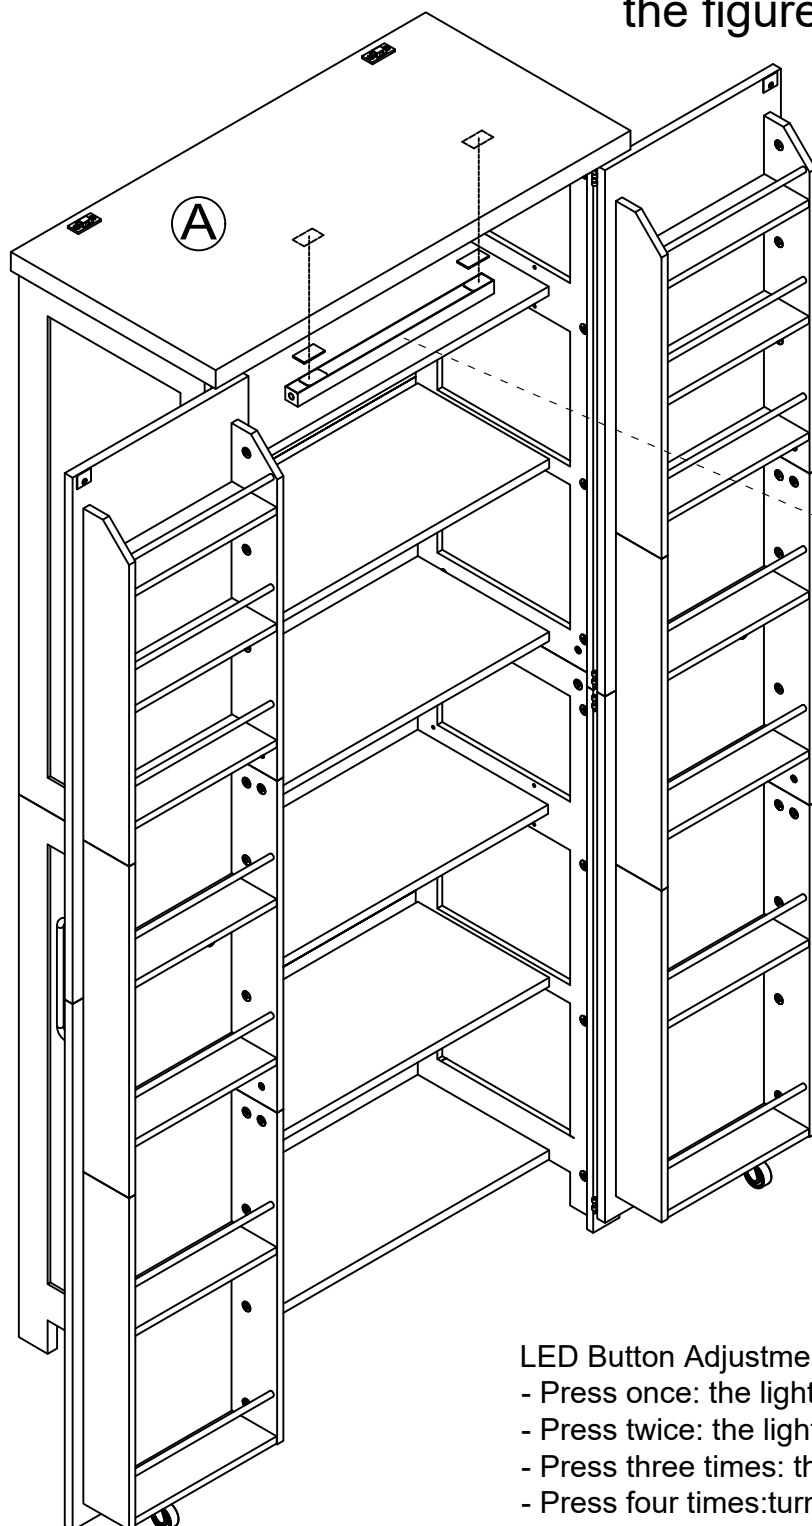


Push button switch

LED Button Adjustment Usage:


- Press once: the light is on for constant light mode.
- Press twice: the light flashes twice in night sensing mode.
- Press three times: the light flashes four times in automatic mode.
- Press four times: turn off the light.
- Press and hold to adjust the luminance.

STEP27

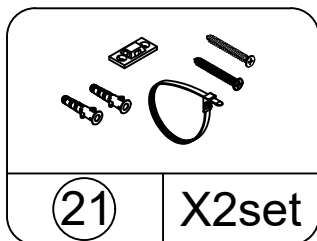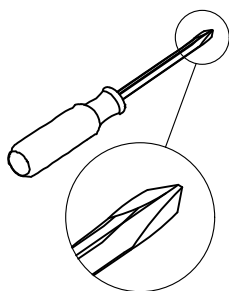


NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.


INSTALL THE ANTI-TIPPING DEVICE

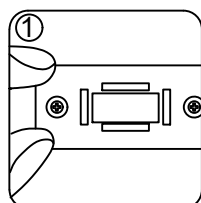


1. make mark on the wall

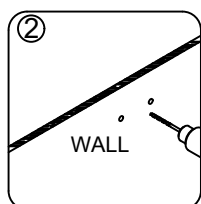


2. drill two Ø6 holes on the wall

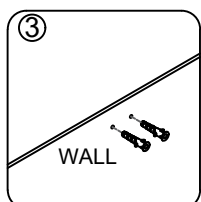

3. put two anchors in the holes

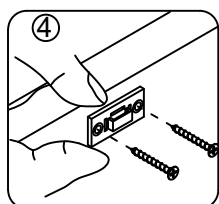

4. fix the device on the wall by the long screws

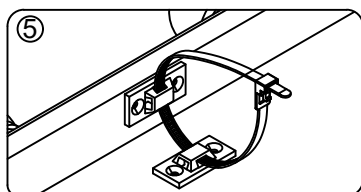

5. Push the cabinet close to the wall so that the two bases are close to each other, and then nylon tie to tighten it.



WALL

