

NOTICE

- *Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- *This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- *This item may require periodic tightening.
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Tools Required for Assembly (included): Allen Key
- *Estimated Assembly Time: 10 minutes.

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Dust regularly with small brush or vacuum. Spills should be taken care of immediately before they harden or stain with a slightly damp sponge.

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top Frame		x1
B	Leg Frame		x2
C	Support Frame		x1
HW1	Allen Bolt (M6x20)		x4
HW2	Allen Bolt (M6x40)		x8
HW3	Flat Washer (M6)		x12
HW4	Allen Key		x1



MODEL#PAT7566

PRODUCT DIMENSIONS:

47.24"L x 27.56"W x 15.35"H (TABLE)

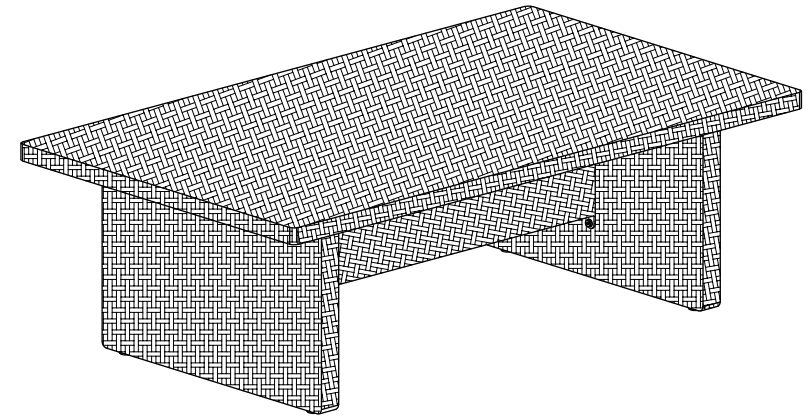

Weight capacity: 275Lbs (single seat)
Warning: Do not stand on table
Warning: Do not over torque bolts/screws

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.


*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time : 10 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer care team is always here to help. Please email customersupport@safavieh.com

1

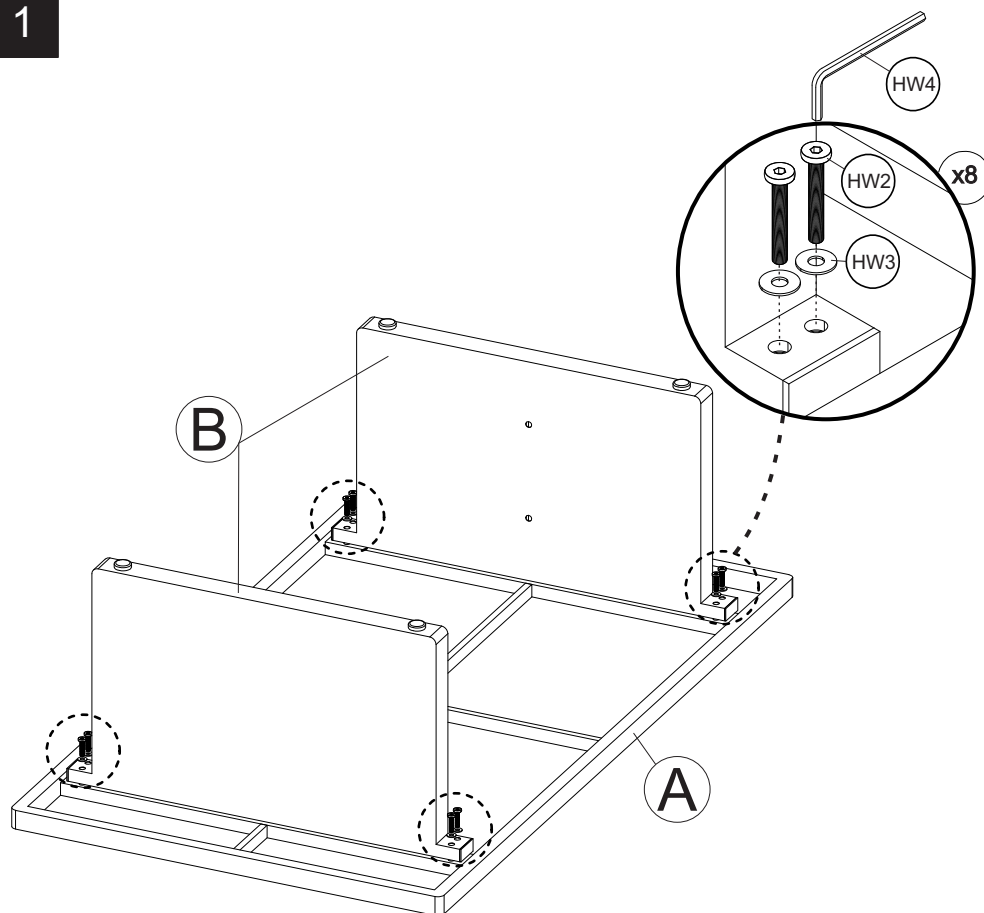

STEP 1: On the soft surface, align the screw holes on the Top Frame (A) to the screw holes on the Leg Frame (B). Place the Flat Washer (HW3) on the Allen Bolts (HW2) in the order shown below. Use the Allen Key (HW4) to screw in the Bolts (HW2) with the washers attached.

2

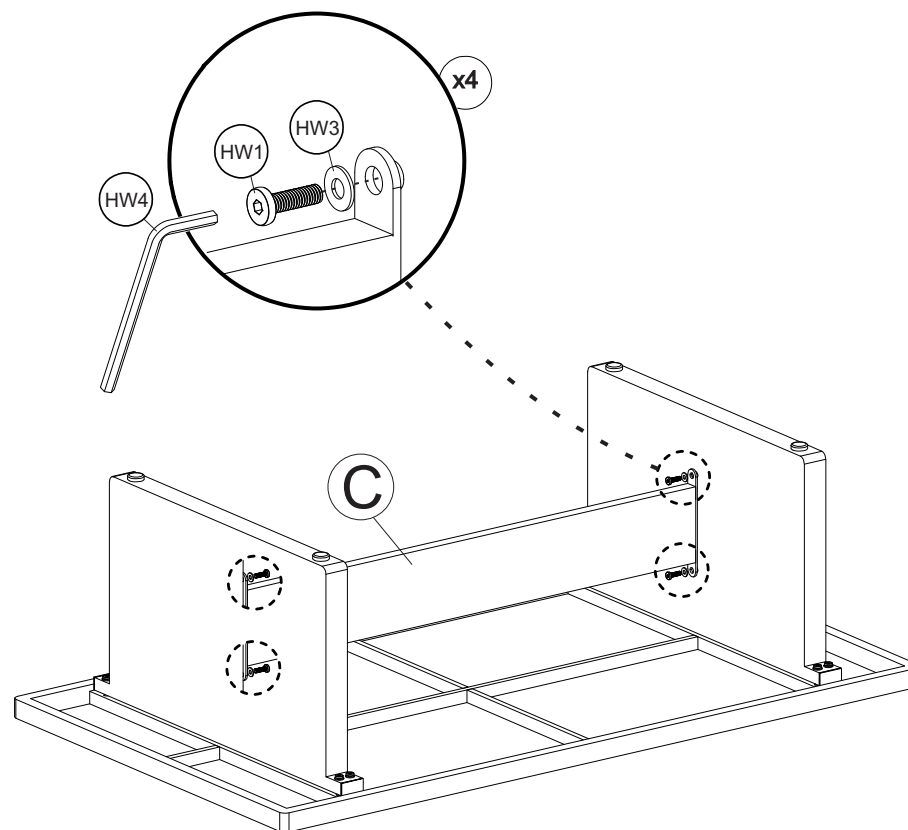


STEP 2: Align the screw holes on the Support Frame (C) to the screw holes on the Leg Frame (B). Place the Flat Washer (HW3) on the Allen Bolts (HW1) in the order shown below. Use the Allen Key (HW4) to screw in the Bolts (HW1) with the washers attached.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time : 10 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer care team is always here to help. Please email customersupport@safavieh.com

3

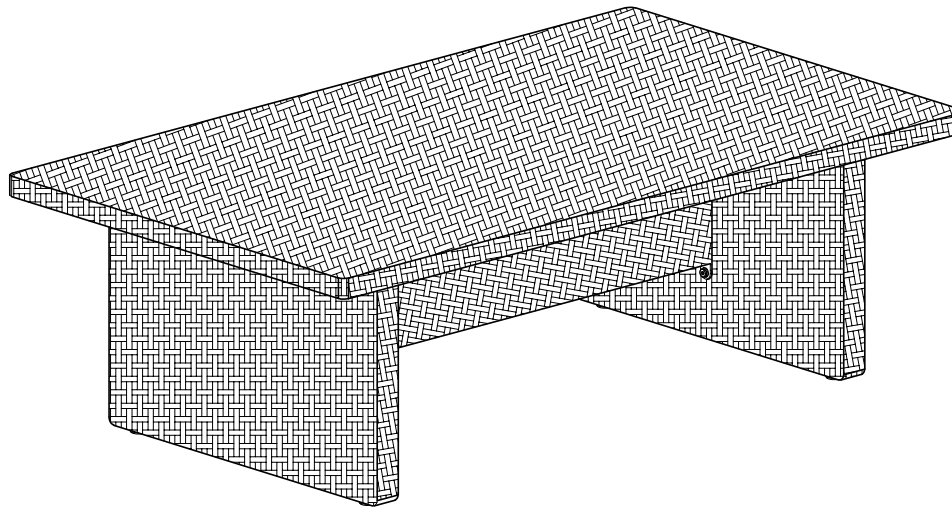

STEP 3: Finishing for using.