

ASSEMBLY INSTRUCTIONS
30INCH BATH VANITY (COMBO)

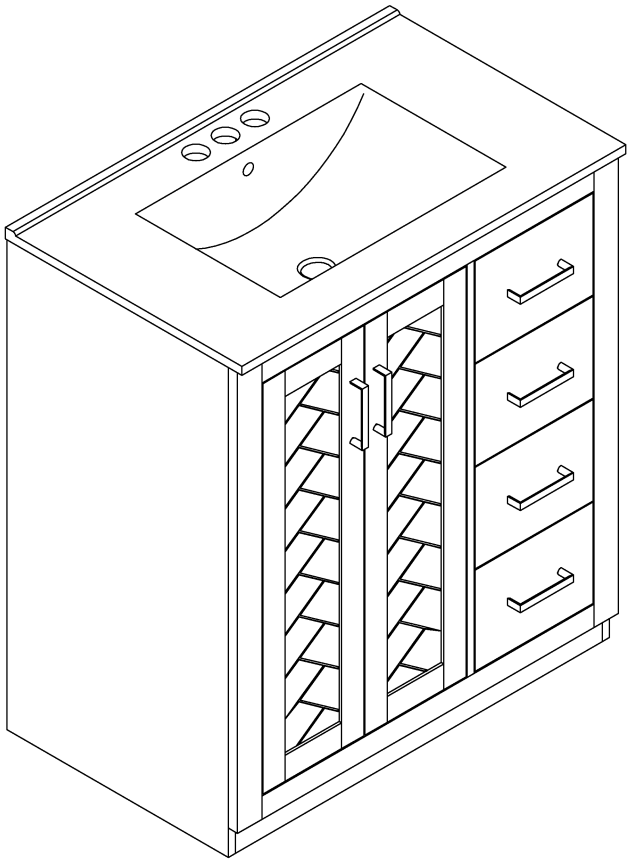

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

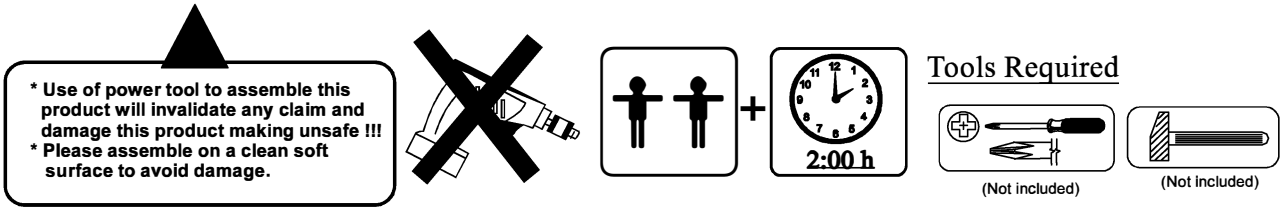

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!
We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation

Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.

Cam Lock Assembly Instructions





Diagram A

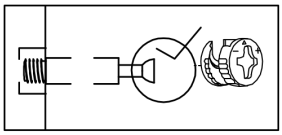

Insert Cam Bolt into hole as shown in diagram A.





Diagram B

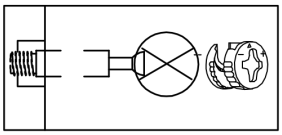

Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.







Diagram C

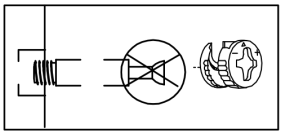


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.

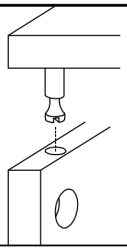

Connect the panels together.

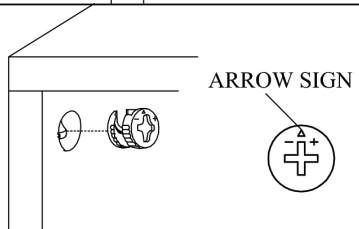


Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

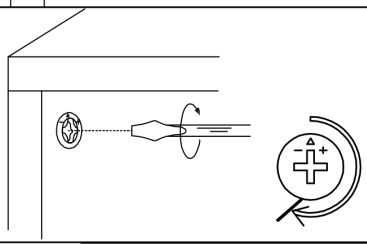


To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

Before installing the slide, separate the cabinet member and the drawer member.


Pay attention when connecting !
The sliding module must be at the front end.

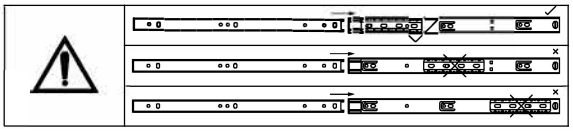


STEP 1 : Extend Slide

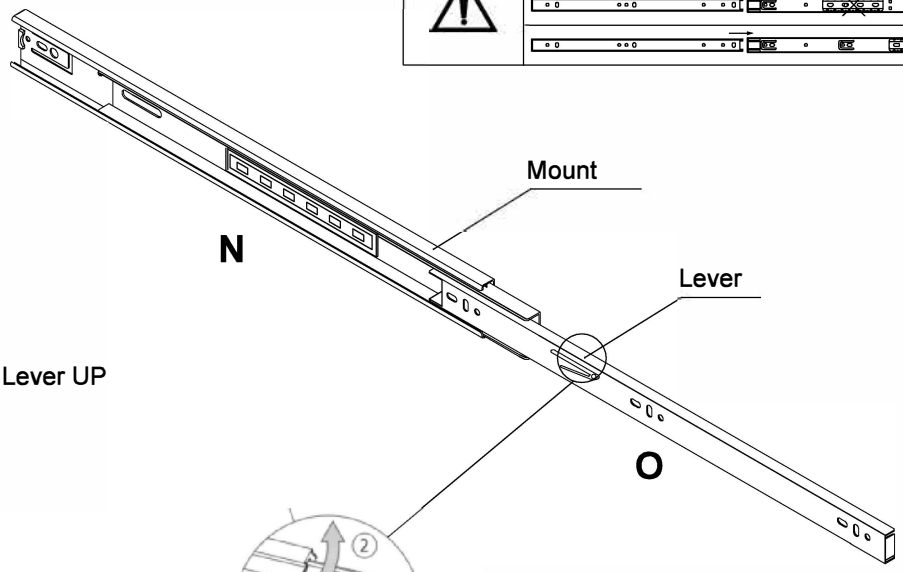

STEP 2: Push Lever UP

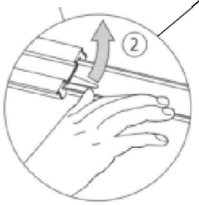


Push lever for the left of drawer ,
press the lever for the right of drawer.

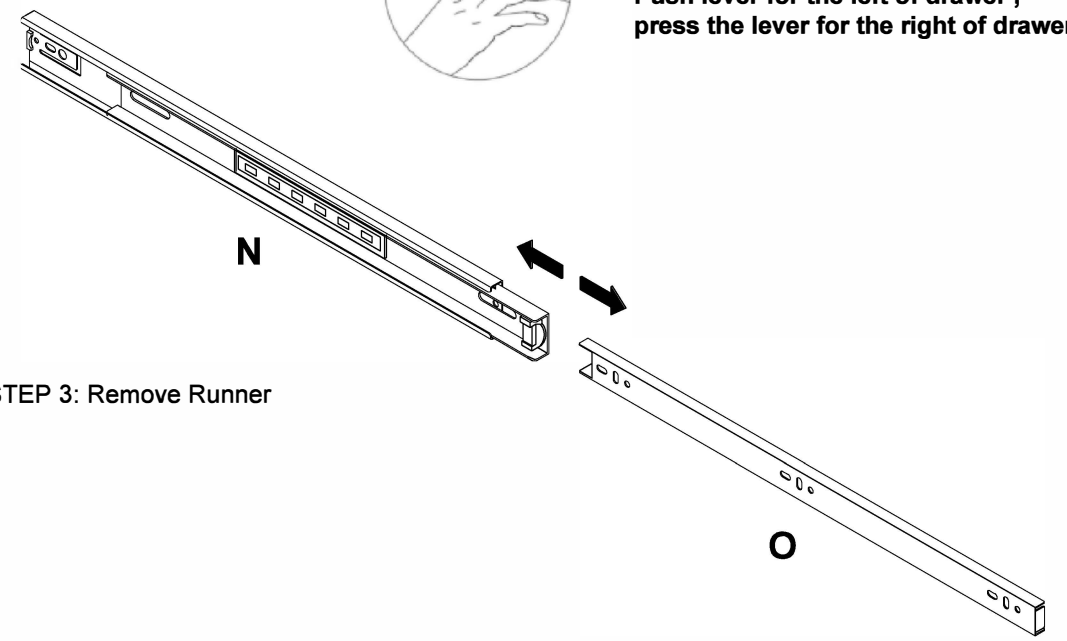














STEP 3: Remove Runner

Detail View - CABINET













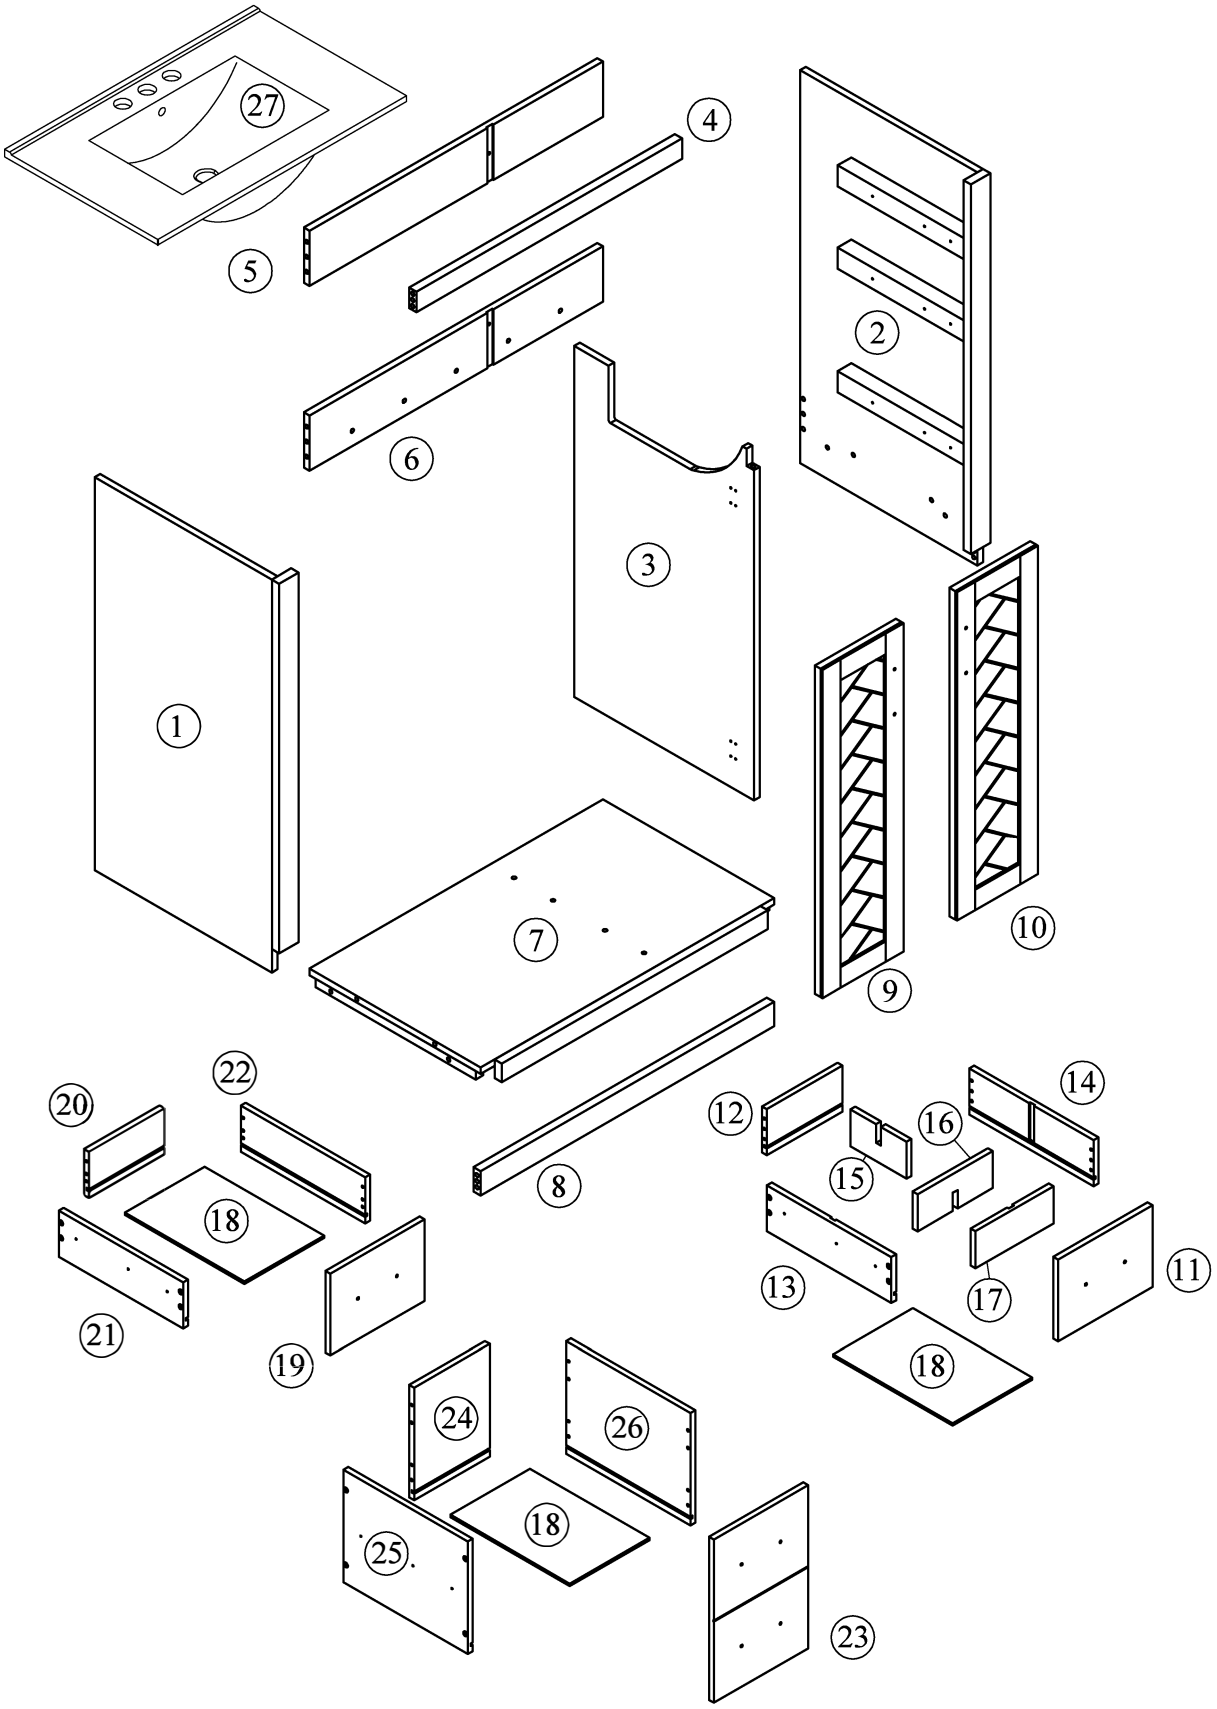


Identifying the Hardware-Identify the hardware using the illustrations below.









Part List

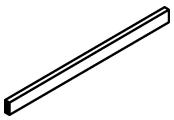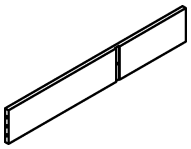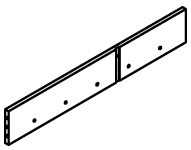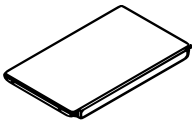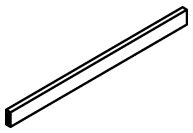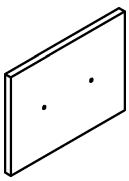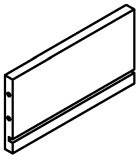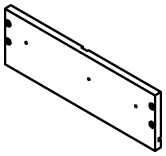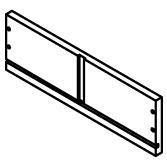1  Side Panel (L) - 1pc	2  Side Panel (R) - 1pc
3  Mid Panel - 1pc	4  Top Bar Front - 1pc
5  Top Rear Panel - 1pc	6  Bottom Rear Panel - 1pc
7  Bottom Frame - 1pc	8  Bottom Bar Front - 1pc
9  Cabinet Door (L) - 1pc	10  Cabinet Door (R)- 1pc
11  Top Drawer Face - 1pc	12  Top Drawer Back Panel - 1pc
13  Top Drawer Side Panel (L) - 1pc	14  Top Drawer Side Panel (R) - 1pc


Part List

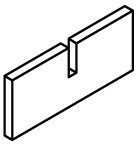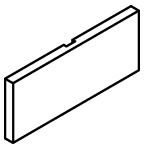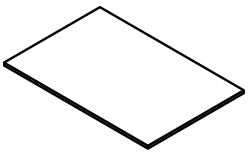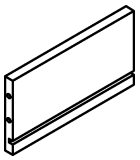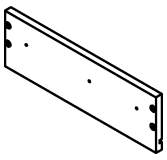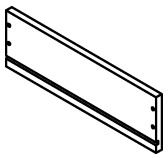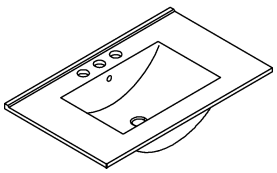15  Drawer divider (A) - 1pc	16  Drawer divider (B) - 1pc
17  Drawer divider (C) - 1pc	18  Bottom Drawer Panel - 3pcs
19  Mid Drawer Face - 1pc	20  Mid Drawer Back Panel - 1pc
21  Mid Drawer Side Panel (L) - 1pc	22  Mid Drawer Side Panel (R) - 1pc
23  Bottom Drawer Face - 1pc	24  Bottom Drawer Back Panel - 1pc
25  Bottom Drawer Side Panel (L) - 1pc	26  Bottom Drawer Side Panel (R) - 1pc
27  Sink - 1pc	


Hardware List

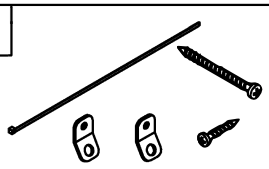
A  ø13x1/4"x28mm	B  ø1/4"x16x1mm	C  ø6x35mm
Hex-Head bolts (4pcs)	Washer (4pcs)	Three in one bolts (17pcs)
D  ø14.5x12mm	E  ø8xø4x25mm	F  ø8xø4x32mm
Three in one lock (17pcs)	Round head screw (2pcs)	Round head screw (24pcs)
G 	H  ø5/32"x20mm	I  ø5/32"x25mm
Handle (6pcs)	Handle screw (4pcs)	Handle screw (8pcs)
J 	K  ø7xø3.5x15mm	L 
Damping hinge (4pcs)	Flat head screw (24pcs)	L-Bracket (1pc)
M  ø7xø3.5x12mm	N  ø300x35mm	O  ø298x18mm
Round head screw (2pcs)	Slide rails (6pcs)	Slide rails (6pcs)
P  ø6xø3x12mm	Q  ø8x30mm	R  4mm
Flat head screw (36pcs)	Wood dowel (21pcs)	Allen key (1pc)
S 	T  ø6x30mm	
Anti fall hardware (1set)	Wood dowel (16pcs)	

STEP: 1

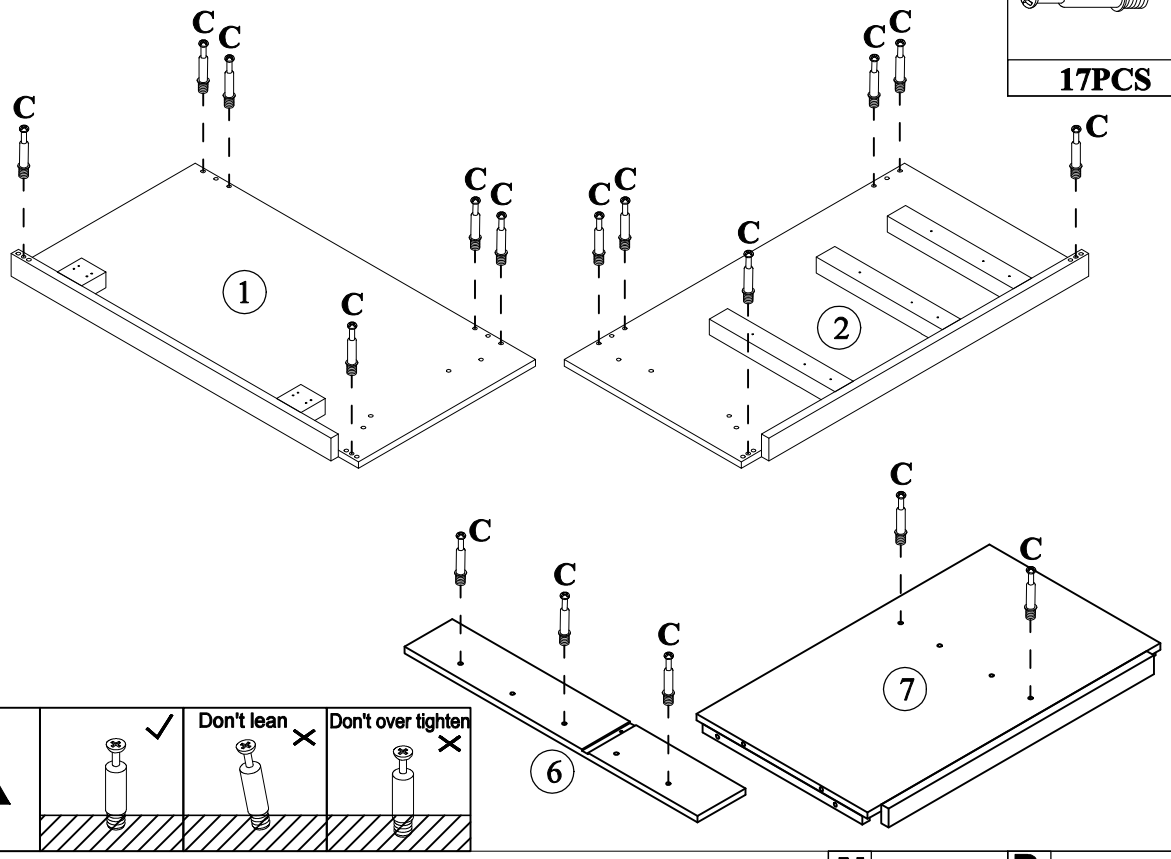
C
17PCS
1
2
6
7
Don't lean
Don't over tighten


STEP: 2

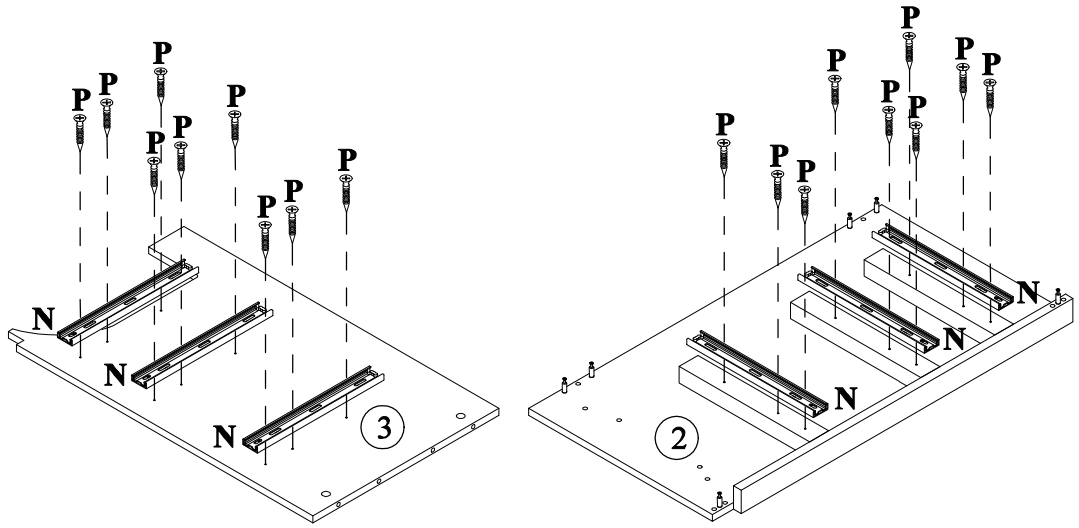

N
6PCS
P
18PCS
3
2

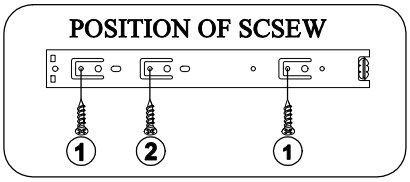
POSITION OF SCSEW
1
2
1

STEP: 3


D	Q
2PCS	2PCS

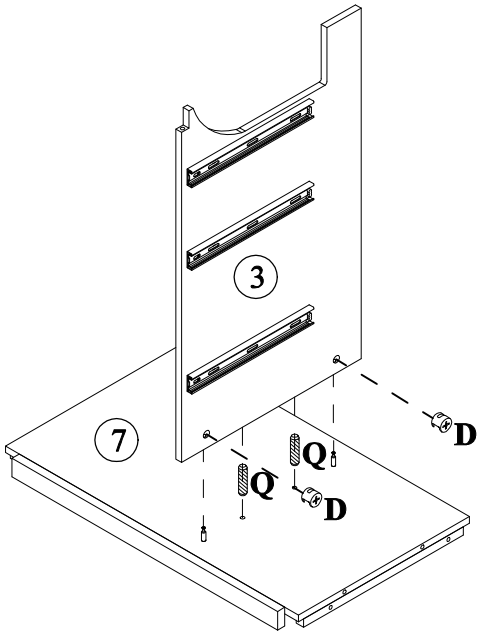


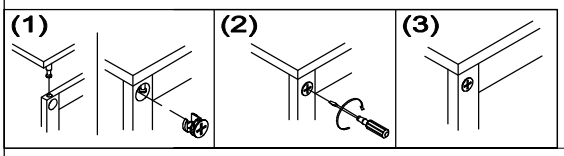

STEP: 4


L	M	Q
1PC	2PCS	1PC

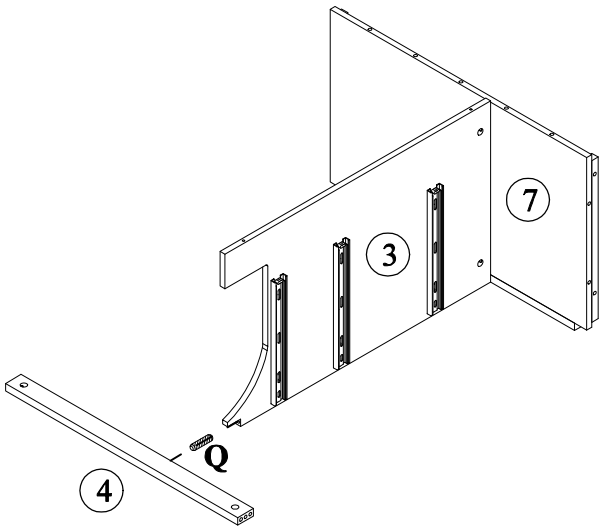

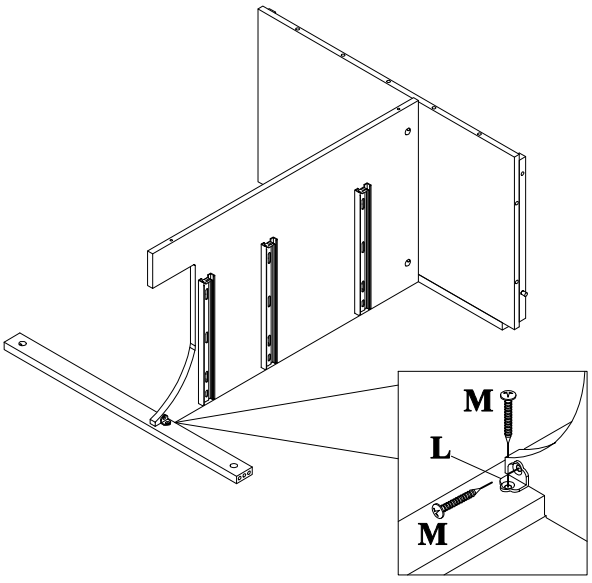


STEP: 5

E	D	Q
2PCS	3PCS	2PCS

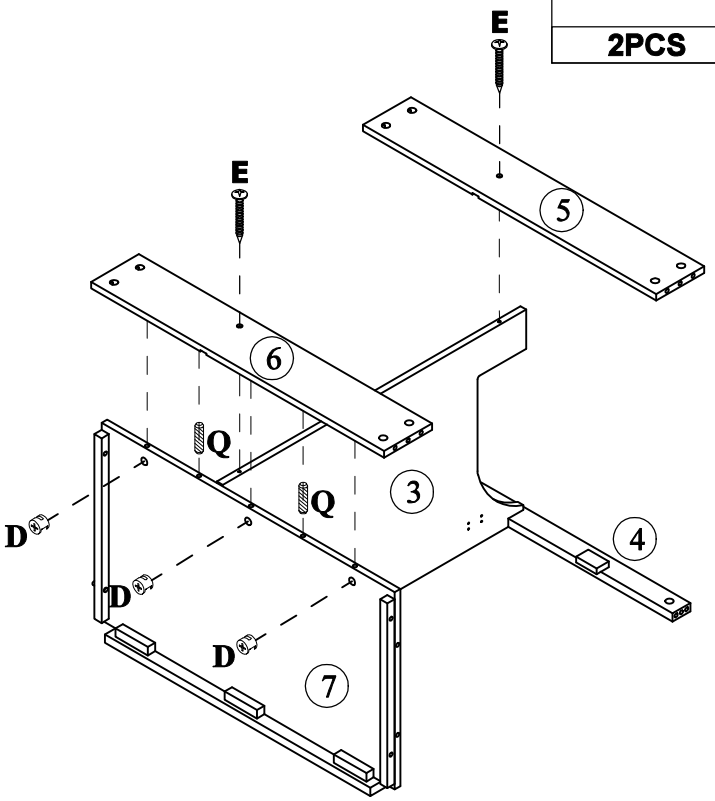



STEP: 6


Q
16PCS

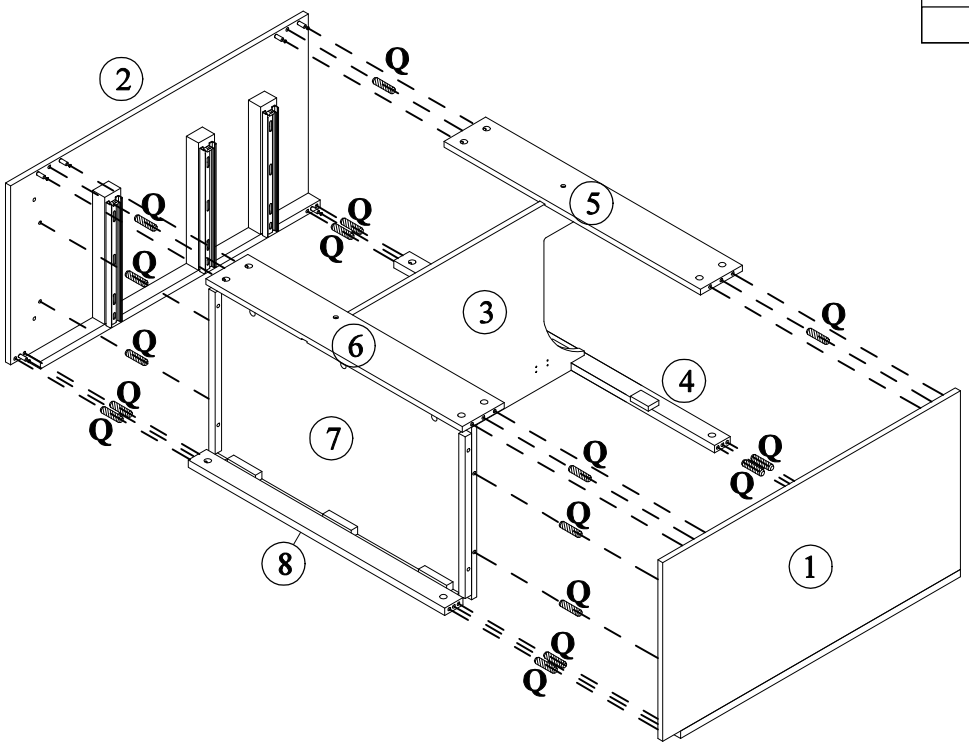


STEP: 7

A	B	D
		
4PCS	4PCS	12PCS

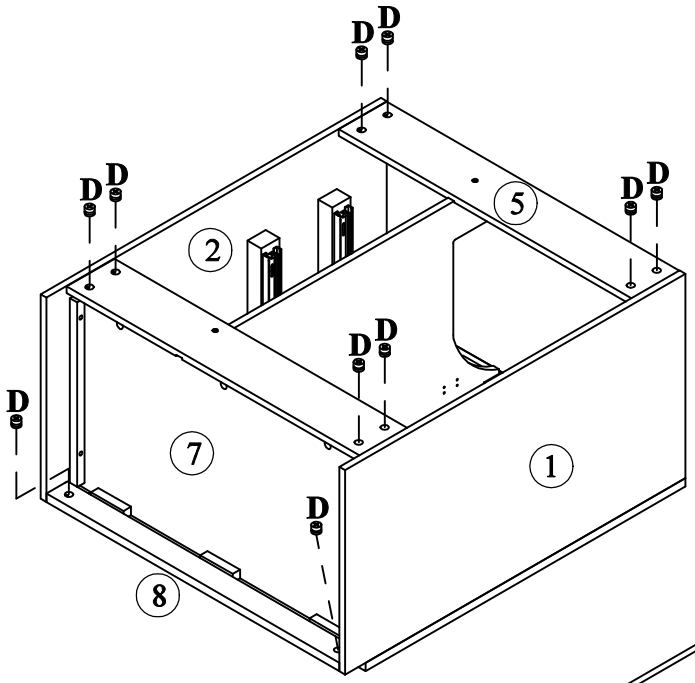


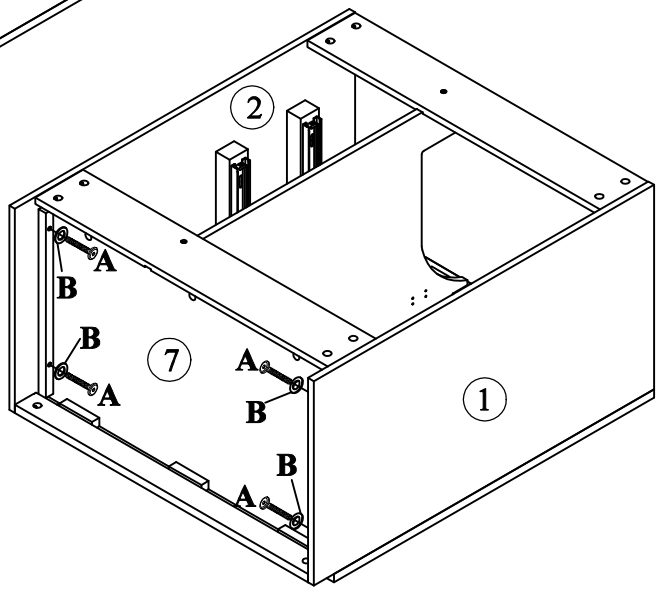

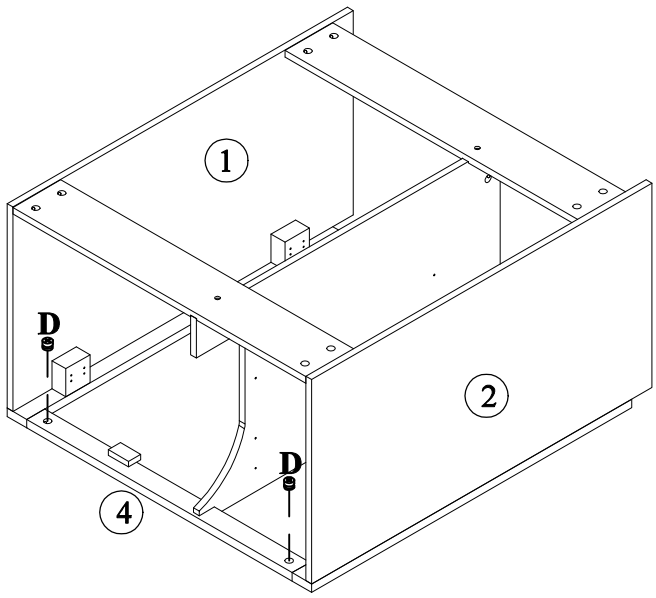


STEP: 8


J	K
4PCS	8PCS

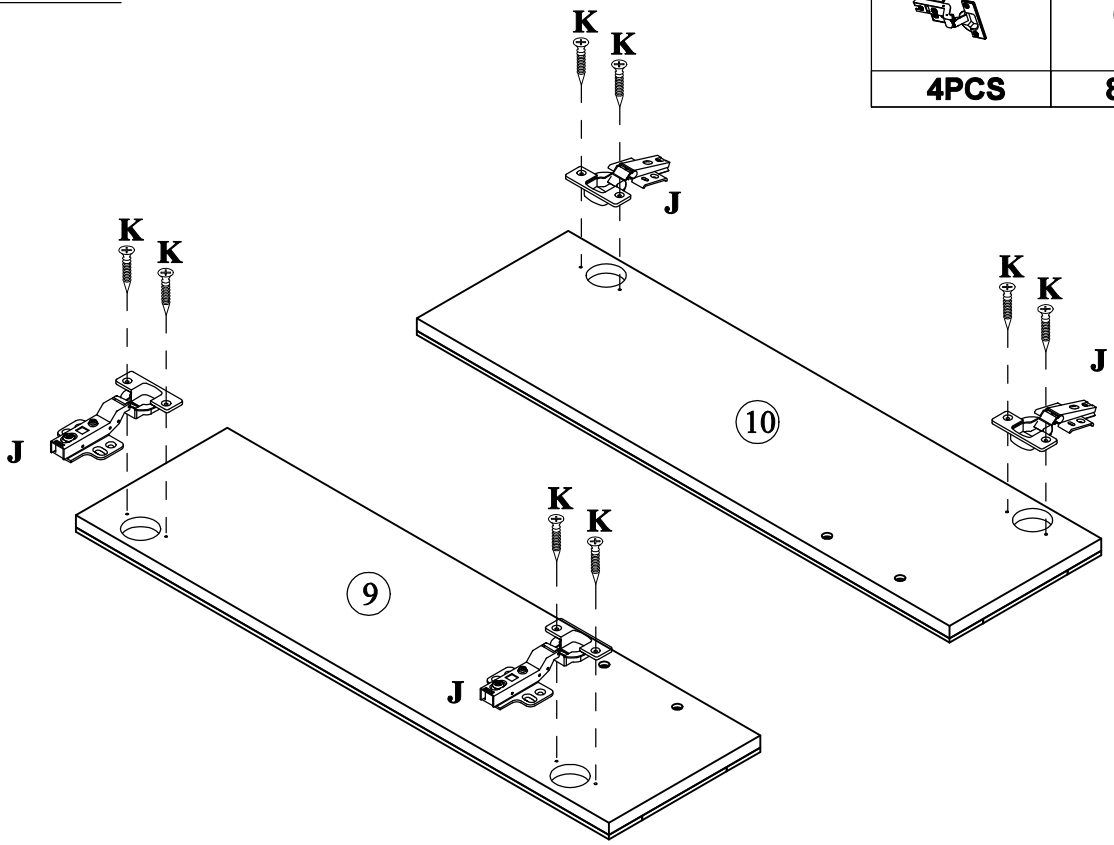

STEP: 9


G	H	K
2PCS	4PCS	16PCS

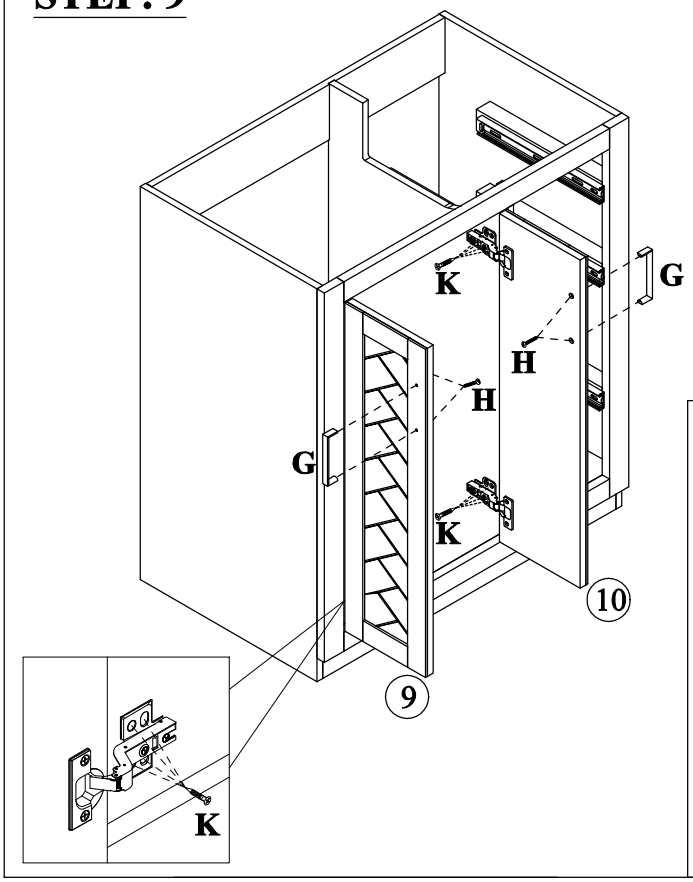


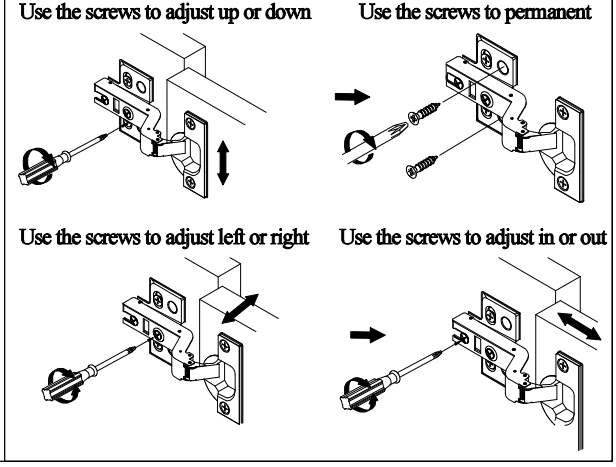



STEP: 10


F	G	I	O	P	T
8PCS	1PC	2PCS	2PCS	6PCS	4PCS

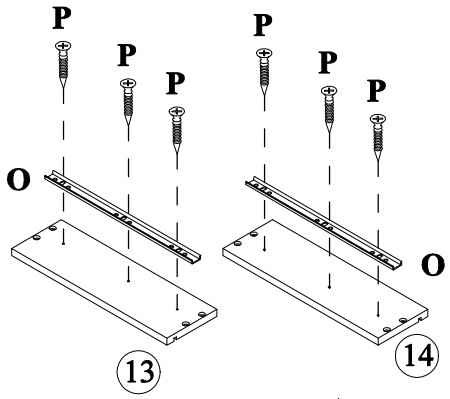

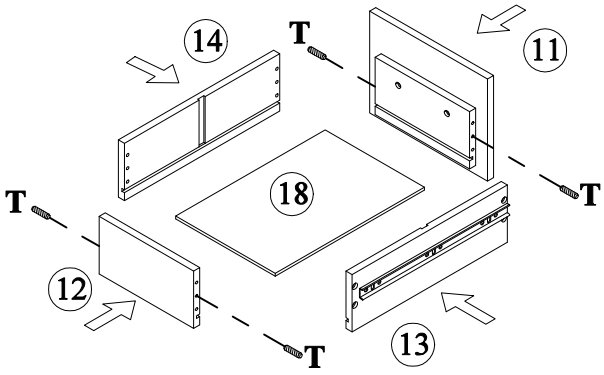


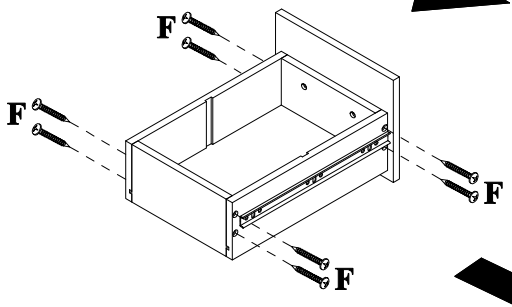

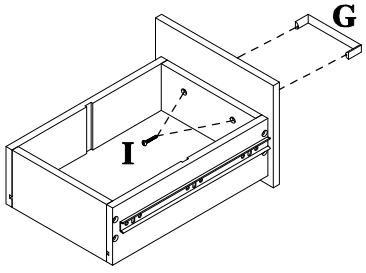

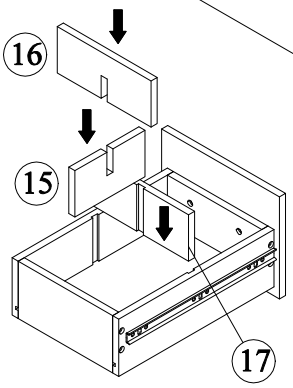



POSITION OF SCREW

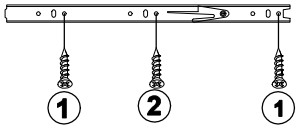



STEP: 11

F	G	I	O	P	T
8PCS	1PC	2PCS	2PCS	6PCS	4PCS

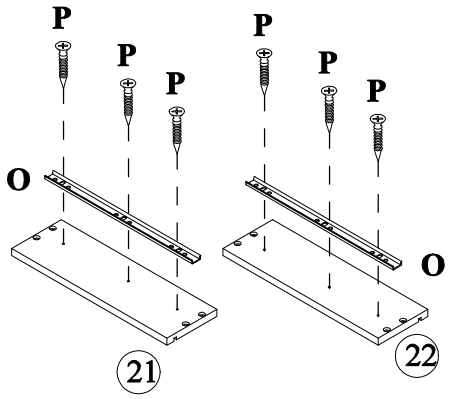


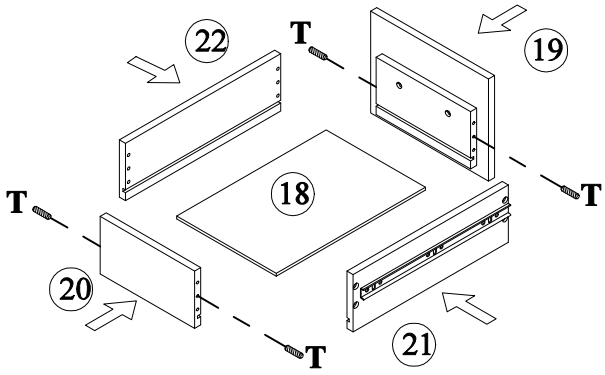

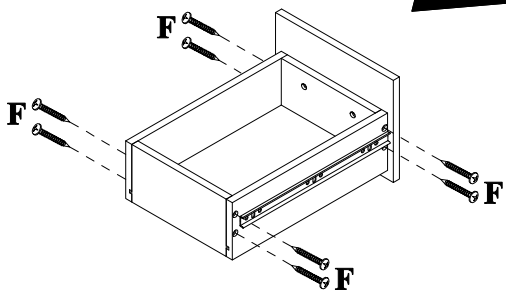

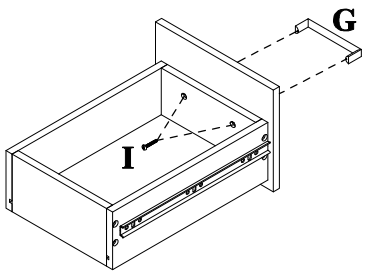


POSITION OF SCREW

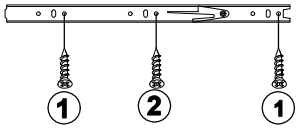


STEP: 12

F	G	I	O	P	T
8PCS	2PCS	4PCS	2PCS	6PCS	8PCS

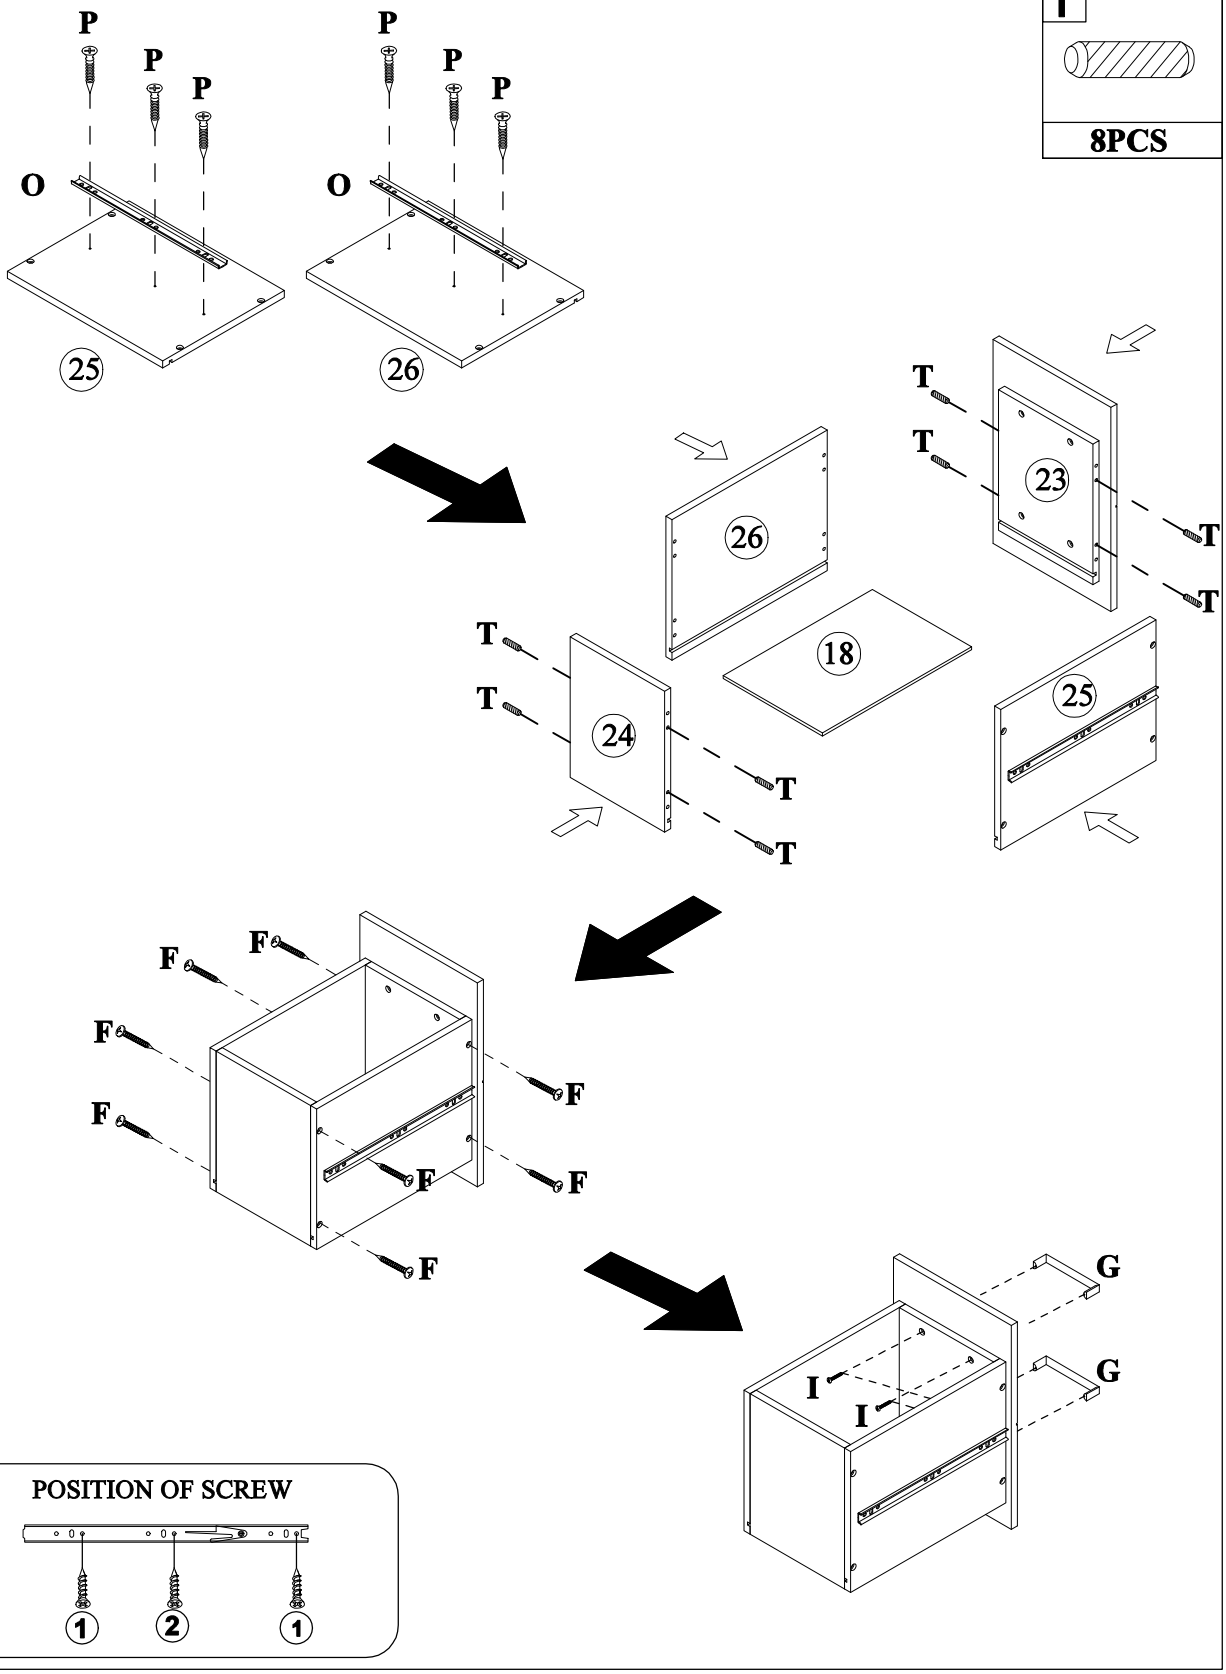



POSITION OF SCREW

STEP: 13

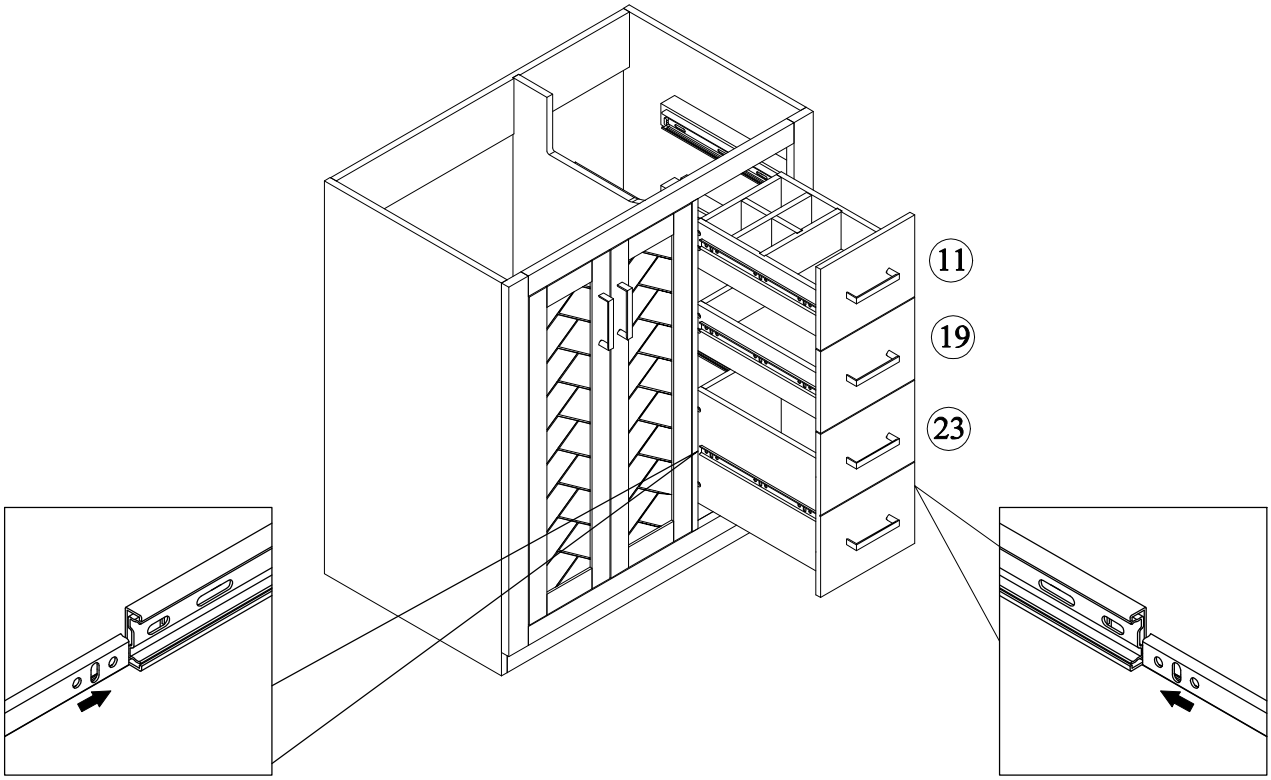


STEP: 14

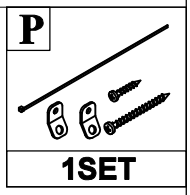

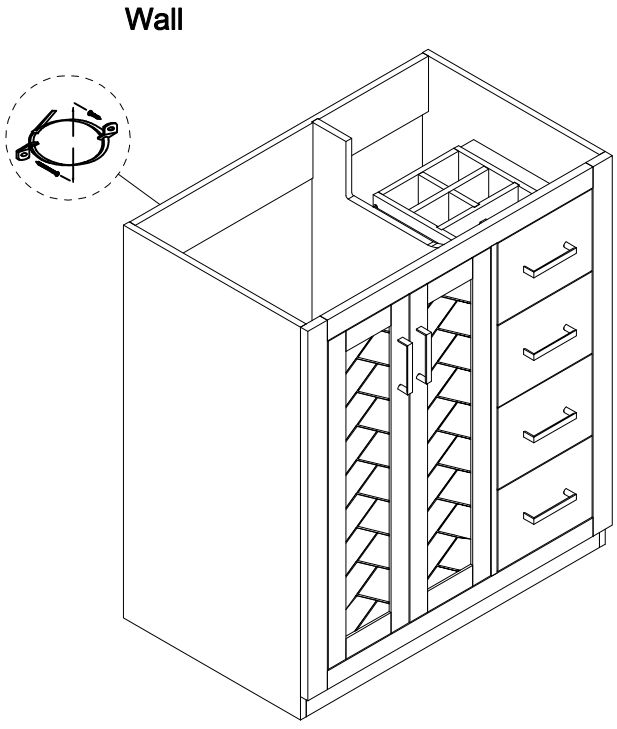


STEP: 15

Install the sink on the cabinet with glue.
Let stand for 24 hours

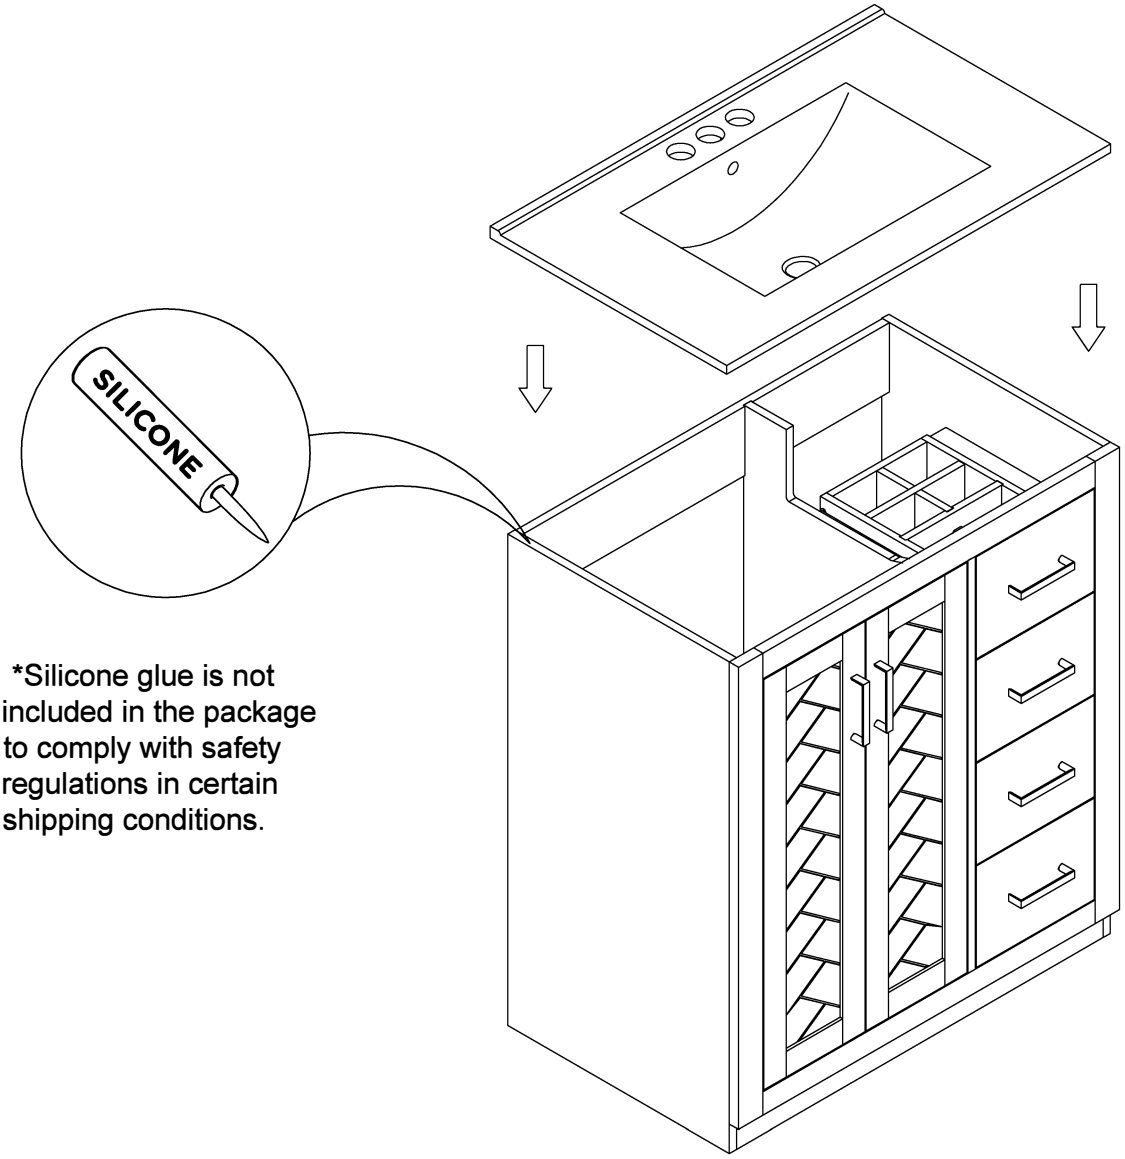


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 16

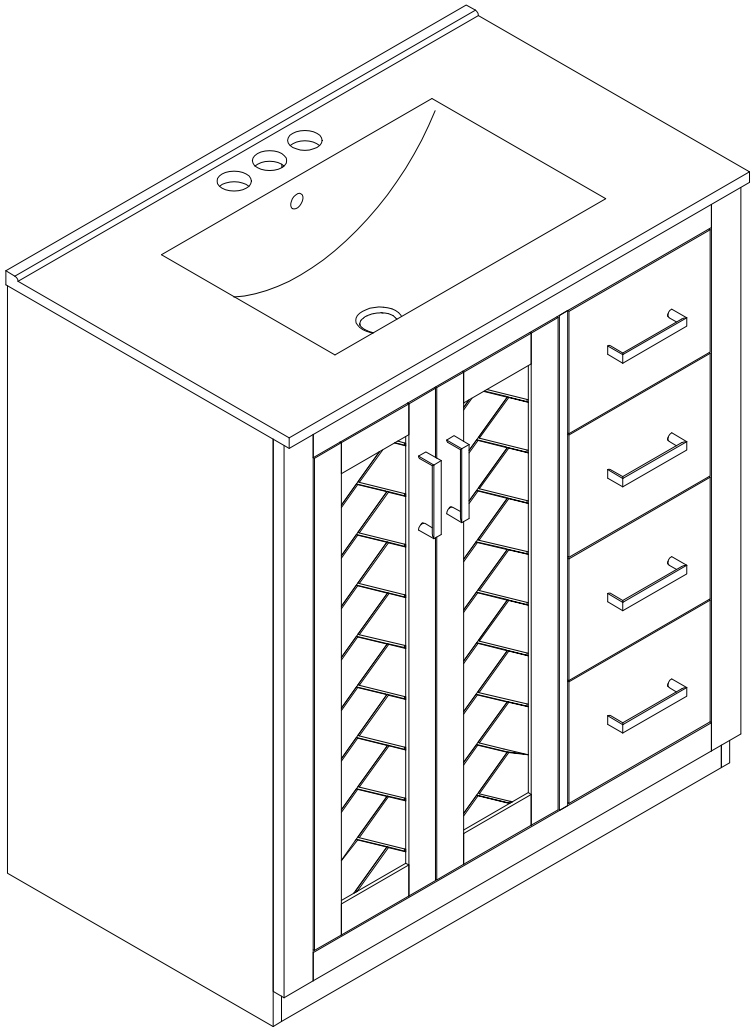




HINGE ADJUSTMENTS

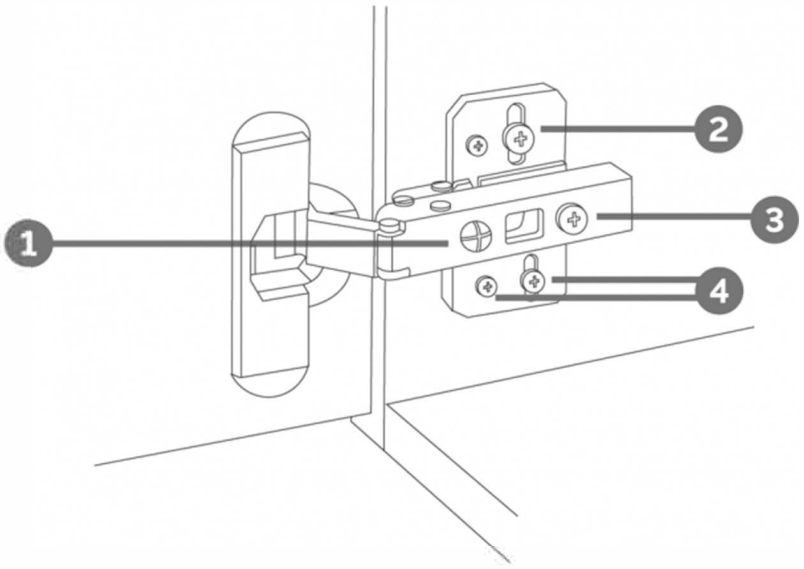


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

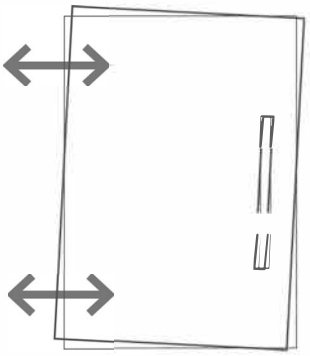

2 4 Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

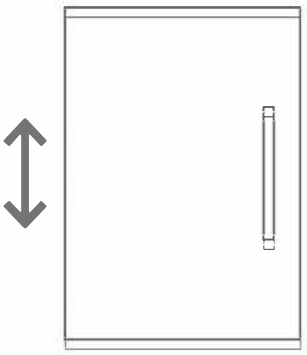

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

