


ASSEMBLY INSTRUCTIONS

SHOE STORAGE OTTOMAN

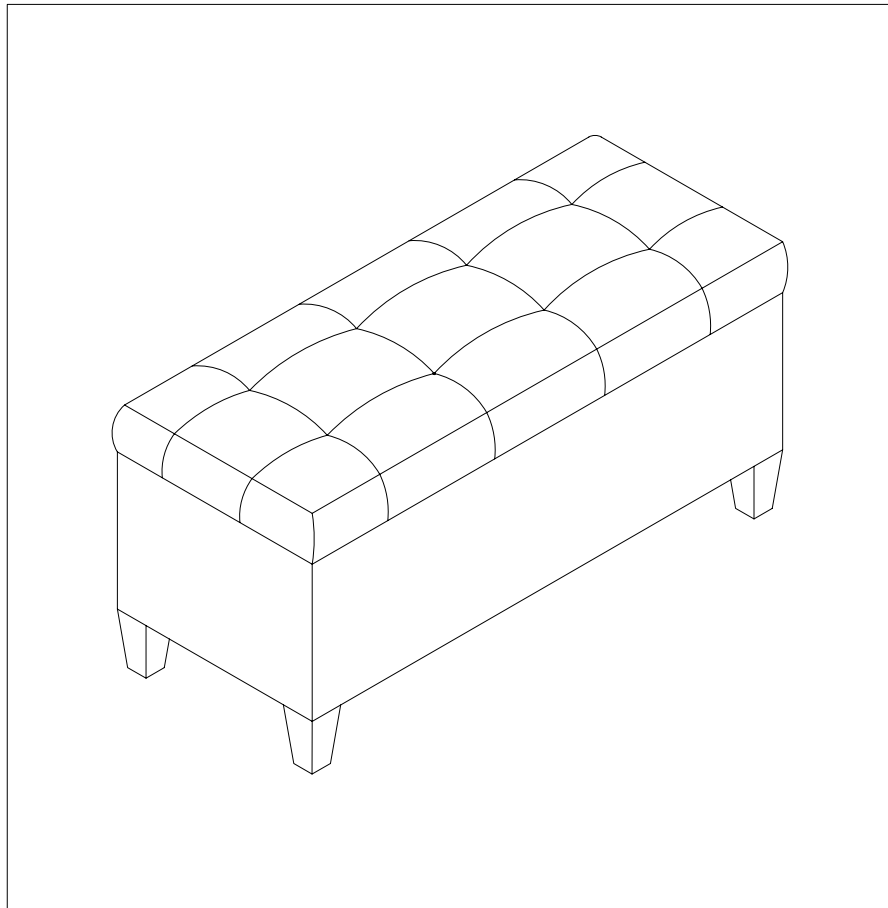



We are here to help!

We do our best to insure that your furniture arrives in excellent condition.


MADE IN CHINA

PARTS IDENTIFICATION


ITEM	DESCRIPTION	QTY
#1	SEAT	01
#2	LEG	04

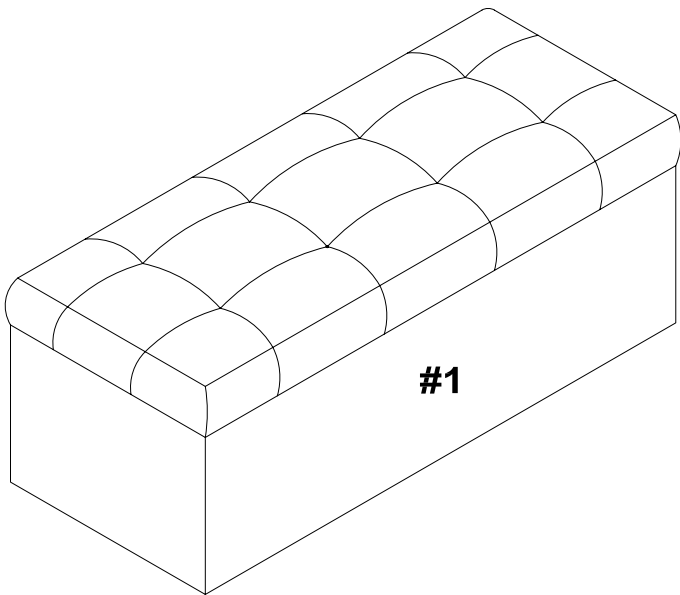


#2



#2



#2







#2

For ease of identification all parts are labeled to correspond to the Step number in which the part is used.

HARDWARE IDENTIFICATION

Please line up the hardware with the correct full size image to make sure you are installing the hardware correctly.

ITEM	PICTURE	DESCRIPTION	QTY
A	 (Ø5/16" x 2-1/2") Not to Scale	BOLT	04
B	 (Ø5/16") Not to Scale	SPRING WASHER	04
C	 (Ø5/16") Not to Scale	FLAT WASHER	04

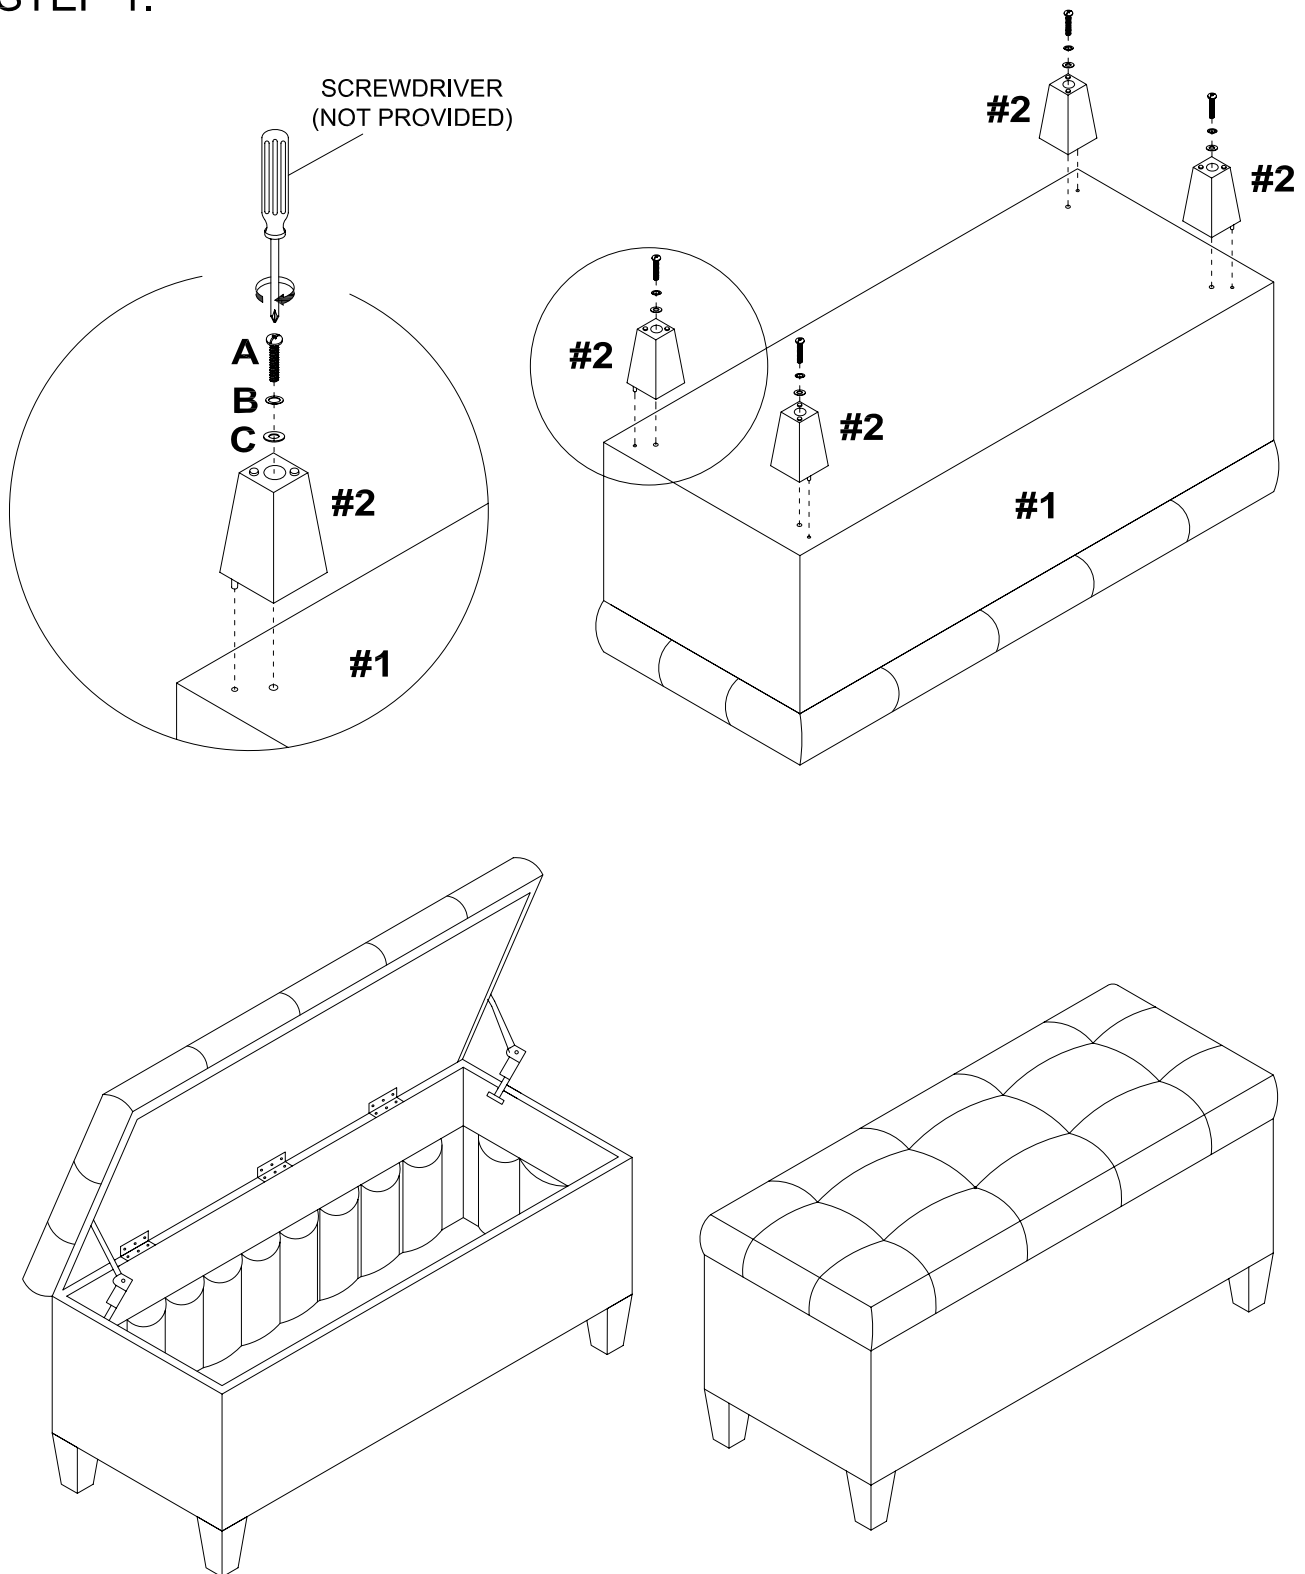STEP 1.**IMPORTANT:**

1. DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ALL BOLTS ARE COMPLETELY LINED UP AND INSERTED INTO HOLES / NUTS.
2. DO NOT OVER TIGHTEN SCREWS AND BOLTS TO AVOID STRIPPING.