



# ASSEMBLY INSTRUCTIONS














## BEDHOUSE WITH TRUNDLE

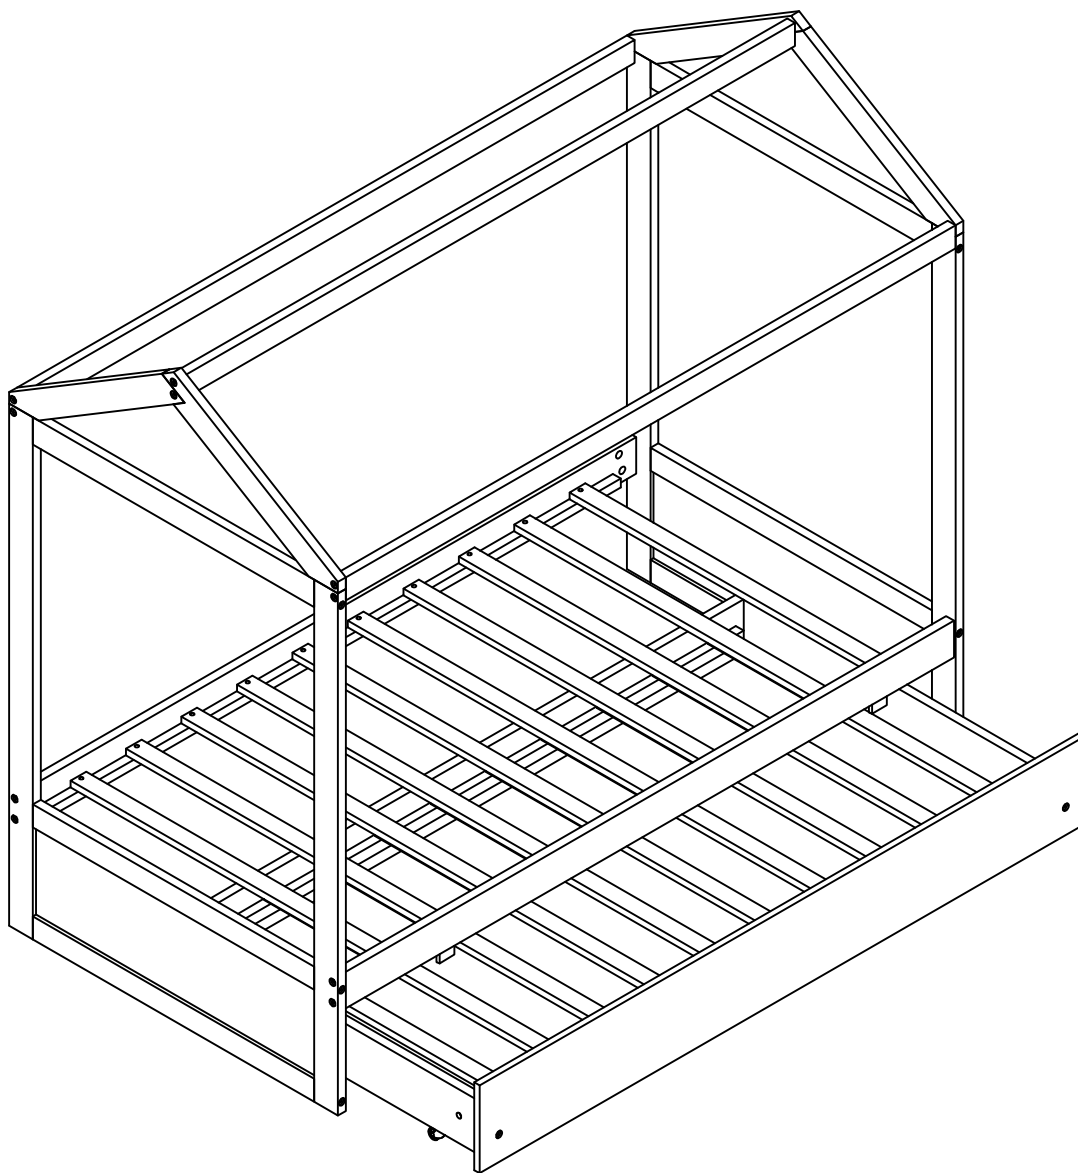

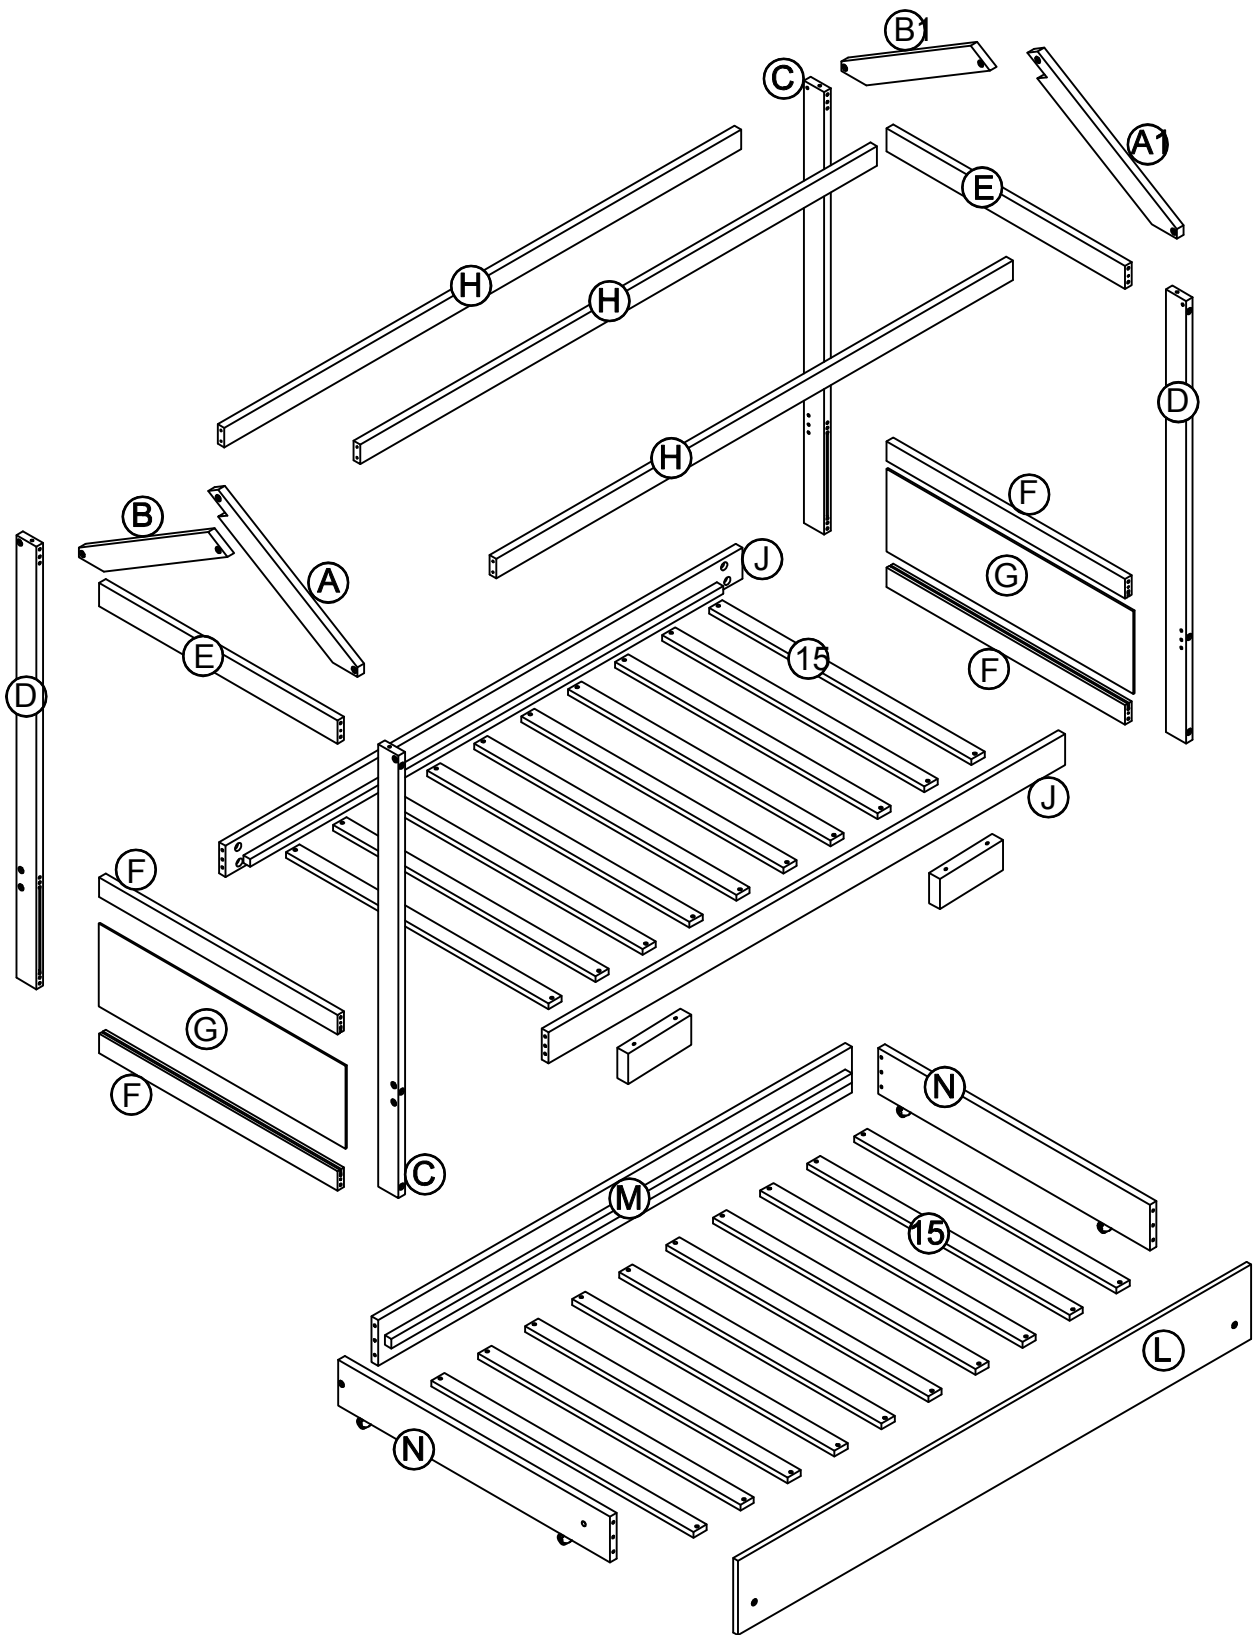









# DETAIL VIEW




# PART LISTS

<b>A, A1</b> 	<b>B, B1</b> 	<b>C</b> 
Cap for upper HB&FB-2pcs	Cap for lower HB&FB-2pcs	Upper leg HB&FB -2pcs
<b>D</b> 	<b>E</b> 	<b>F</b> 
Upper leg HB&FB -2pcs	Horizontal bar HB&FB-2pcs	Horizontal bar HB&FB-4pcs
<b>G</b> 	<b>H</b> 	<b>J</b> 
Side panel - 2pcs	Guard rail top 3pcs	Side rail upper -2pcs
<b>15</b> 	<b>L</b> 	<b>M</b> 
Upper slat - 20pcs	Drawer front - 1pc	Drawer back - 1pc
<b>N</b> 		
Drawer Left/Right - 2pcs		

# HARDWARE LISTS


<div style="border: 1px solid black; padding: 2px; width: 20px; float: left; text-align: center; font-weight: bold;">1</div> <div style="text-align: center; margin-top: 10px;">  <p>Ø10 x 30 mm</p> <p>Wood dowel 40pcs</p> </div>	<div style="border: 1px solid black; padding: 2px; width: 20px; float: left; text-align: center; font-weight: bold;">2</div> <div style="text-align: center; margin-top: 10px;">  <p>Ø1/4" x 65 mm</p> <p>Hex-Head bolts (12pcs)</p> </div>	<div style="border: 1px solid black; padding: 2px; width: 20px; float: left; text-align: center; font-weight: bold;">3</div> <div style="text-align: center; margin-top: 10px;">  <p>Ø1/4" x 110 mm</p> <p>Wood Screws (12pcs)</p> </div>
<div style="border: 1px solid black; padding: 2px; width: 20px; float: left; text-align: center; font-weight: bold;">4</div> <div style="text-align: center; margin-top: 10px;">  <p>Ø1/4" x 70 mm</p> <p>Hex-Head bolts (12pcs)</p> </div>	<div style="border: 1px solid black; padding: 2px; width: 20px; float: left; text-align: center; font-weight: bold;">5</div> <div style="text-align: center; margin-top: 10px;">  <p>Ø1/4" x 15 mm(9.5mm)</p> <p>Horizontal-Hole bolts 12pcs</p> </div>	<div style="border: 1px solid black; padding: 2px; width: 20px; float: left; text-align: center; font-weight: bold;">6</div> <div style="text-align: center; margin-top: 10px;">  <p># 4 x 30mm</p> <p>Wood Screws (44pcs)</p> </div>
<div style="border: 1px solid black; padding: 2px; width: 20px; float: left; text-align: center; font-weight: bold;">7</div> <div style="text-align: center; margin-top: 10px;">  <p># 4 x 20mm</p> <p>Wood Screws ( 8pcs )</p> </div>	<div style="border: 1px solid black; padding: 2px; width: 20px; float: left; text-align: center; font-weight: bold;">8</div> <div style="text-align: center; margin-top: 10px;">  <p>Wheels Ø32 ( 4pcs )</p> </div>	<div style="border: 1px solid black; padding: 2px; width: 20px; float: left; text-align: center; font-weight: bold;">9</div> <div style="text-align: center; margin-top: 10px;">  <p>(1/4")4.5*58mm</p> <p>Allen Key (1pc)</p> </div>
<div style="border: 1px solid black; padding: 2px; width: 20px; float: left; text-align: center; font-weight: bold;">10</div> <div style="text-align: center; margin-top: 10px;">  <p>Wood block (2pcs)</p> </div>		

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )







**PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !**

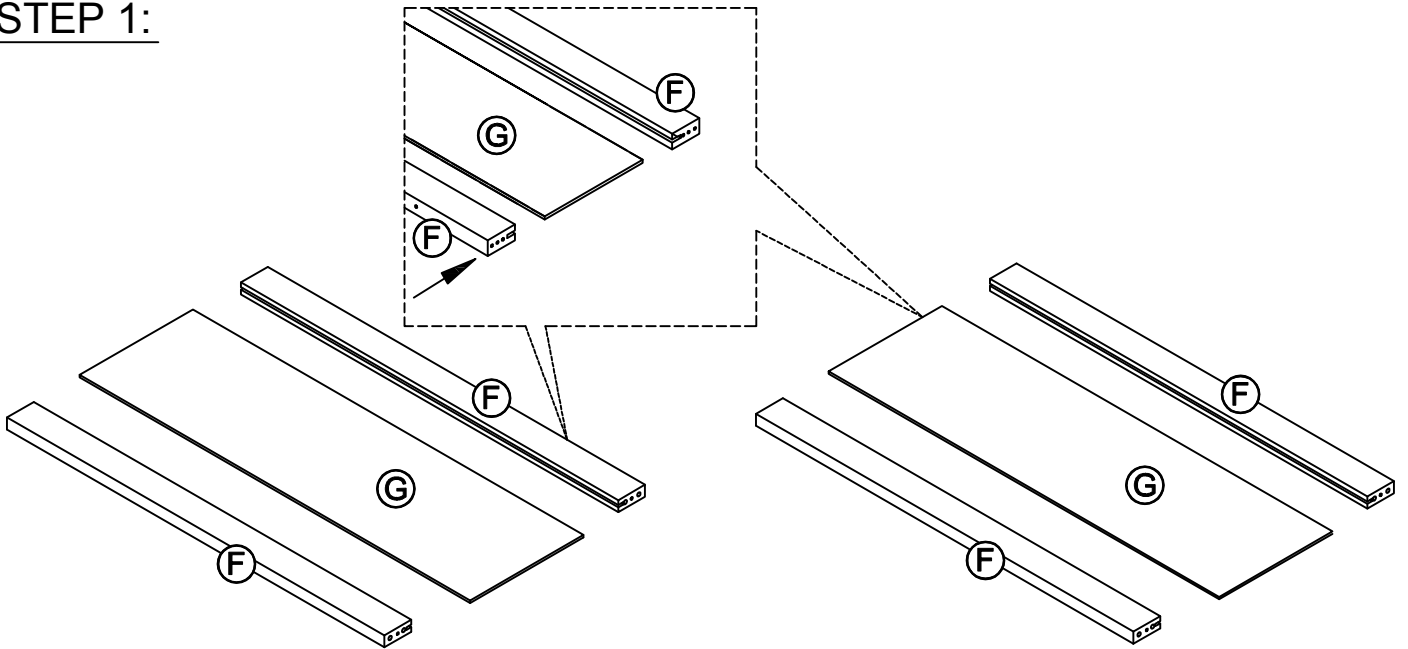**STEP 1:**






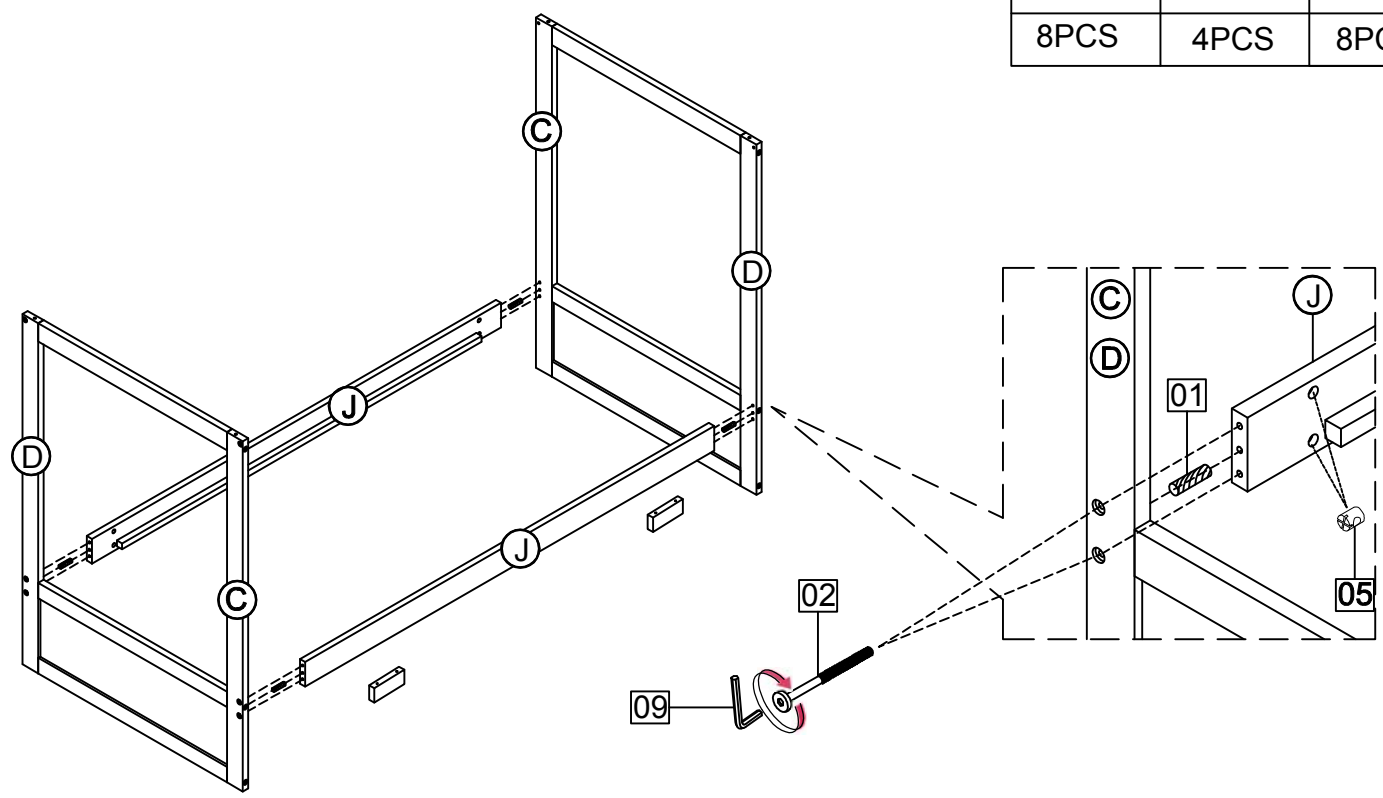
**STEP 2:**

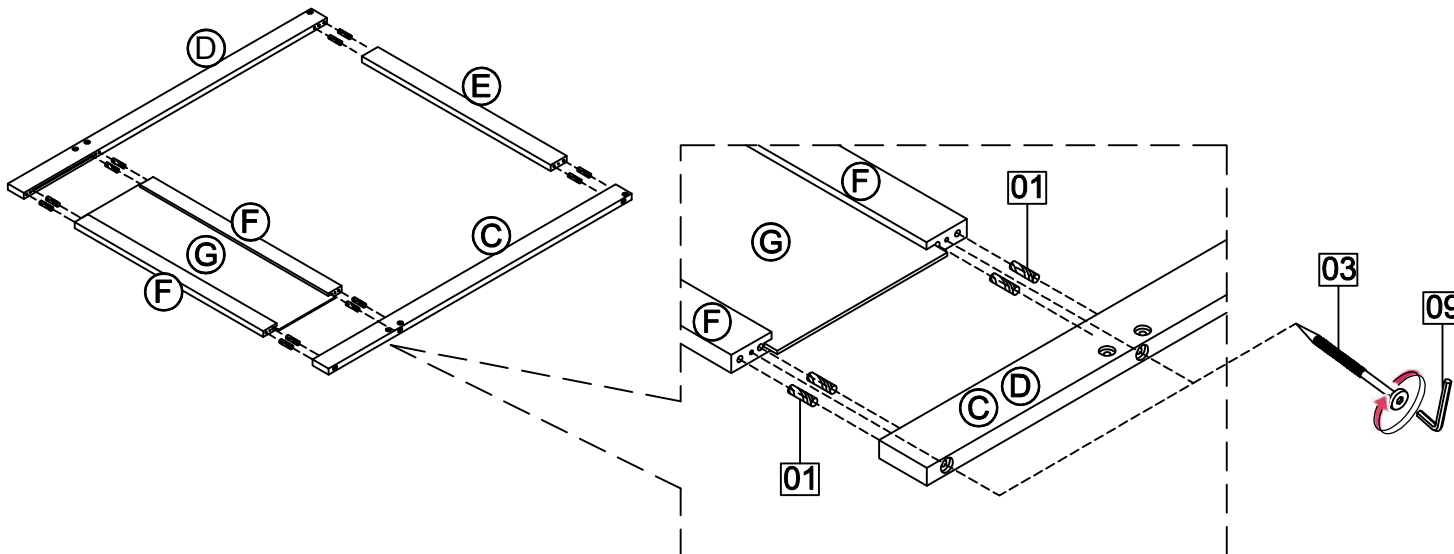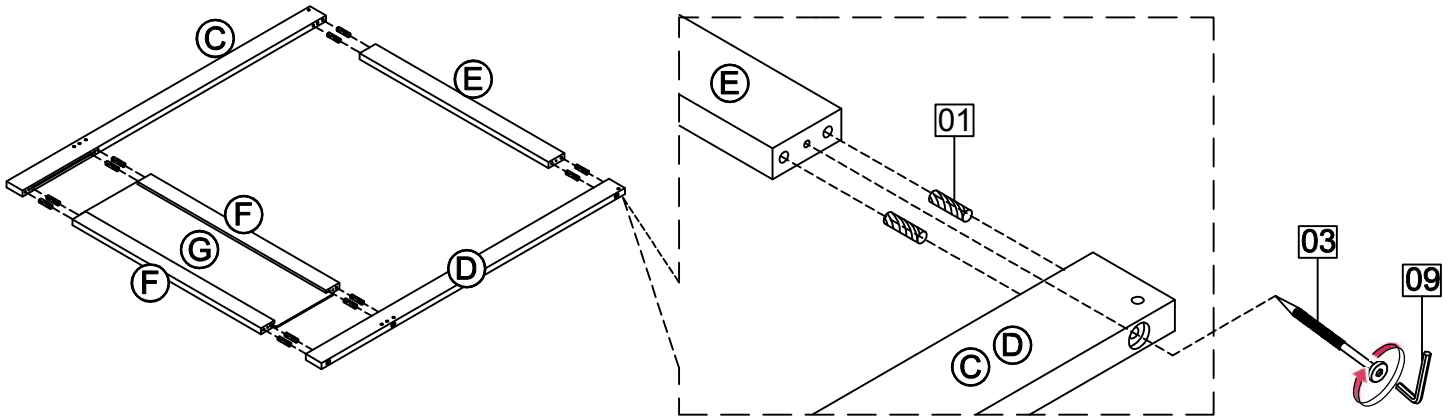01		03	
	24PCS		12PCS




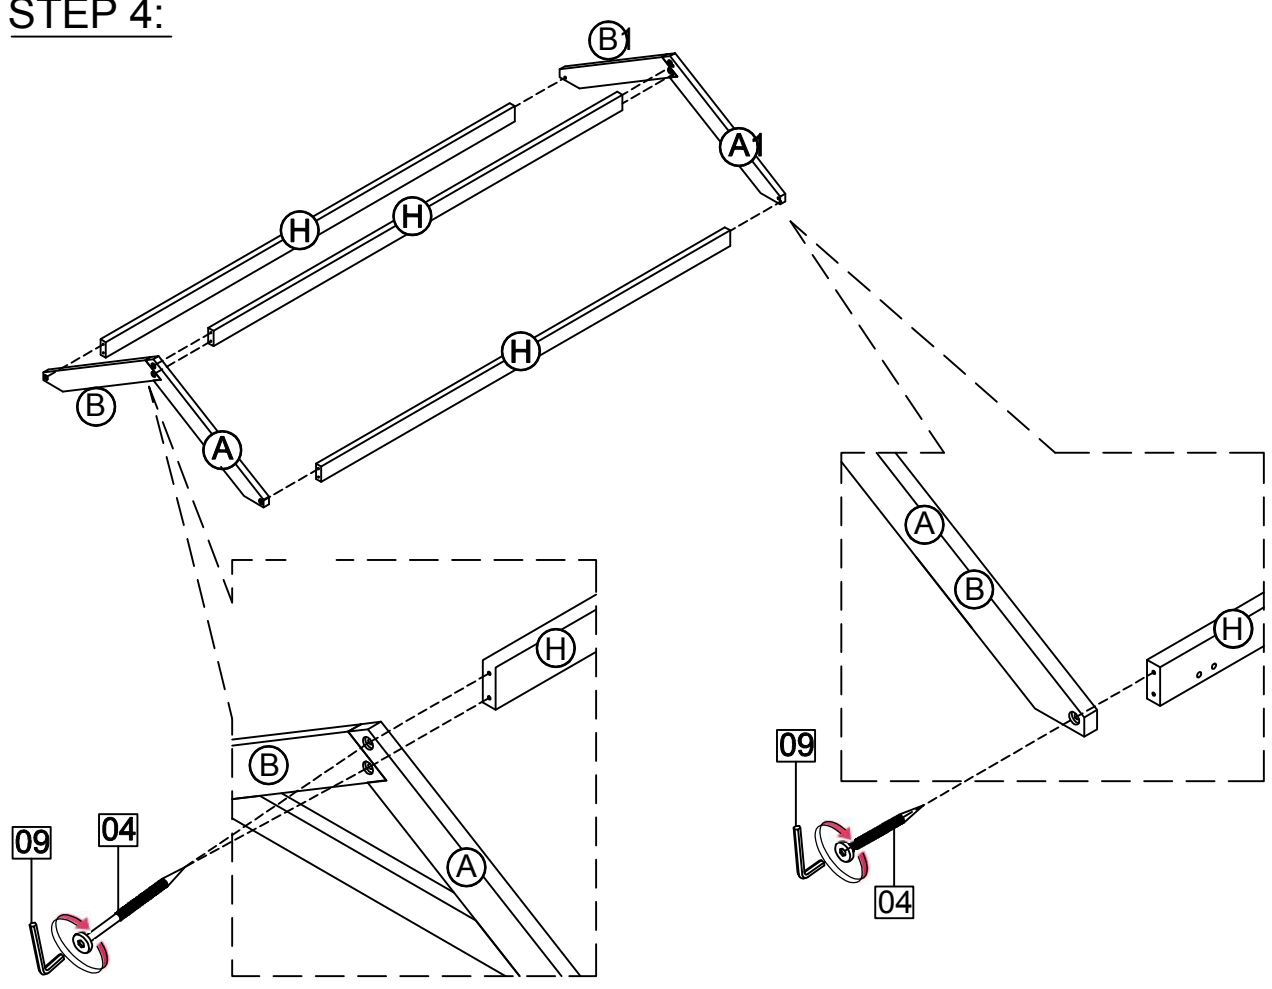
**STEP 3:**

05	01	02
		
8PCS	4PCS	8PCS




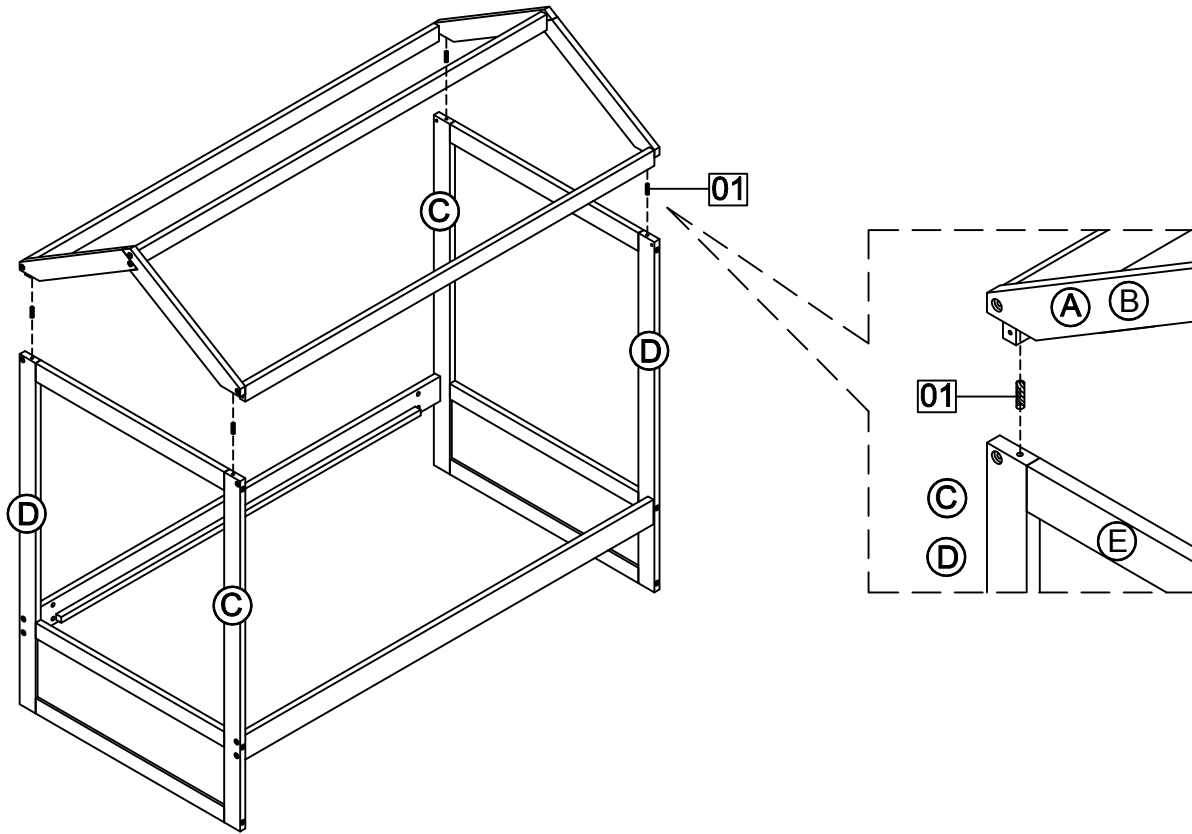
**STEP 4:**

04

8PCS




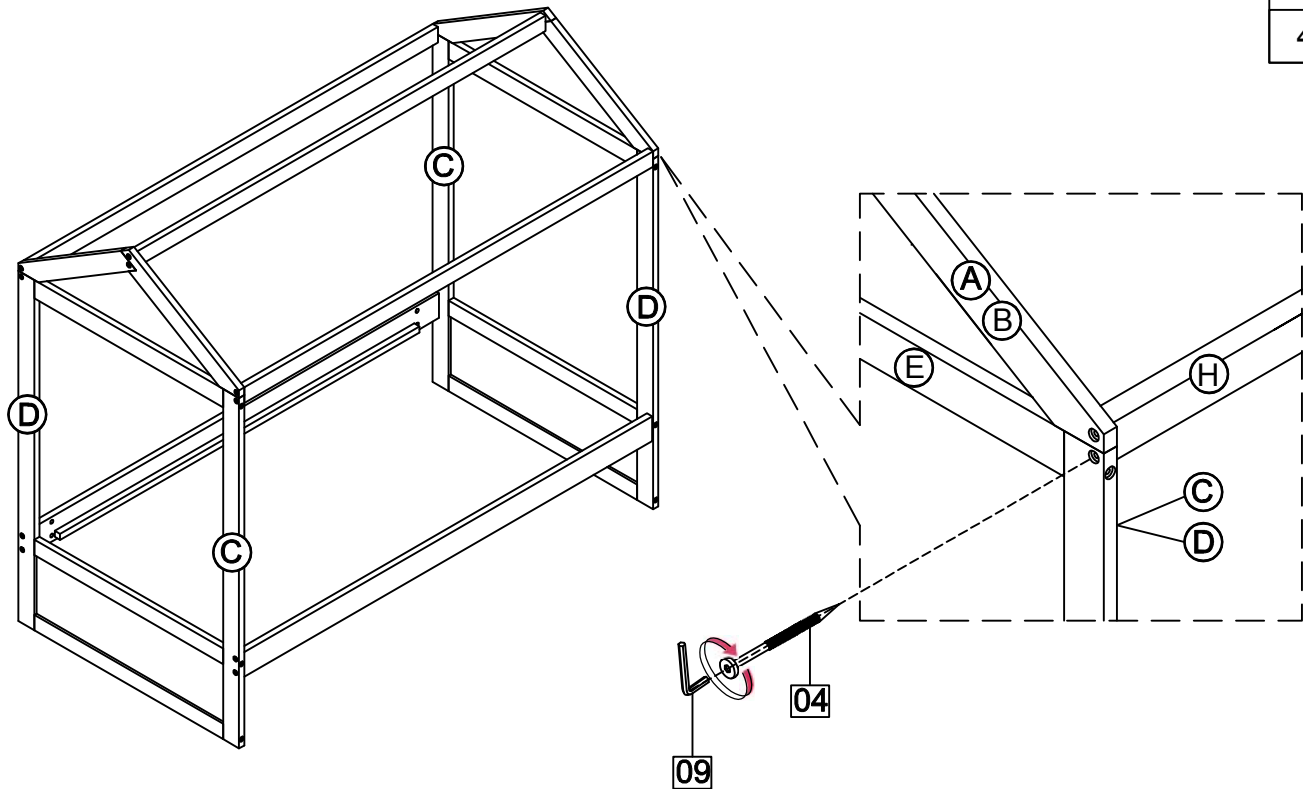
STEP 5:

01   
4PCS




STEP 6:

04   
4PCS




**STEP 7:**

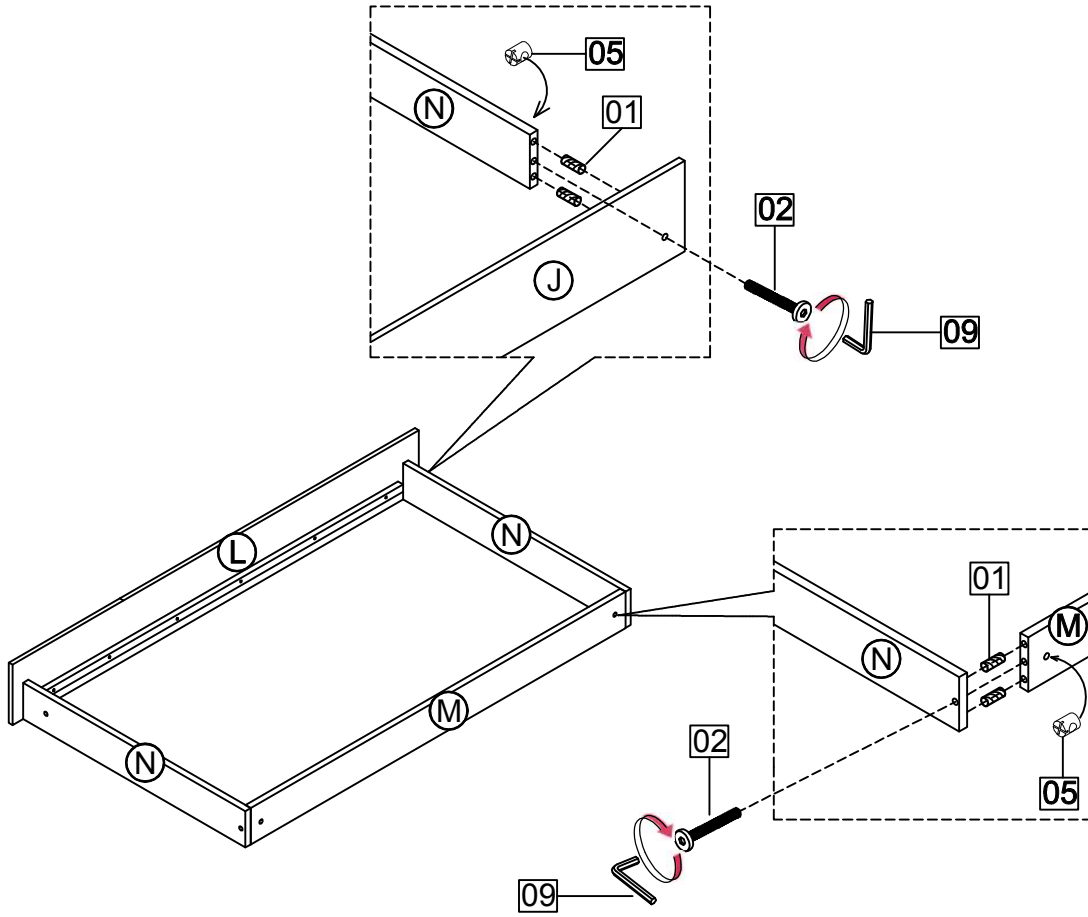


01		02	
8PCS		4PCS	
		05	
		4PCS	


**STEP 8:**

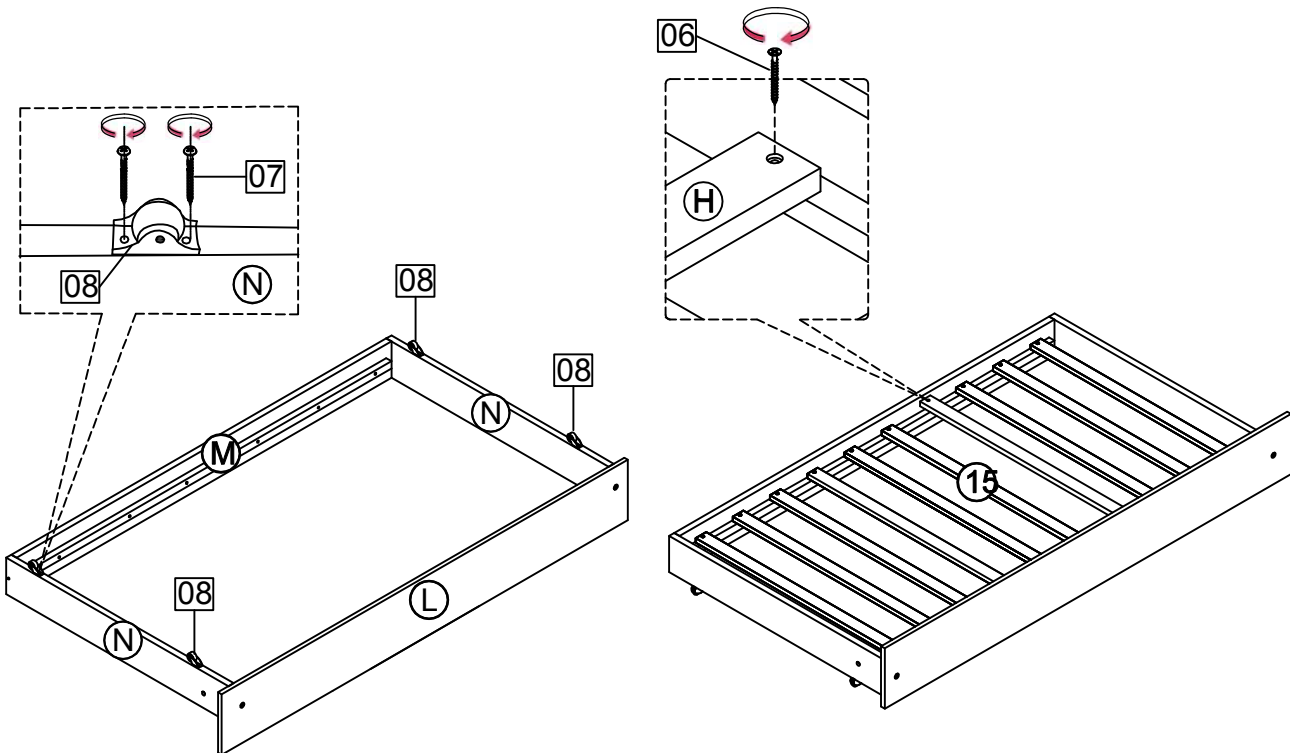


07		06		08	
8PCS		28PCS		4PCS	

STEP 9:

06   
24PCS

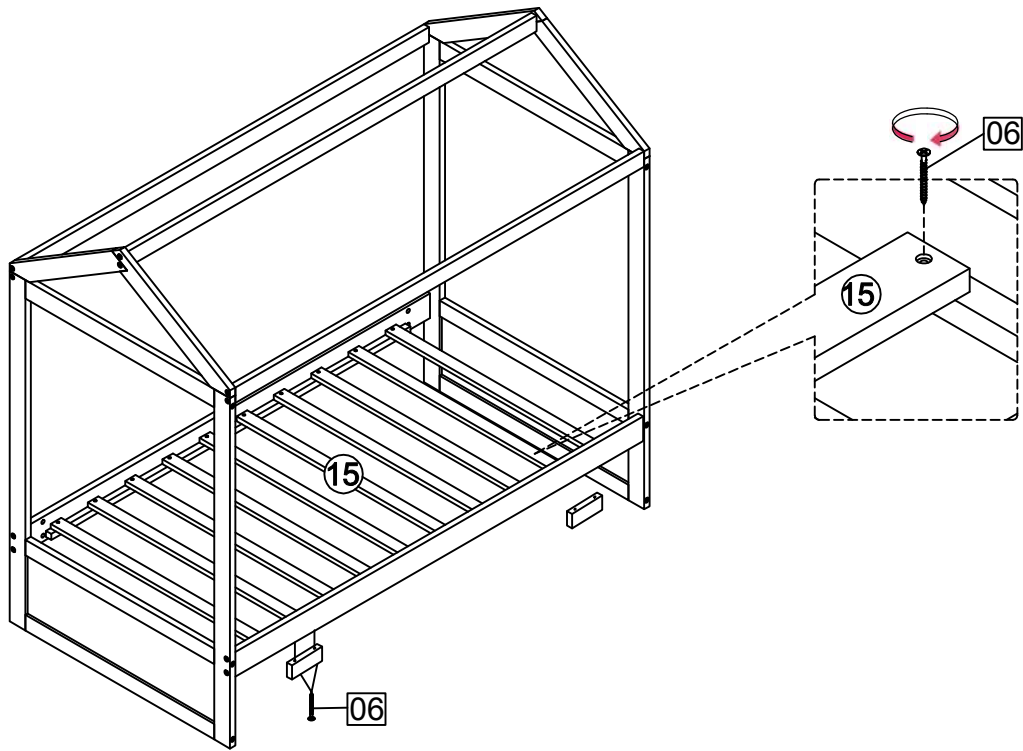

STEP 10:

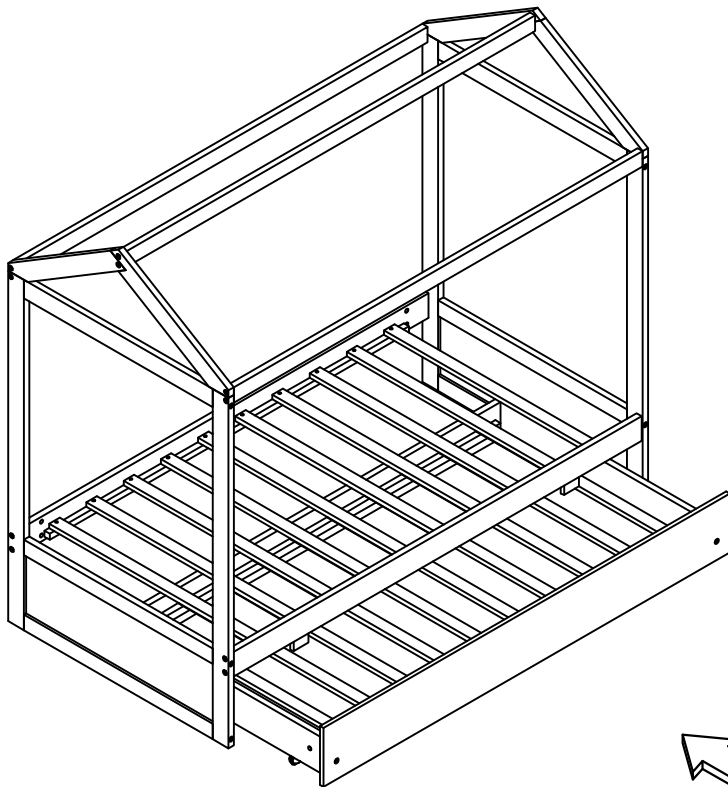

**Assembly Complete**