



Installation Instruction

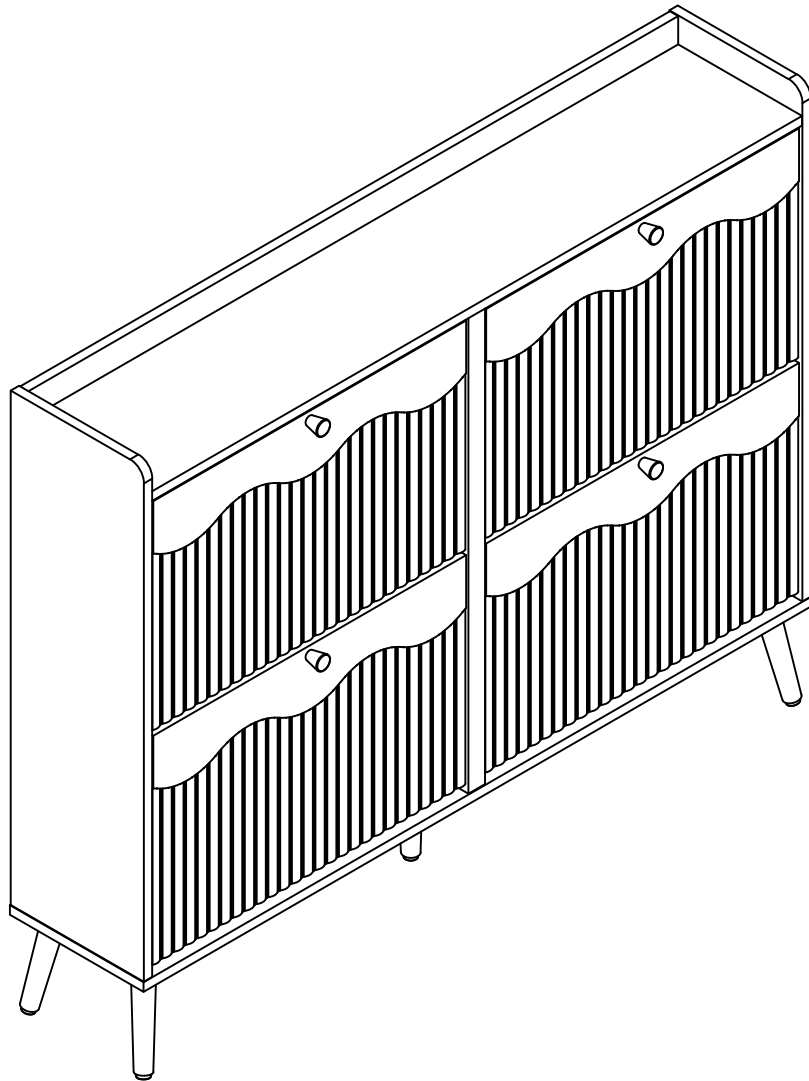

Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100

lbs table top

| 35

lbs per

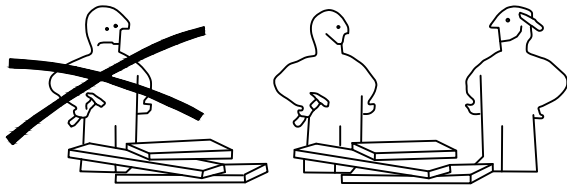


What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	8
B	Cam Lock 15X12MM	8
C	Wooden Dowel M7.8X30MM	14
D	Screw M4X40MM	11
E	The screw M3.5X14MM	50
F	The screw M6X18MM	9
G	Stopper	8
H	External Shaft	8
I	TThe screw M3.5X14M	24
J	Left Plastic Holder	4
K	Right Plastic Holder	4
L	Metal connector	8
M	Metal shake handhandle	4
N	Wrench M4X55MM	1
O	The screw M6X12MM	4
P	Anchor	2
Q	Open-end wrench	1
R	Metal connector	2
S	Hexagonal nut M6X5MM	1
T	TThe metal plate	4
U	Adjustable foot pads	4
V	The screw M4X22MM	4
W	The metal plate	1
X	The screw M6X15MM	1

The Hardwares

Ⓐ




Ⓑ



Ⓒ



Ⓓ




Ⓔ



Ⓕ



Ⓖ




Ⓗ



Ⓘ




Ⓙ

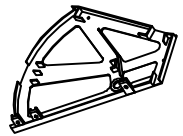


Ⓚ



Ⓛ



Ⓜ



Ⓝ




Ⓞ




Ⓟ



Ⓠ




Ⓡ

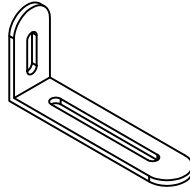


Ⓢ



Ⓣ




Ⓤ



Ⓡ



Ⓦ



Ⓧ




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. You can use a screwdriver. Power tools can also be used. (Be careful with power tools)


Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Back X reinforcing tube	4
6	Door	4
7	Inner lamella	4
8	Large inner plate	8
9	Back top plate	1
10	Solid wood feet	4
11	Solid wood feet	1
12	Middle Division Panel	1


The Accessoriess

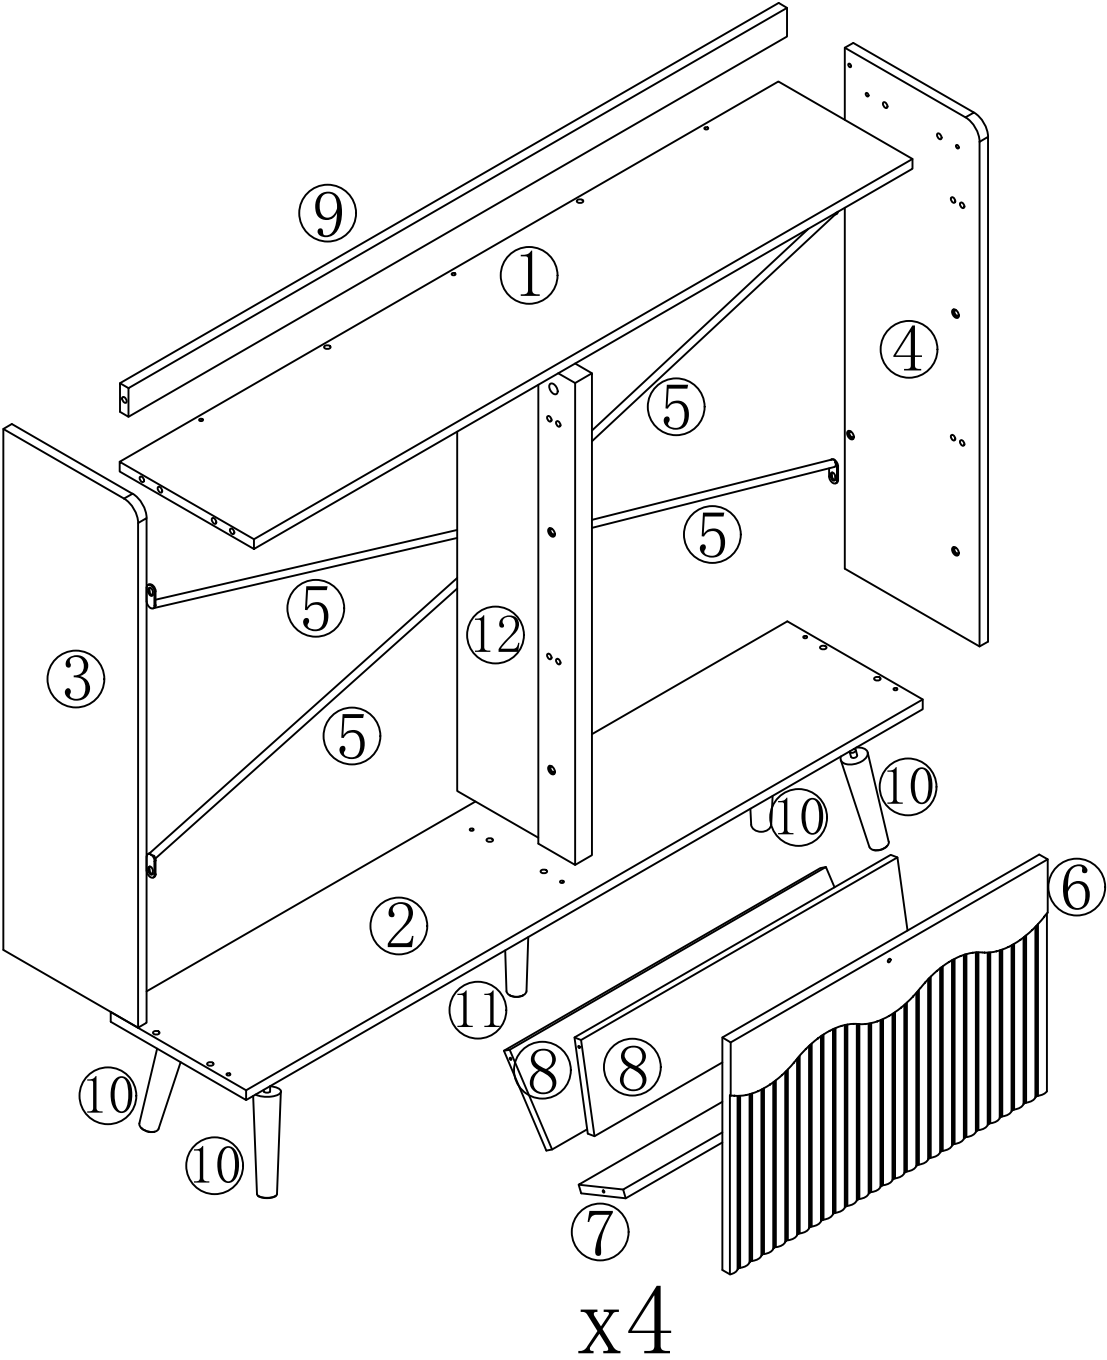


Step 1

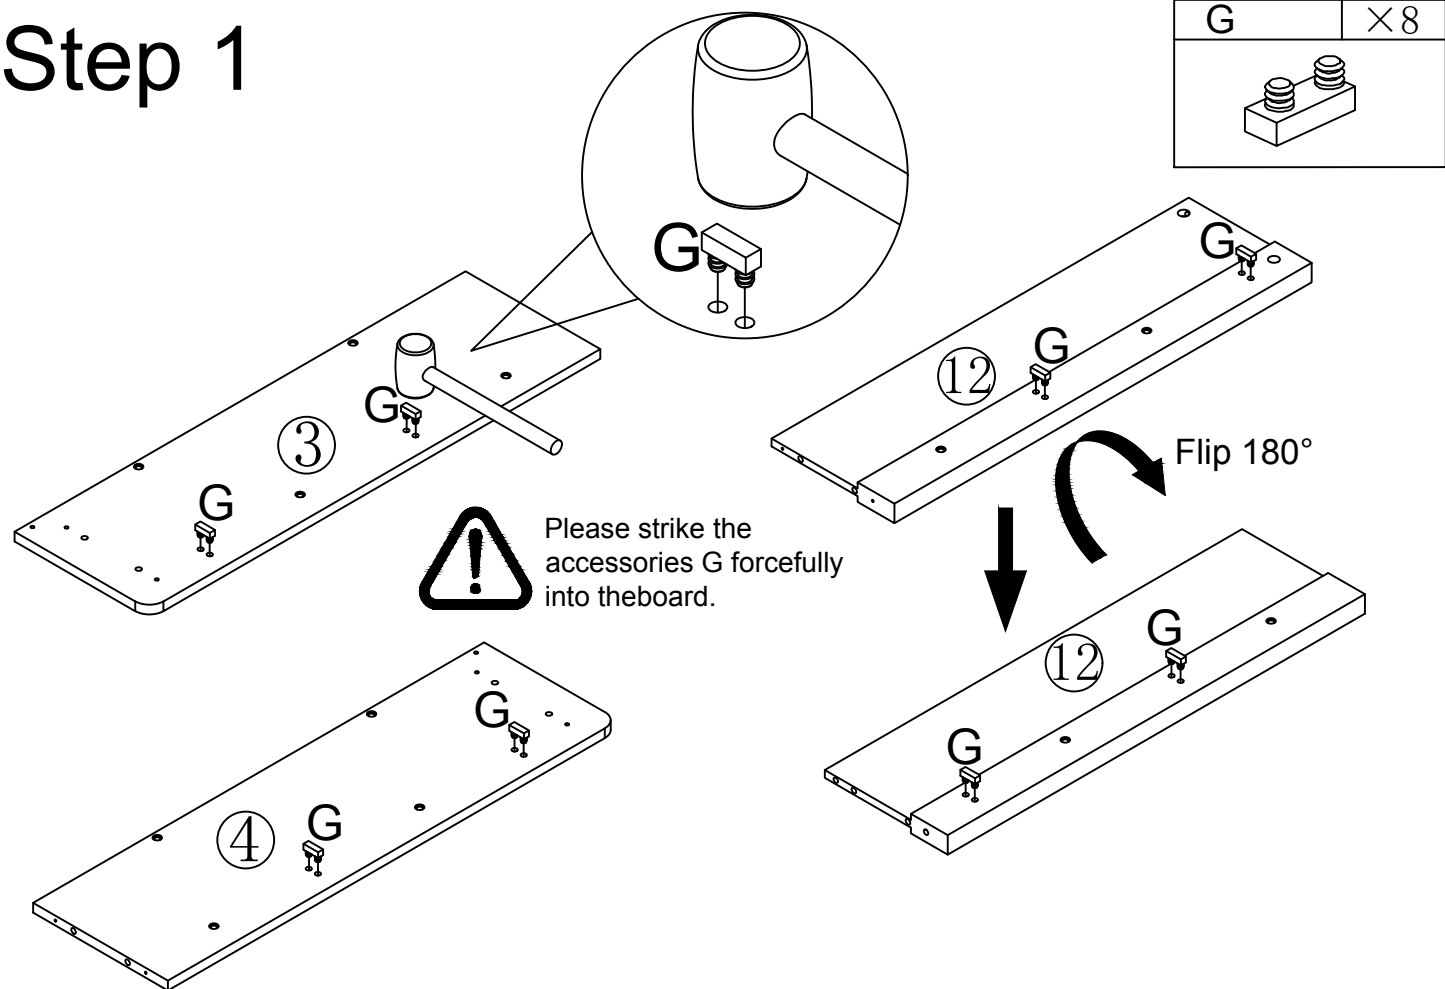



Step 2

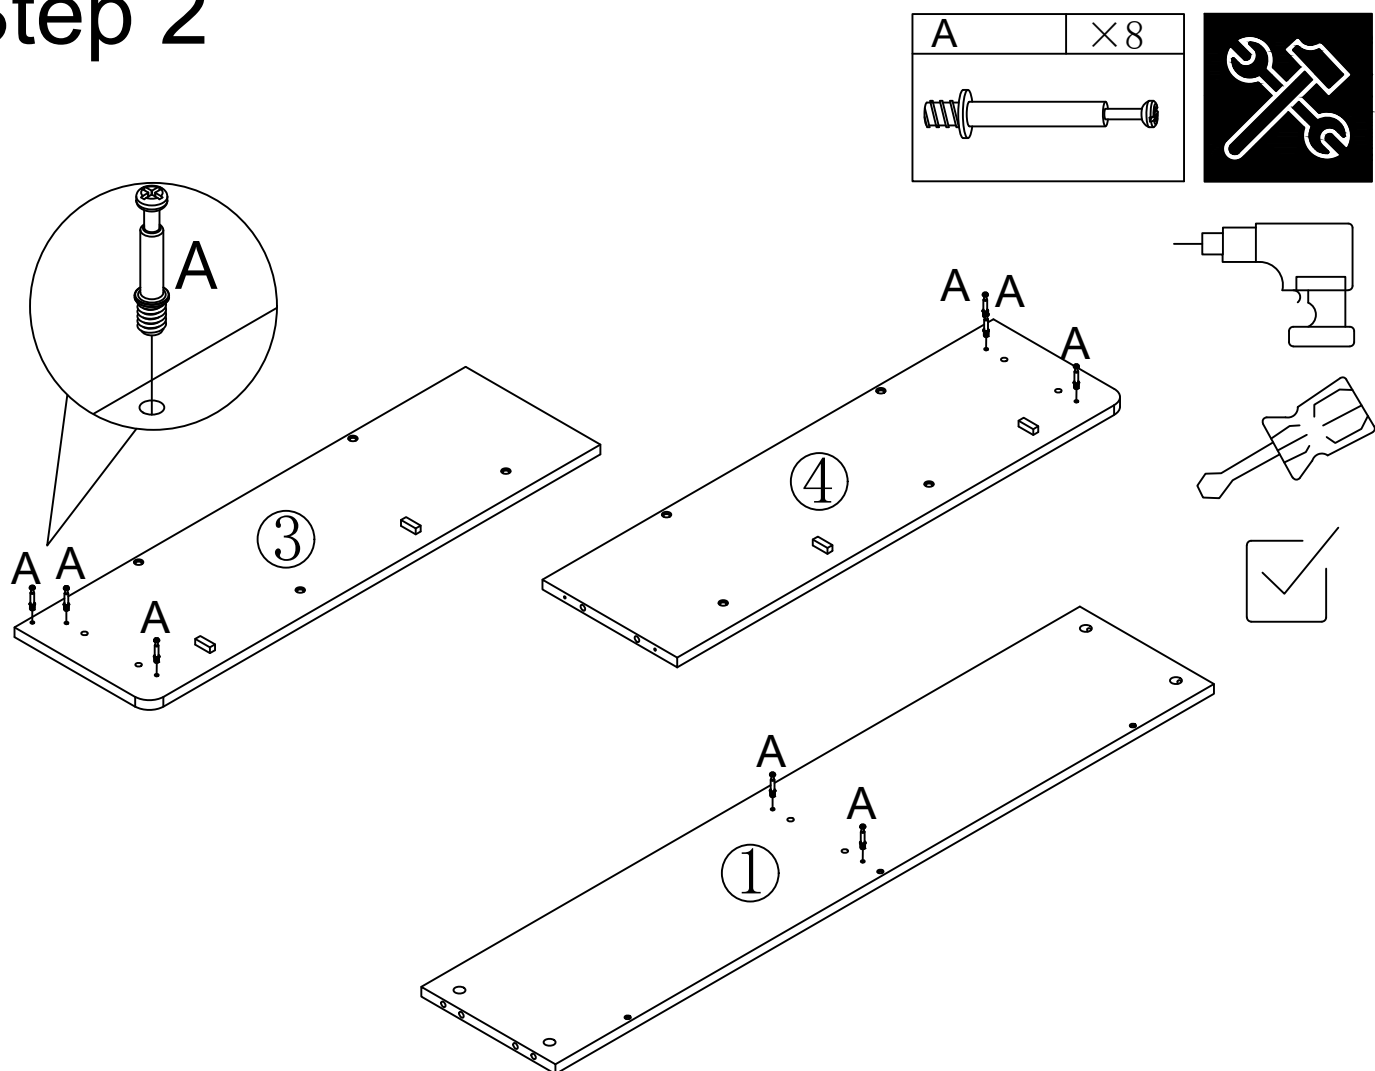

Step 3

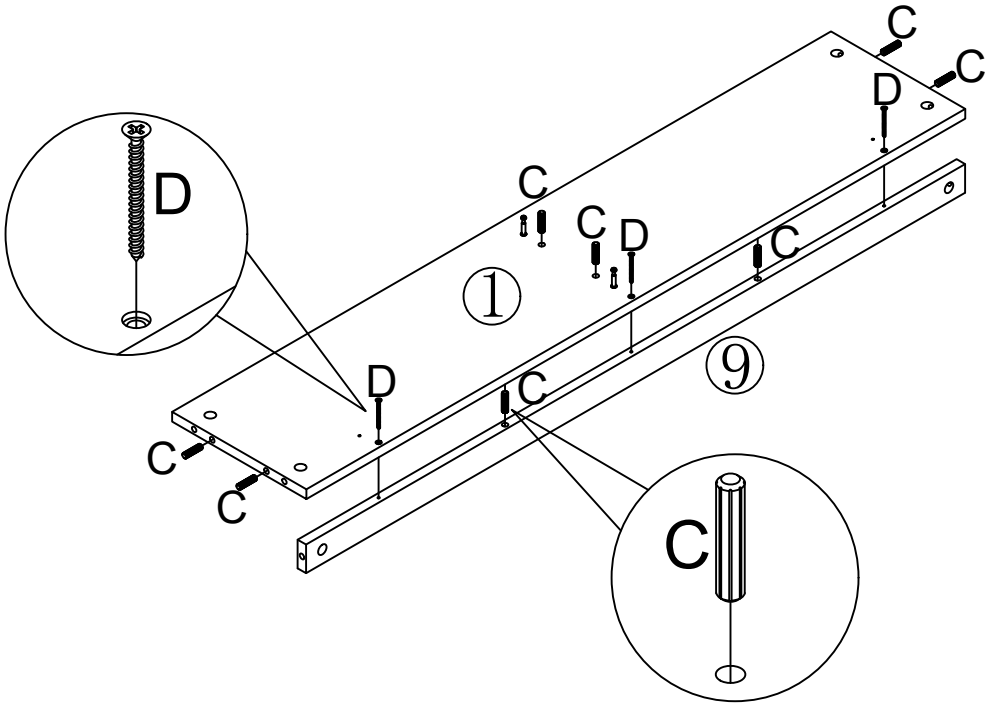


C	×8
D	×3

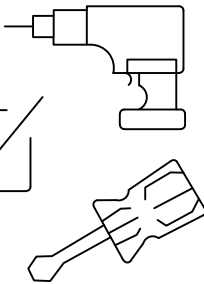
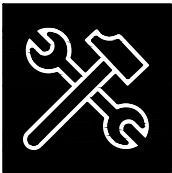



Step 4

B	×8
L	×8

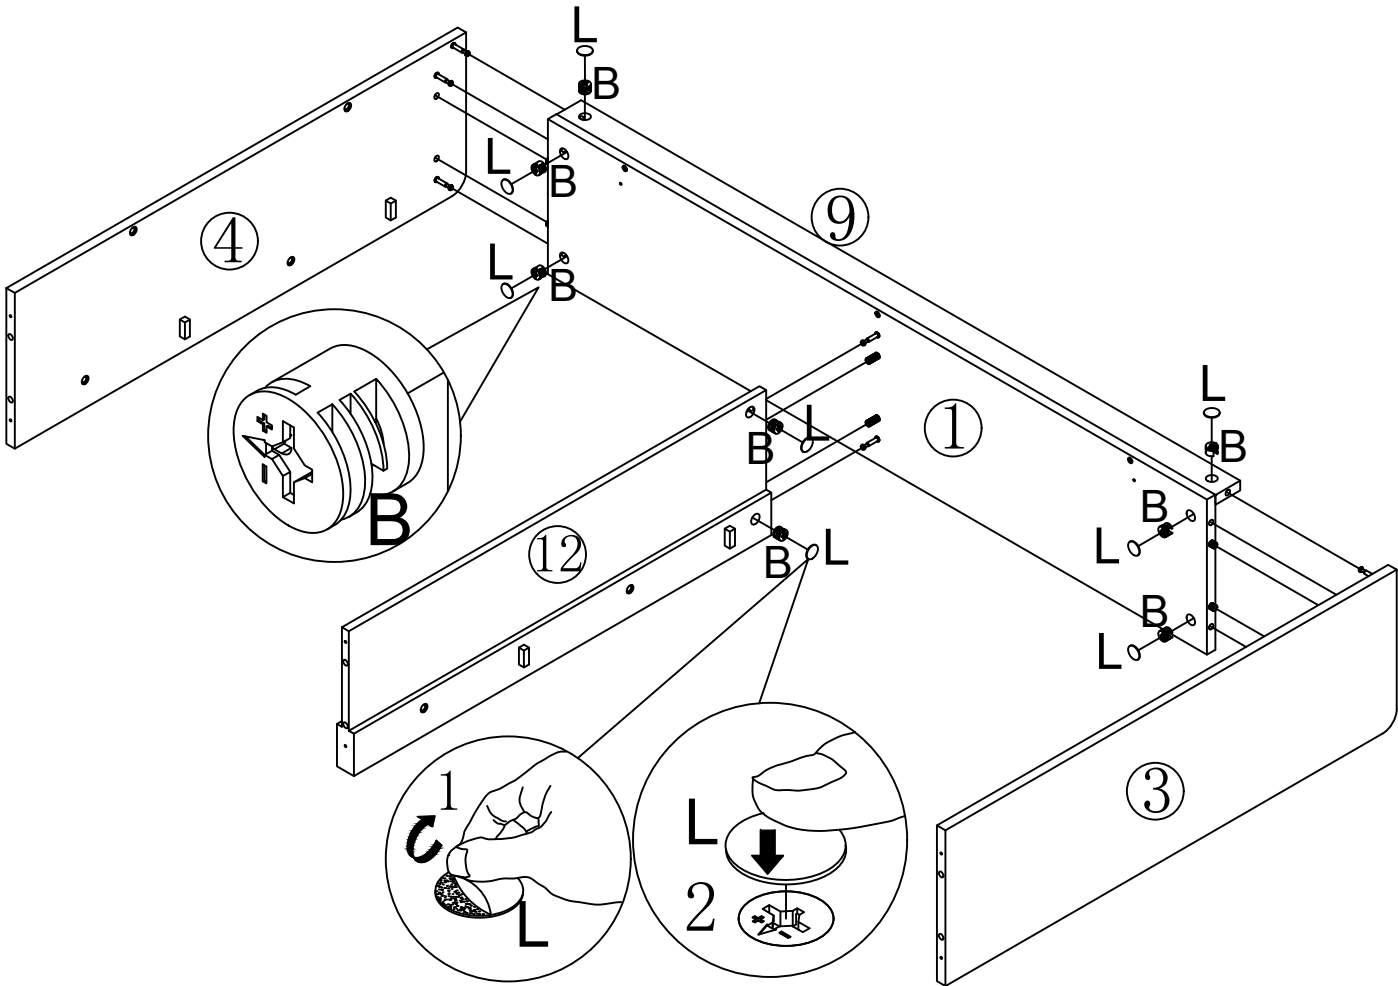


Step 5


X	×1	N	×1	Q	×1	S	×1
							

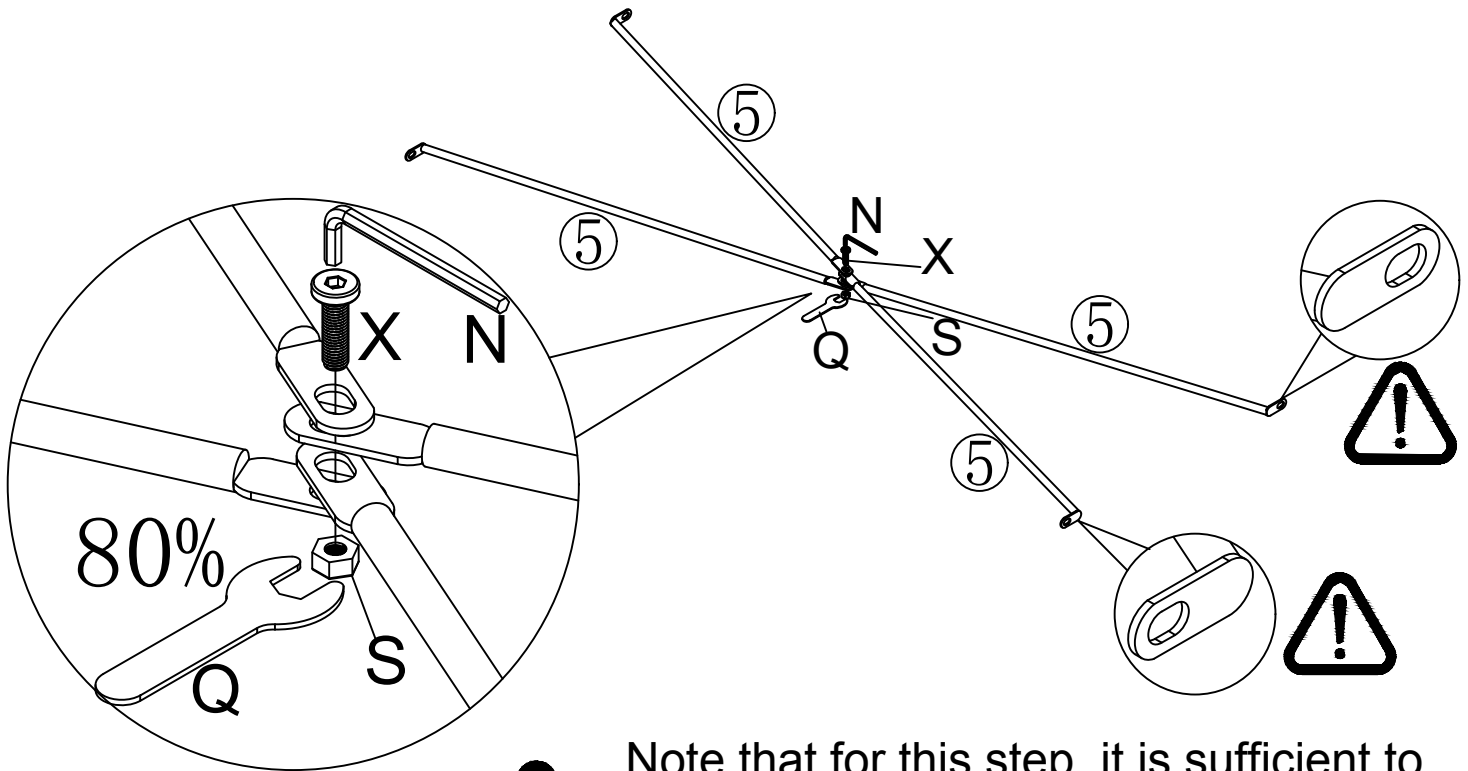

Note that for this step, it is sufficient to tighten the screws to 80% first. Do not tighten them together until the next step


Step 6


N	×1	O	×4
			
Q	×1		

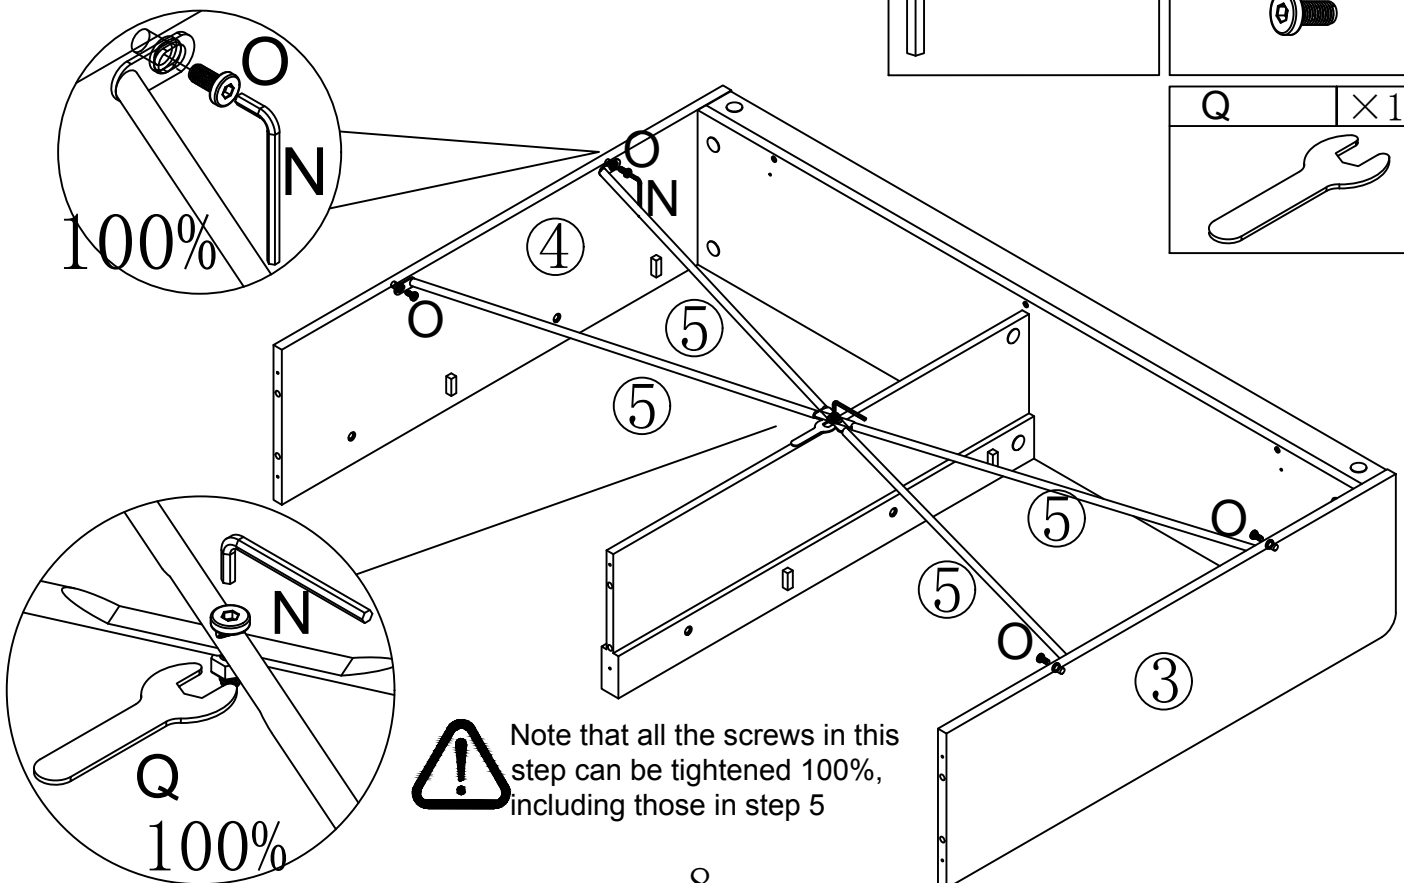



Note that all the screws in this step can be tightened 100%, including those in step 5


Step 7

C	×4	D	×6	
				

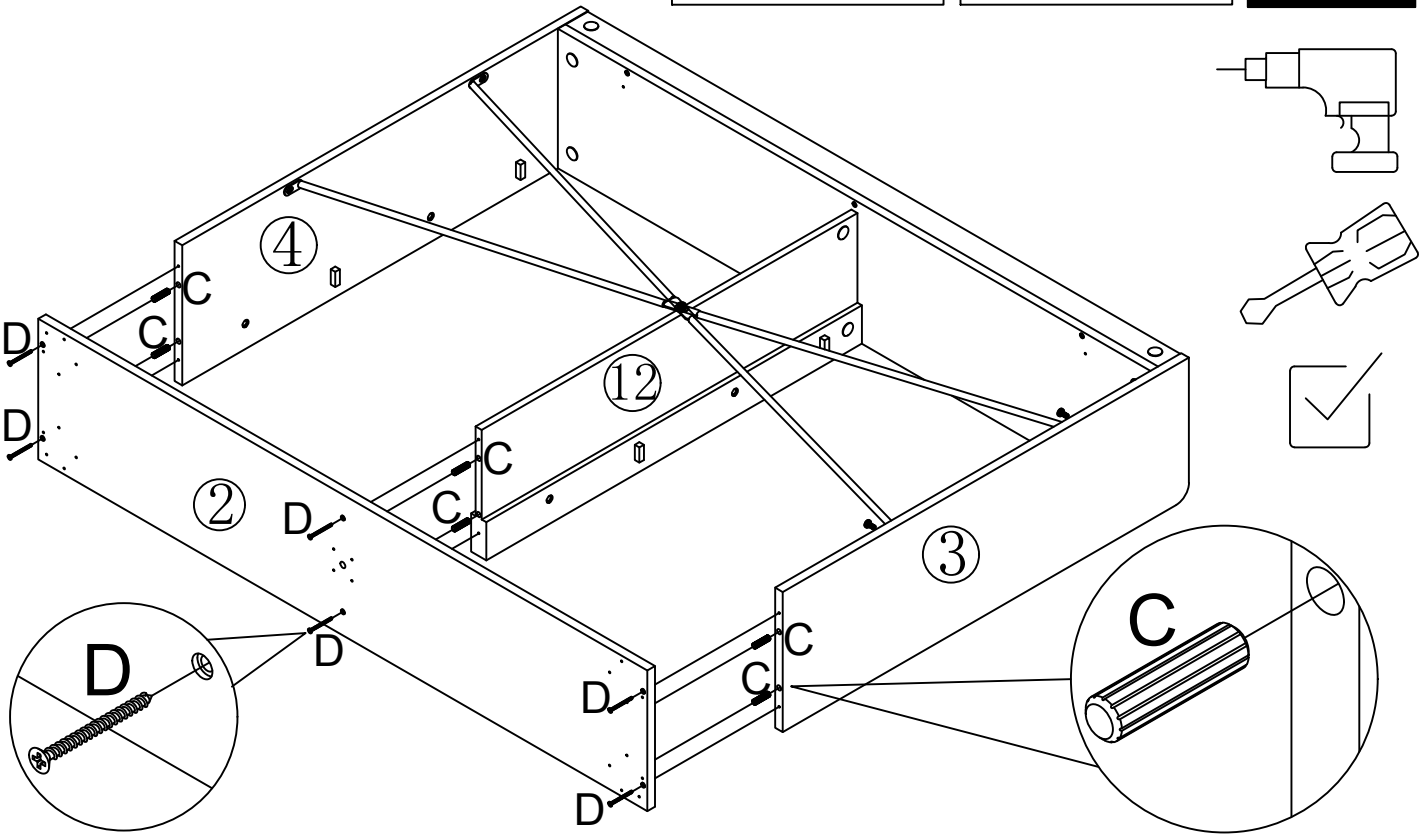

Step 8


I	×24	T	×4	W	×1	
						

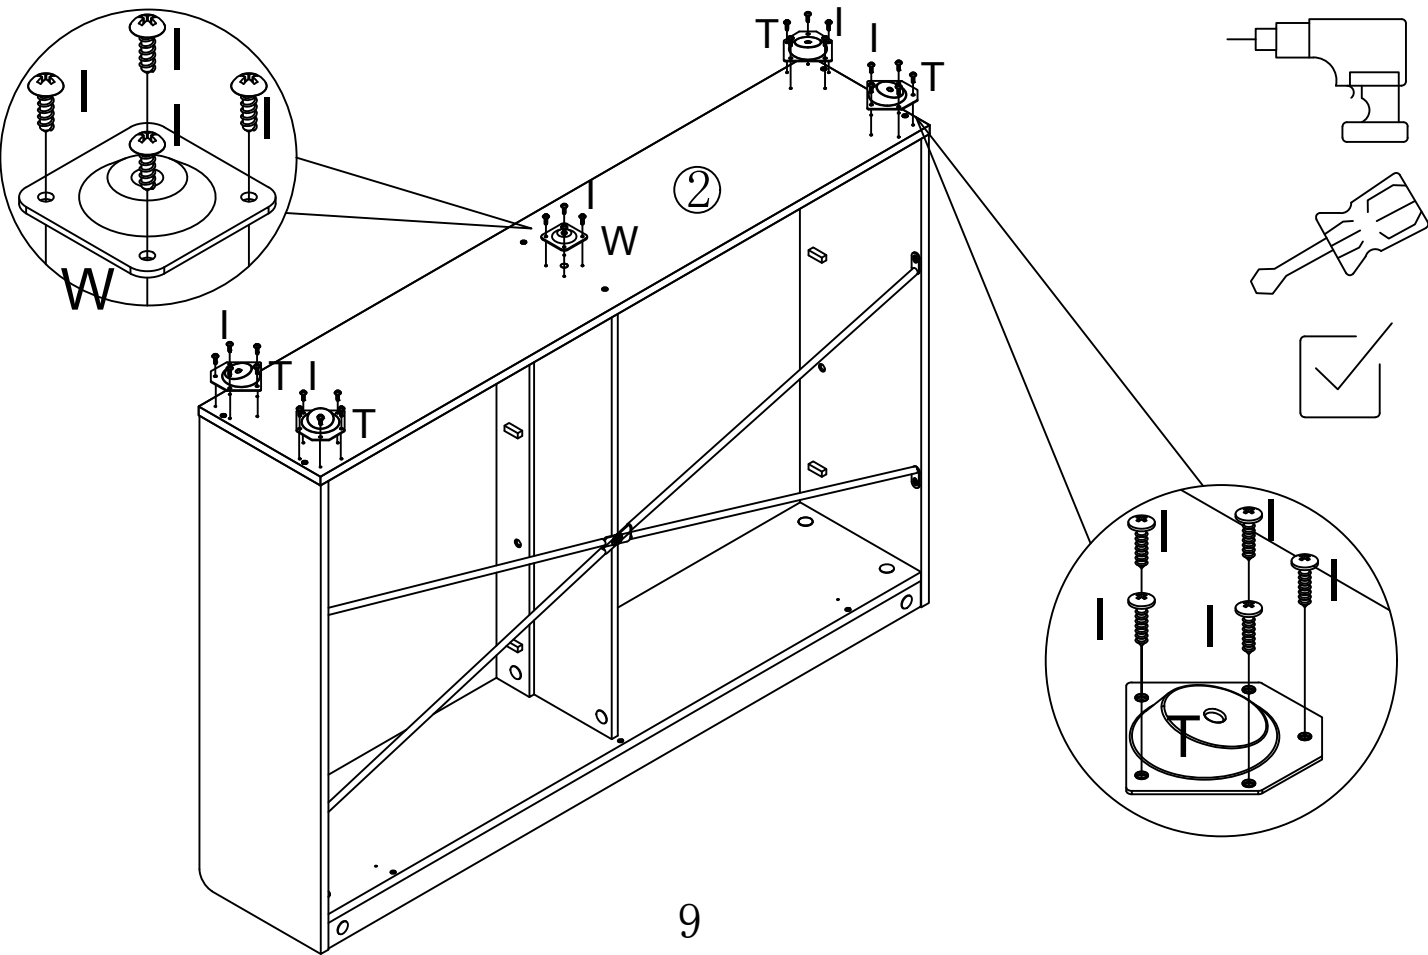




Step 9




Please note that the solid wood feet of size ⑪ are shorter than those of size ⑩

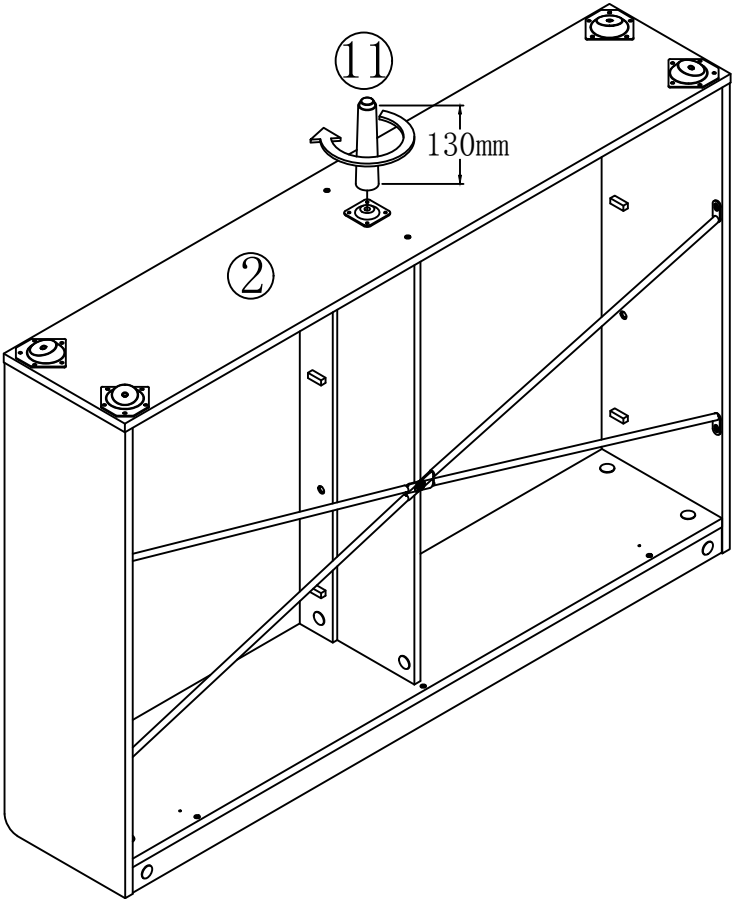


Step 10

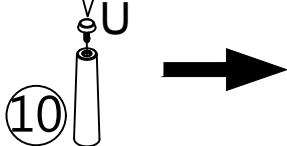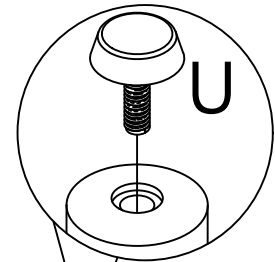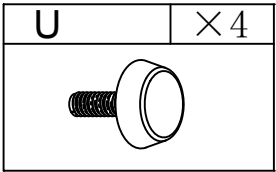




x4

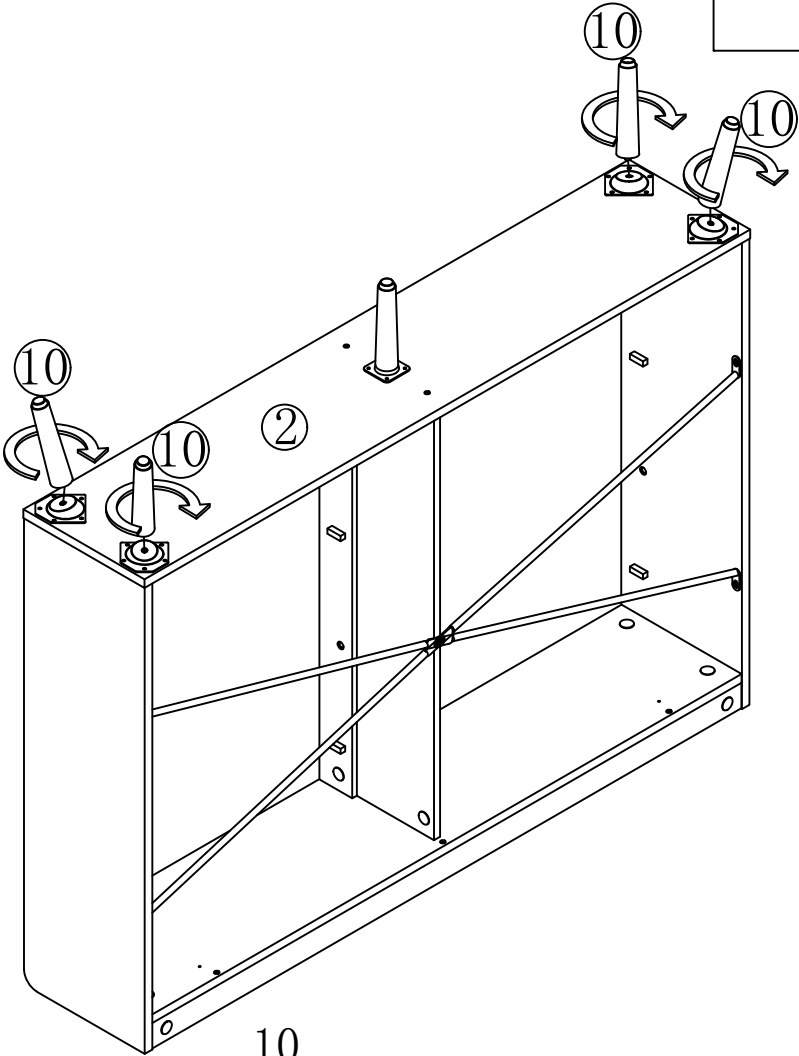


Step 11

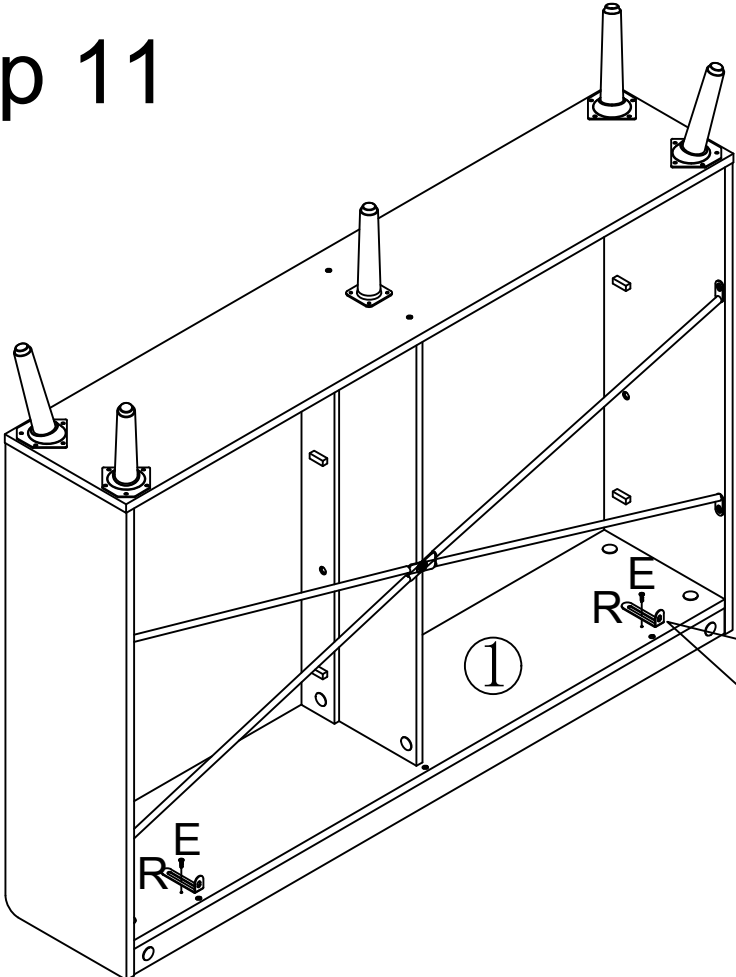


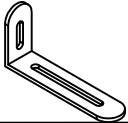
E	×2
	
R	×2
	

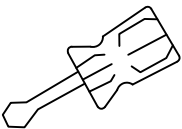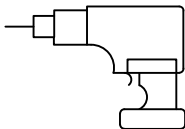





Step 12

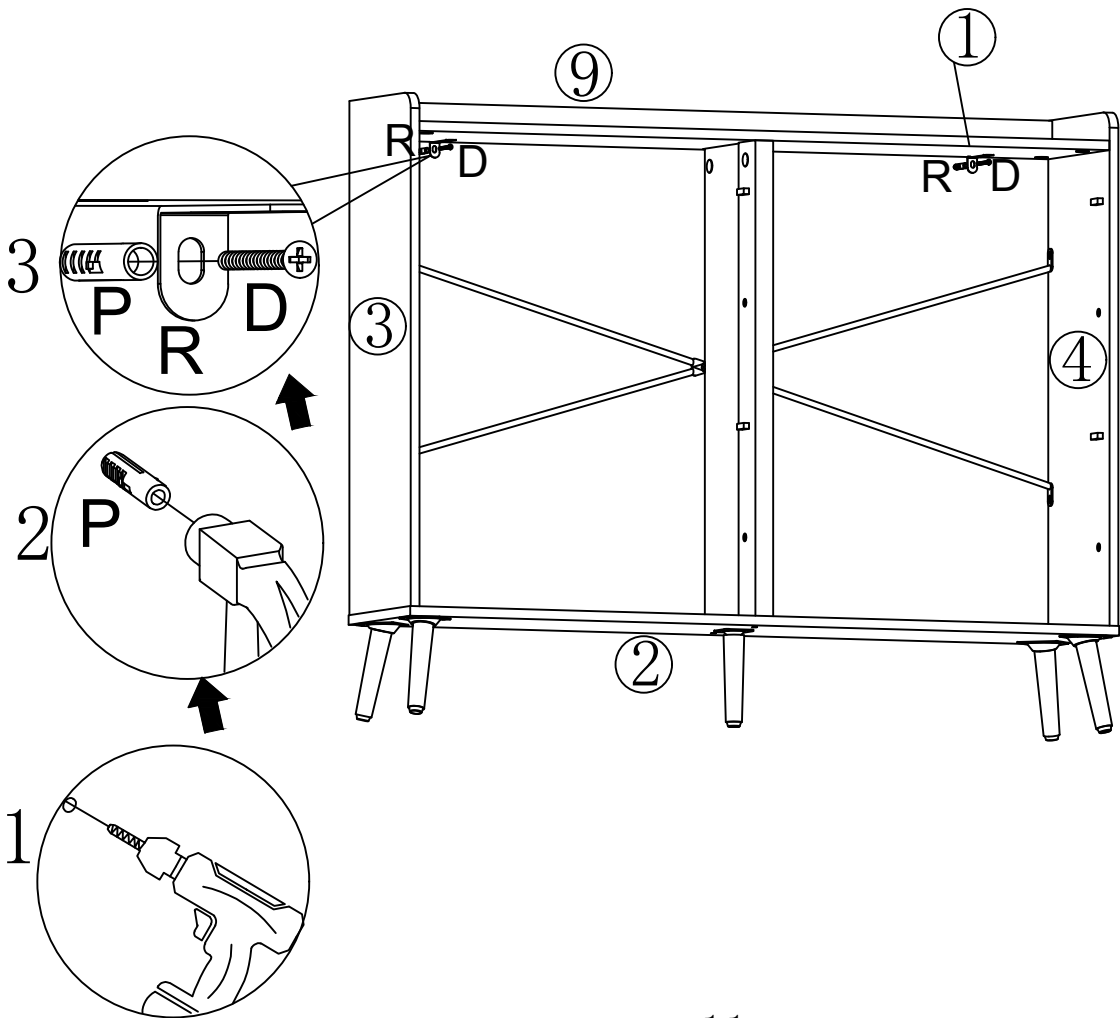



D	×2
	
P	×2
	

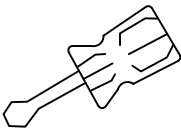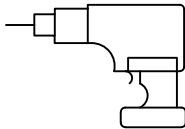


Step 13

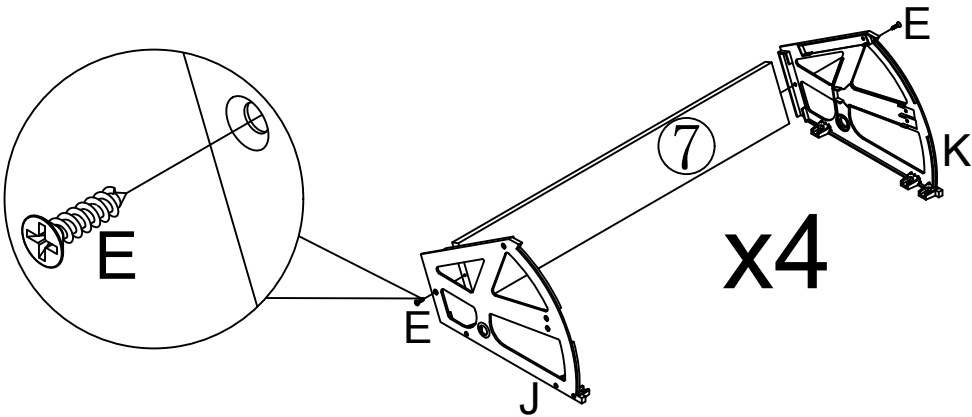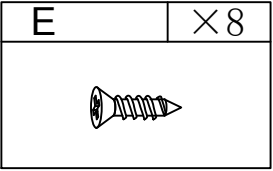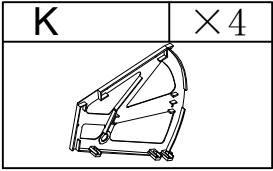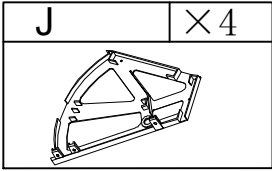





x4

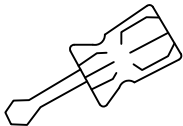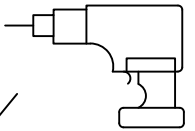


Step 14

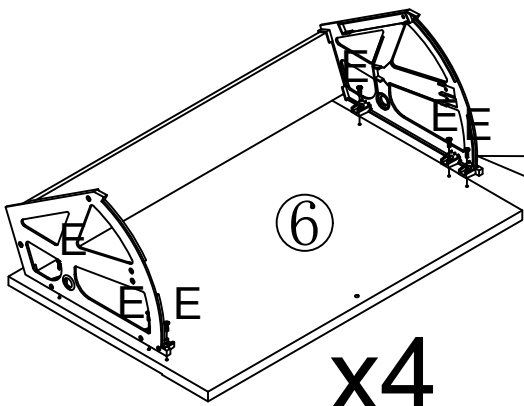




x4

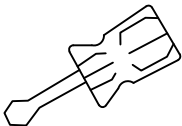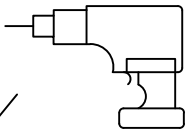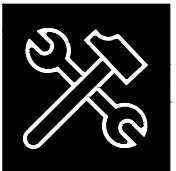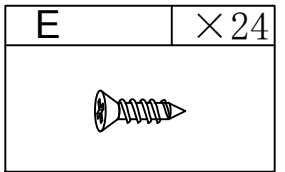


Step 15

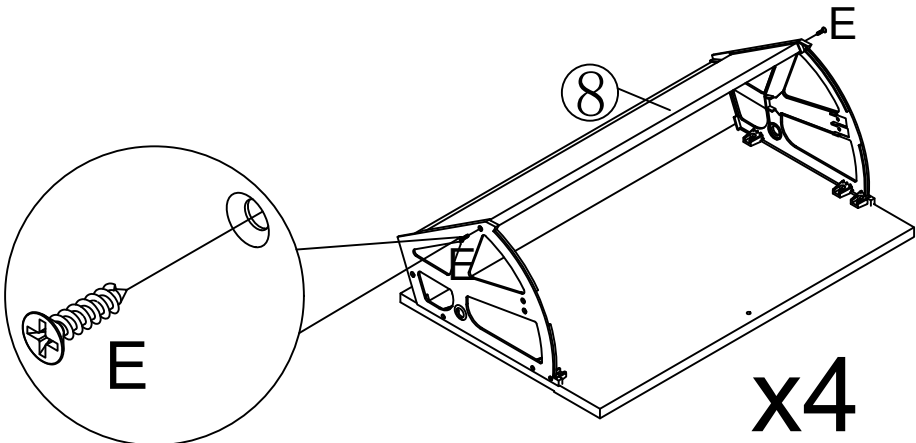


x4

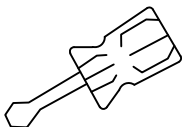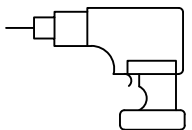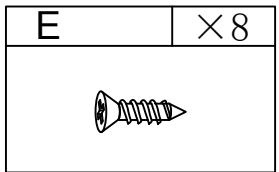



Step 16

M	×4	V	×4
			

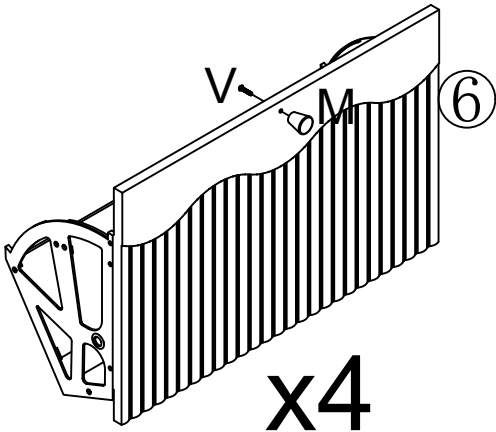


Step 17

F	×4	H	×4	N	×1
					

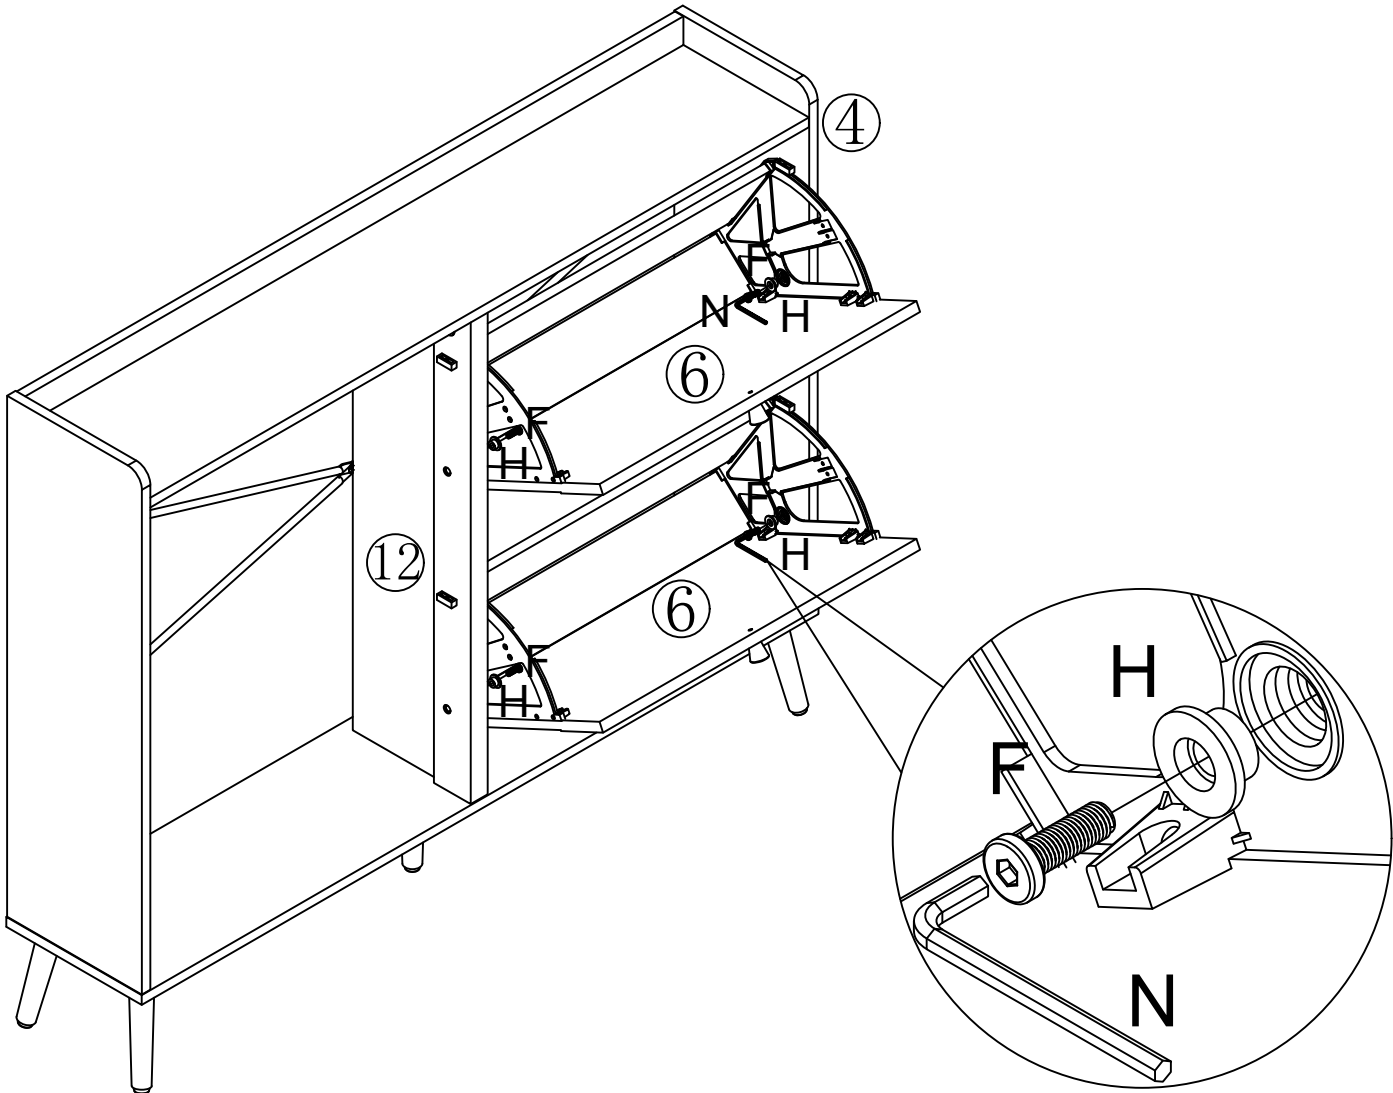


Step 18

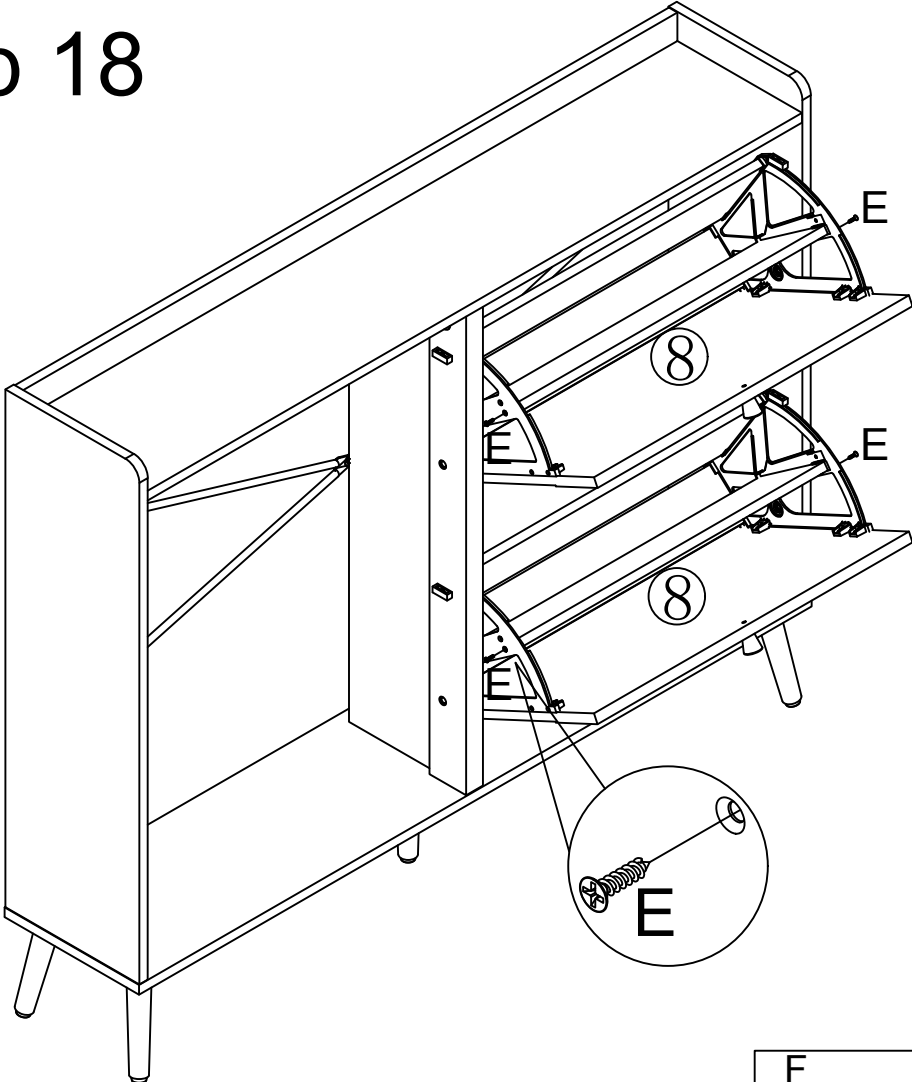

E	×4


Step 19

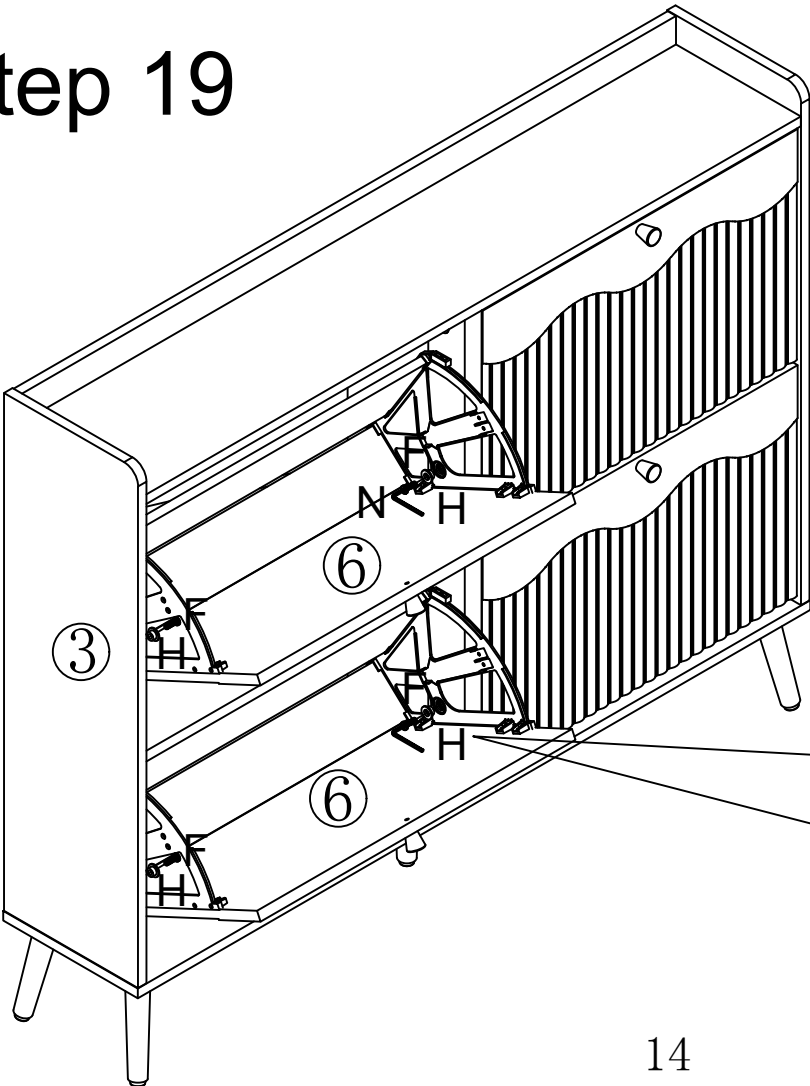



F	×4

H	×4


N	×1

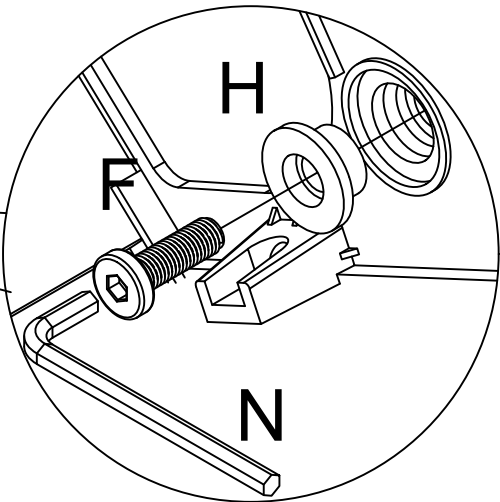

Step 20

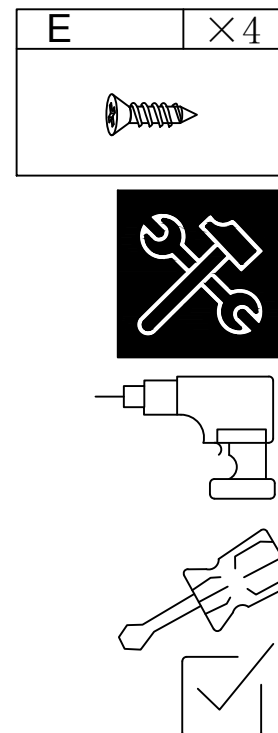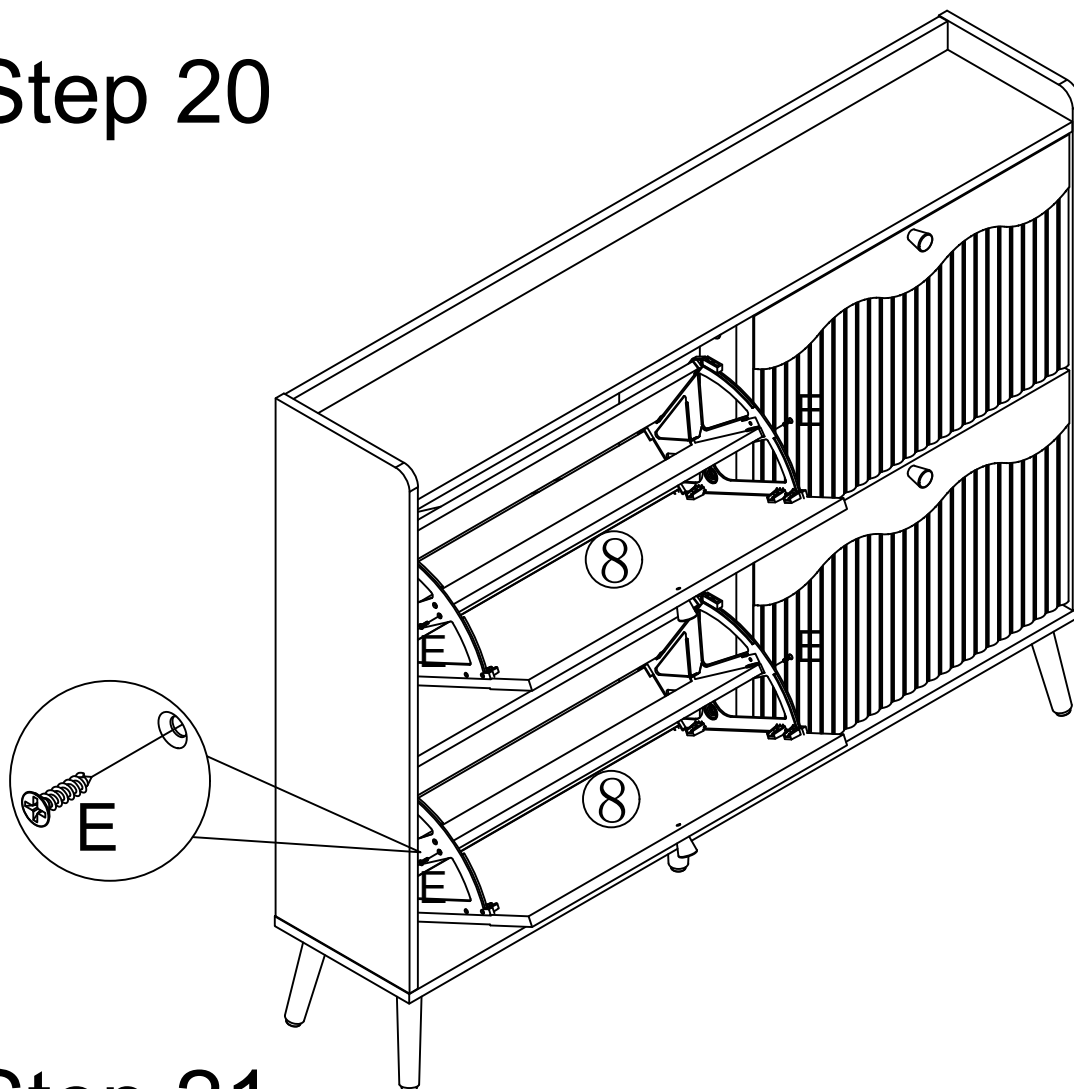

Step 21

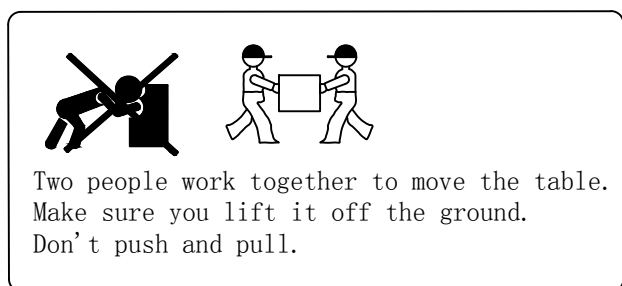

If the center position of the cabinet is too high or too low due to an uneven base plate or other reasons, the up and down height can be adjusted by regulating the adjustable foot pads on feet ⑩ and ⑪

