



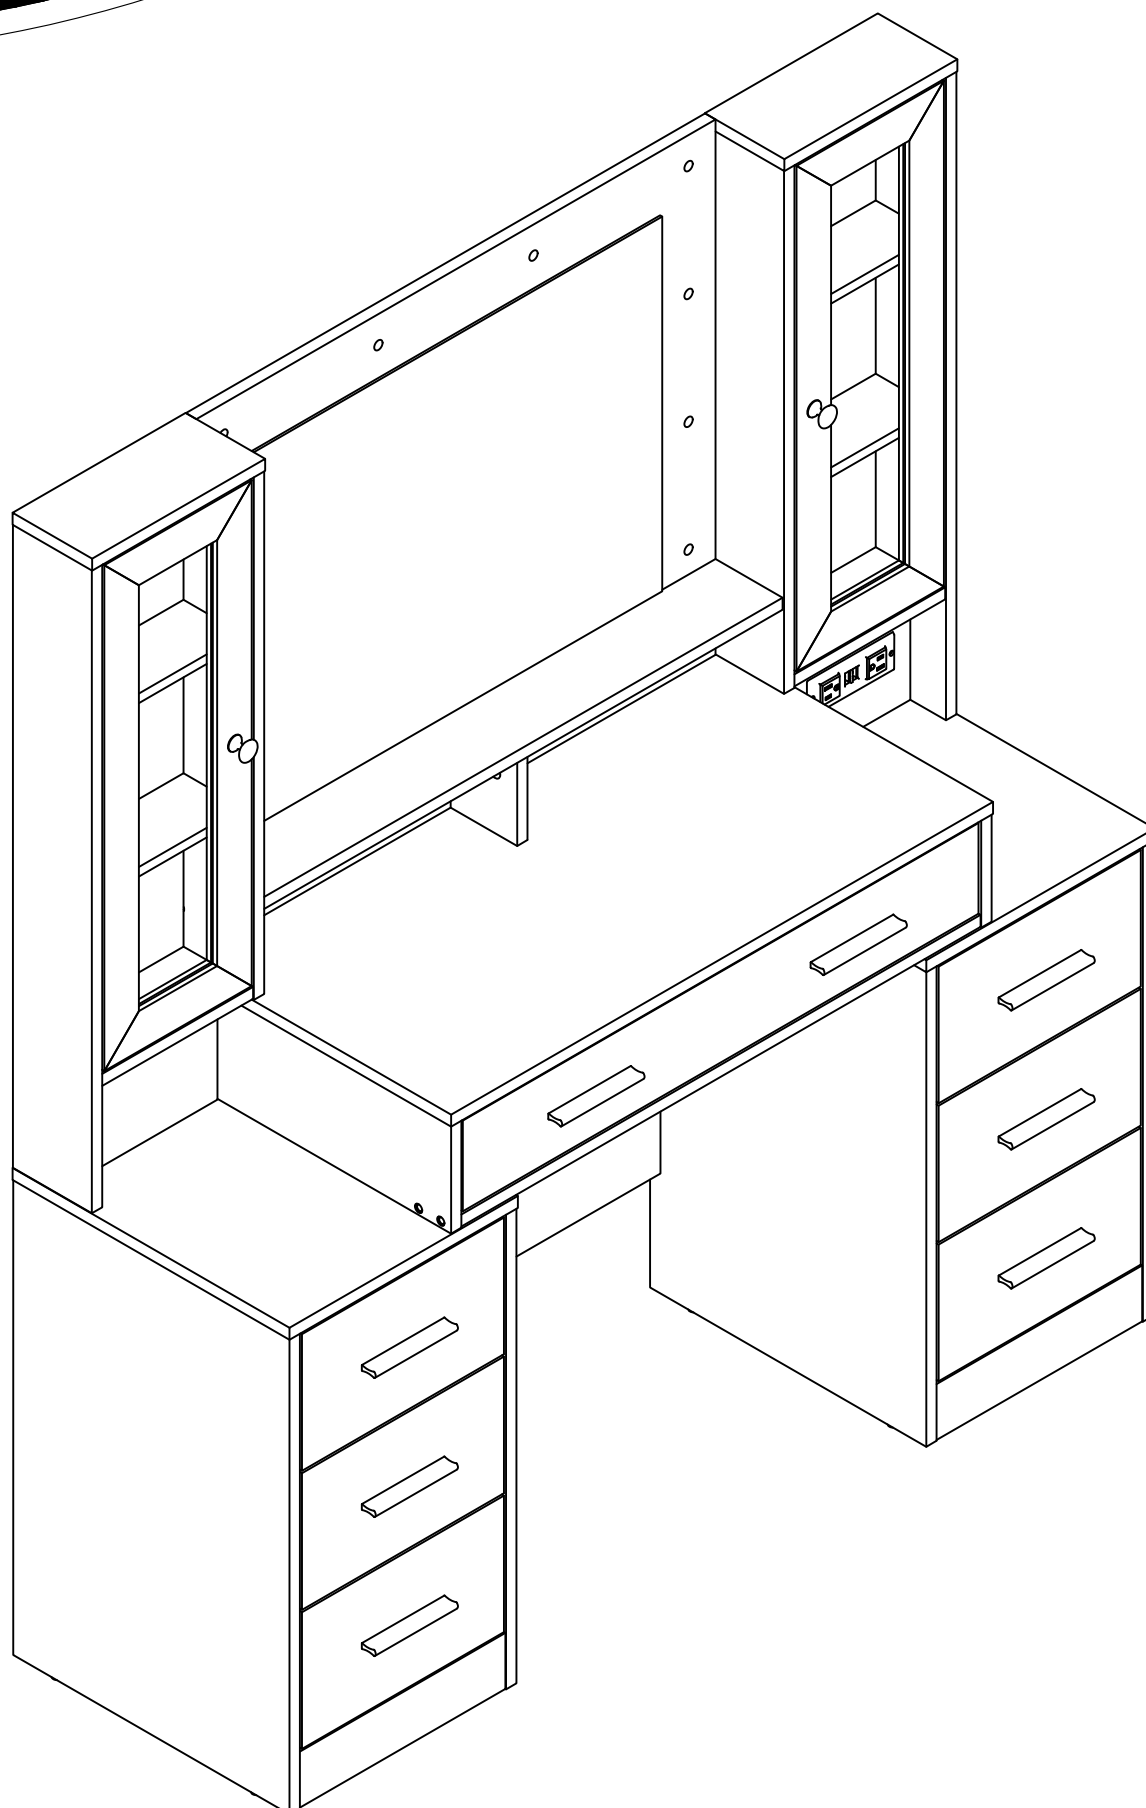

READ AND SAVE THIS INSTRUCTIONS FOR USE

ASSEMBLY & INSTRUCTION MANUAL

Before You Start





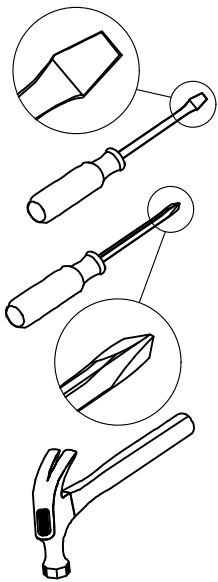


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please pay attention to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

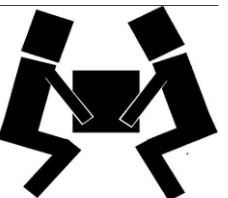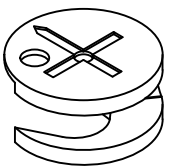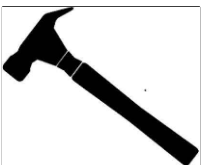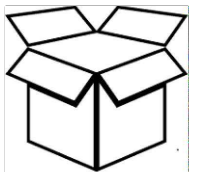


Board Identification


Not actual size

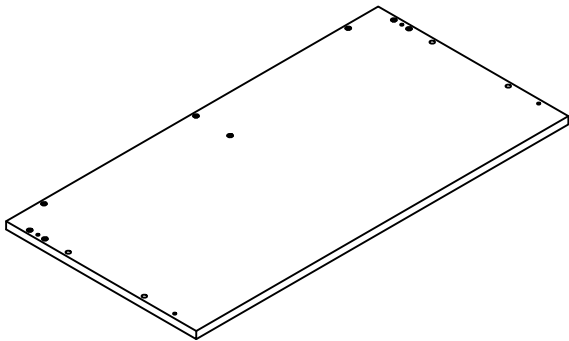


Ⓐ
TOP
Qty:1

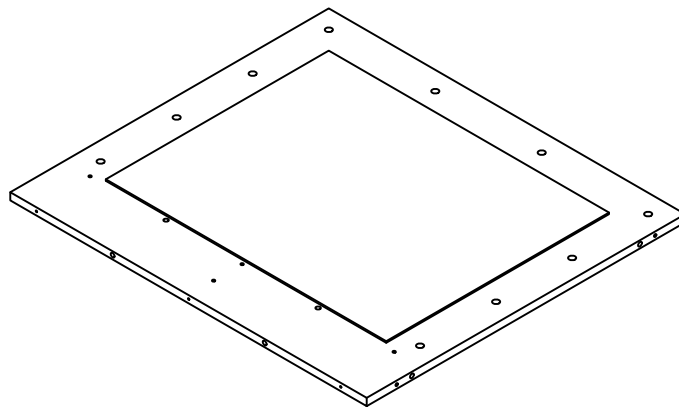


Ⓑ
DRESSING MIRROR
Qty:1

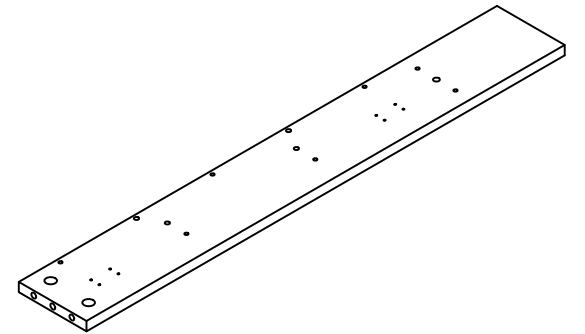


Ⓒ
HUTCH LEFT SIDE PANEL
Qty:1

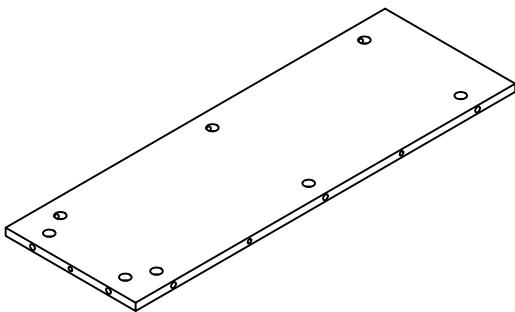


Ⓓ
RIGHT UPPER BACKPLANE
Qty:2

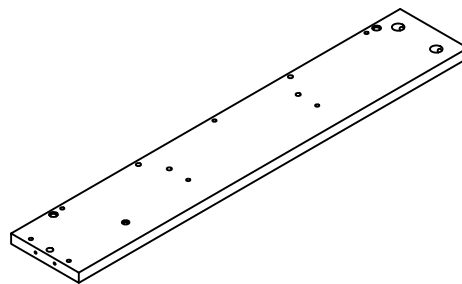


Ⓔ
HUTCH RIGHT SIDE PANEL
Qty:1

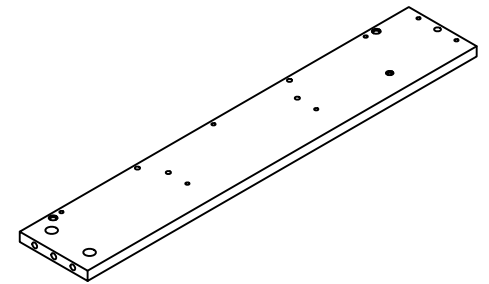


Ⓕ
HUTCH LEFT SIDE PANEL
Qty:1

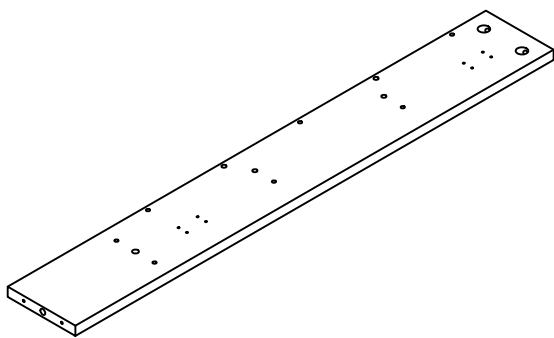

Ⓖ
HUTCH RIGHT SIDE PANEL
Qty:1

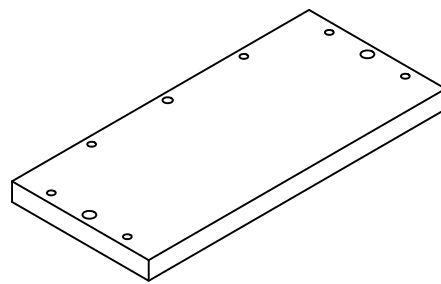


Ⓗ
HUTCH TOP
Qty:2

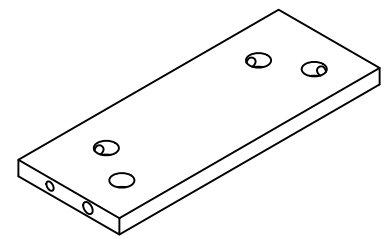

Ⓘ
HUTCH FIXED SHELF
Qty:4


Board Identification

Not actual size

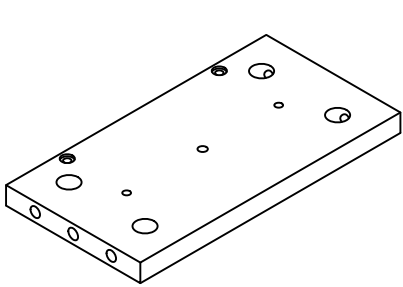


ⓐ

HUTCH BOTTOM
Qty:2

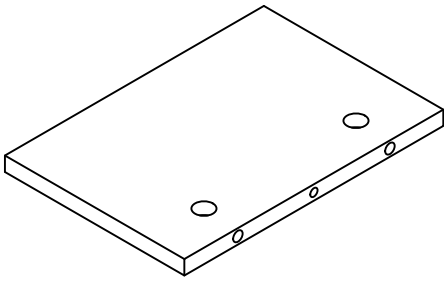


ⓑ

MOVABLE SHELVES
Qty:1

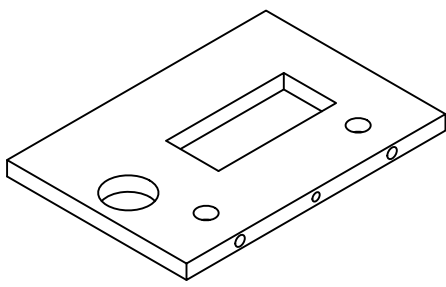


ⓒ

LOWER RIGHT BACK PANEL
Qty:1

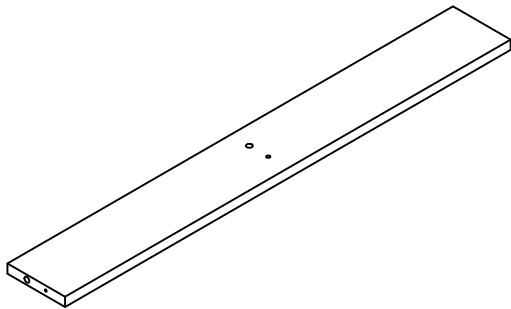


ⓓ

TOP PANEL
Qty:1

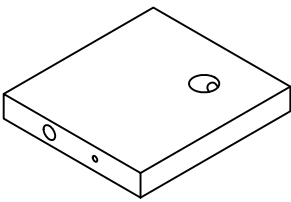


ⓔ

HUTCH SIDE PANEL
Qty:1

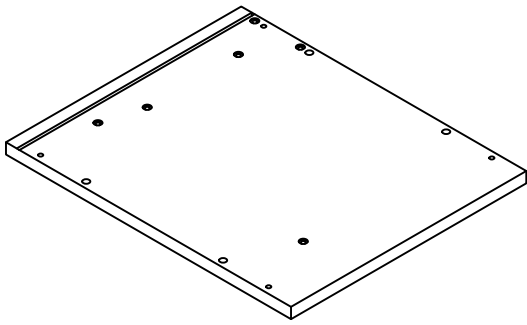


ⓕ

CABINET TOP
Qty:1

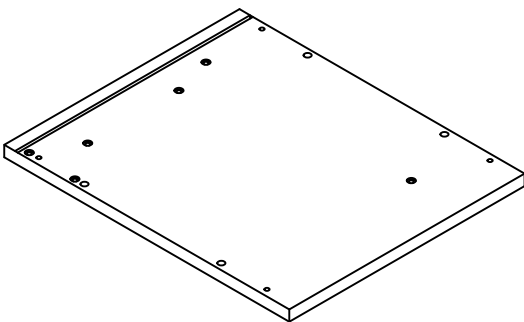


ⓖ

CABINET TOP
Qty:1

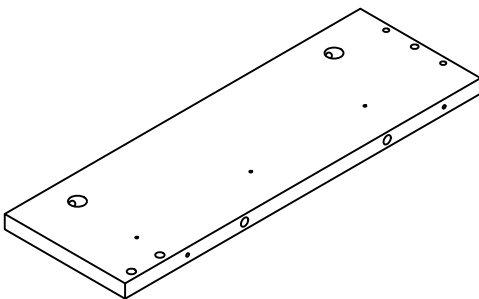

ⓗ

LEFT PANEL
Qty:1

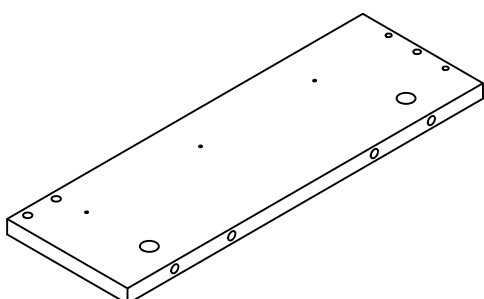


ⓓ

RIGHT SIDE PANEL
Qty:1


Board Identification

Not actual size

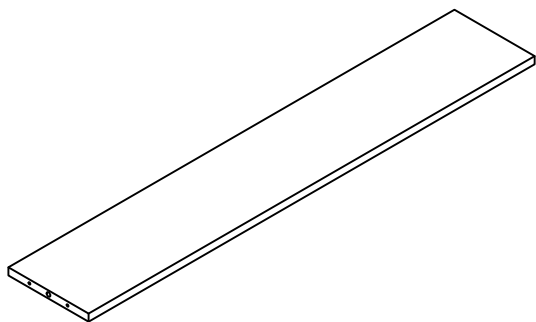


S

DESK BACK PANEL
Qty:1

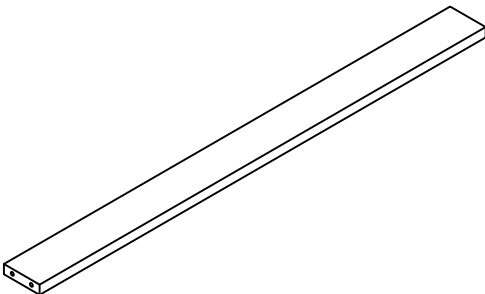


T

DESK FRONT CROSS MEMBER
Qty:1

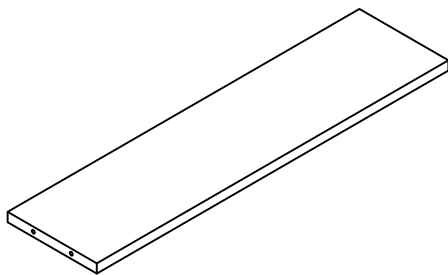


U

DESK LOWER BACK SLAT
Qty:1

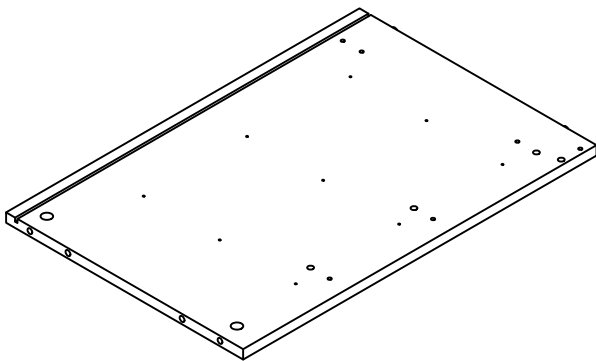


V

CABINET LEFT SIDR PANEL
Qty:1

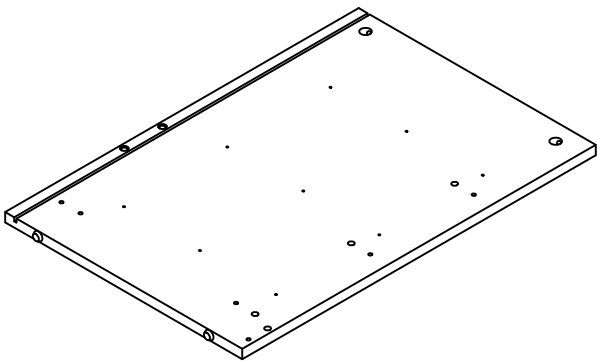


W

CABINET RIGHT SIDR PANEL
Qty:1

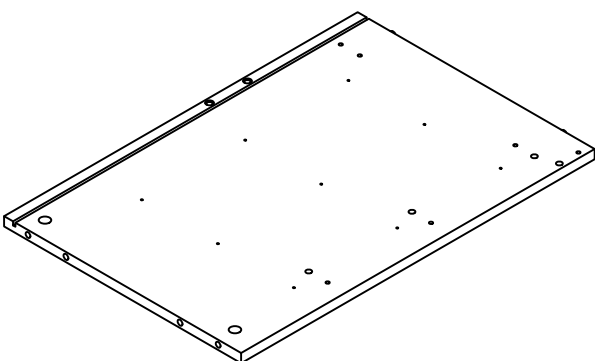


X

CABINET LEFT SIDR PANEL
Qty:1

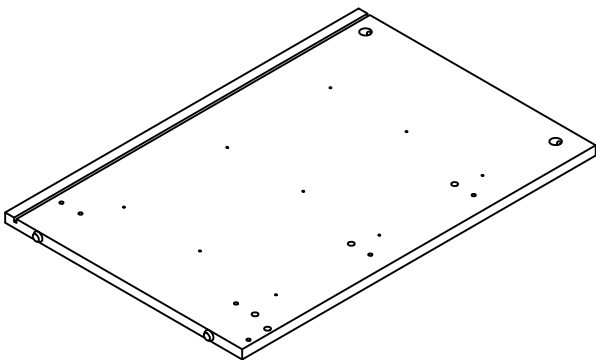


Y

CABINET RIGHT SIDR PANEL
Qty:1

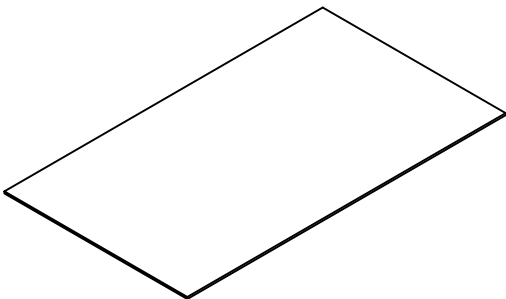

Z

CABINET BACK PANEL
Qty:2

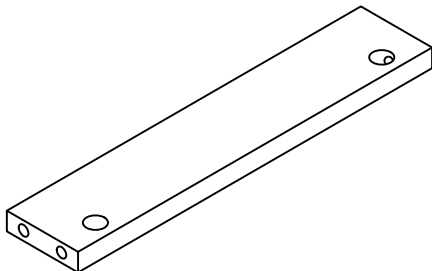


AA

CABINET FRONT SLAT
Qty:4


Board Identification

Not actual size

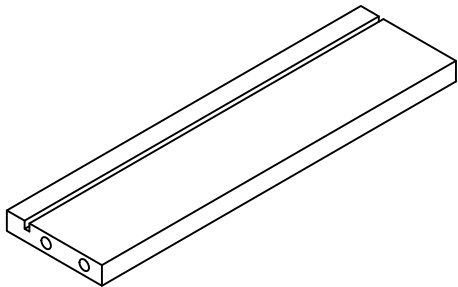


BB

CABINET BACK SLAT
Qty:2

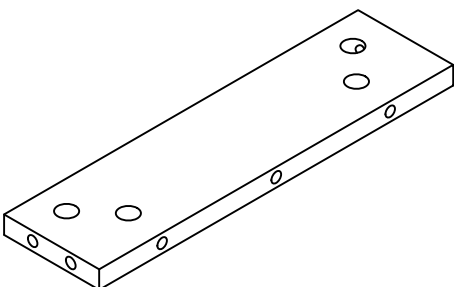


CC

CABINET FRONT SLAT
Qty:2

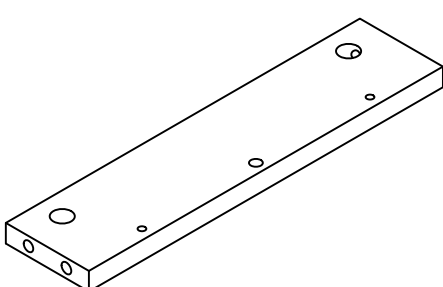


DD

BOTTOM FRONT RAIL
Qty:2

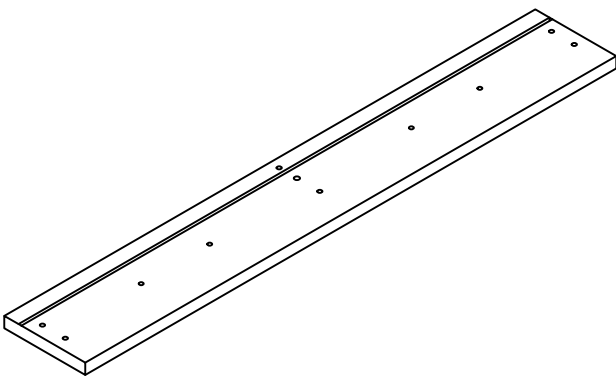


EE

DRAWER PANEL
Qty:1

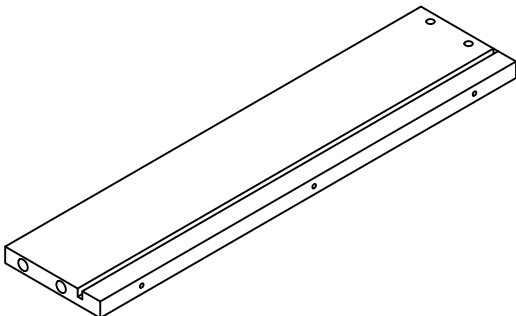


FF

DESK DRAWER LEFT PANE
Qty:1

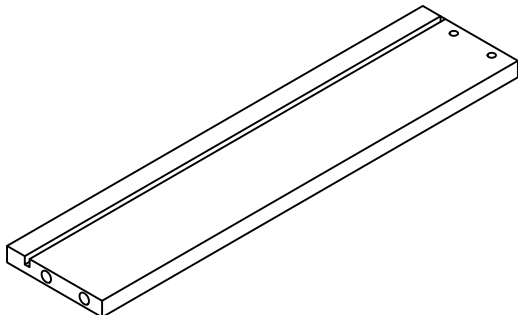


GG

DESK DRAWER RIGHT PANEL
Qty:1

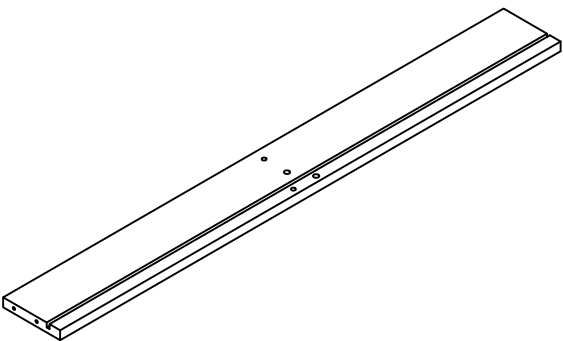


HH

DESK DRAWER BACK PANEL
Qty:1

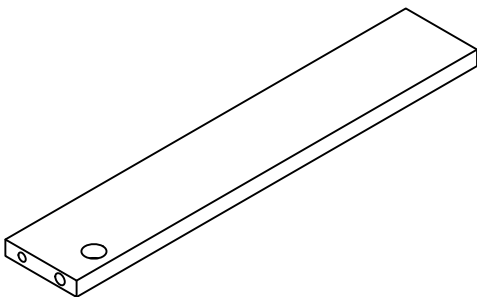

II

DRAWER PARTITION
Qty:1

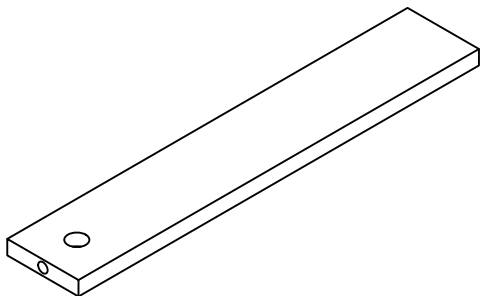


JJ

DRAWER SUPPORT RAIL
Qty:1


Board Identification

Not actual size

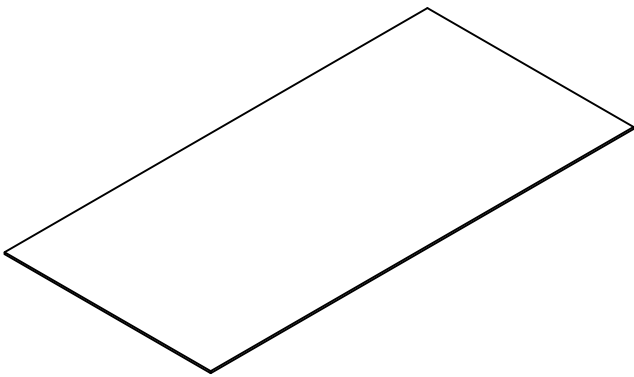


ⓀⓀ

DESK DRAWER BOTTOM
Qty:1

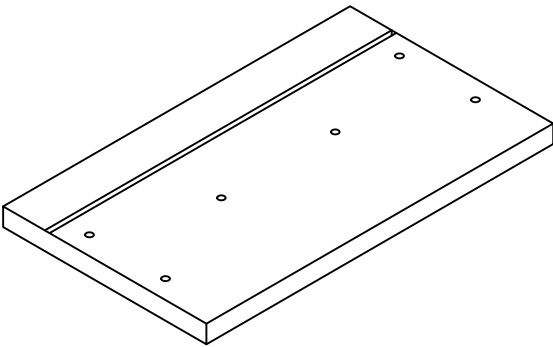


ⓁⓁ

CABINET DRAWER FRONT
Qty:6

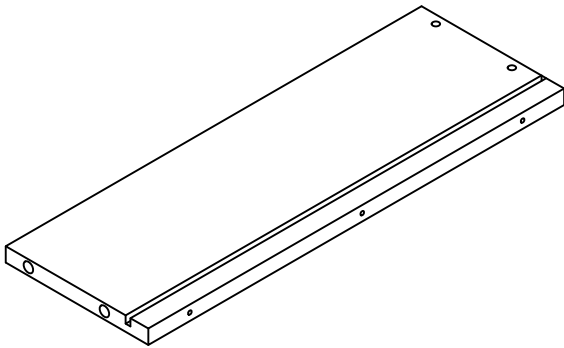


ⓂⓂ

CABINET DRAWER BACK PANEL
Qty:6

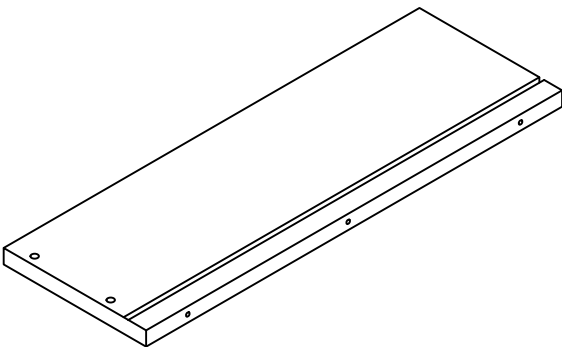


ⓃⓃ

CABINET DRAWER LEFT PANE
Qty:6

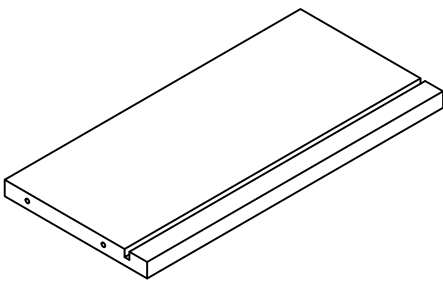


ⓄⓄ

CABINET DRAWER RIGHT PANEL
Qty:6

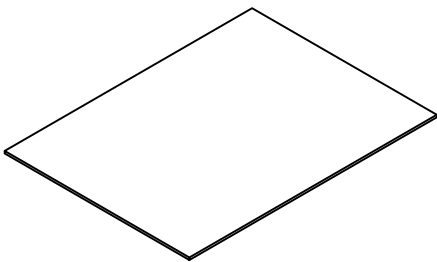

ⓅⓅ

CABINET DRAWER BOTTOM
Qty:6

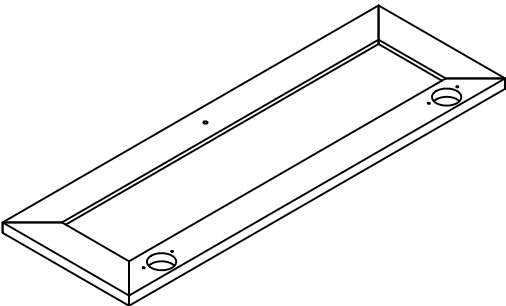

ⓆⓆ

DOOR
Qty:2

Part List



Ø15X9.5mm

①

X123

CAM LOCK
spare:3




Ø6.5X35mm

②

X123

CAM BOLT
spare:3




Ø6X30mm

③

X33

WOOD DOWEL
spare:3




Ø8X30mm

④

X56

WOOD DOWEL
spare:3




Ø3.5X14mm

⑤

X108

SCREW
spare:3




Ø3X12mm

⑥

X2

SCREW
spare:1




Ø4X35mm

⑦

X64

SCREW
spare:3



Ø6.3X50mm

⑧

X12

SCREW
spare:1




M4X18mm

⑨

X18

SCREW

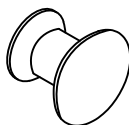


Ø25X21mm

⑩

X2

HANDLE

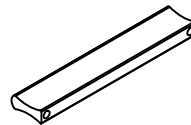


106X16X8mm

⑪

X8

HANDLE

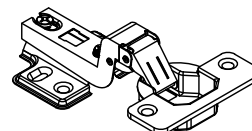


Ø35mm

⑫

X4

HINGE

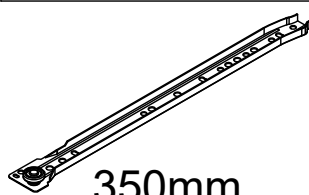


350mm

13CL

X7

LEFT CABINET MEMBER

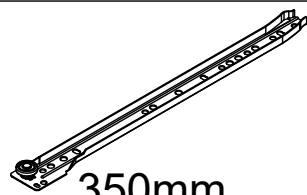


350mm

13CR

X7

RIGHT CABINET MEMBER

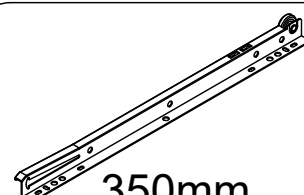


350mm

13DL

X7

LEFT DRAWER RUNNER

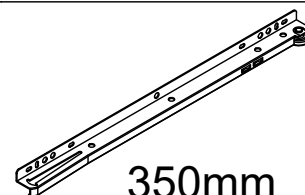


350mm

13DR

X7

RIGHT DRAWER RUNNER

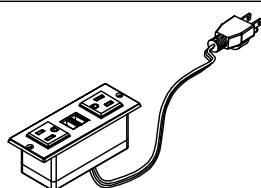

⑭

X1

POWER STRIP




Ø35mm

⑮

X1set

GROMMET




Ø21mm

⑯

X45

PERFECT STICKER
spare:3

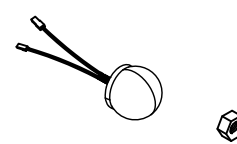


⑰


X10set

LIGHT BULB


Part List

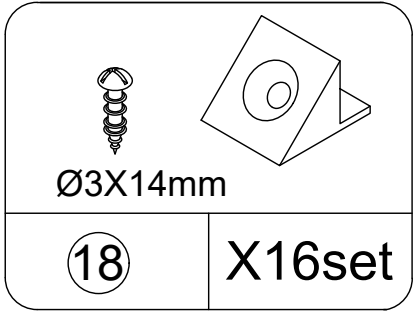

BACK PANEL BUCKLE
spare:1

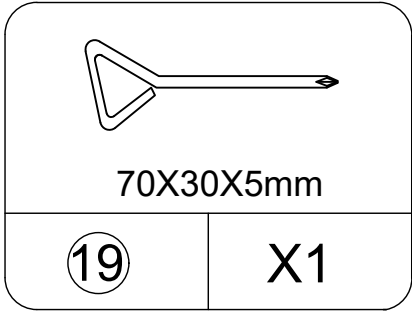

HEX KEY

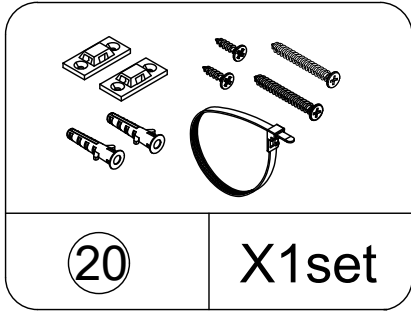


TIPPING RESTRAINT
HARDWARE KIT


Cam Lock Fastening System

Insert the cam bolt into the
hole first, then insert the cam
lock and lock it.


1

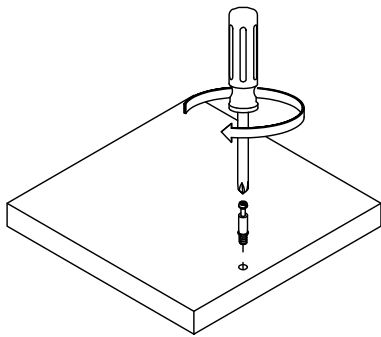

2

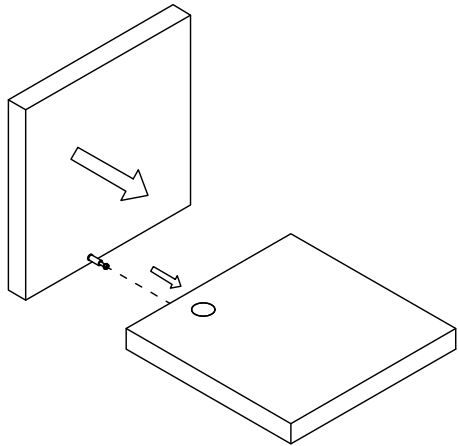


3

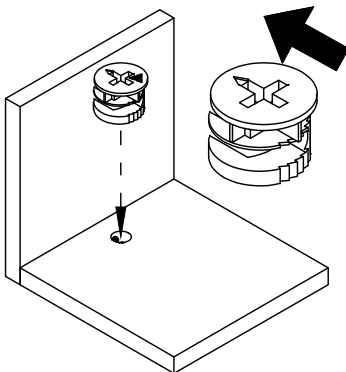


The opening must point toward the
edge of the board

4






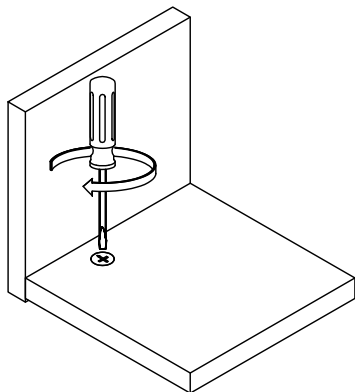


Board Identification


Not actual size

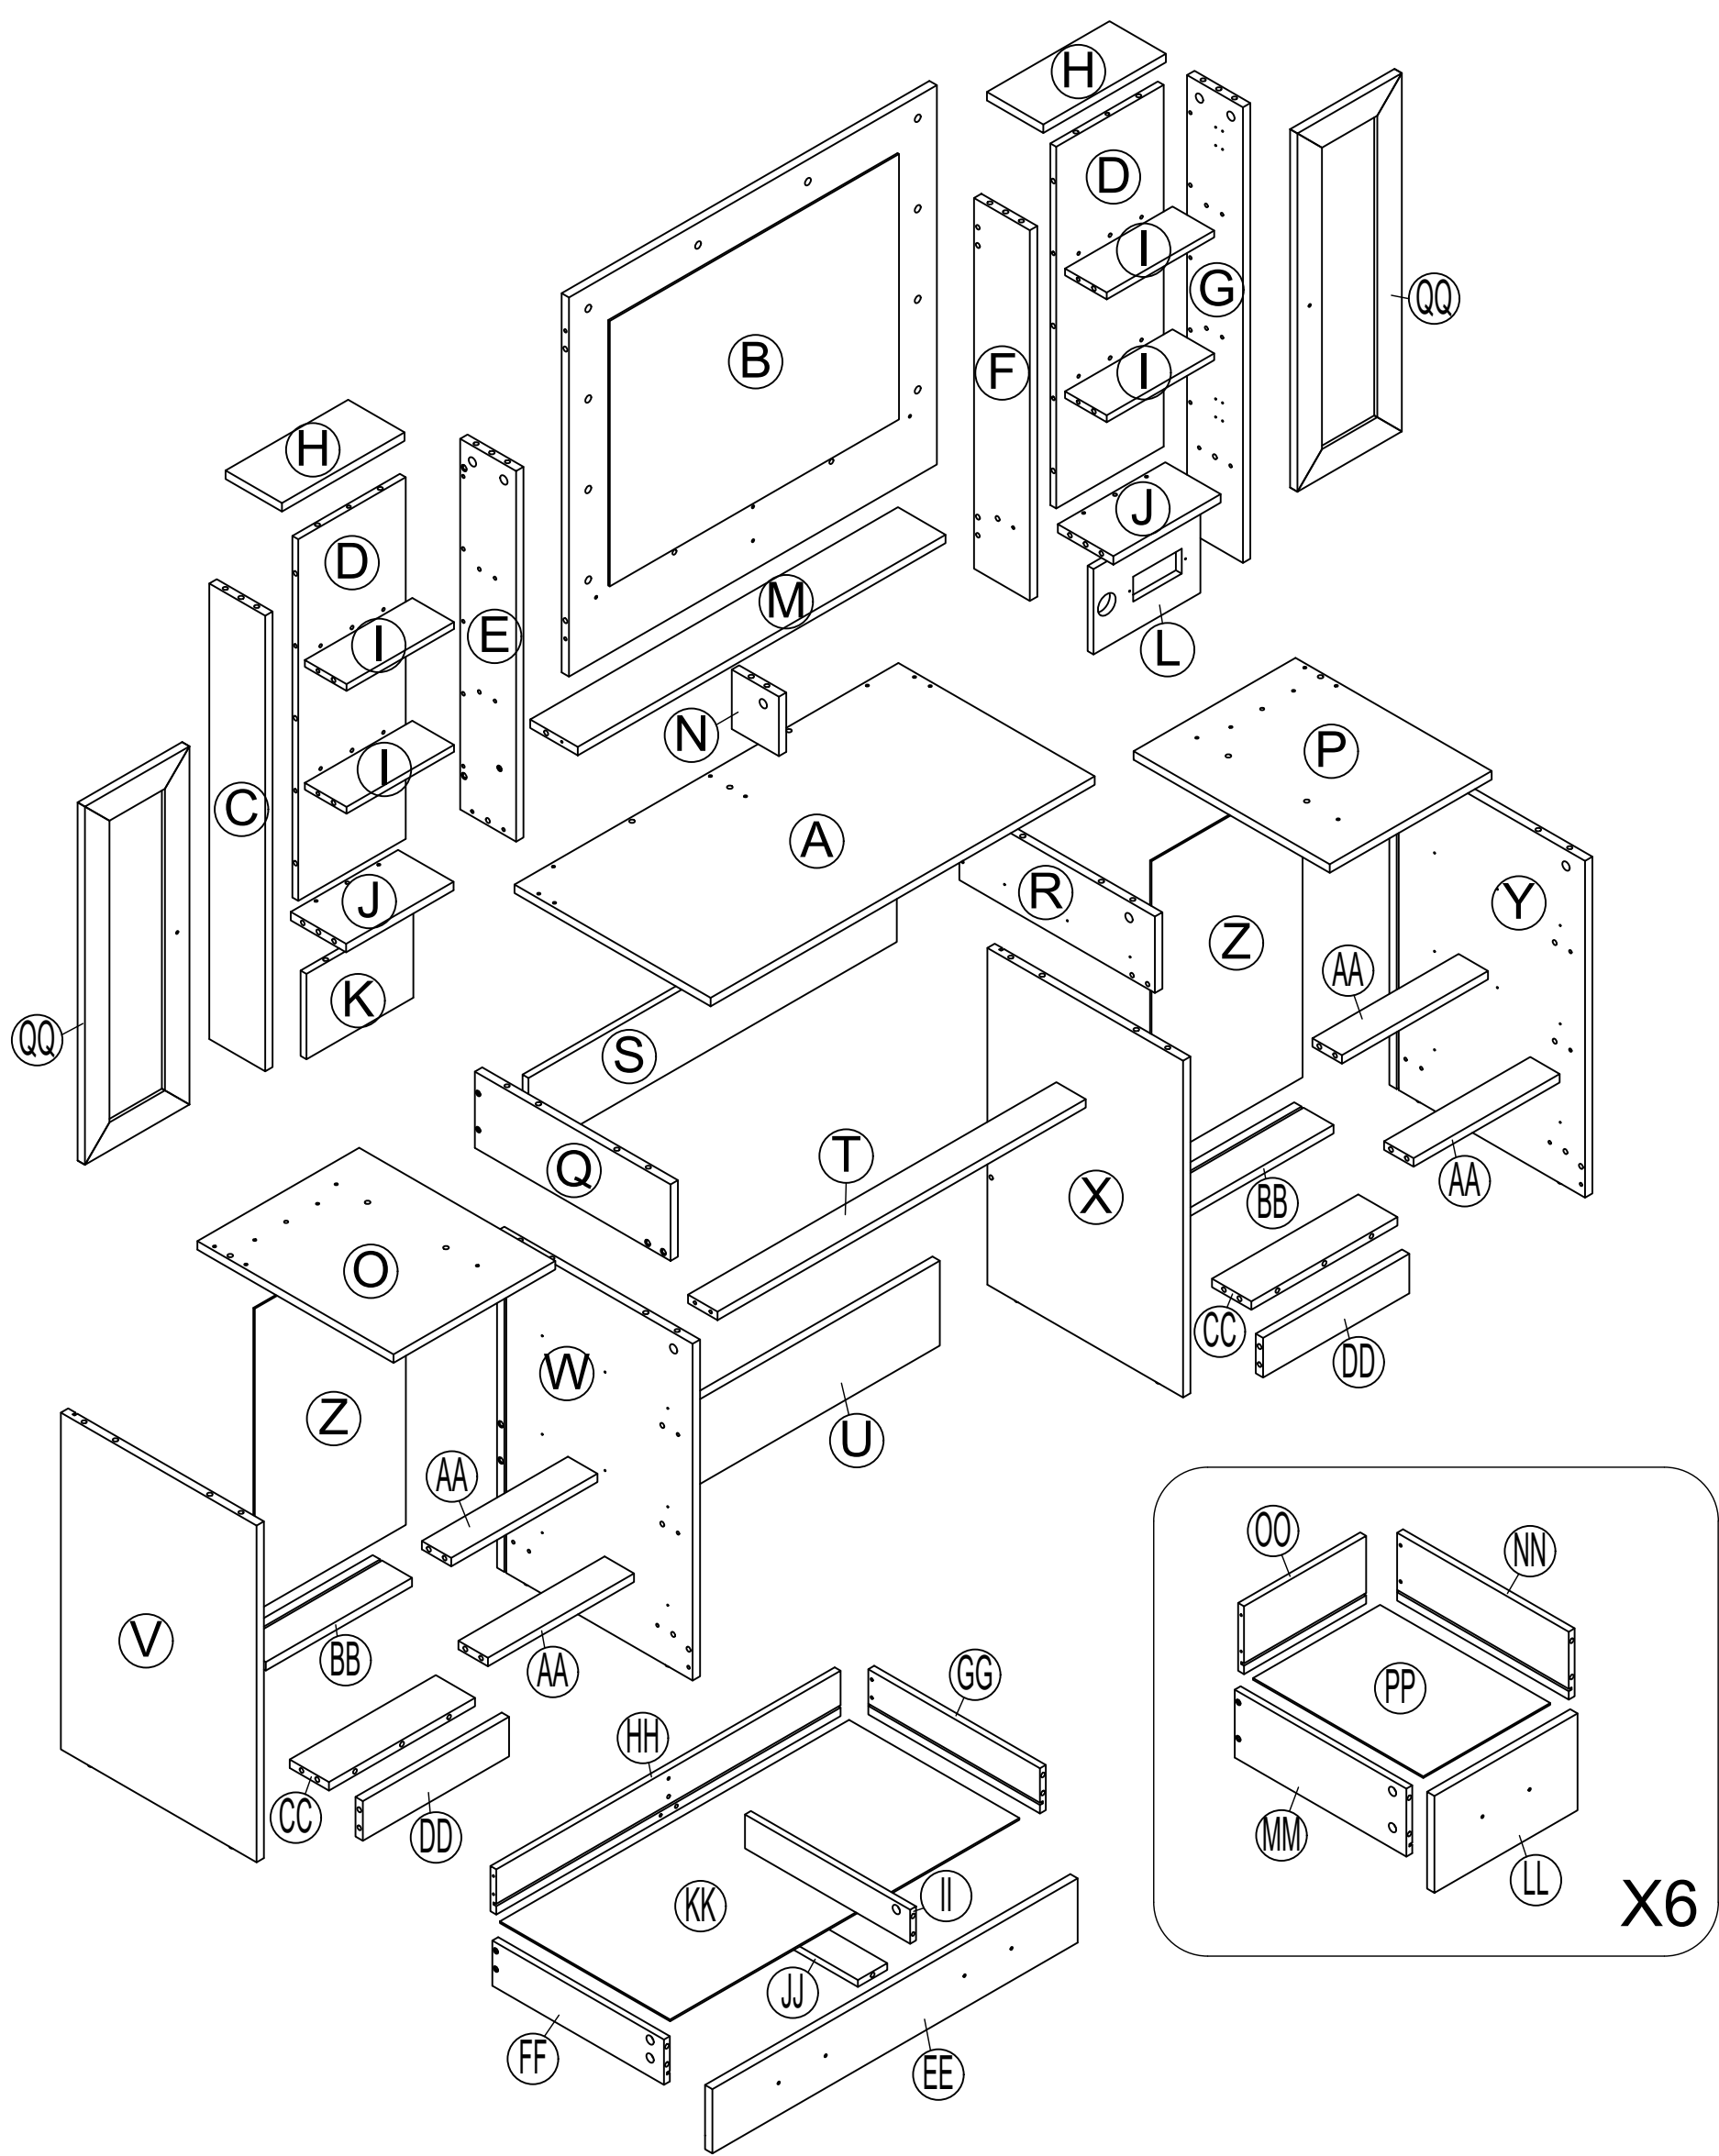



STEP1

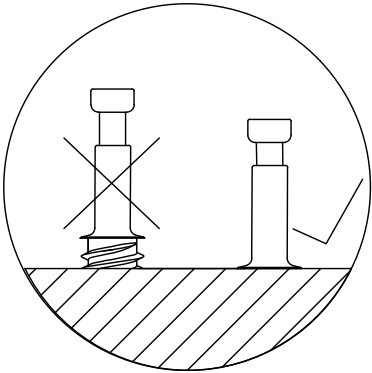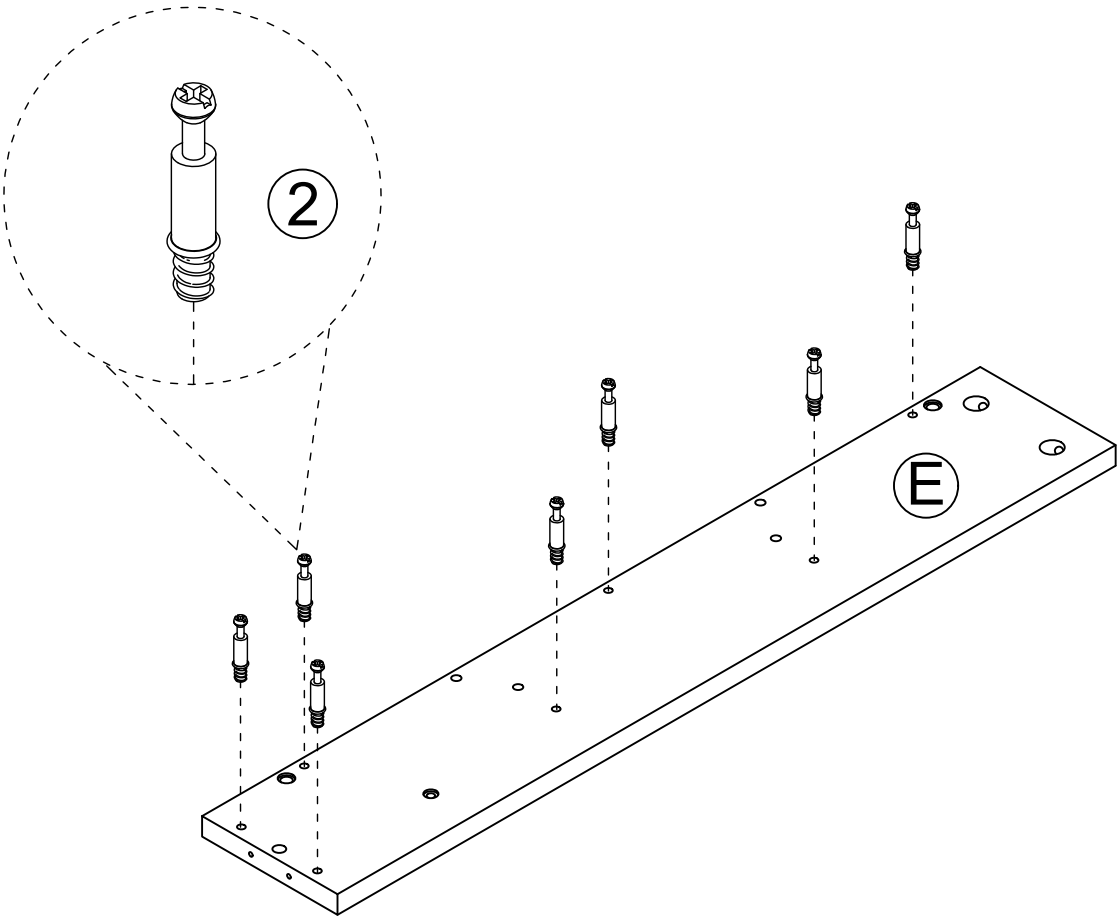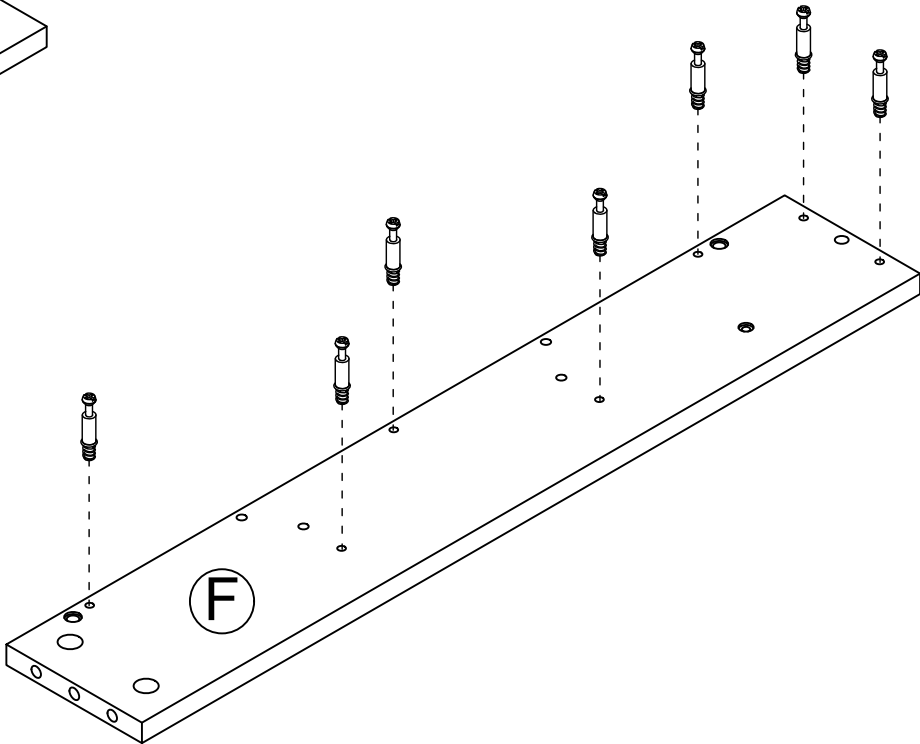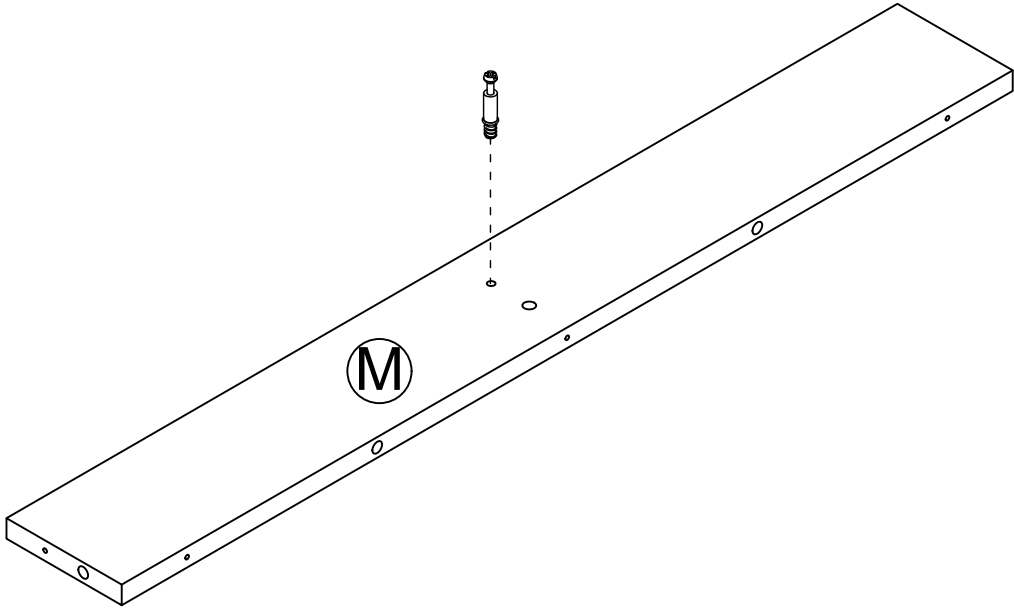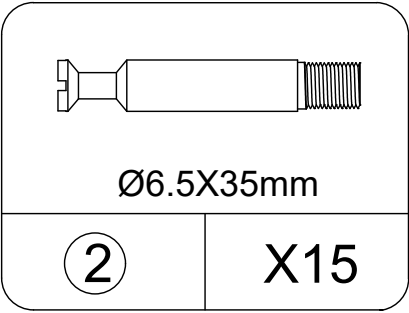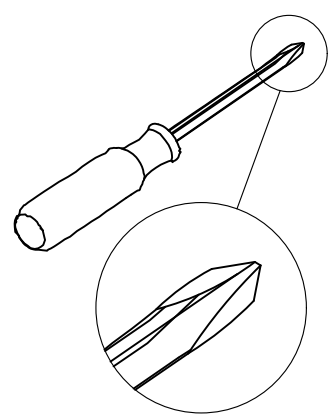



STEP2



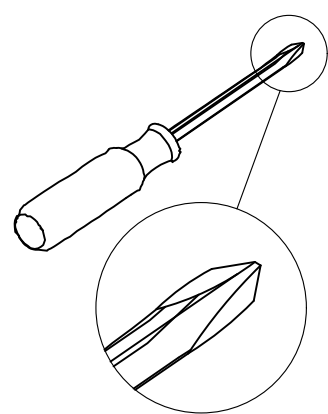


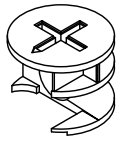 Ø15X9.5mm	
1	X1


 Ø8X30mm	
4	X3

 Ø4X35mm	
7	X4


 Ø21mm	
16	X1

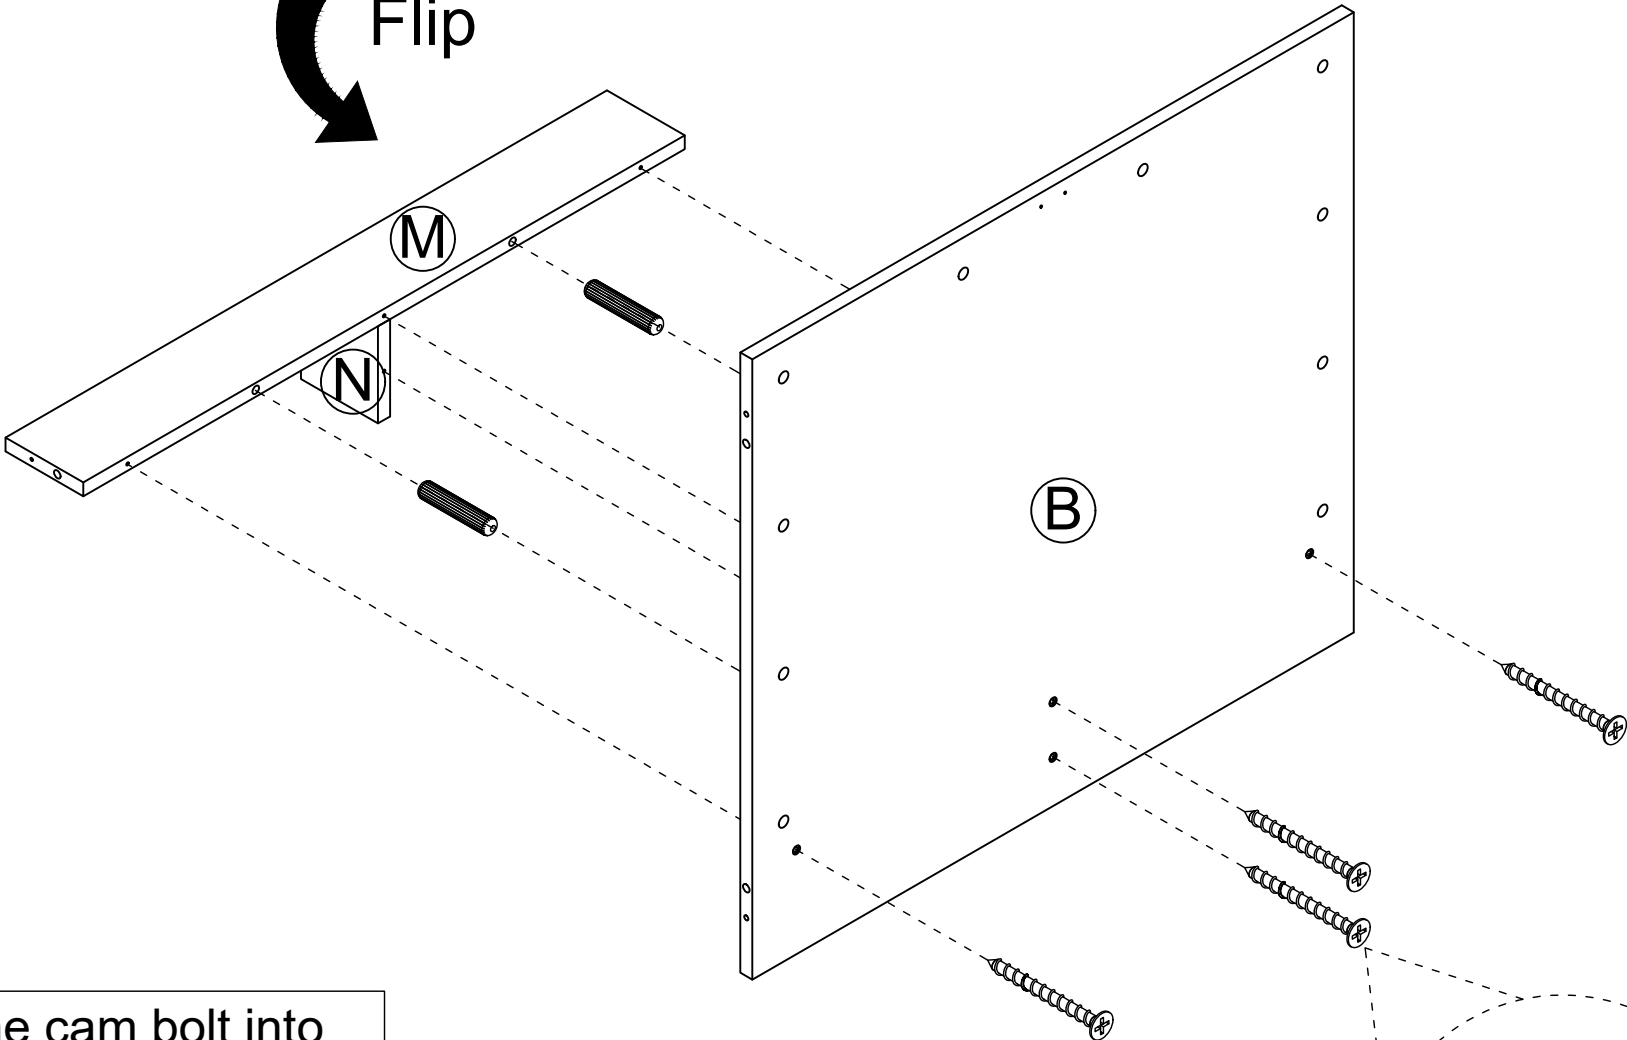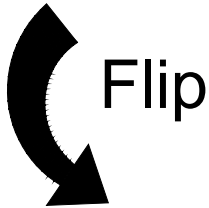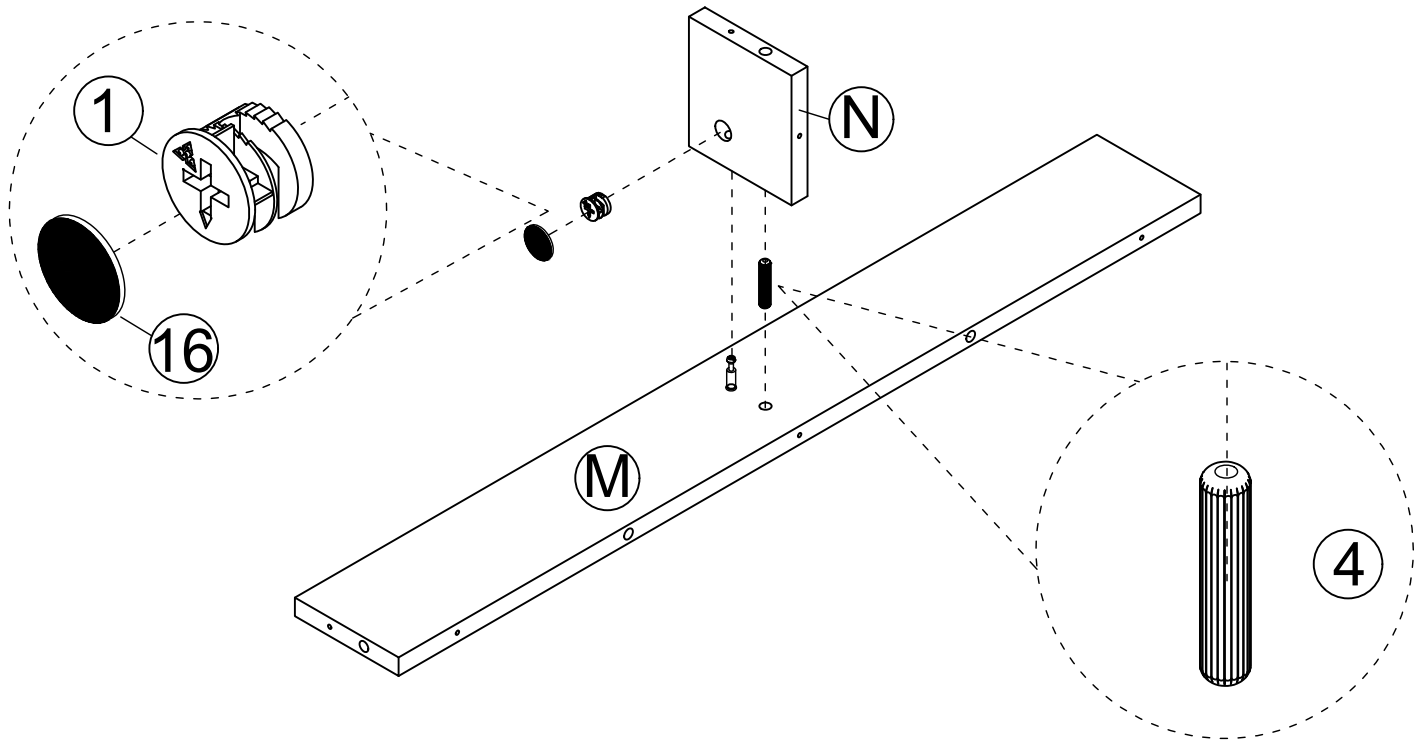


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

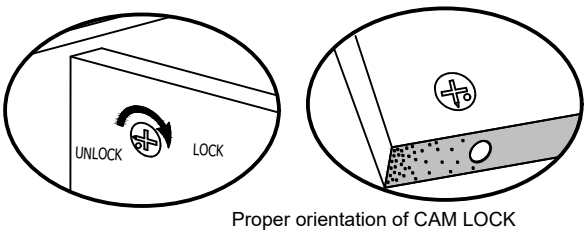


YOU NEED ONE HELPER FOR THIS STEP

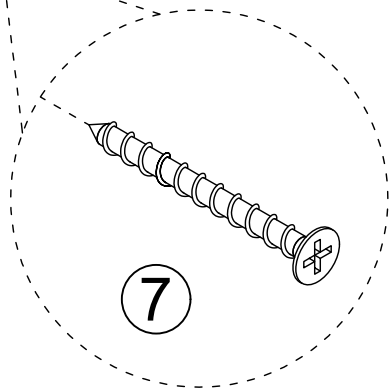



STEP3

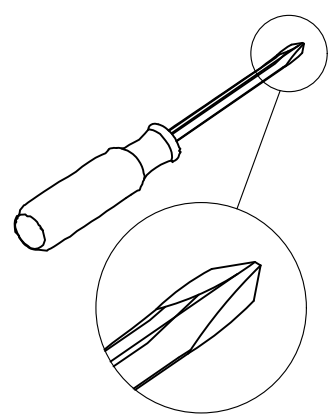







 Ø8X30mm	
4	X6

 Ø4X35mm	
7	X2





 Ø6.3X50mm	
8	X4

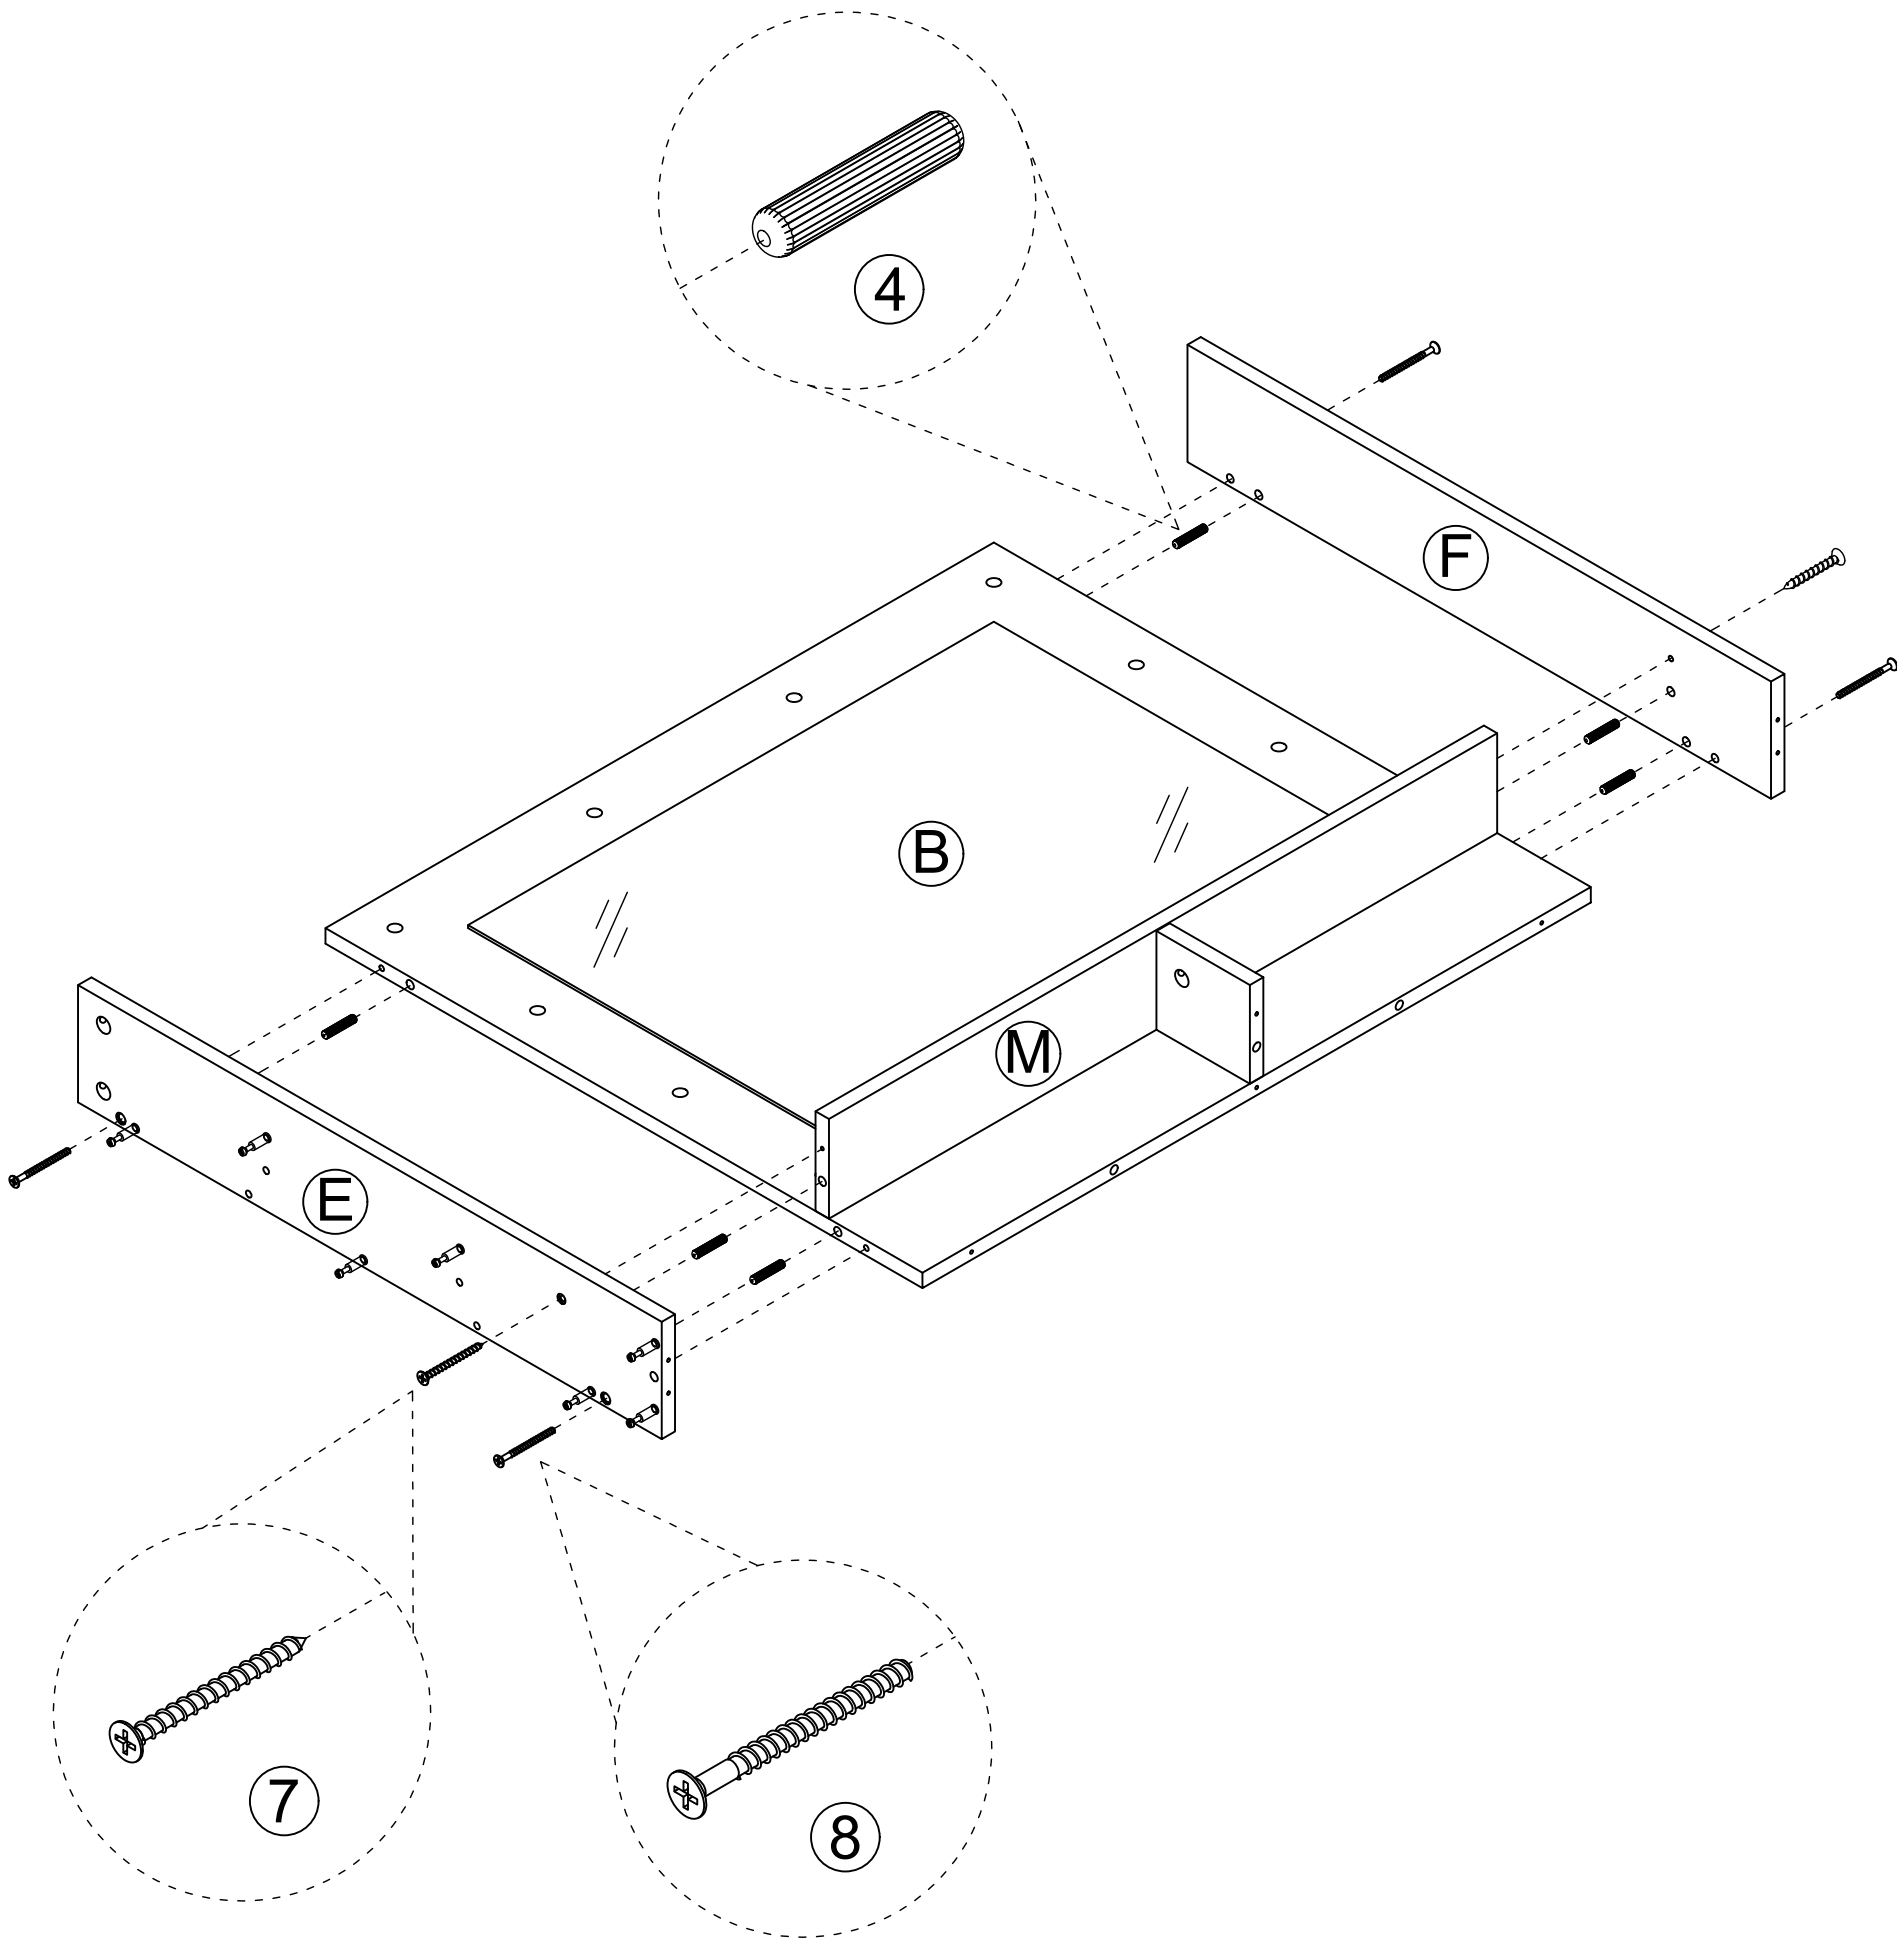


STEP4

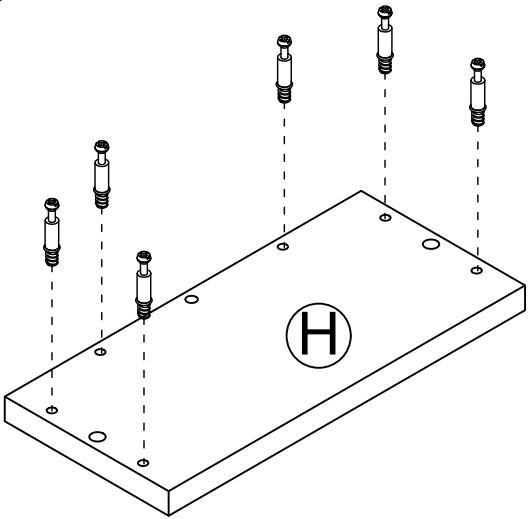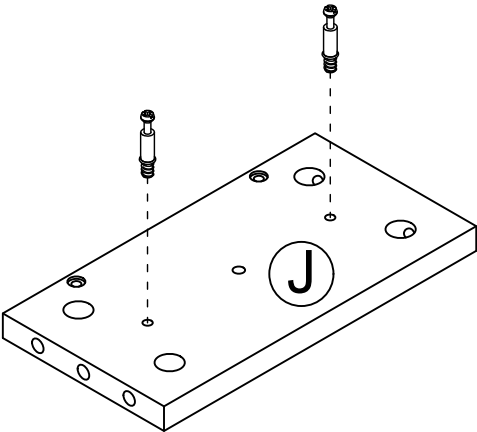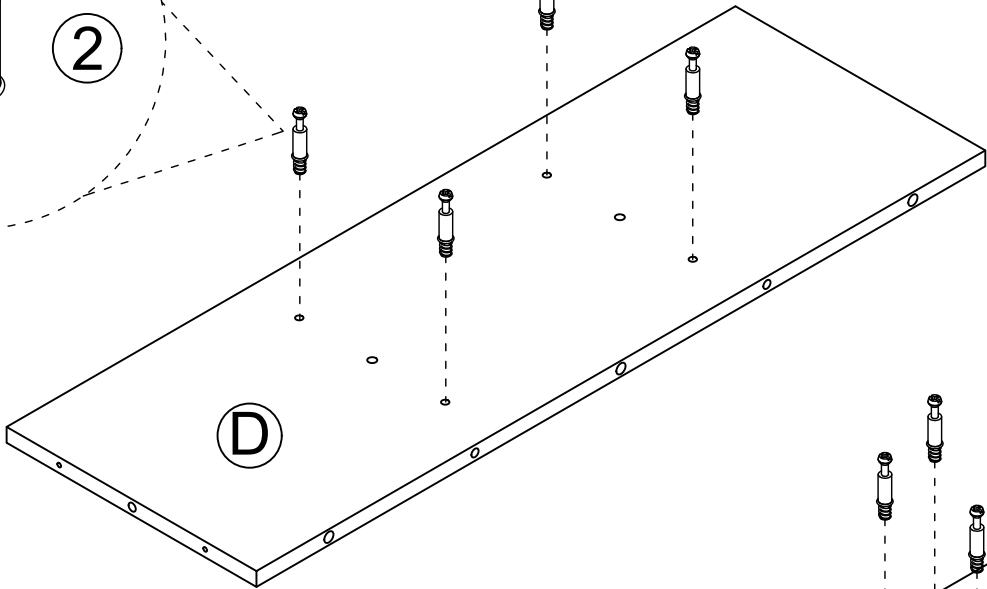
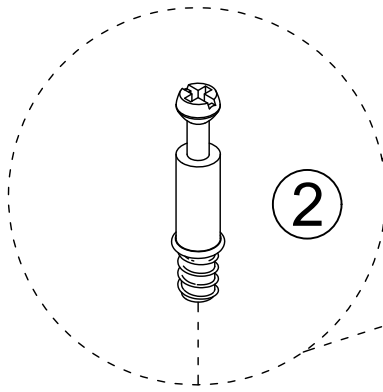
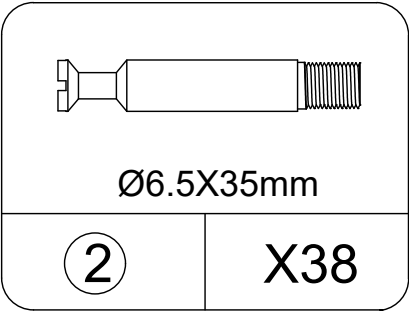
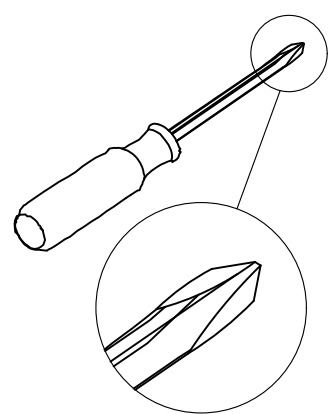


X2

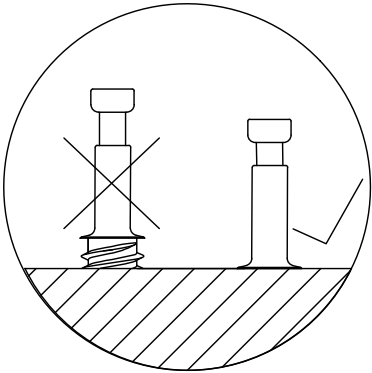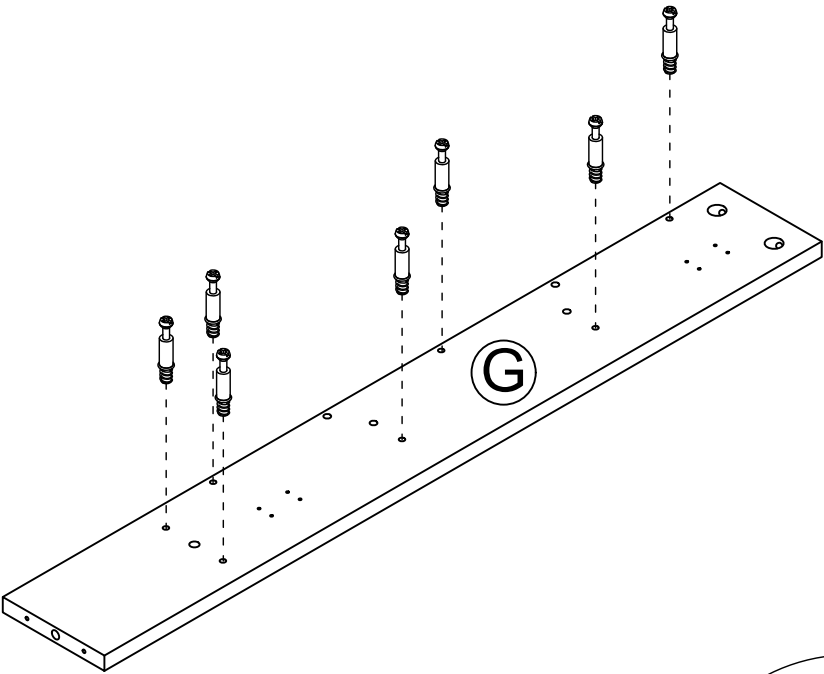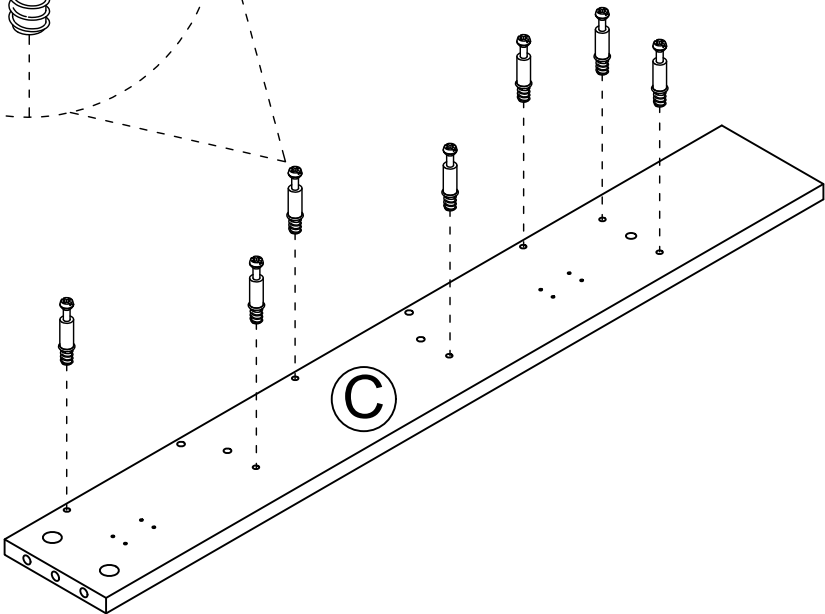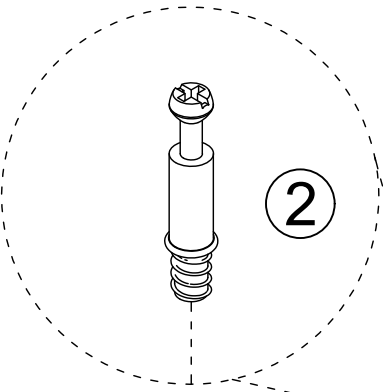


STEP5

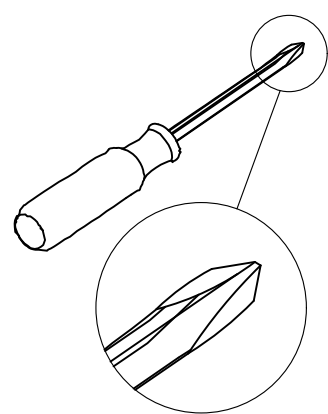


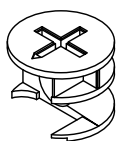 Ø15X9.5mm		 Ø6X30mm		 Ø8X30mm		 Ø4X35mm	
1	X22	3	X14	4	X2	7	X4
						 Ø21mm	
						16	X14

Note: Distinguish the holes here.

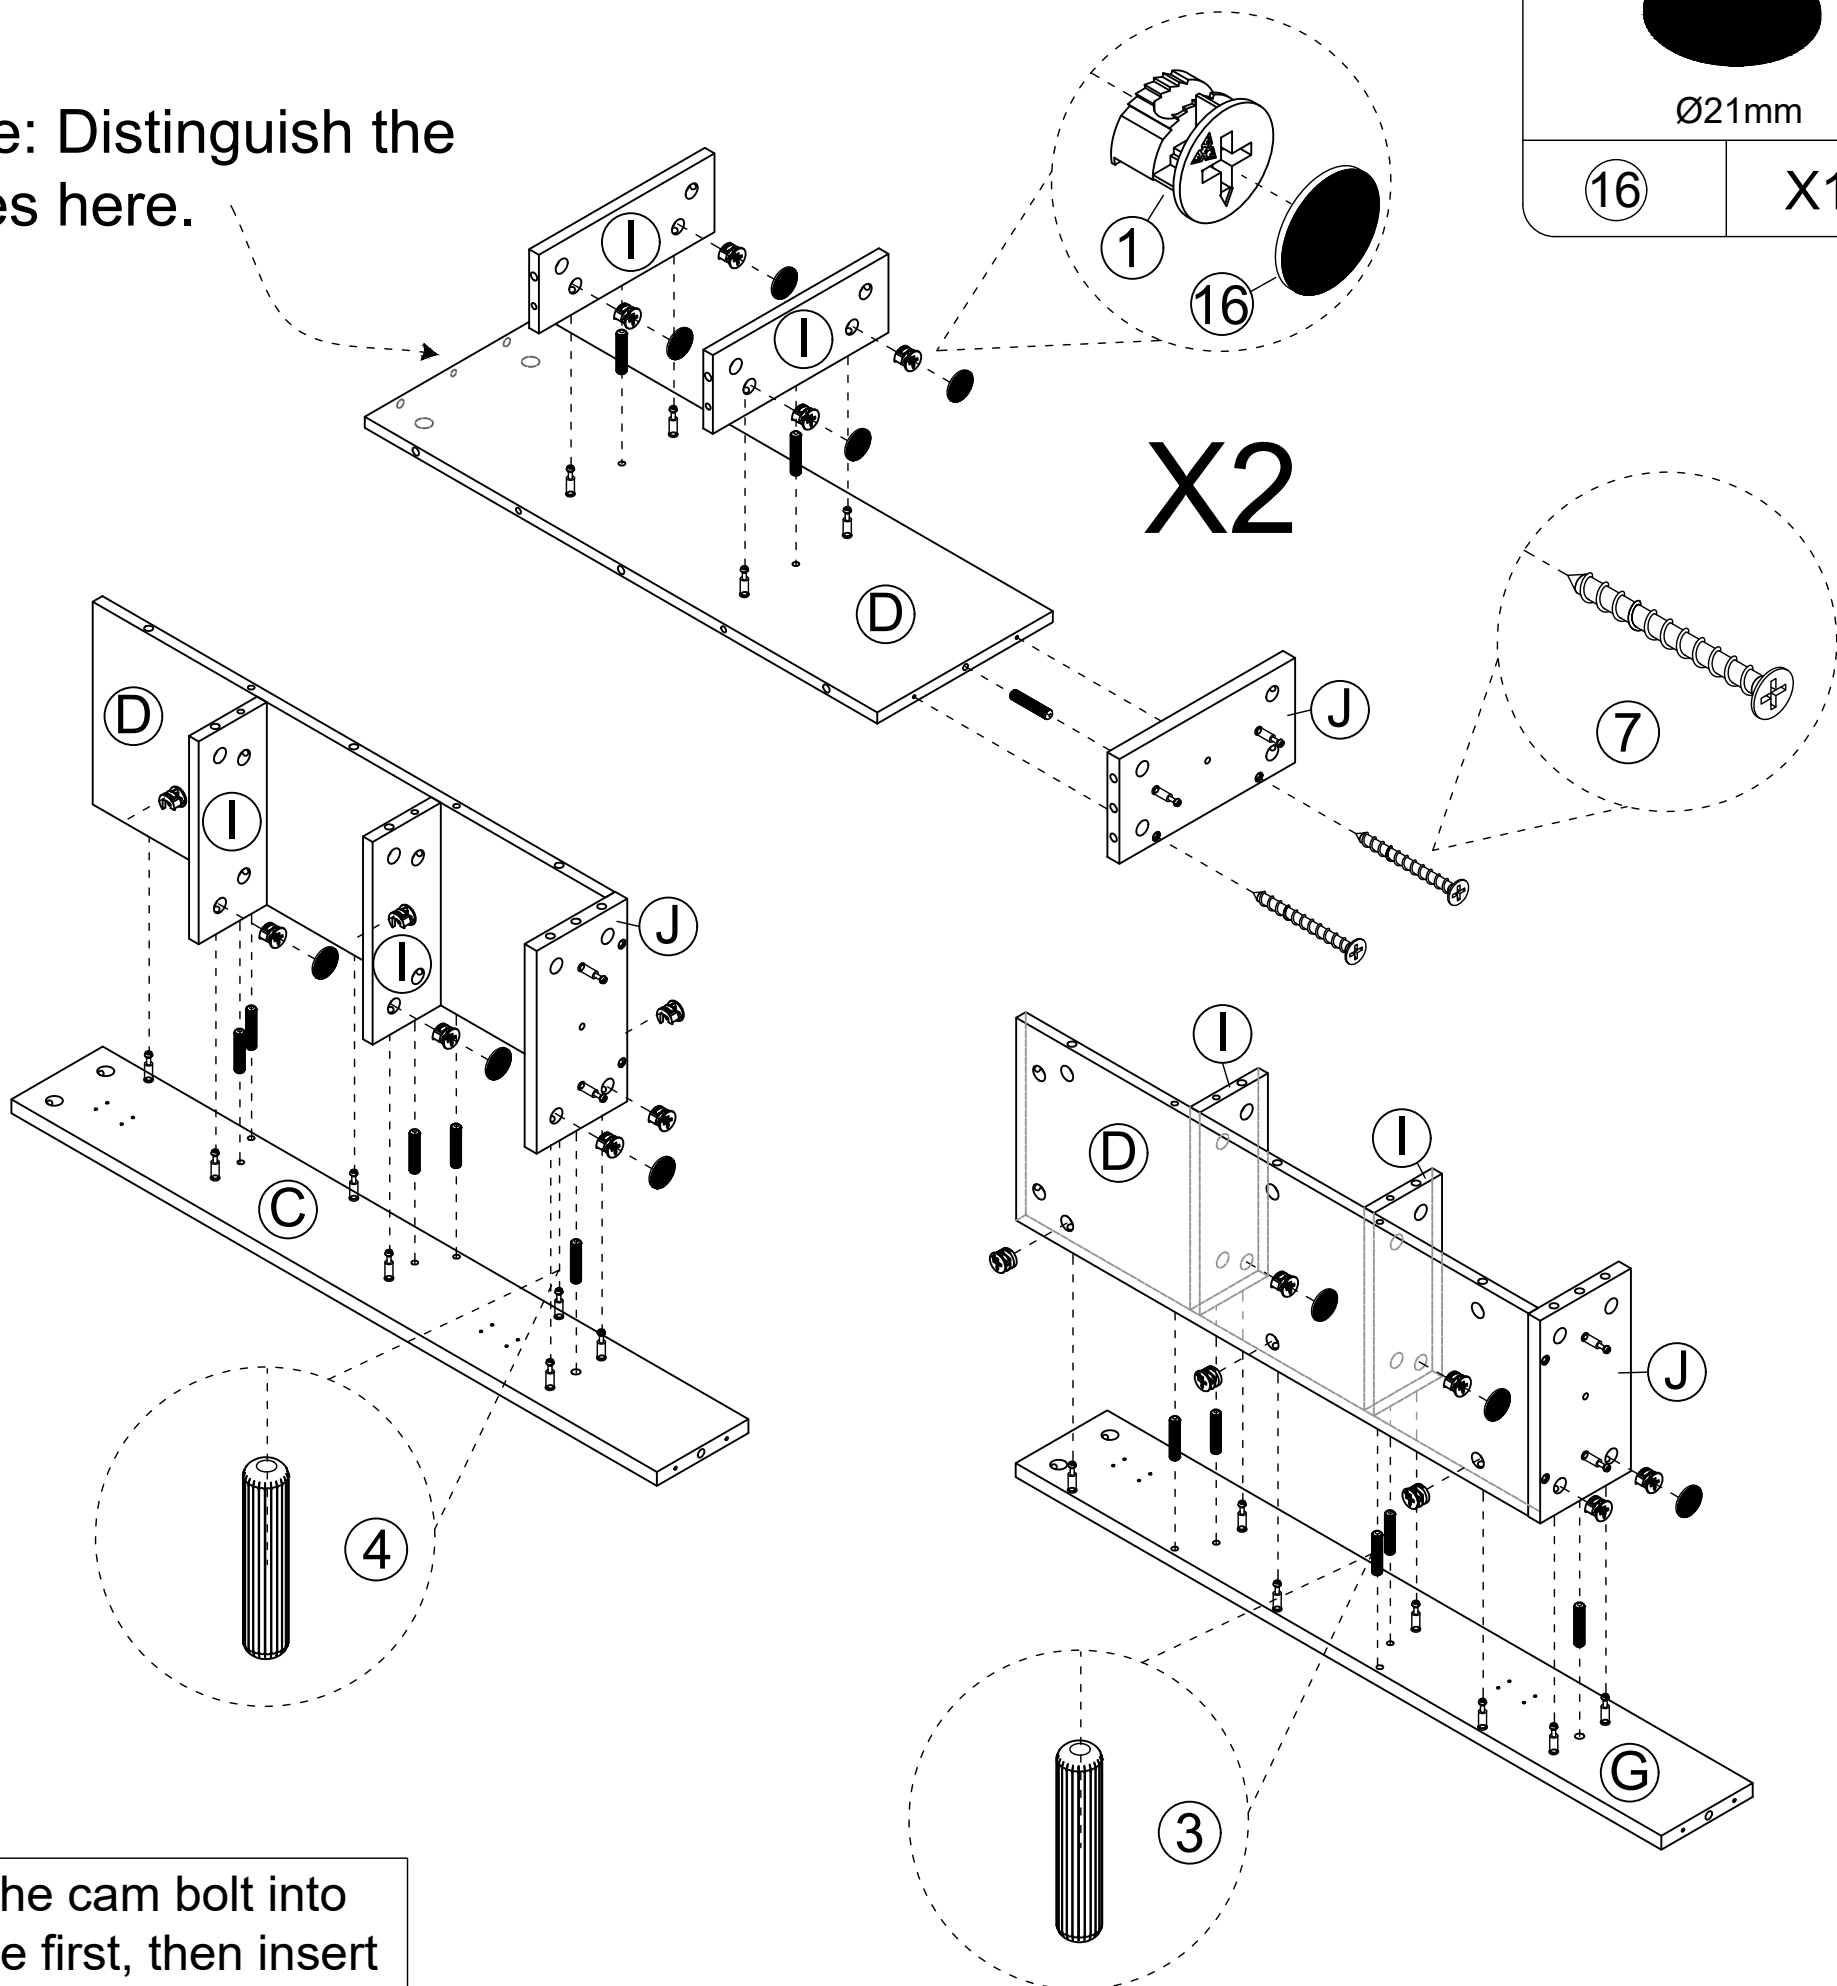



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

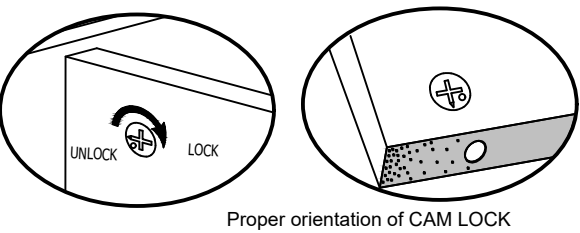


Note: Plate J is connected with plates C, G, please. Make sure to use Ø8*30mm wood shaw


STEP6

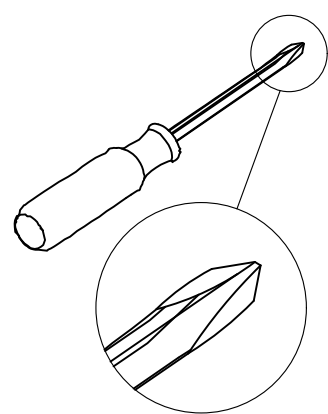

			
Ø15X9.5mm		Ø6X30mm	
1	X4	3	X2

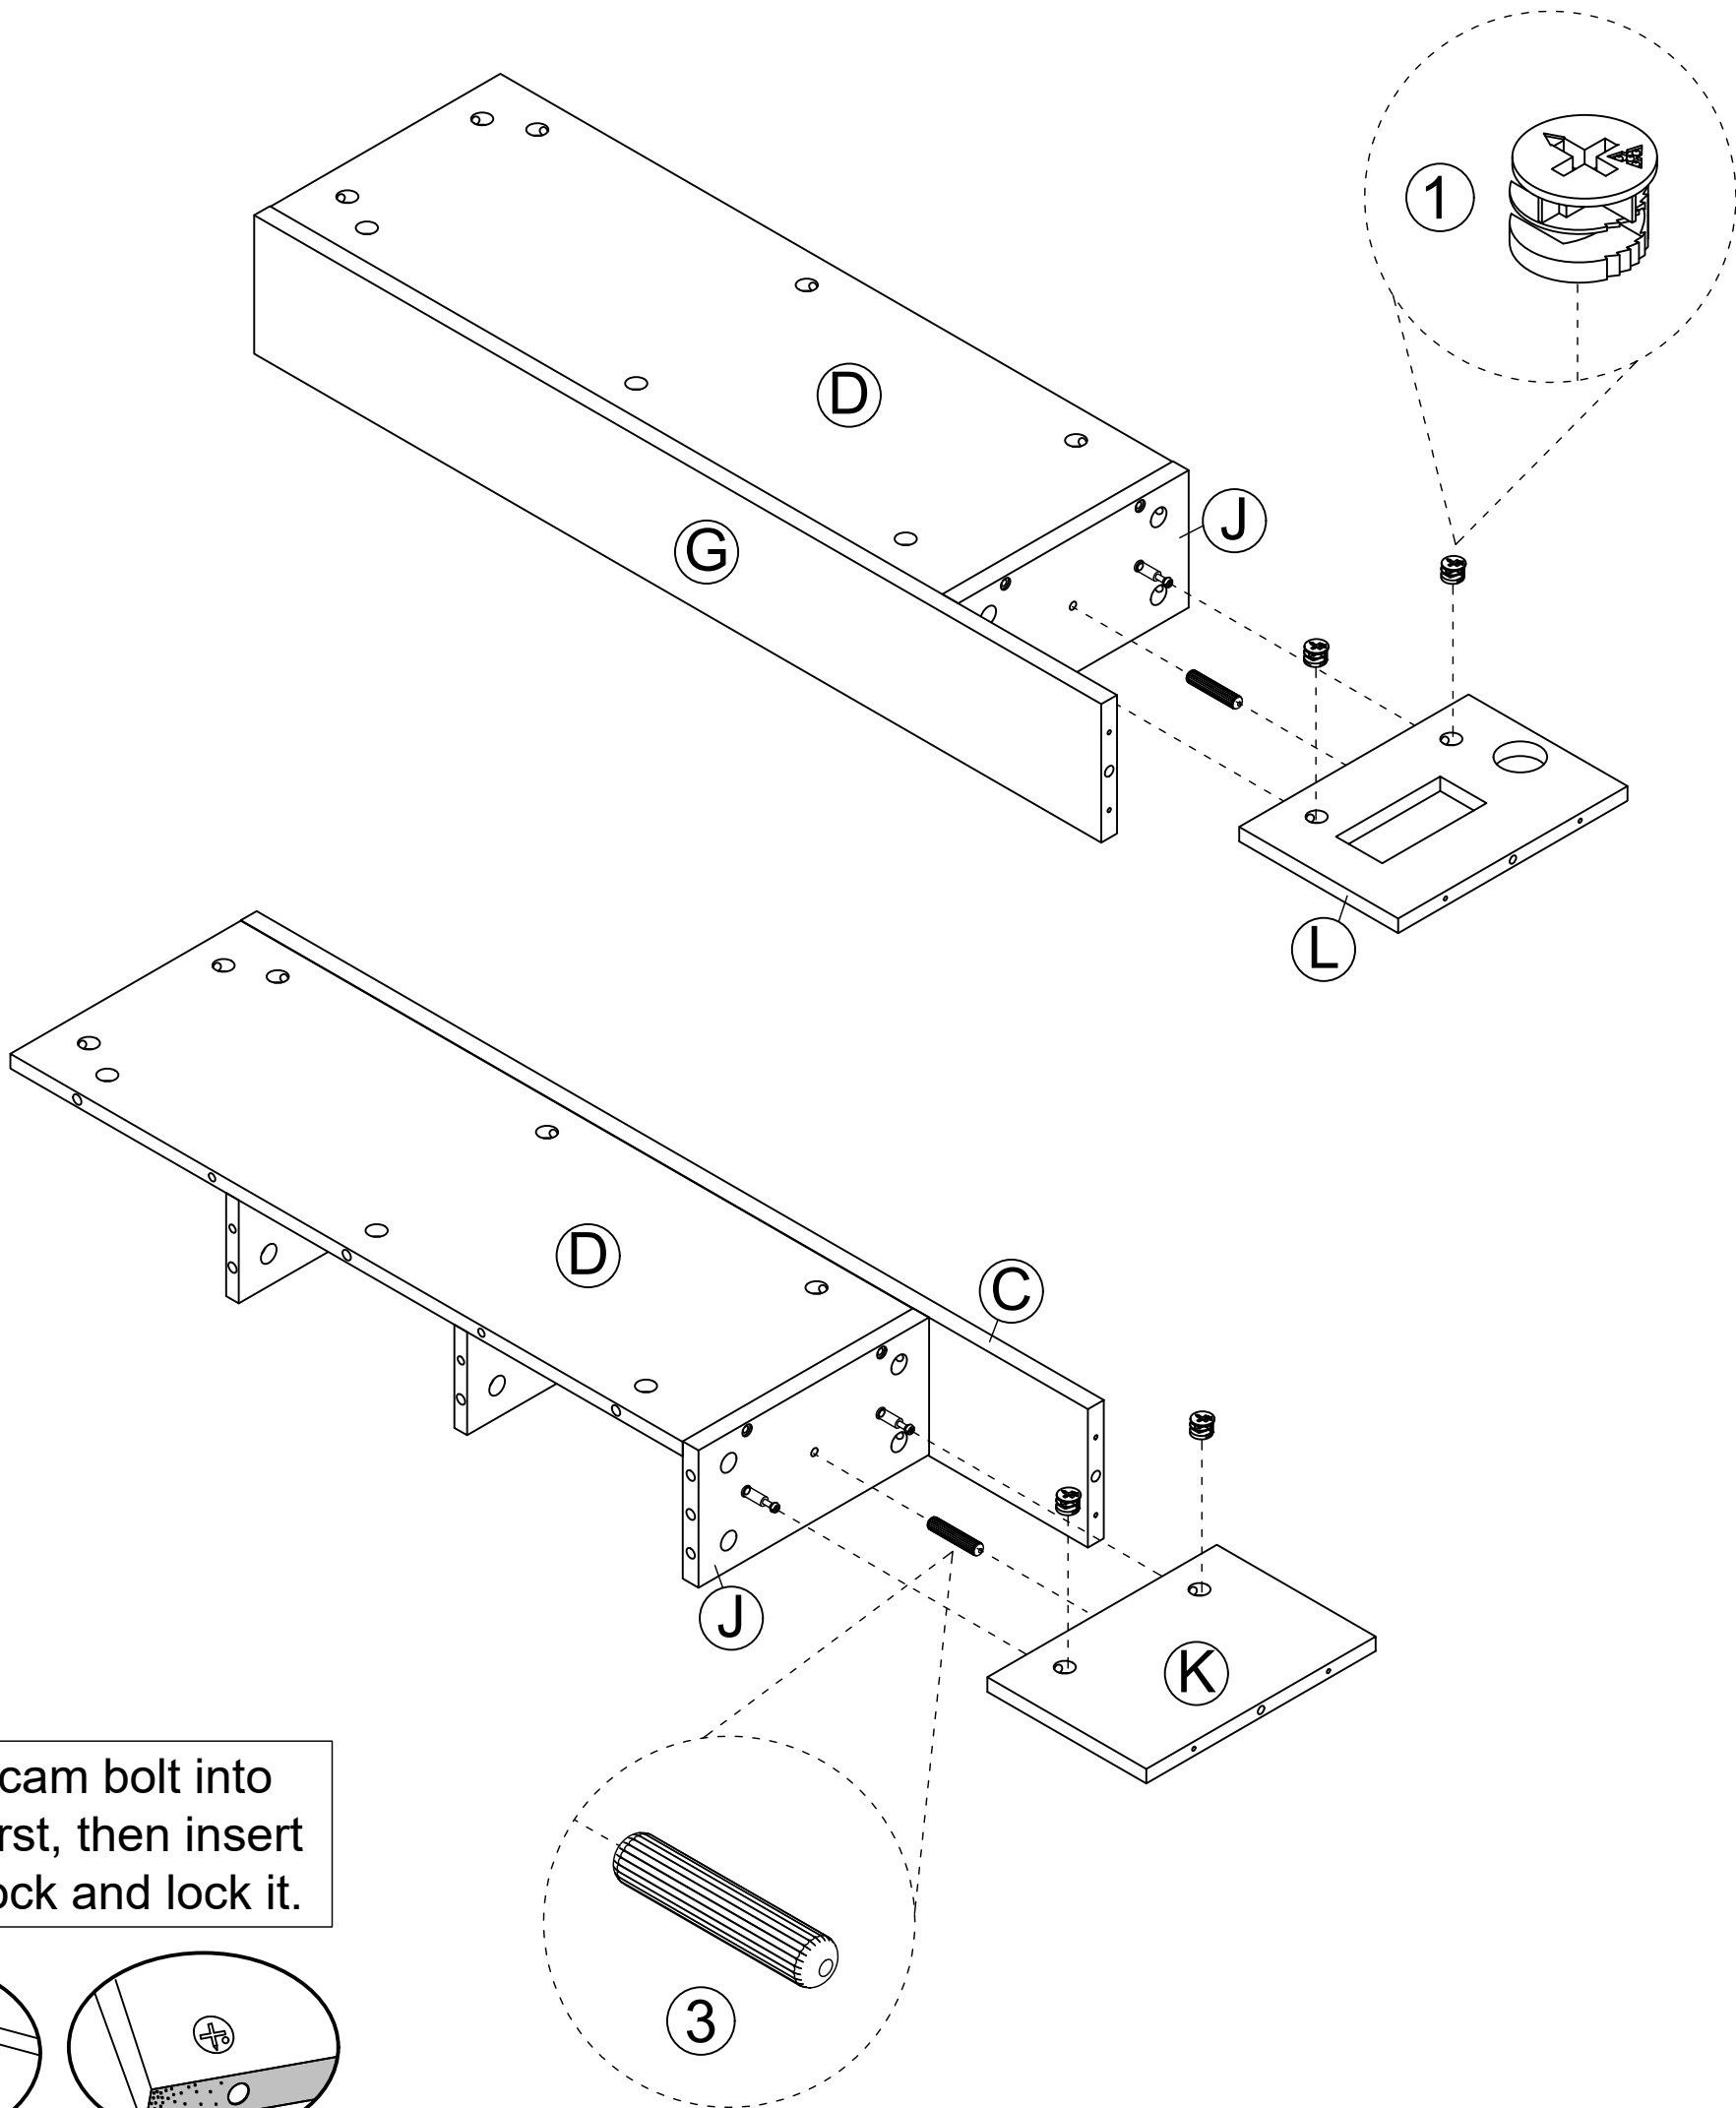






Insert the cam bolt into the hole first, then insert the cam lock and lock it.

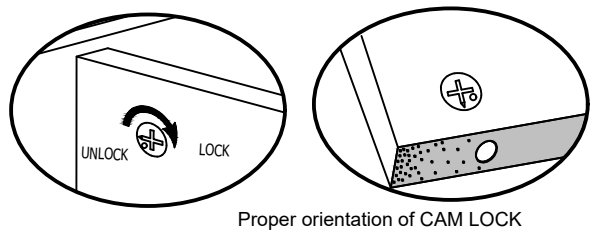


Proper orientation of CAM LOCK

STEP7

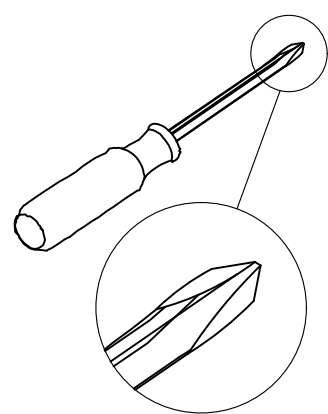


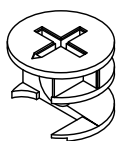 Ø15X9.5mm		 Ø6X30mm		 Ø8X30mm		 Ø21mm	
①	X6	③	X8	④	X2	①6	X6





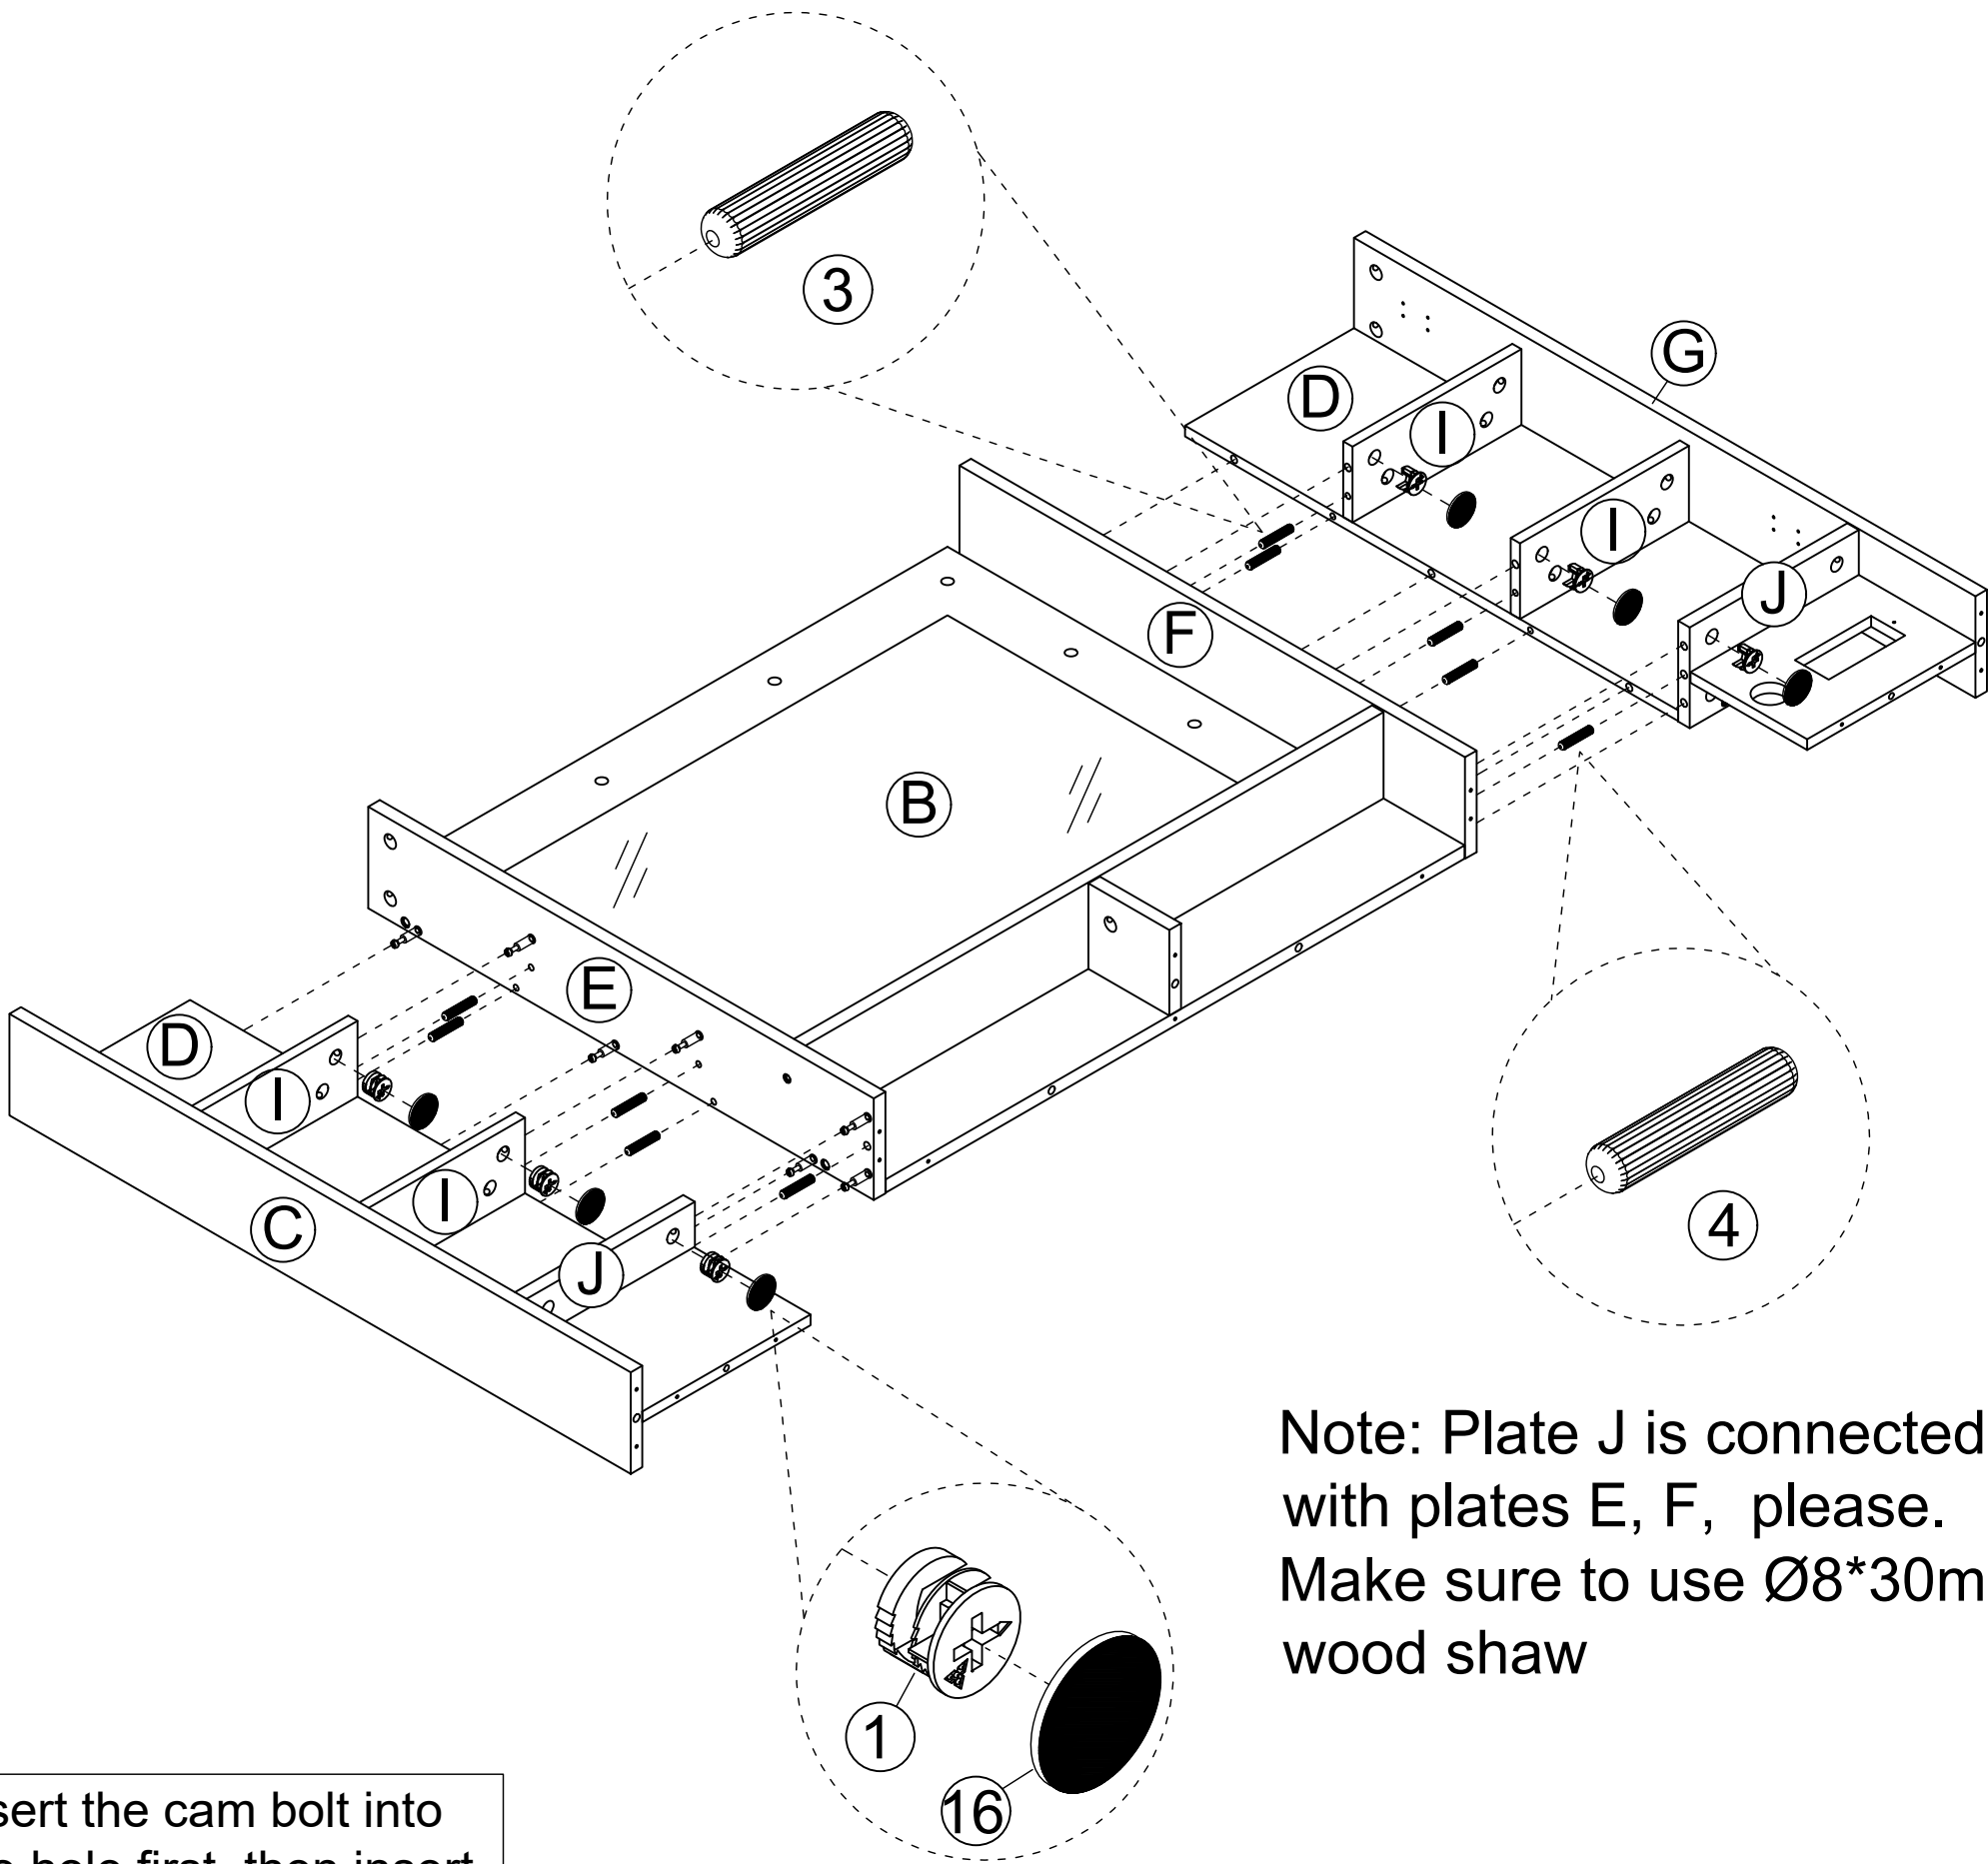


Note: Plate J is connected with plates E, F, please. Make sure to use Ø8*30mm wood shaw


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

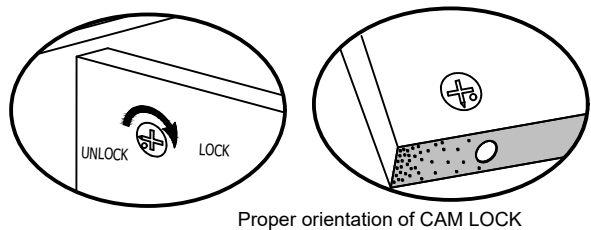


STEP8

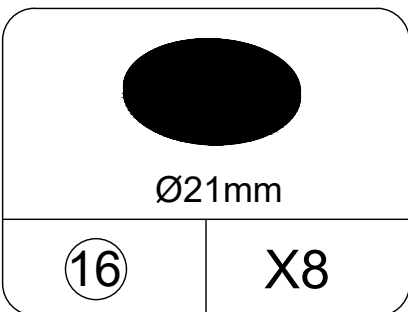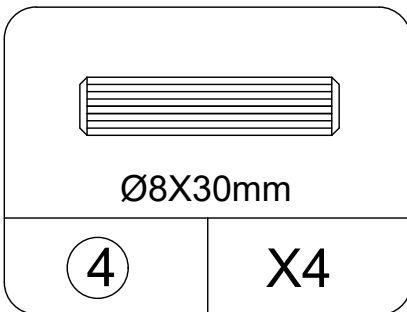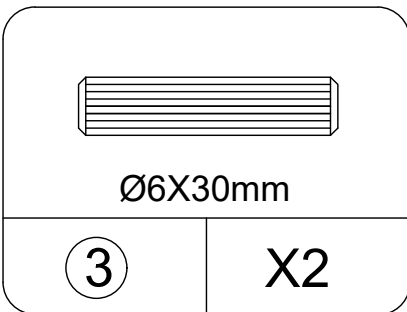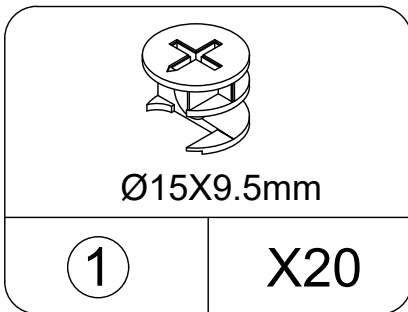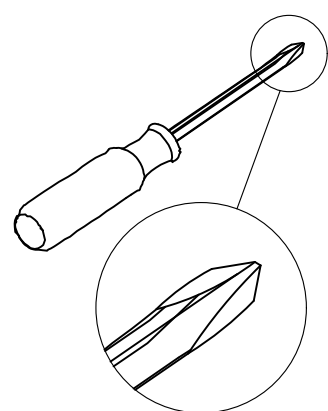


Note: When mounting plate H, please
Make sure to connect with plate D
with Ø6*30mm wood.

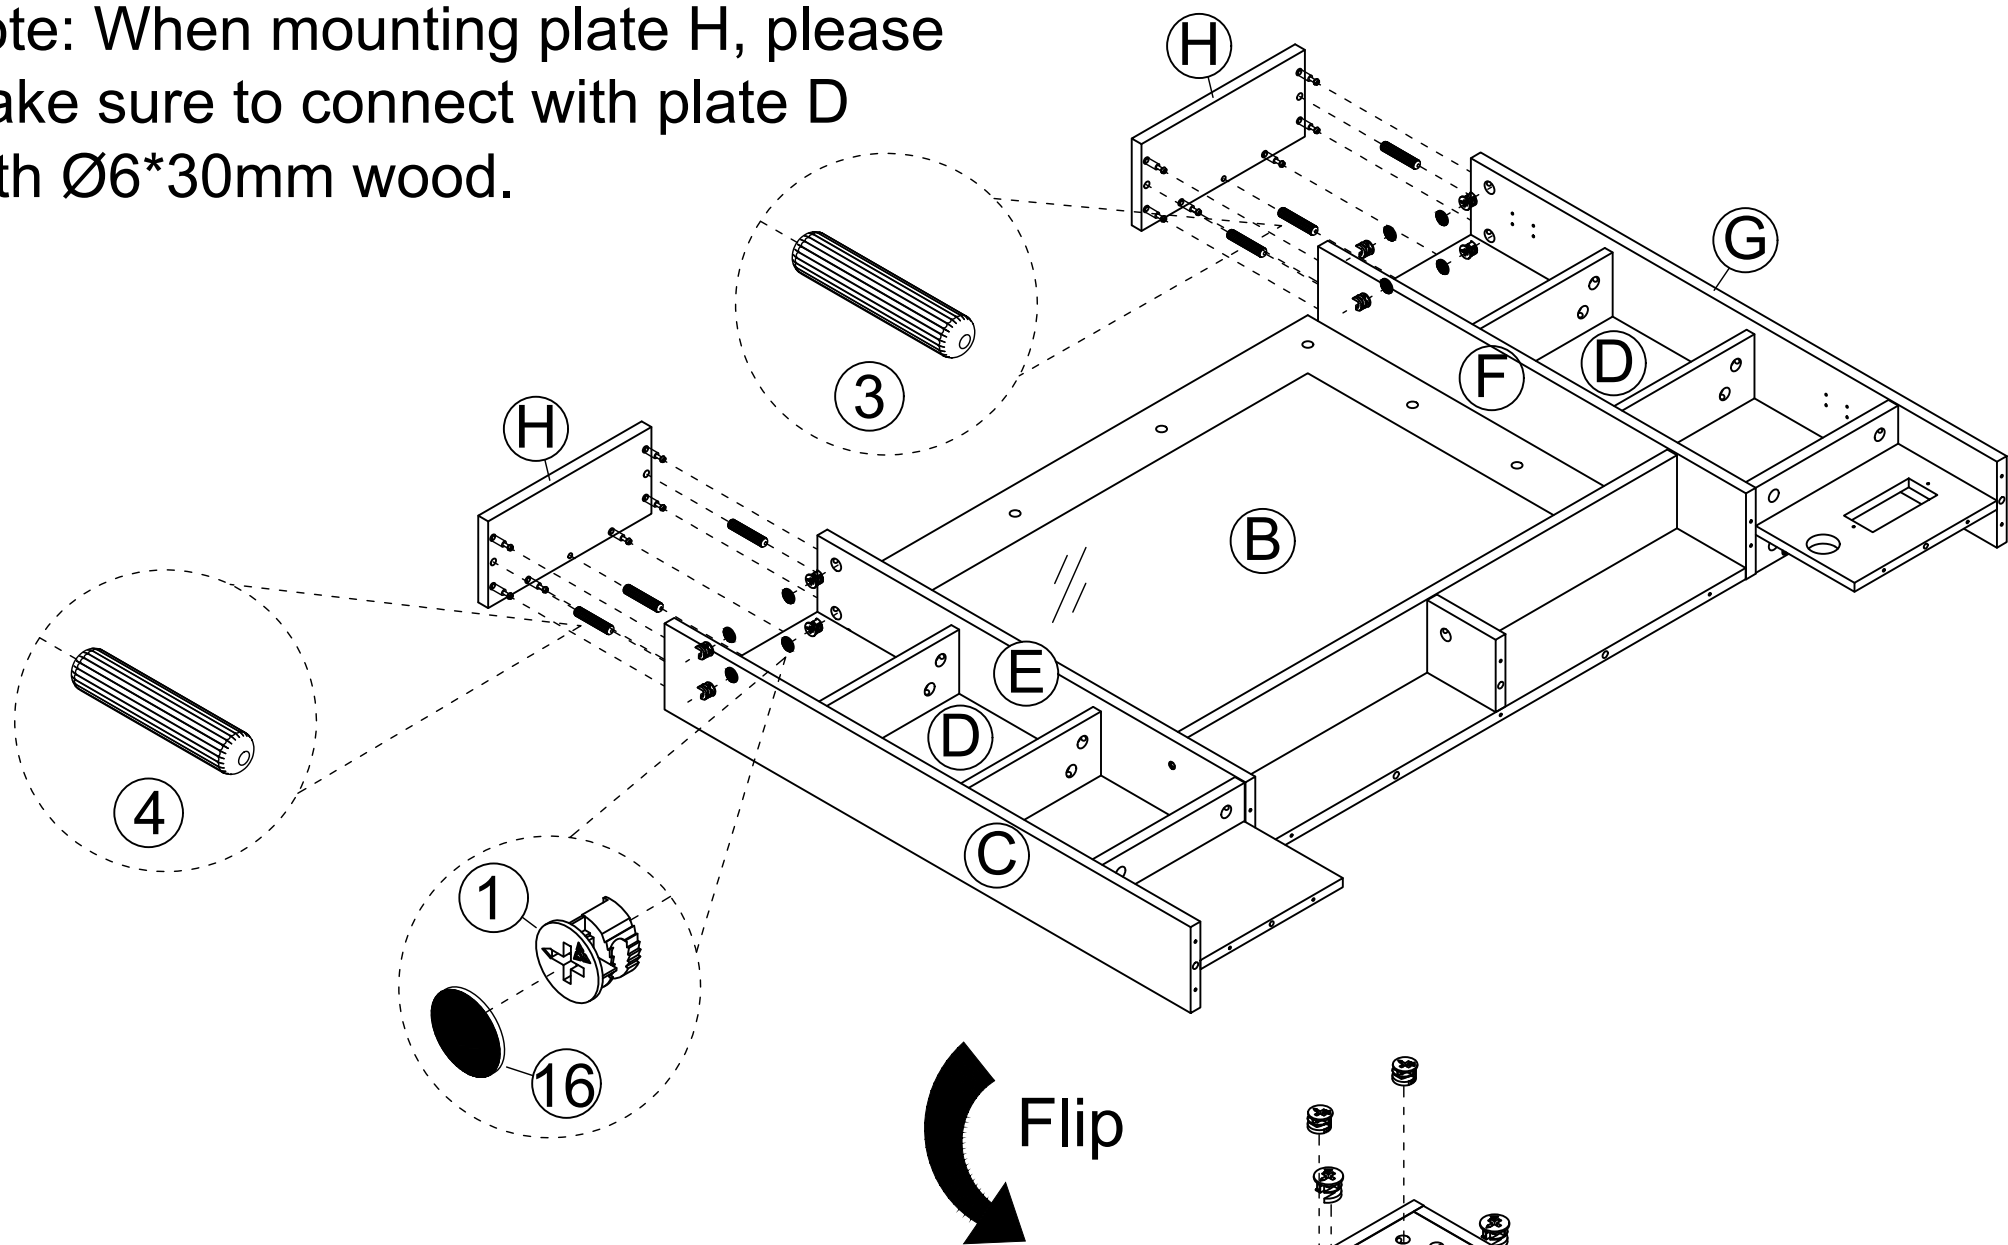






YOU NEED ONE HELPER
FOR THIS STEP

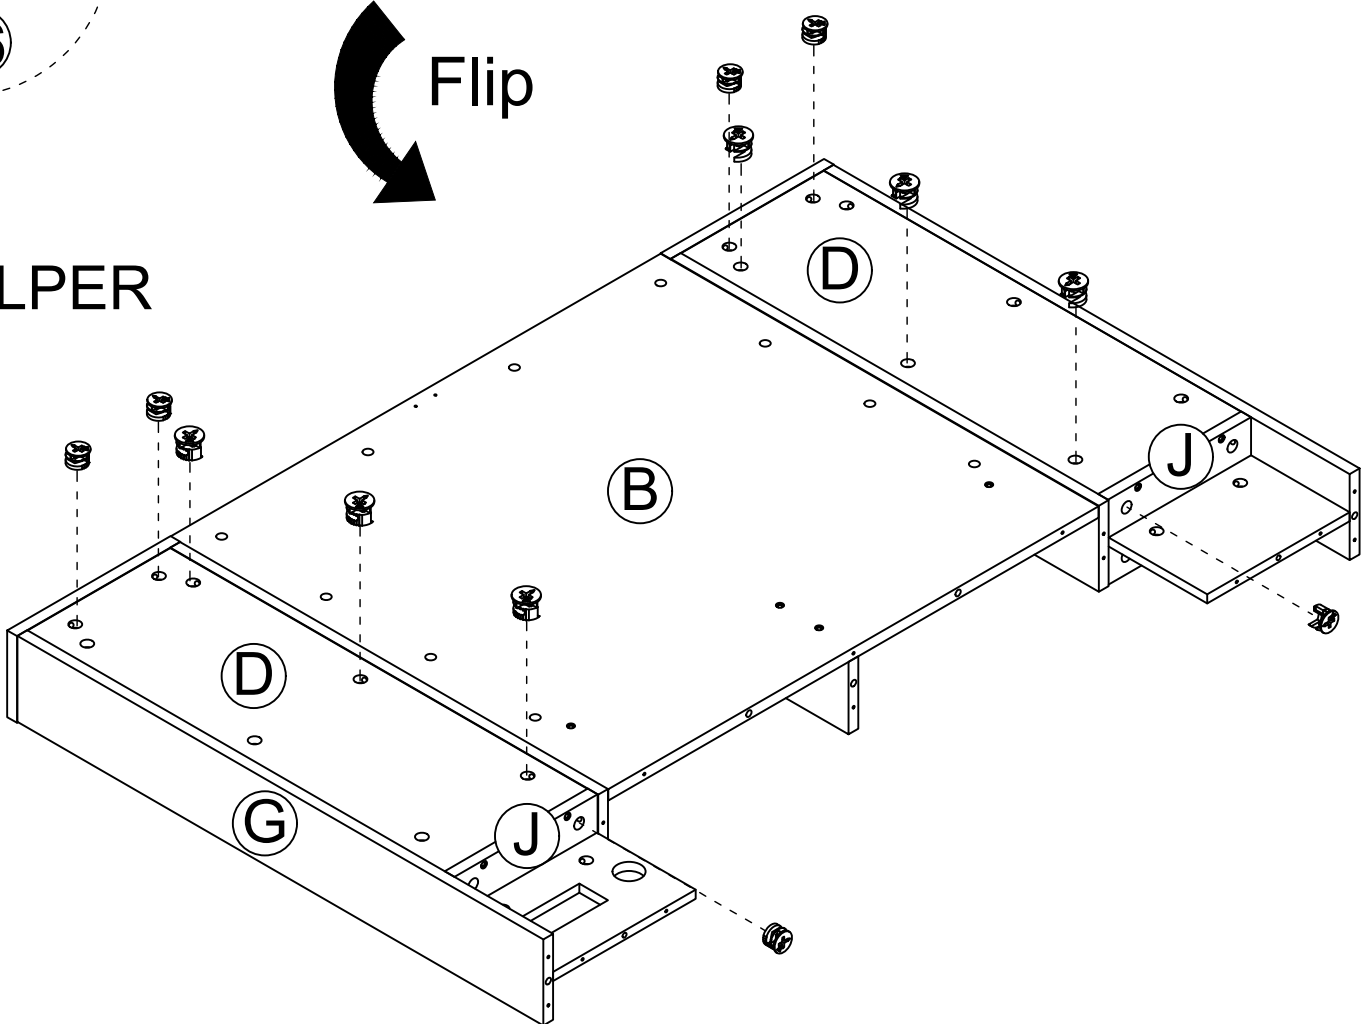


Insert the cam bolt into
the hole first, then insert
the cam lock and lock it.

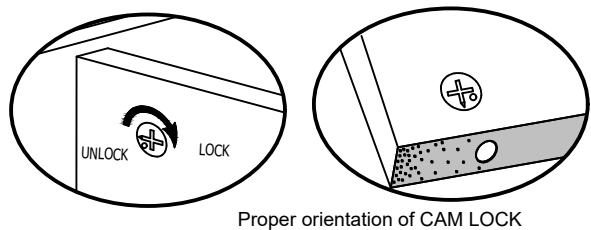






STEP9

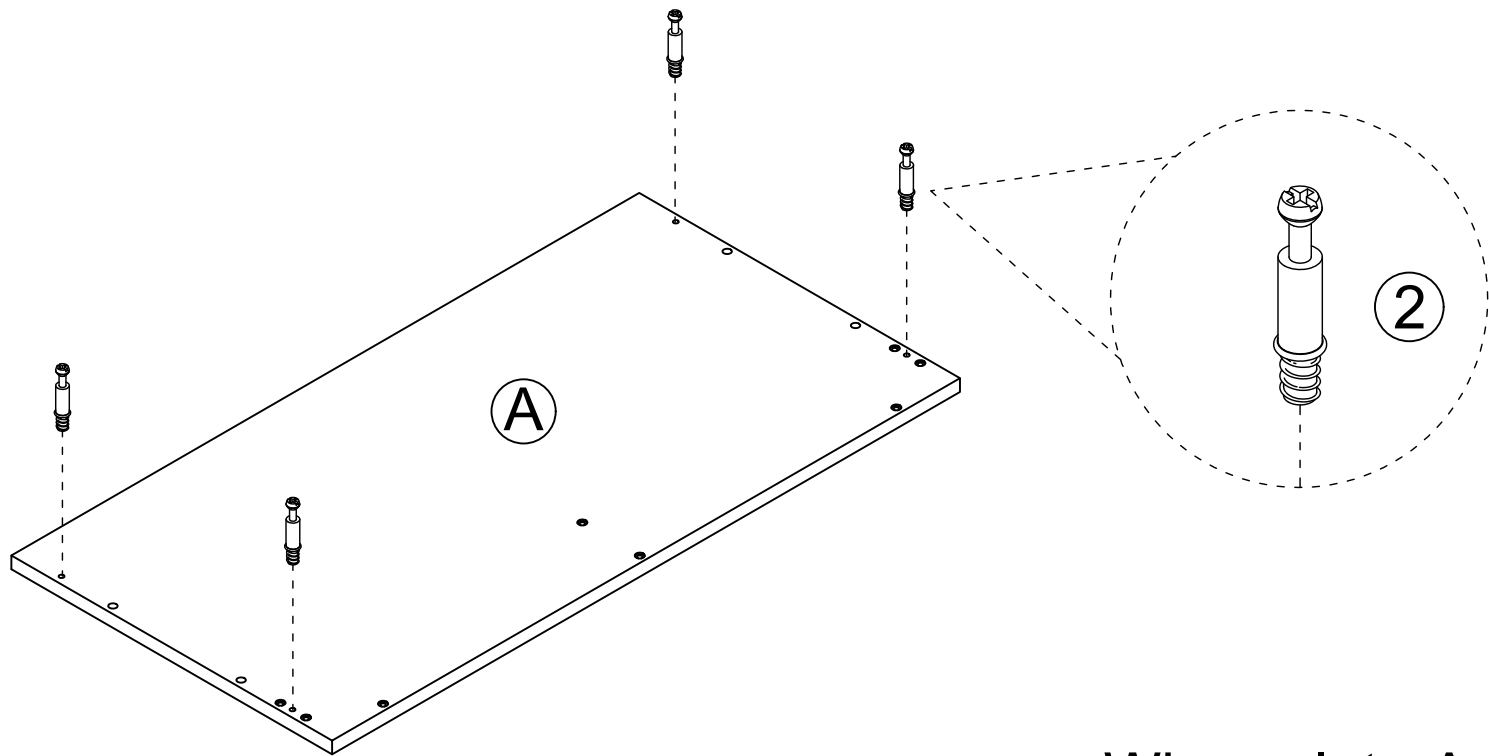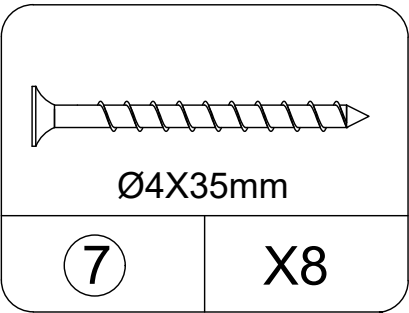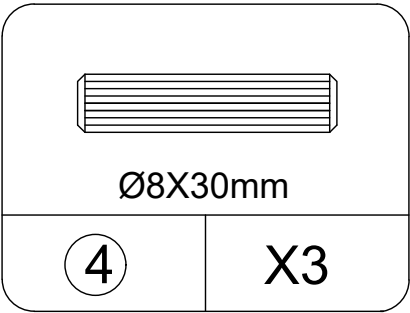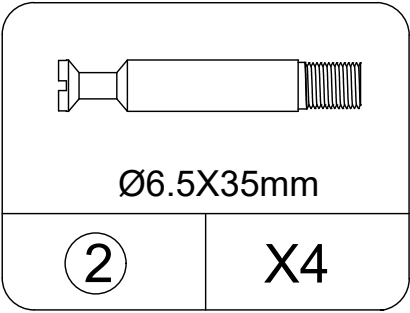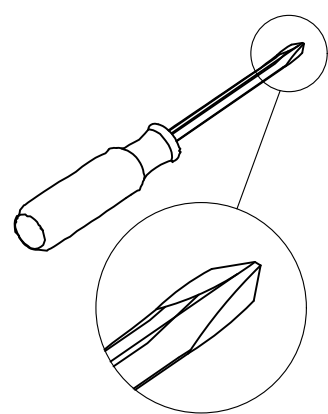


When plate A is not easy to install, it needs to be tilted 45° into it.

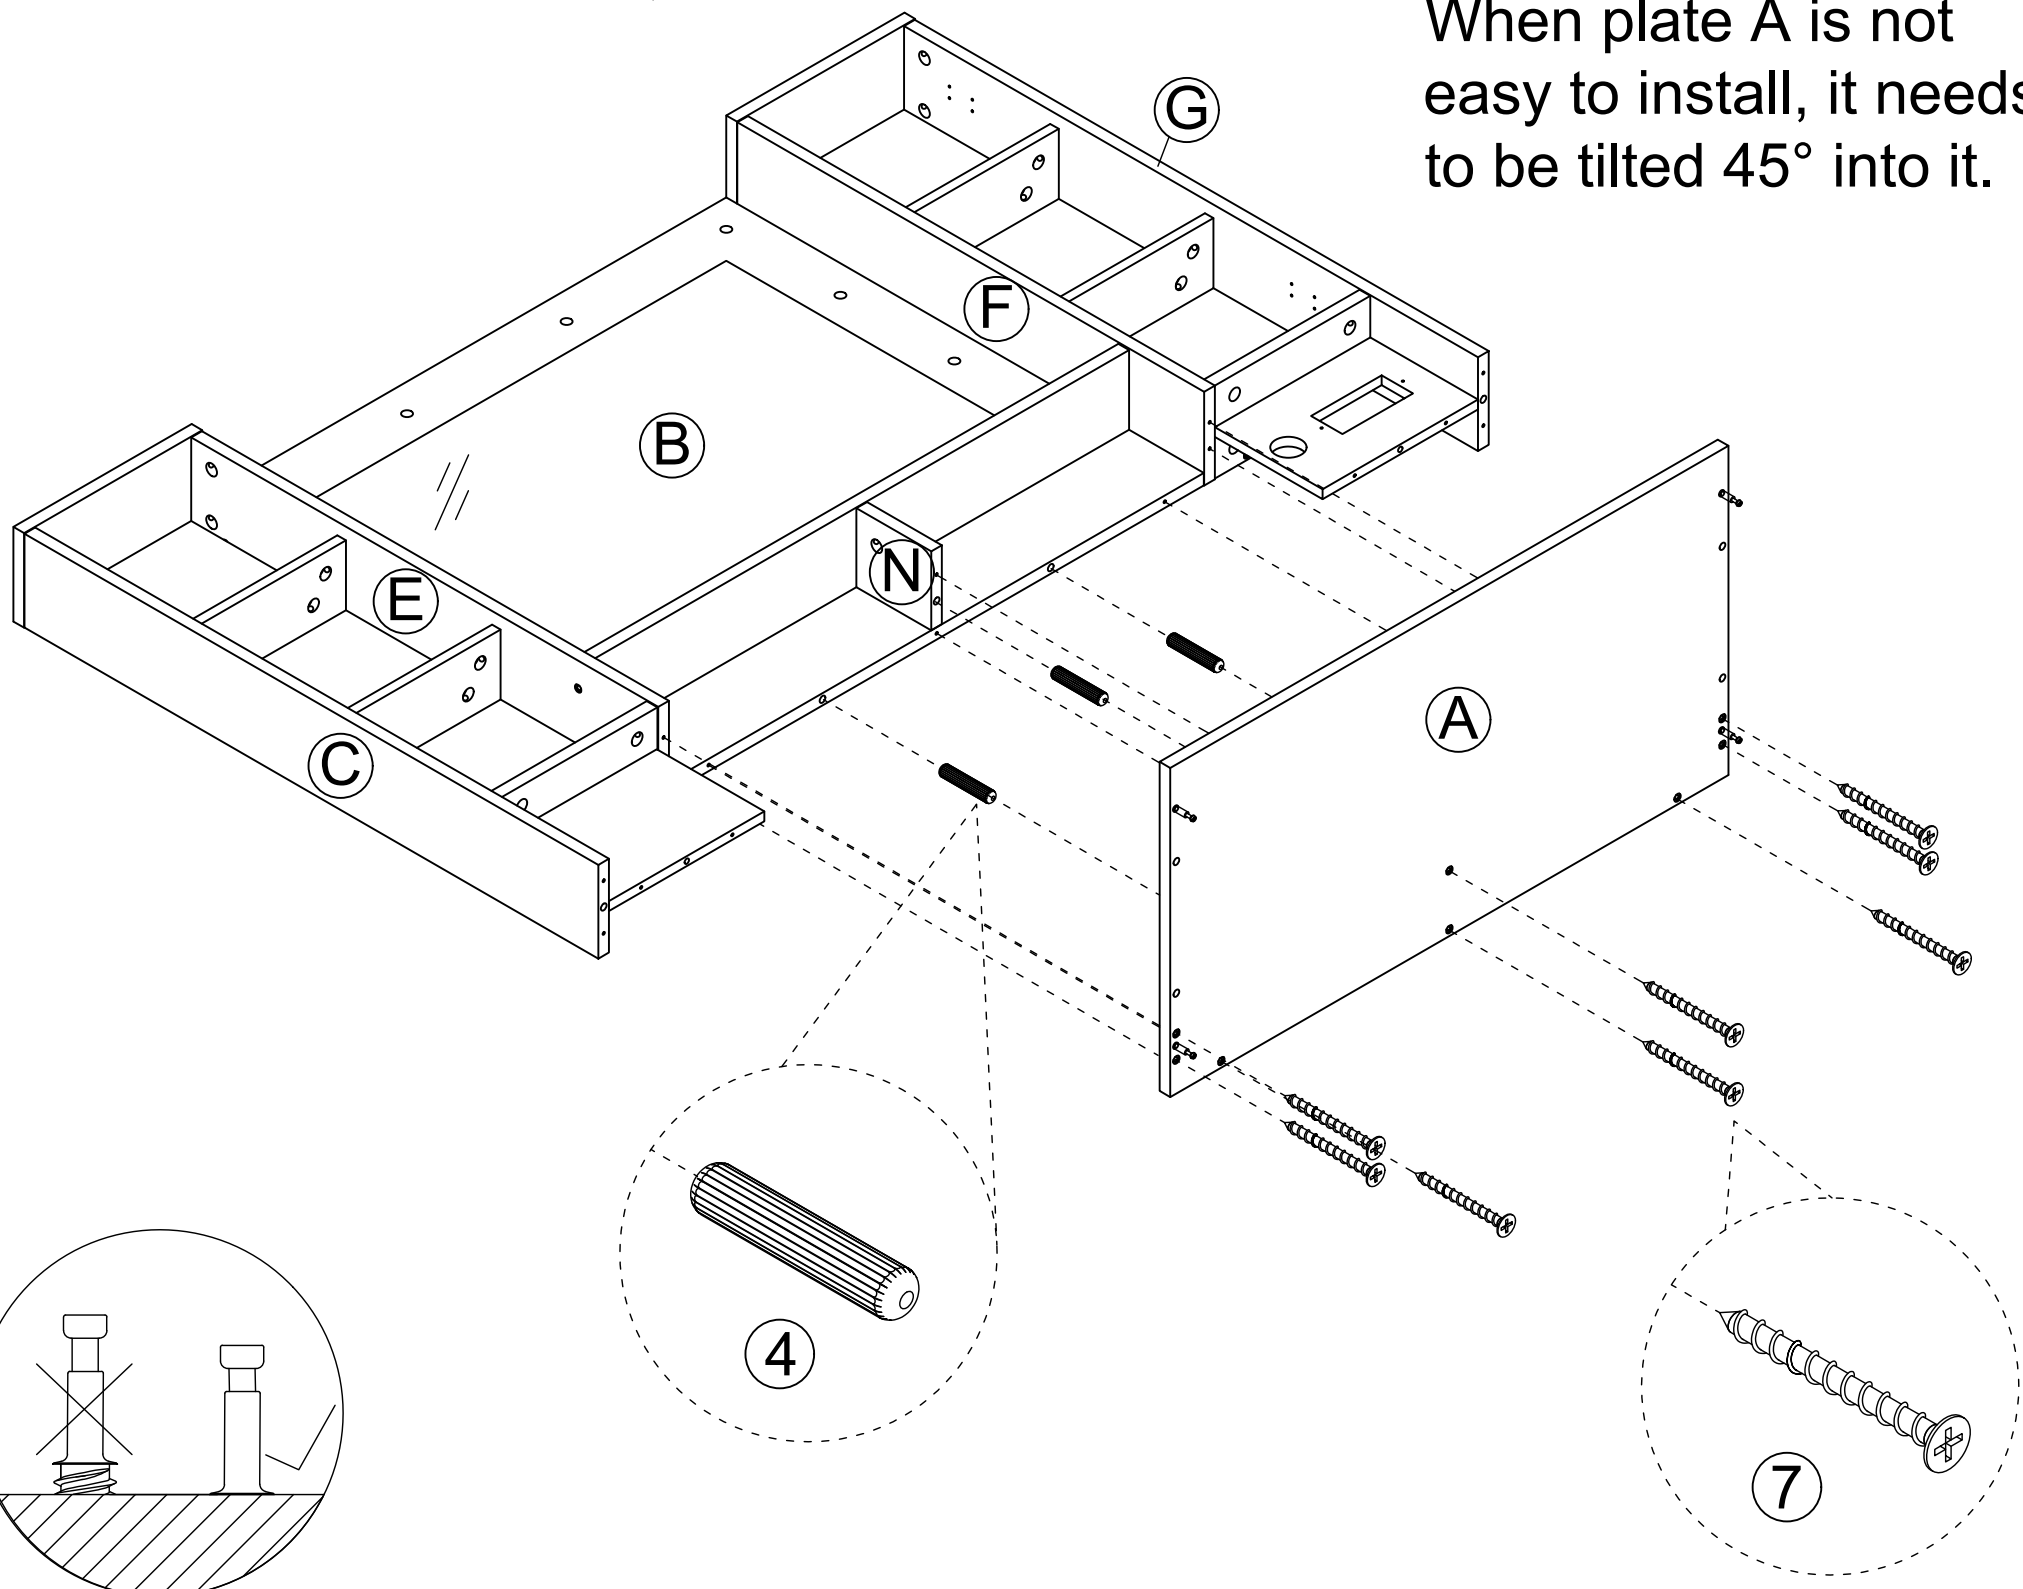


STEP10

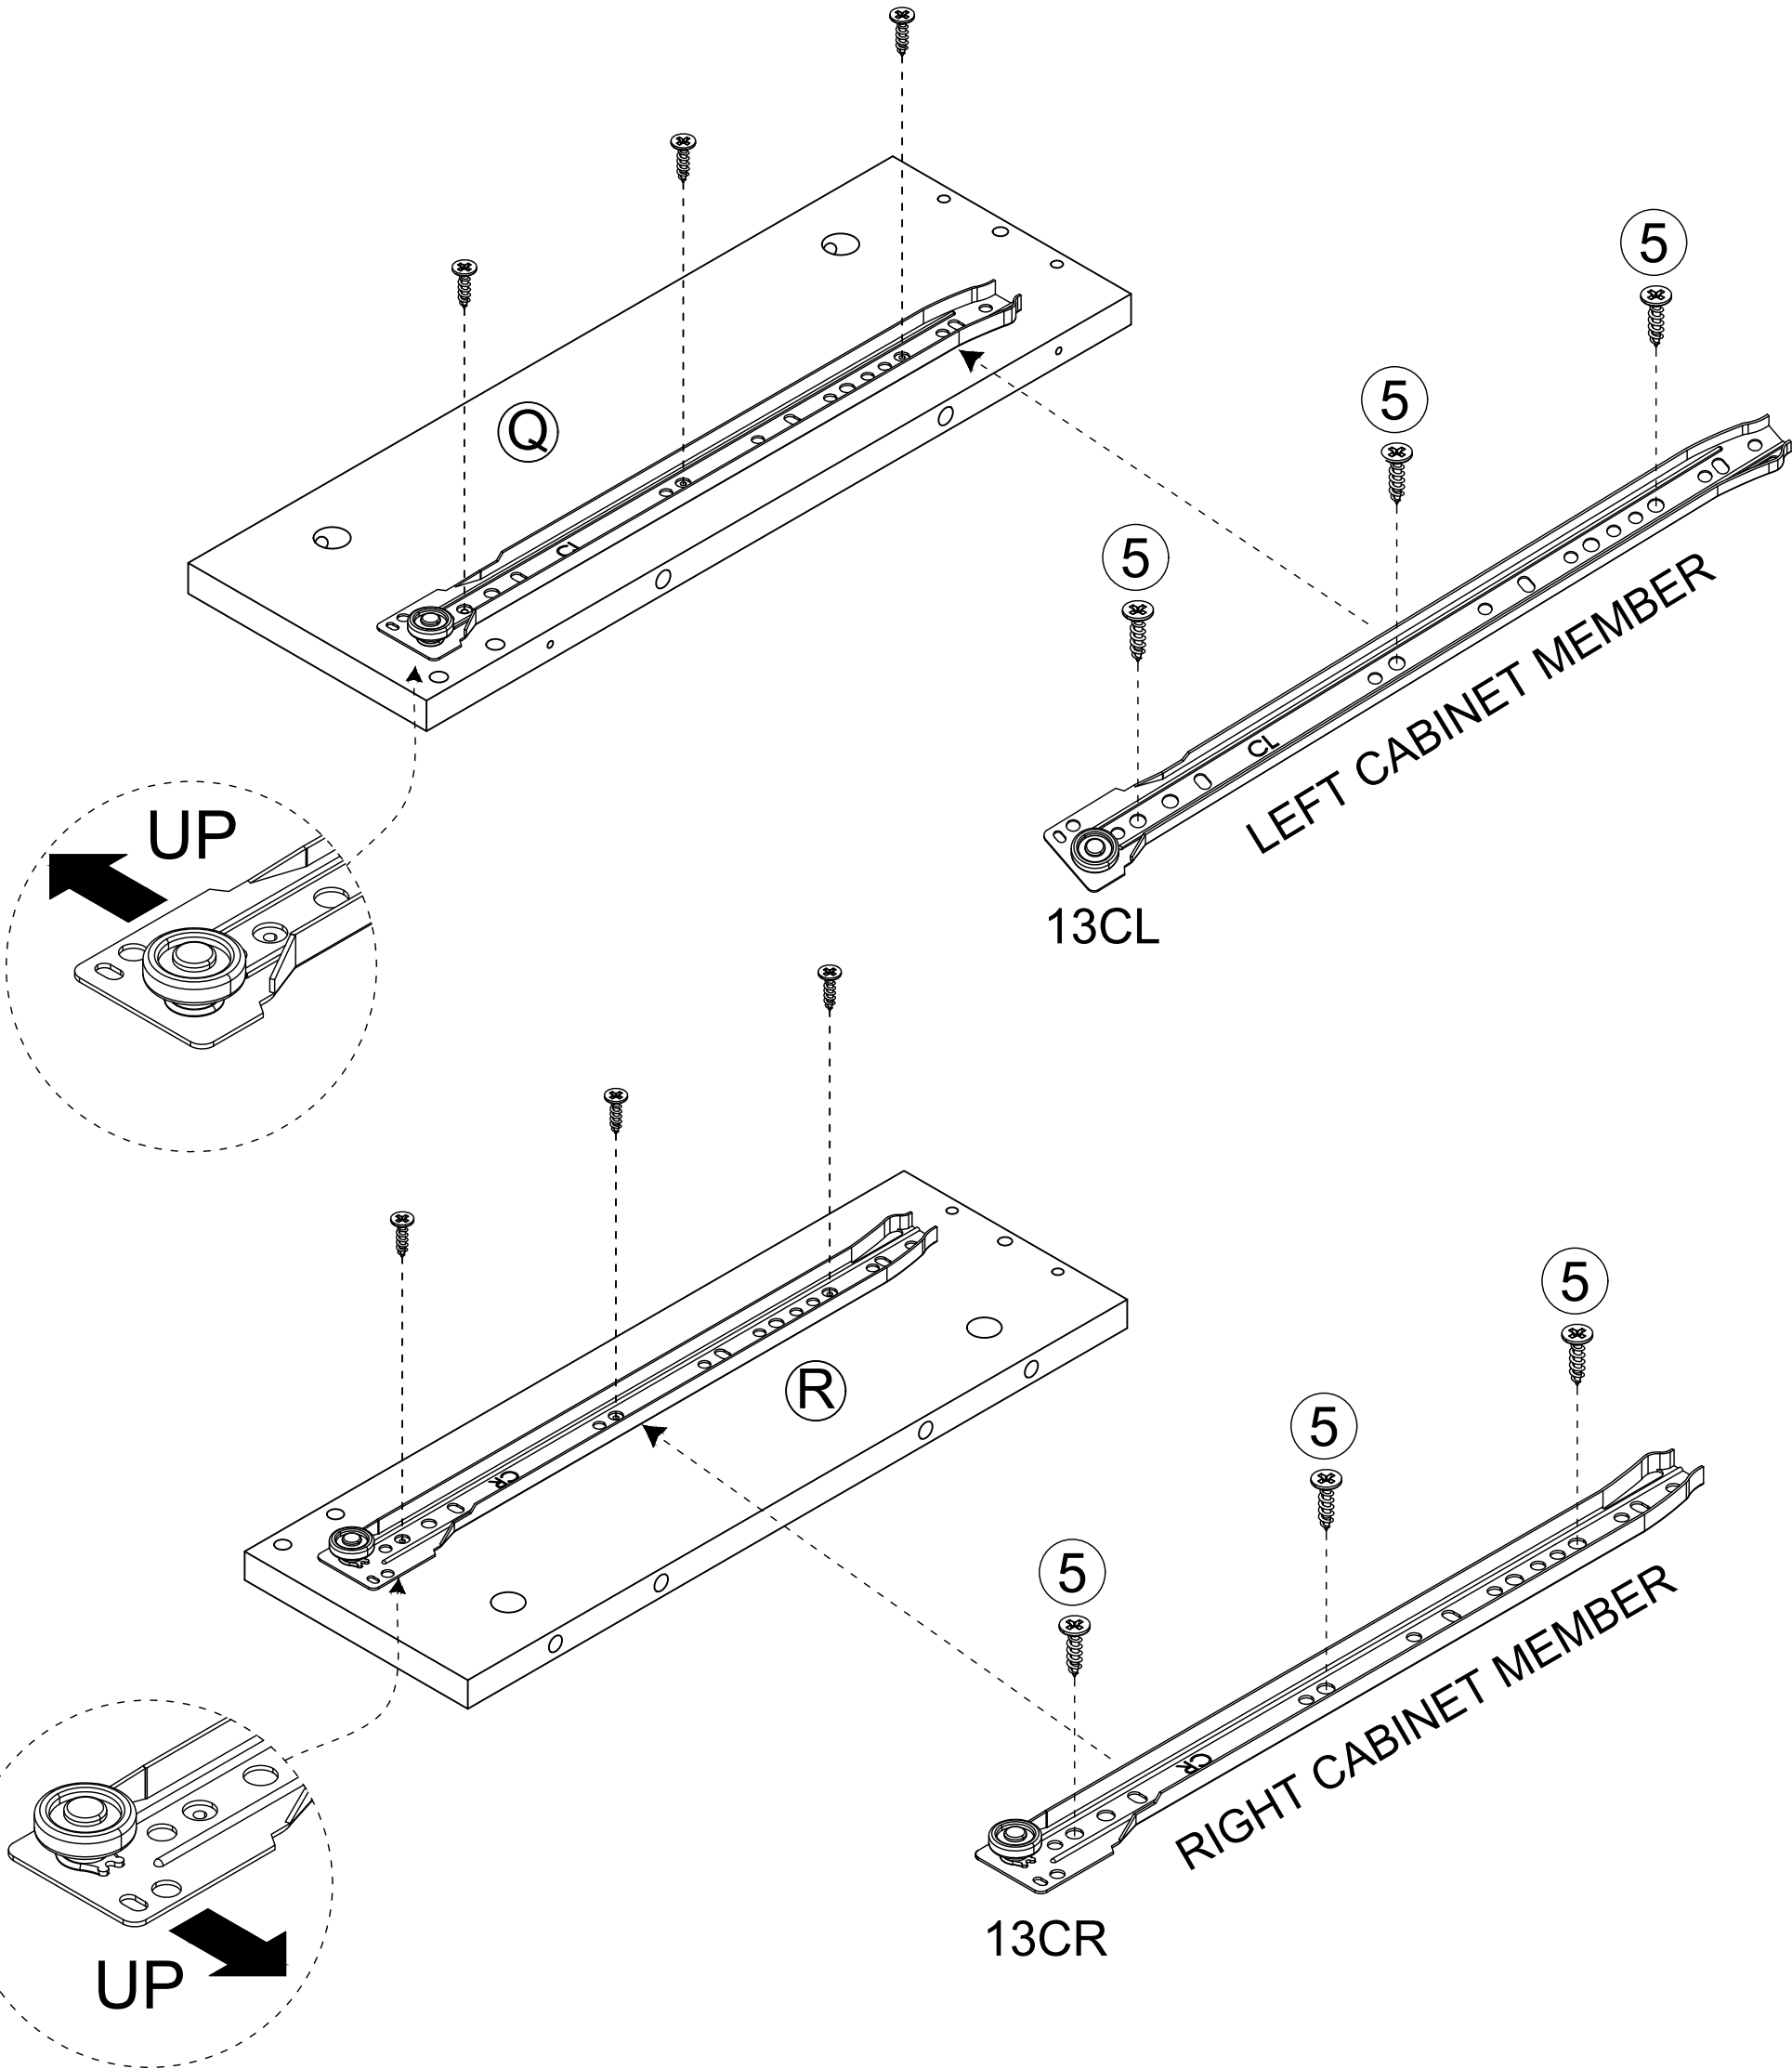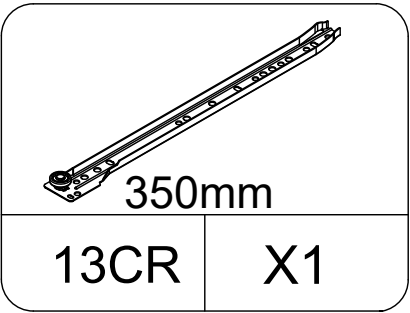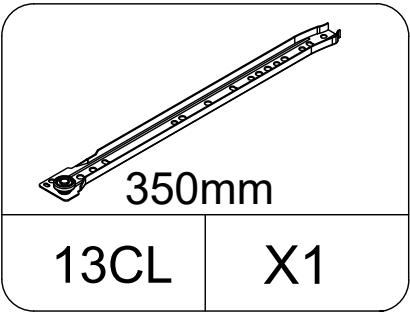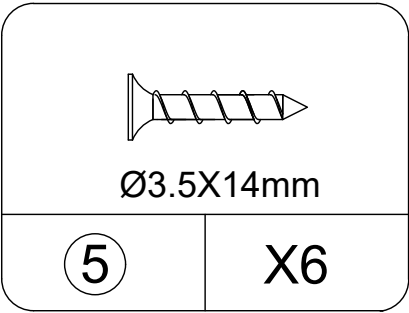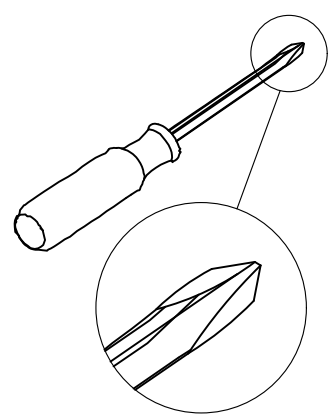



STEP11

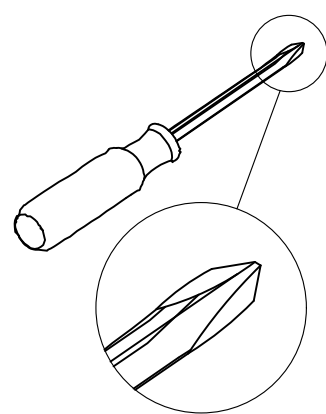


 Ø6X30mm	
3	X2








 Ø4X35mm	
7	X4

 Ø6.3X50mm	
8	X4


 Ø21mm	
16	X4

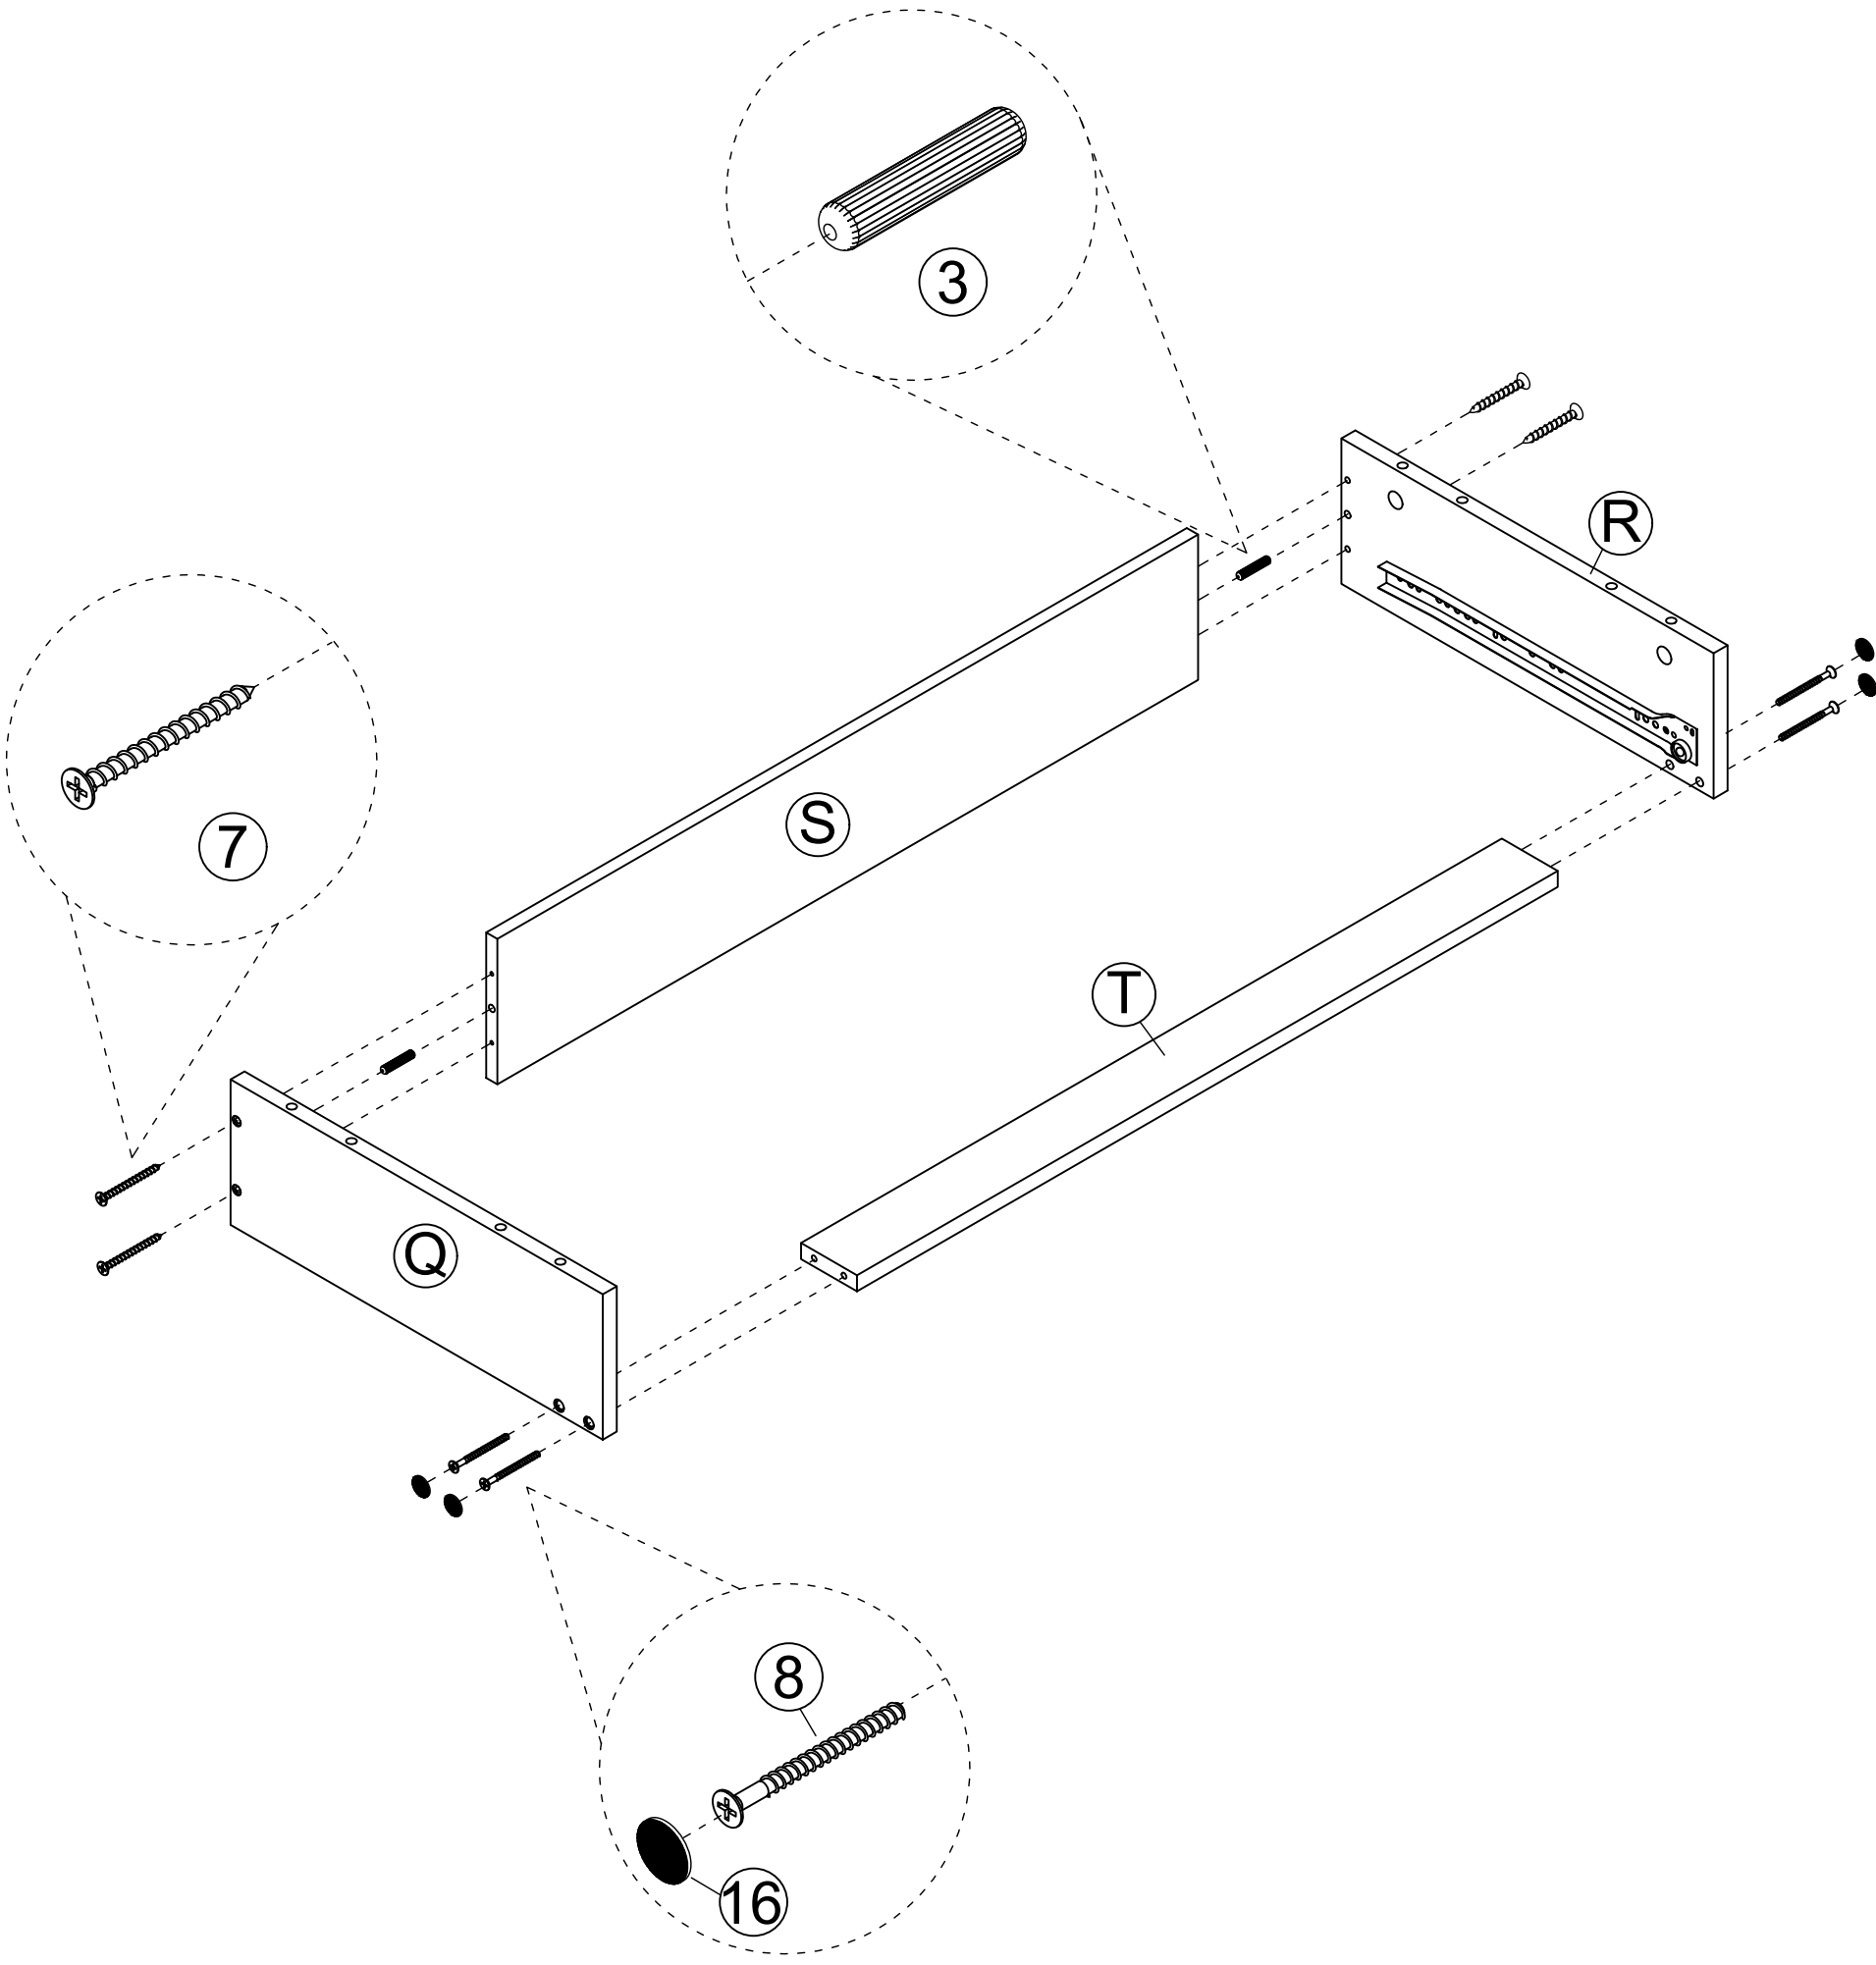


STEP12

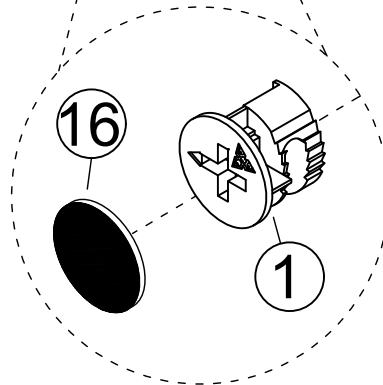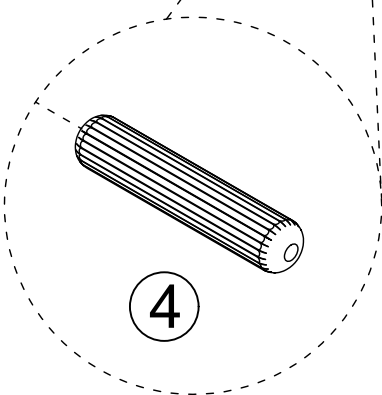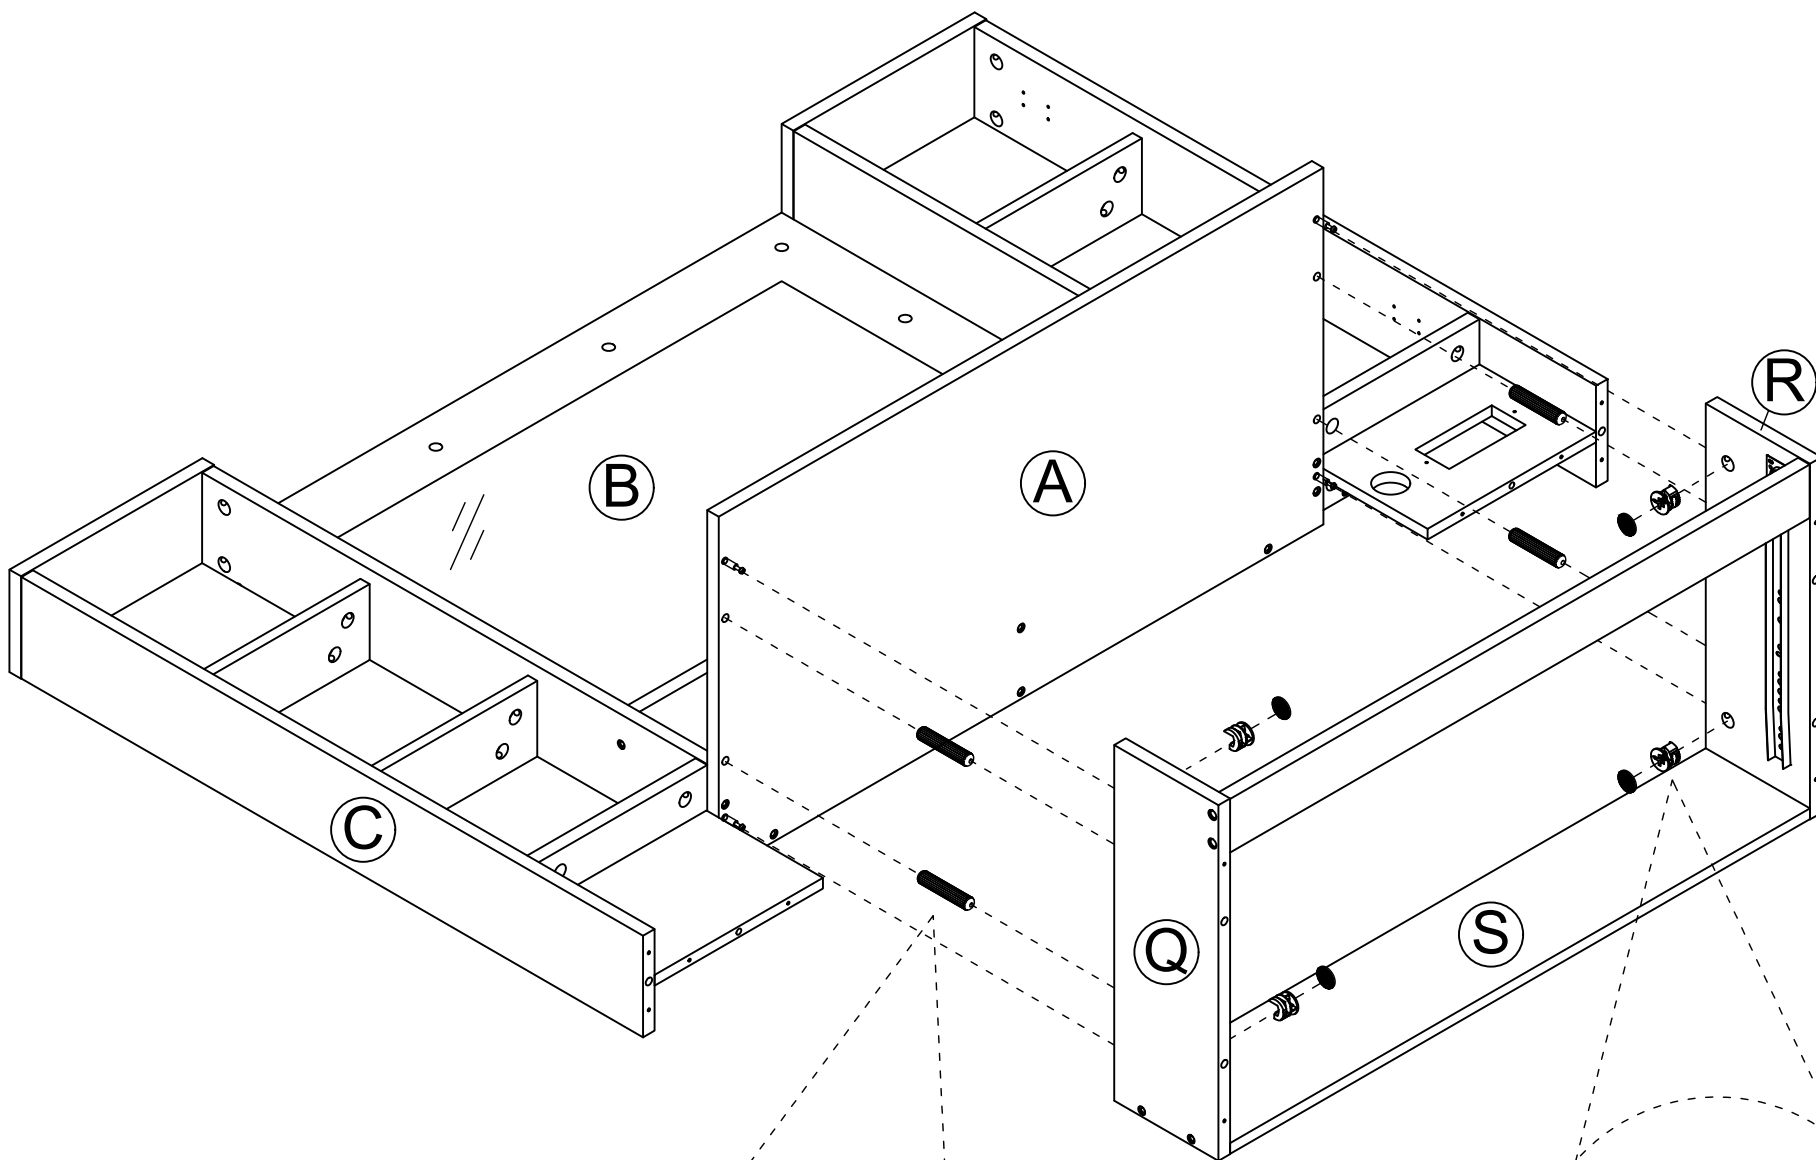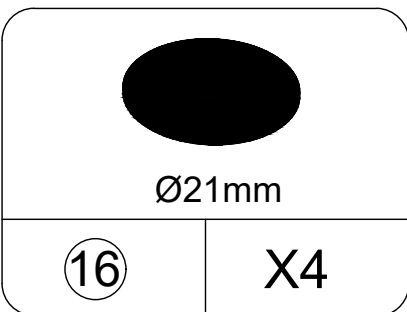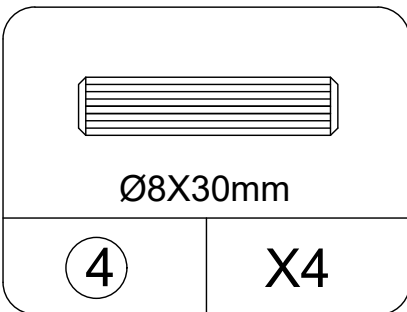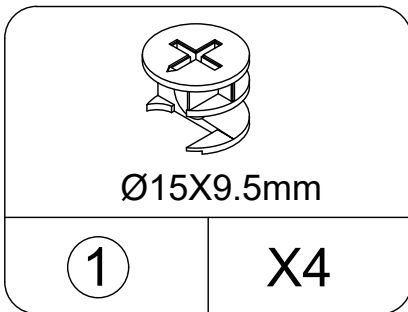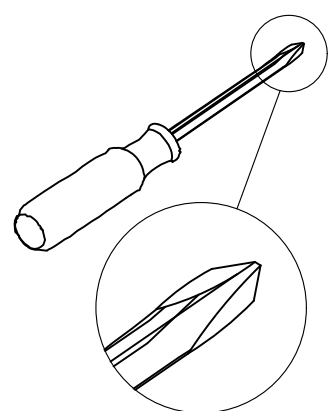


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

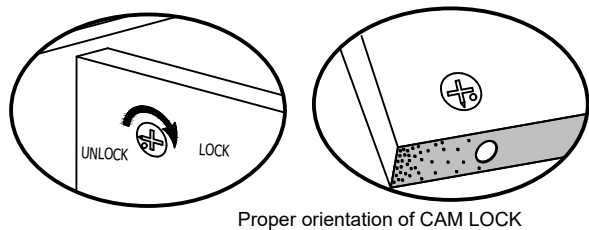



STEP13

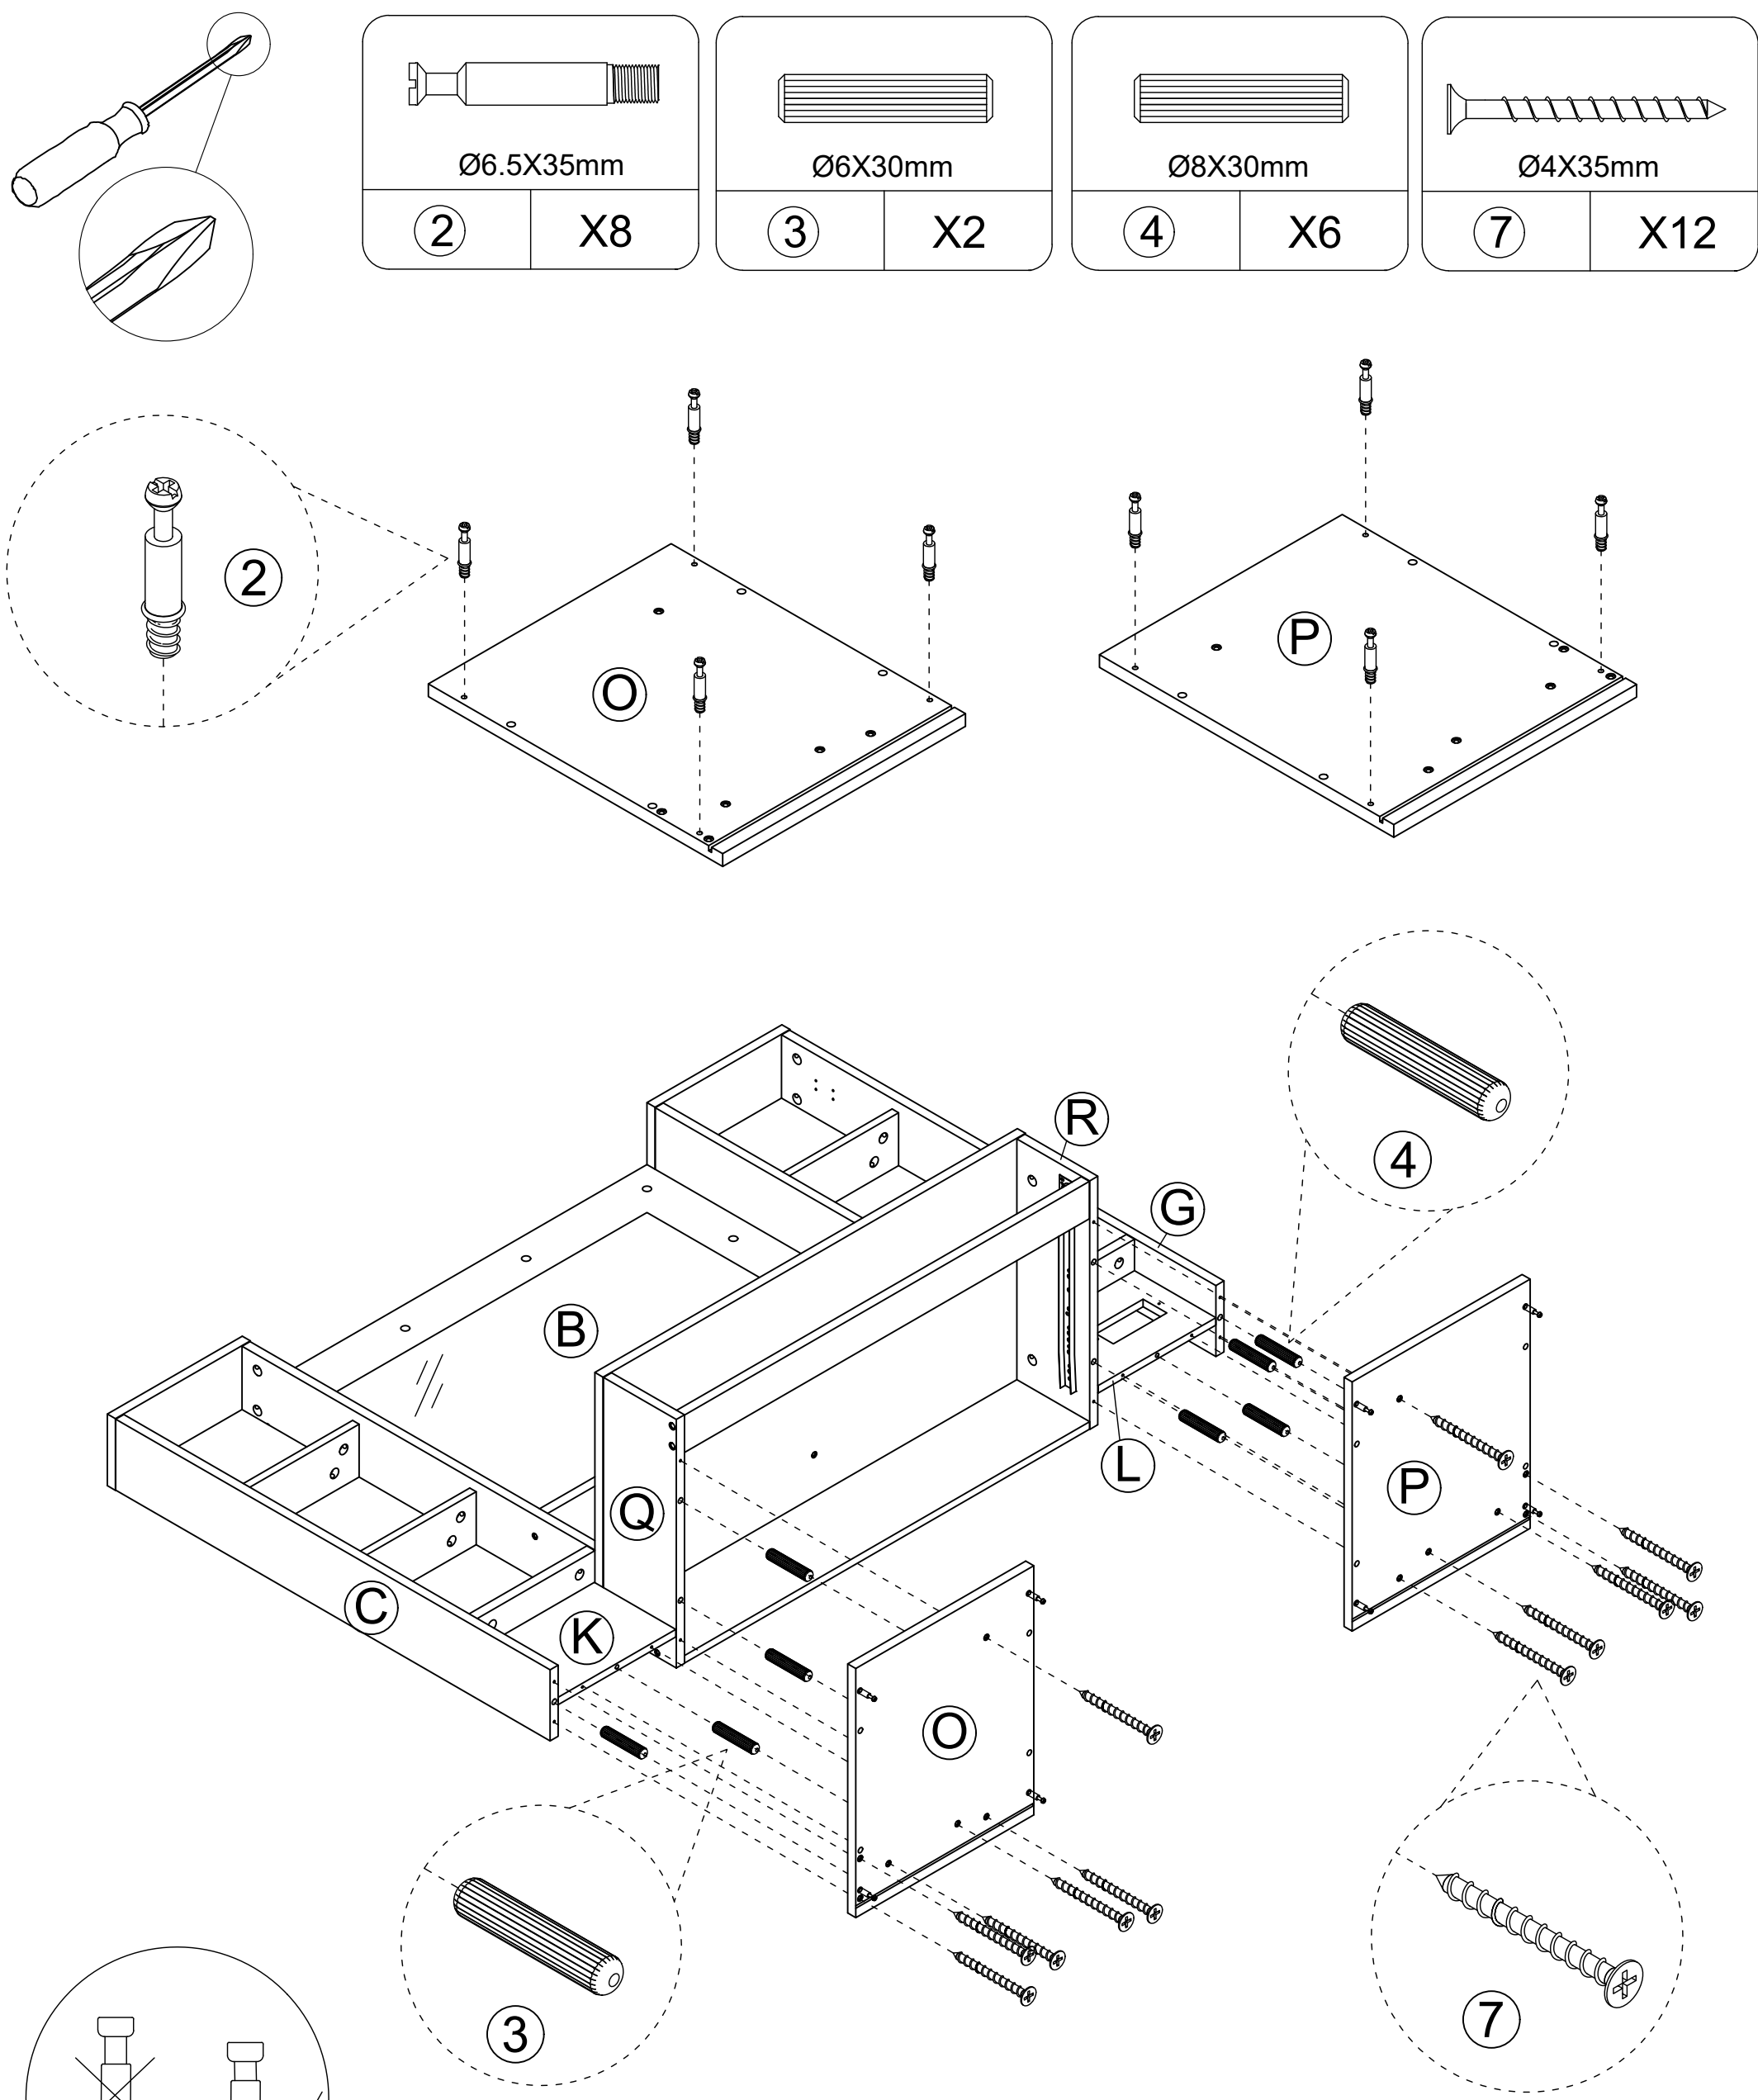








STEP14

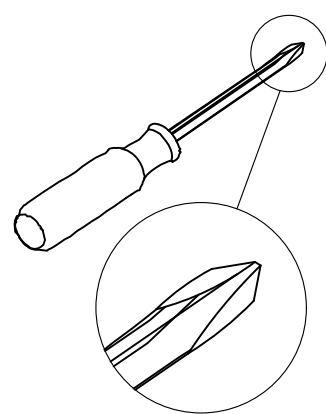






 Ø3.5X14mm	
5	X18

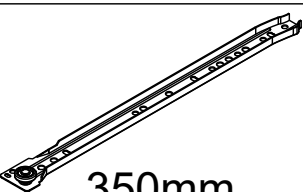 350mm	
13CL	X3

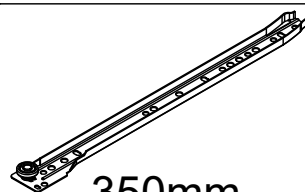
 350mm	
13CR	X3

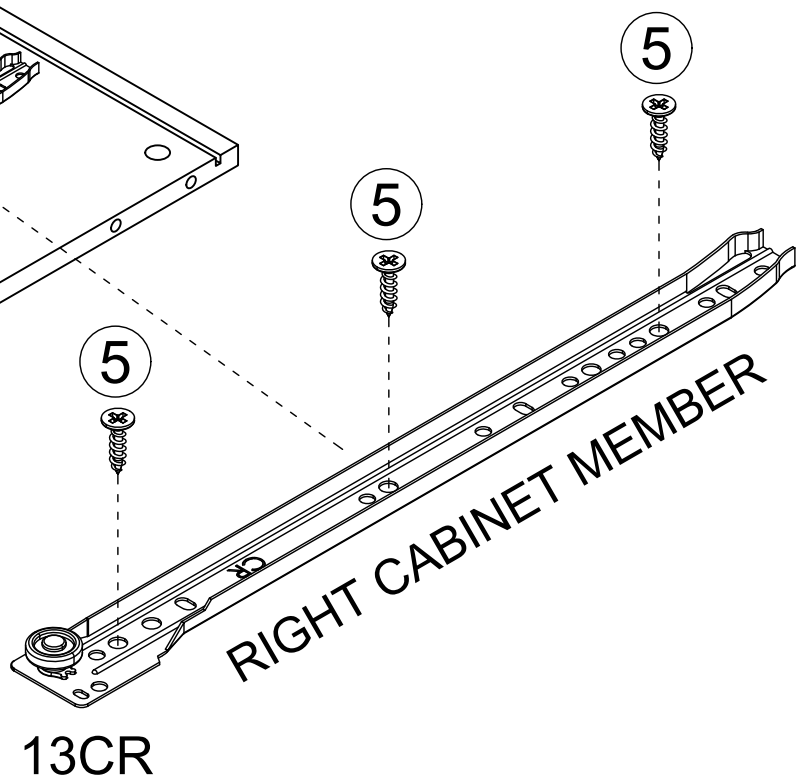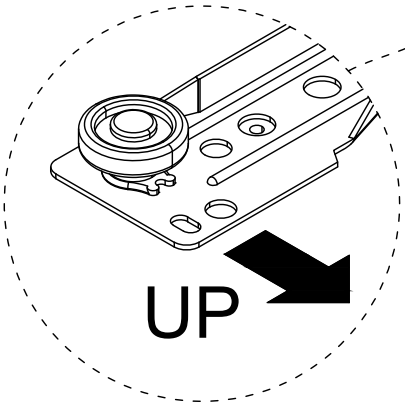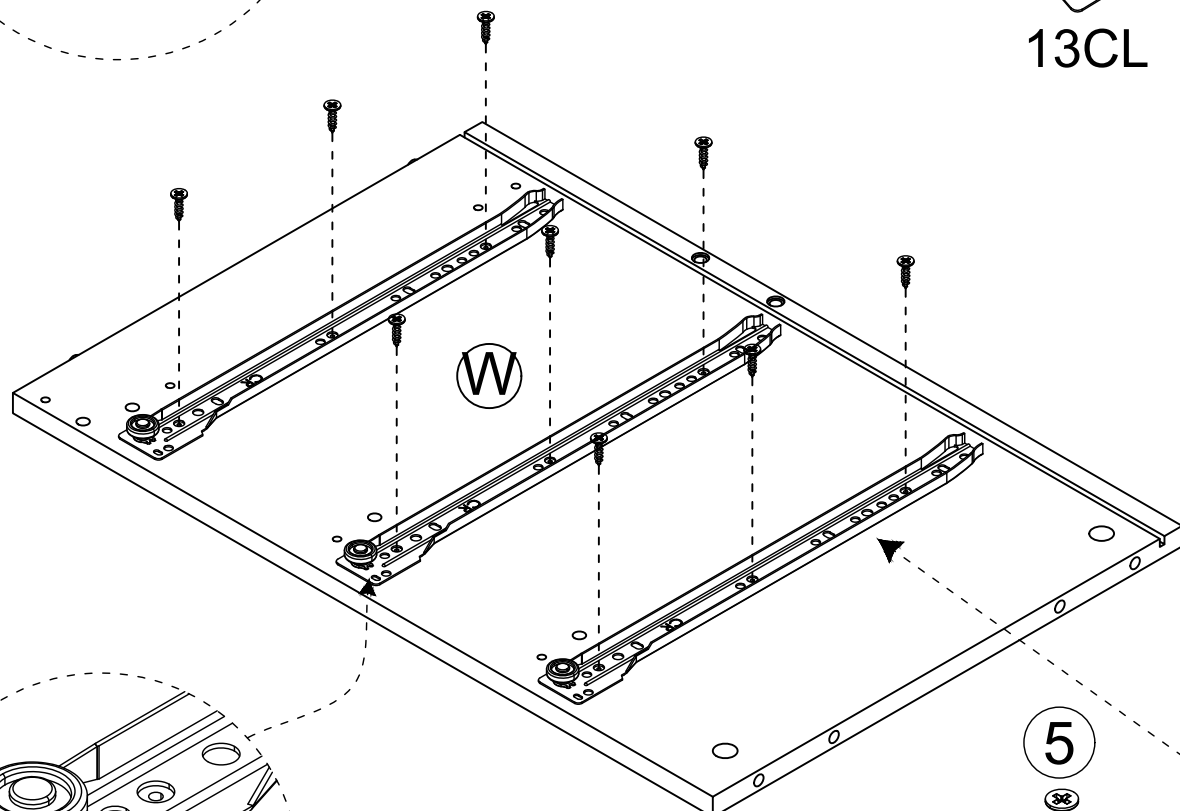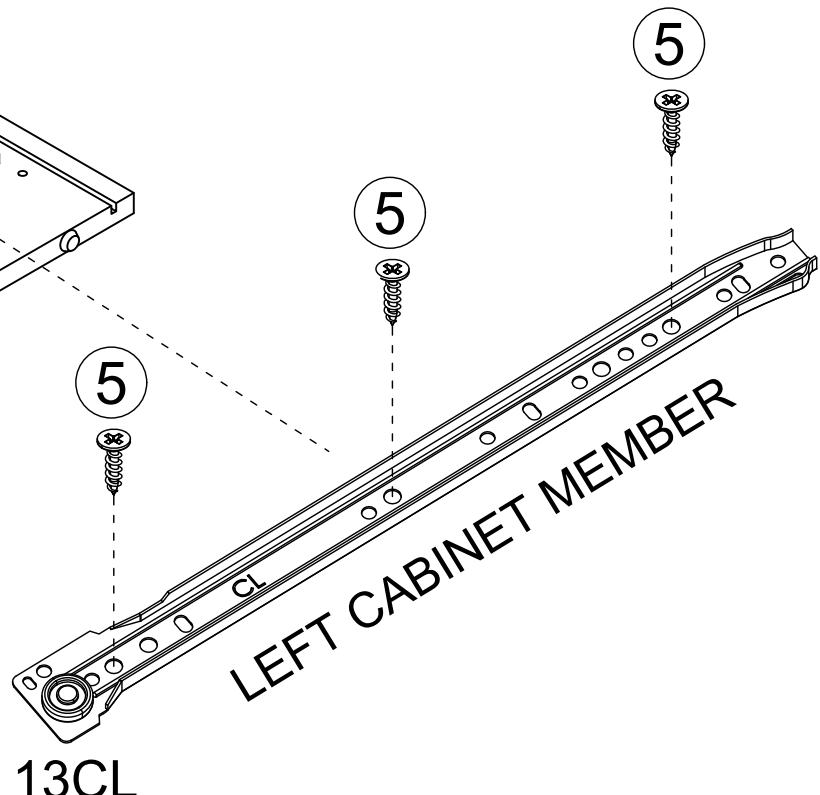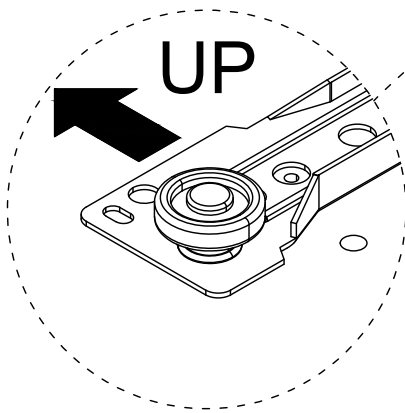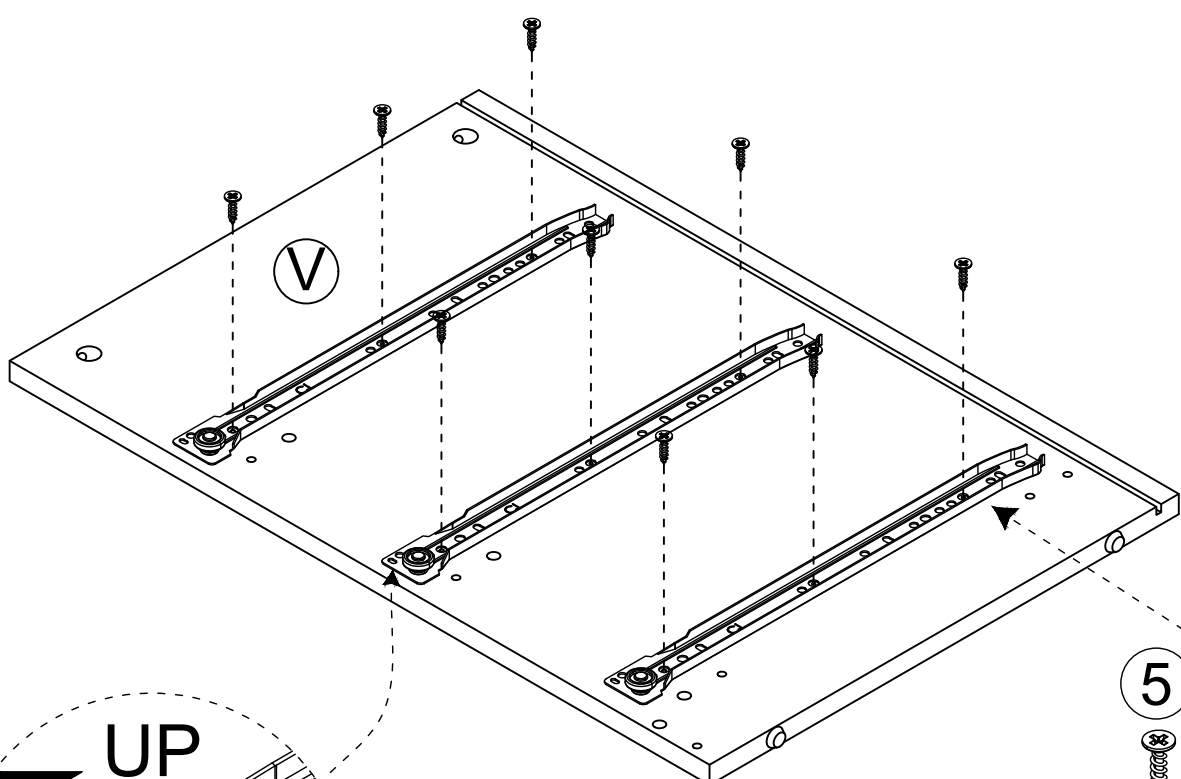


STEP15

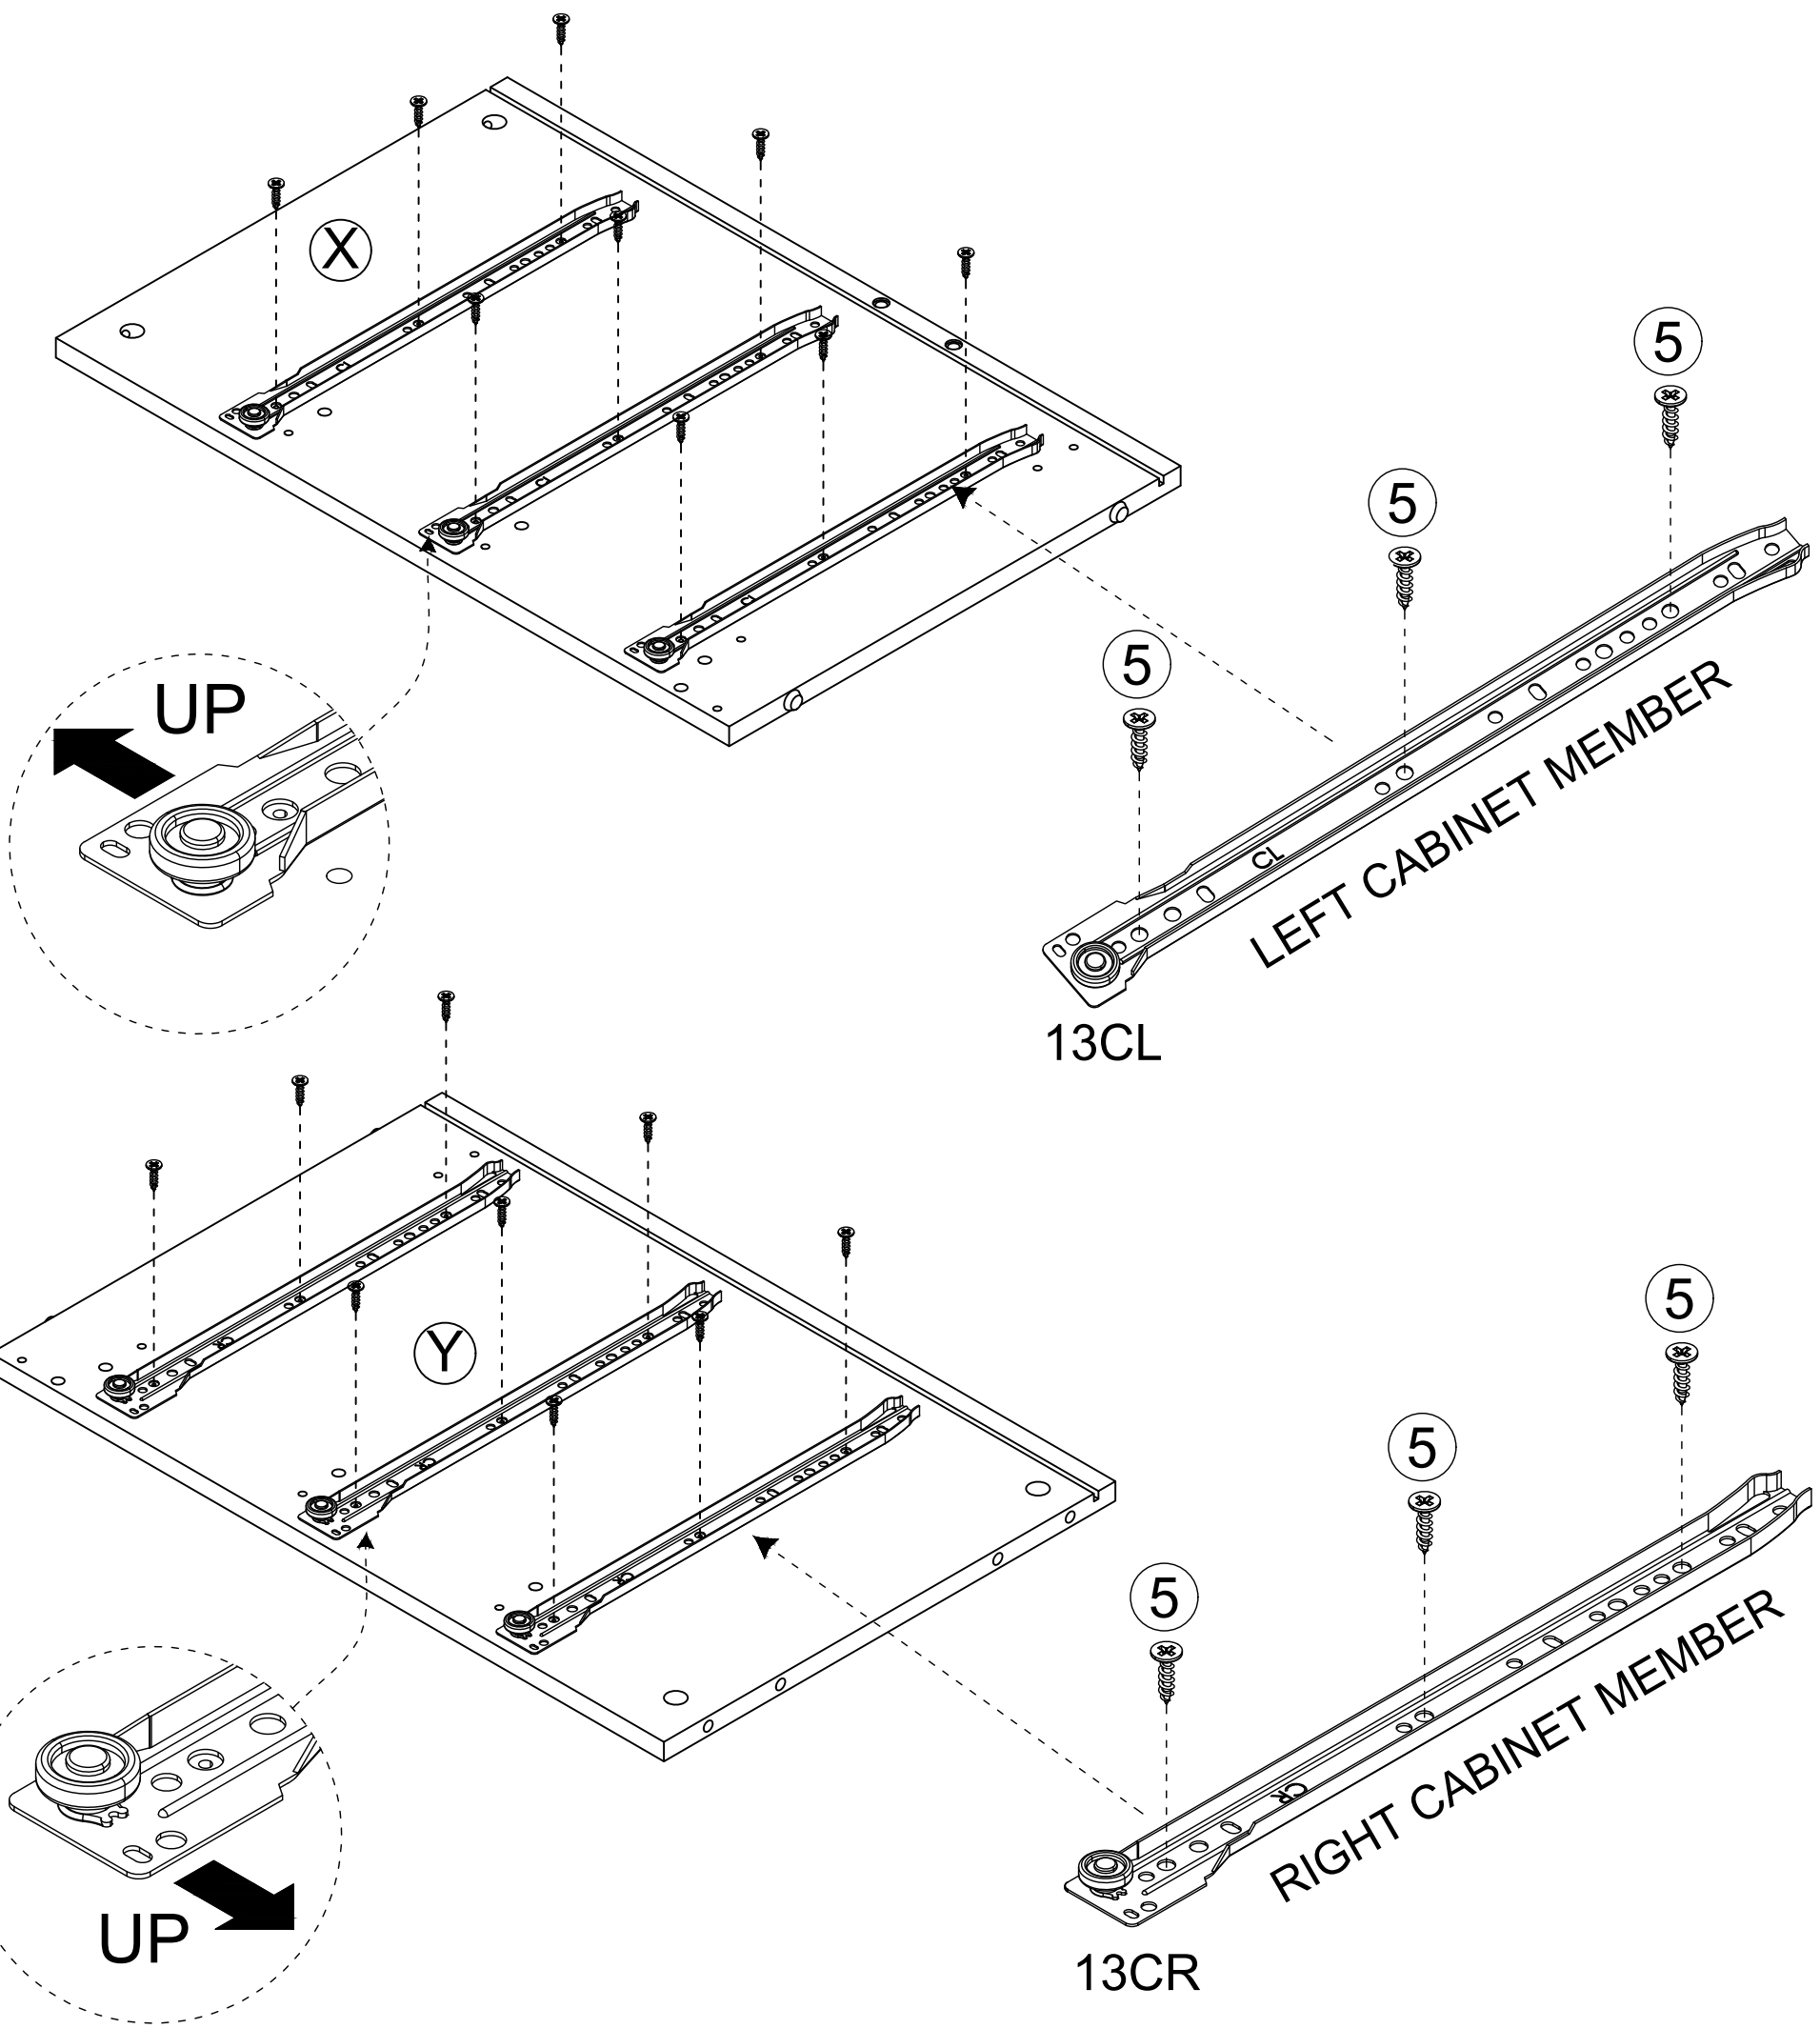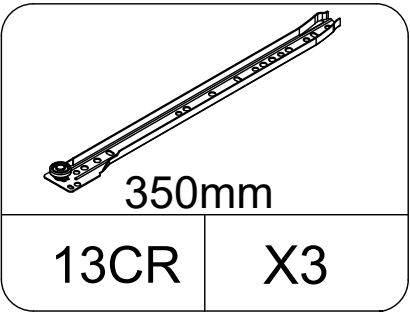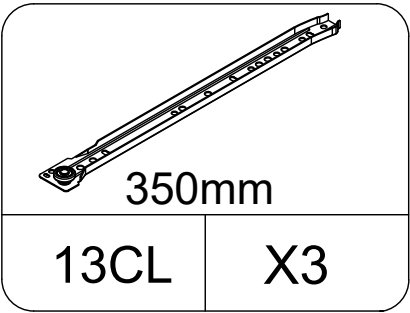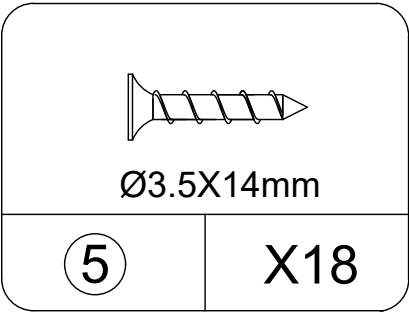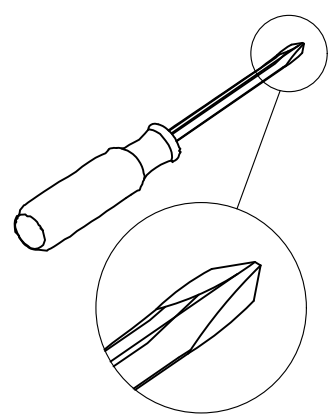



STEP16

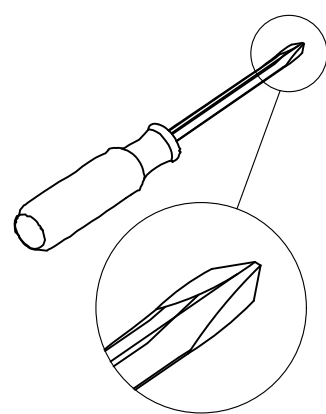






Ø6.5X35mm


2	X24
---	-----

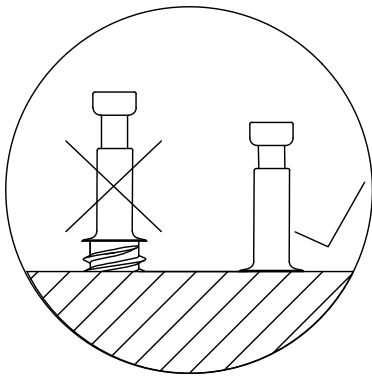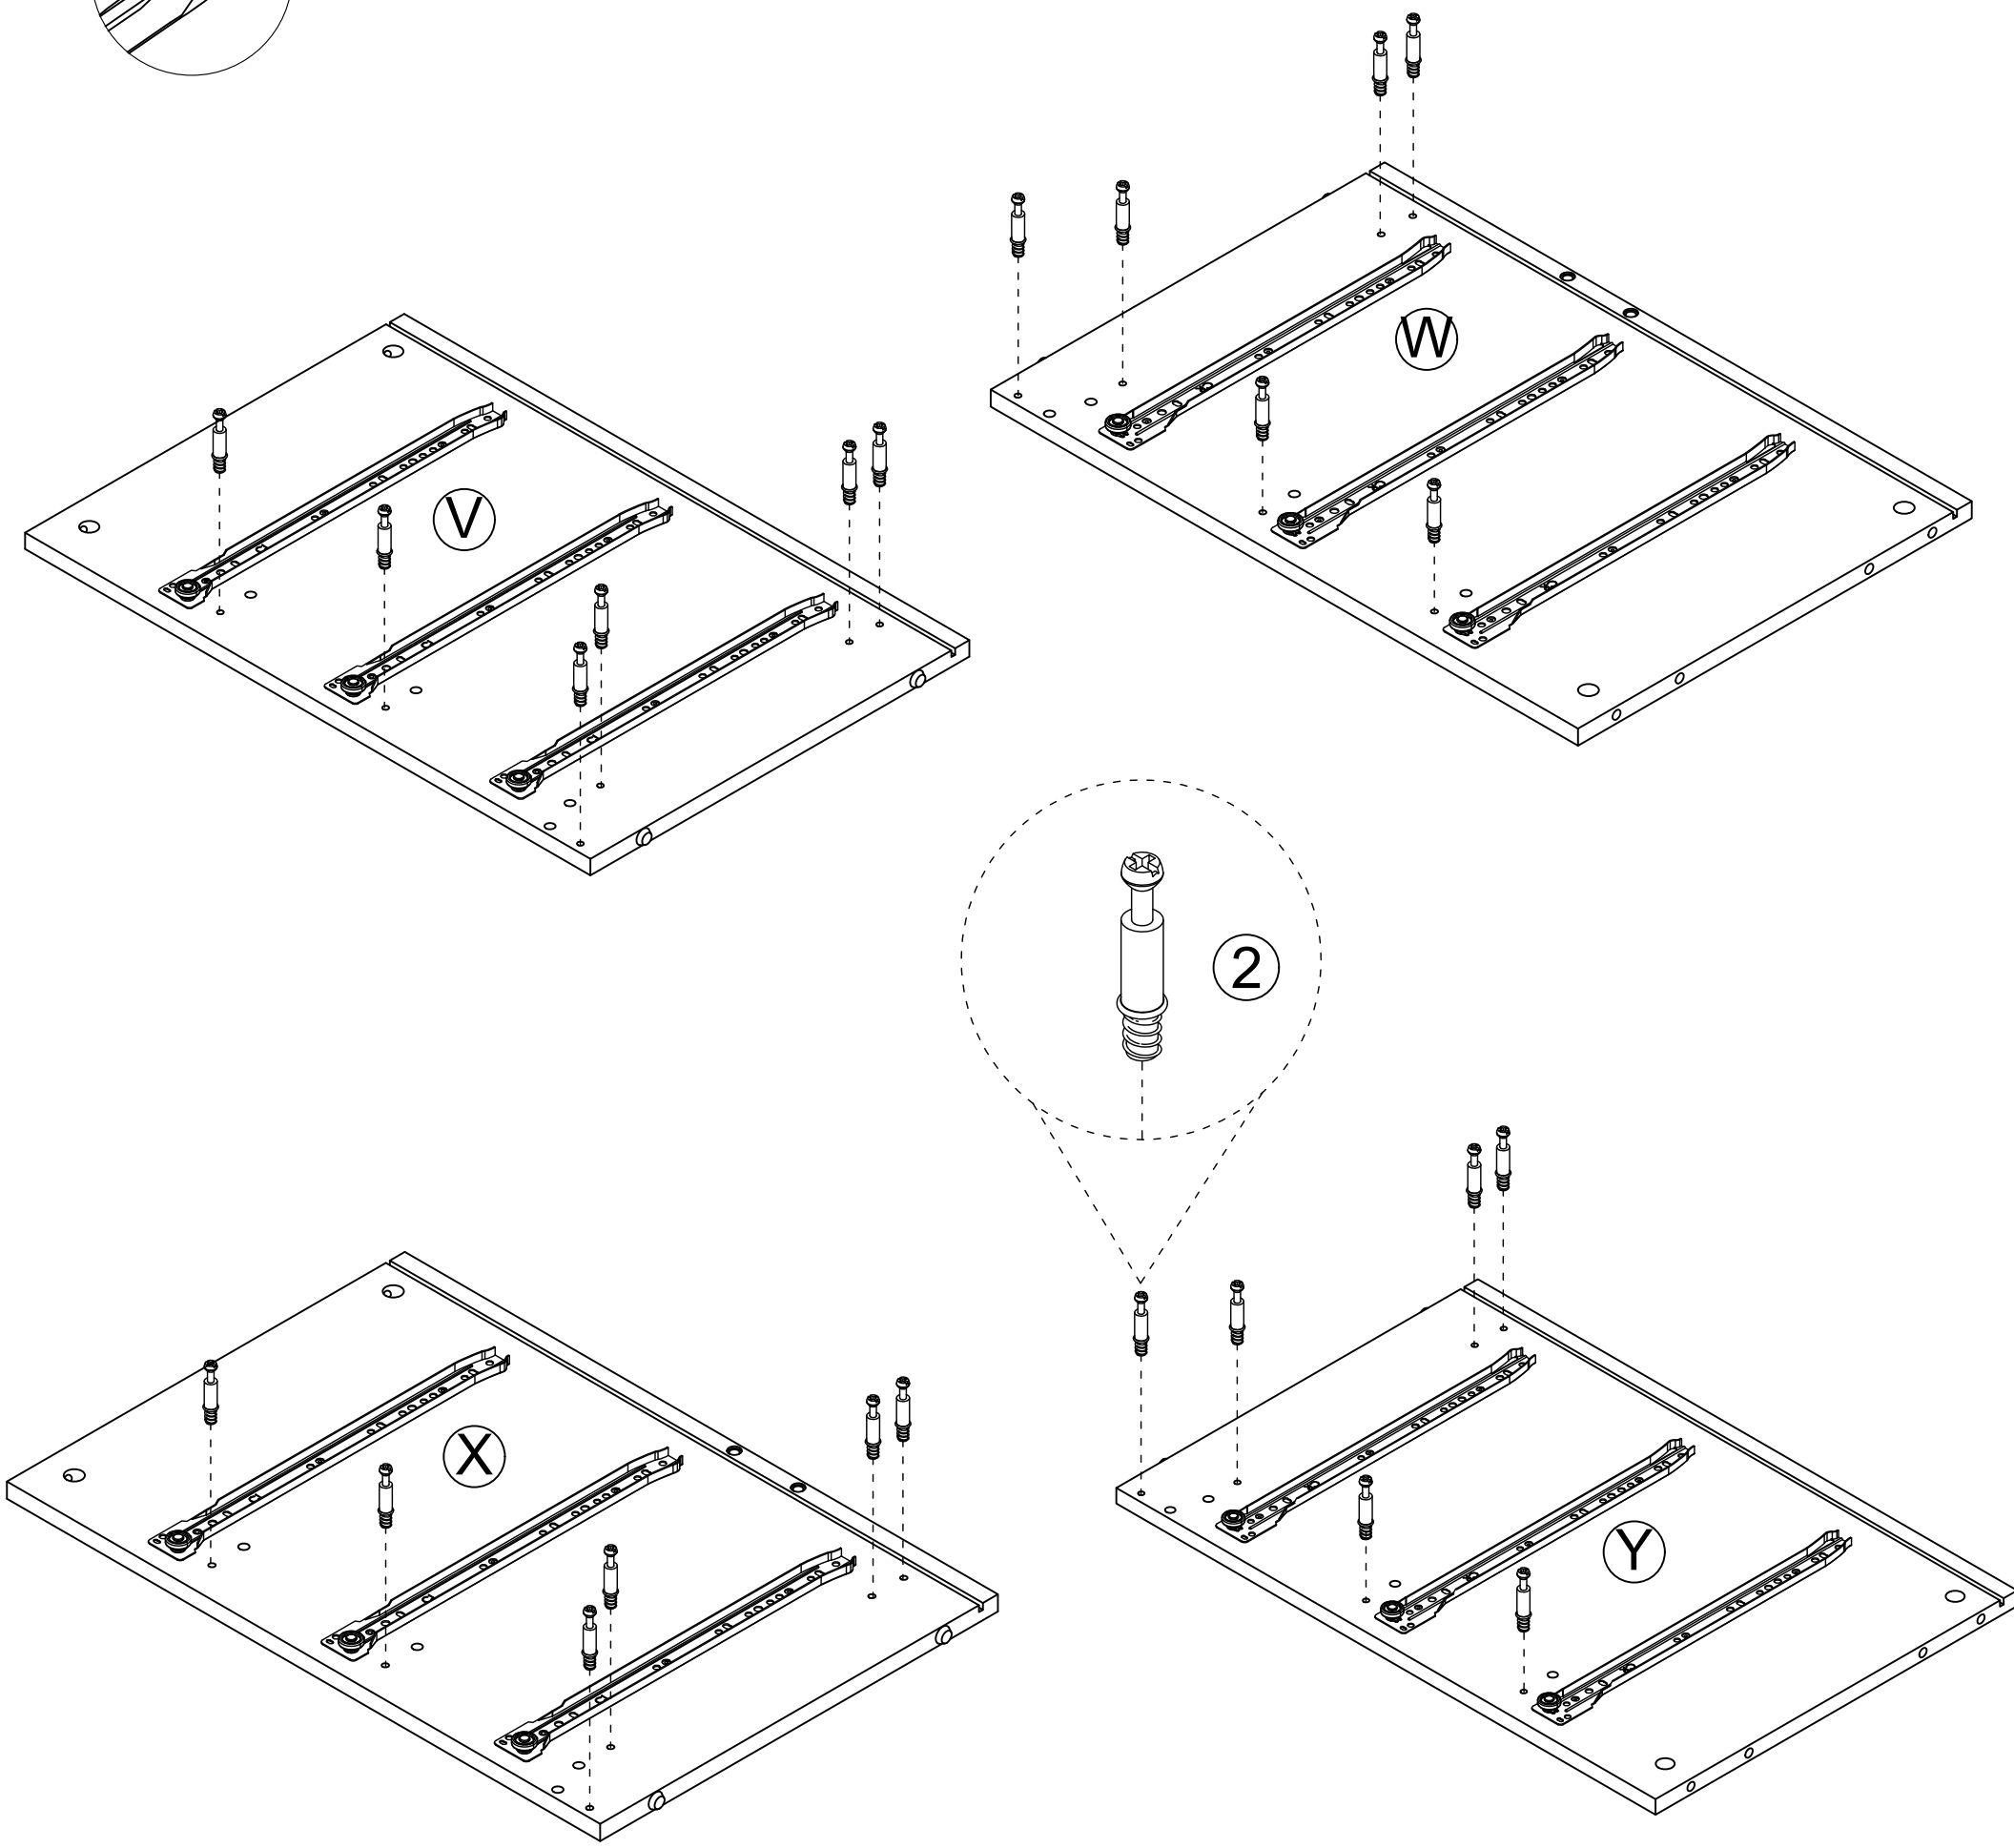



STEP17

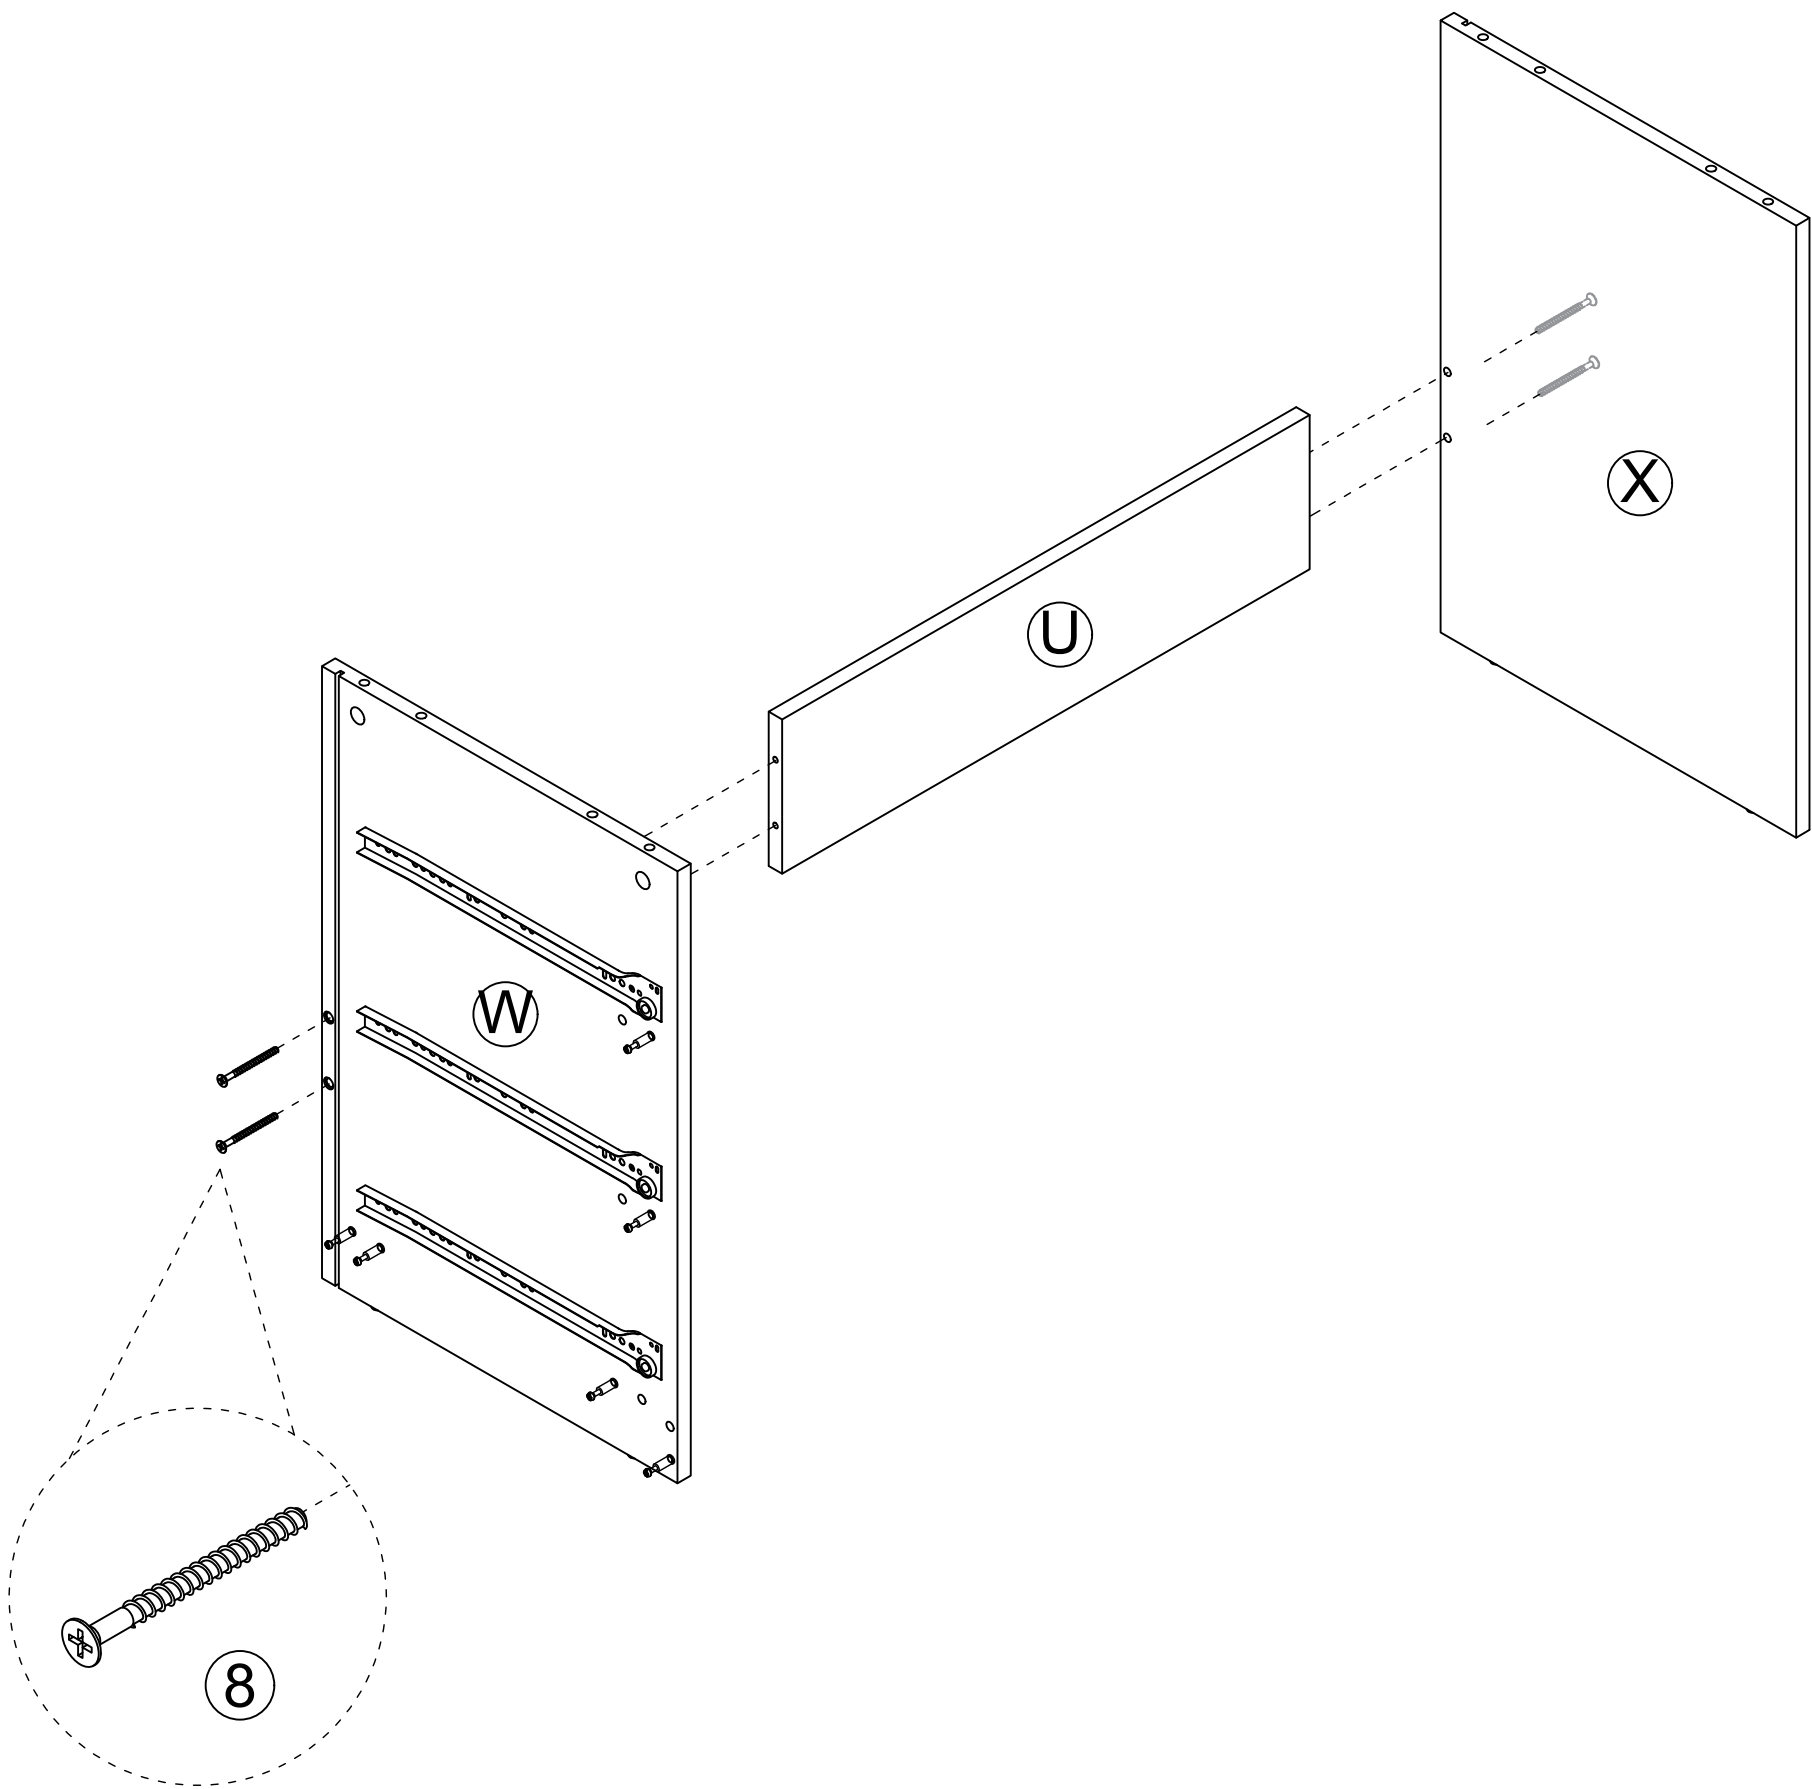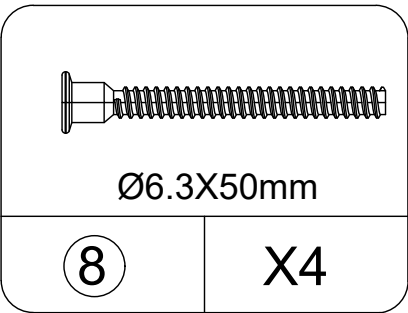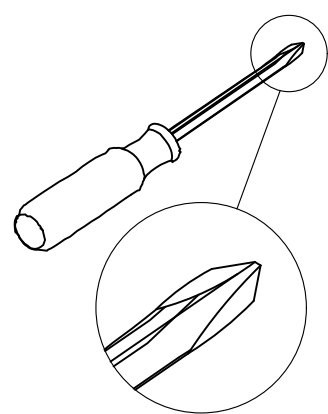





STEP18

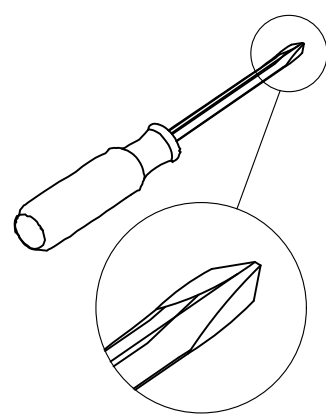

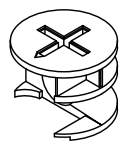
	
Ø15X9.5mm	
1	X4

	
Ø6.5X35mm	
2	X4



	
Ø8X30mm	
4	X2

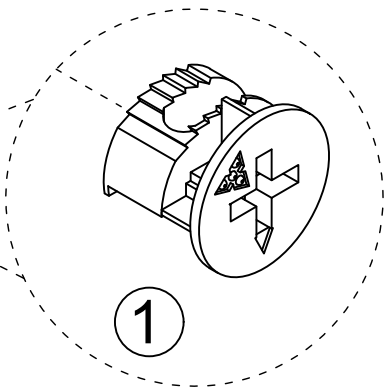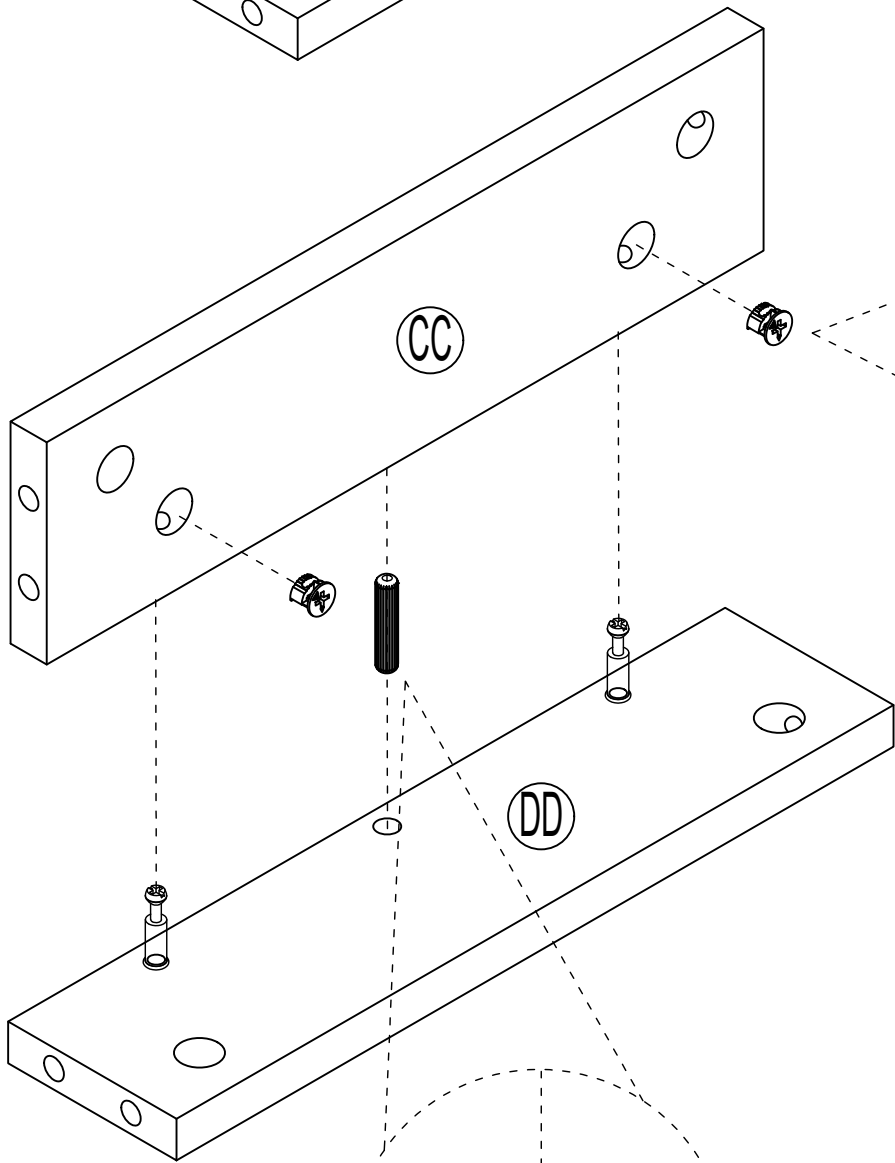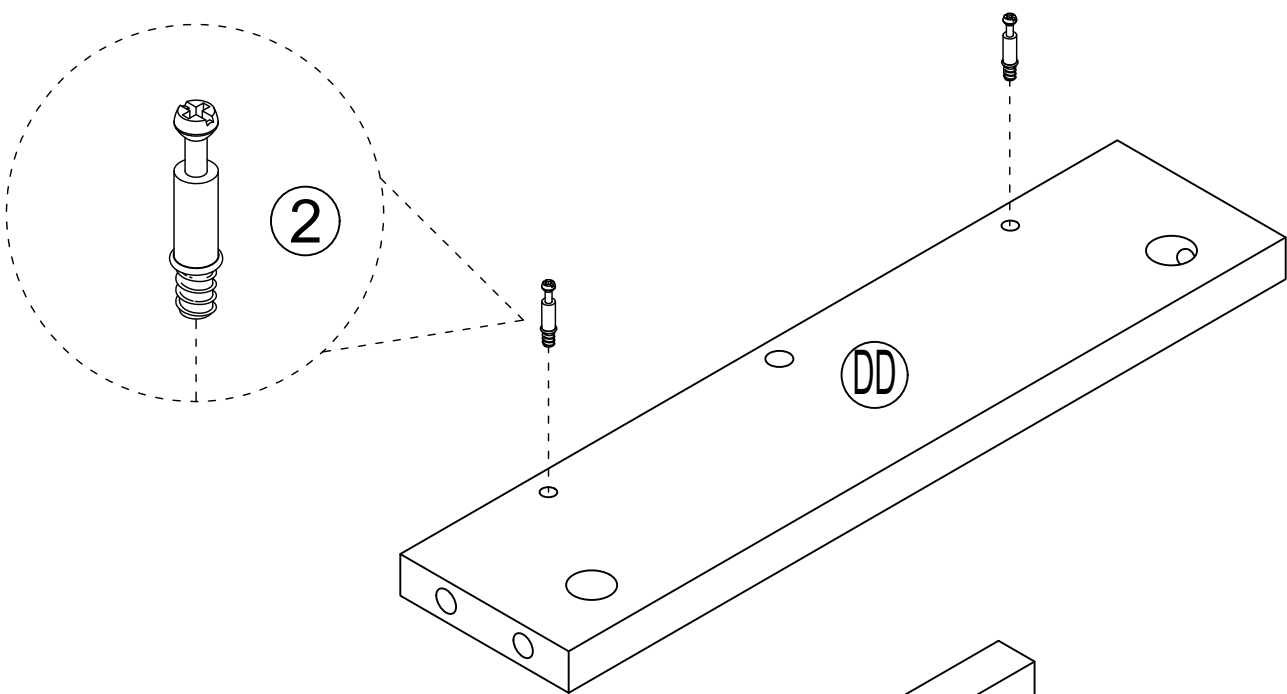

X2



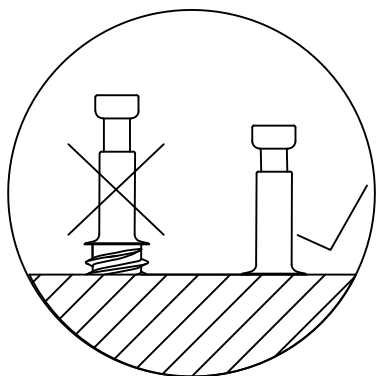


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


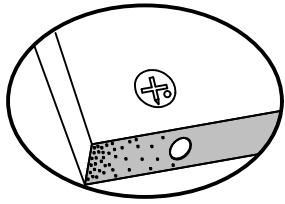
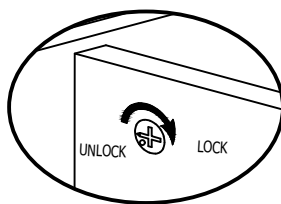


Proper orientation of CAM LOCK



STEP19

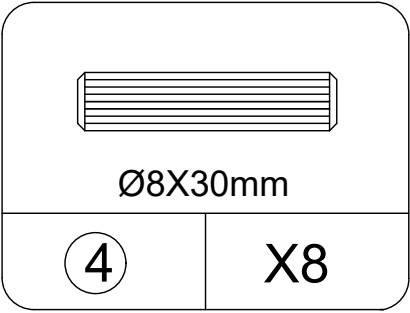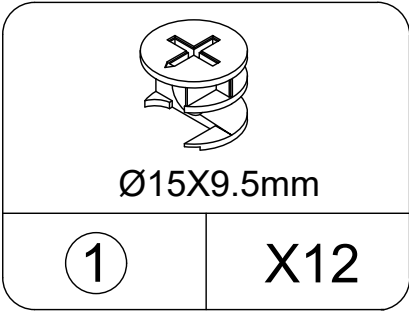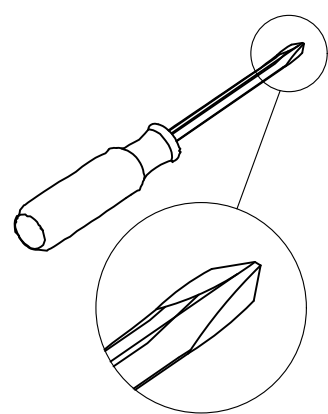

Note that the slot is in the back.

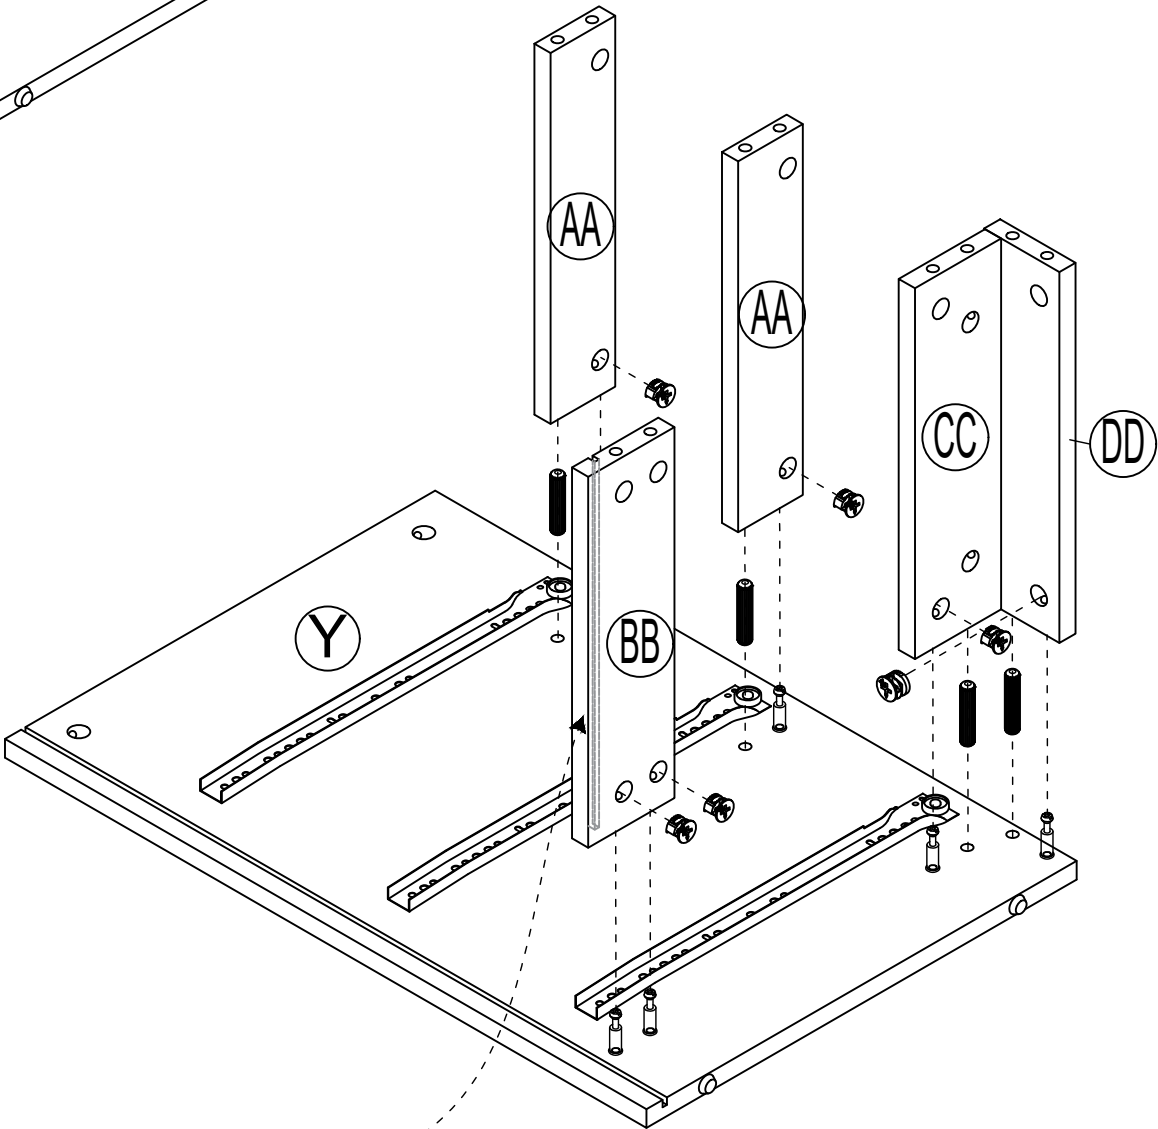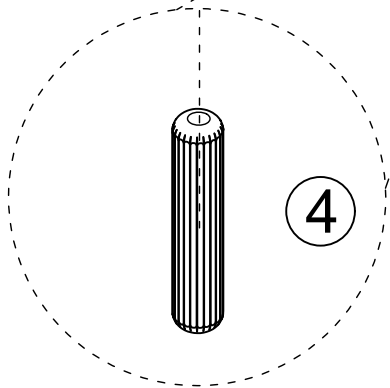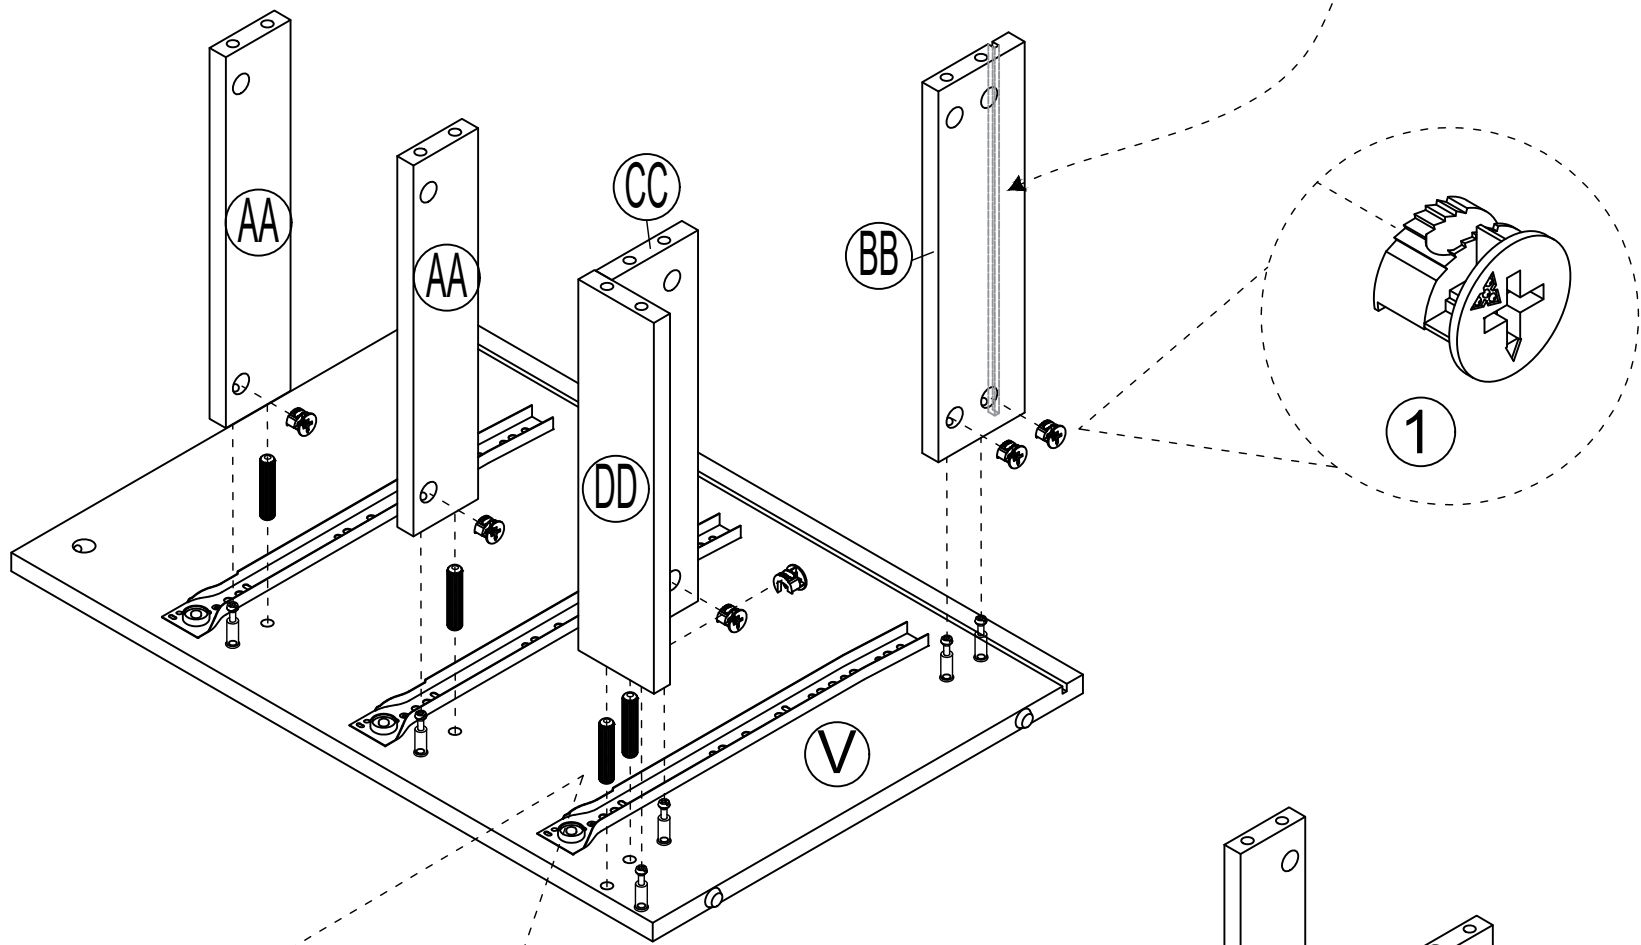


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

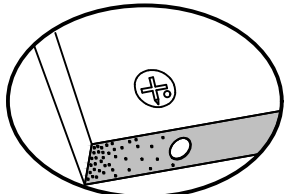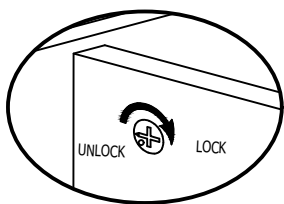

Proper orientation of CAM LOCK


Note that the slot is in the back.

STEP20

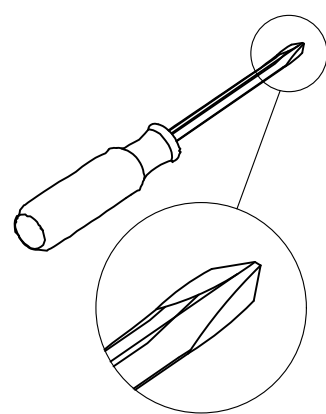


	
Ø15X9.5mm	
1	X12


	
Ø8X30mm	
4	X8

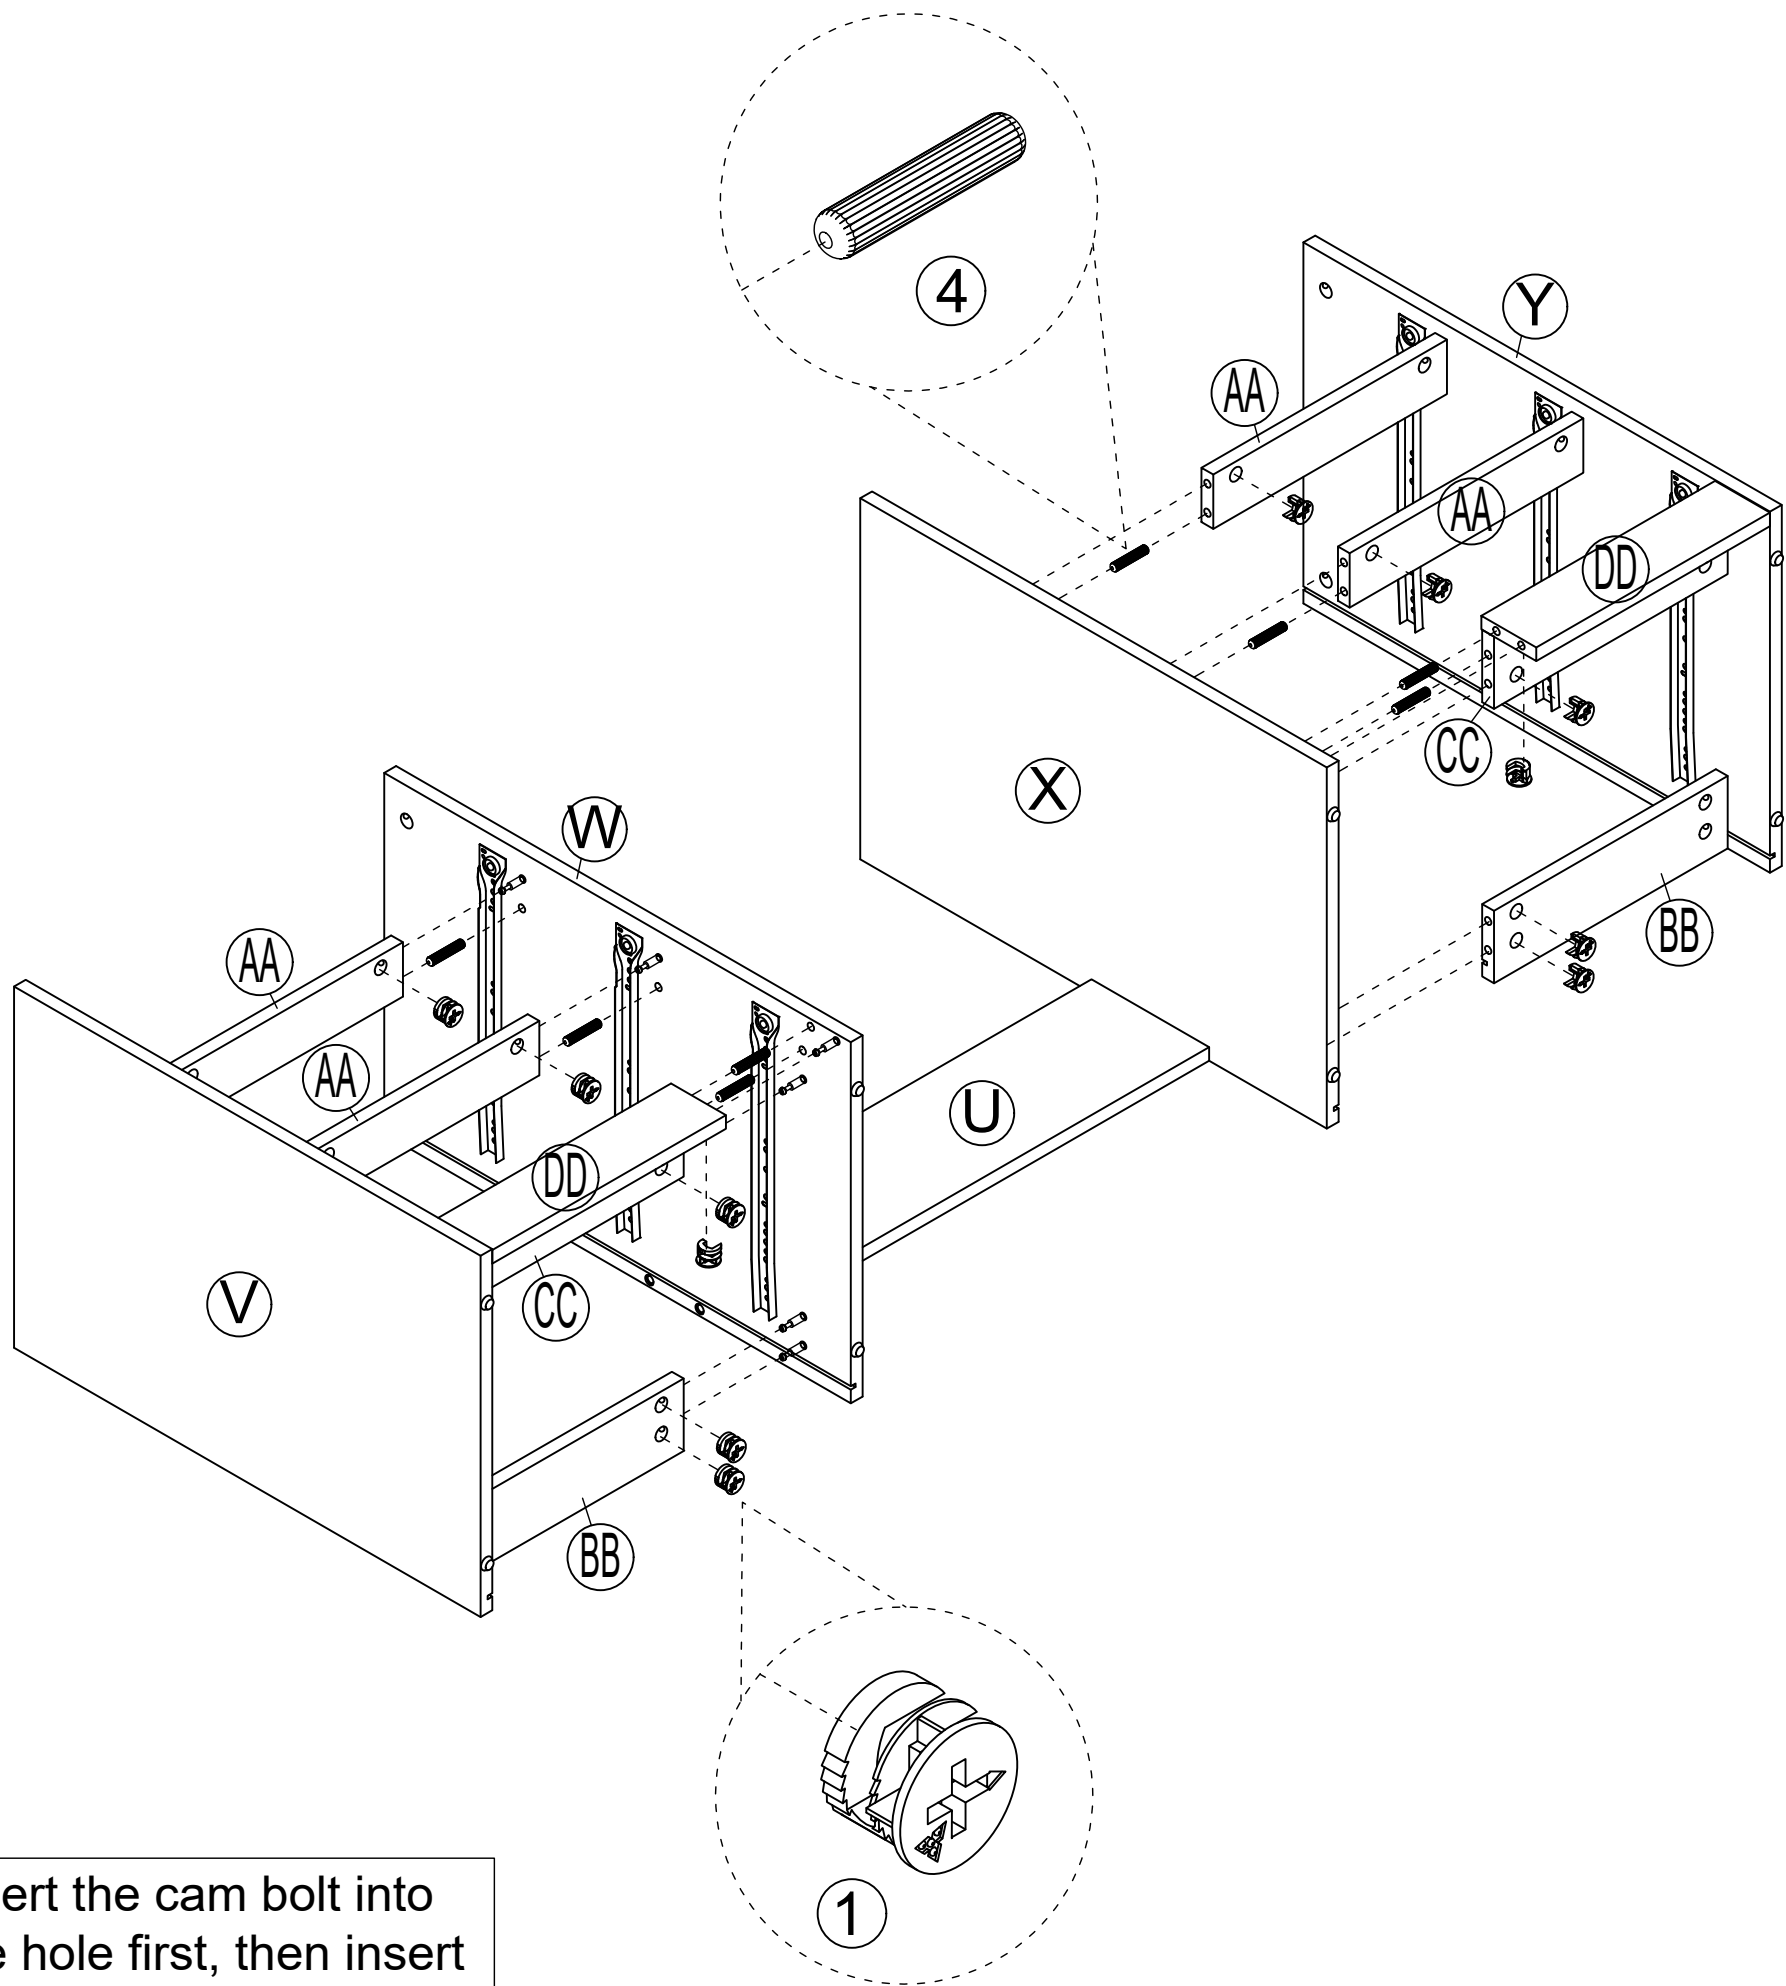






Insert the cam bolt into the hole first, then insert the cam lock and lock it.

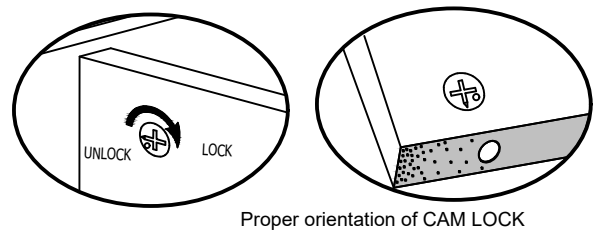

STEP21


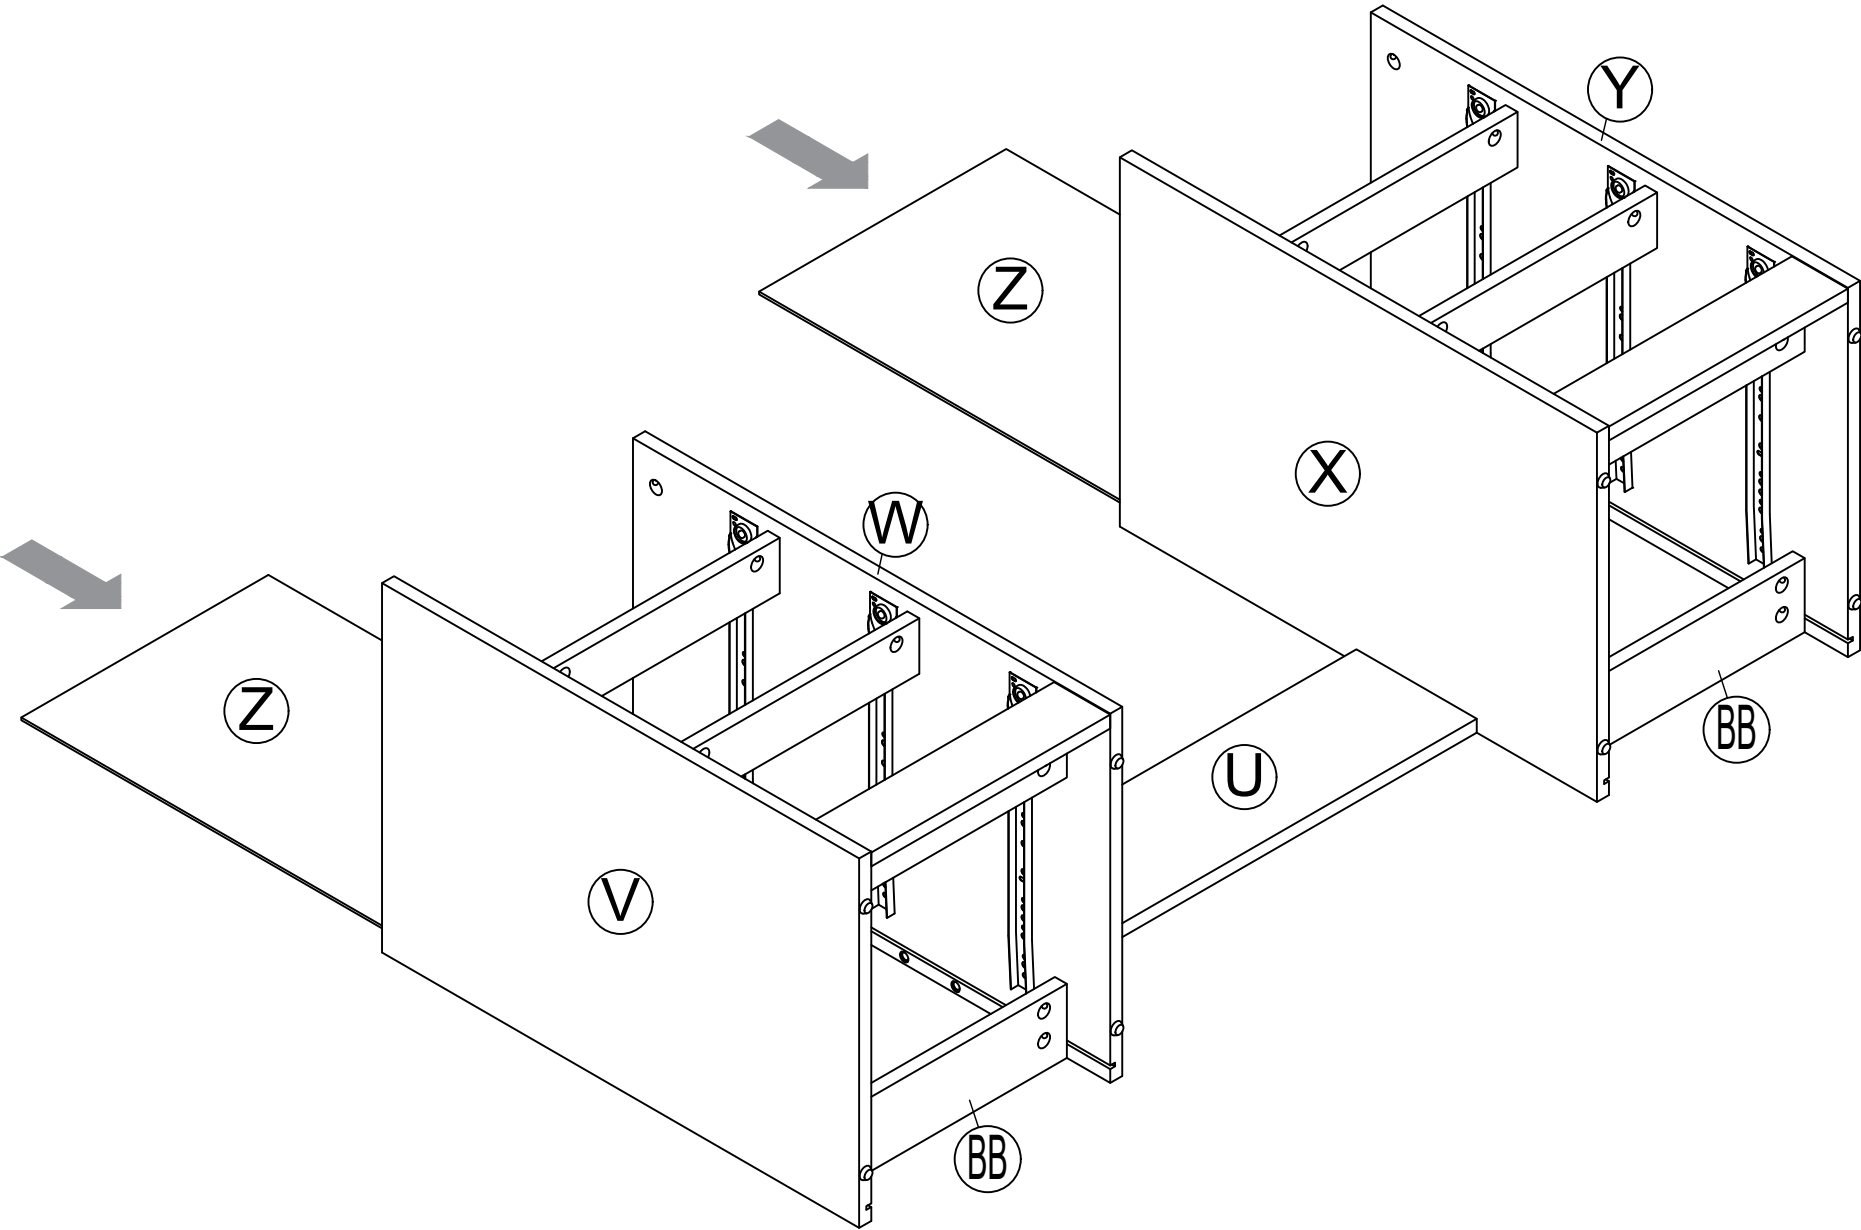


STEP22

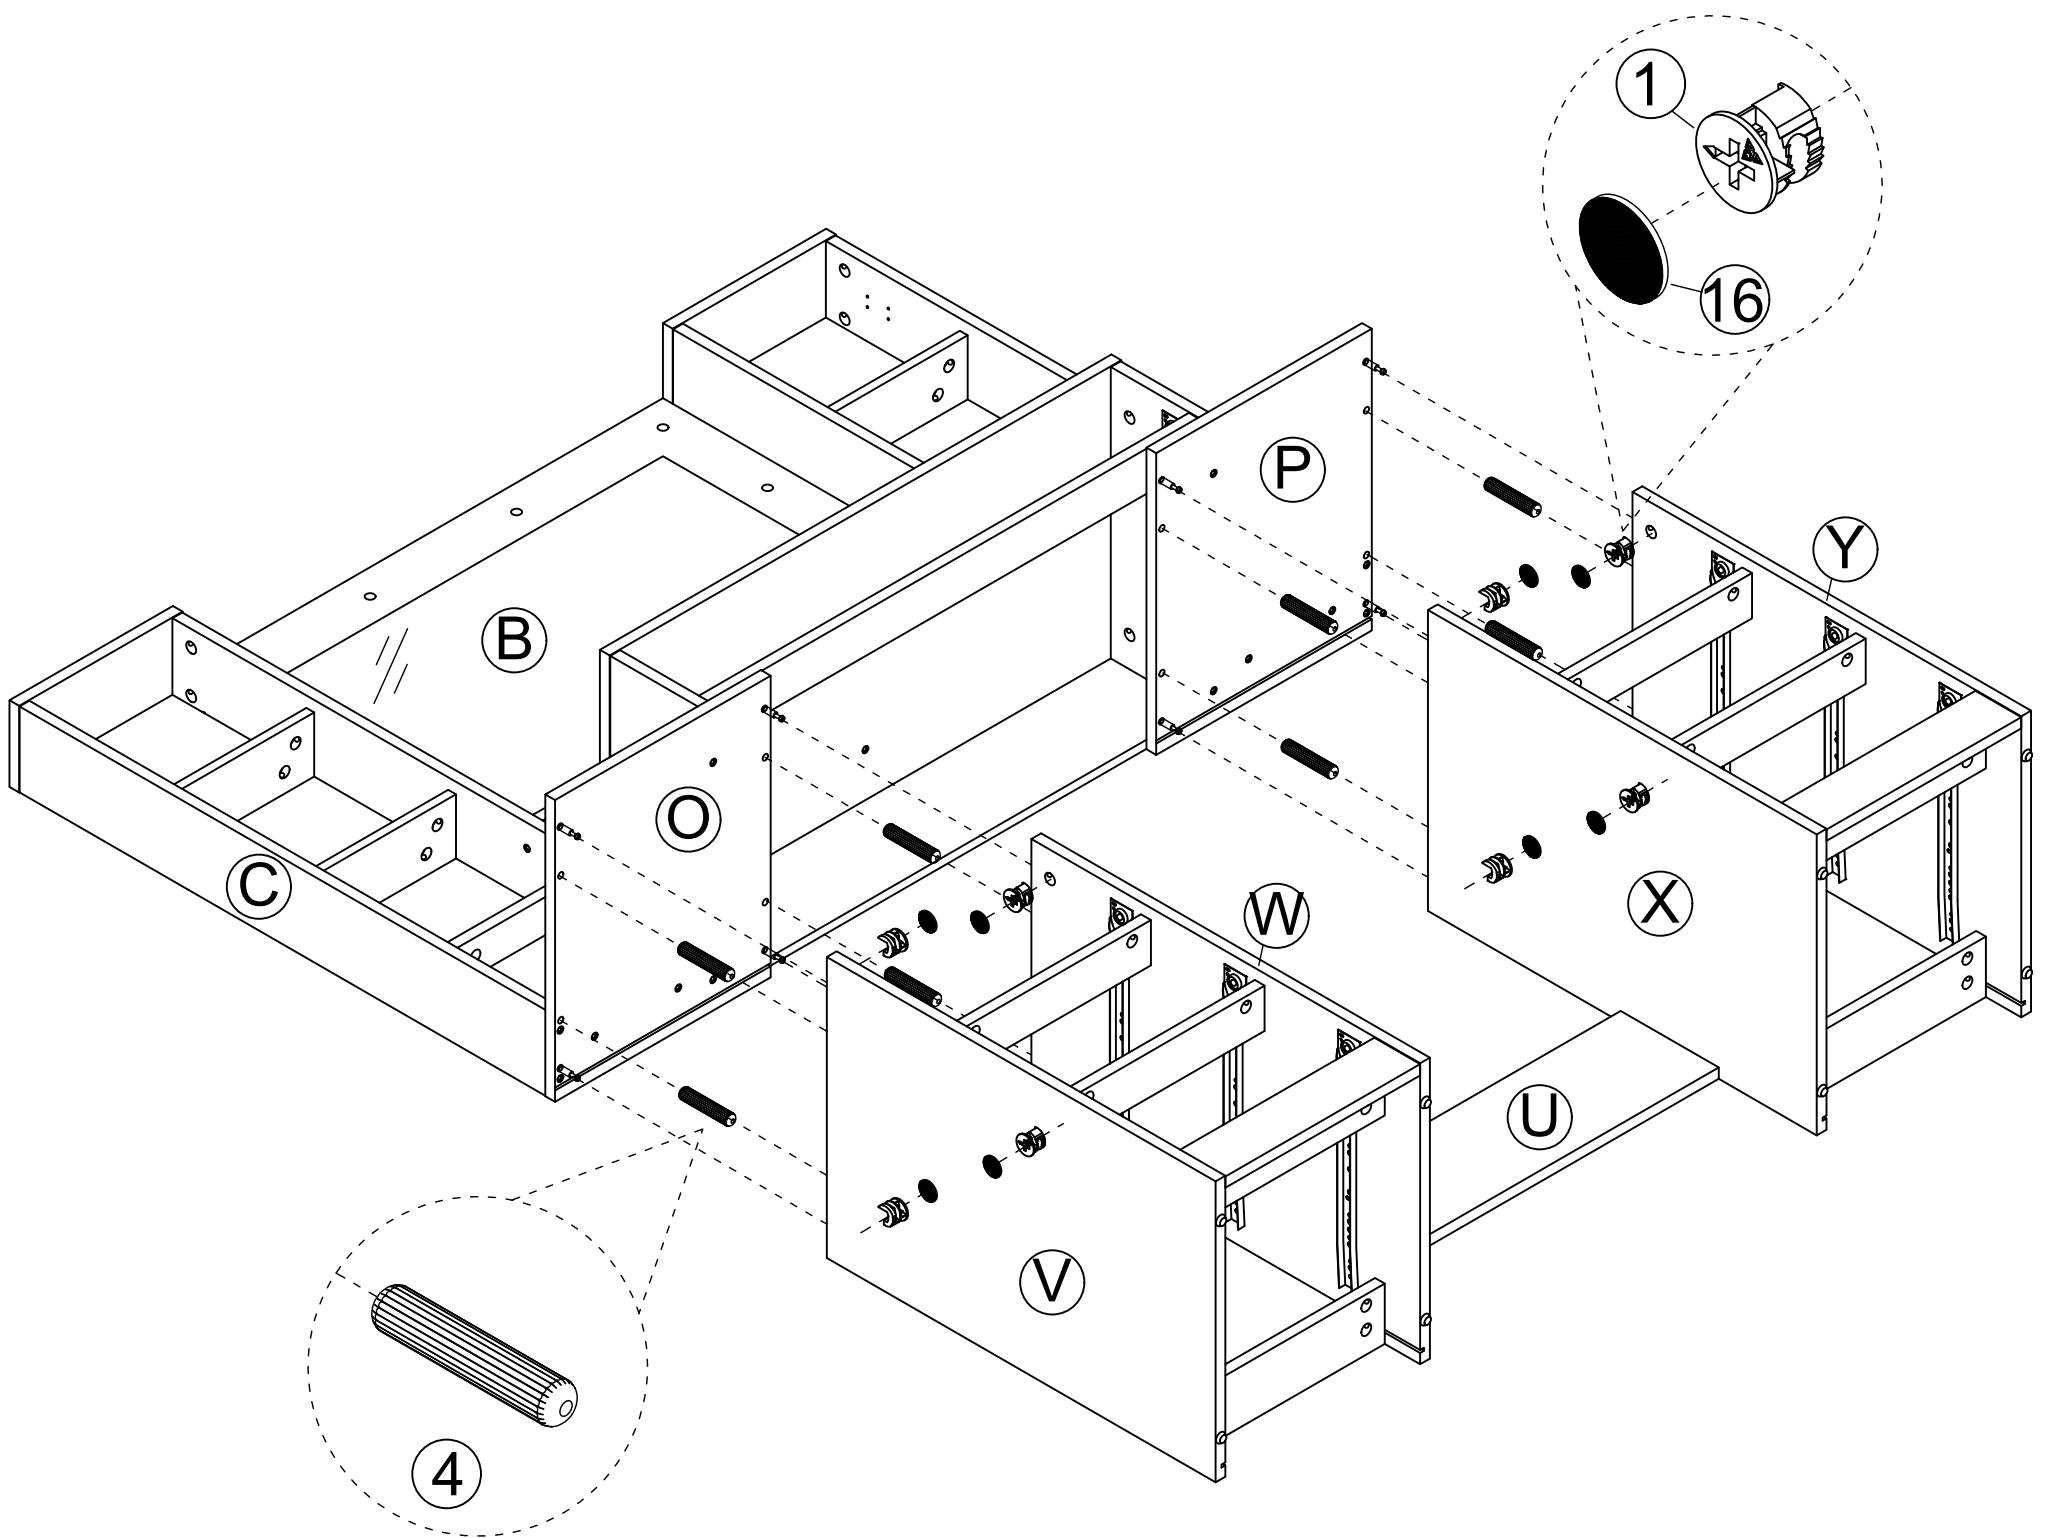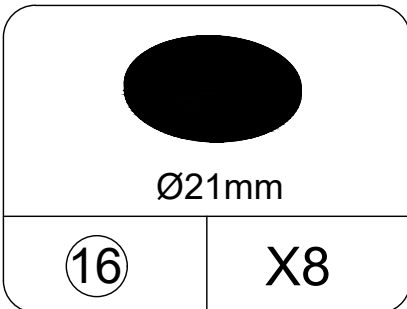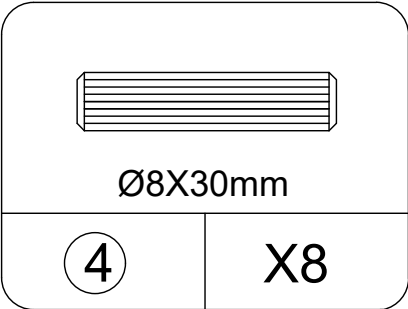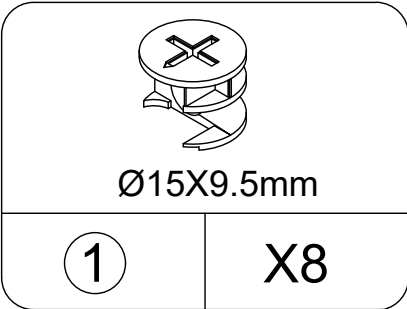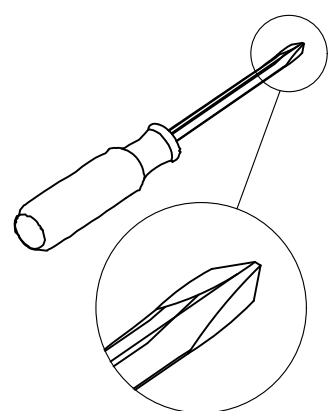







Insert the cam bolt into the hole first, then insert the cam lock and lock it.

After installing this step, one person is required to assist in lifting.


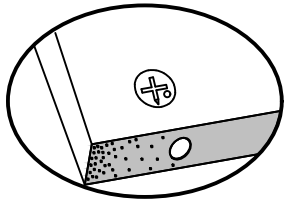
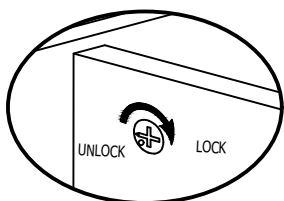


Proper orientation of CAM LOCK



STEP 23

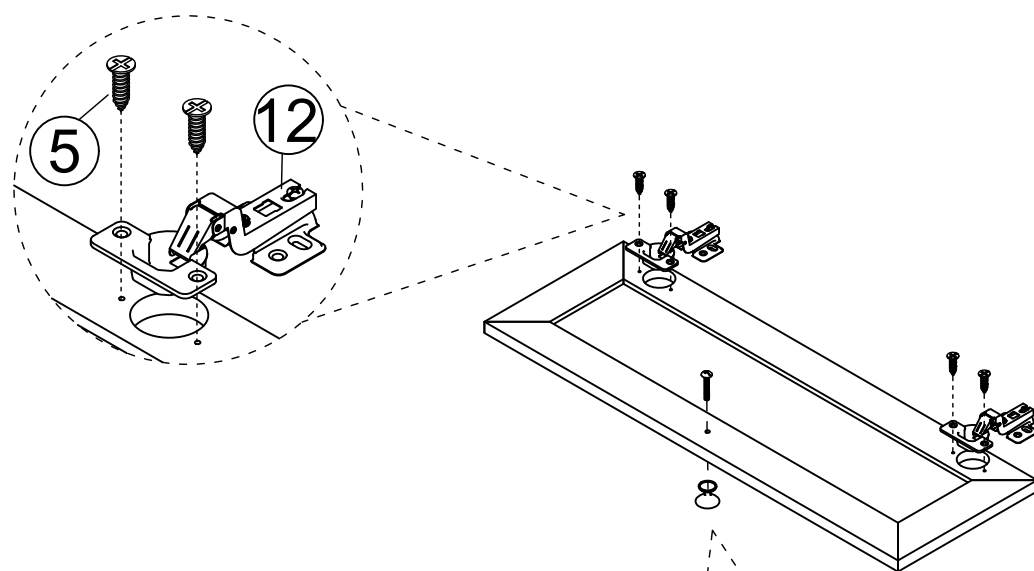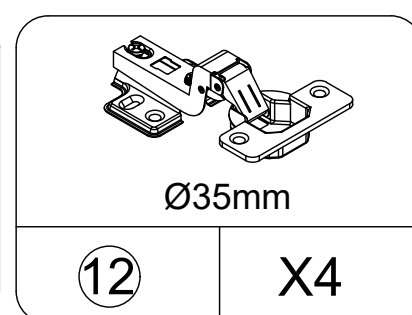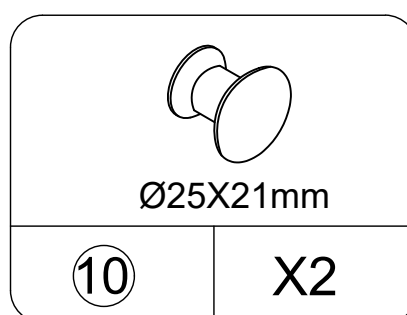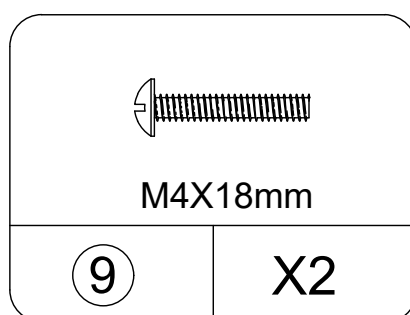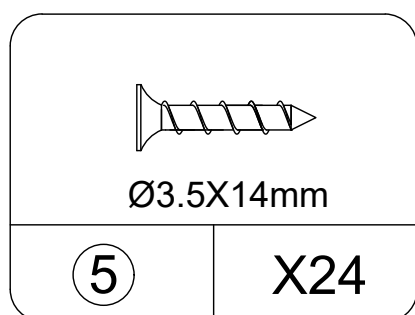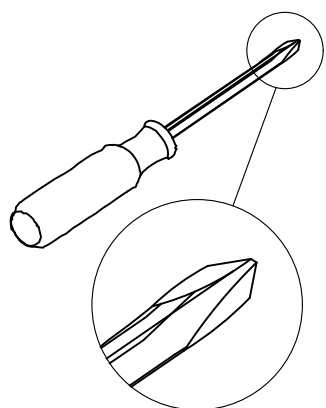


X2

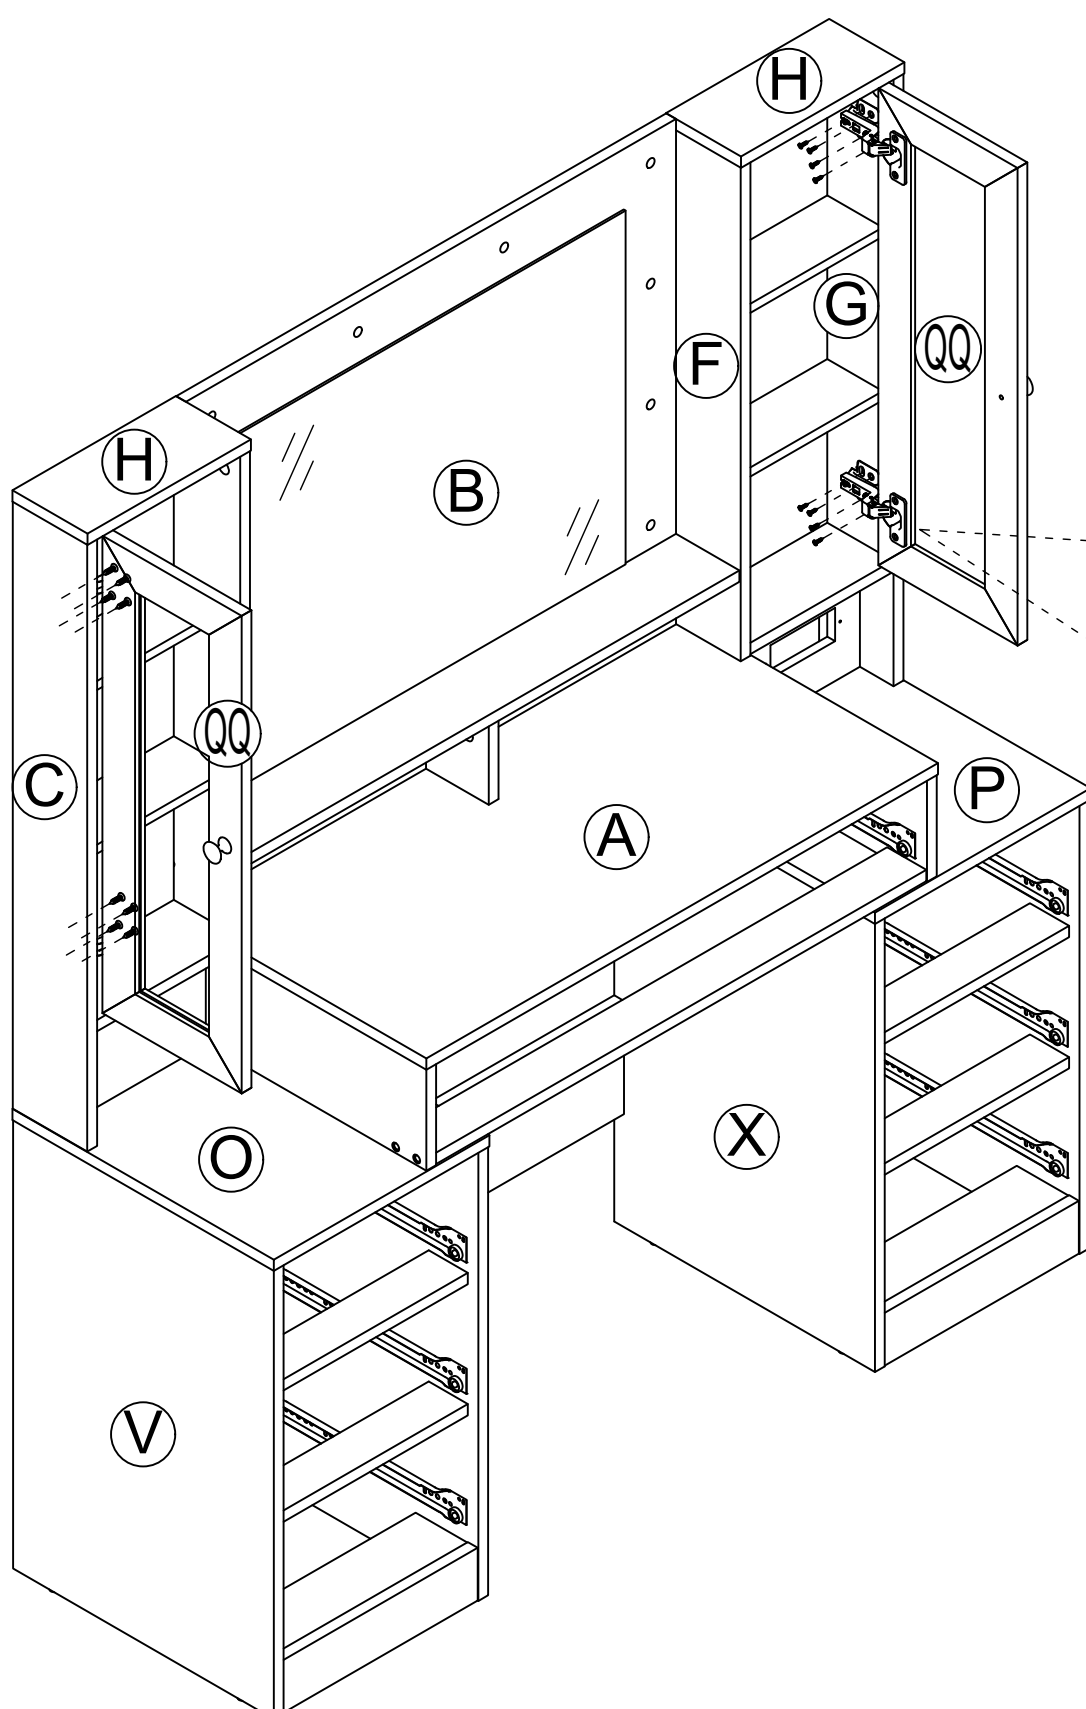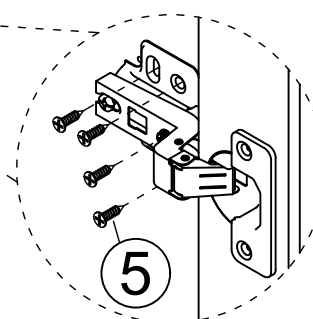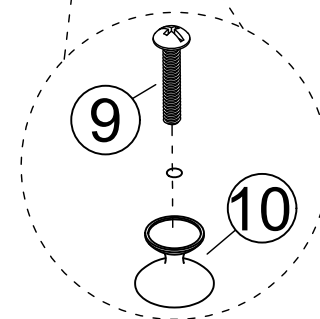


STEP24

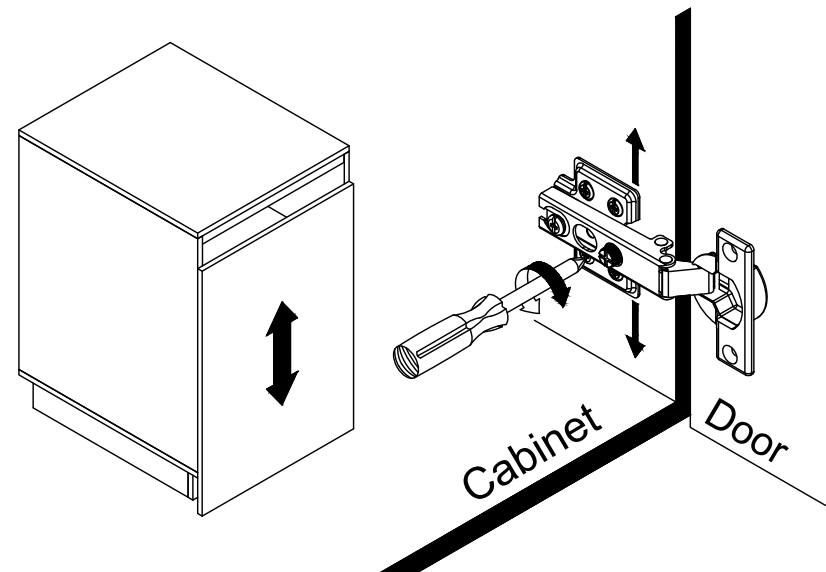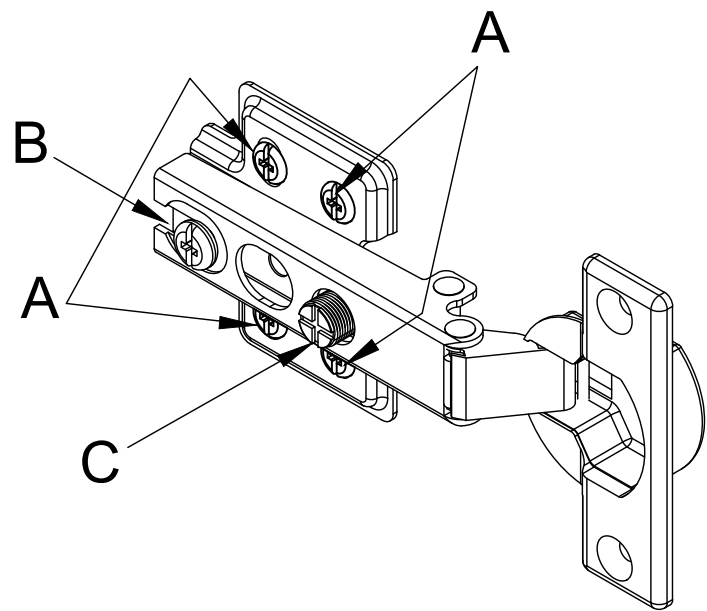

To adjust the vertical height.
Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.




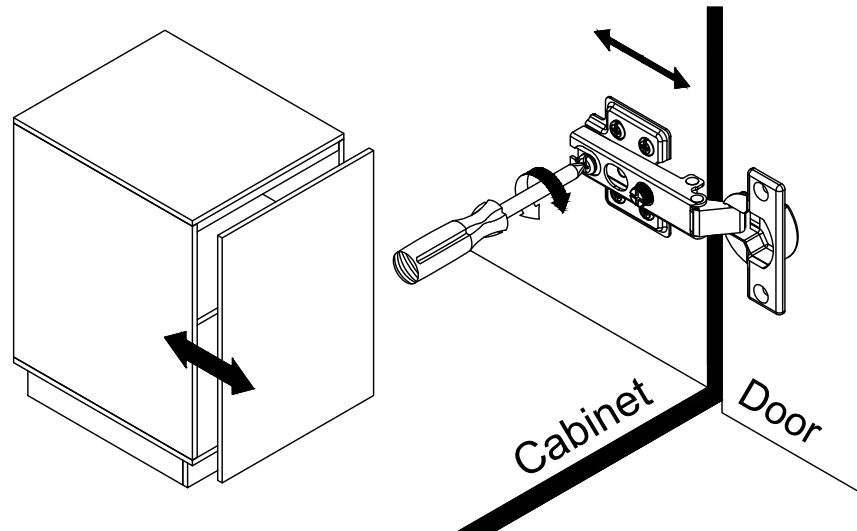



To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

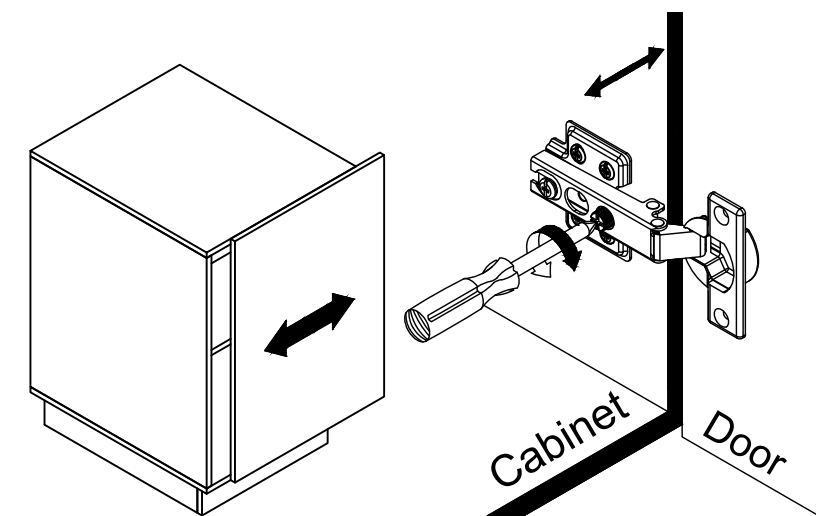



To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

STEP25

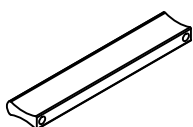
 Ø15X9.5mm		 Ø6.5X35mm		 Ø6X30mm		 Ø4X35mm	
1	X6	2	X6	3	X3	7	X6
				 M4X18mm		 106X16X8mm	
				9	X4	11	X2

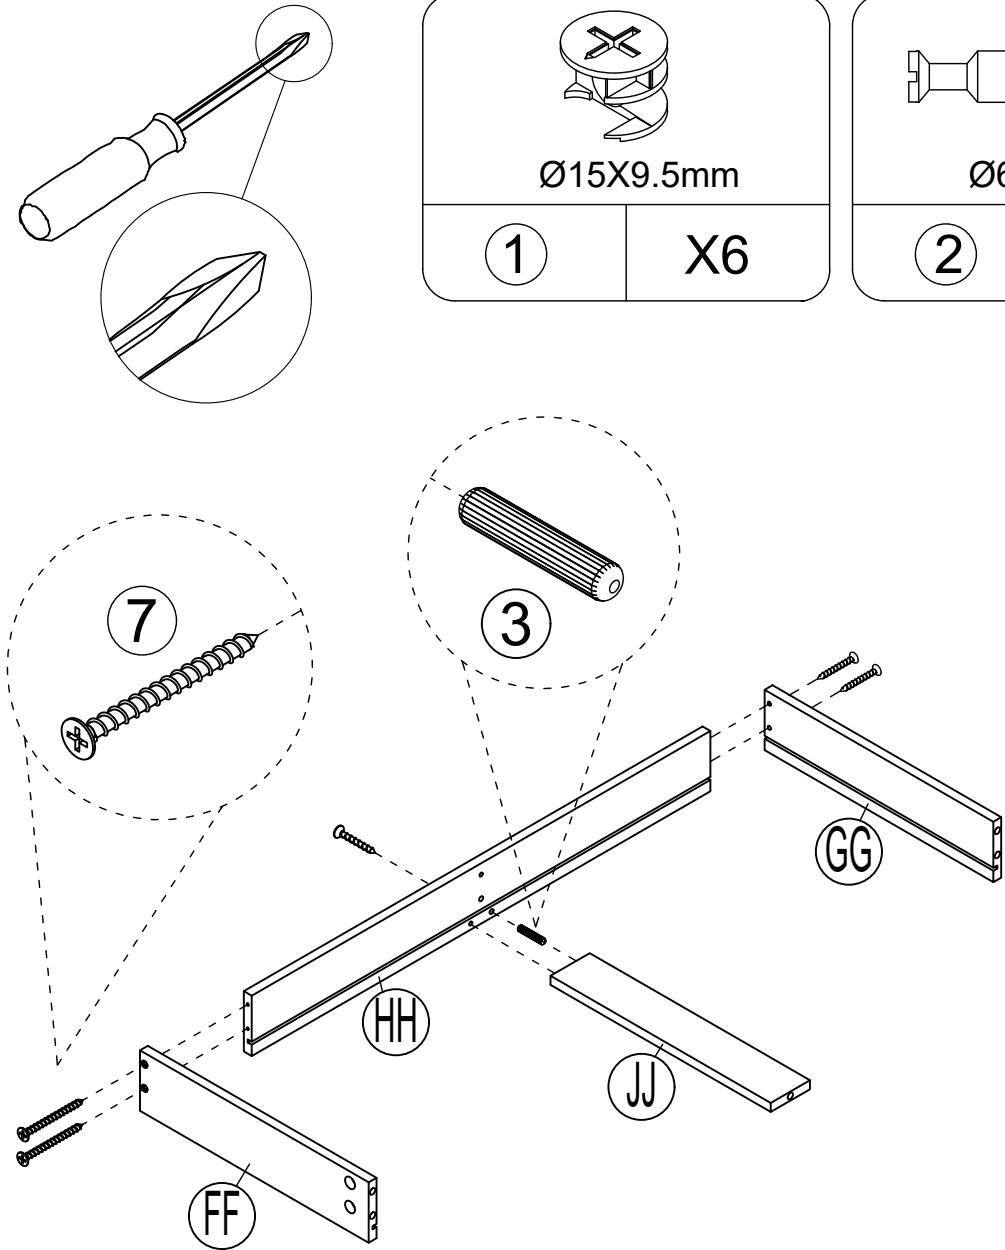




Step 1

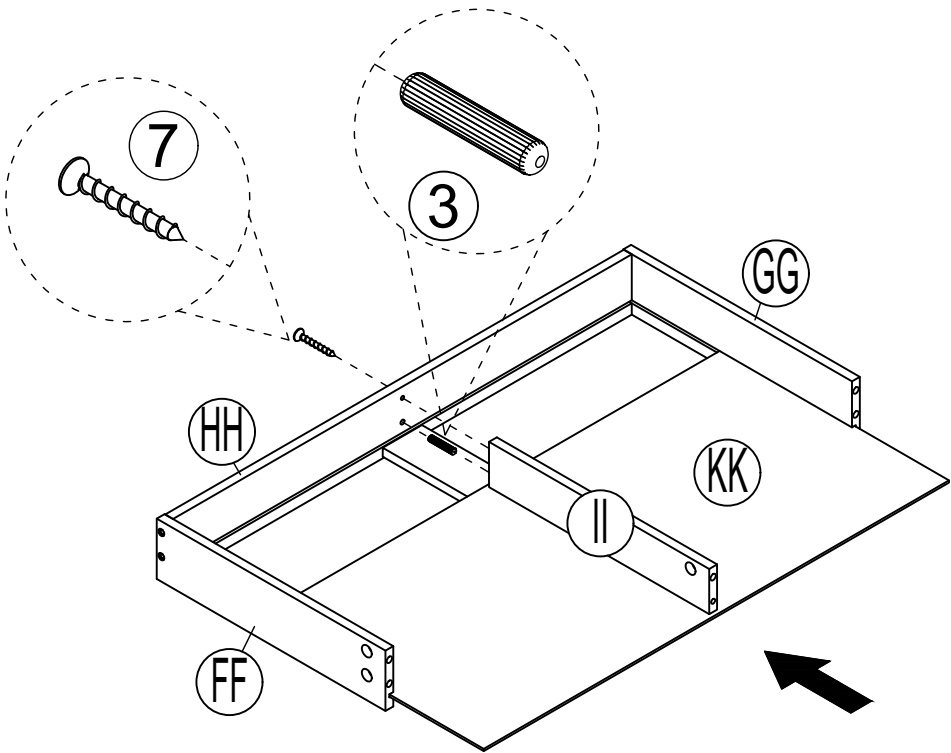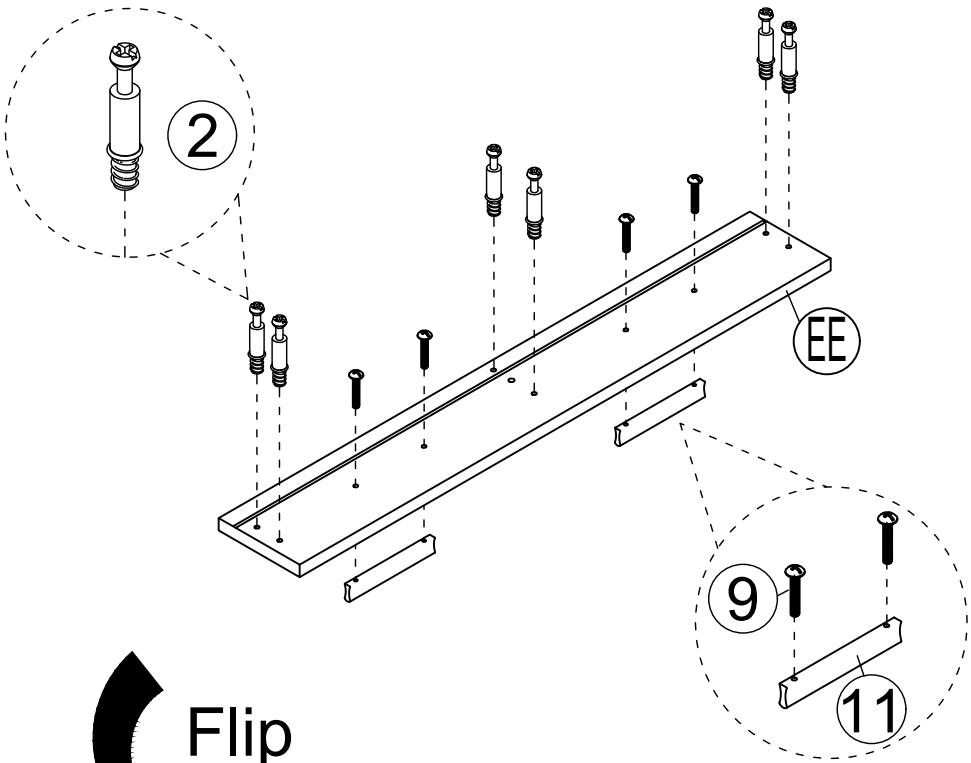

Step 2

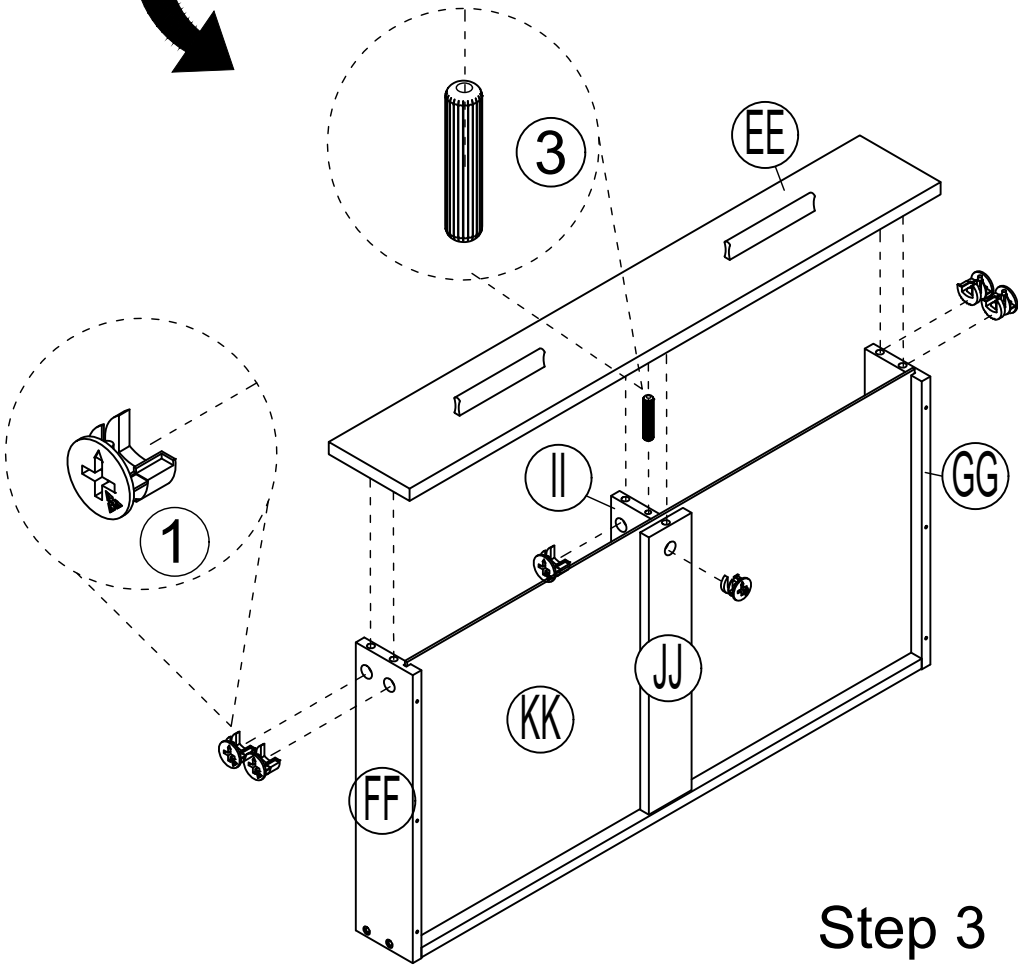


Step 3

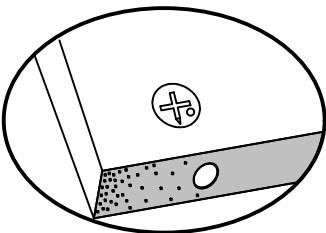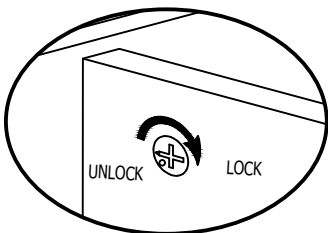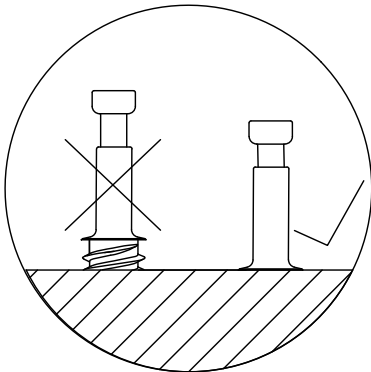

Proper orientation of CAM LOCK

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

STEP26

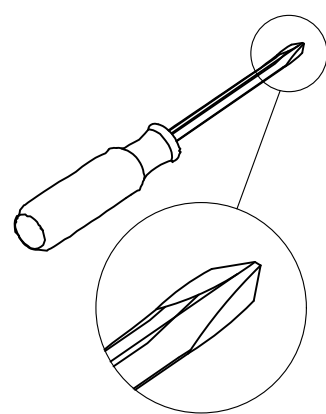




Ø15X9.5mm

1


X24



Ø6.5X35mm

2

X24



Ø4X35mm

7


X24



M4X18mm

9








X12



106X16X8mm

11

X6

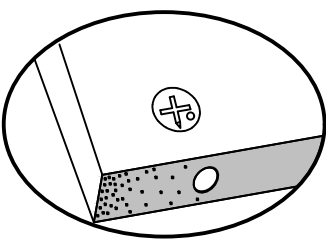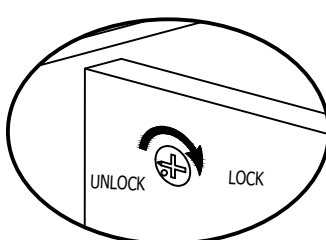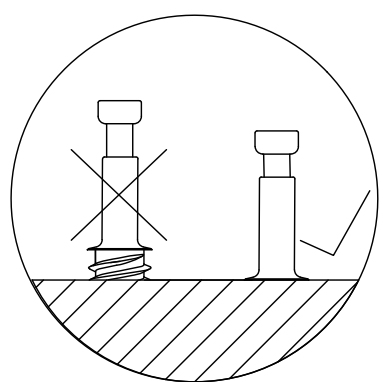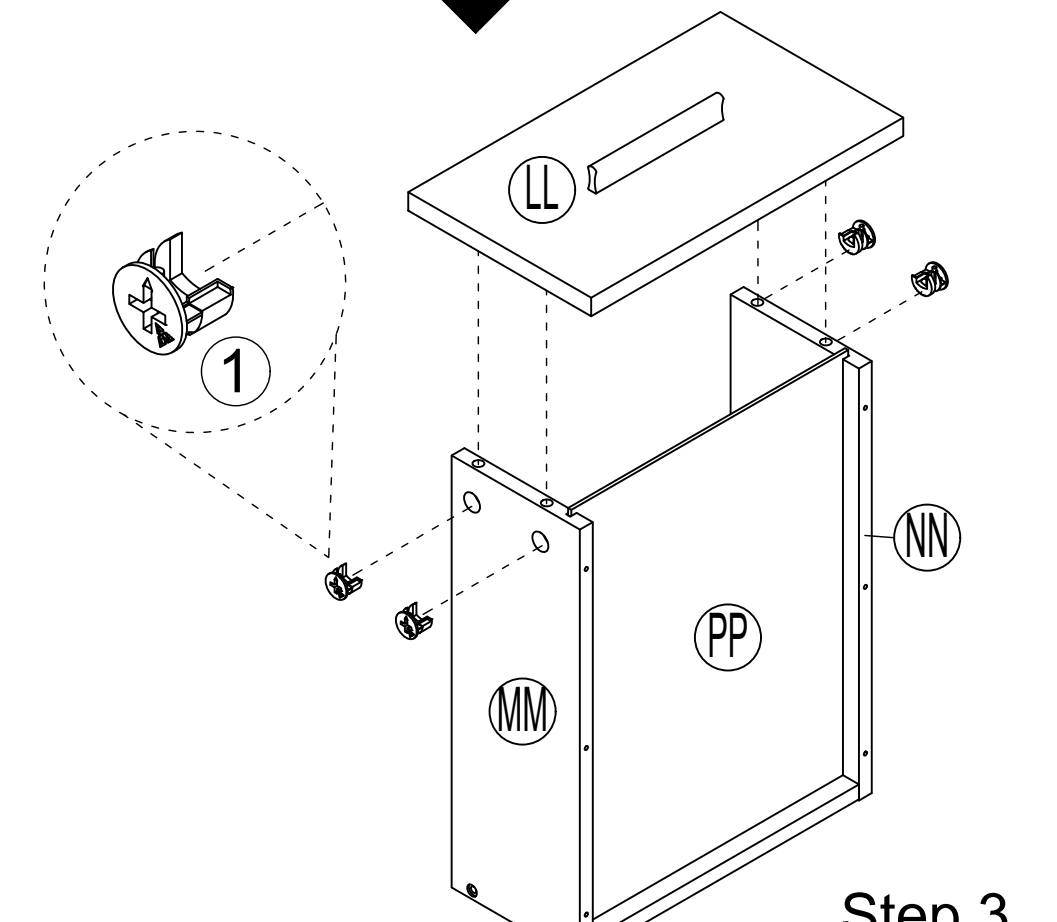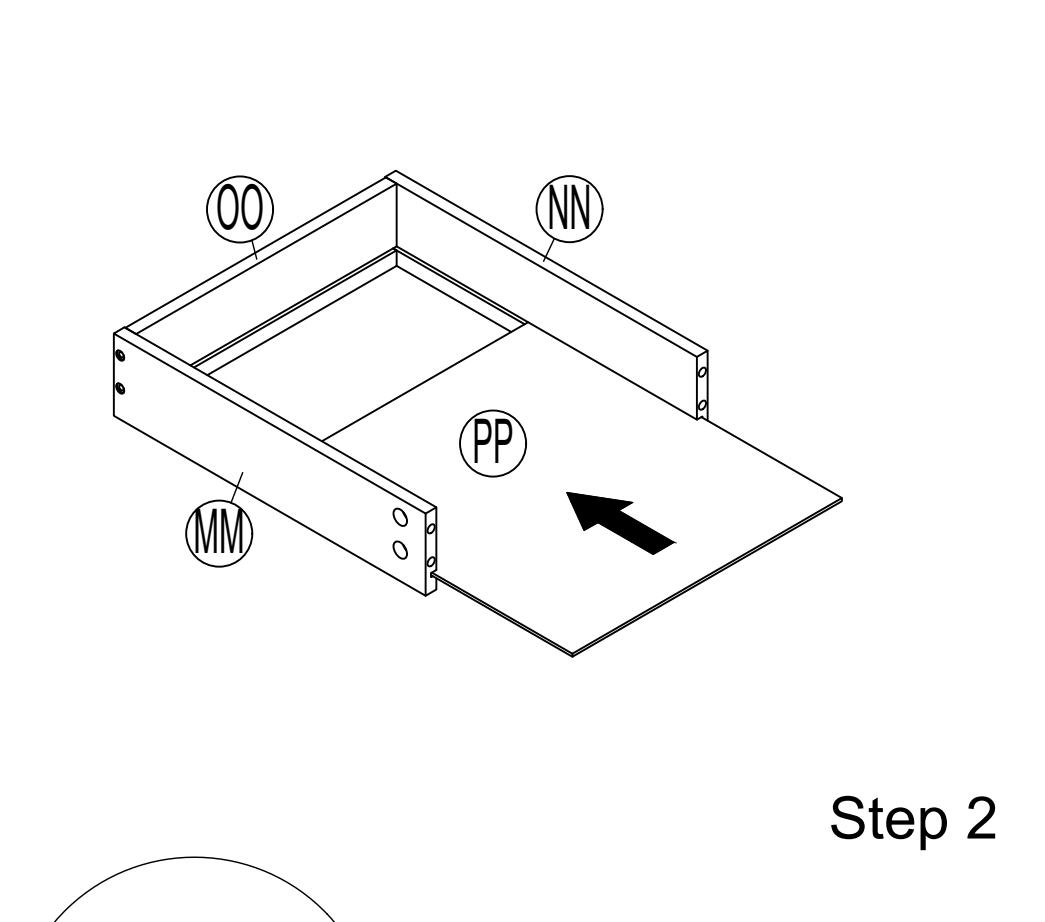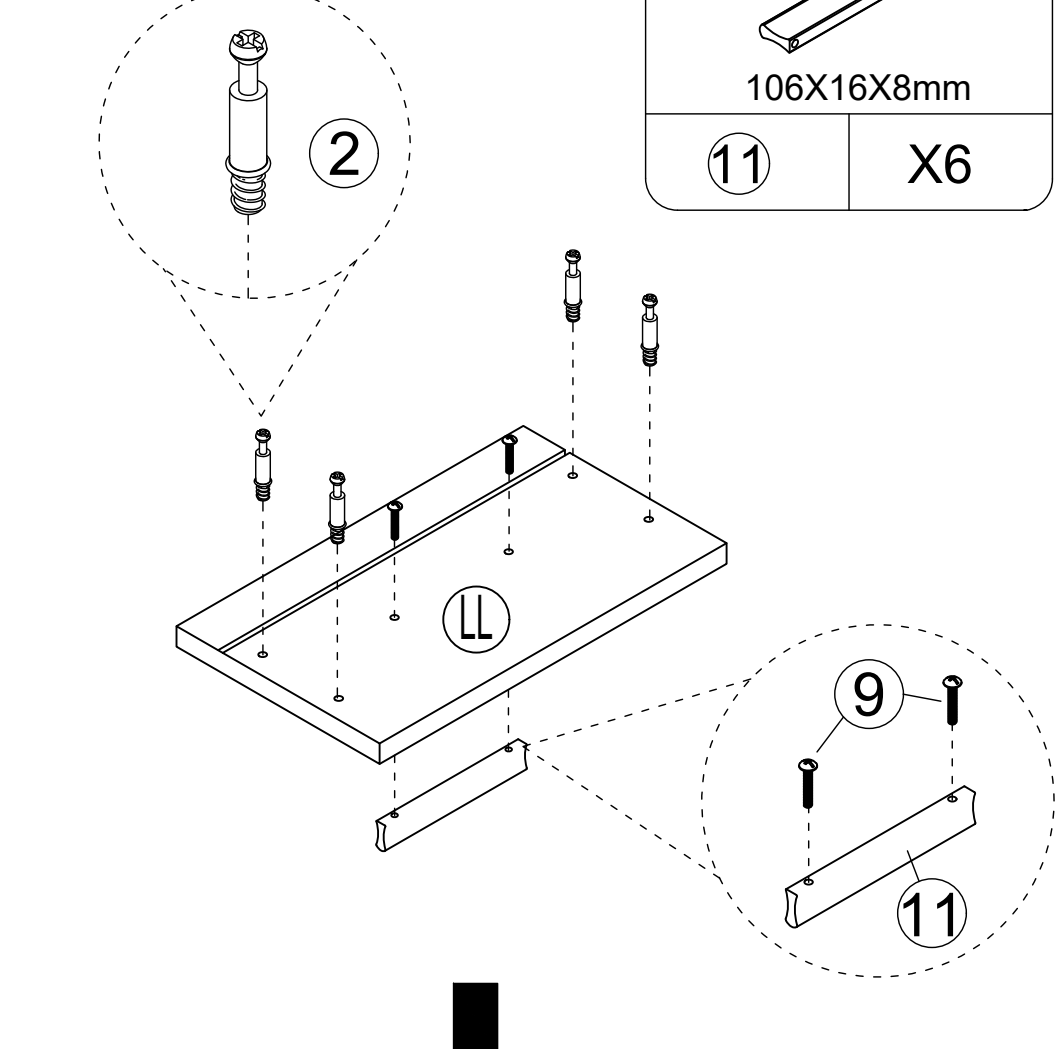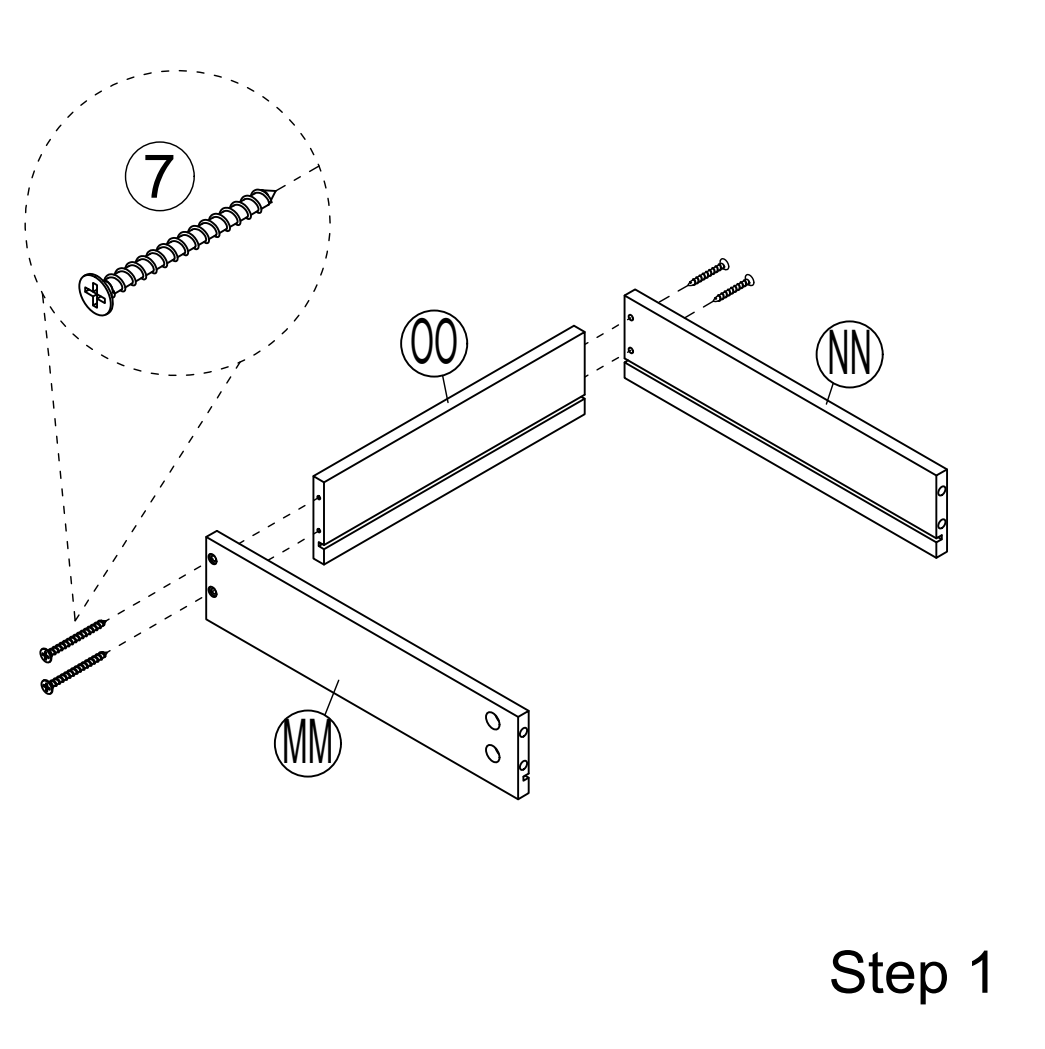



Proper orientation of CAM LOCK


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


X6


STEP27

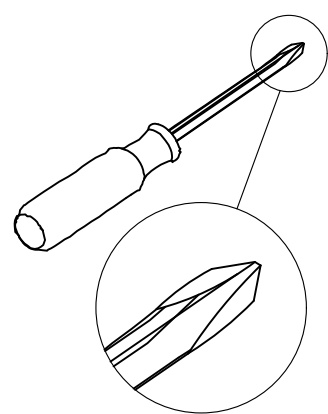


 Ø3.5X14mm	
⑤	X6

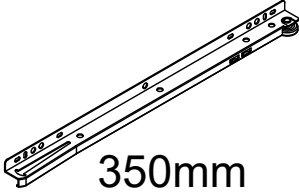
 350mm	
13DR	X1

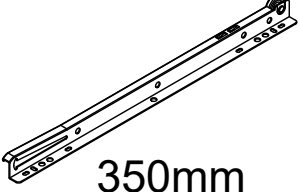
 350mm	
13DL	X1

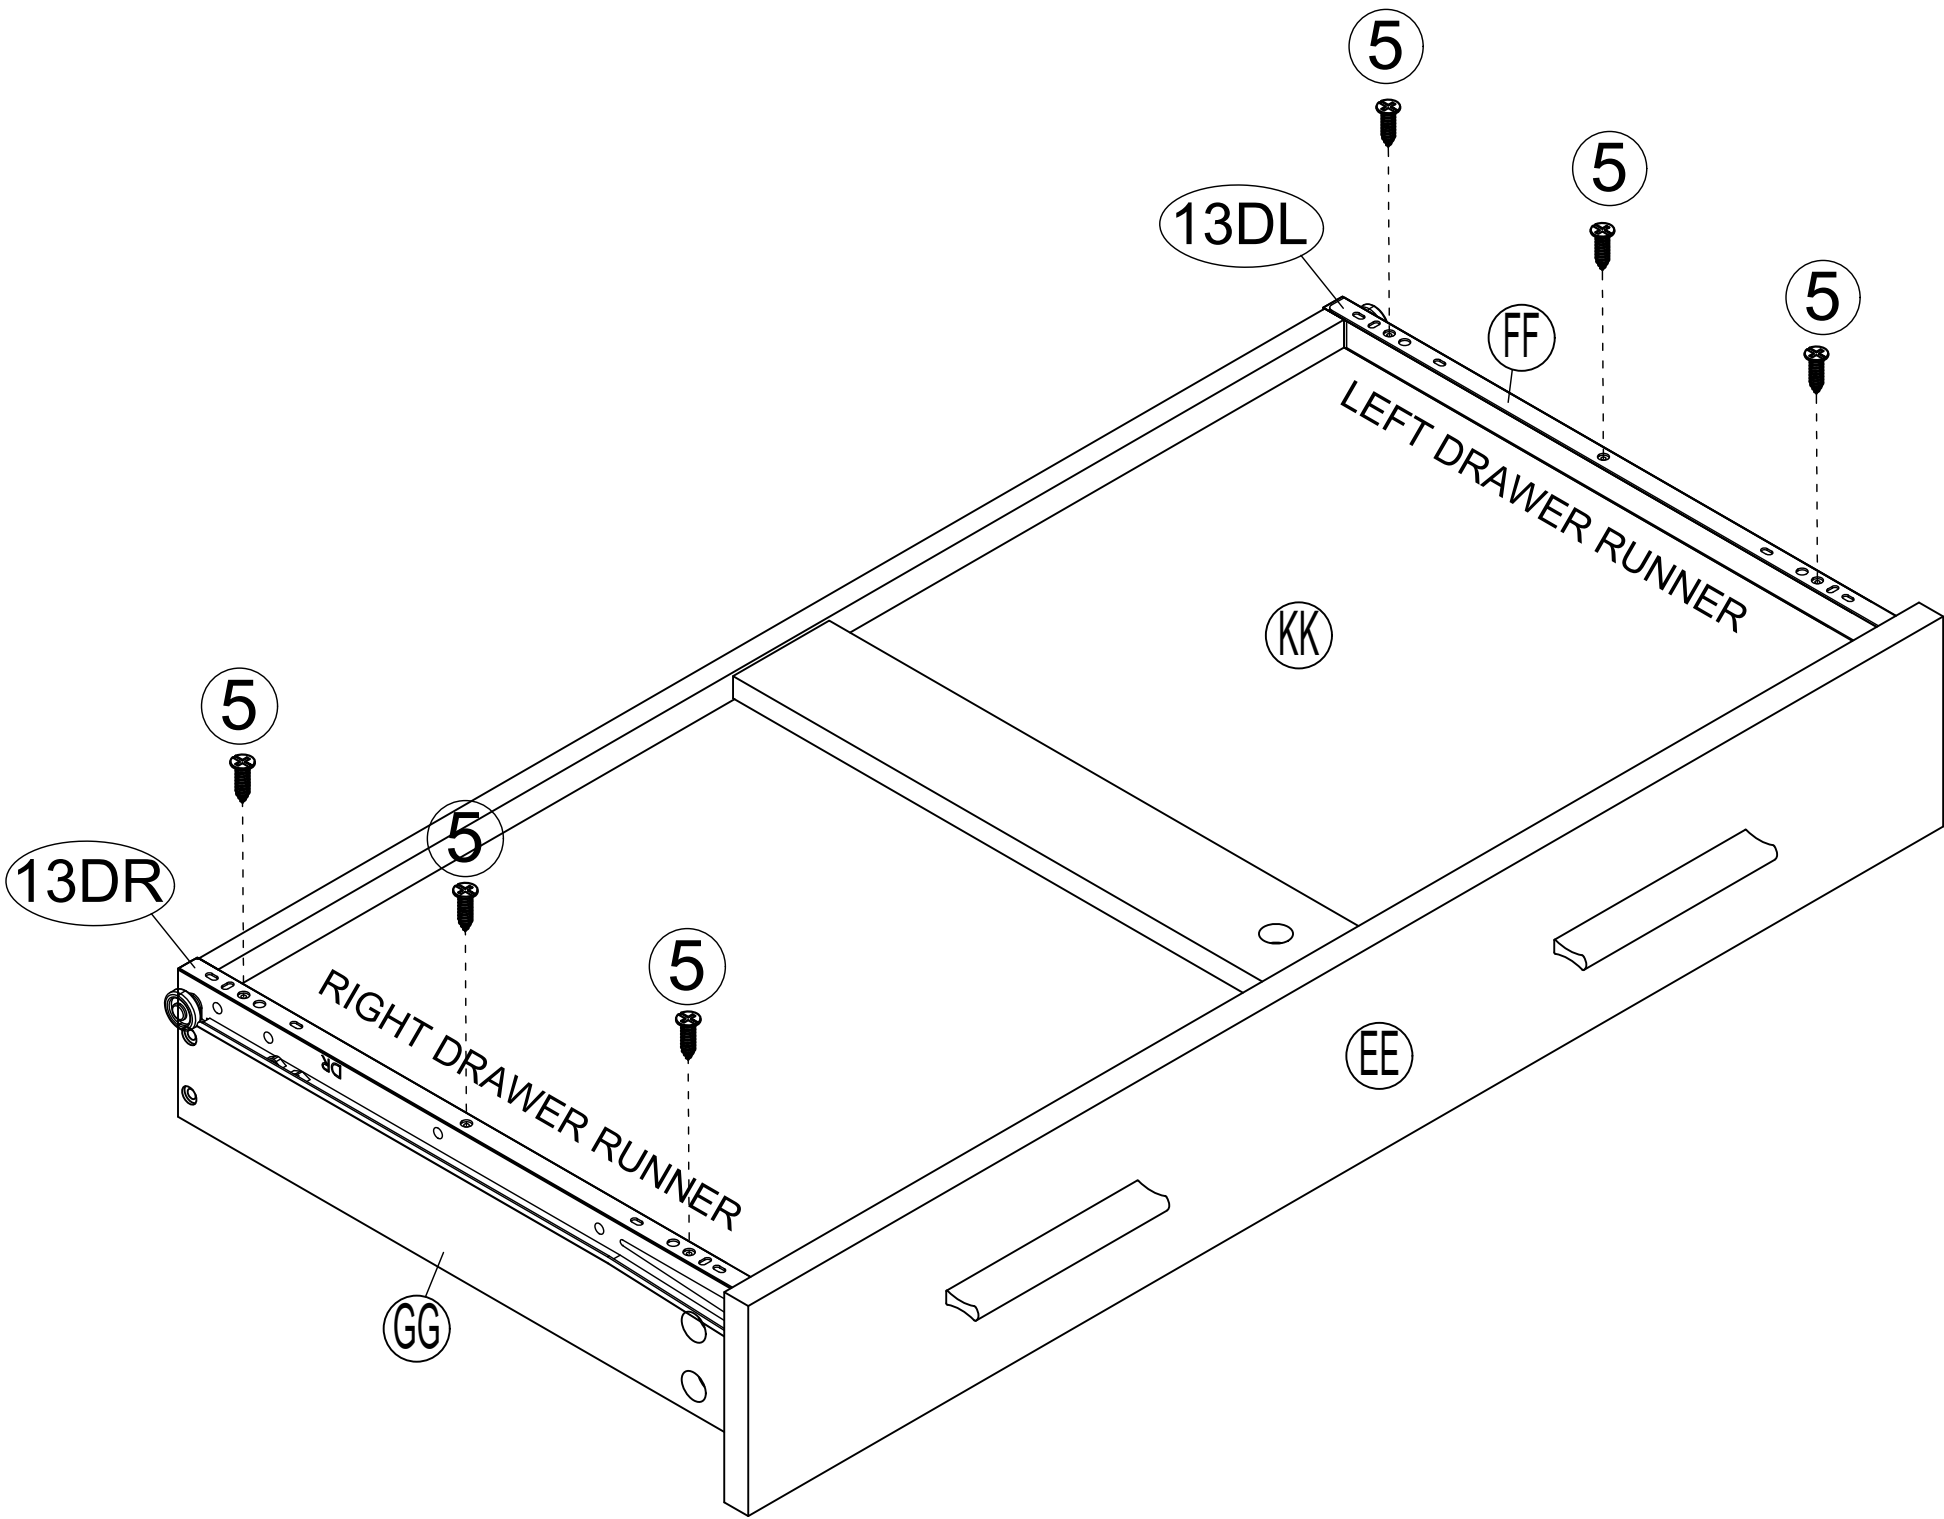



STEP28

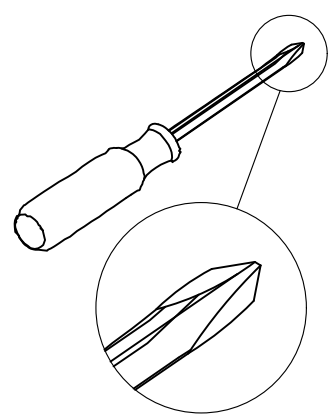

 Ø3.5X14mm	
5	X36





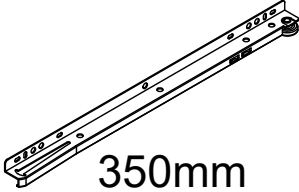
 350mm	
13DR	X6

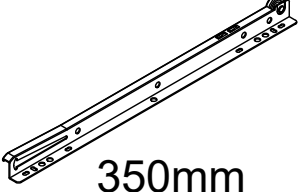 350mm	
13DL	X6

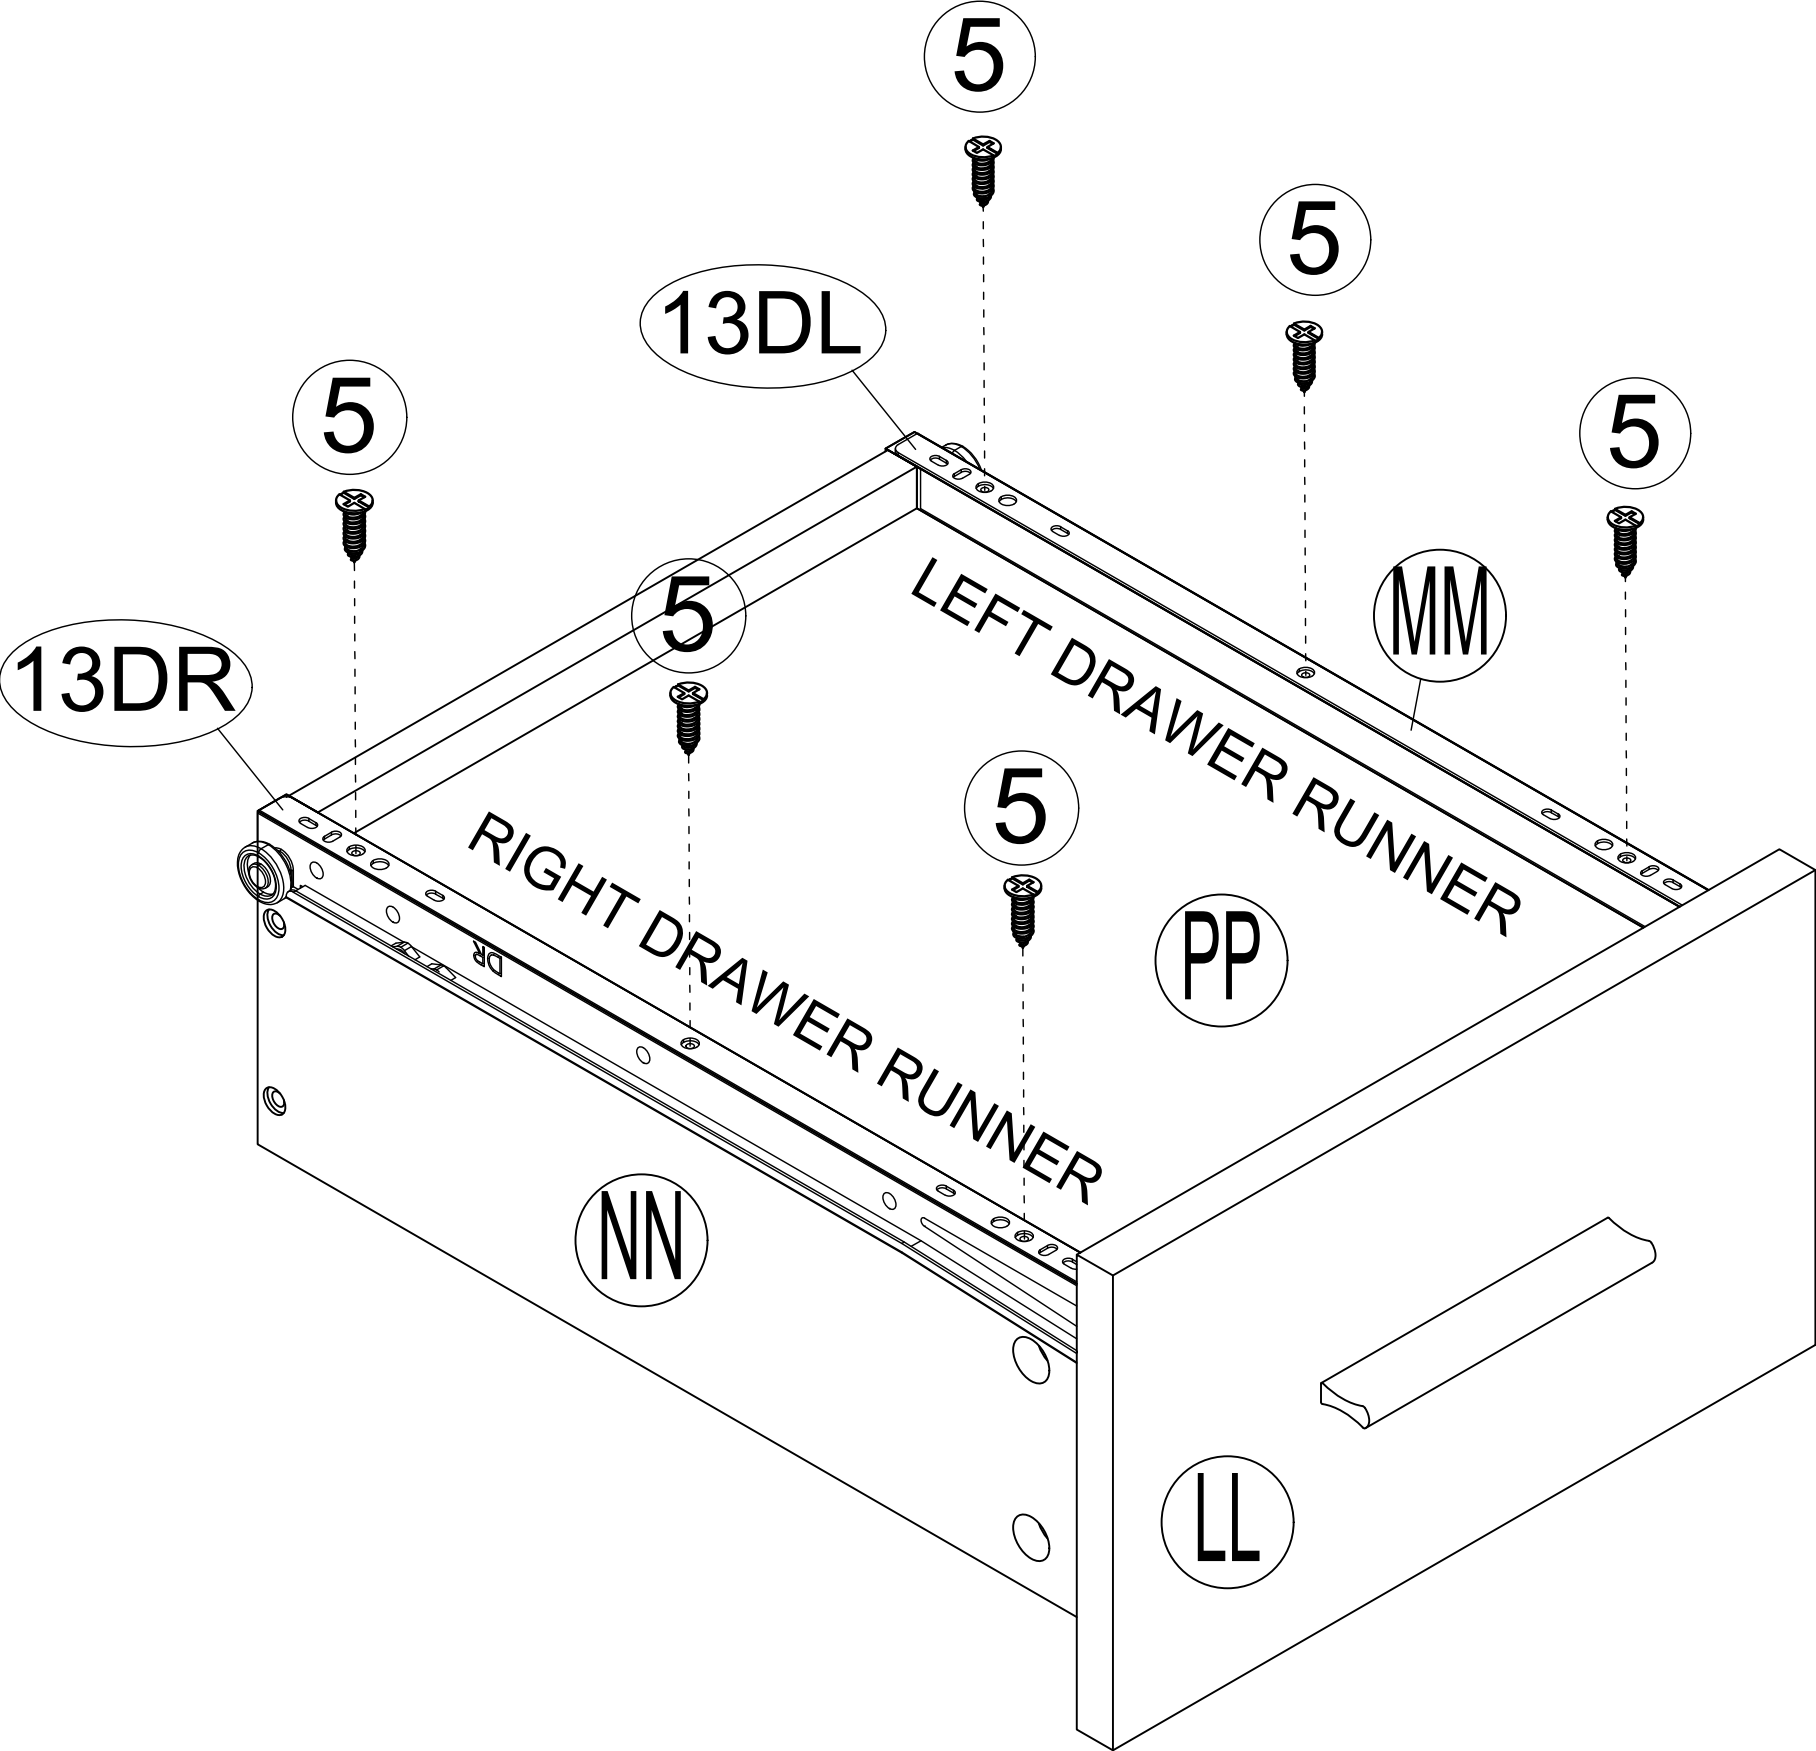


X6

STEP29

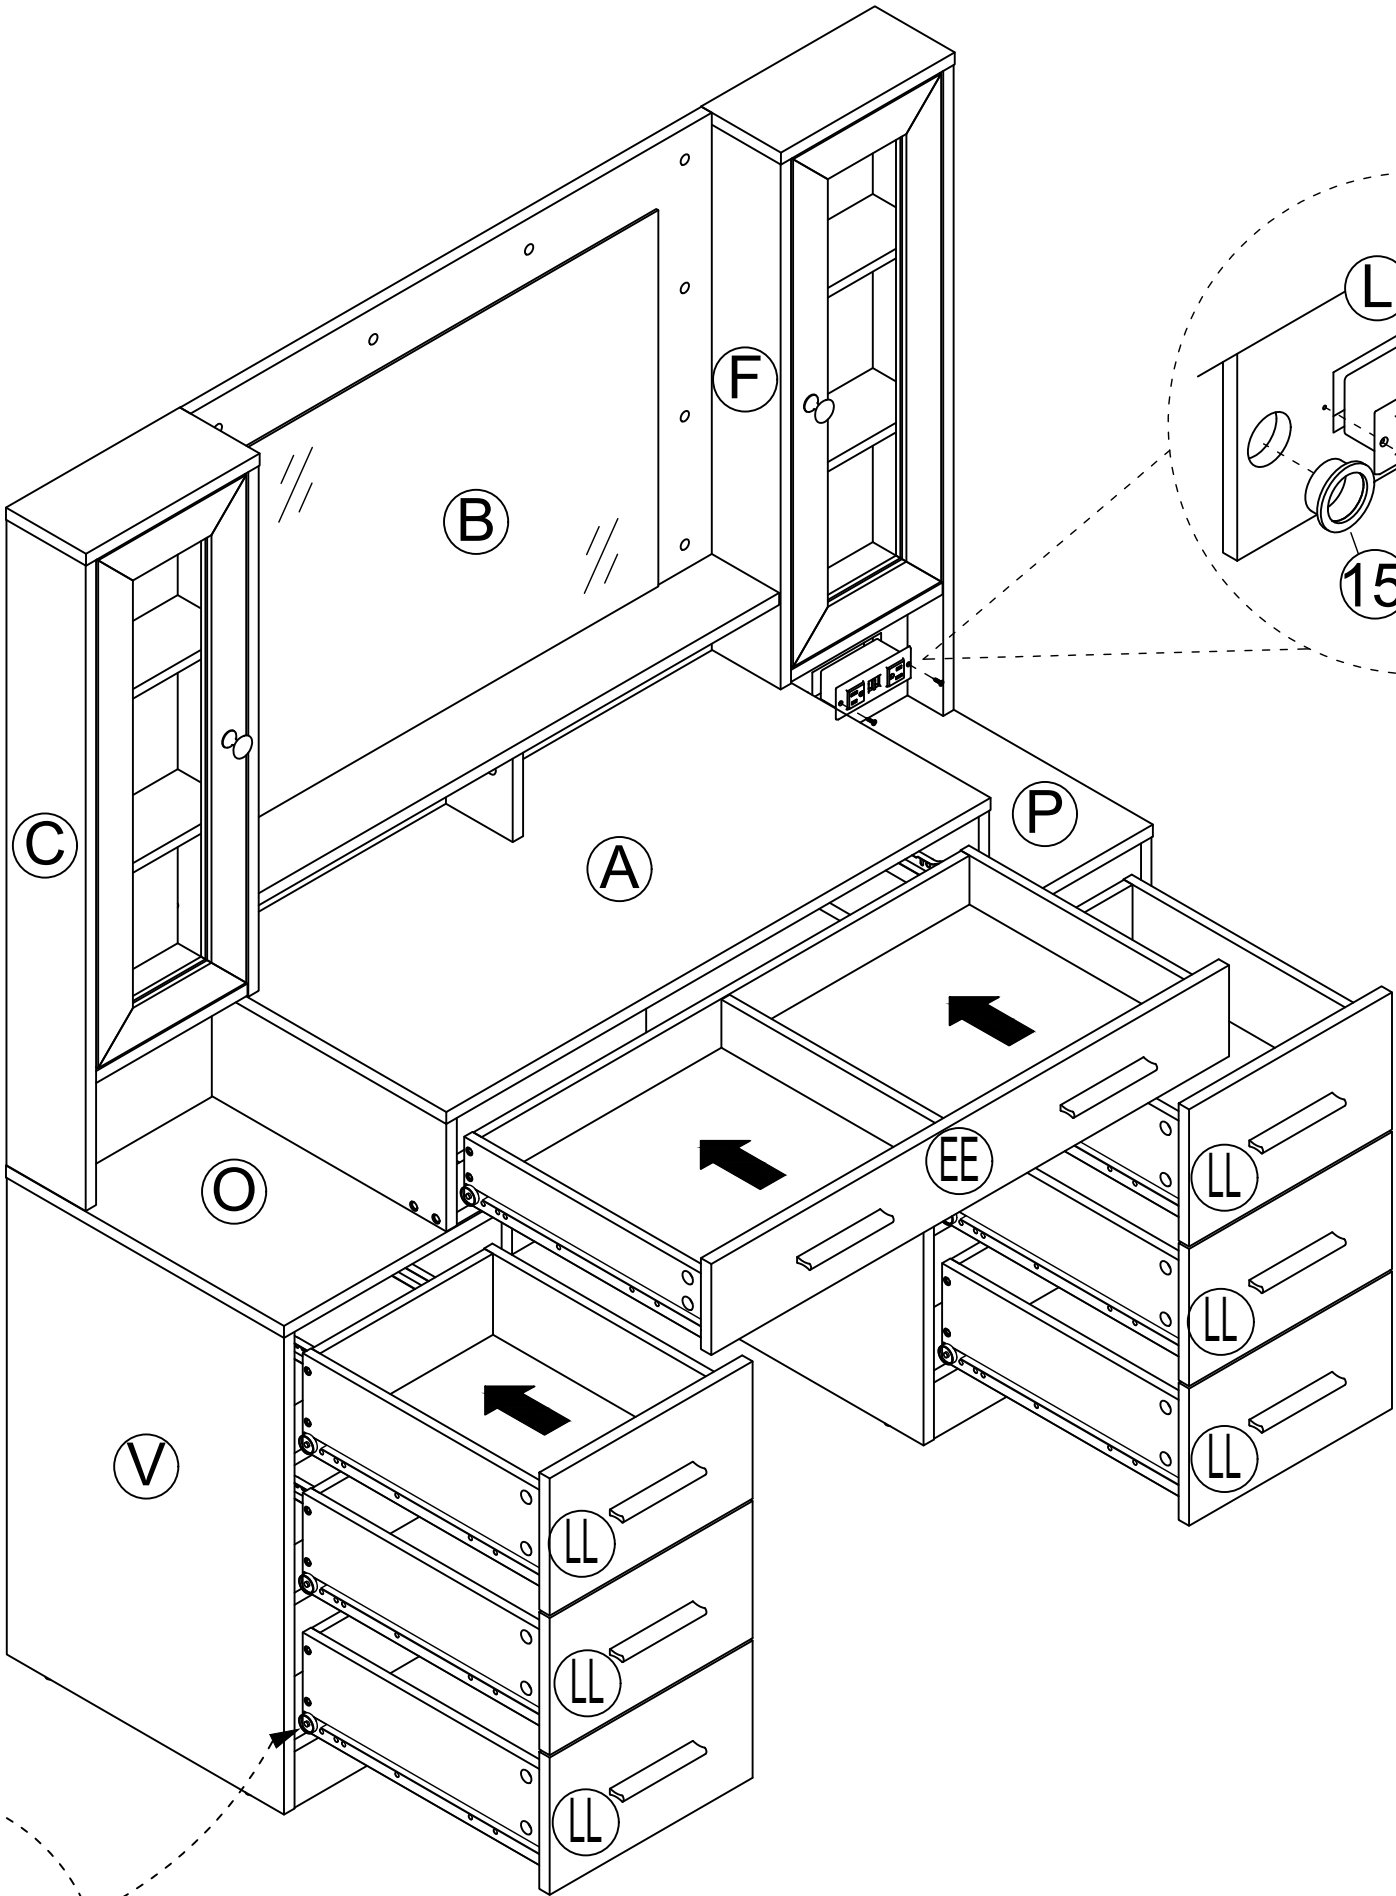
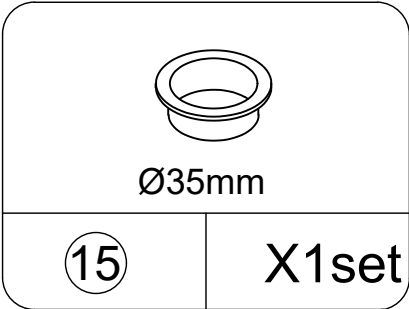
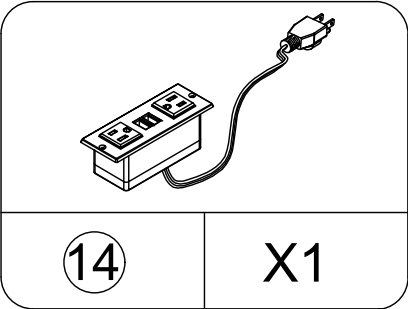
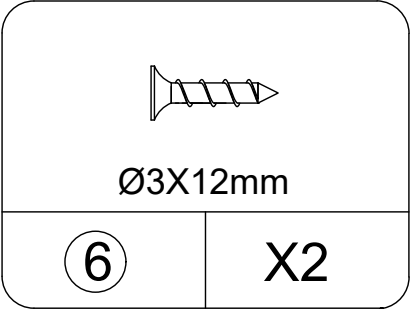
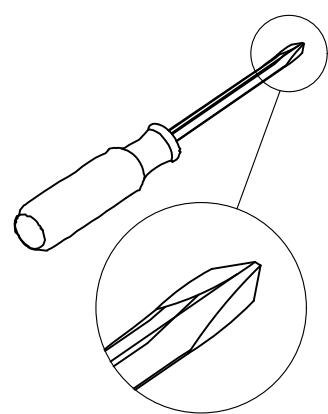


Cabinet Slide

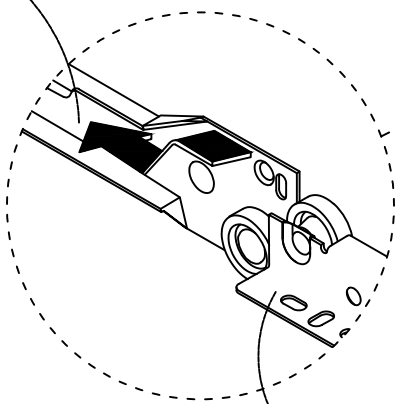

Drawer Slide

STEP30

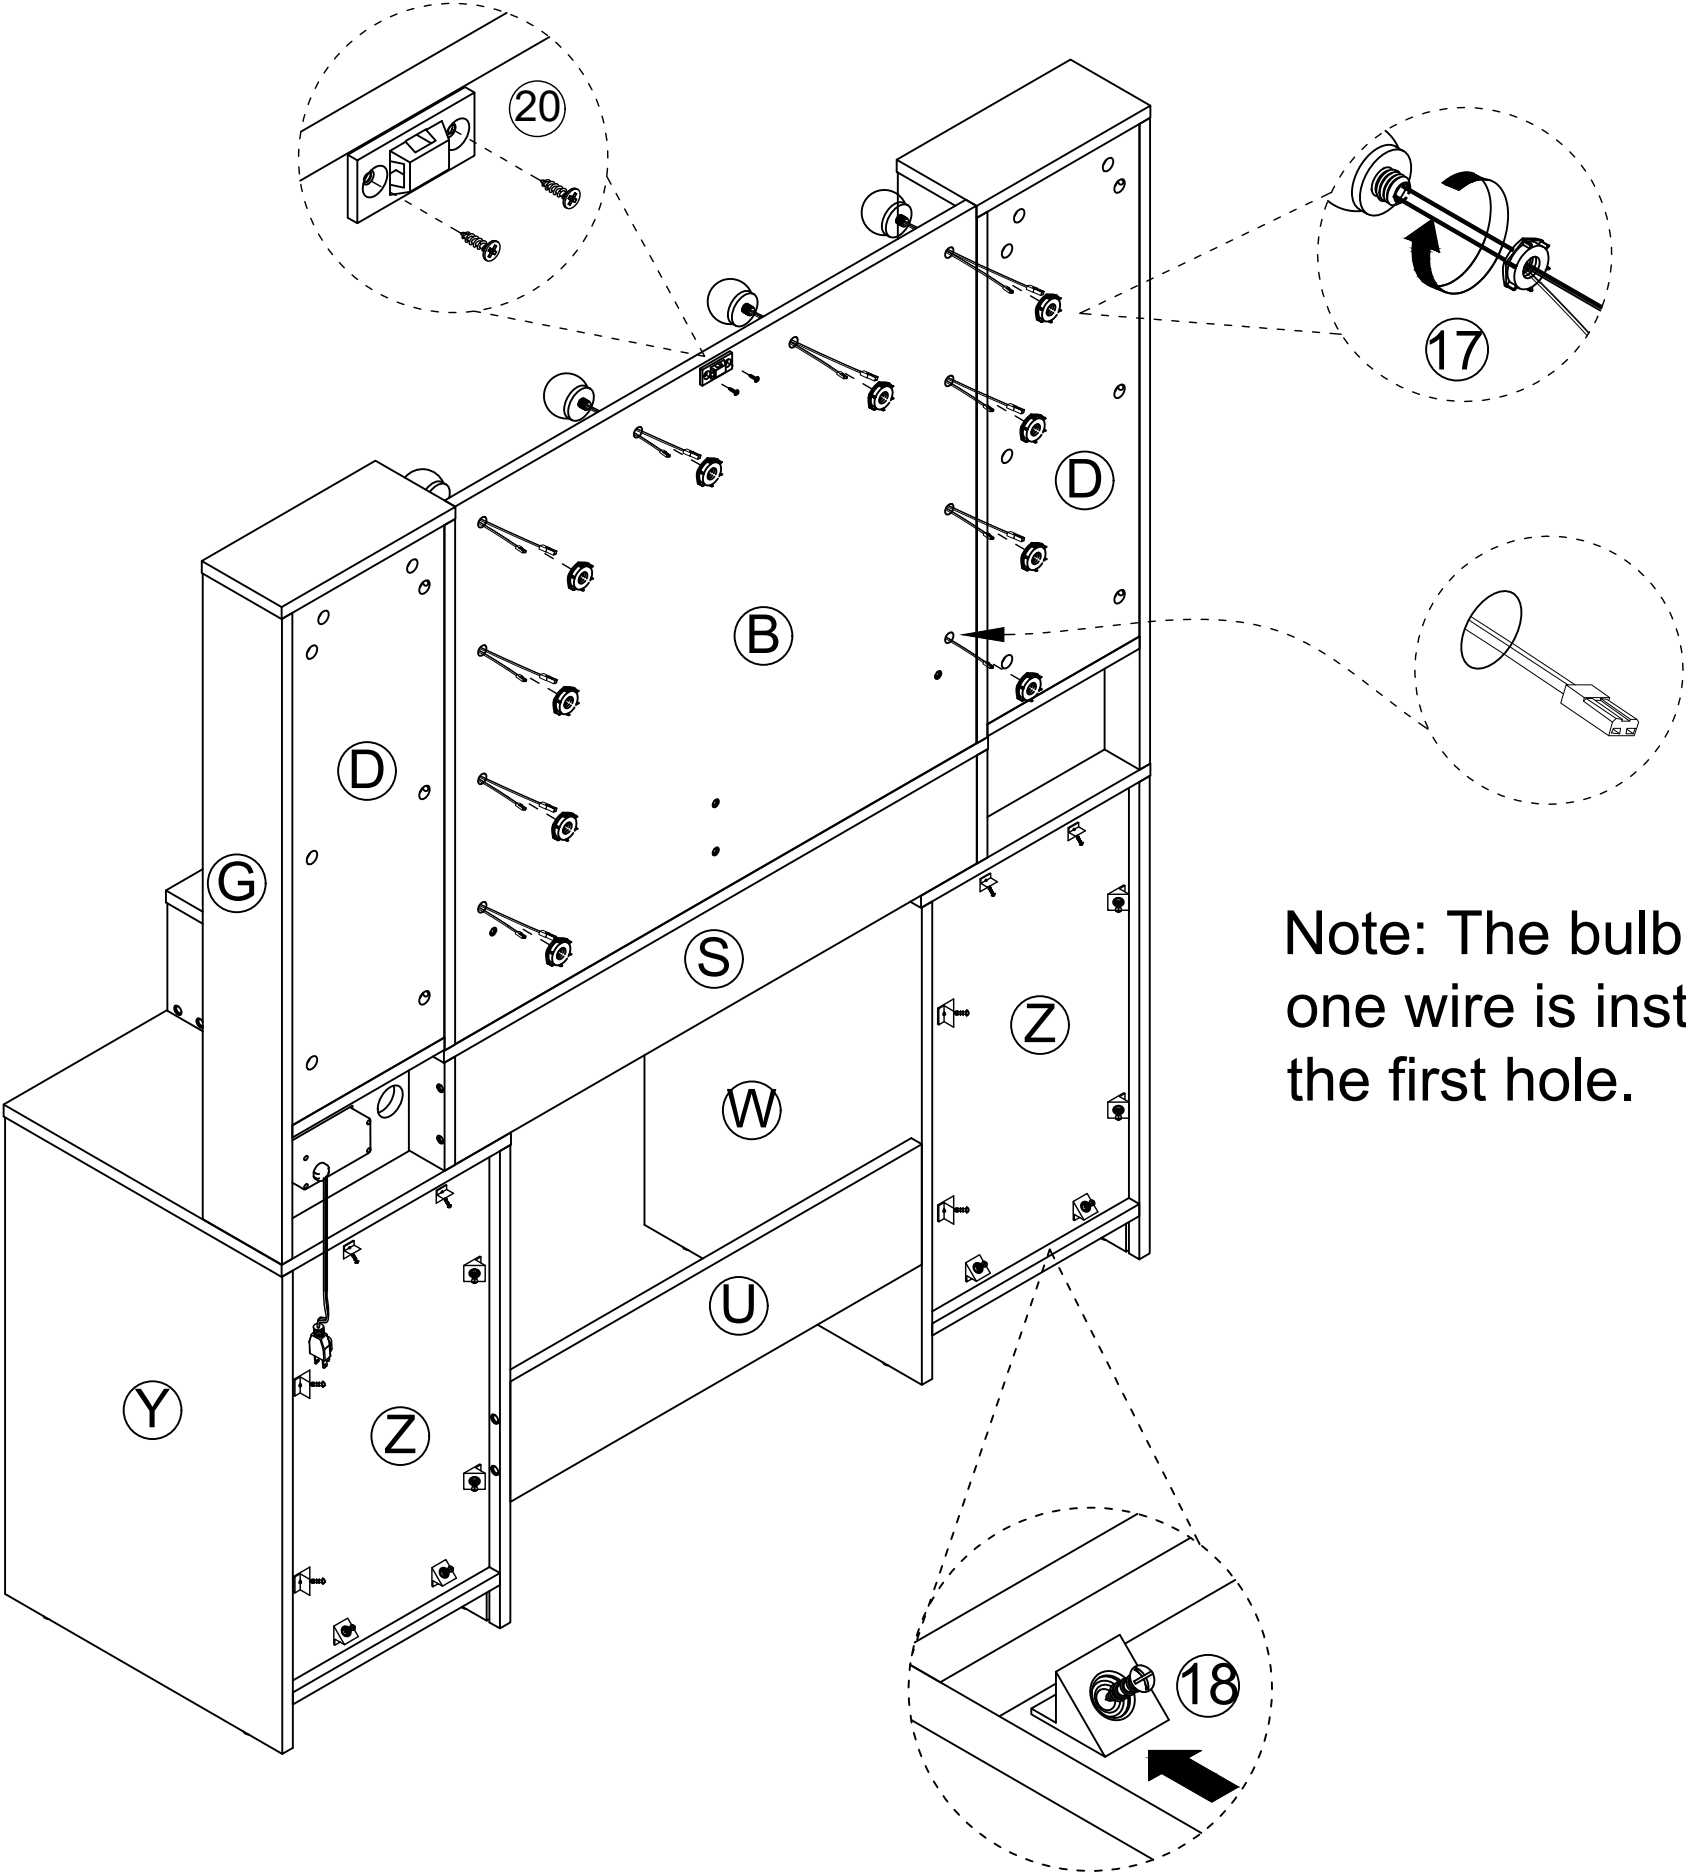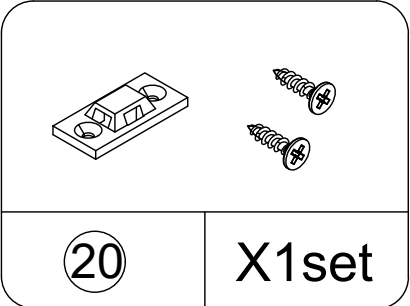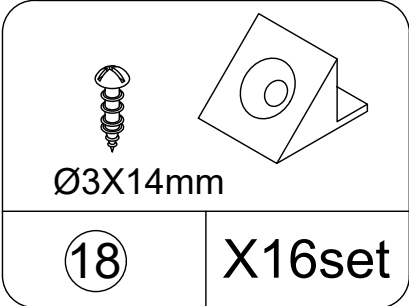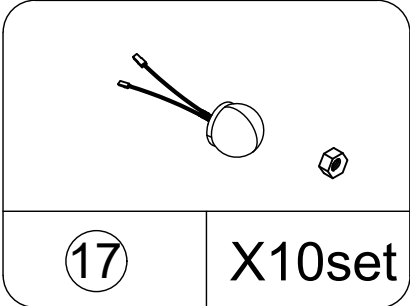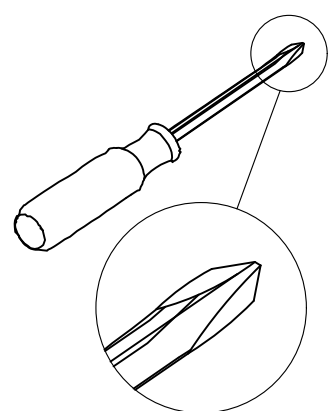


Note: The bulb with one wire is installed in the first hole.



Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.

STEP31


Pass the bulb wire through the pre punched plate, then gently press the bulb and make it adhere to the plate, and then connect the adjacent bulbs successively through the wire head slot on the opposite side (corresponding to the line of the same color).

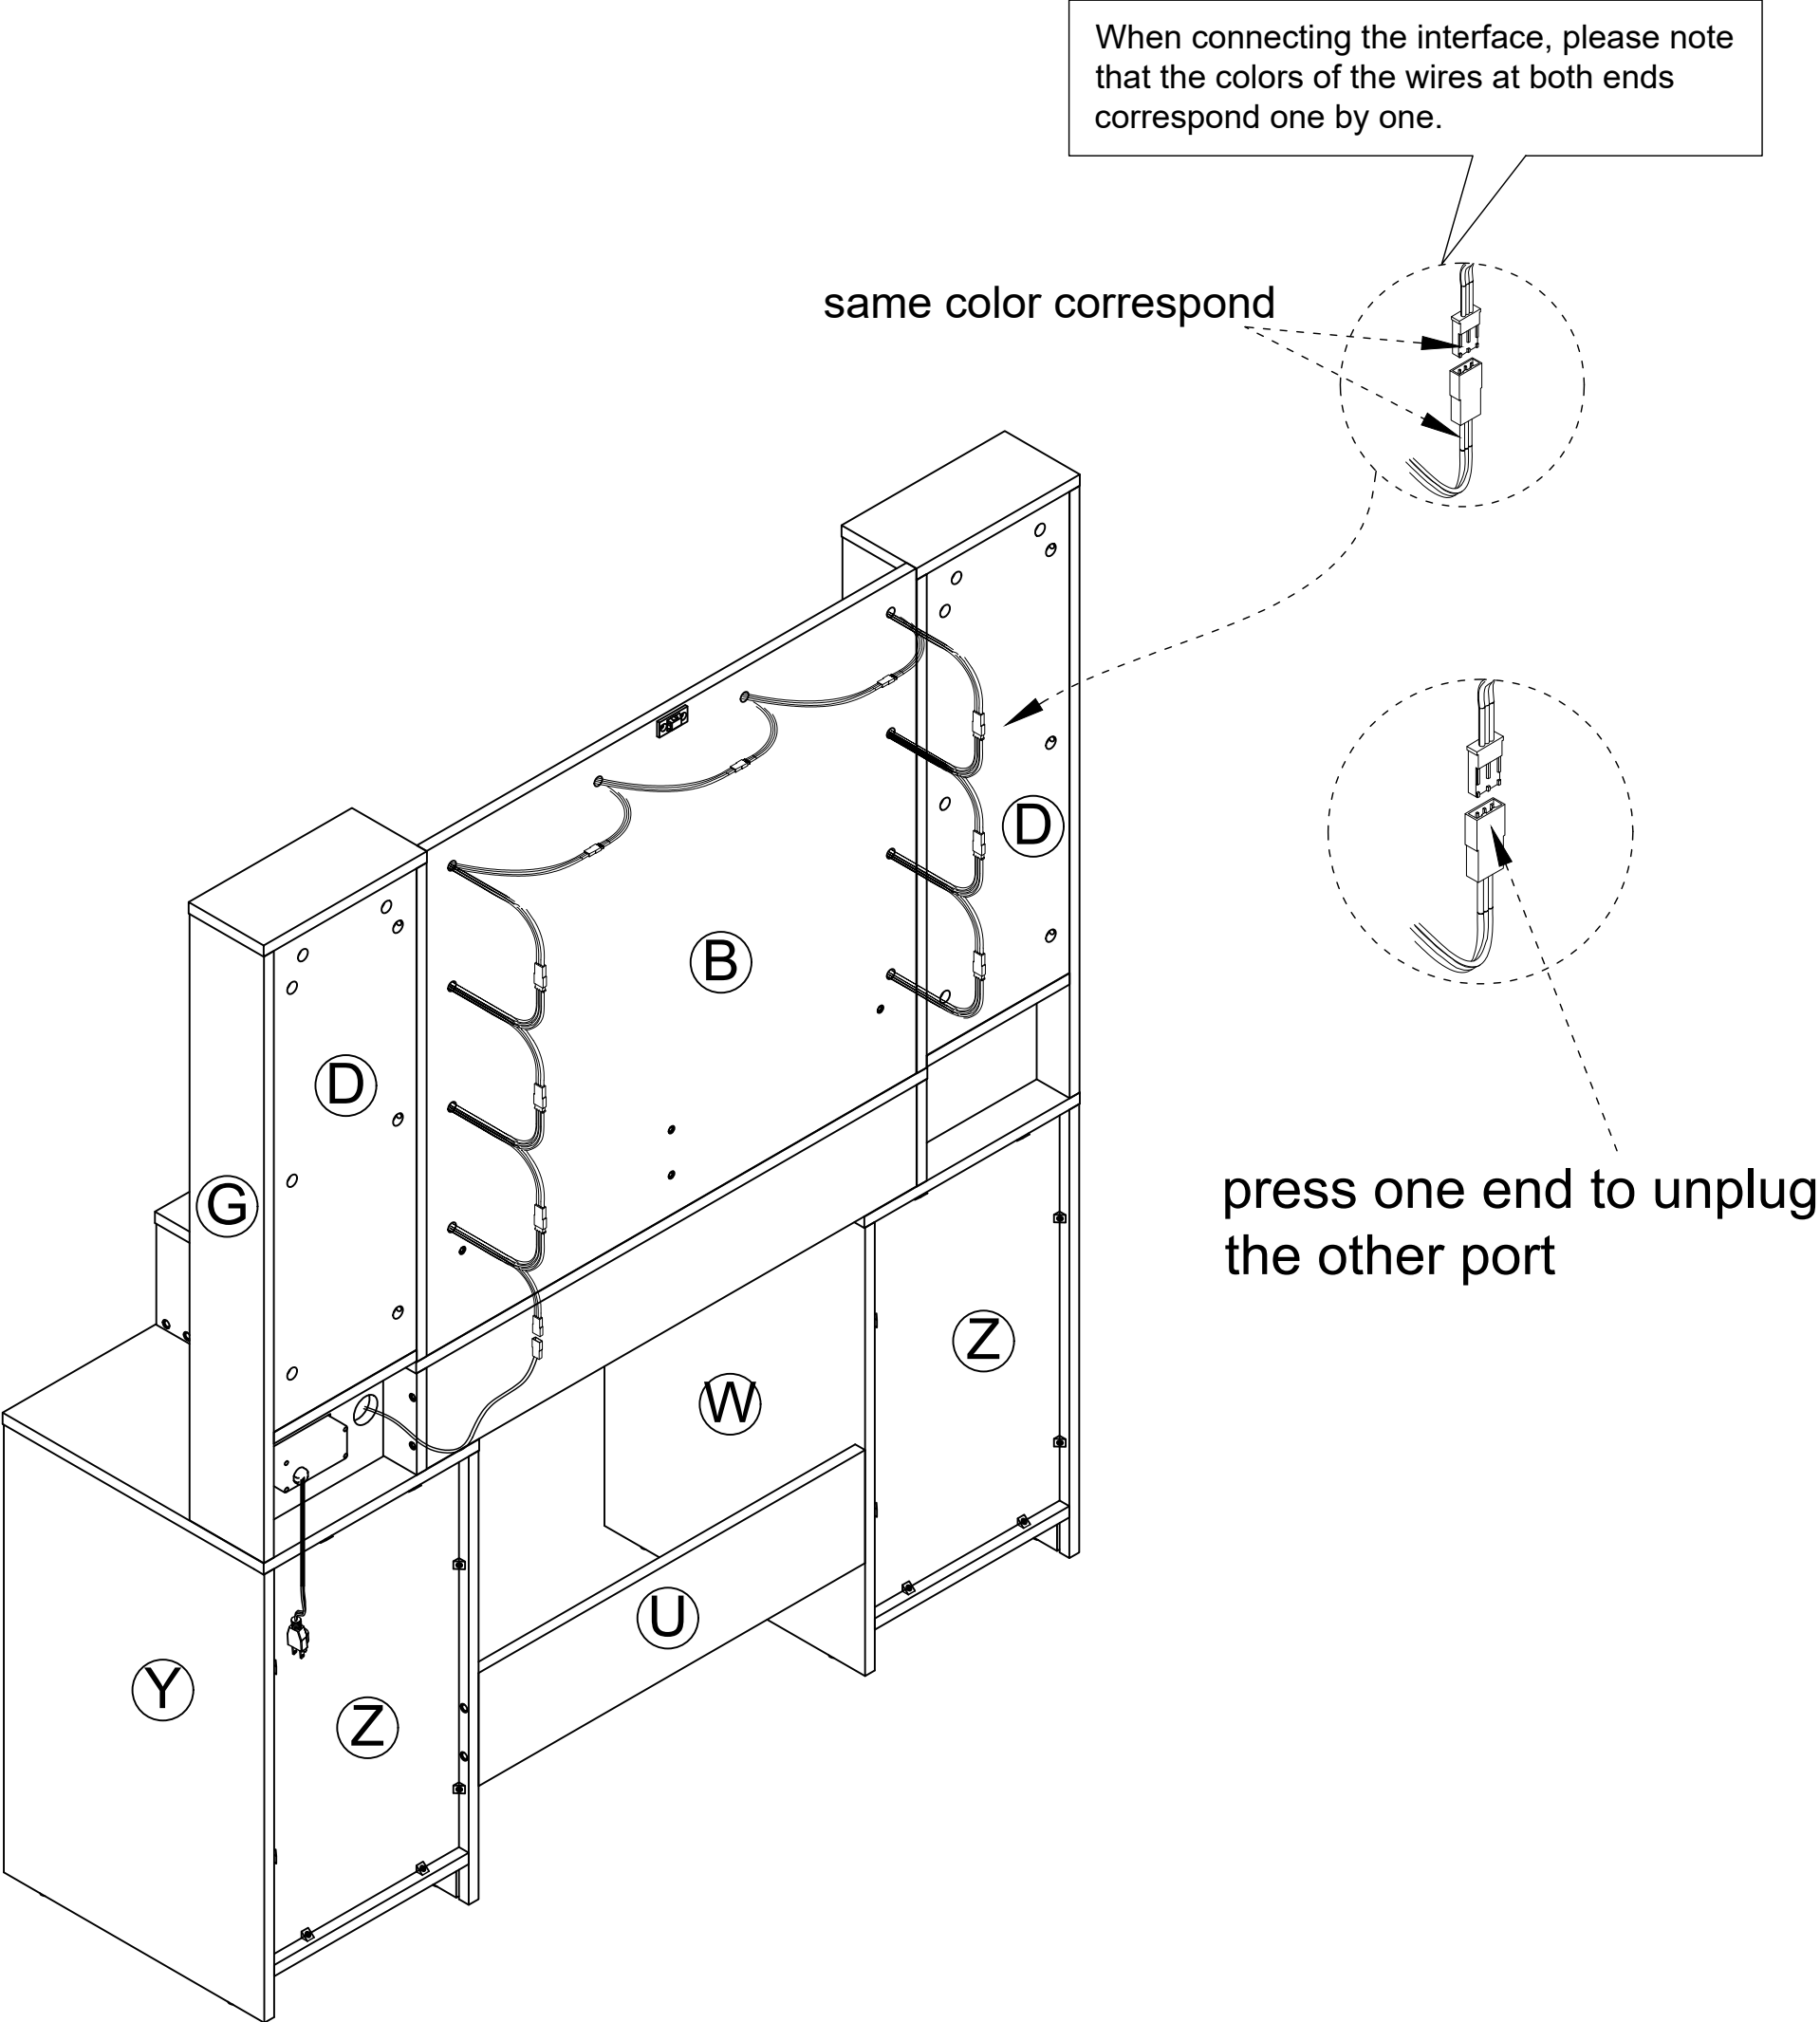

STEP32

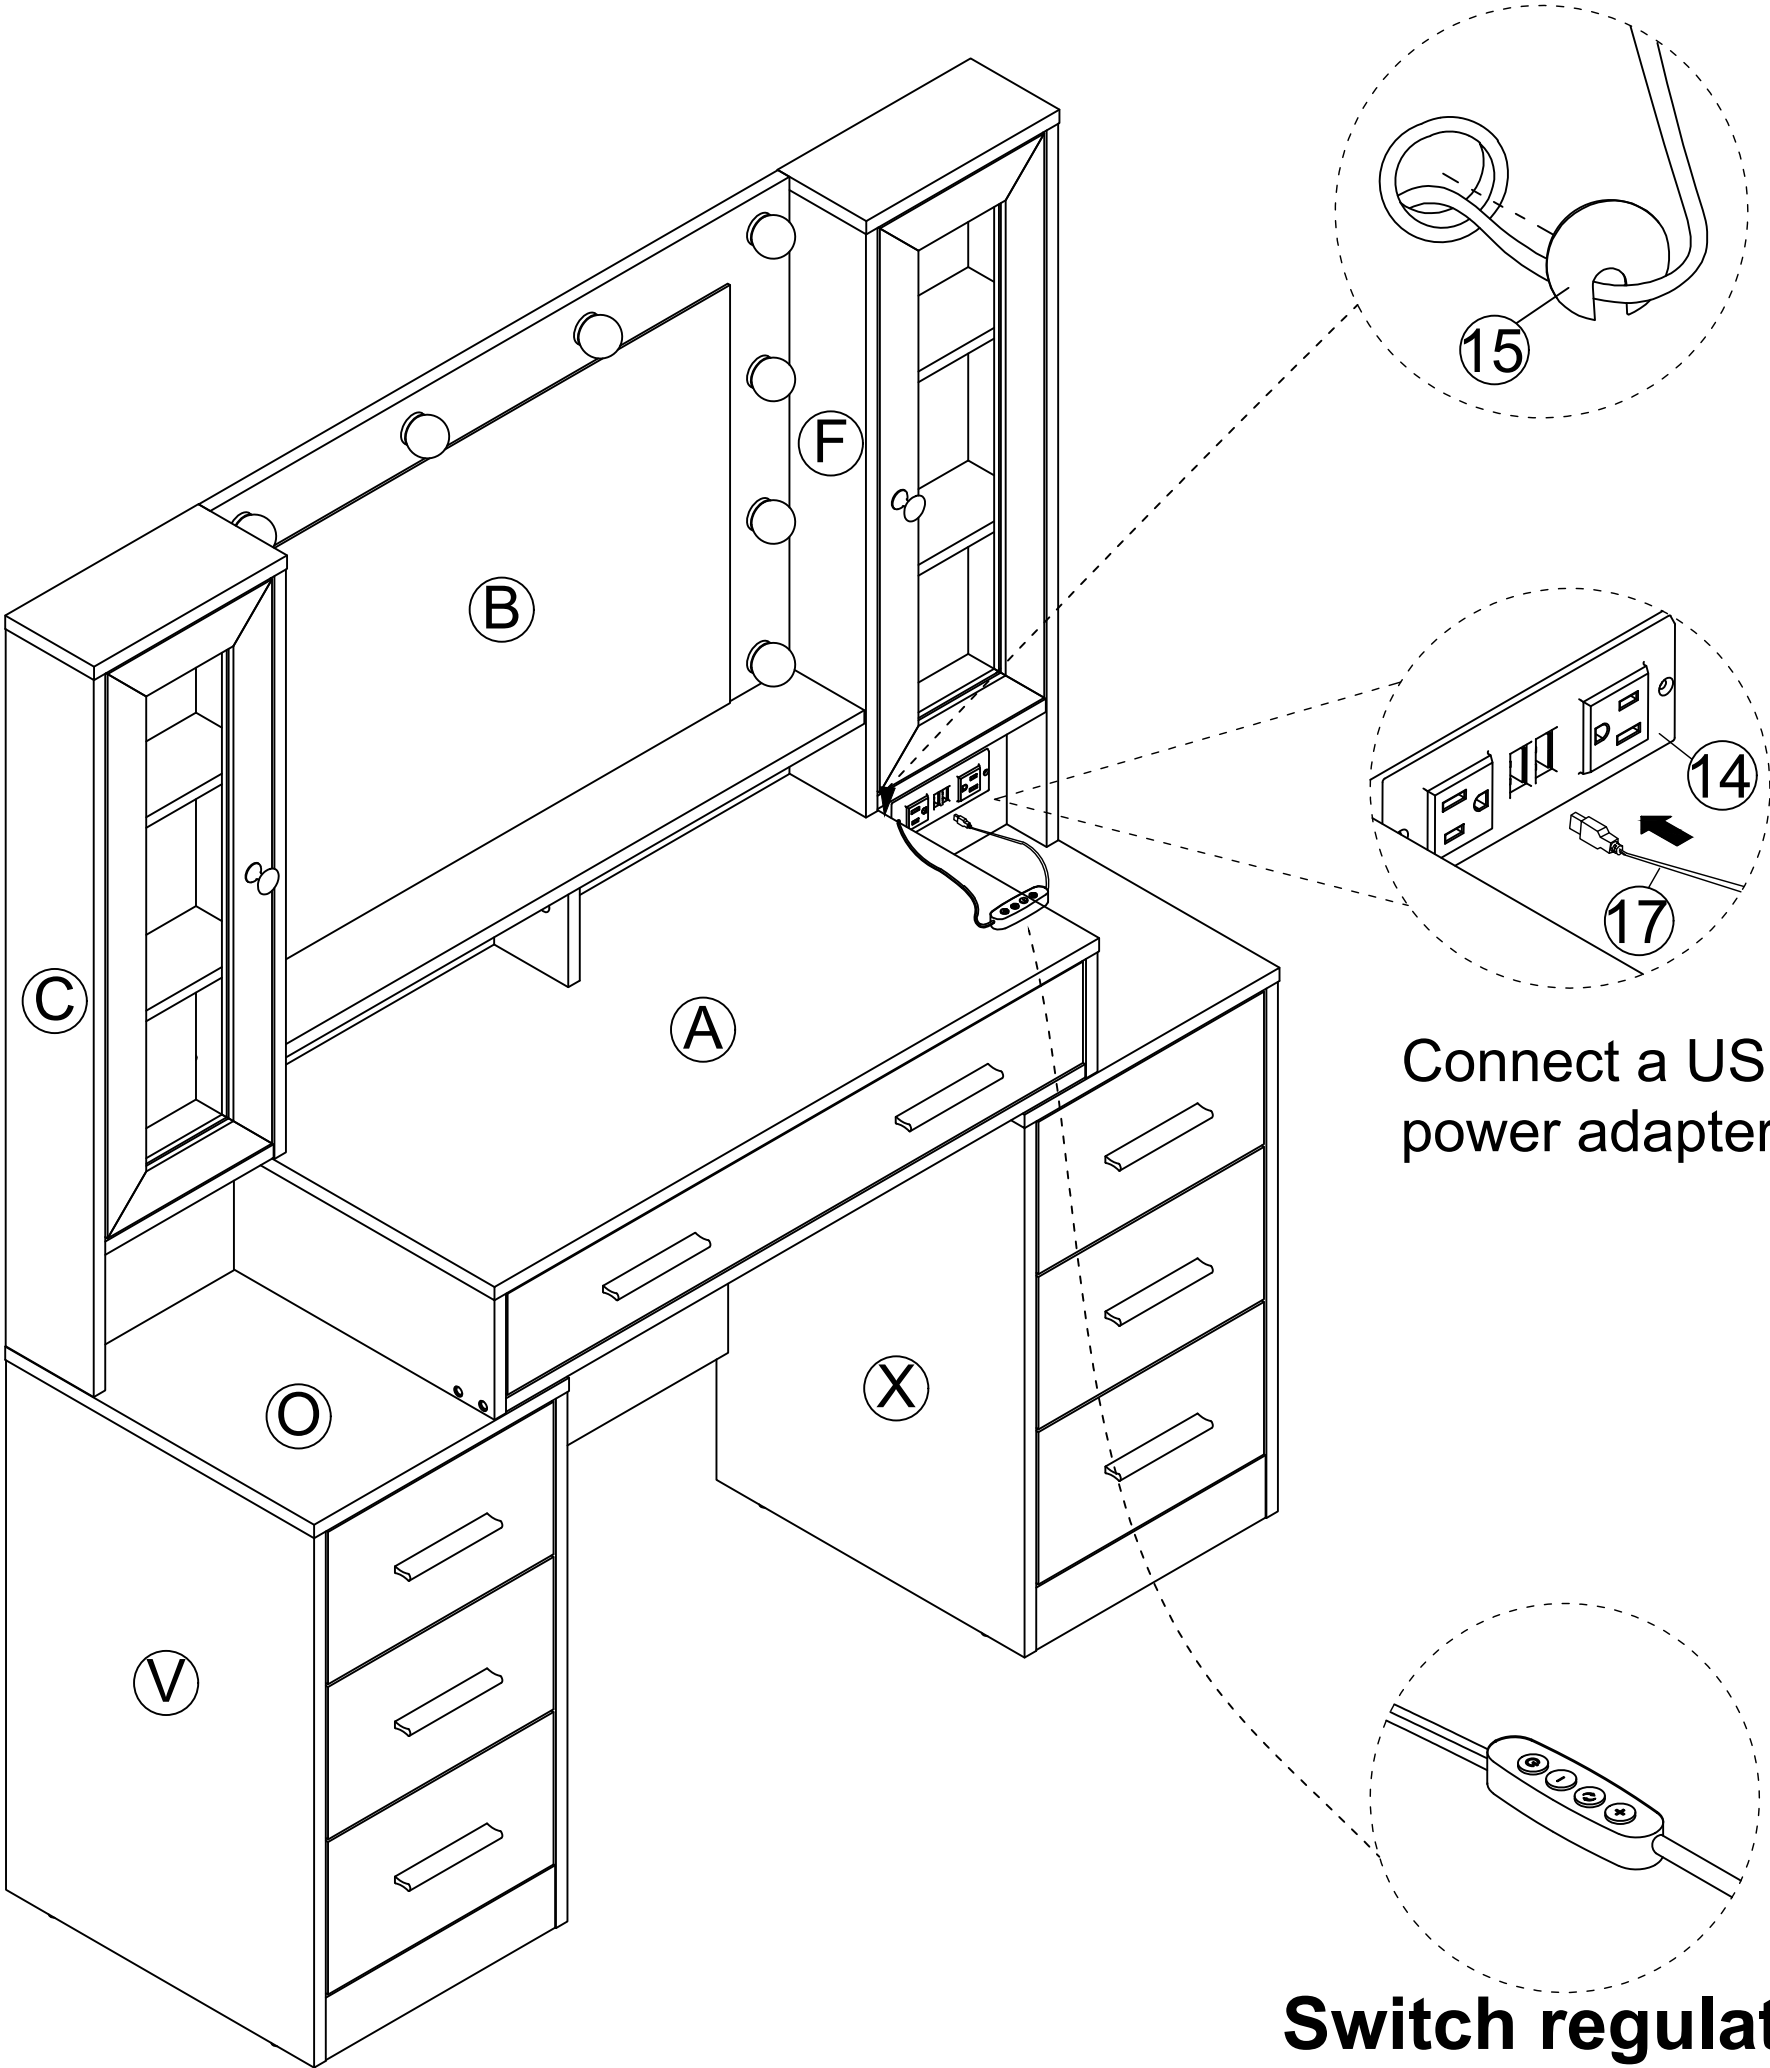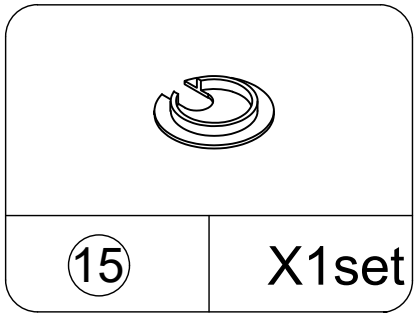


STEP33

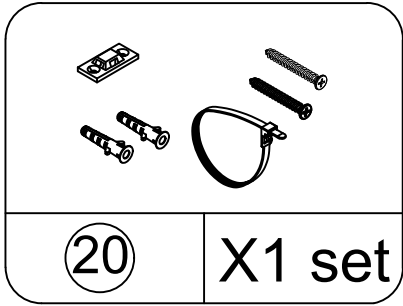


NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.


Install the tipping restraint hard ware

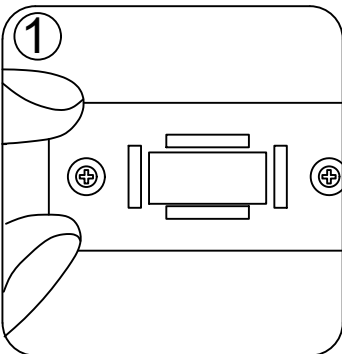


1.make mark on the wall

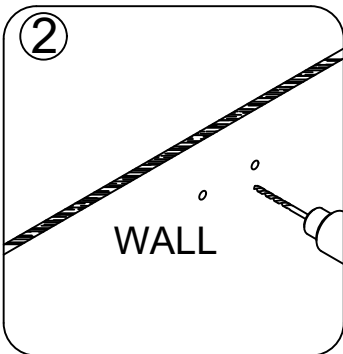


2.drill two Ø6 holes on the wall

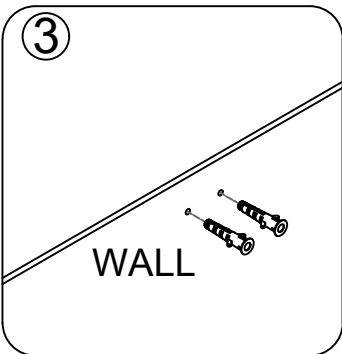

3.put two anchors in the holes

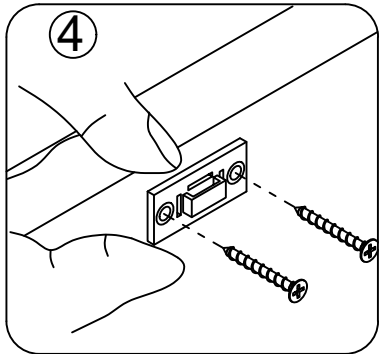

4.fix the device on the wall by the long screws

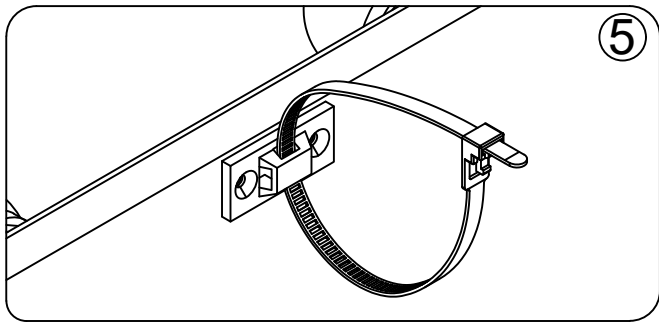

5.Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

